

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

QUEEN BED



WARNING !

STRANGGULATION HAZARD

NEVER place bed near windows where cords from blinds or drapes may strangle a child.

NEVER suspend strings over bed.


NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.

ALWAYS follow assembly instructions.

Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child.

NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

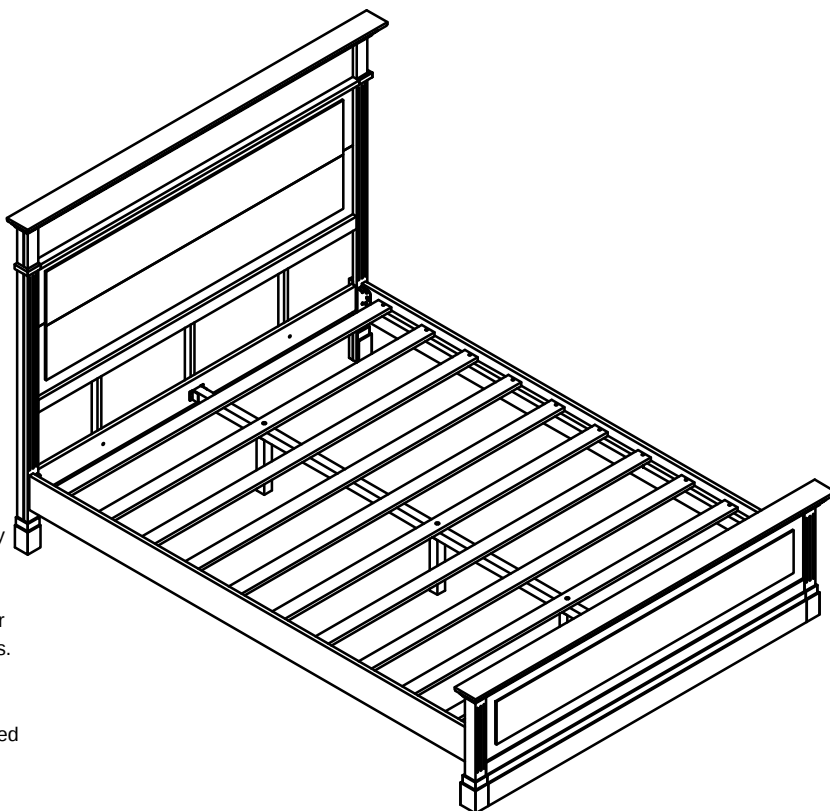



CAUTION: This Queen Bed is NOT a TOY.

Keep your child / children away in the process of assembly.



For turning the Queen Bed and to prevent damage to the Queen Bed.

02 persons may be needed to execute this action.




PART LIST (N736P432022)

H	Top Panel		1pc	E	Middle Rail		1pc
I	Middle Panel		1pc	G	Panel Support Rail		3pcs
J	Bottom Panel		1pc	O	Footboard Panel		1pc
B	Top Horizontal Rail for Leg Connection		1pc	M	Top Horizontal Rail for Leg Connection		1pc
C	Front Top Rail		1pc	R	Bed side		2pcs
D	Back Top Rail		1pc	U	Middle Support Bar		1pc


PART LIST (N736P432021/ Hardware in this SKU)

A	Top rail		2pcs	P2	Right Footboard leg		1pc
F	Bottom Rail		1pc	Q	Center Footboard Stile		1pc
K1	Left Headboard leg		1pc	S	Slat		7pcs
K2	Right Headboard leg		1pc	T	Slat		3pcs
N	Bottom Footboard Rail		1pc	V	Support Leg		3pcs
P1	Left Footboard leg		1pc				

HARDWARE LIST (N736P432021)

Label	Picture	Description	QTY	Label	Picture	Description	QTY
①		Vis Ø 4 x 50mm	2+1	⑩		Bolt Ø6 x 10mm	8+1
②		Vis Ø 4 x 30mm	36+1	⑪		Flat washer Ø13xM6x1mm	10+1
③		Vis Ø 4 x 20mm	18+1	⑫		Nuts M6x13xØ10mm	4+1
④		Vis Ø 4 x 15mm	10+1	⑬		Metal link 63 x 35 x 28 mm	2
⑤		Bolt Ø6 x 80mm	4+1	⑭		Wooden dowel Ø8 x 30 mm	22+1
⑥		Bolt Ø6 x 70mm	3+1	⑮		Cam lock Ø15 x 9mm	2+1
⑦		Bolt Ø6 x 40mm	15+1	⑯		Cam lock pin Ø6 x 35 mm	2+1
⑧		Bolt Ø6 x 35mm	4+1	⑰		Allen wrench M4	1
⑨		Bolt Ø6 x 30mm	2+1	⑱		Screw Driver (Not Provided)	

Before Beginning Assembly

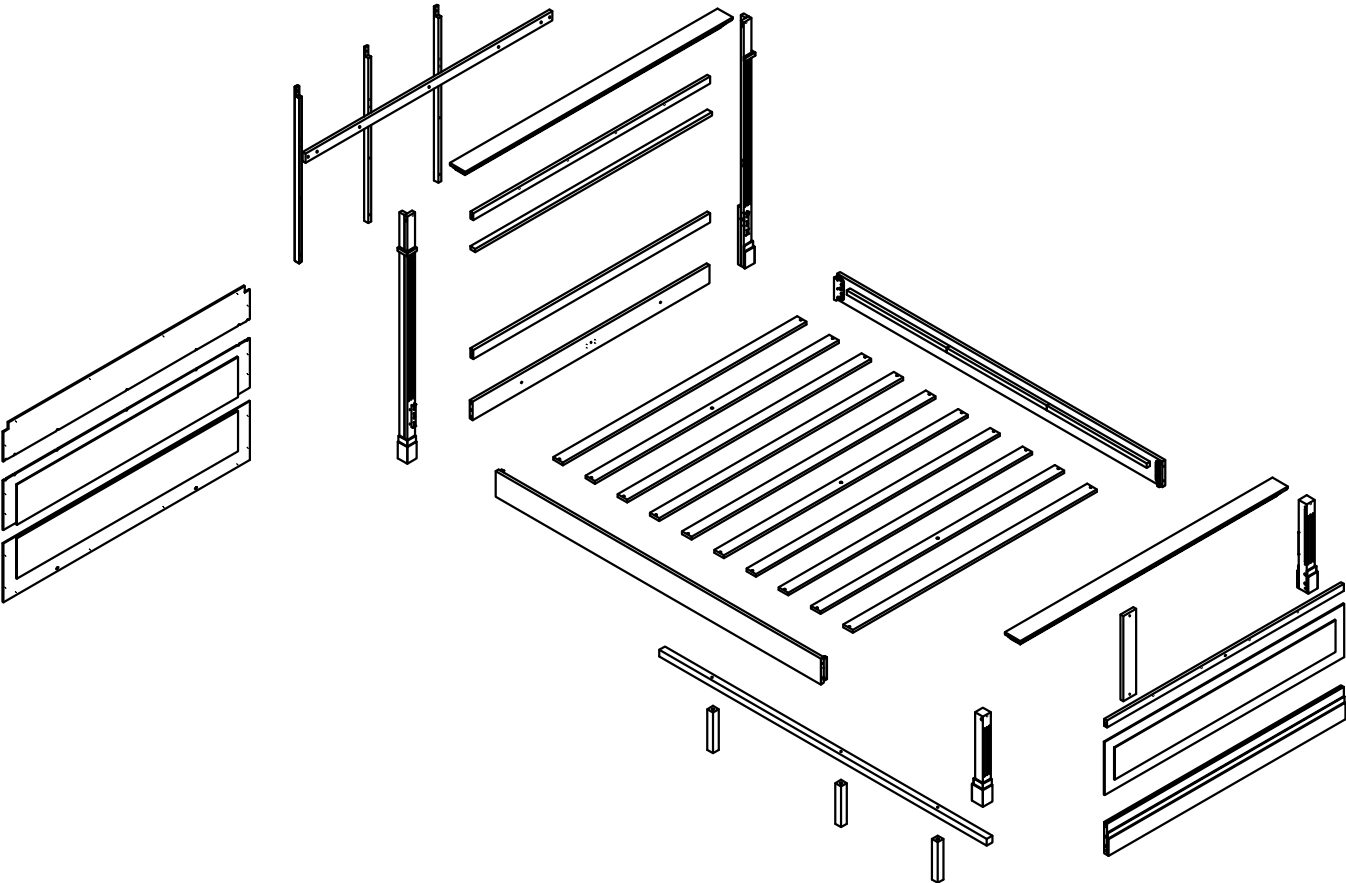

2+1



15+1



2




36+1



4+1



22+1



18+1



2+1




2+1



10+1



8+1



2+1



4+1



10+1



1



3+1



4+1



Screw Driver
(Not Provided)



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non - marring surface (packing foam)-



• Save all packaging until finished-


Assembly Preparation

Overview

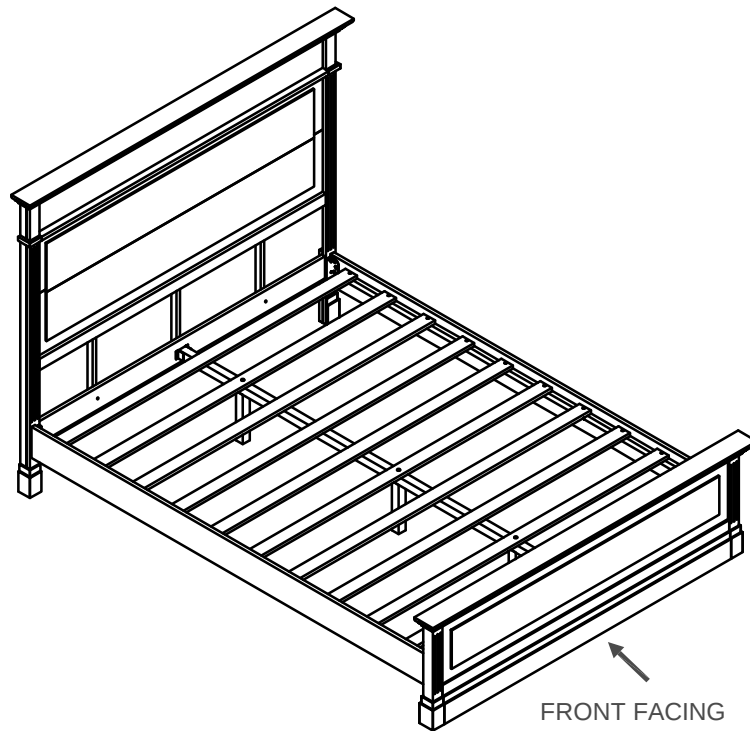


This Queen Bed has multiple parts and may require up to 1 hour to assemble.
To give you an overview of the Queen Bed parts, the above picture is to help you put the various parts into perspective.
Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1:

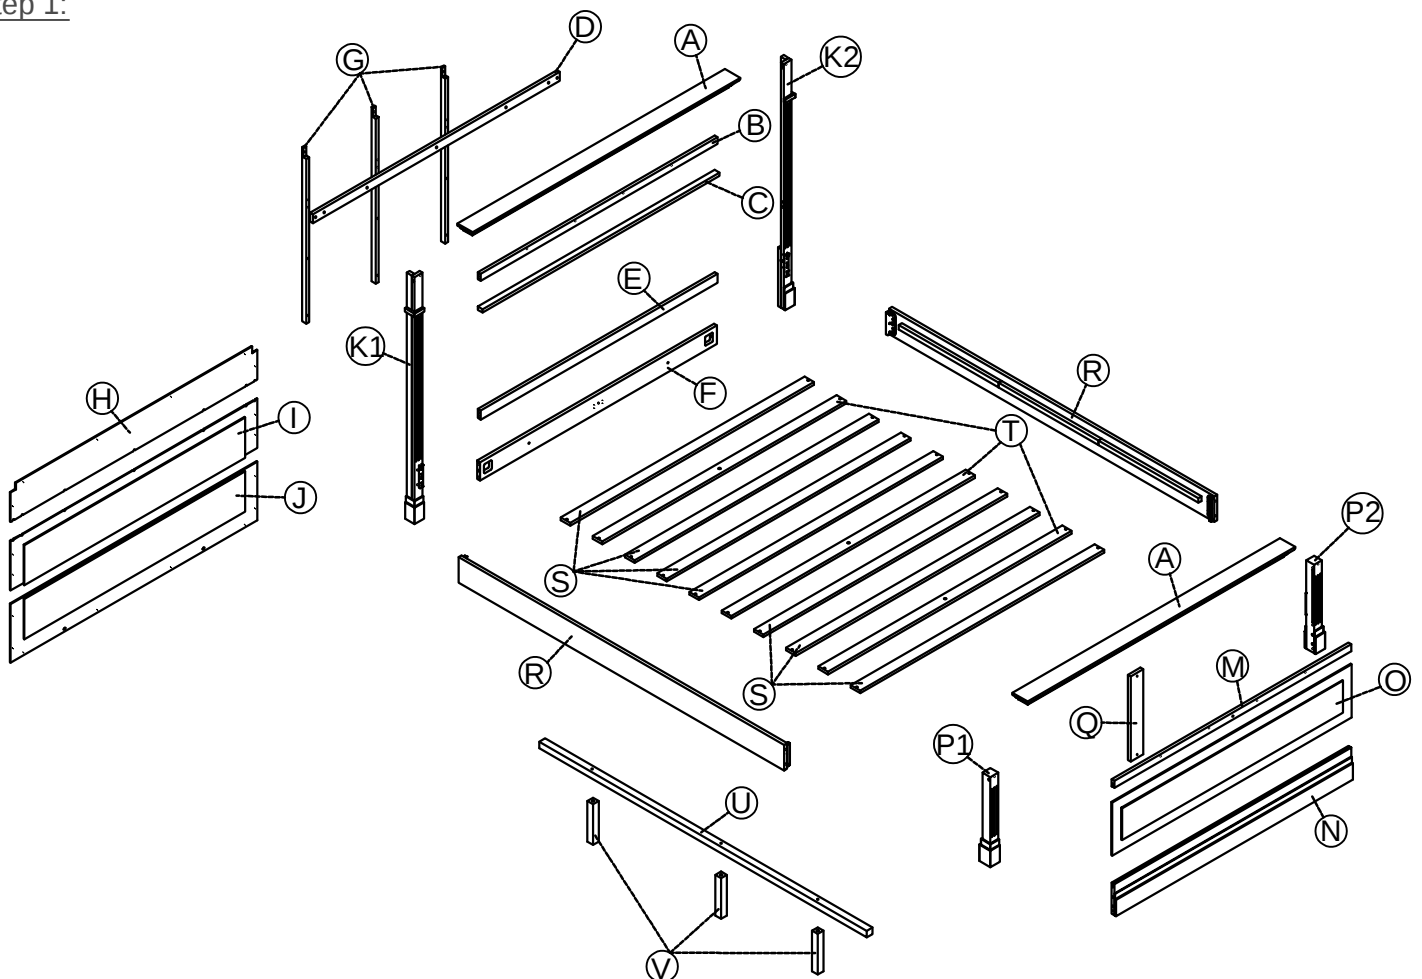


Unpack and place all part on a clean, non-marring surface.

Step 2:

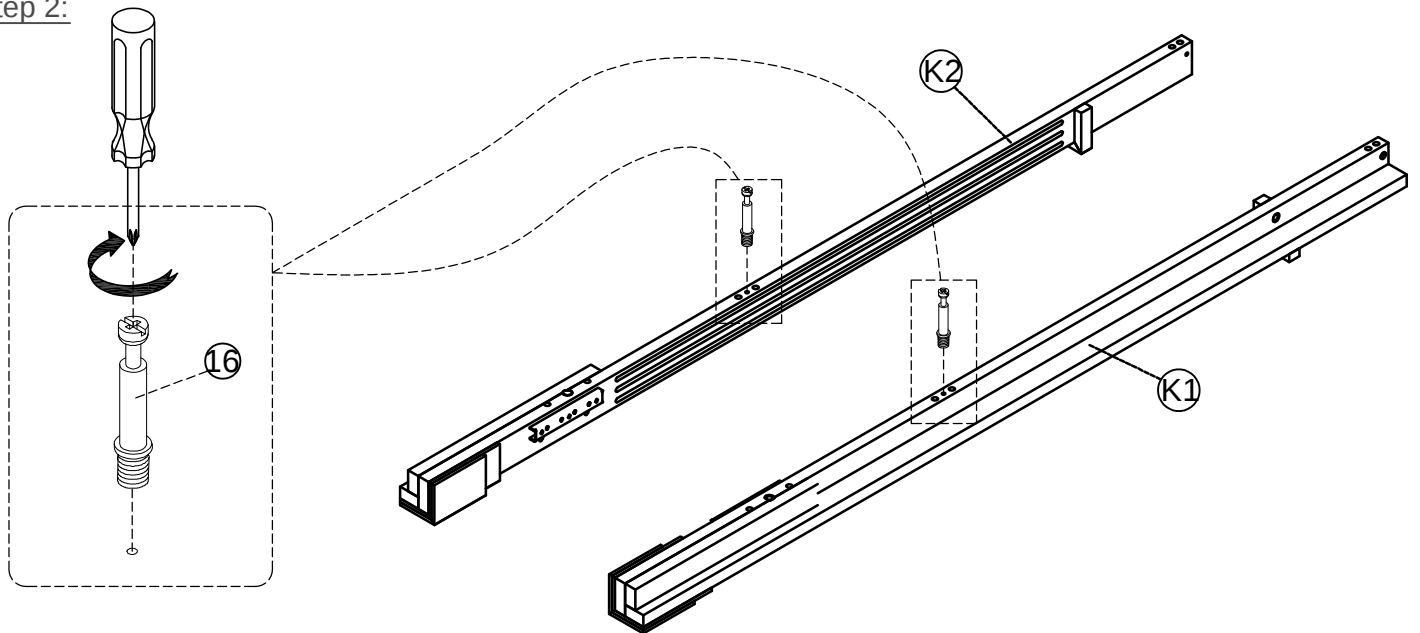

- Attach Cam lock pin 16 *2 to the Left Headboard leg (K1) and Right headboard leg (K2) using Phillips screwdriver as shown.

Step 3:

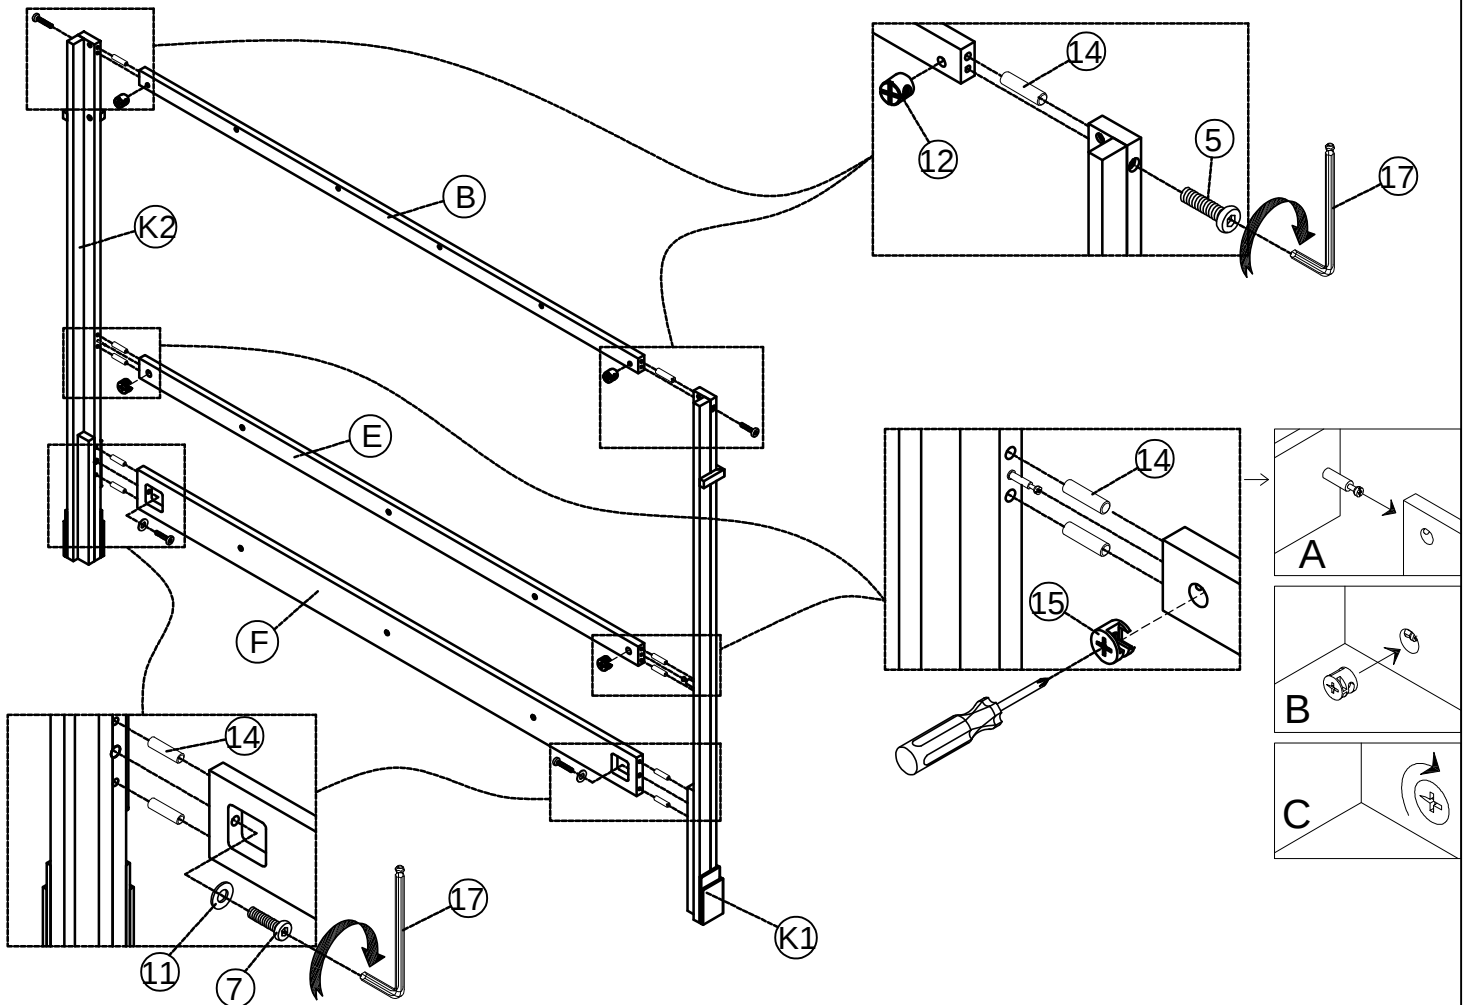


- Attach Top Horizontal Rail for Leg Connection (B) to the Left Headboard leg (K1) and Right headboard leg (K2) using Bolt 5 *2, Wooden dowel 14 *2 and Nuts 12 *2 with Allen Wrench 17 *1 as shown.

- Attach Middle Rail (E) to the Left Headboard leg (K1) and Right headboard leg (K2) using Wooden dowel 14 *4 and Cam lock 15 *2 with Phillips screwdriver as shown.


- Attach Bottom Rail (F) to the Left Headboard leg (K1) and Right headboard leg (K2) using Bolt 7 *2, Flat washer 11 *2 and Wooden dowel 14 *4 with Allen Wrench 17 *1 as shown.

Step 4:

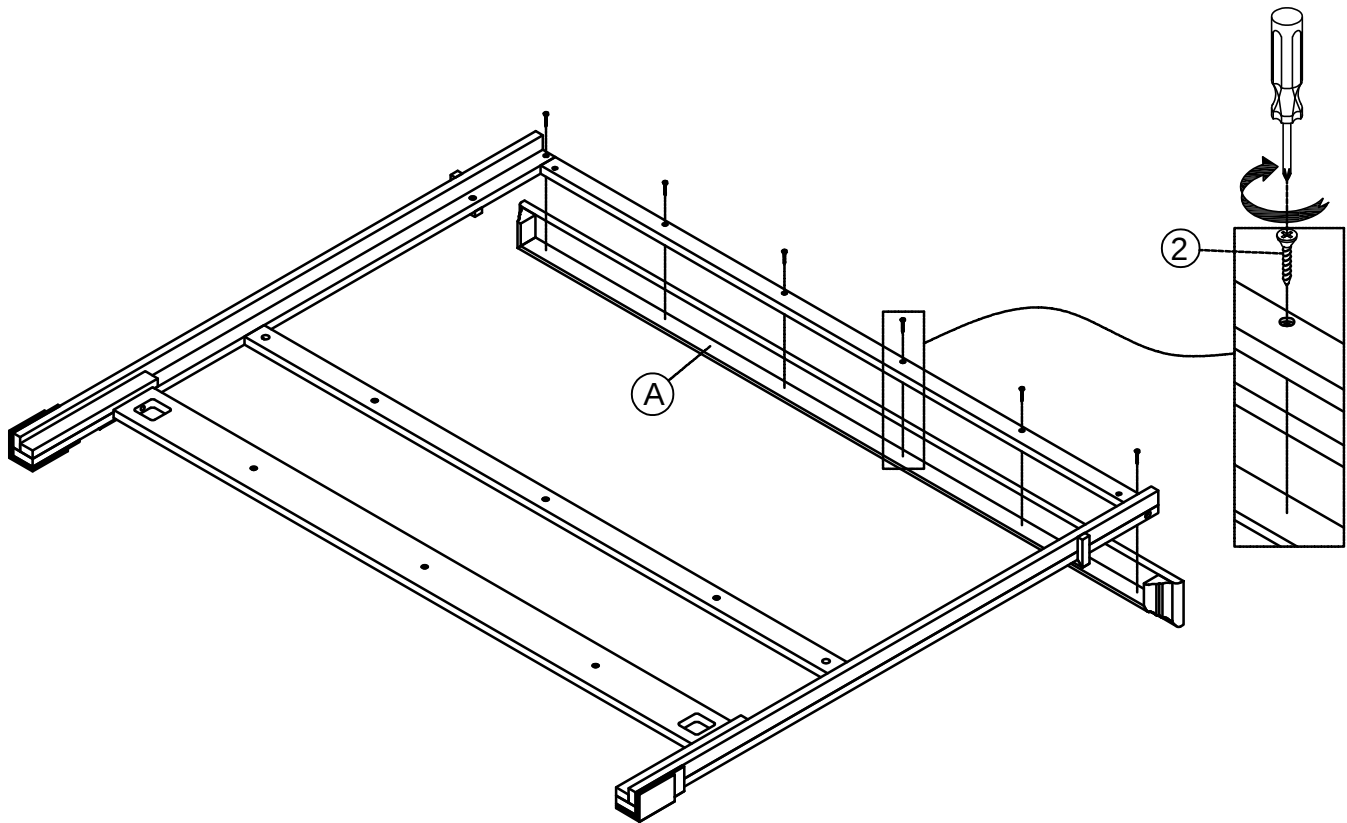


- Attach Headboard top rail (A) to the Step 3 using Vis②*6 with Phillips screwdriver as shown.

Step 5:

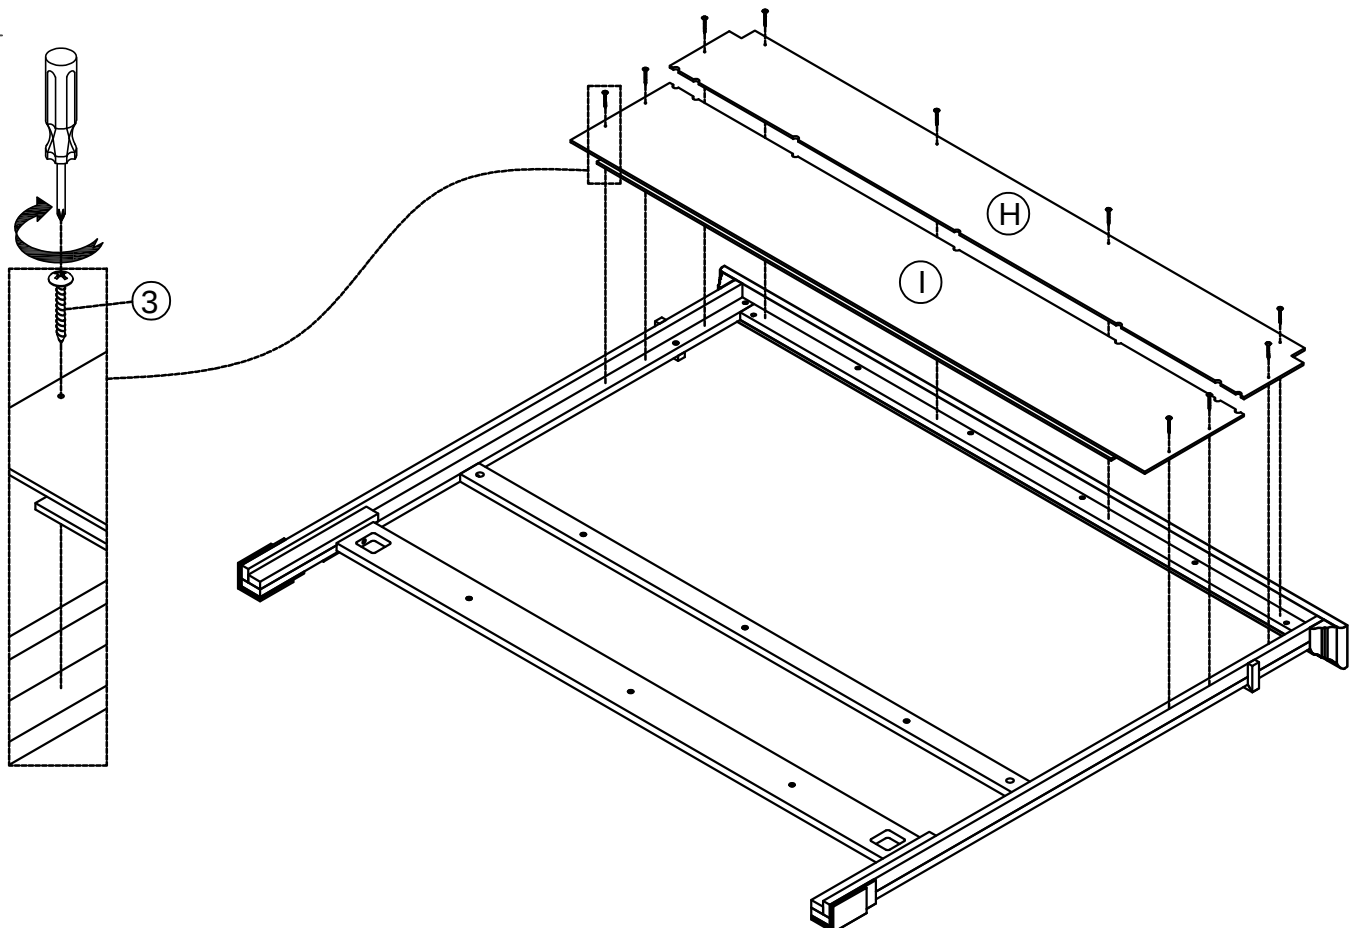


- Attach Top Panel (H) and Middle Panel (I) to the Step 4 using Vis③*10 with Phillips screwdriver as shown.

Step 6:

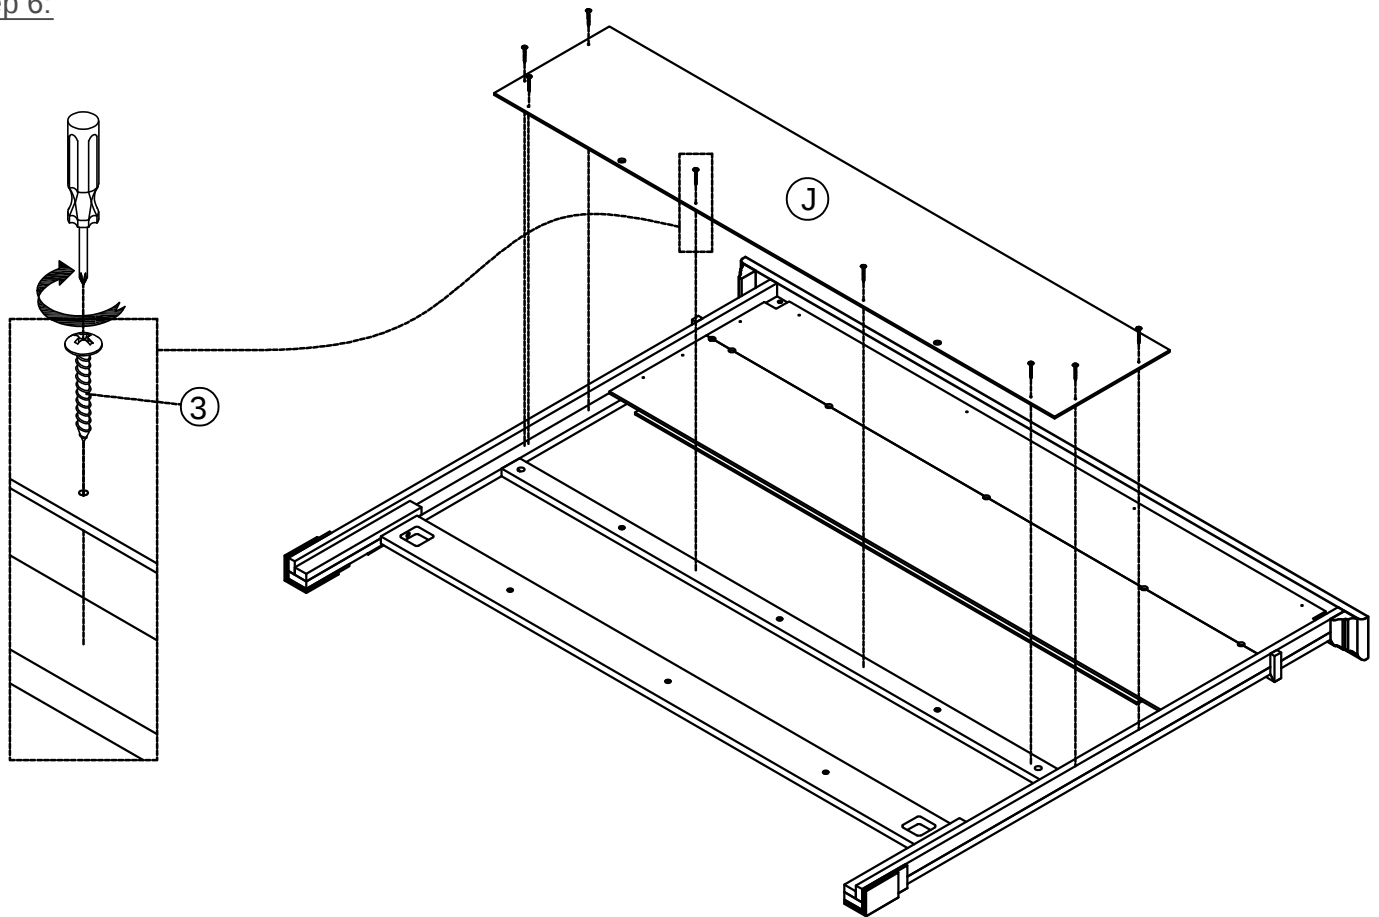


- Attach Bottom Panel (J) to the Step 5 using Vis③*8 with Phillips screwdriver as shown.

Step 7:

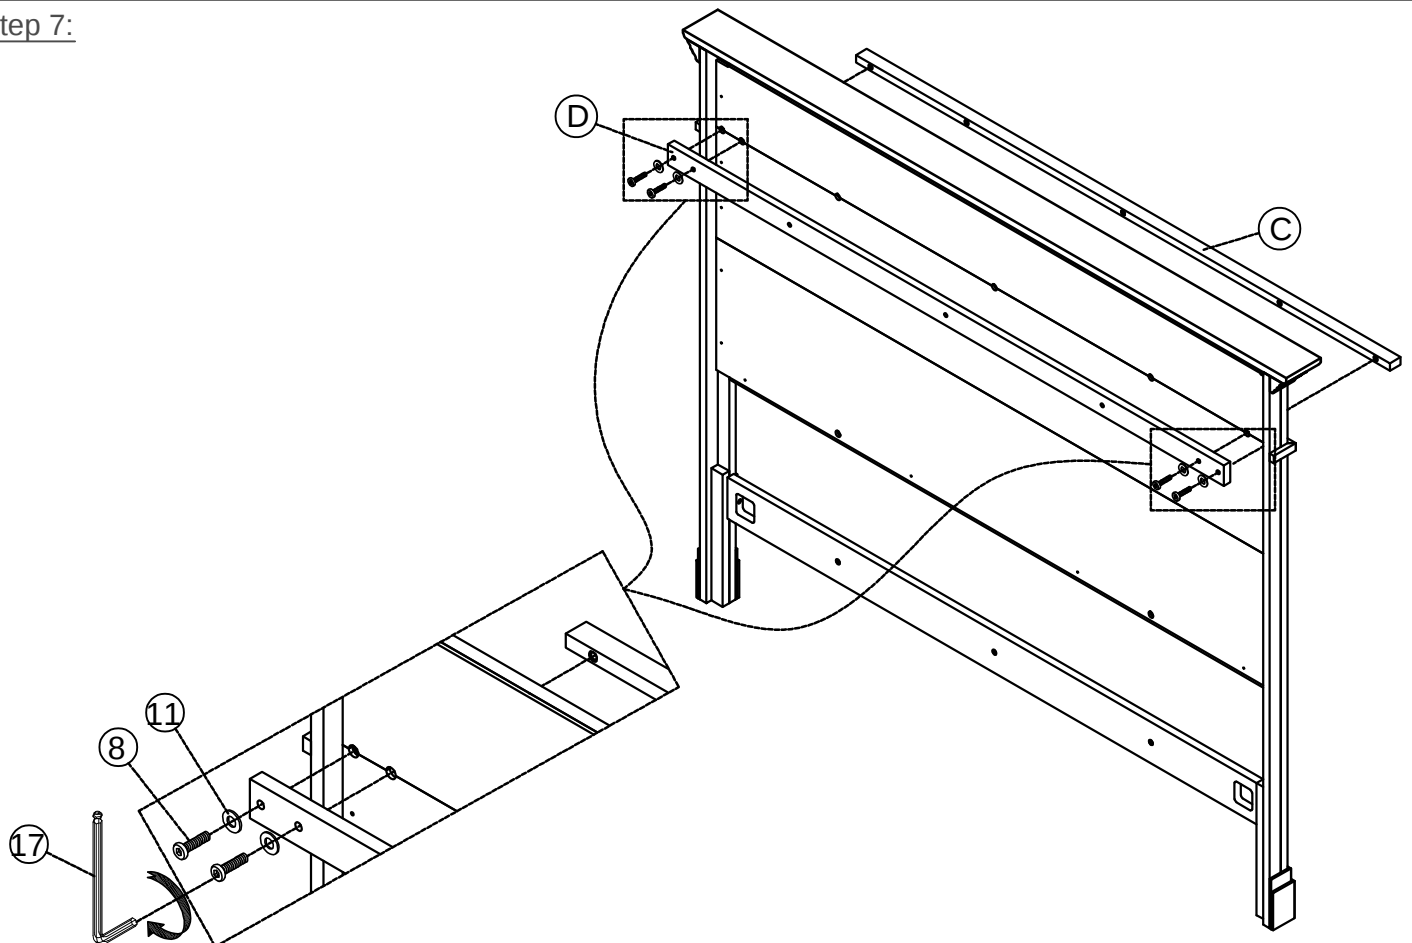


- Attach Front Top Rail (C) and Back Top Rail (D) to the Step 6 using Bolt ⑧*4 and Flat washer ⑪*4 with Allen Wrench ⑰*1 as shown.

Step 8:

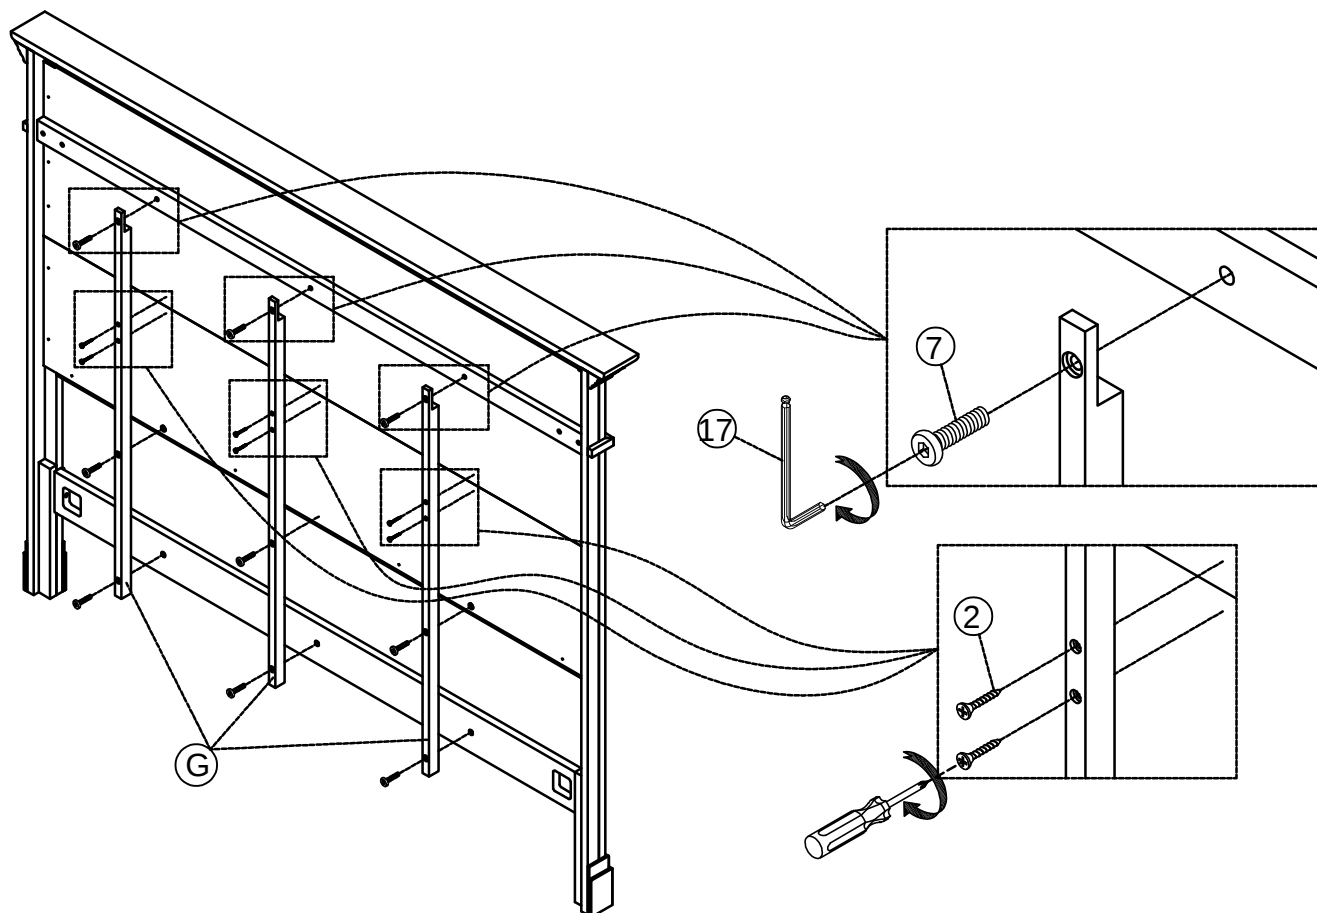


- Attach Panel Support Rail (G) to the Step 7 using Bolt ⑦*9 with Allen Wrench ⑰*1 as shown.
- Attach Panel Support Rail (G) to the Step 7 using Vis ②*6 with Phillips screwdriver as shown.

Step 9:

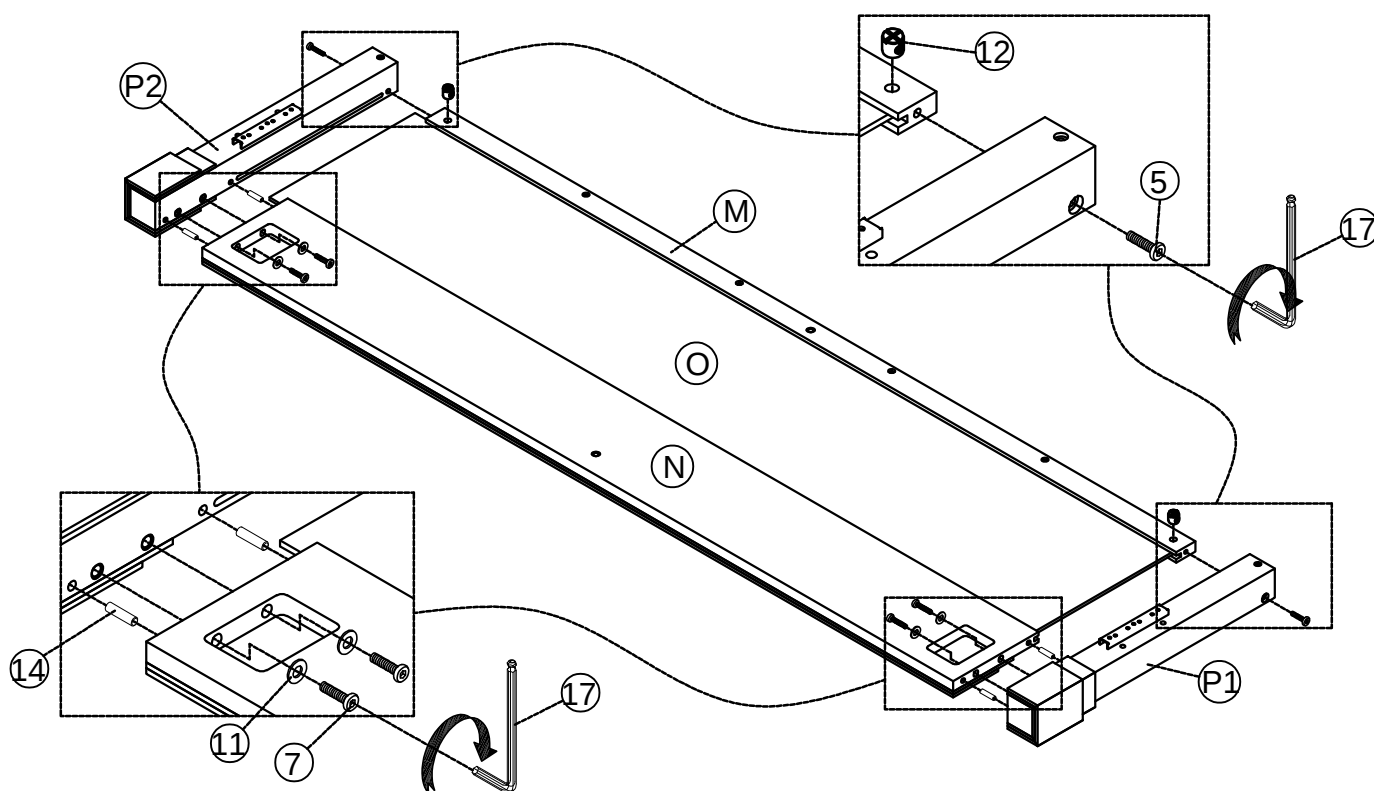


- Attach Bottom Footboard Rail (N) and Footboard Panel (O) to the Left Footboard leg (P1) and Right Footboard leg (P2) using Bolt ⑦*4, Flat washer ⑪*4 and Wooden dowel ⑭*4 with Allen Wrench ⑰*1 as shown.
- Attach Top Horizontal Rail for Leg Connection (M) to the Left Footboard leg (P1) and Right Footboard leg (P2) using Bolt ⑤*2, and Nuts ⑫*2 with Allen Wrench ⑰*1 as shown

Step 10:

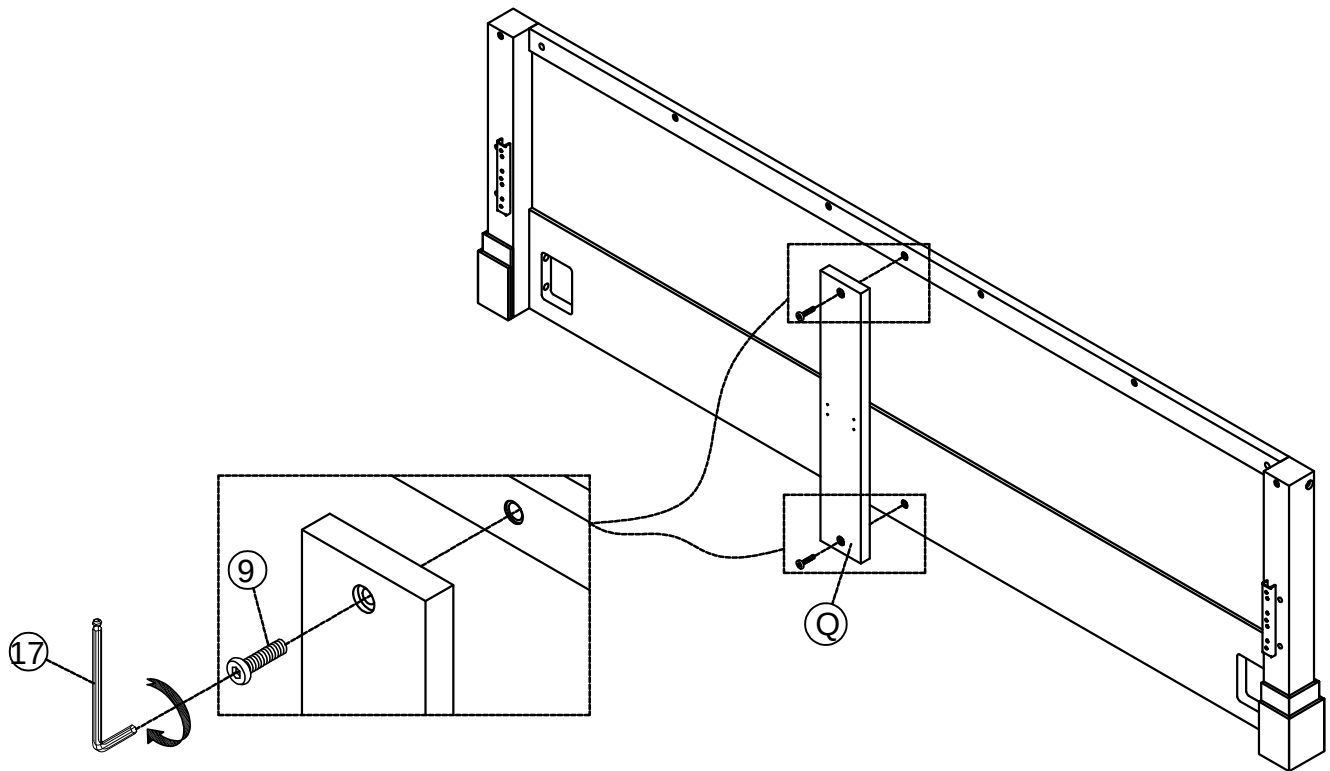


- Attach Center Footboard Stile (Q) to the Step 9 using Bolt ⑨*2 with Allen Wrench ⑰*1 as shown.

Step 11:

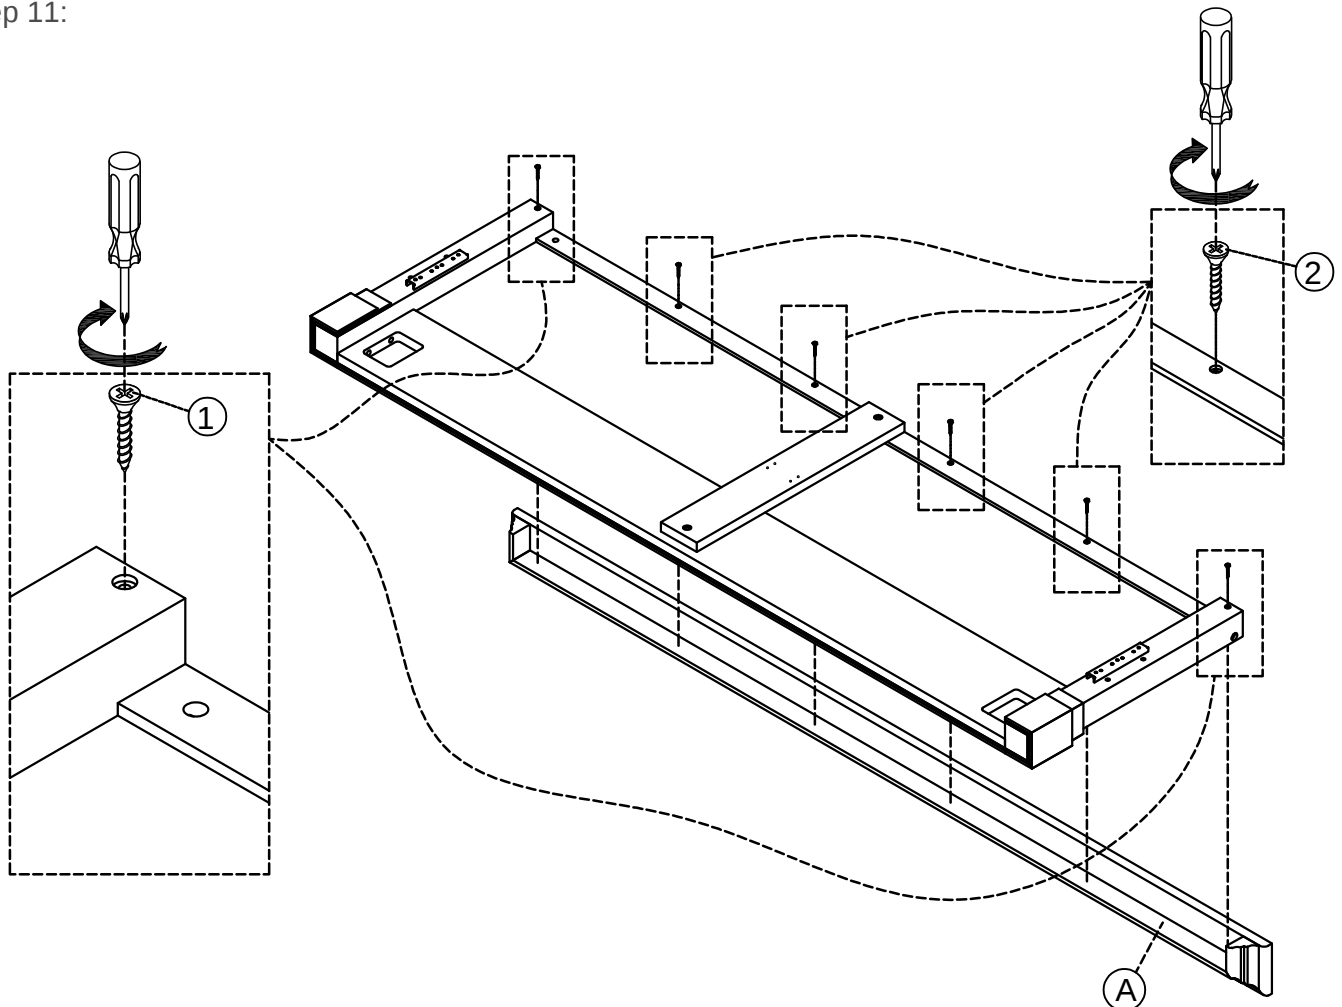


- Attach Top Footboard rail (A) to the Step 10 using Vis①*2 and Vis②*4 with Phillips screwdriver as shown.

Step 12:

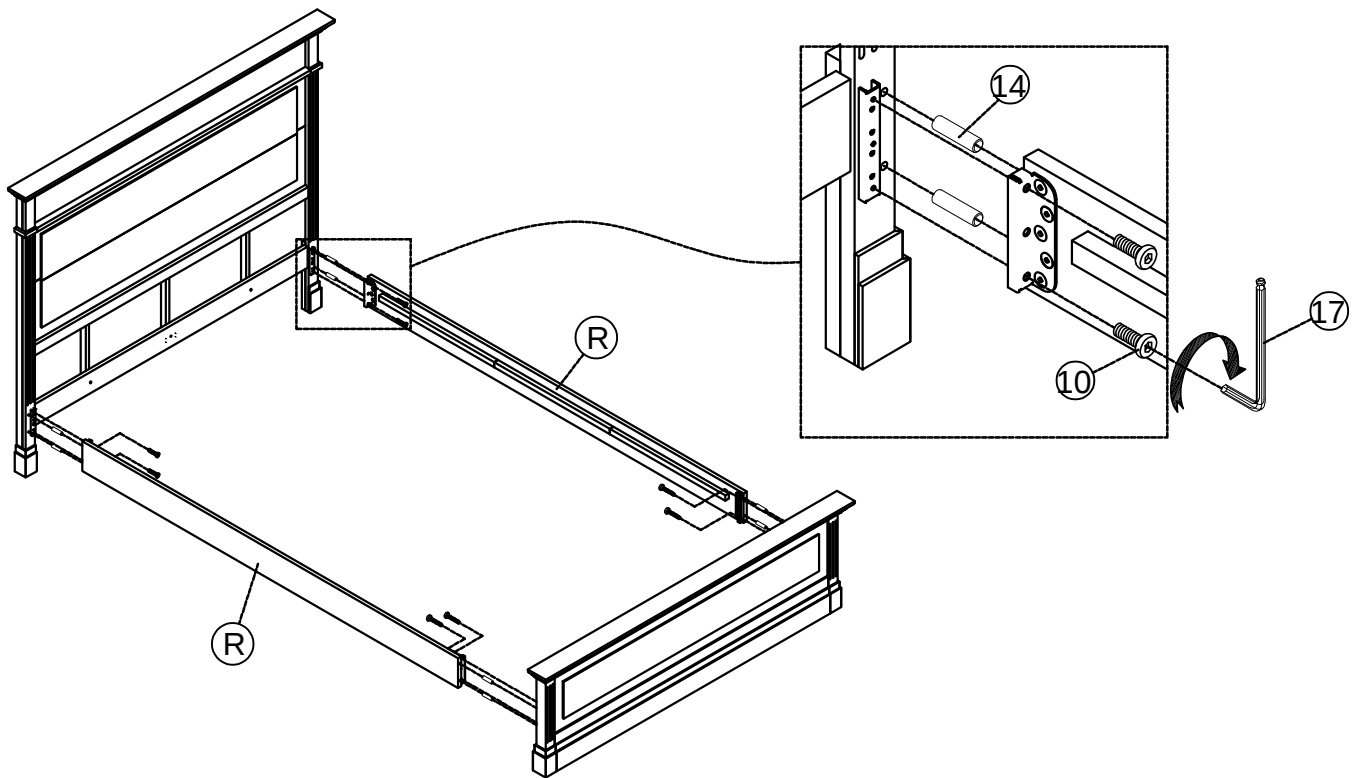

- Attach Bed side (R) to the Step 8, Step 11 using Wooden dowel ⑭ *8 and Bolt ⑩ *8 with Allen Wrench ⑰ *1 as shown.


Step 13:

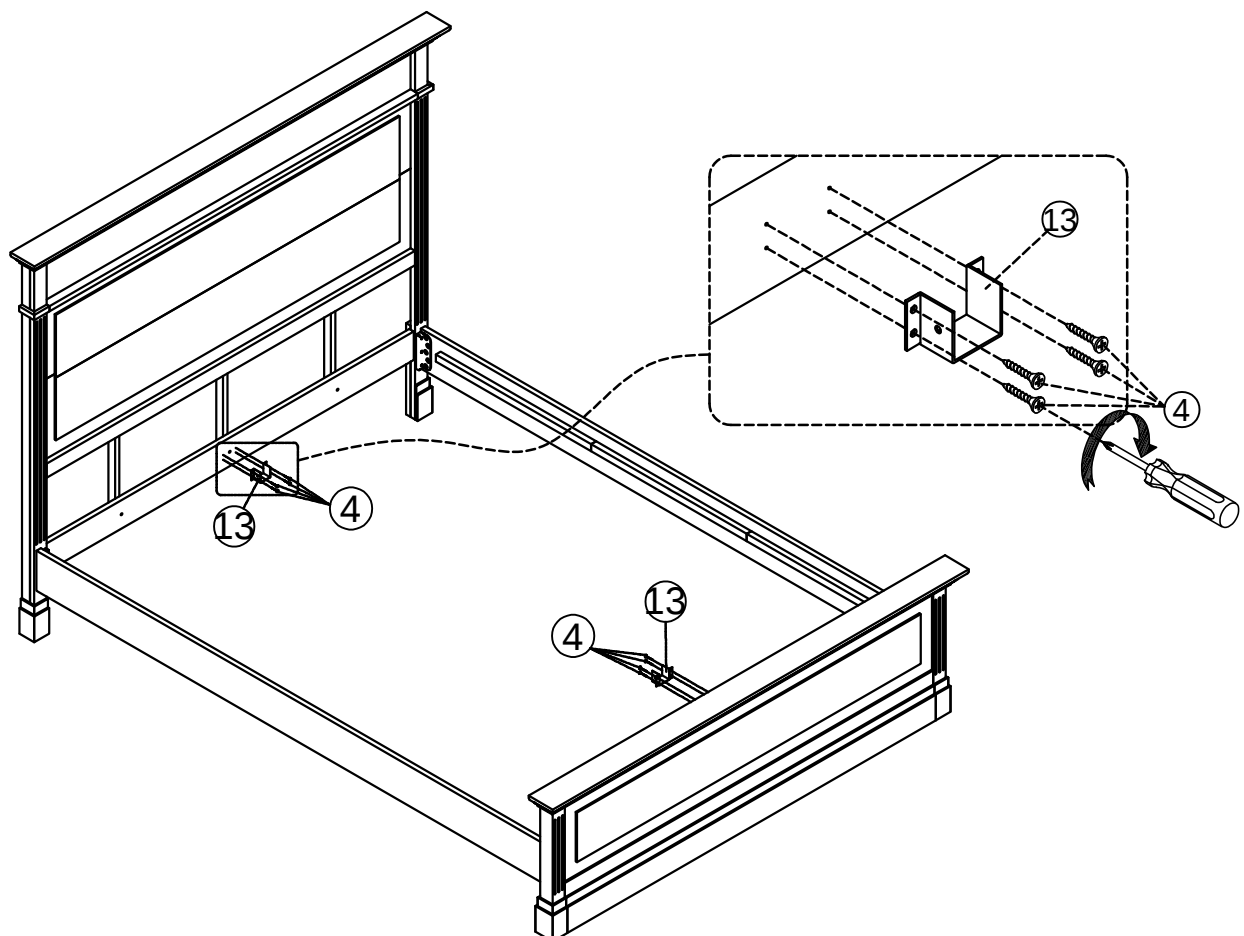


- Attach Metal link ⑬ *2 to the Step 12 using Vis ④ *8 with Phillips screwdriver as shown.

- 12 -

Step 16:

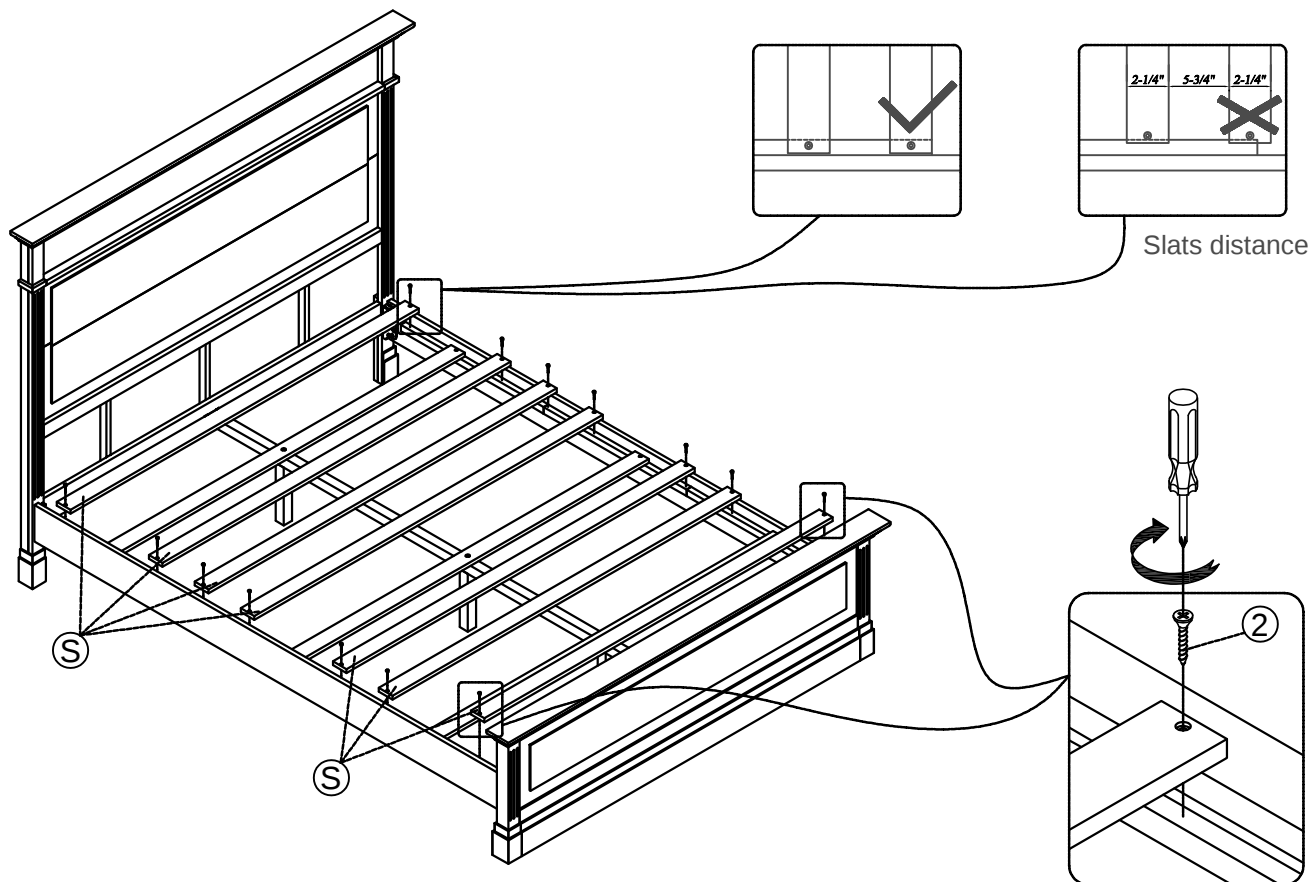

- Attach Slat (S) to the Step 15 using Vis② *14 with Phillips screwdriver as shown.

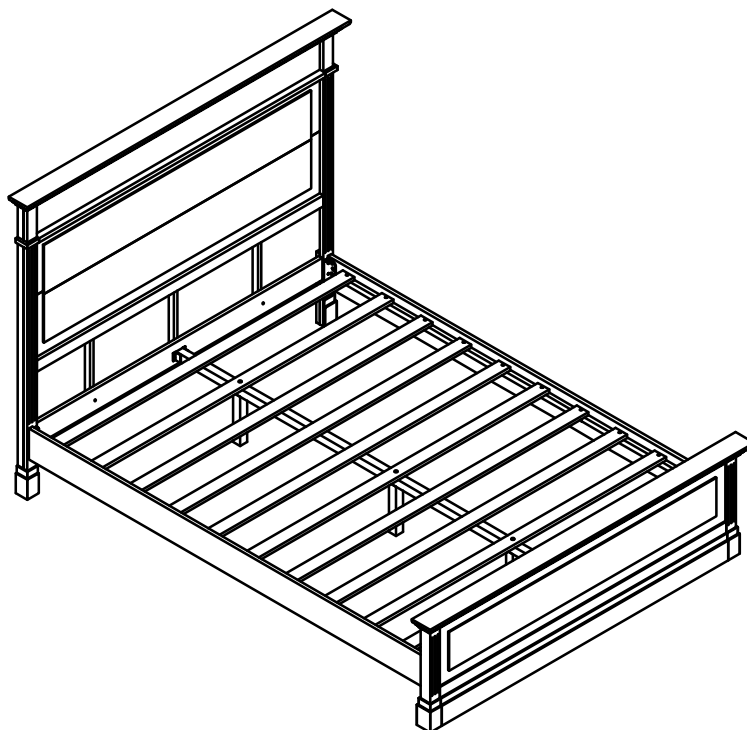

Inspect the Bed and make sure all parts are adequately connected.
Adjust the Levelers to desired height to avoid wobbles.
Your bed is ready for use.

CARE INSTRUCTIONS:

Hardware may loosen overtime. Periodically check that all connections are tight.
Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.