



Instruction Manual

Outdoor Wall Sconce

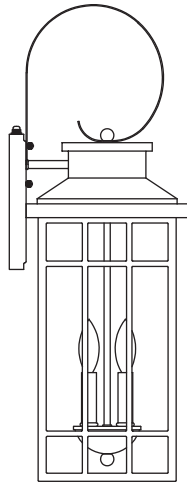


PACKAGE CONTENTS

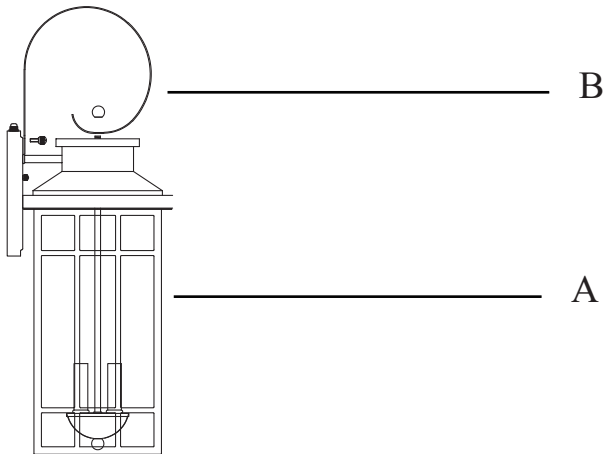

PART	DESCRIPTION	QUANTITY
A	Fixture body	1
B	Decorative part	1

HARDWARE CONTENTS(shown actual size)

AA



Long
monting x 2
screw

BB




Wire nut x 3

CC



Long
monting x 2
screw

DD

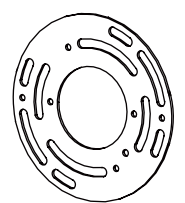

Mounting plate
(Not actual size) x 1



WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Times: 25 minnutes

Tools Required for Assembly (not included): Flathead screwdriver , Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.



CAUTION: To avoid any waterproofing problems, please make sure the light fixture fits the mounting surface perfectly installation and use waterproof glue around the canopy for better sealing after installation.

Customer Service: service@24h-reply.com

ASSEMBLY INSTRUCTIONS



1. Take Fixture body (A). Unscrew the screws underneath the top cover, remove the square frame, and take out the packing material inside the square frame.

Hardware Used

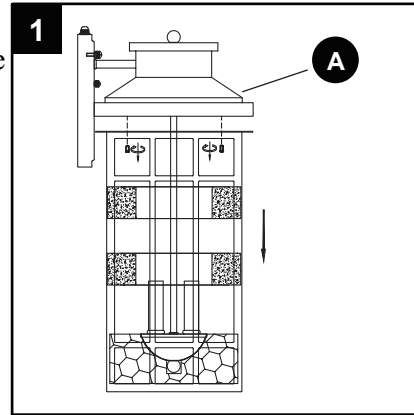



2. First, install the bulbs. Then put the square frame back in place and secure it with the screws. Finally, attach the decorative part (B).

Hardware Used

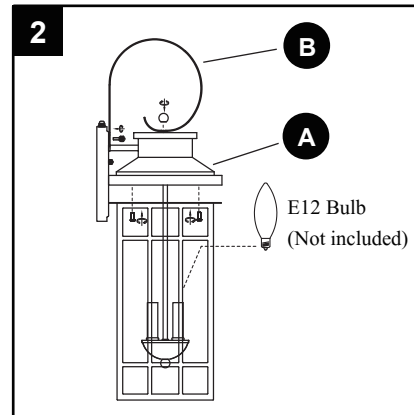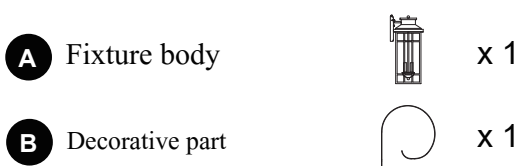


3. Attach the mounting plate (DD) to the outlet box (not included) with the long mounting screws (CC).

Hardware Used

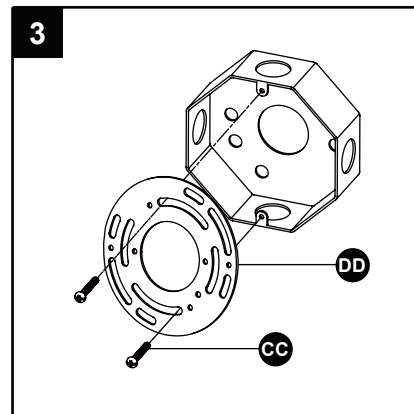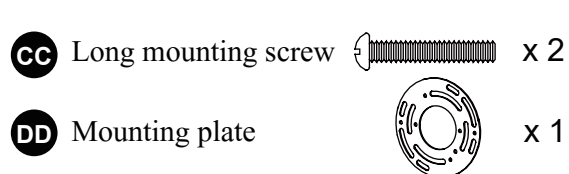


ASSEMBLY INSTRUCTIONS

4. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. Helpful hint: If necessary, attach copper ground wire to grounded outlet box.

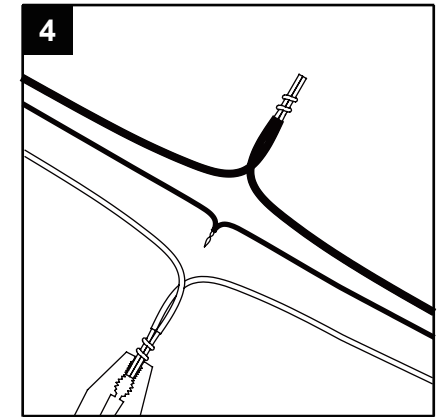

5. Attach wire nuts (BB). Tape wire nuts (BB) and wires together.

Hardware Used

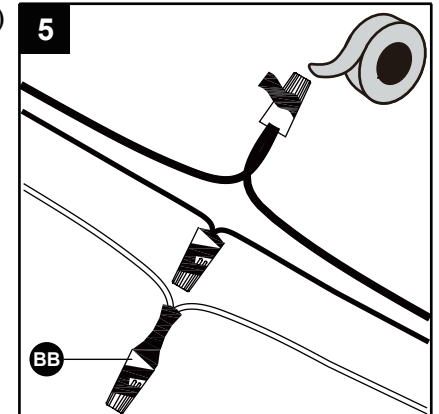

6. Align the 2 screws (AA) through the holes of the back plate, and fix them with screw nuts.

Hardware Used

