

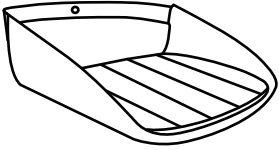
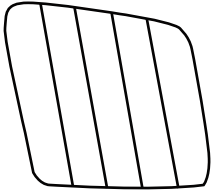
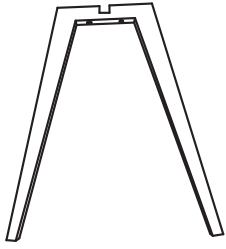
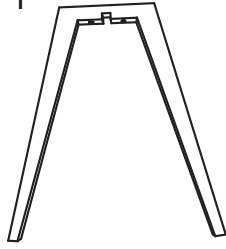
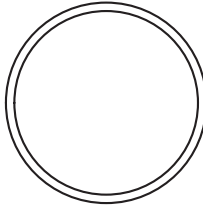
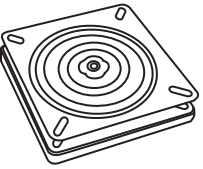









| | | | | | | |
|---|---|---|---|---|--|---|
| A*1  | B*1  | C*1  | D*1  | E*1  | F*1  | |
| G*1+1  M6X35mm | H*8+1  M6X45mm | I*2+1  M6X25mm | J*2+1  M6X20mm | K*2+1  Rubber Washer | L*1  M6 | M*1  SPARE FOOT NAIL |


1




2

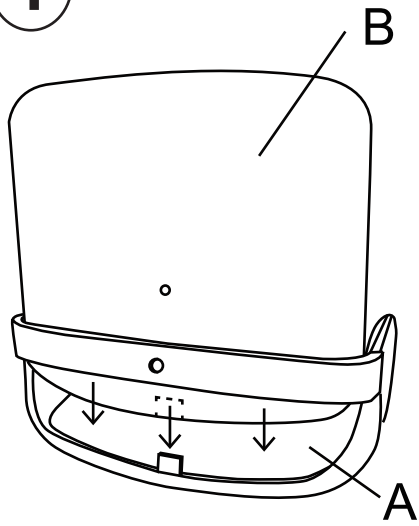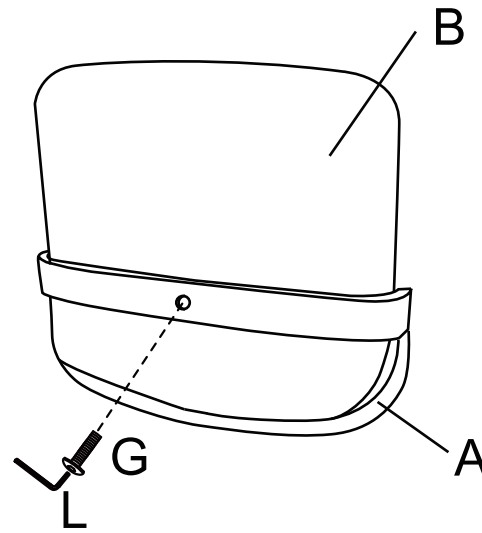


3

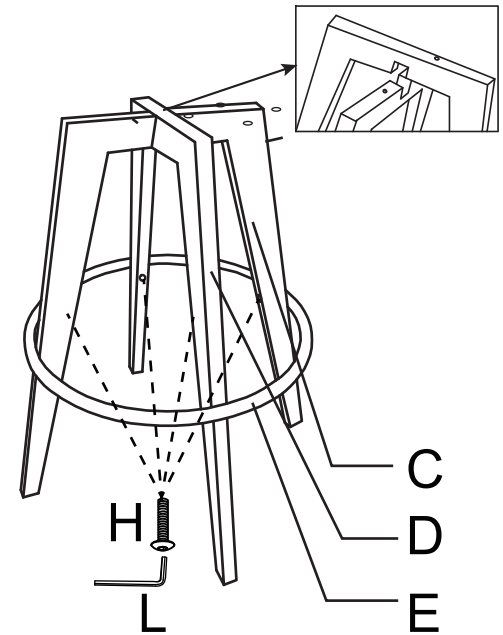


4

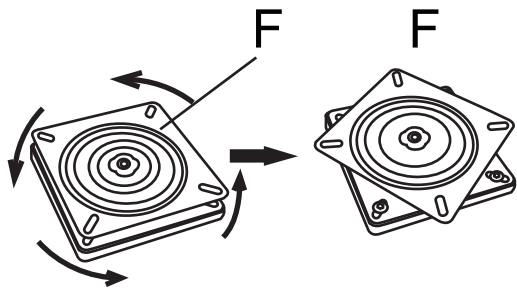


5

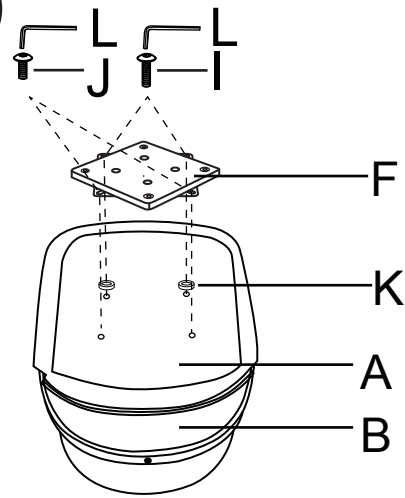

6

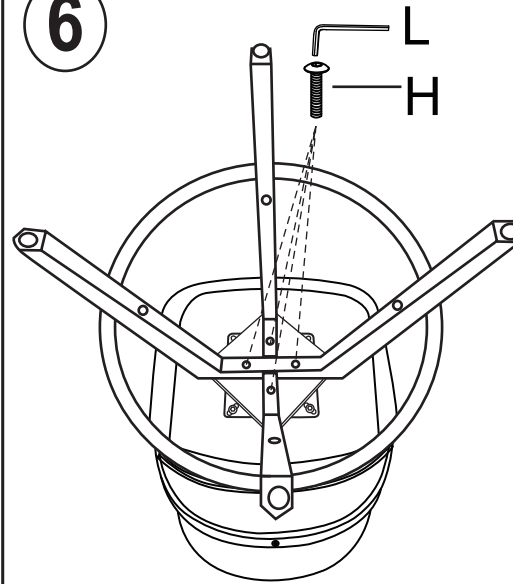

7

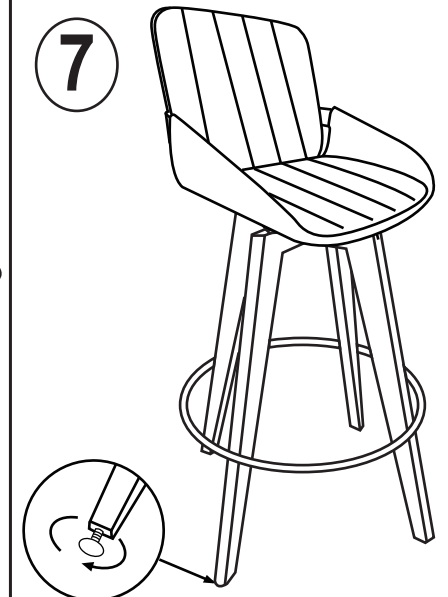

Note: adjust the foot nails to make the chair balance.