

ASSEMBLY INSTRUCTION QUEEN BED

Page : 1 OF 1


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.

HEADBOARD

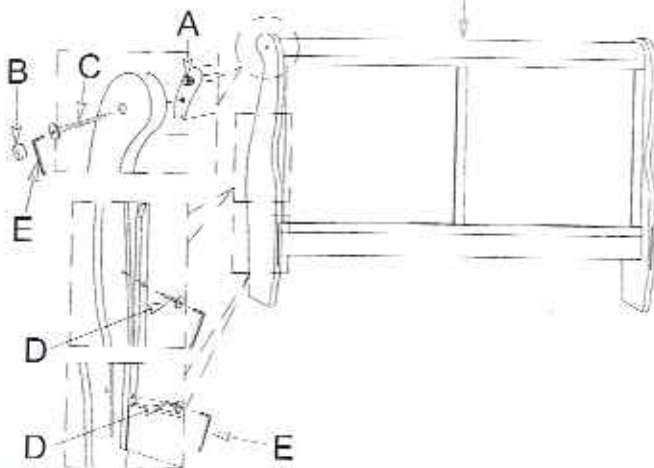

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm 	2PCS
B.	Wood Bolt M15 x 9mm 	2PCS
C.	JCBC Bolt M6 x 50mm 	2PCS
D.	JCBC Bolt M6 x 35mm 	4PCS
E.	Allen Key 	1PC

Screw Driver Not Provide !!!

TIPS:


Attach & tighten the Headboard Leg (R&L) to the Headboard with Hardware Part 1.

ASSEMBLY INSTRUCTION QUEEN BED

Page : 1 OF 1


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

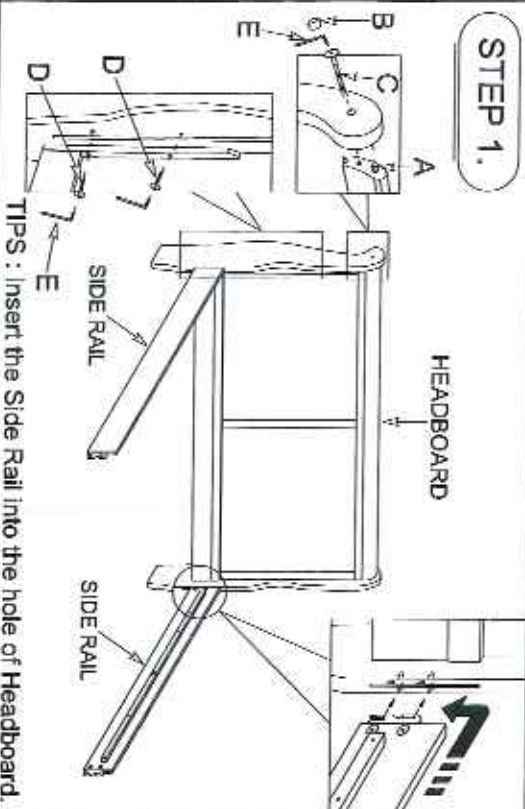

TIPS : Insert the Side Rail into the hole of Headboard.

STEP 2.

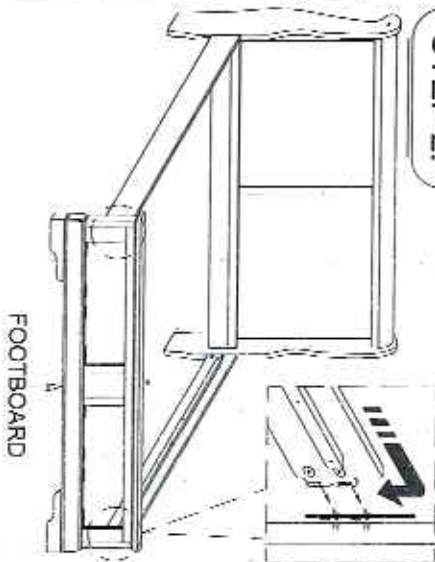

TIPS : Insert the Side Rail into the hole of Footboard.

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	2PCS
B.	Wood Bottom M15 x 9mm	2PCS
C.	Bolt M6 x 50mm	2PCS
D.	Bolt M6 x 35mm	4PCS
E.	Allen Key	1PC

Screw Driver Not Provide !!


HARDWARE PART 2

NO	HARDWARE DESCRIPTION	QTY
F.	Screw M4 x 32mm	28PCS
G.	Bolt M6 x 35mm	10PCS
H.	Adjuster M6 x 24mm	2PCS

Screw Driver Not Provide !!


STEP 3.

TIPS : Rotate the drawer slat support and tighten using with Allen Key. Attach the drawer support and slat support to footboard and fasten with JCBC Bolt M6 x 35mm.

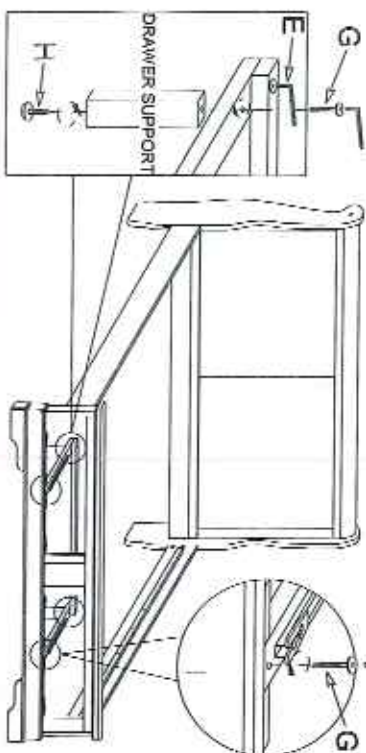

STEP 4.

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

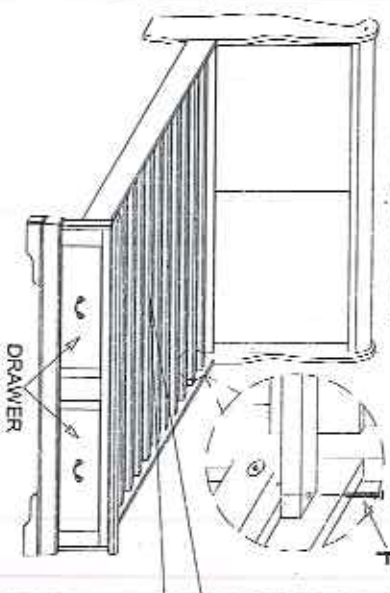

a. TIPS : Rotate the slat support and tighten using with Allen Key.

