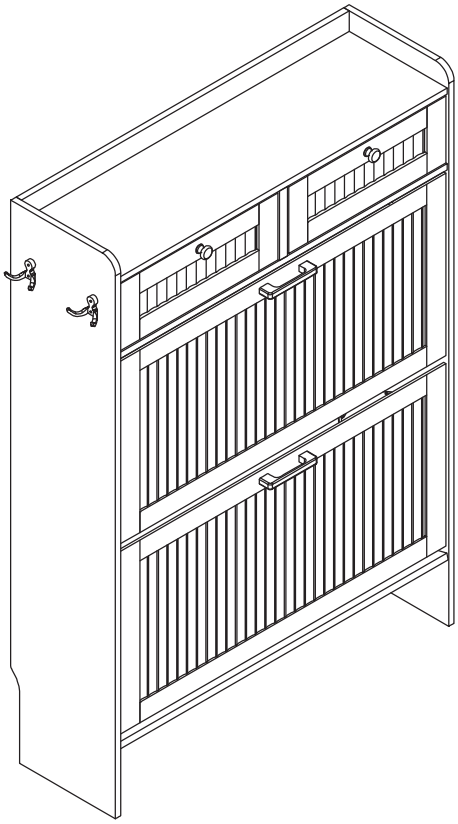
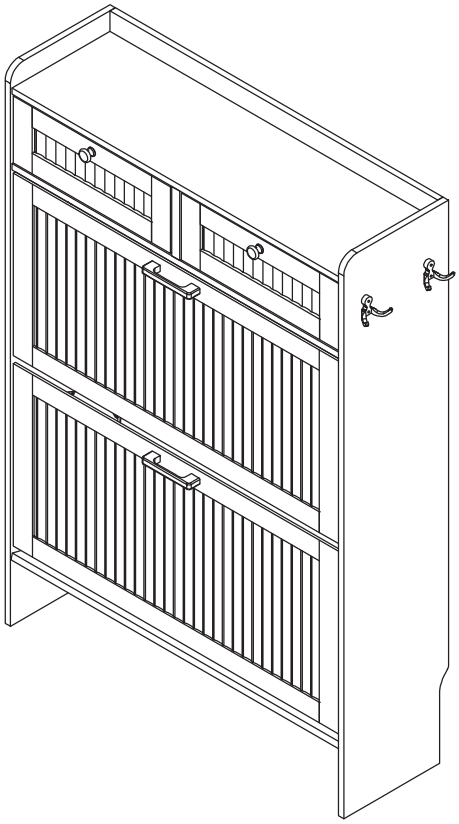
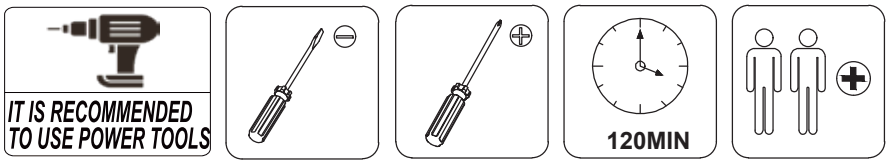
Please note: Items cannot be returned once assembled

Version:1.0

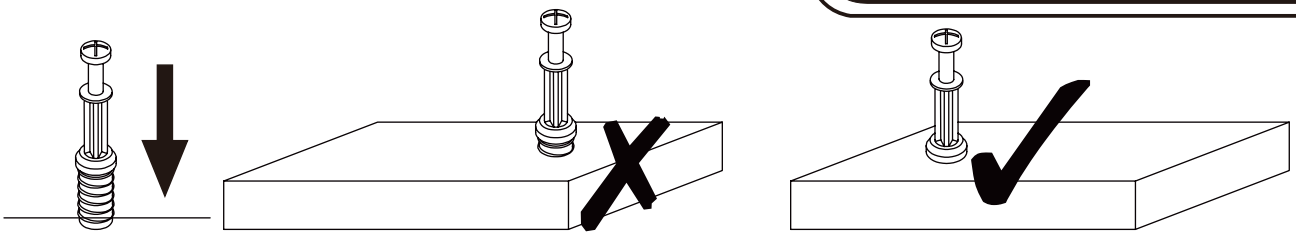


OR

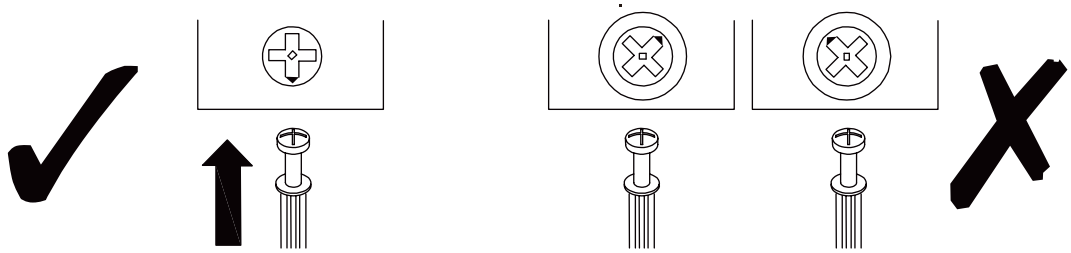




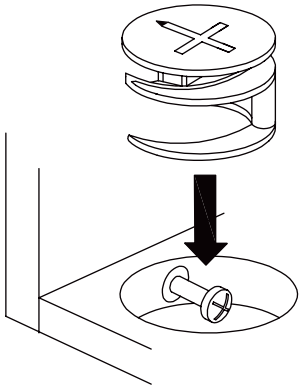
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



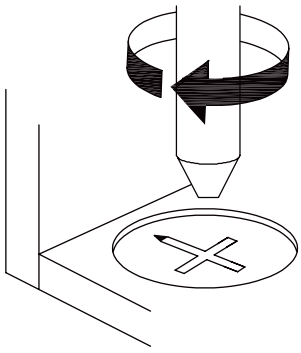
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



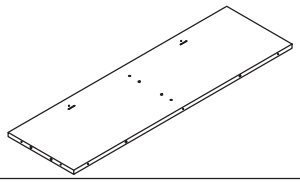
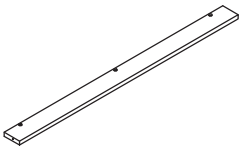
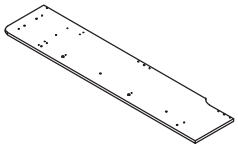
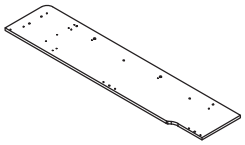

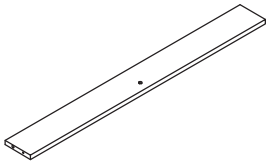
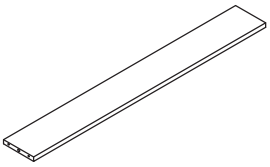
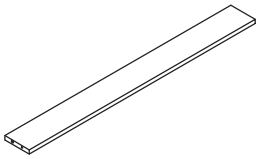
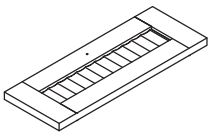

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


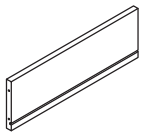

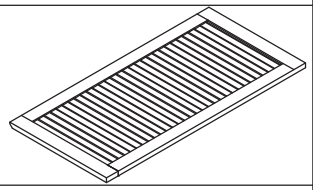
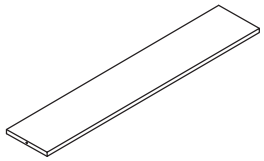
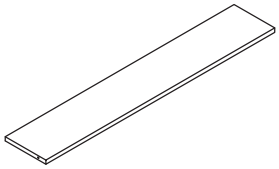


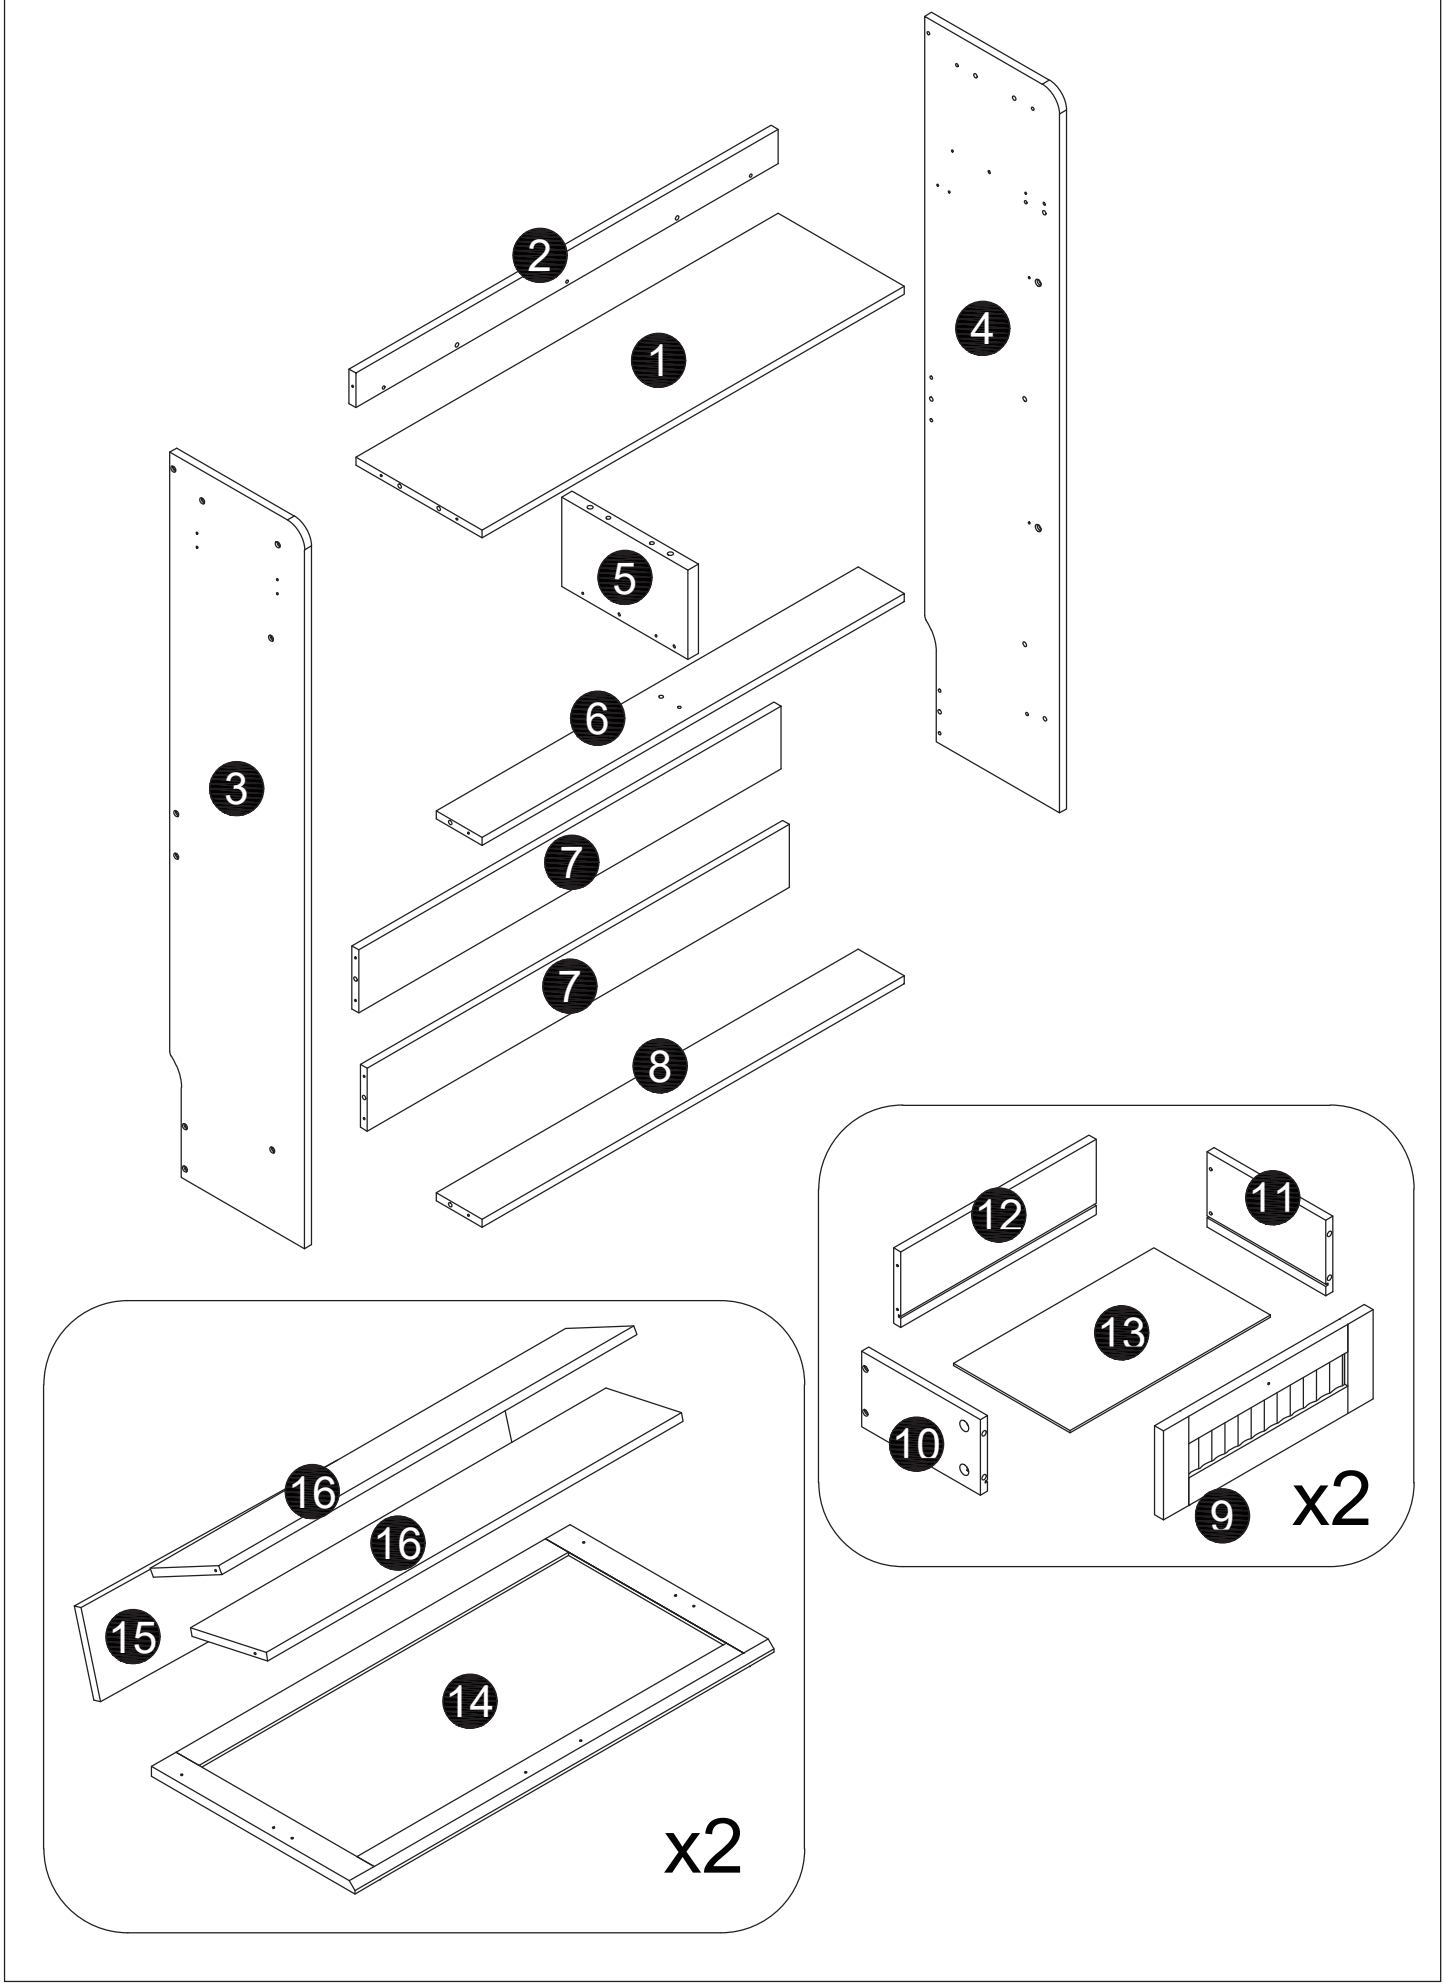
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



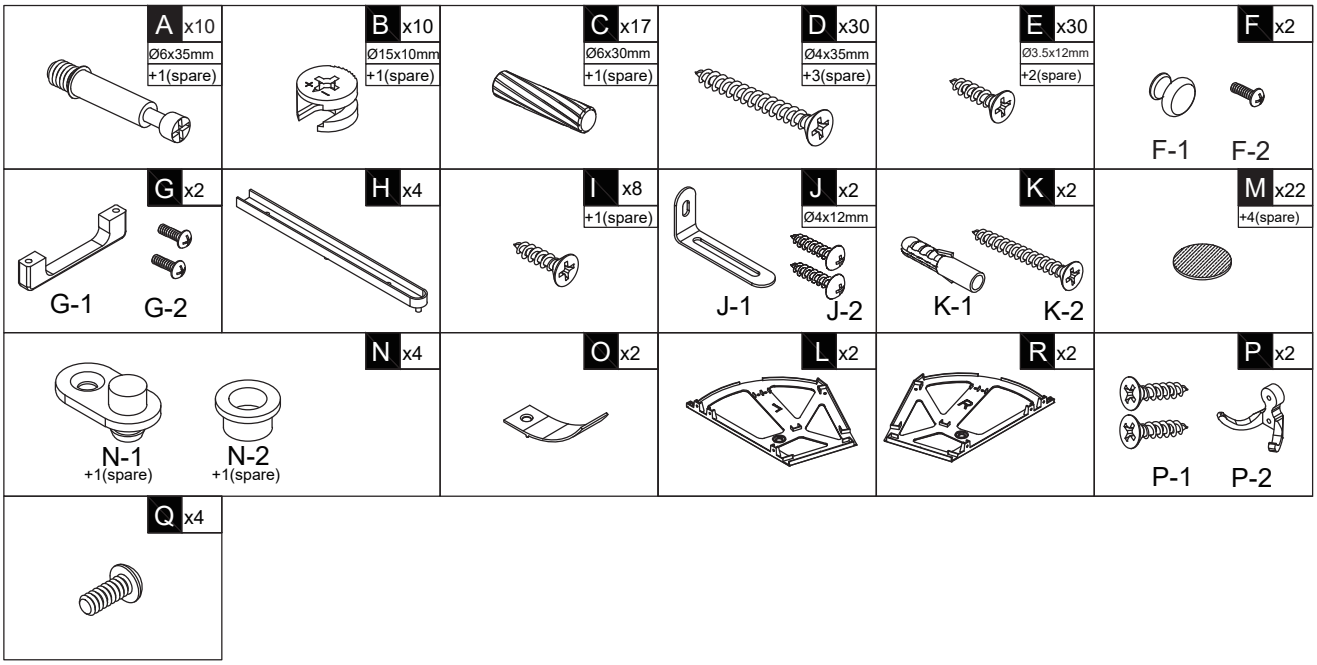
EN_ Turn cam lock clockwise to tighten.

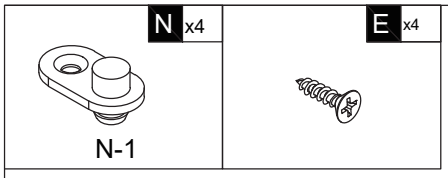
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x1	
⑨		x2	
⑩		x2	

NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x4	

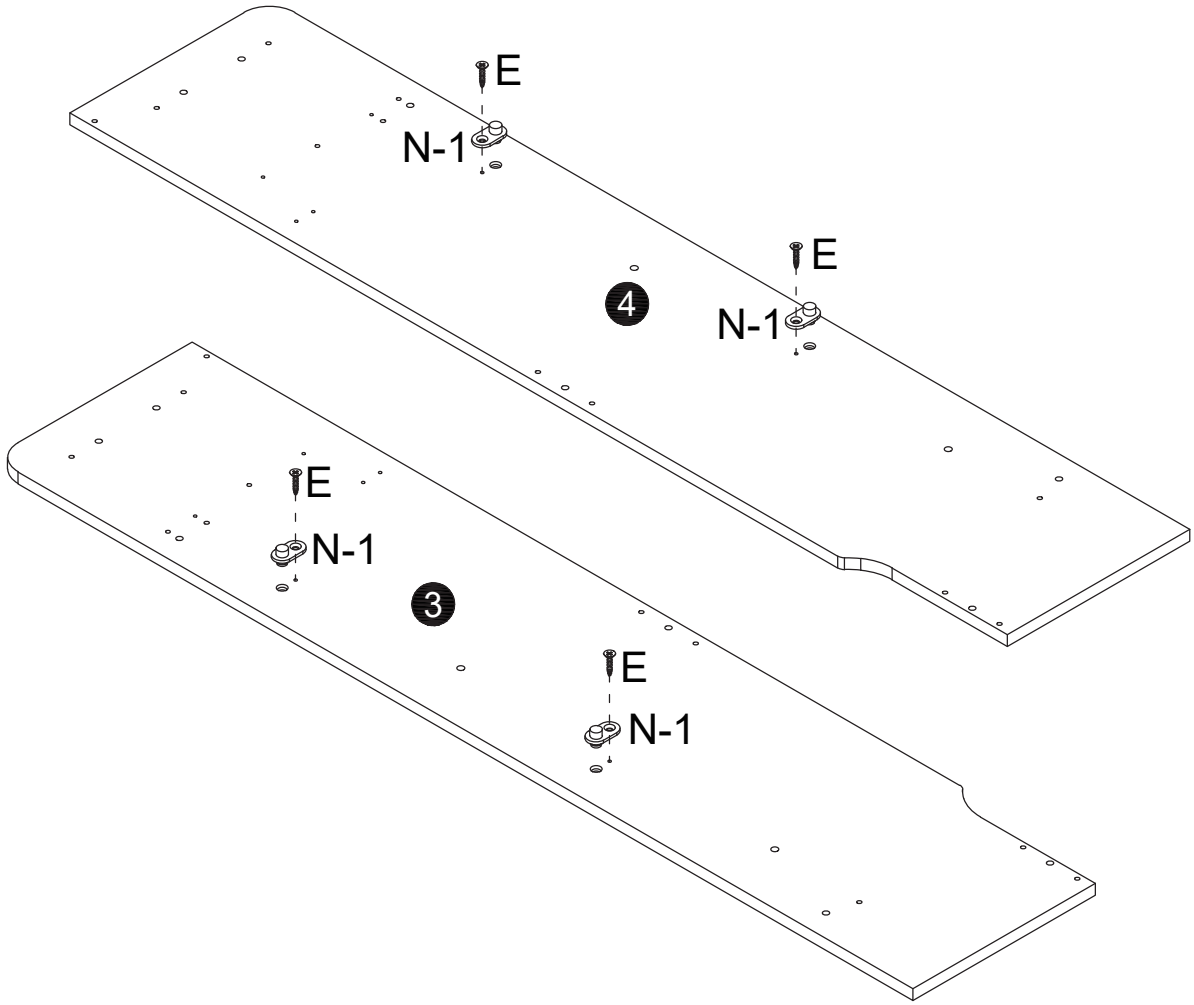

2
1
4
5
3
6
7
7
8
12
11
13
10
9
x2
16
16
15
14
x2

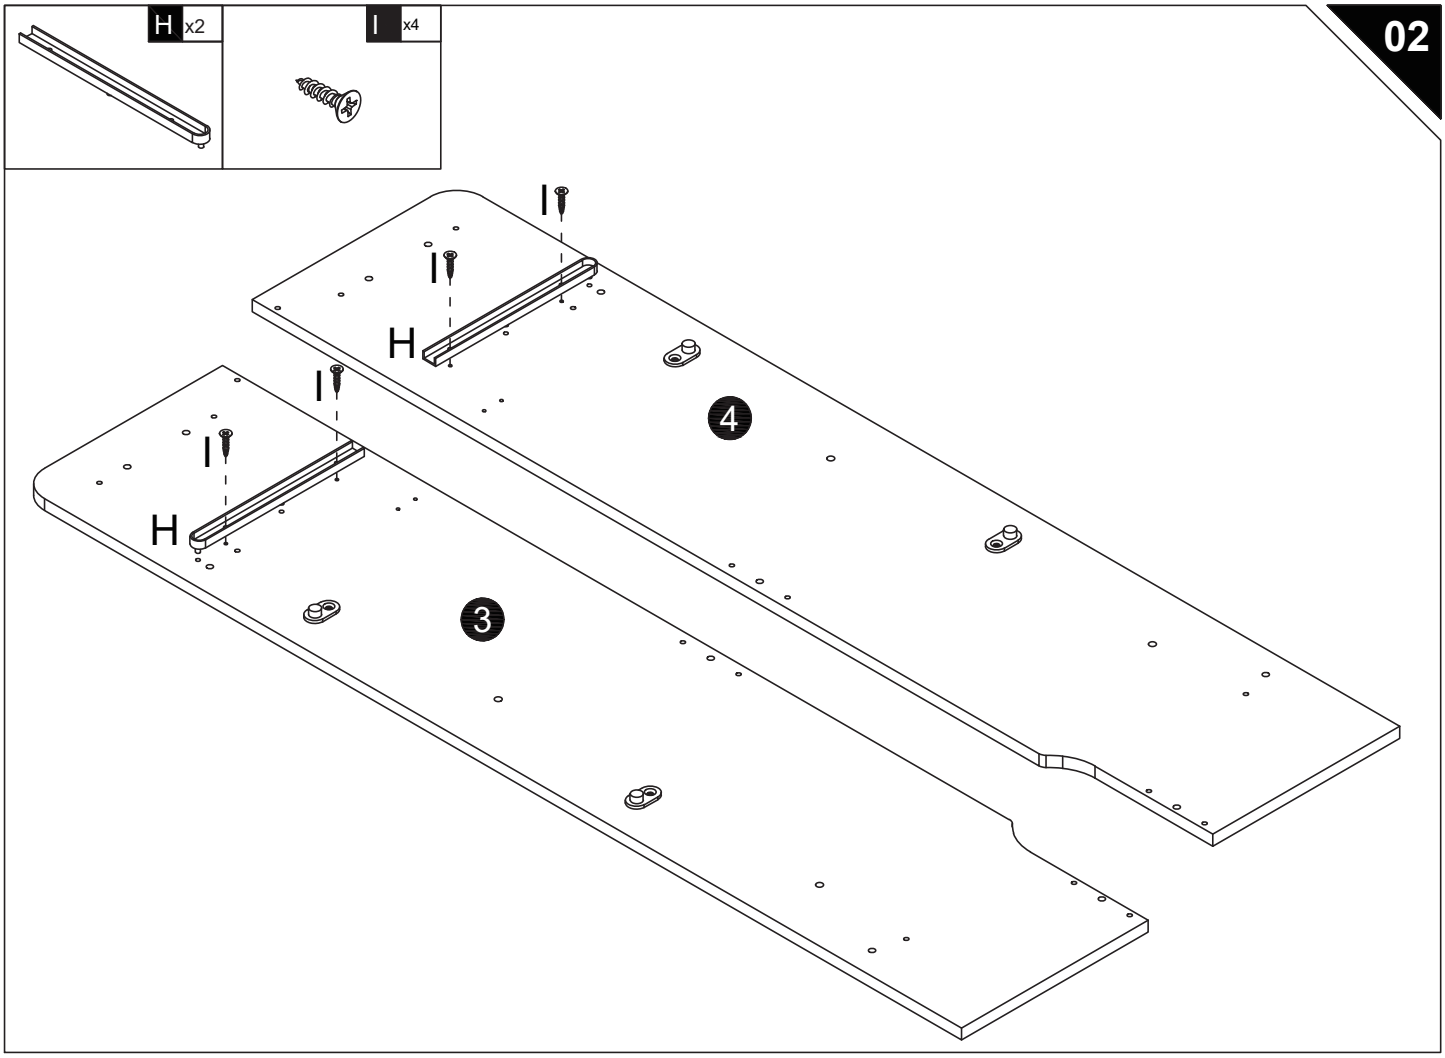
HARDWARE

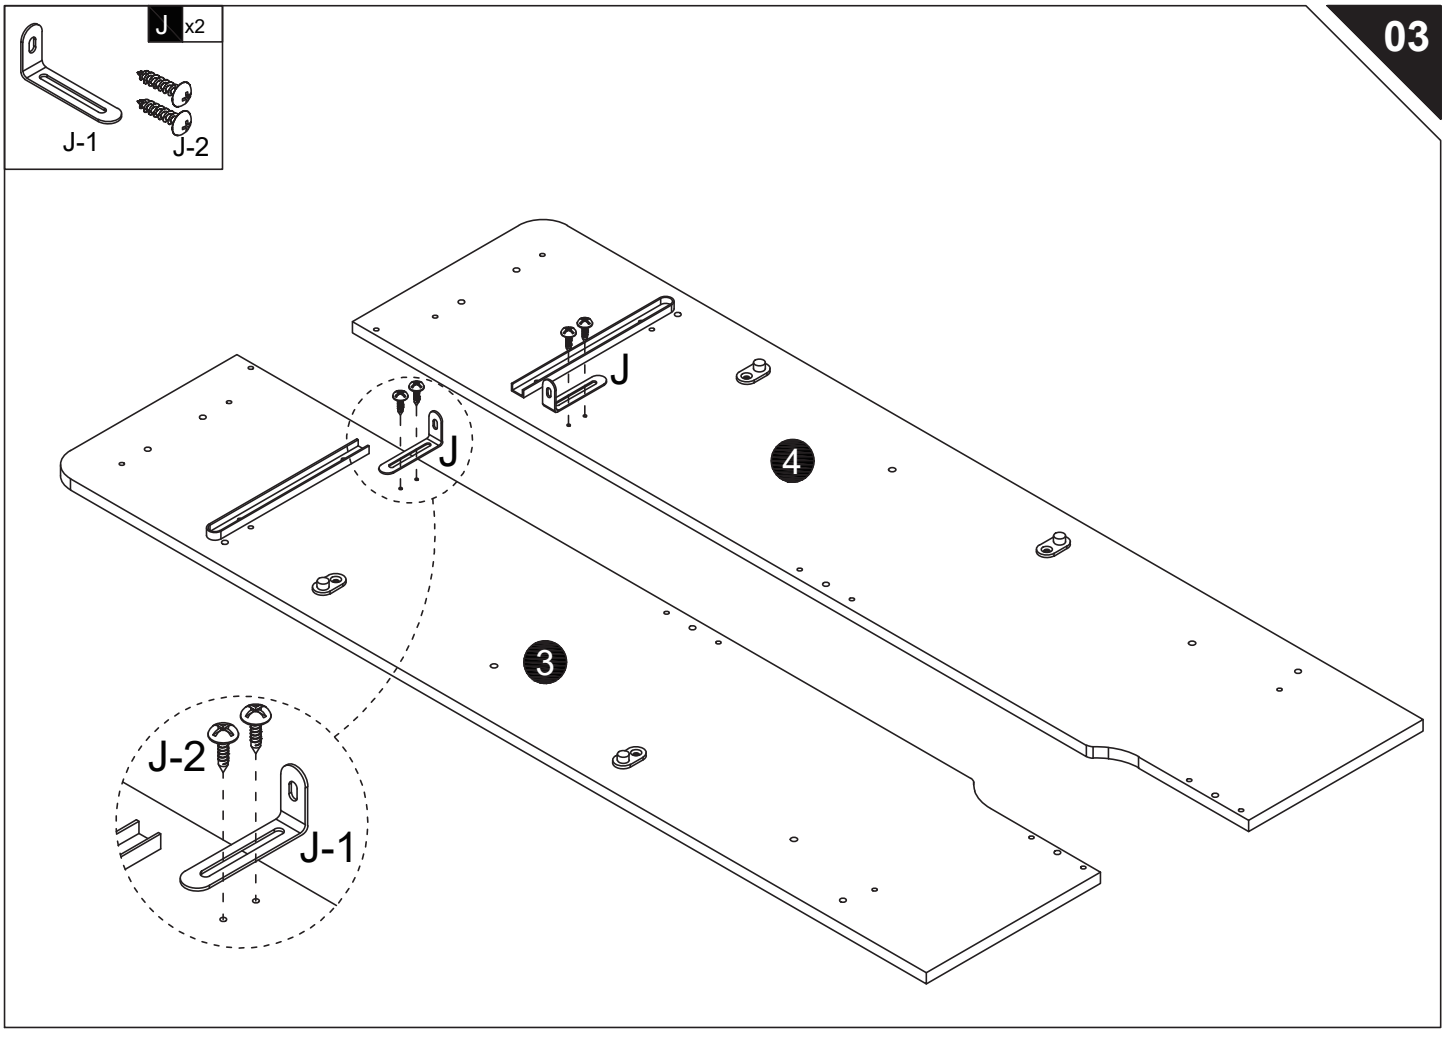

A x10
Ø6x35mm
+1(spare)
B x10
Ø15x10mm
+1(spare)
C x17
Ø6x30mm
+1(spare)
D x30
Ø4x35mm
+3(spare)
E x30
Ø3.5x12mm
+2(spare)
F x2
F-1
F-2
G x2
G-1
G-2
H x4
I x8
+1(spare)
J x2
Ø4x12mm
J-1
J-2
K x2
K-1
K-2
M x22
+4(spare)
N x4
N-1
+1(spare)
N-2
+1(spare)
O x2
L x2
R x2
P x2
P-1
P-2
Q x4

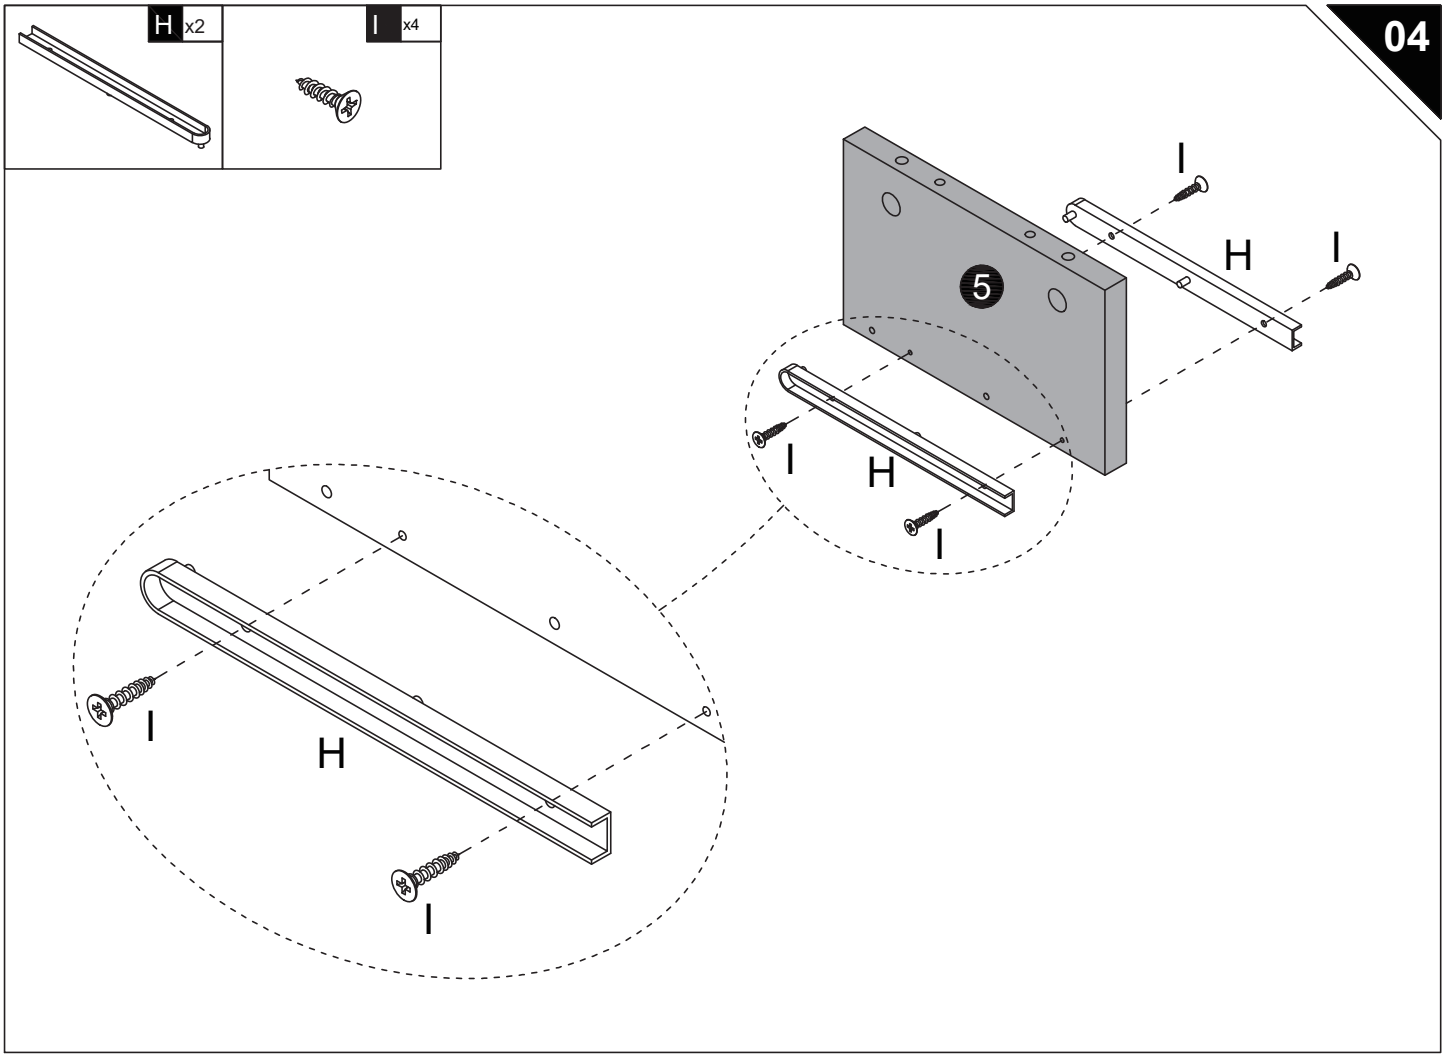

N x4
N-1
E x4

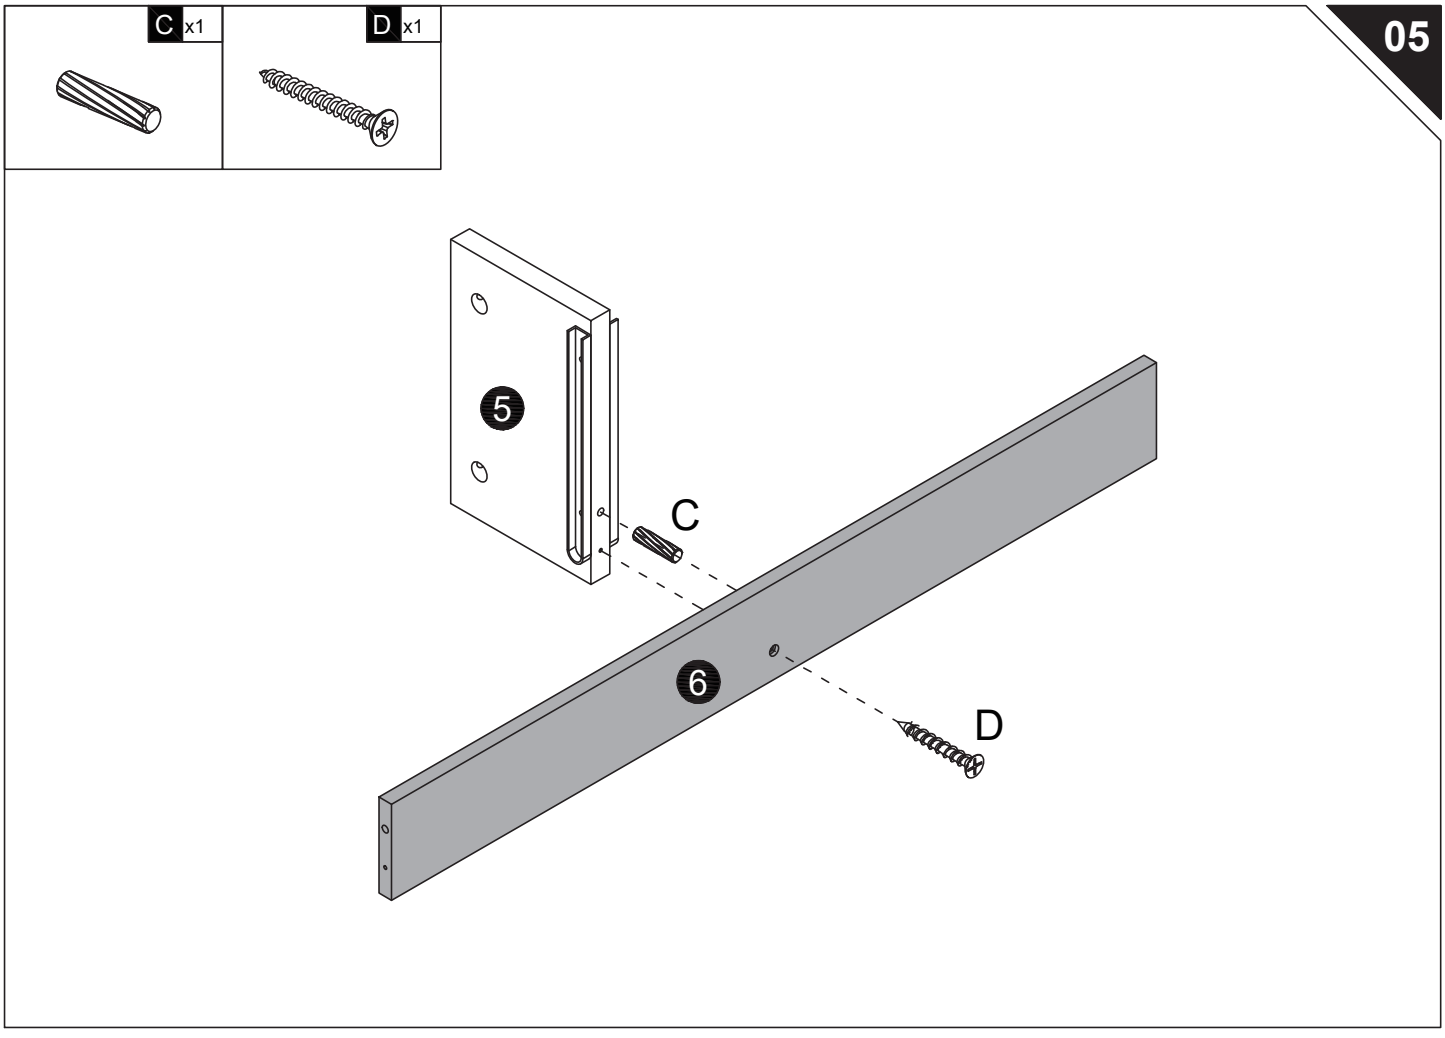
01

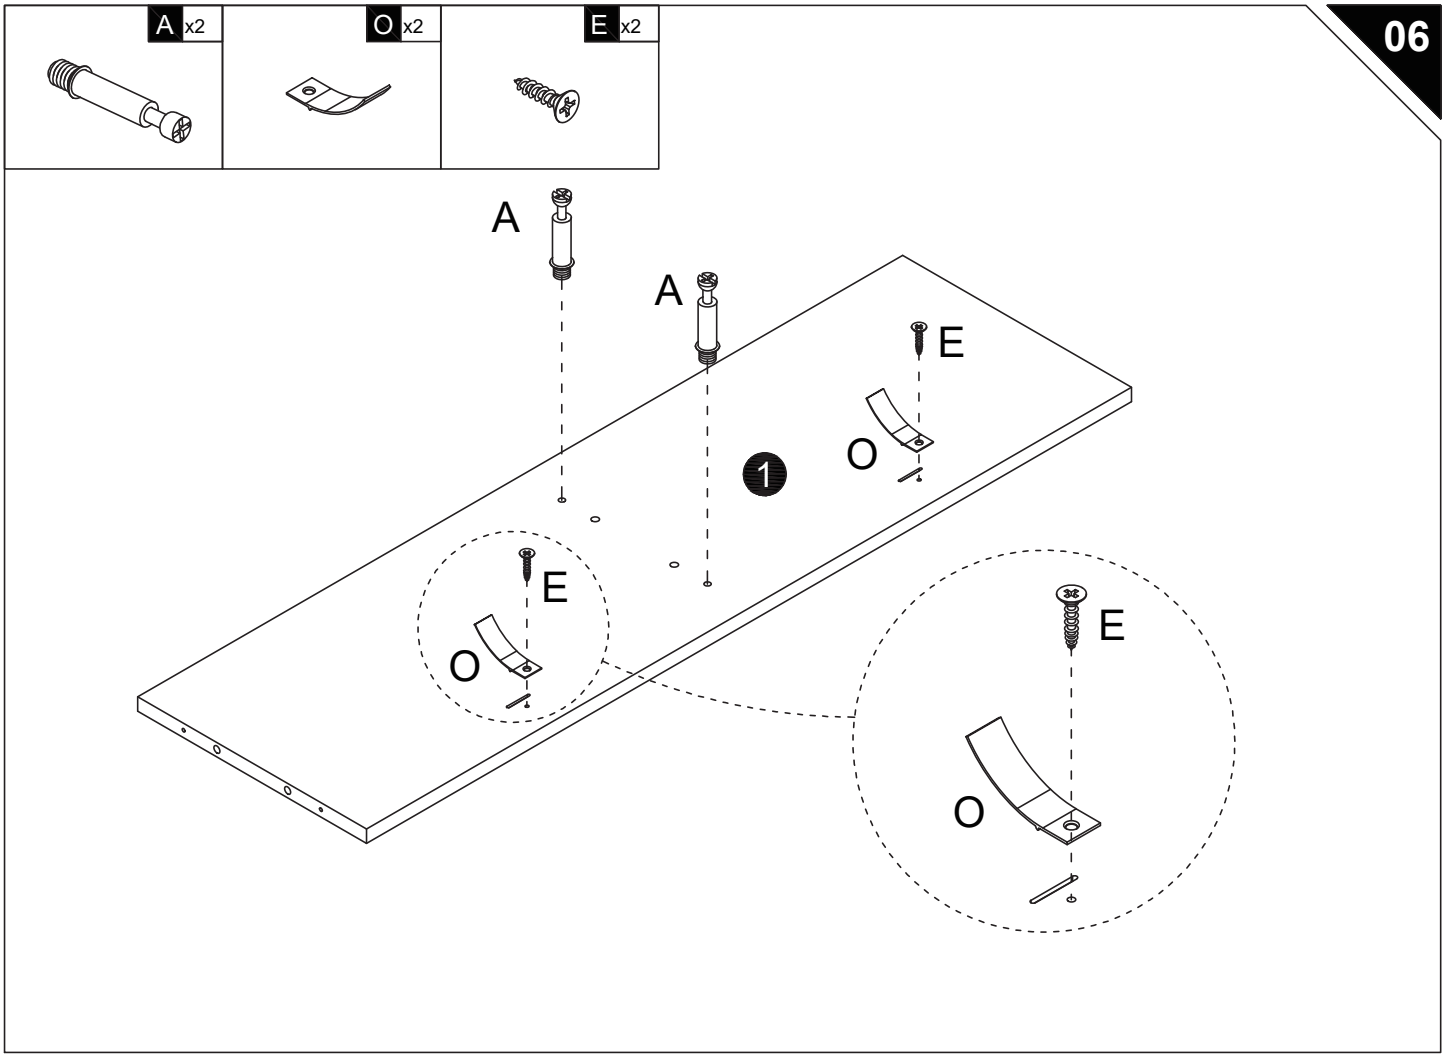

E
N-1
4
E
N-1
E
N-1
3
E
N-1

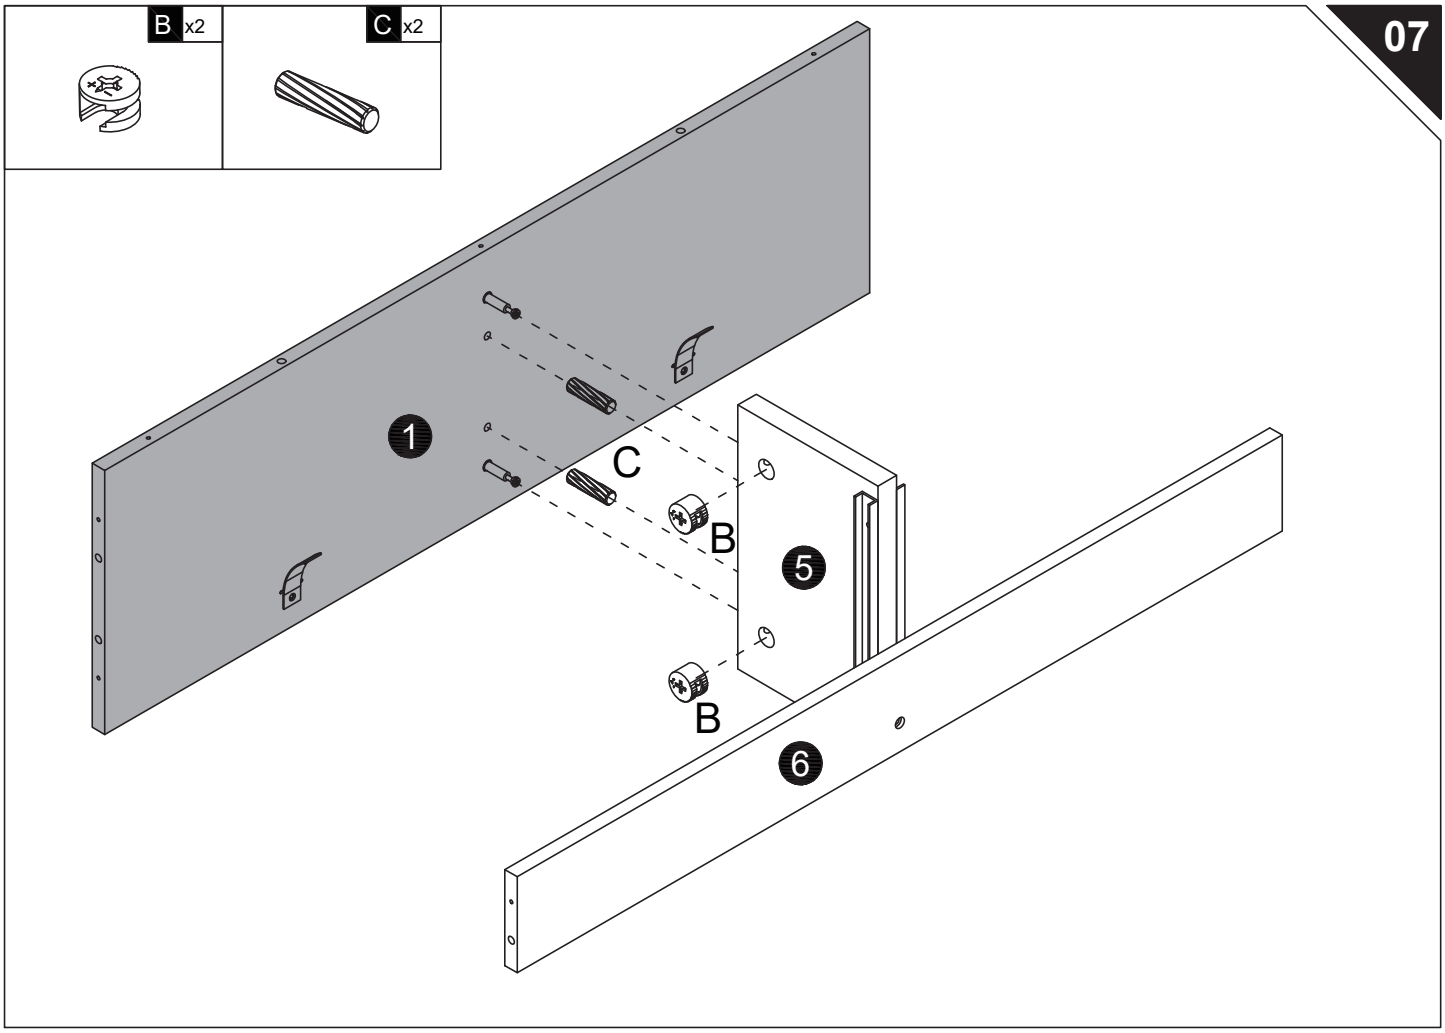

02
H x2
I x4
I
I
H
4
I
I
H
3

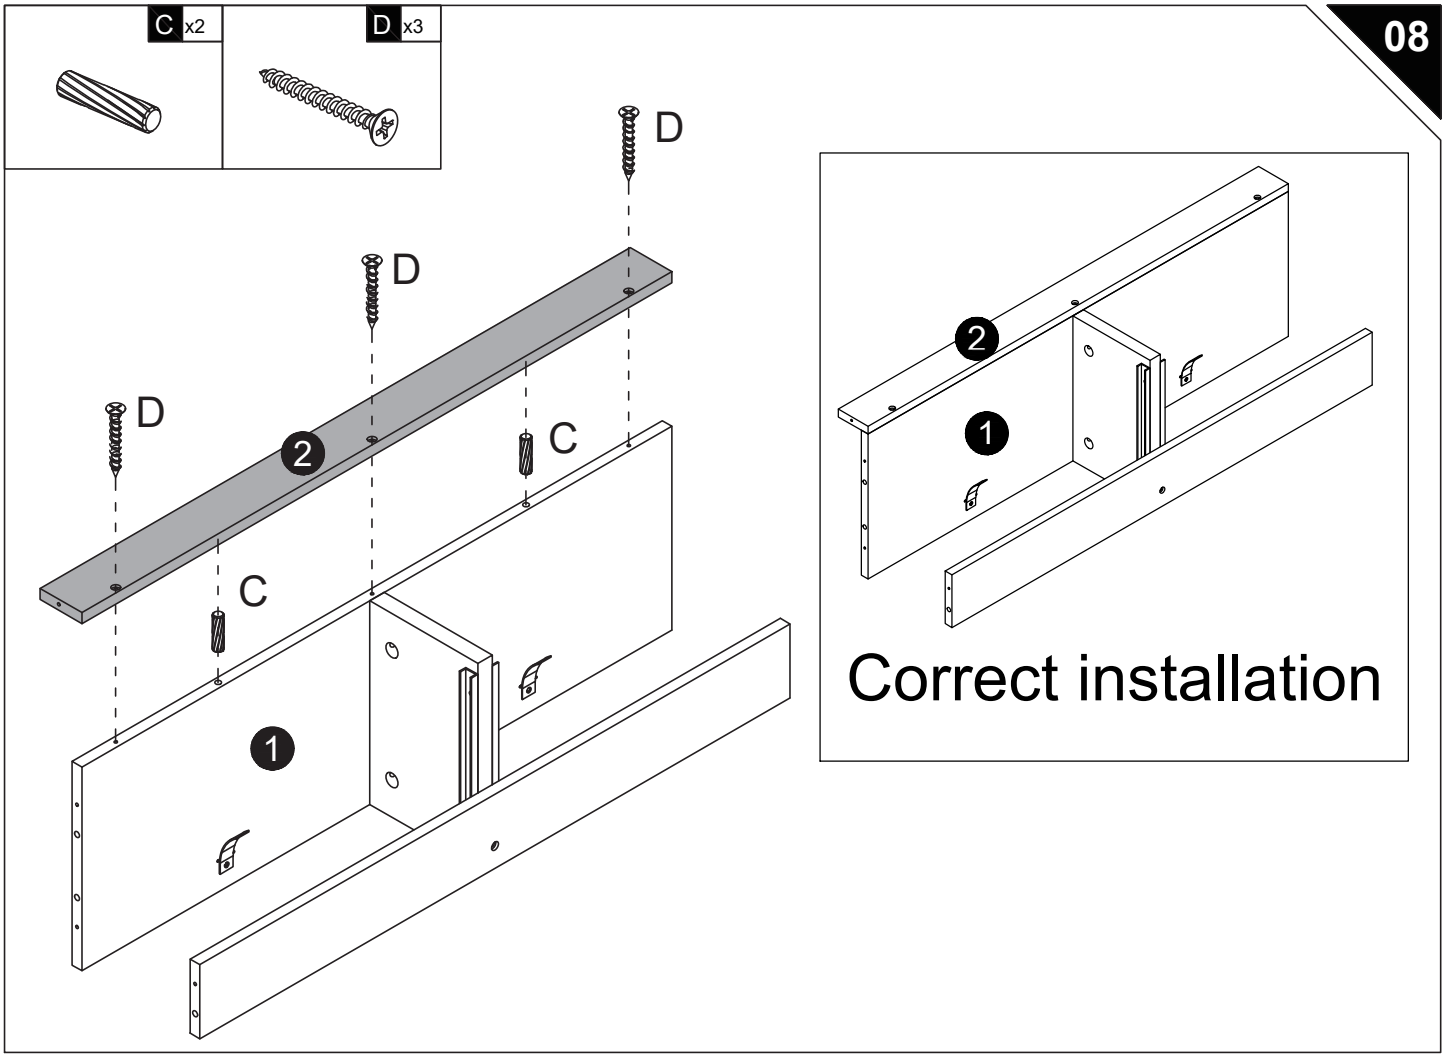

03
J x2
J-1
J-2
J
J
4
3
J-2
J-1

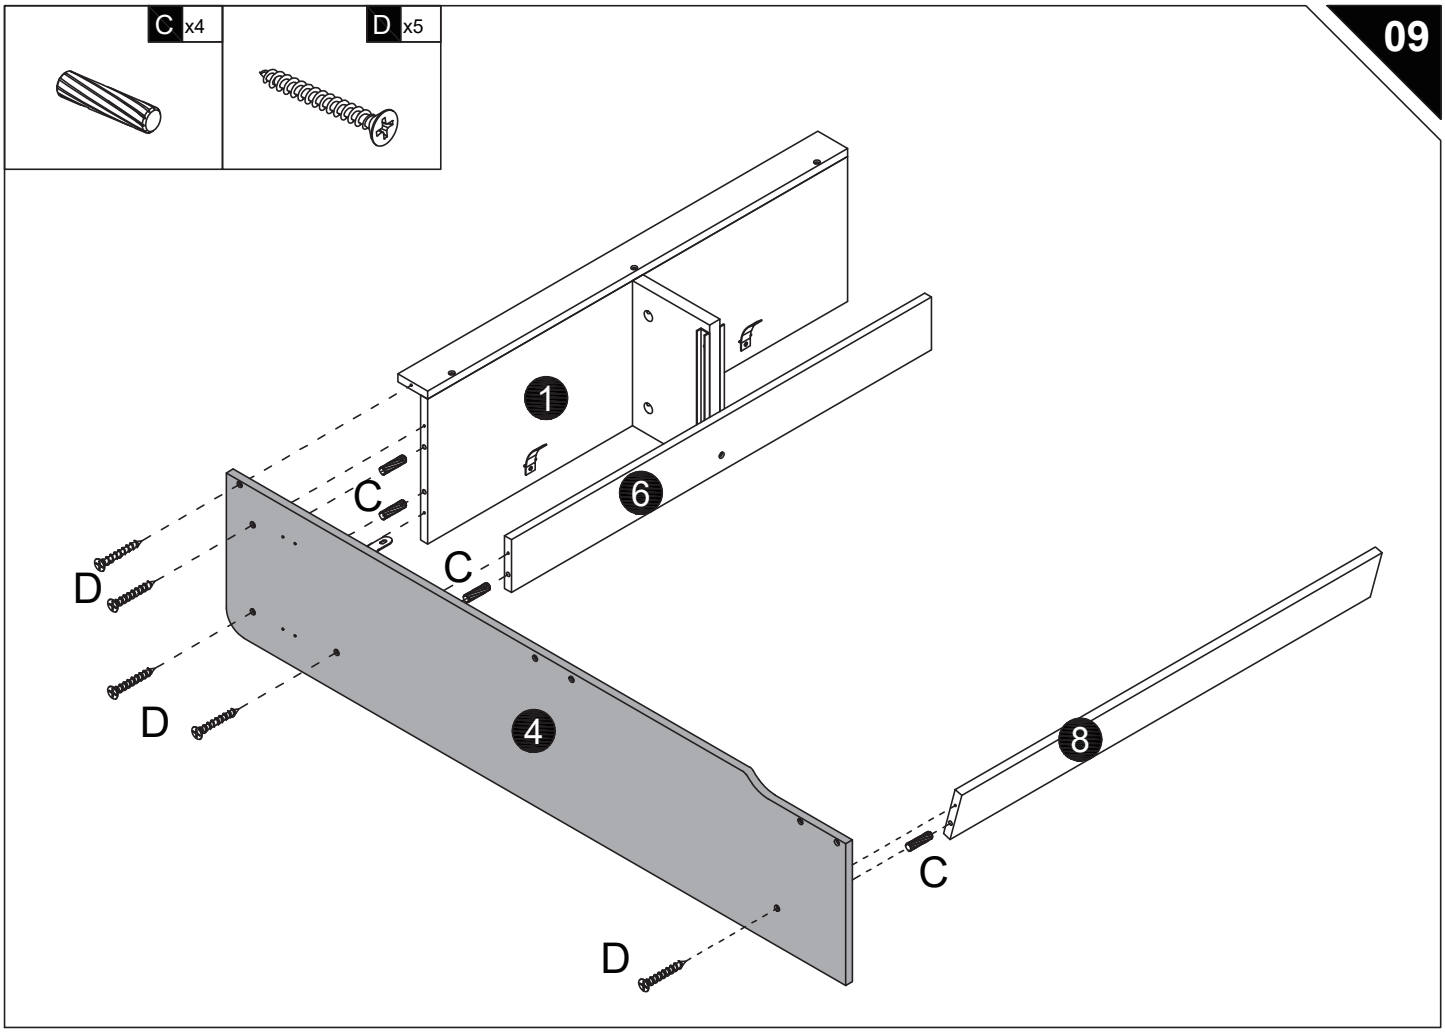

04
H x2
I x4
5
I
H
I
I
H
I
I
H
I

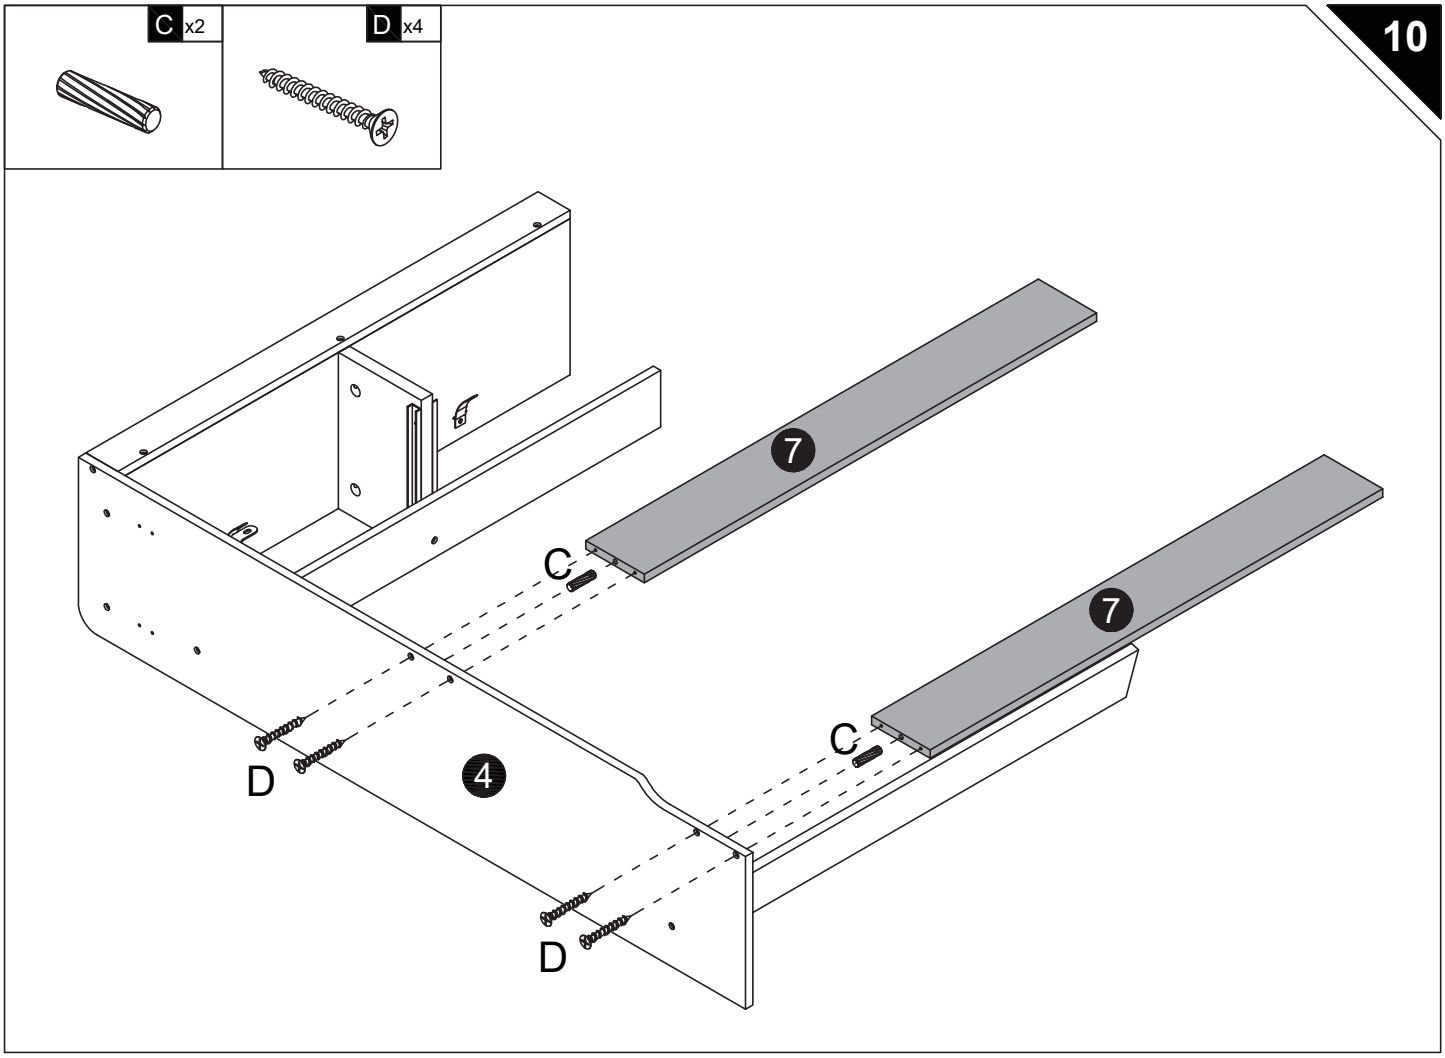

05
C x1
D x1
5
C
6
D

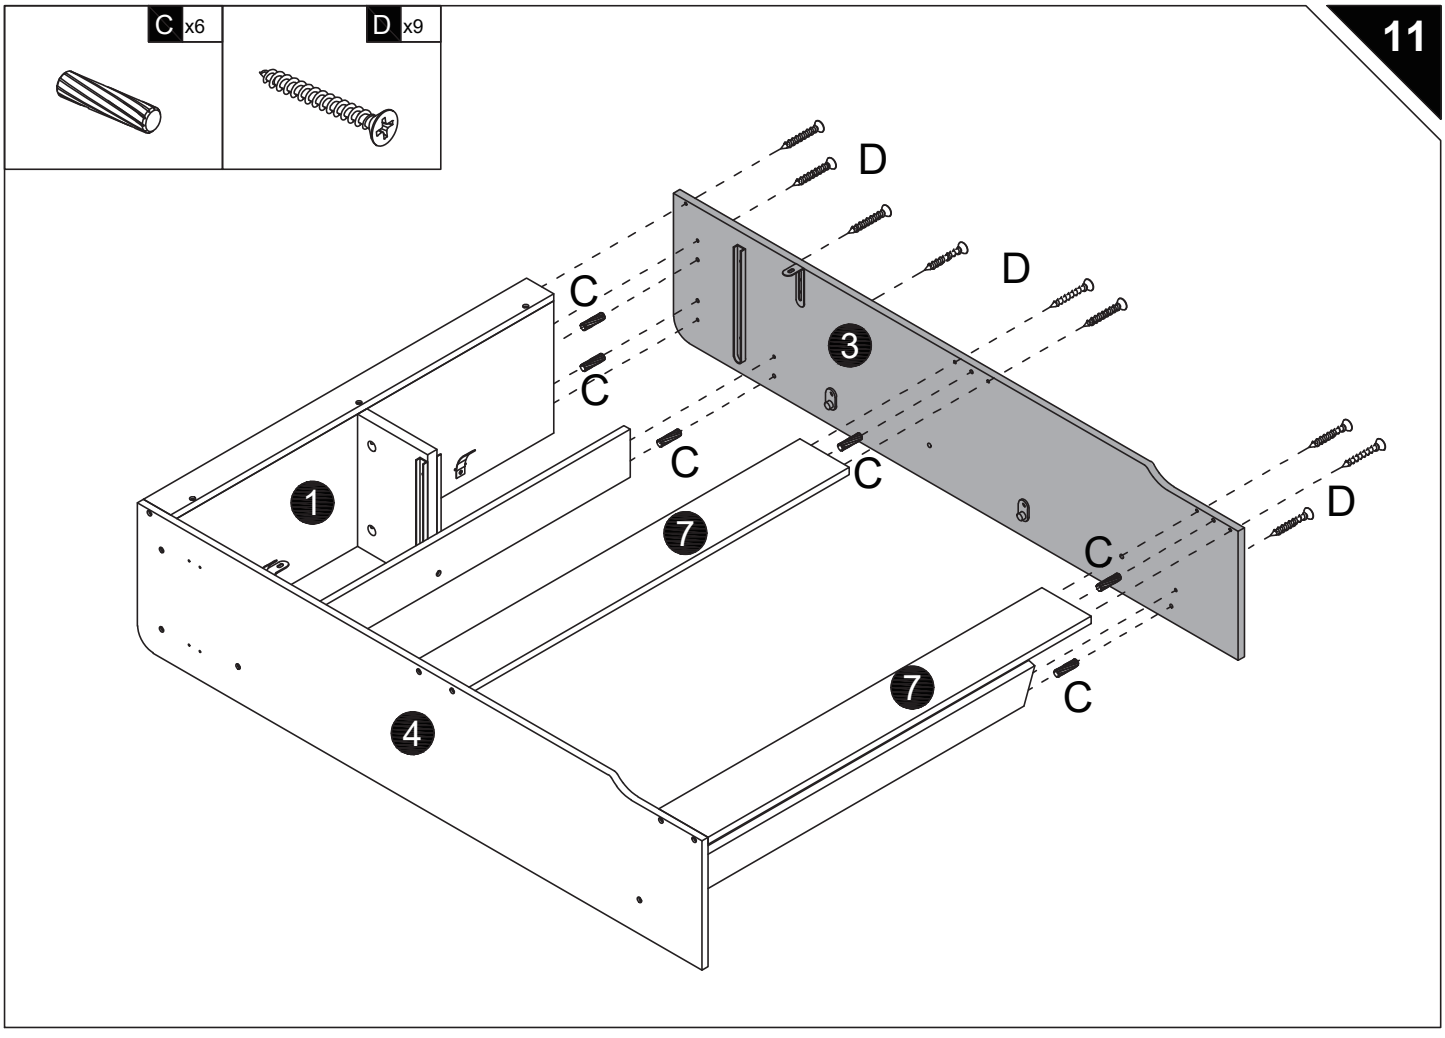

06
A x2
O x2
E x2
A
A
E
O
1
E
O
E
O

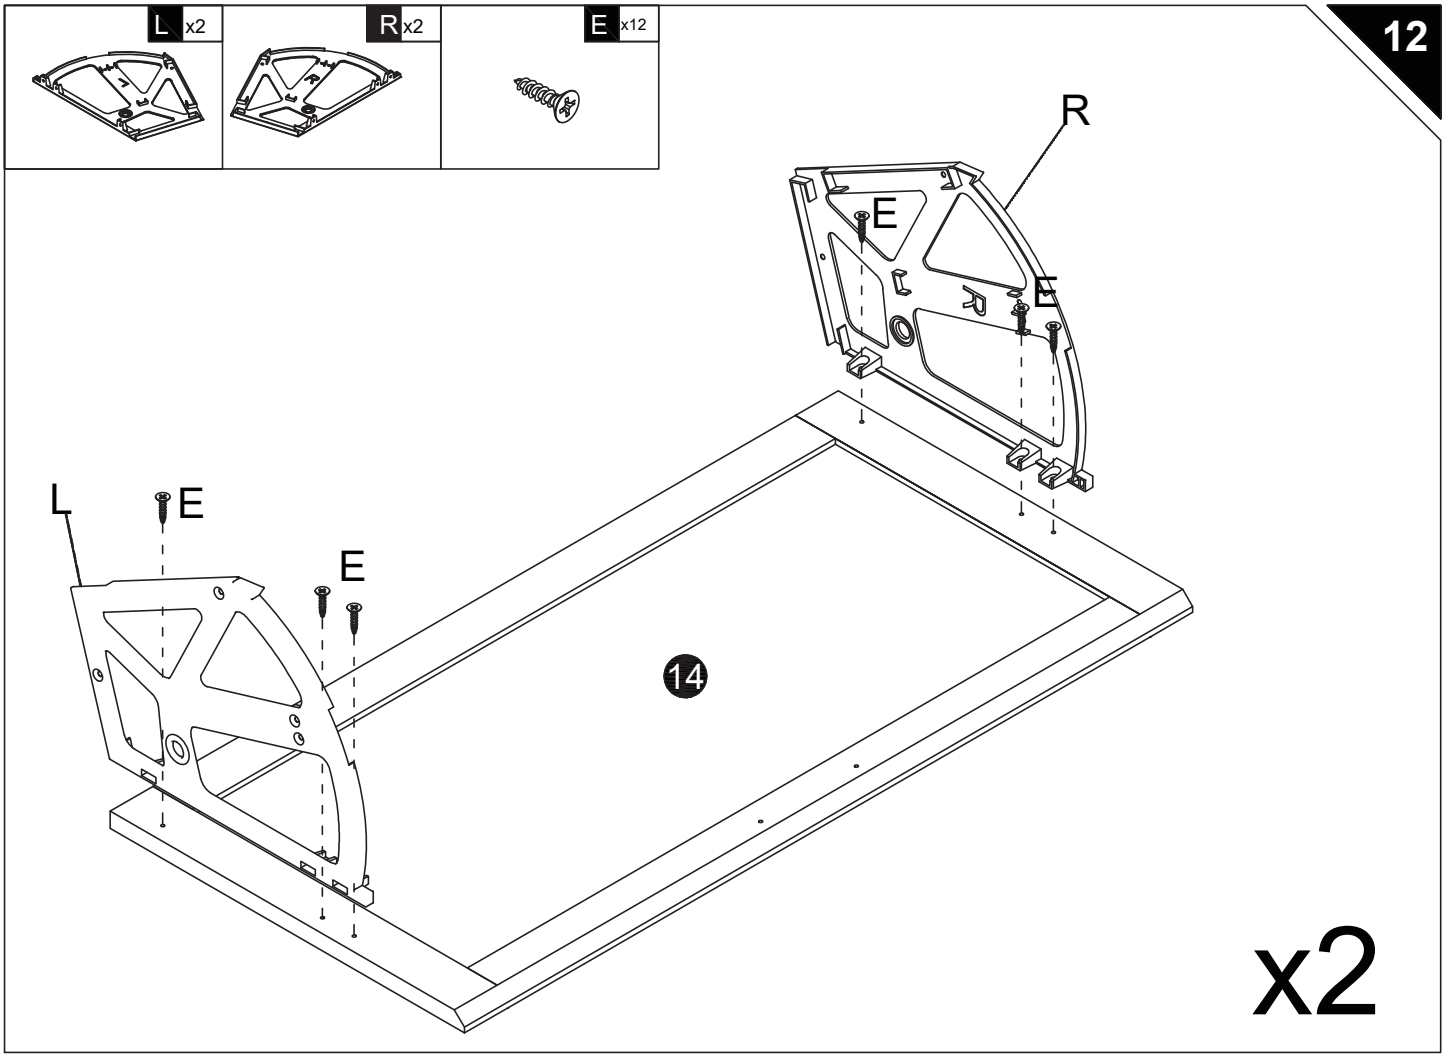

07
B x2
C x2
1
C
B
5
B
6

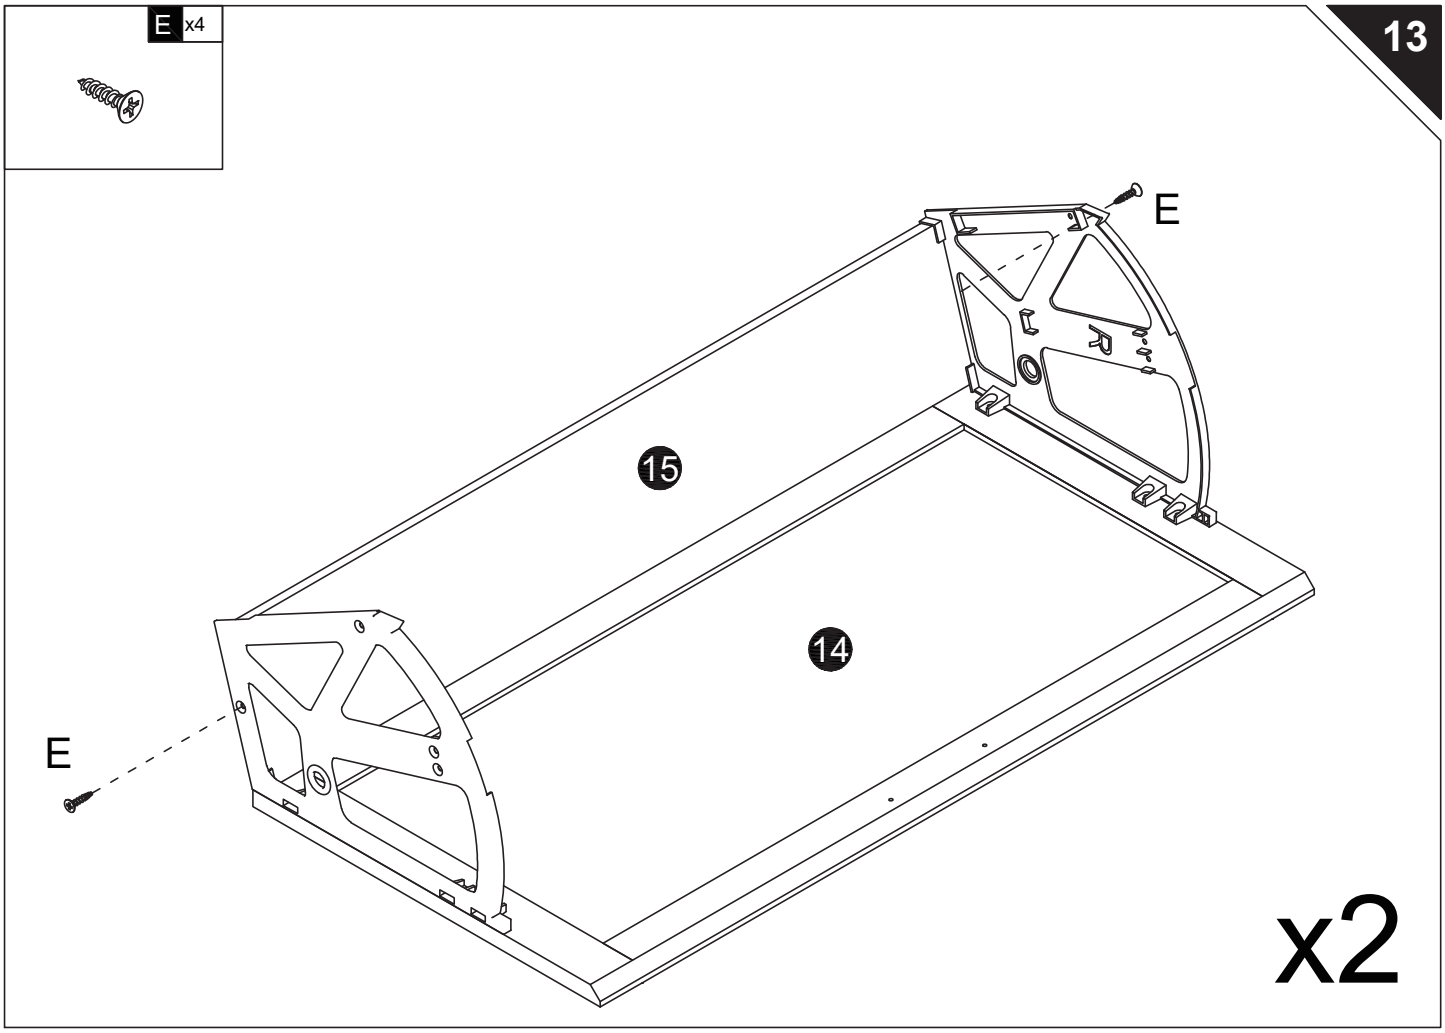

08
C x2
D x3
D
D
D
C
C
2
1
2
1
Correct installation

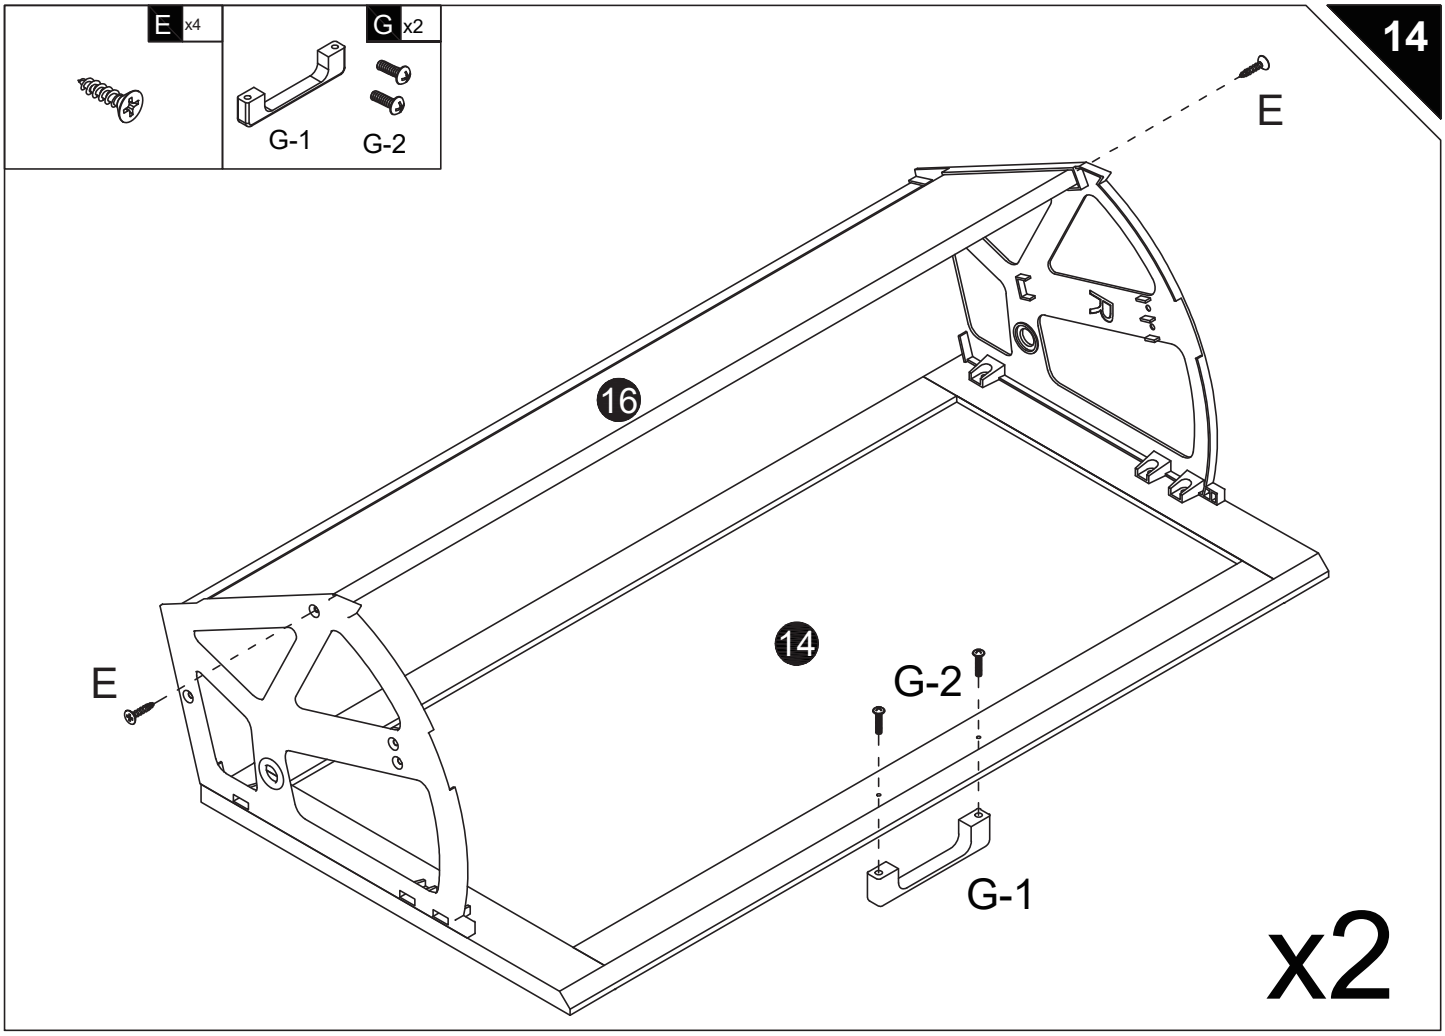

09
C x4
D x5
1
C
C
6
D
D
D
4
8
C

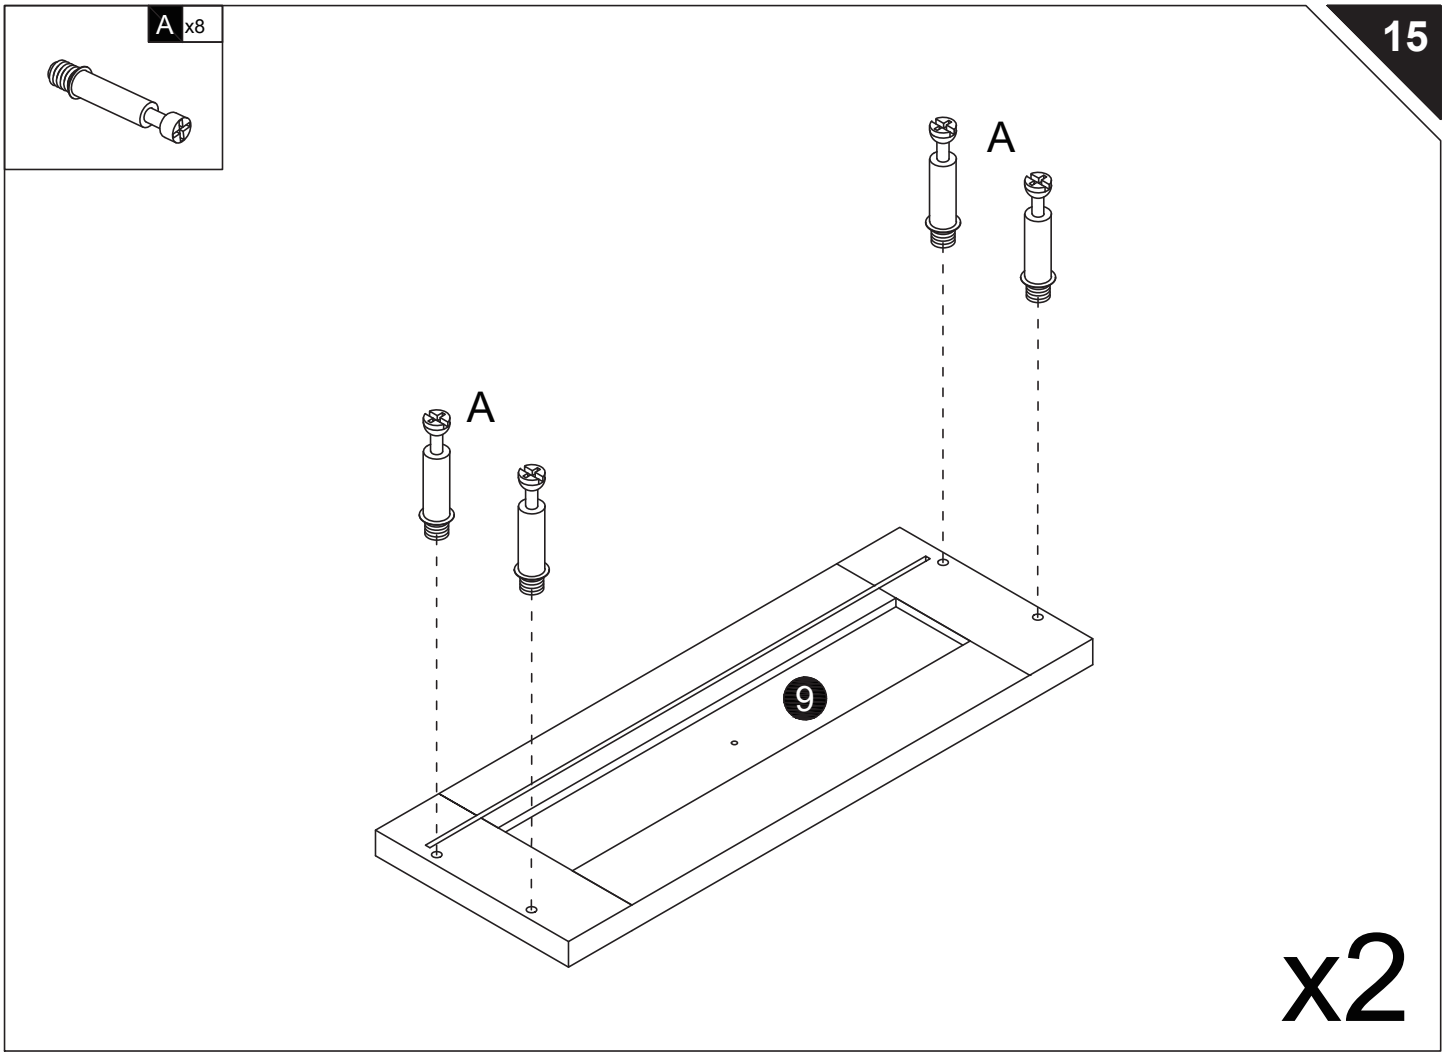

10
C x2
D x4
7
C
7
C
D
4
D

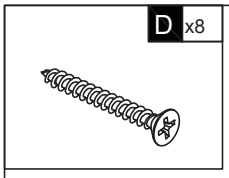

11
C x6
D x9
D
D
C
3
C
C
C
C
D
1
7
C
7
4
C


L x2
R x2
E x12
12
R
E
E
L
E
E
14
x2

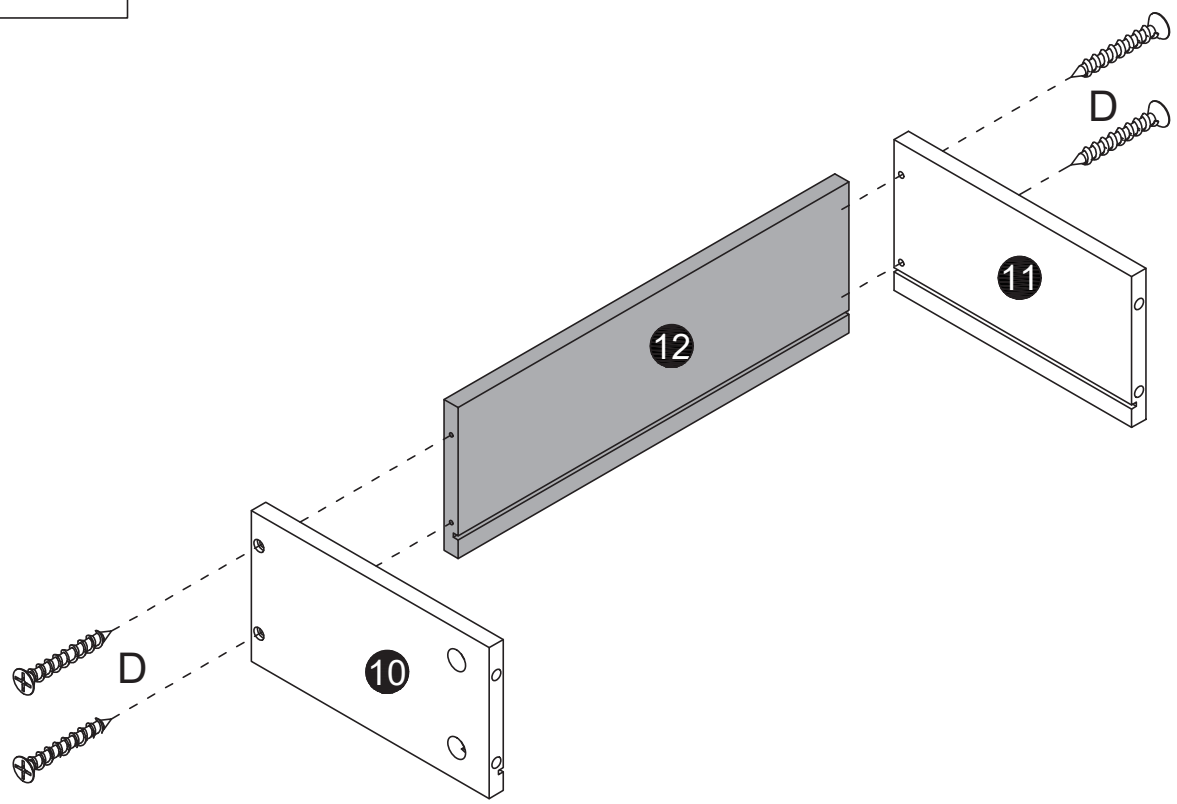

E x4
13
E
15
14
E
x2


E x4
G x2
G-1
G-2
14
E
16
14
E
G-2
G-1
x2


A x8
15
A
A
9
x2

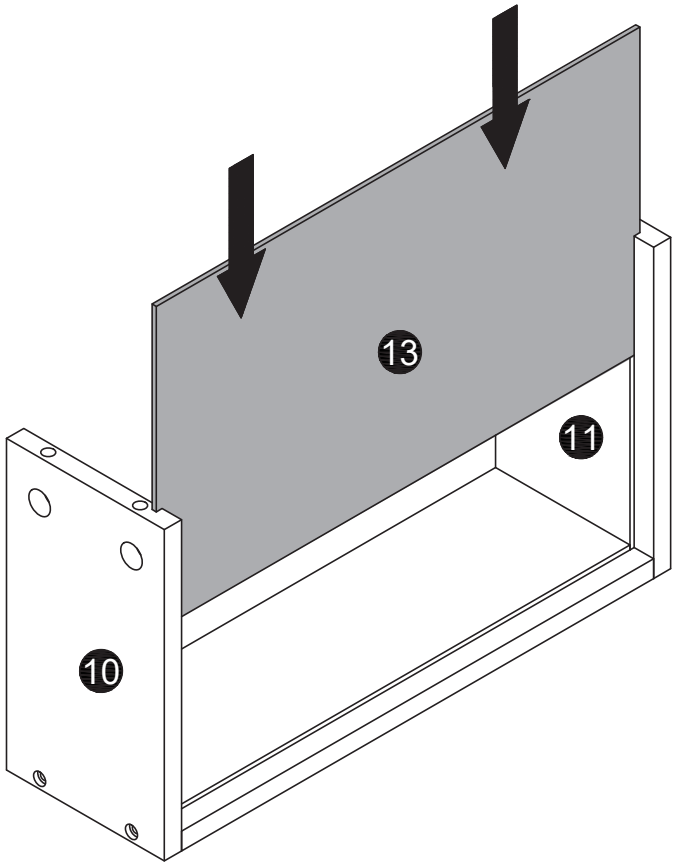


16



x2

17

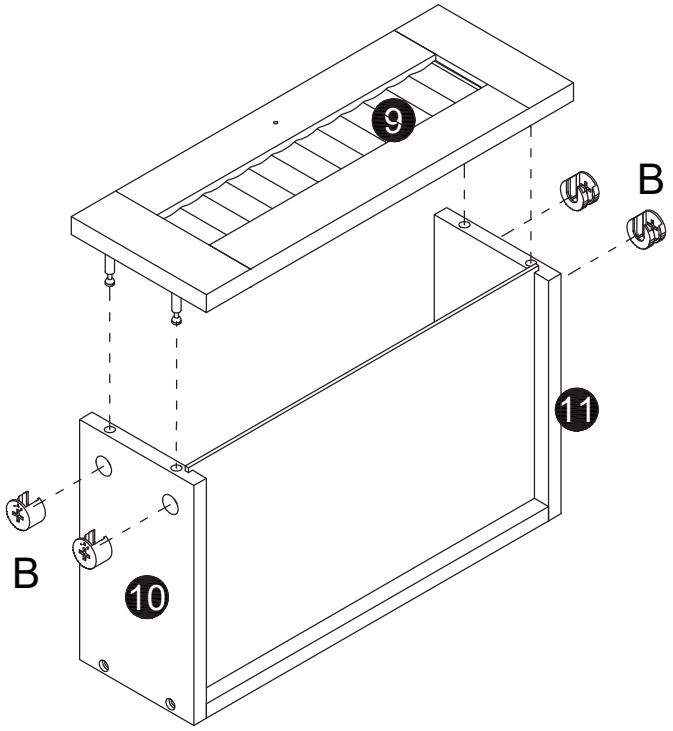


x2

B x8



18

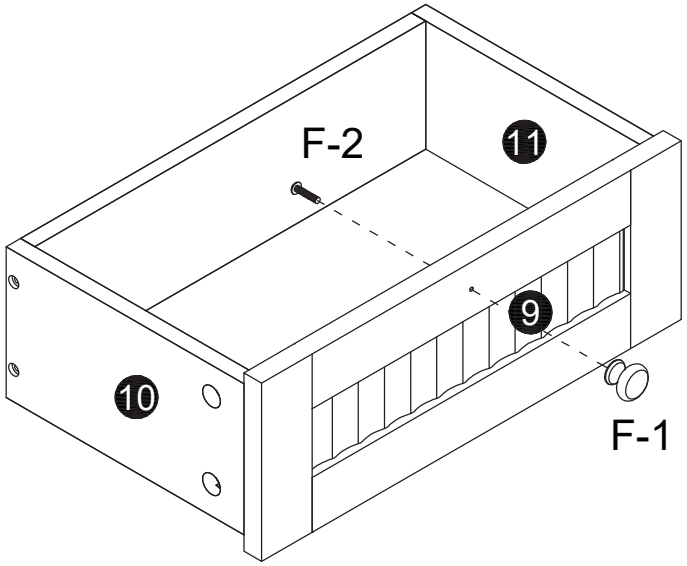


x2

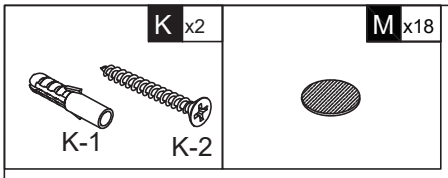
F x2

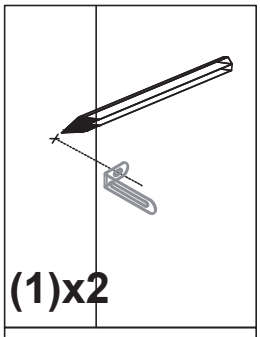


19

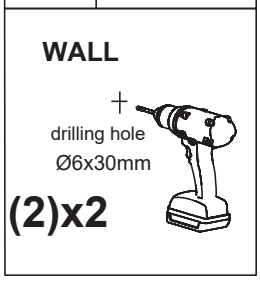


x2

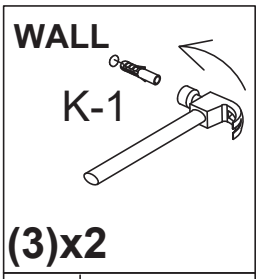




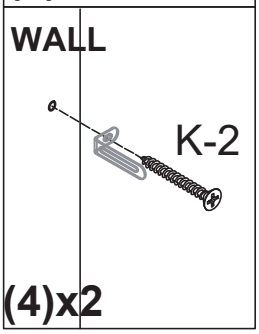
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.



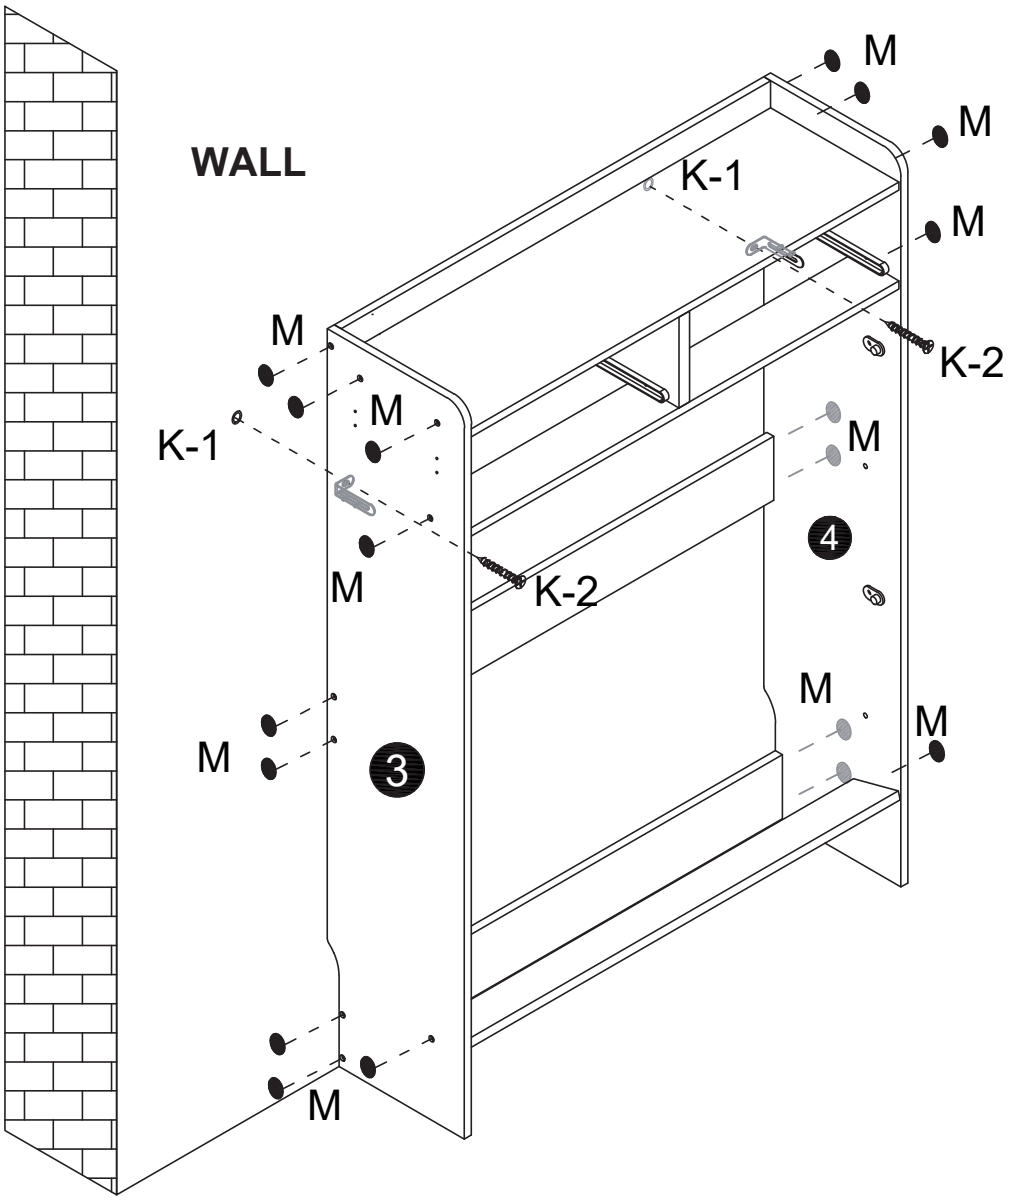
Then use a tape drill to make holes in the wall that are suitable for the product screws.

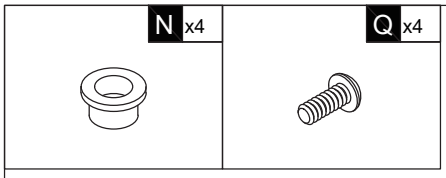


Then,put the expansion bolt into the hole



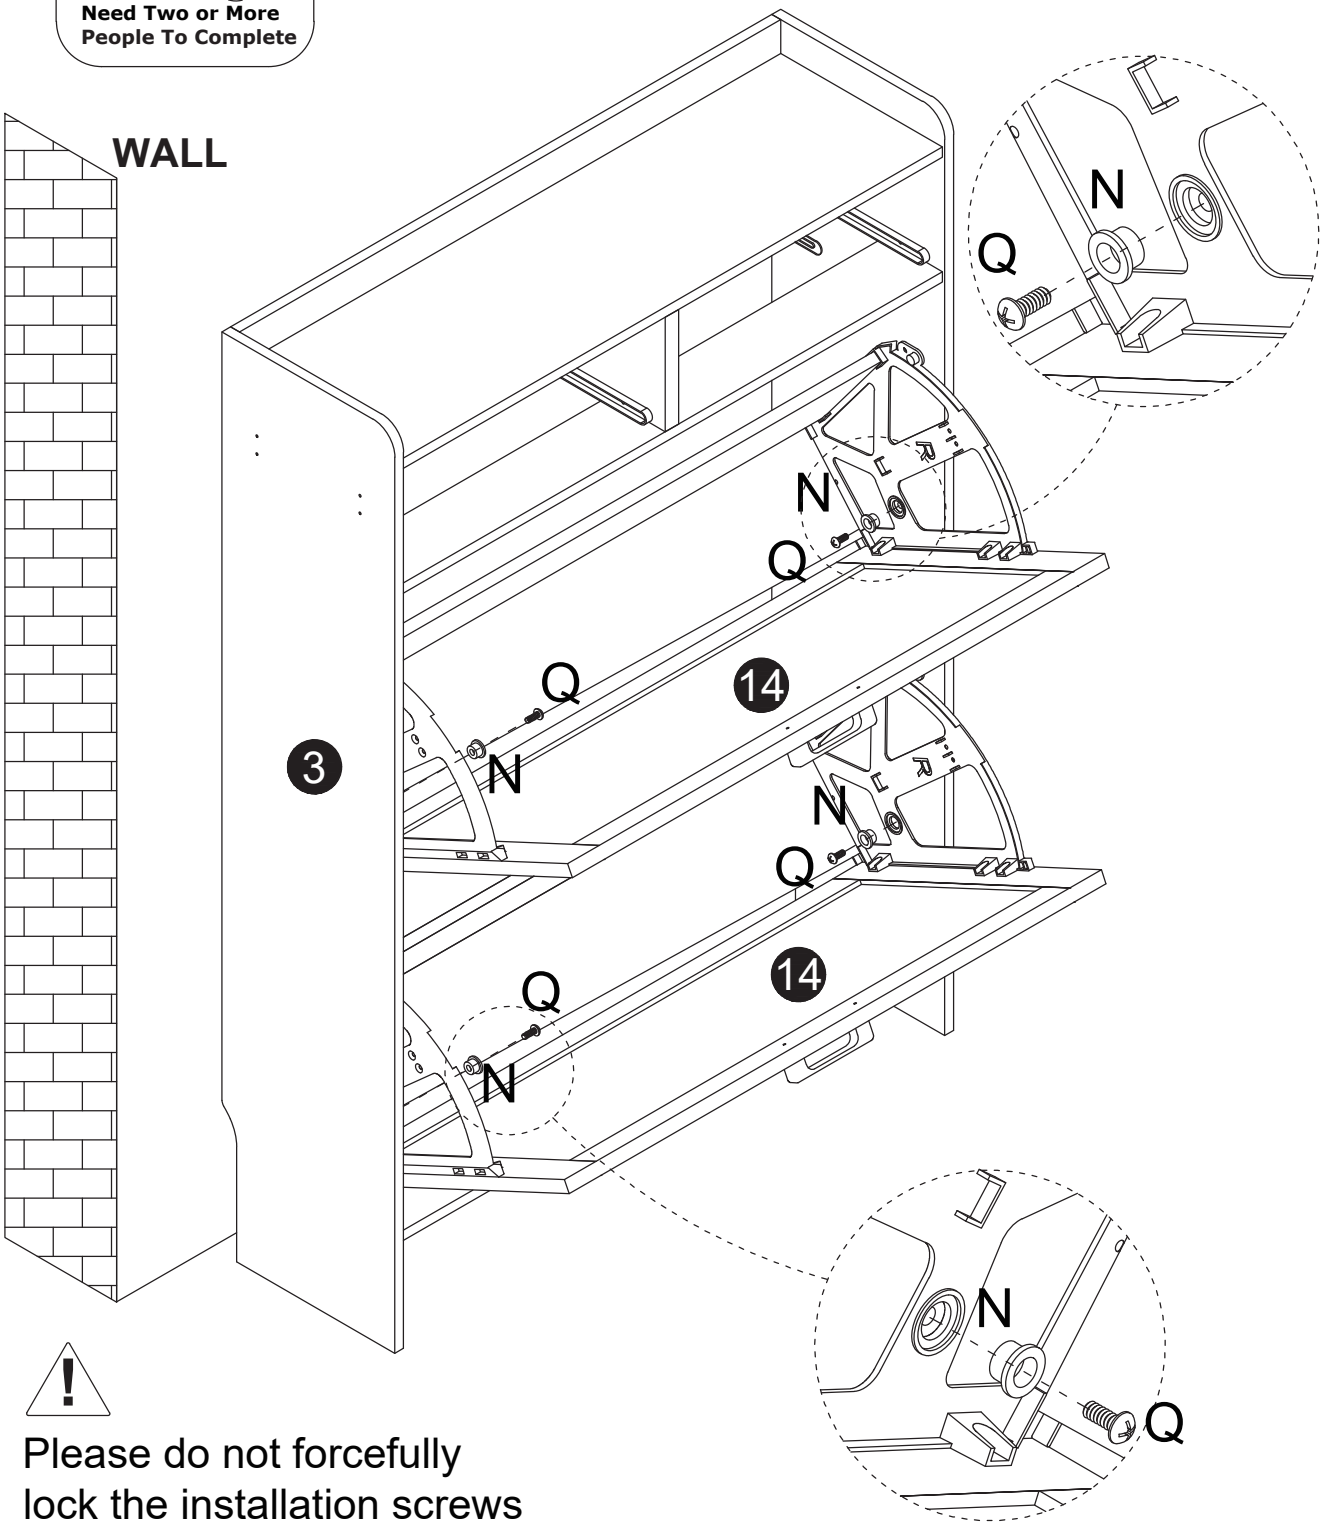
Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.





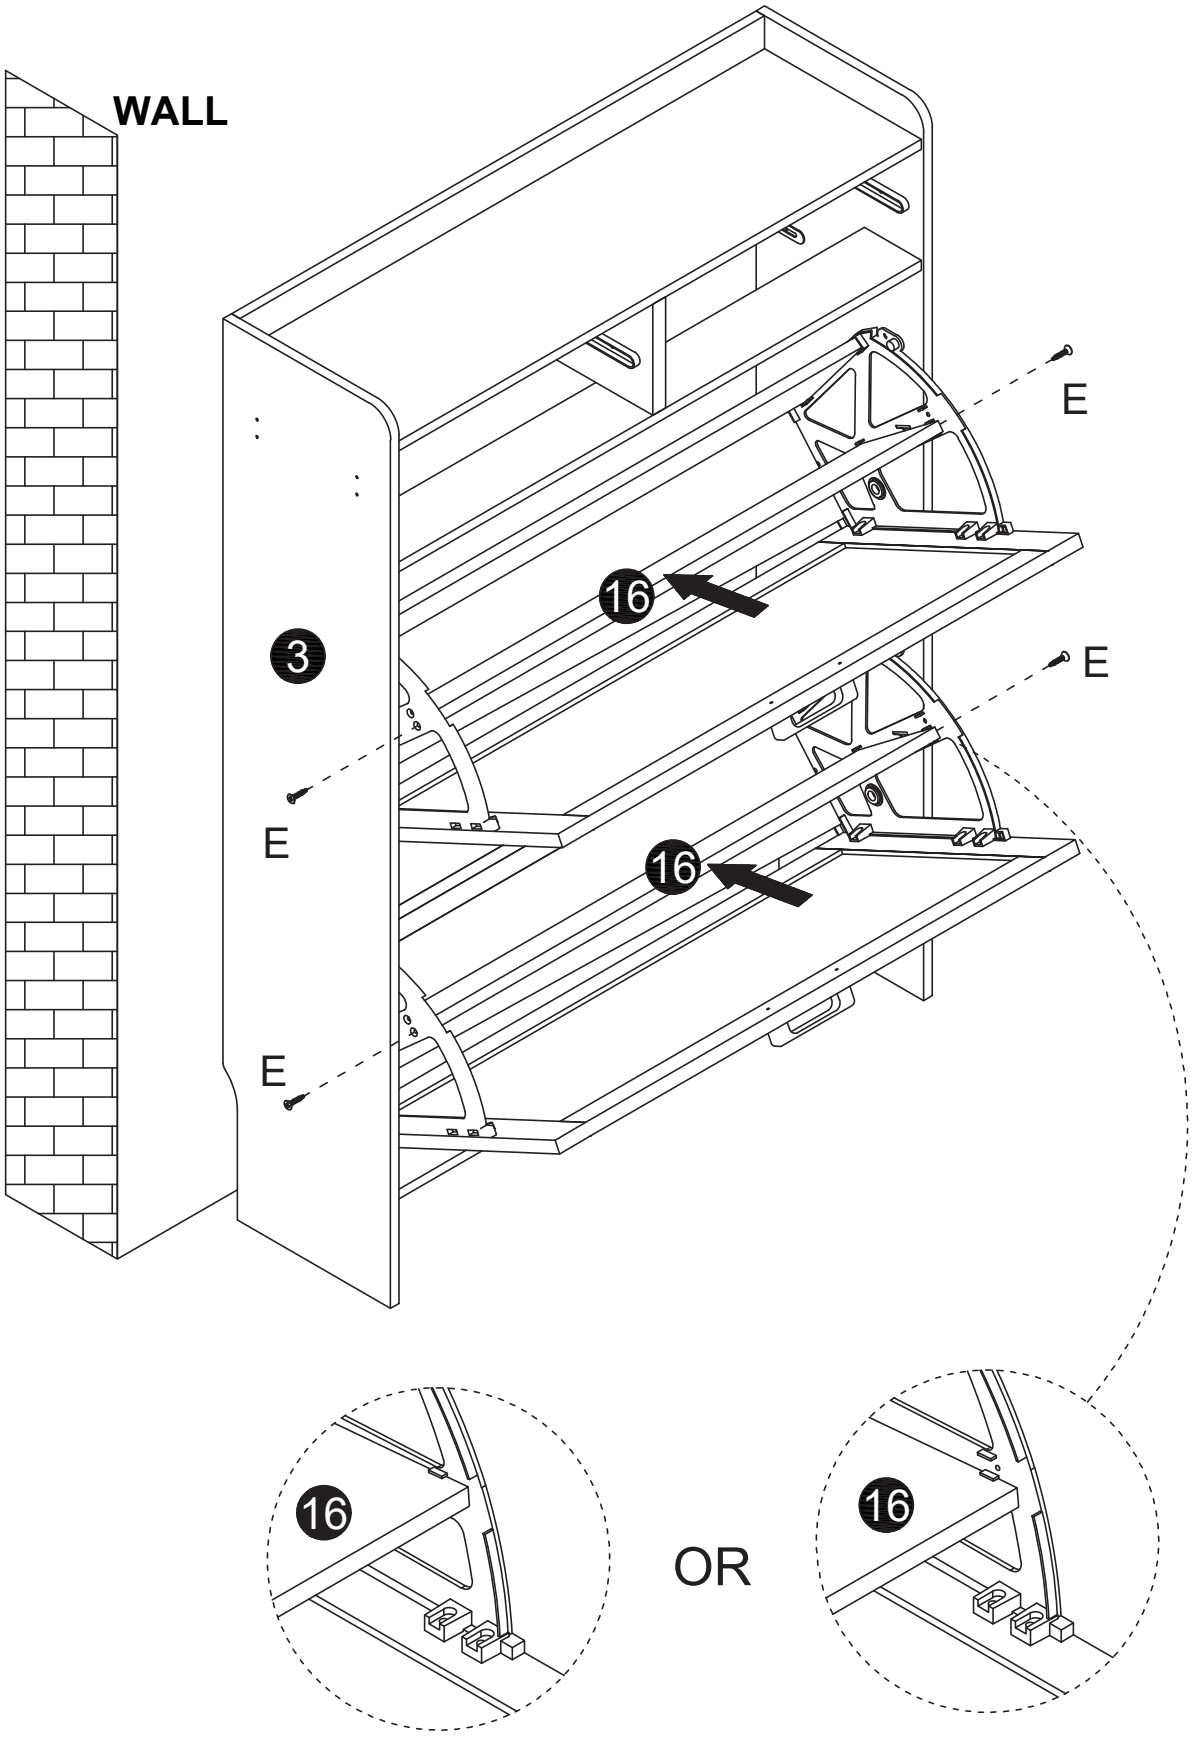


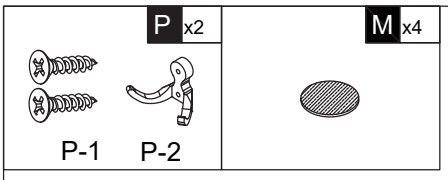
If the installation cannot be placed in the correct position, please try operating at other inclined angles.



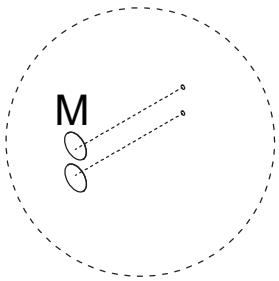
Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

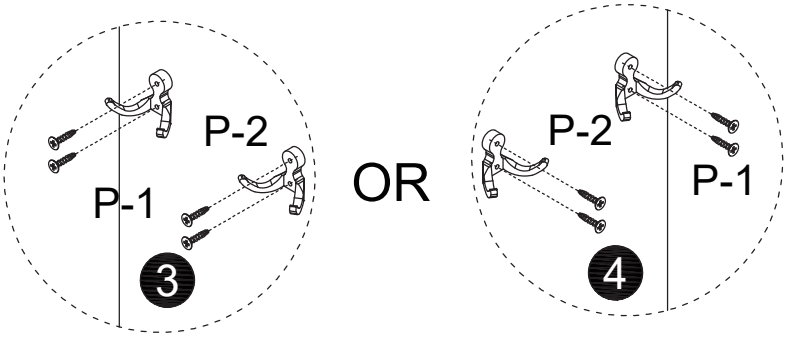
E x4

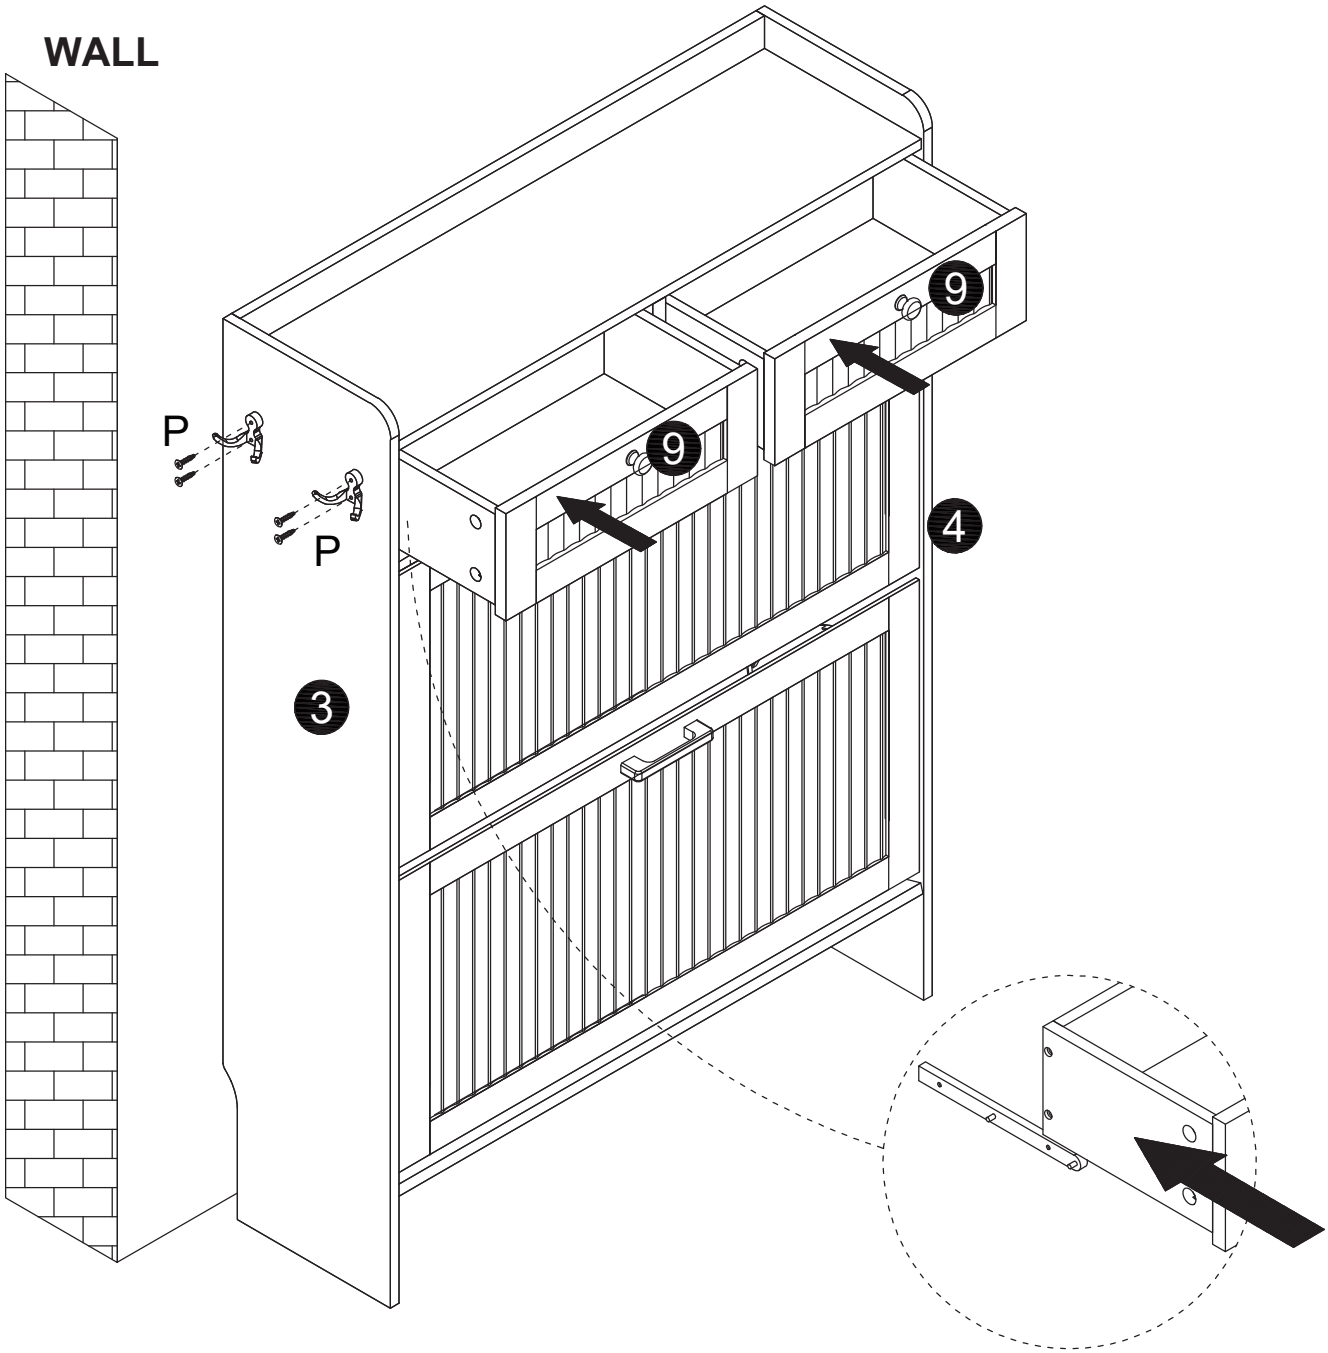




Component P can be freely installed on either panel 3 or panel 4.
The excess holes are allowed to be covered by component M.







Done

OR

