


Tribesigns

LITTLE TREE

Assembly Instructions

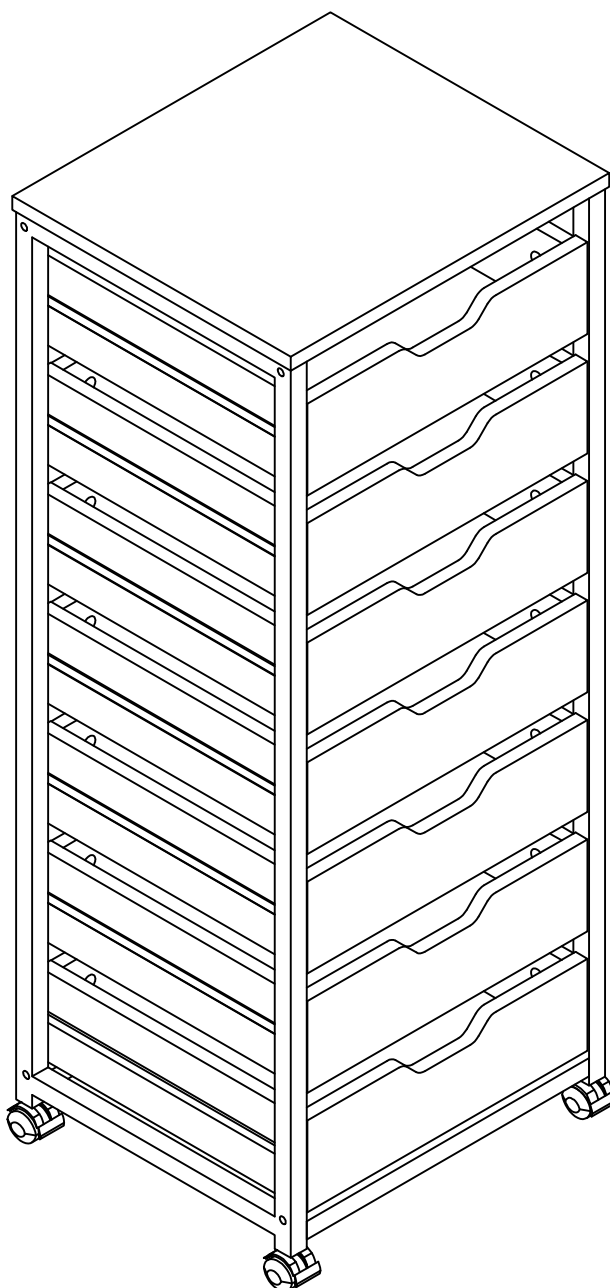

Model No. JW0557

Storage Dresser

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter






Pinterest





YouTube



Instagram

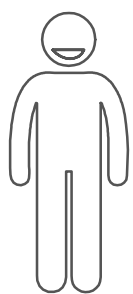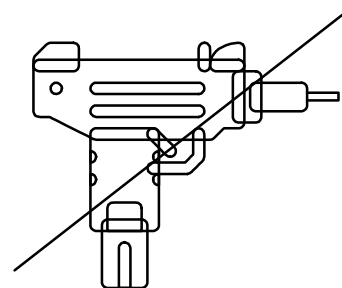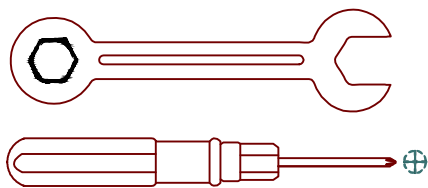
**X2**

When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

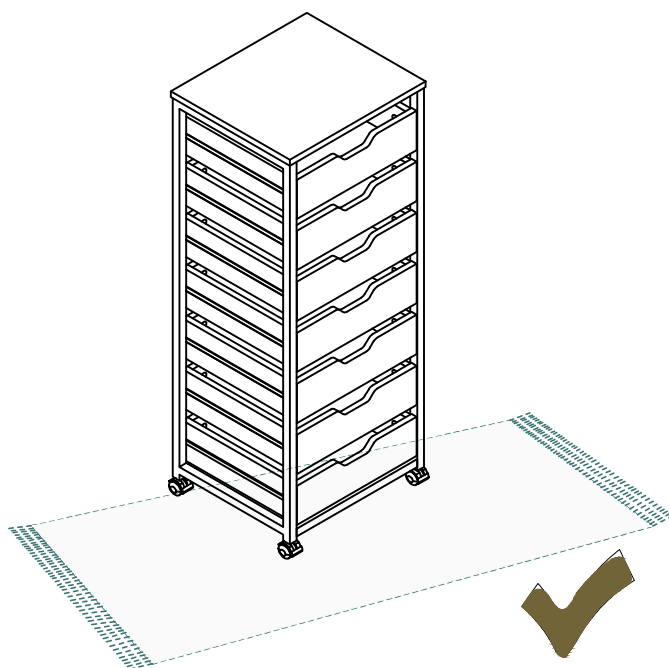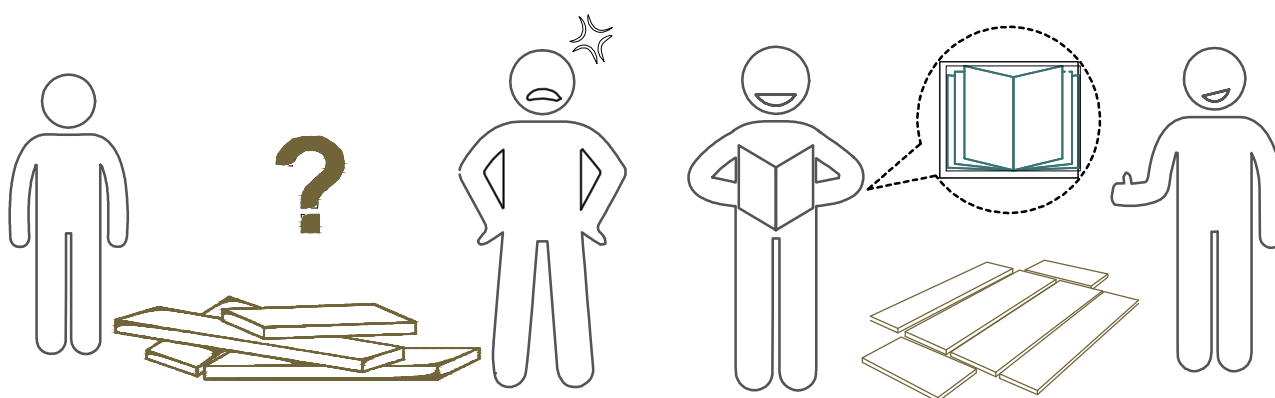

(Install tip-over restraint provided)

Use of tip-over restraints may only reduce but not eliminate,
the risk of tip-over.

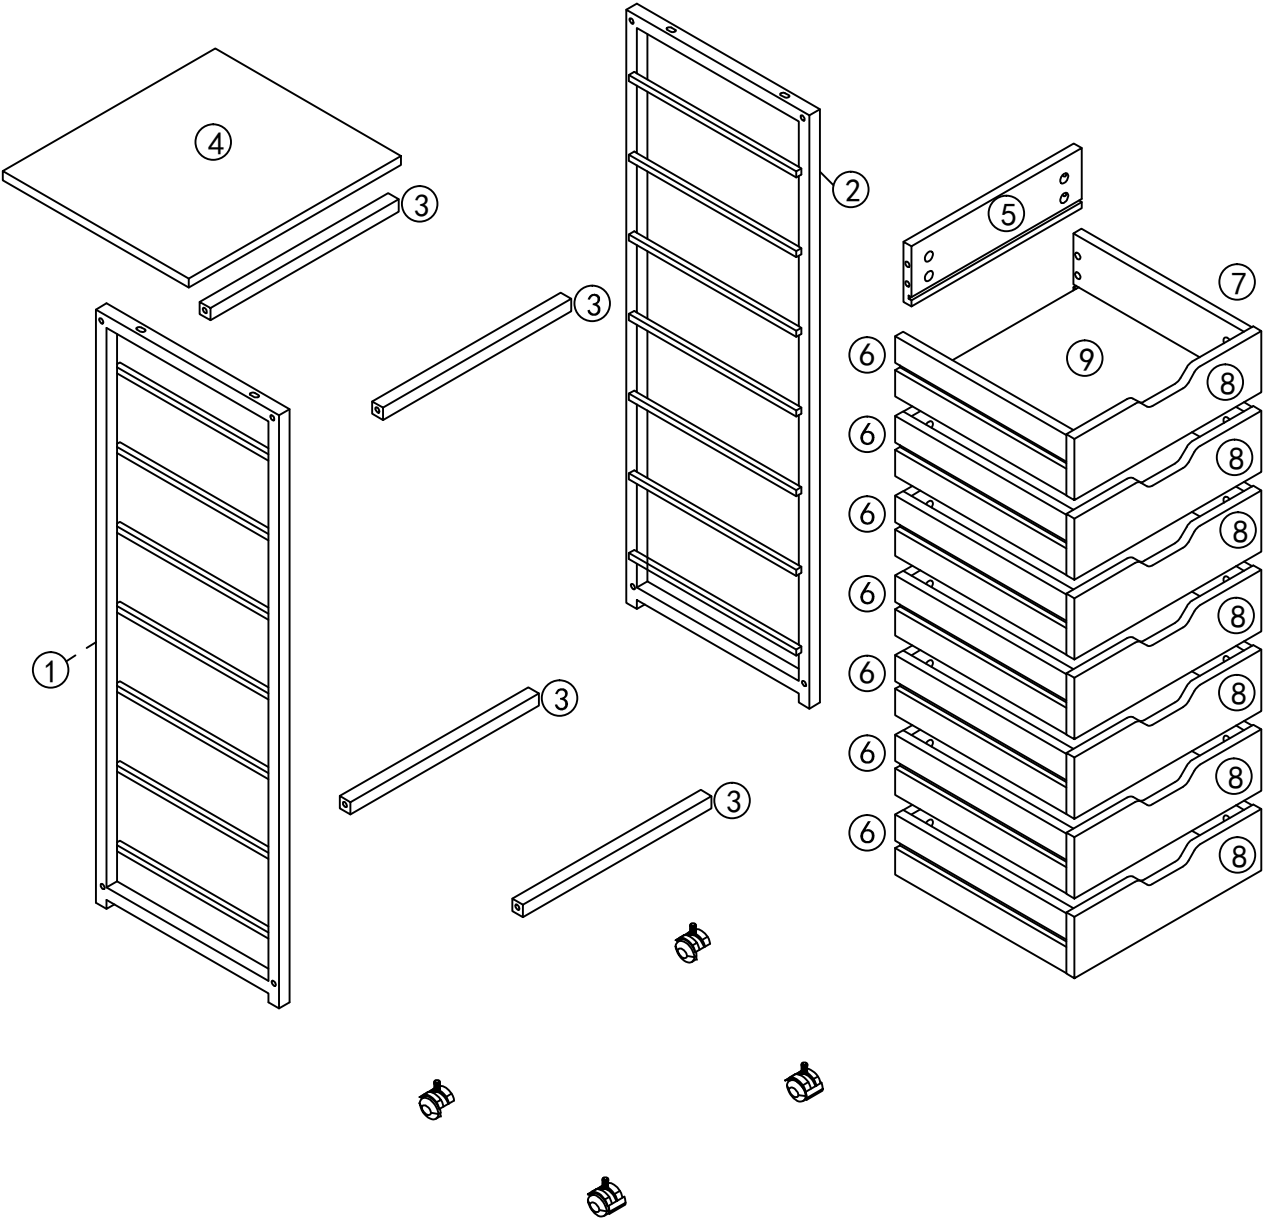


Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contach us for free replacement if having damaged or missing parts.


Parts & Hardware List




①1pc




②1pc

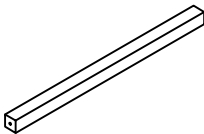


③4pc

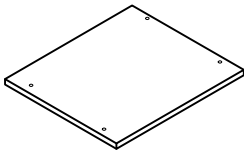


④1pc

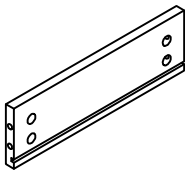


⑤7pc

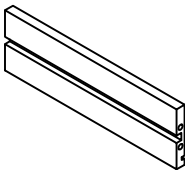


⑥7pc

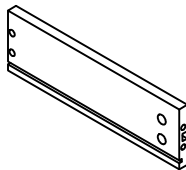

⑦7pc

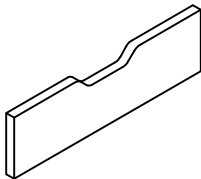

⑧7pc

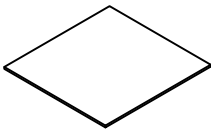

⑨7pc


Hardware List



w-1
56pcs



w-2
56pcs



w-3
8pcs

M6X35MM



w-4
4pcs

M6X30MM




w-5
4pcs


M8X60MM

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

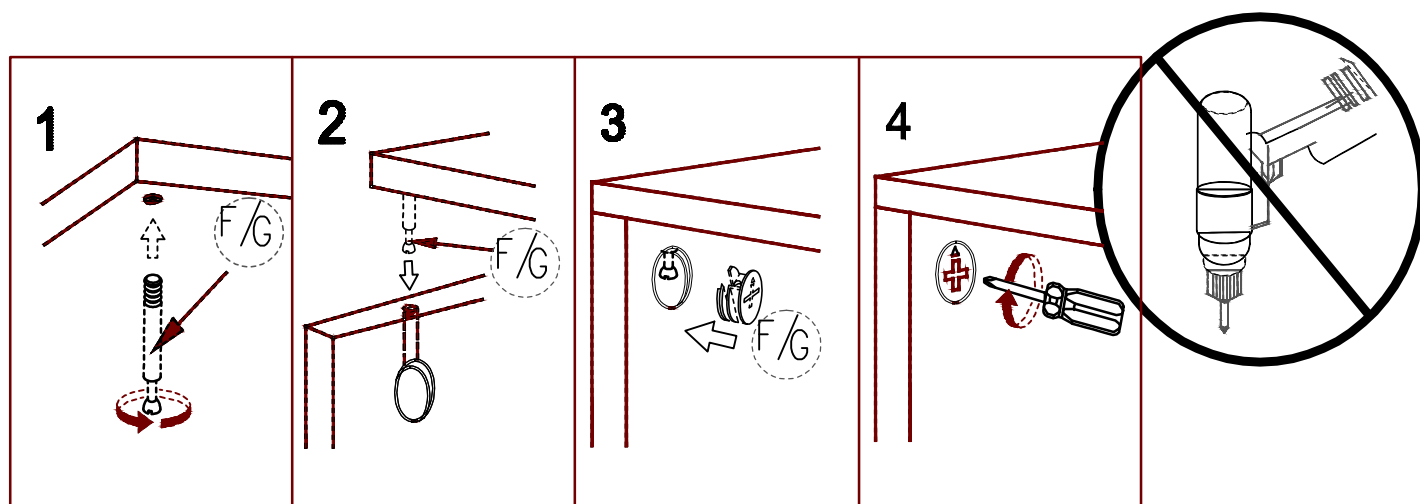

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

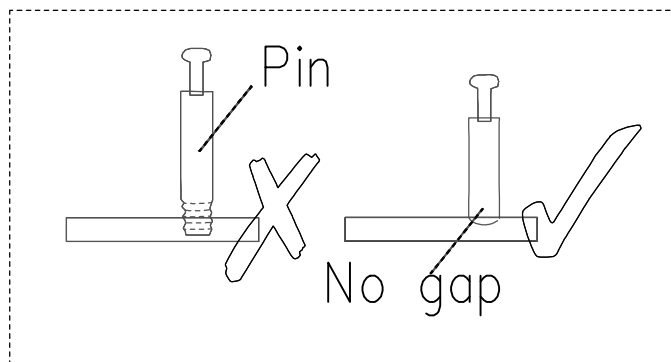

①

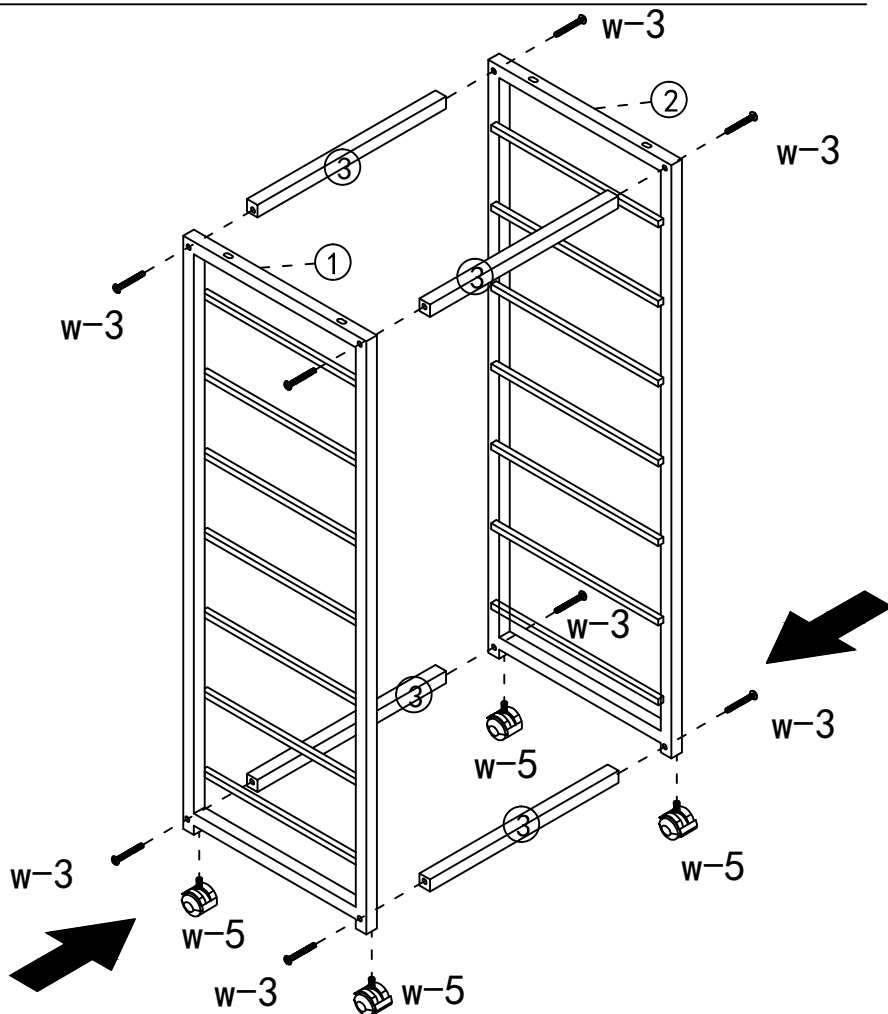

②





M6X35MM

w-3
8pcs



M8X60MM


w-5
4pcs

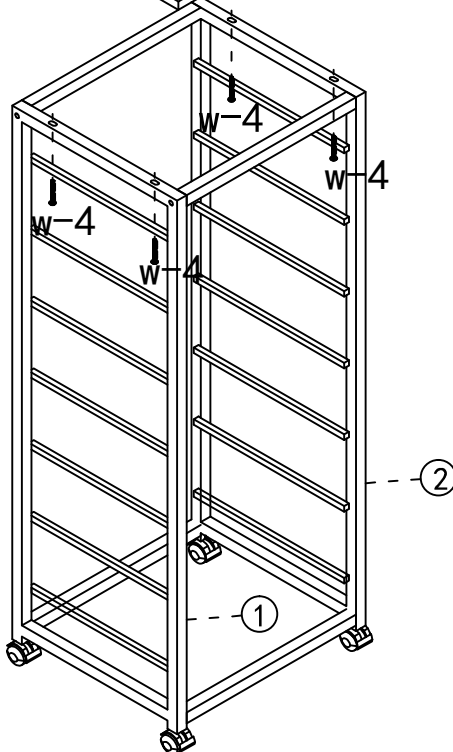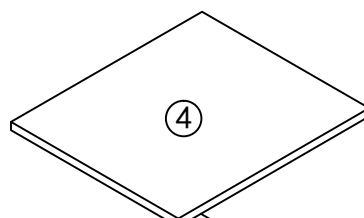




M6X30MM

w-4
4pcs


3

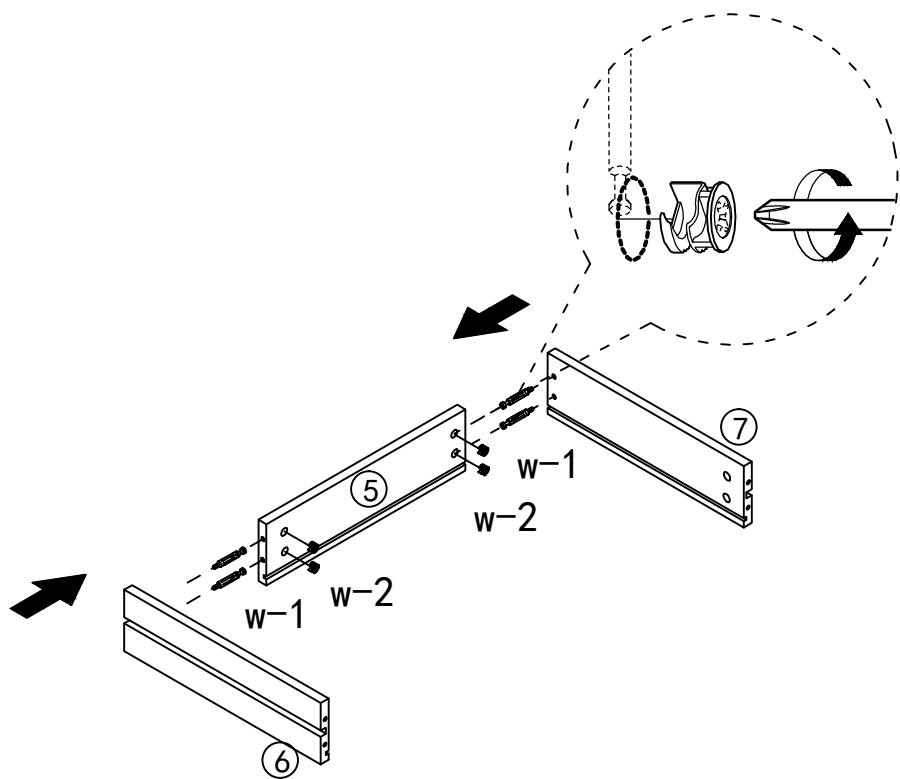


4

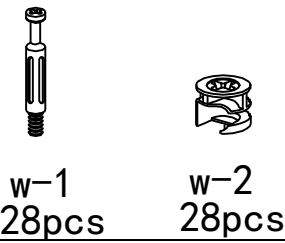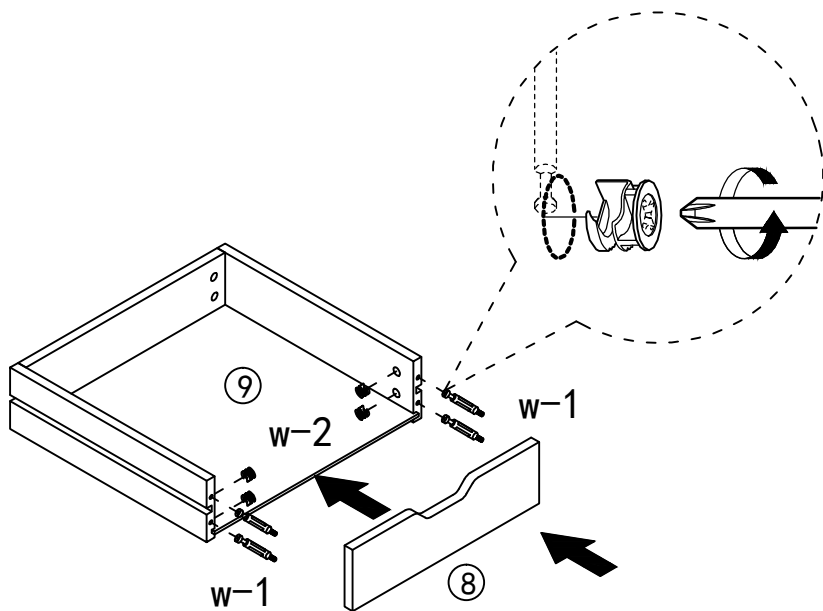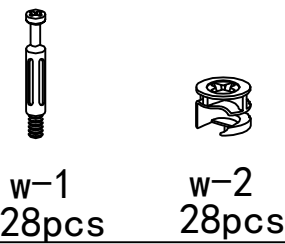

5

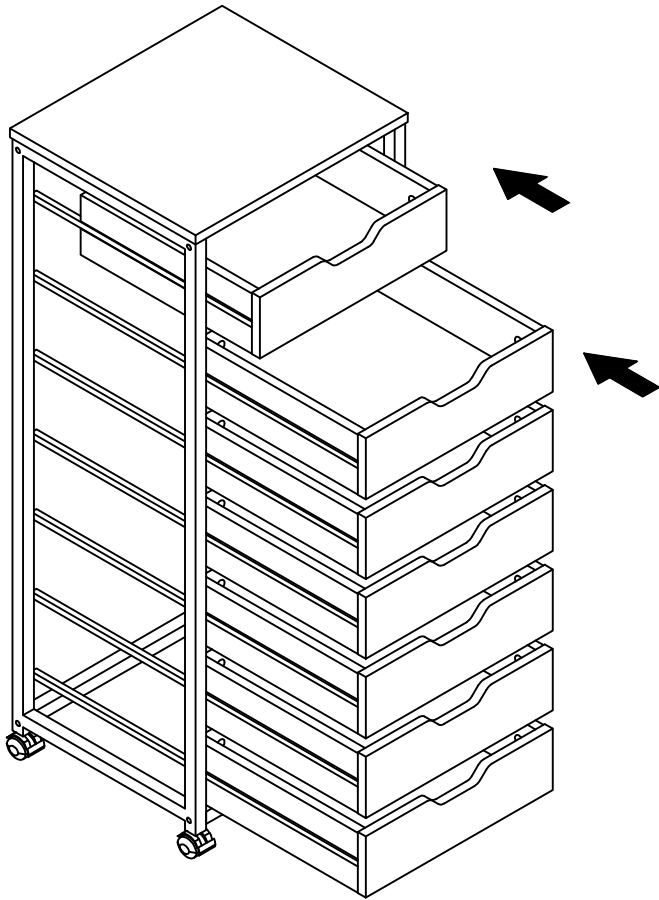

6

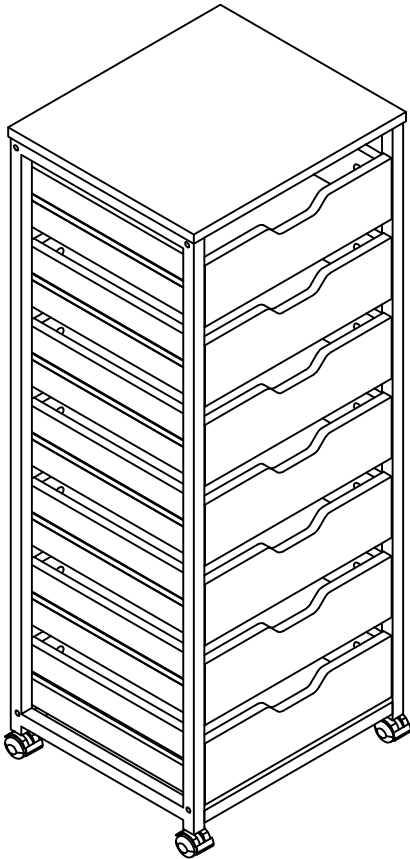



No heartburn,
when we handle
the return

Our way



support@tribesigns.com



Replacement/Refund



You

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888