



Assembly Instruction

During the installation process, it is recommended to lay a carpet or other protective materials on the floor to prevent parts like the headboard from coming into direct contact with the ground and getting dirty.

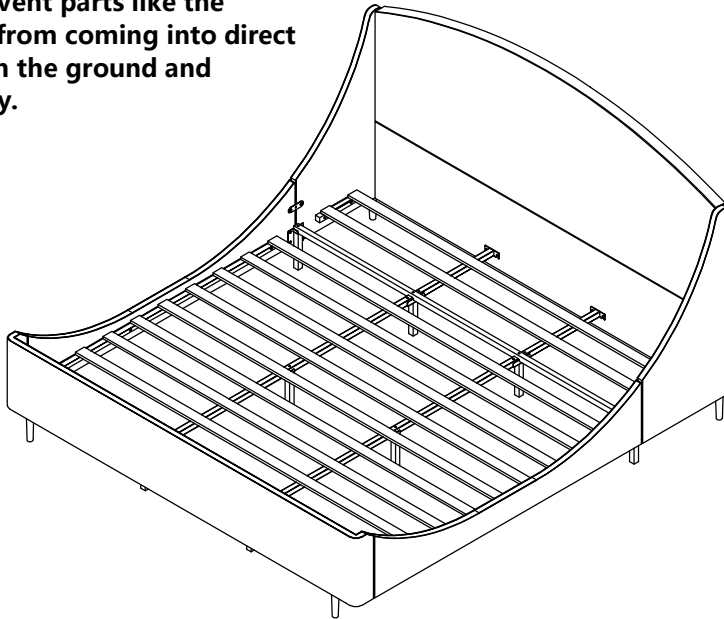

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

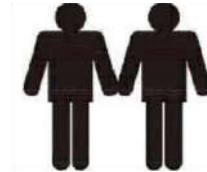

You must need two people to install.





Before starting the assembly, you must read the whole manual and follow the instructions.











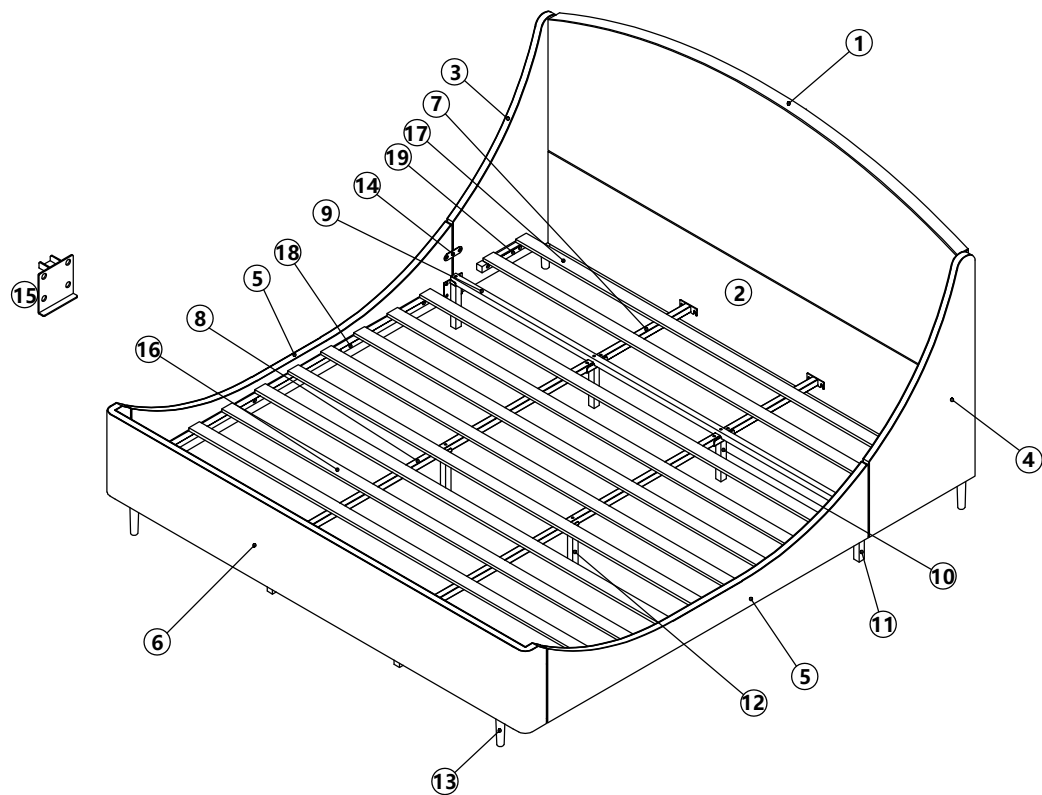


Assembly Instruction


Hardware Parts

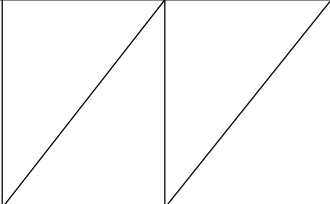							
A M8x15 12+1pcs	B M8x25 28+2pcs	C M8x35 14+1pcs	D M8x40 20+2pcs	E M8x60 4pcs	F 5# 1pc	G M8*15 8pcs	

Part list

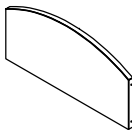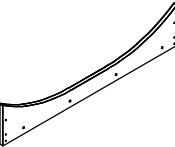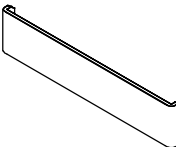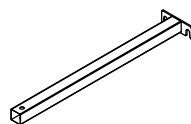
						
① 1 pc	② 1 pc	③ 1 pc	④ 1 pc	⑤ 2 pcs	⑥ 1 pc	⑦ 2 pcs
						
⑧ 2 pcs	⑨ 2 pcs	⑩ 4 pcs	⑪ 2 pcs	⑫ 2 pcs	⑬ 4 pcs	⑭ 8 pcs
						
⑮ 2 pcs	⑯ 1 pc	⑰ 1 pc	⑱ 2 pcs	⑲ 2 pcs		

D	 M8x40	2pcs
F	 5#	1pc

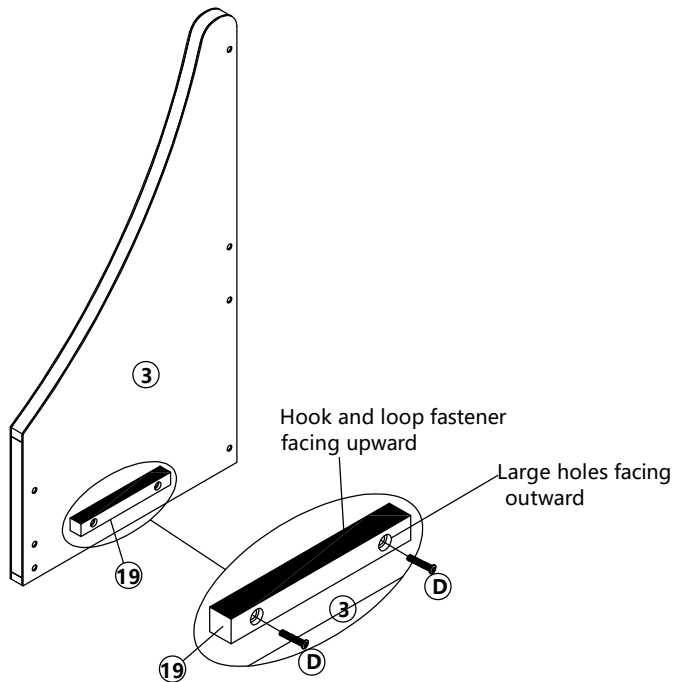

Attach Part (19) to Part (3) with Bolt (D) using Hex Key (F).


D	 M8x40	2pcs
F	 5#	1pc

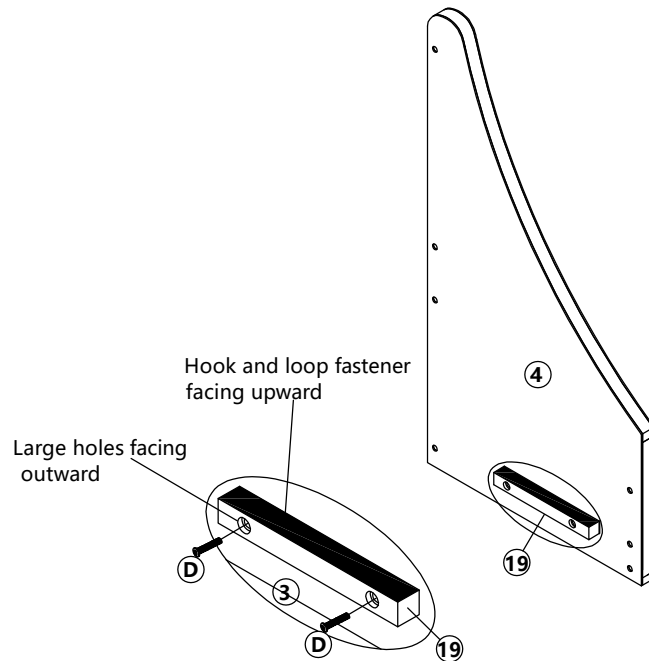

Attach Part (19) to Part (4) with Bolt (D) using Hex Key (F).


A	 M8x15	8pcs
F	 5#	1pc

Attach Part (14) to Part (1,2) with Bolt (A) using Hex Key (F).

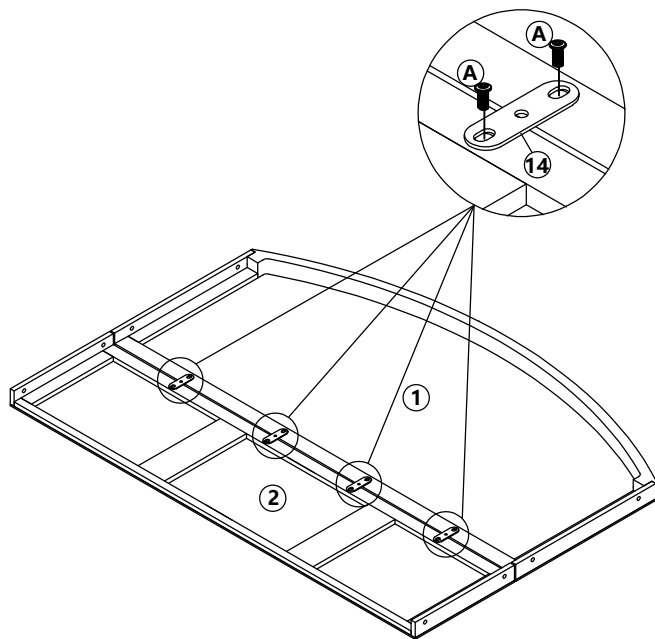


Align the holes by hand as indicated by the arrows, ensure the outside is flush and then lock the screws to 80%.


D	 M8x40	8pcs
G	 M8x15	8pcs
F	 5#	

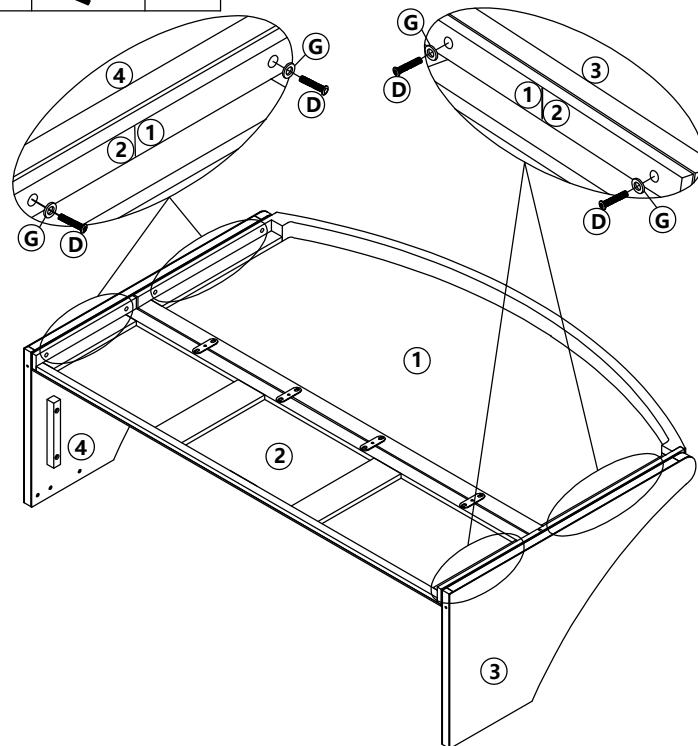

The wing guards should be level and aligned, Attach Part (3,4) to Part (1,2) with Bolt (D) using Hex Key (F).

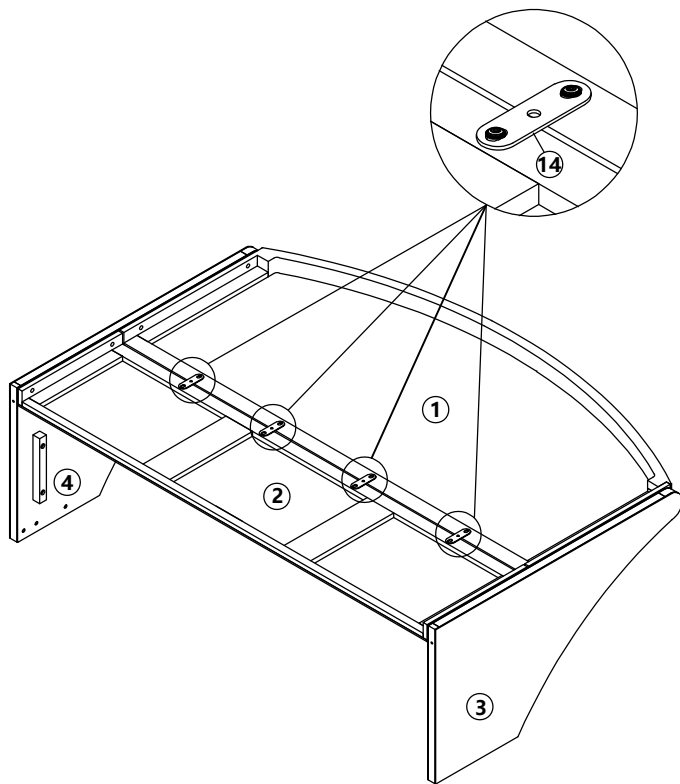


Hold it by hand to align the holes and then lock the screws 80%, finally all screws are locked 100%.

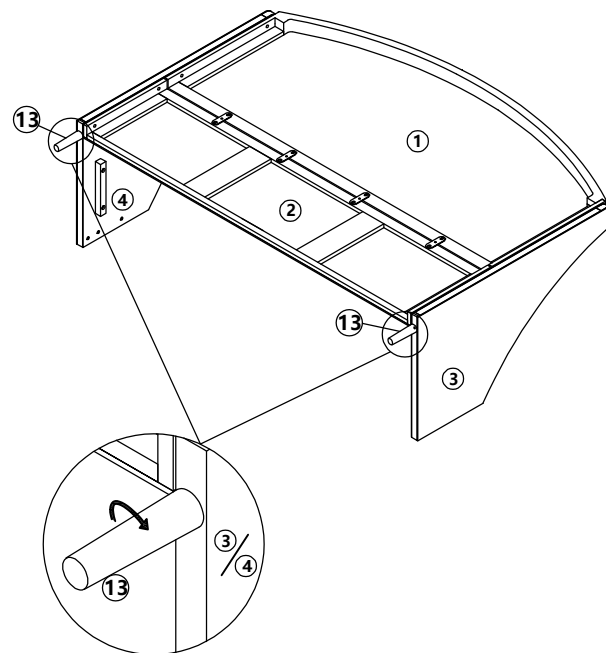


Attach Part (13) to Part (3,4).

D	 M8x40	8pcs
F	 5#	1pc

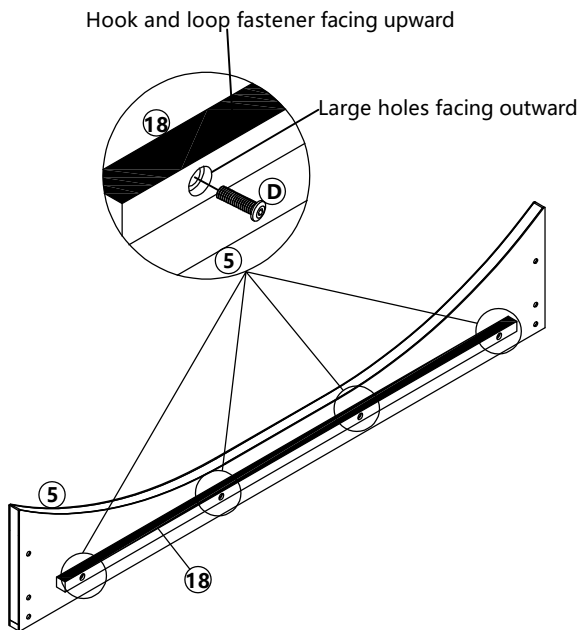

X2

Attach Part (18) to Part (5) with Bolt (D) using Hex Key (F).

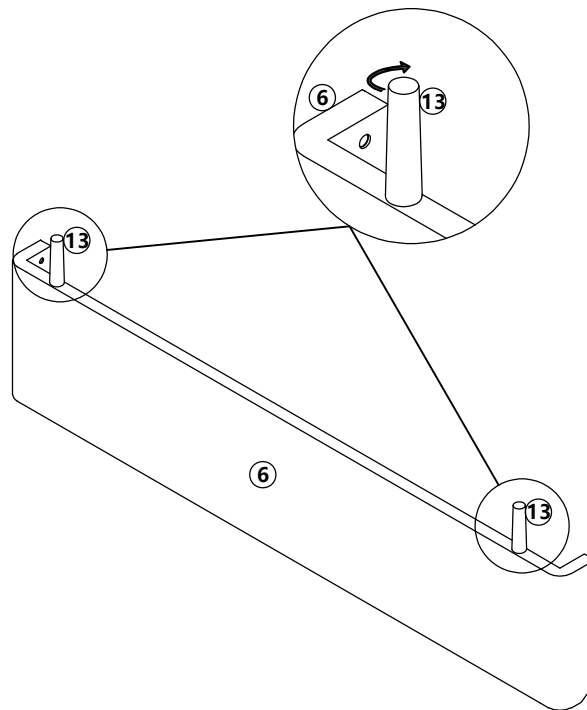


Attach Part (13) to Part (6).

B	 M8x25	24pcs
F	 5#	1pc


Attach Part (11,14) to Part (4,5)
with Bolt (B) suing Hex Key (F).

Attach Part (11,14) to Part (3,5)
with Bolt (B) suing Hex Key (F).

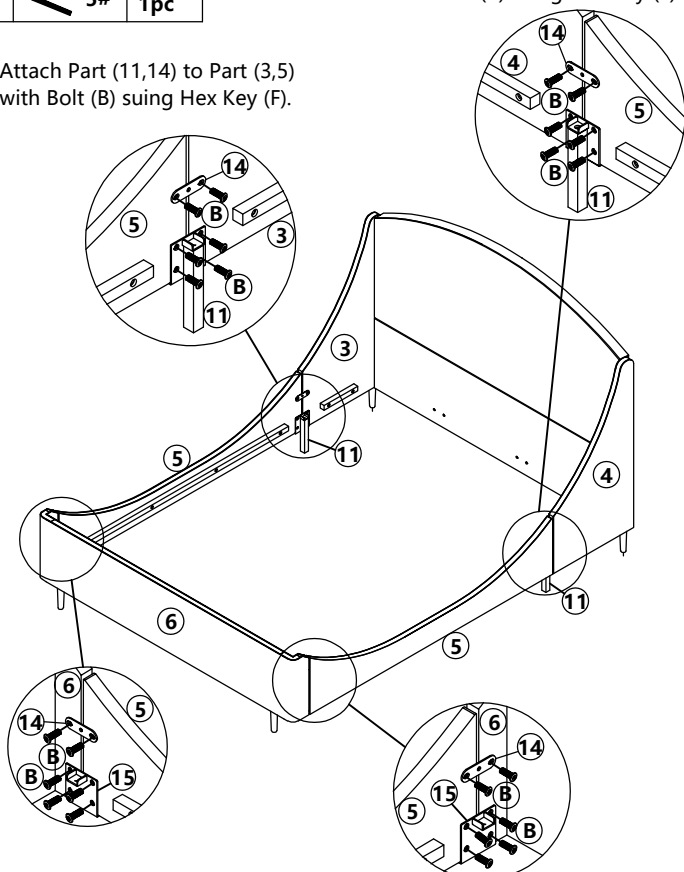


Attach Part (14,15) to Part (5,6) with Bolt (B) suing Hex Key (F).

C	 M8x35	2pcs
F	 5#	1pc

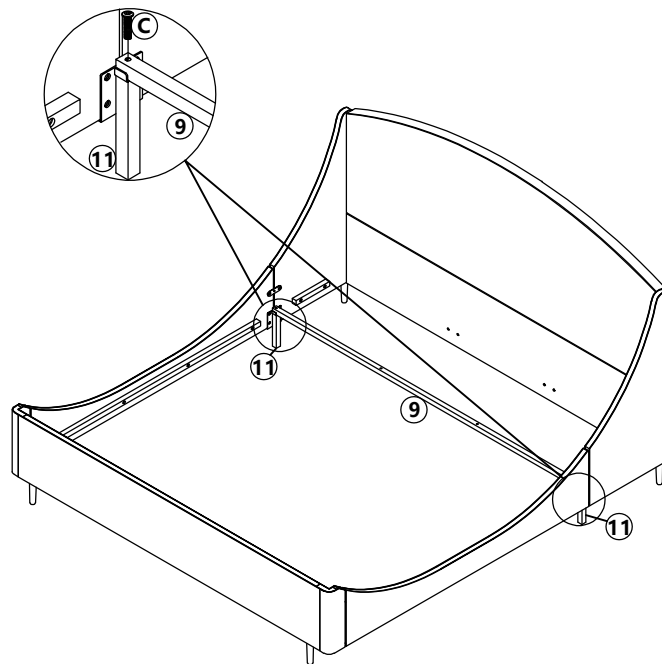

Attach Part (9) to Part (11) with Bolt (C) suing Hex Key (f).


E	 M8x60	2pc
F	 5#	1pc

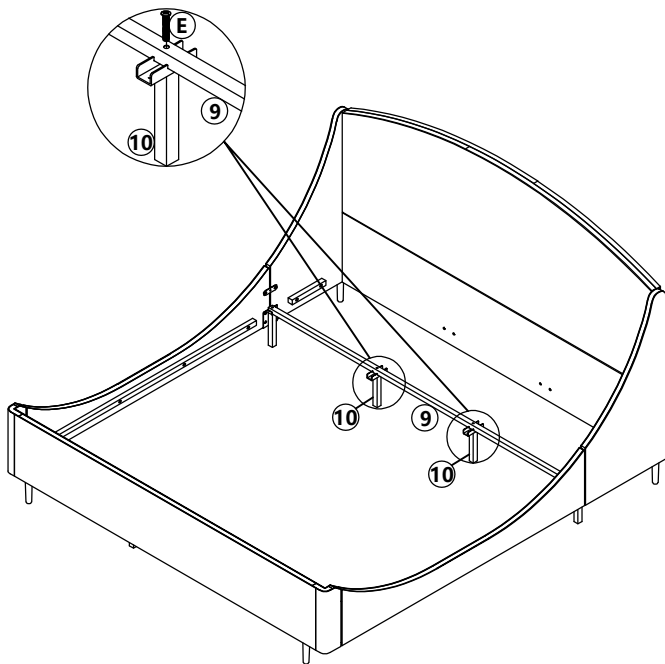

Attach Part (10) to Part (9) with Bolt (E) using Hex Key (F).

C	 M8x35	6pcs
F	 5#	1pc

Attach Part (12) to Part (8) with Bolt (C) using Hex Key (F).

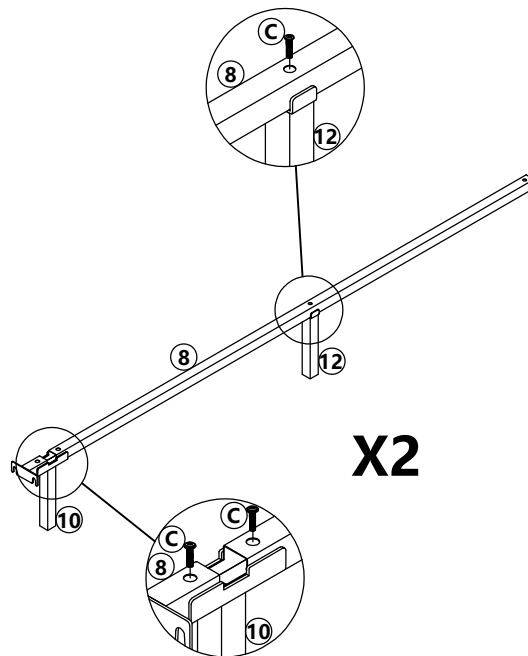


Attach Part (10) to Part (8) with Bolt (C) using Hex Key (F).

A	 M8x15	4pcs
B	 M8x25	4pcs
C	 M8x35	4pcs
F	 5#	1pc

Attach Part (7) to Part (2)
with Bolt (A) suing Hex Key (F).

Attach Part (7,8) to Part (10)
with Bolt (C) suing Hex Key (F).

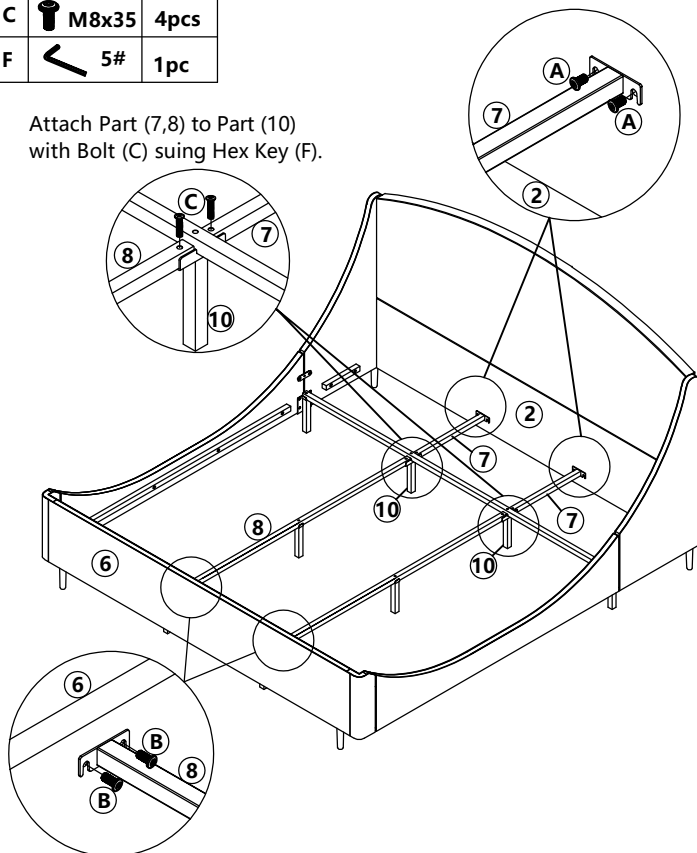


Attach Part (8) to Part (6) with Bolt (B) suing Hex Key (F).


C	 M8x35	2pcs
E	 M8x60	2pcs
F	 5#	1pc

Attach Part (9) to Part (10)
with Bolt (E) suing Hex Key (F).

Attach Part (9) to Part (15)
with Bolt (C) suing Hex Key (F).

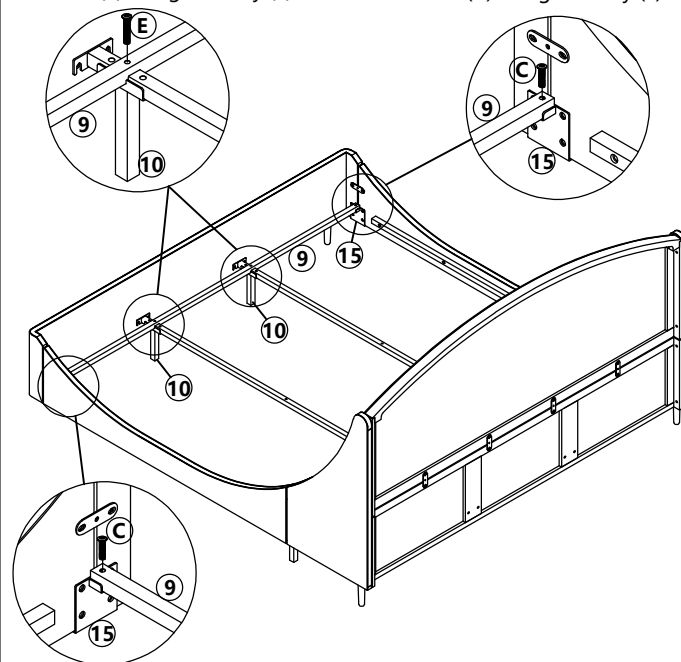

Attach Part (9) to Part (15) with Bolt (C) suing Hex Key (F).

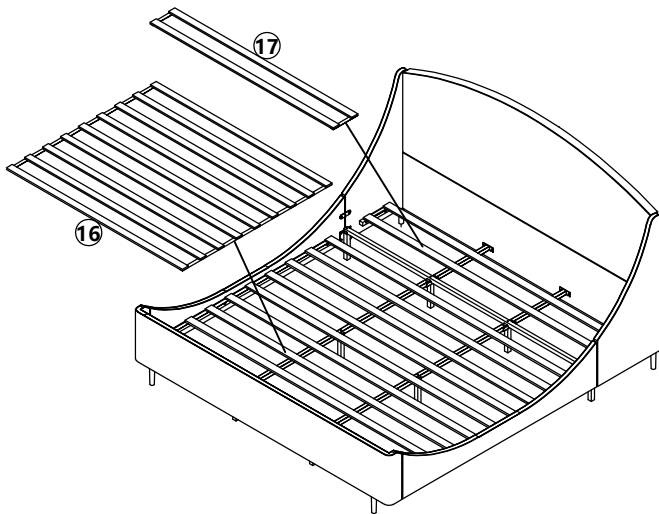

Attach Part (16,17) to the bed frame as per diagram.

If you encounter any problems during assembly or if the product has any issues, please contact customer service promptly, and we will provide a solution as soon as possible.