

## FULL SIZE BED WITH PU

---

### ASSEMBLY INSTRUCTIONS



## ASSEMBLY TIPS:

- 1.Remove Hardware from Box and sort by size.
- 2.Please check to see that all Hardware and Part are present prior to start of assembly.
- 3.Please follow attached instuctions in the same sequence as numbered to assure fast & easy assembly.






### Warning!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.





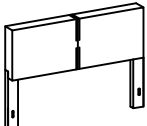
## PARTS IDENTIFICATION

### B1 (BOX 1)

A		HEADBOARD PANEL	1PC
B		LEFT HEADBOARD LEG	1PC
C		RIGHT HEADBOARD LEG	1PC




### B2 (BOX 2)

D		BED SLAT	4PCS
E		BED SLAT SUPPORT WITH LEVELER	4PCS





F		BED RAIL	2PCS
G		LEFT FOOTBOARD LEG	1PC
H		RIGHT FOOTBOARD LEG	1PC
I		FOOTBOARD PANEL	1PC
HB		300261F (B1) *FROM BOX 1 HEADBOARD COMPLETE	1PC

## HARDWARE IDENTIFICATION

### Z - B1 (BOX 1)

1		BOLT	6PCS
2		LOCK WASHER	6PCS
3		ALLEN WRENCH	1PC


### Z - B2 (BOX 2)

4		SCREW	8PCS
5		BOLT	6PCS
6		SMALL ALLEN WRENCH	1PC
7		BIG ALLEN WRENCH	1PC

## BOX 1

### STEP 1


Place headboard panel upside down on soft surface, place the headboard leg on the correct position.

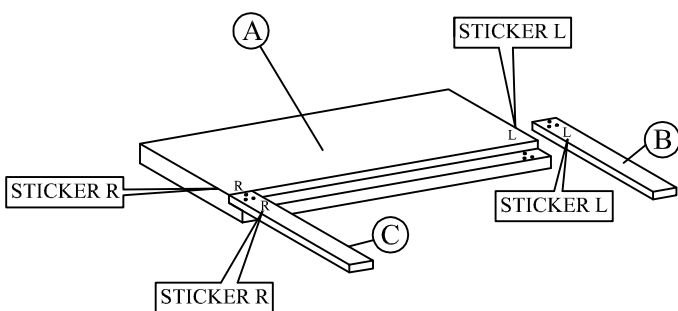

\*\*BACK VIEW

### STEP 2

Align and fasten headboard legs to headboard using bolt, and lock washer, then tighten with Allen wrench.

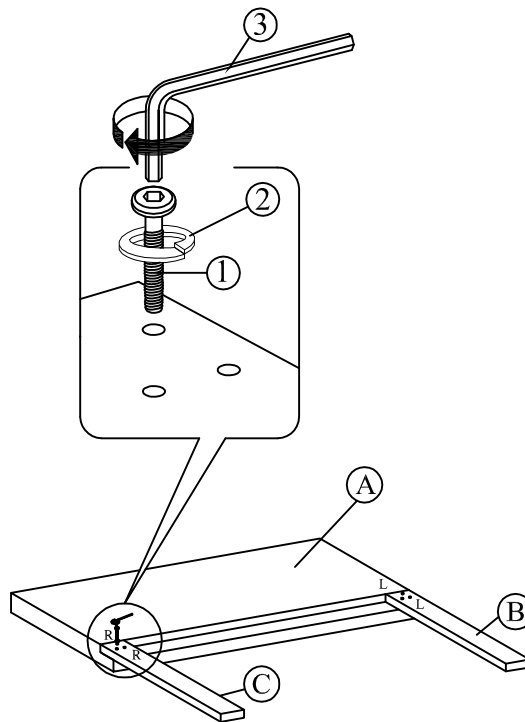


\*\*BACK VIEW

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

## BOX 1 & BOX 2


### STEP 3

Align and fasten left & right footboard leg to footboard panel using bolt and tighten with small Allen wrench.

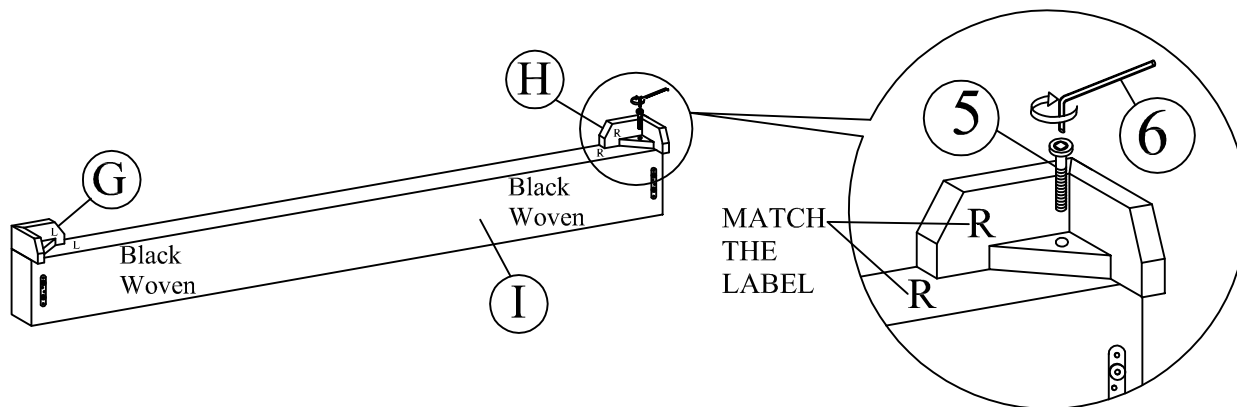


## STEP 4

Unscrew the bolt from headboard and footboard. Align and fasten bed rails to headboard and footboard using bolts and tighten with big Allen wrench.

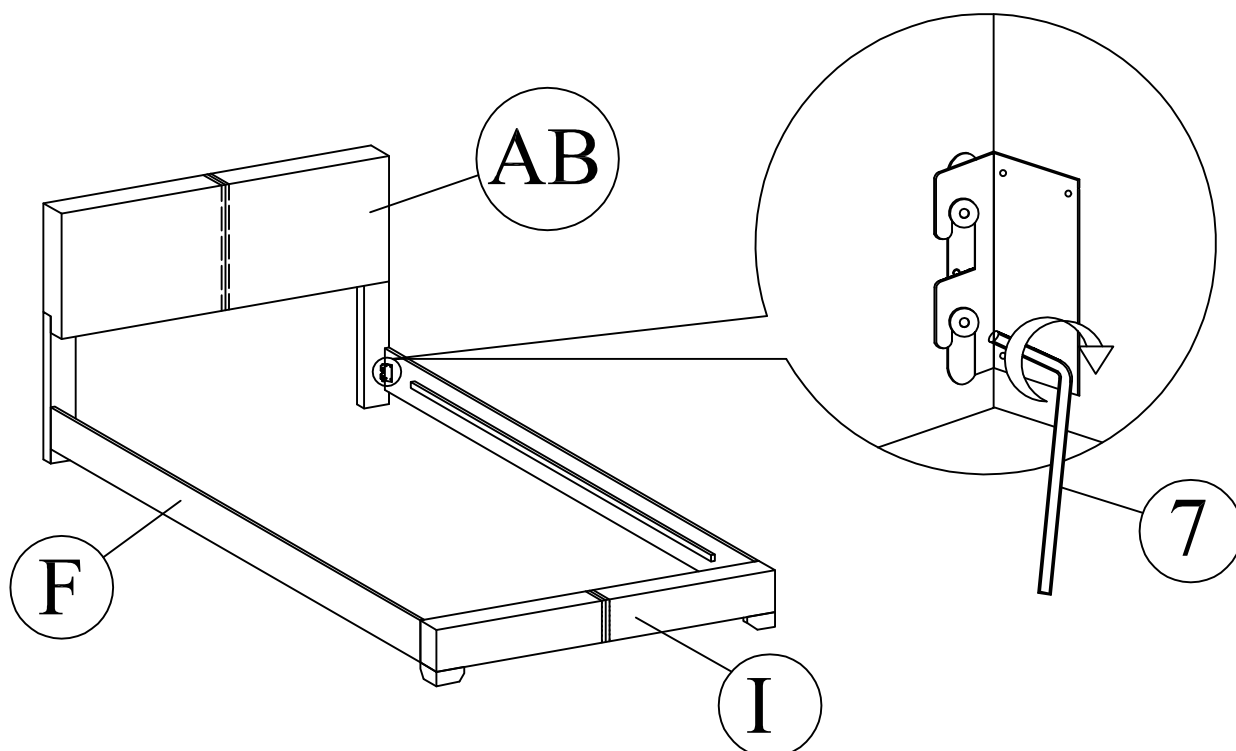

## STEP 5

Align and fasten bed slat support to bed slat using bolt and tighten with small Allen wrench.

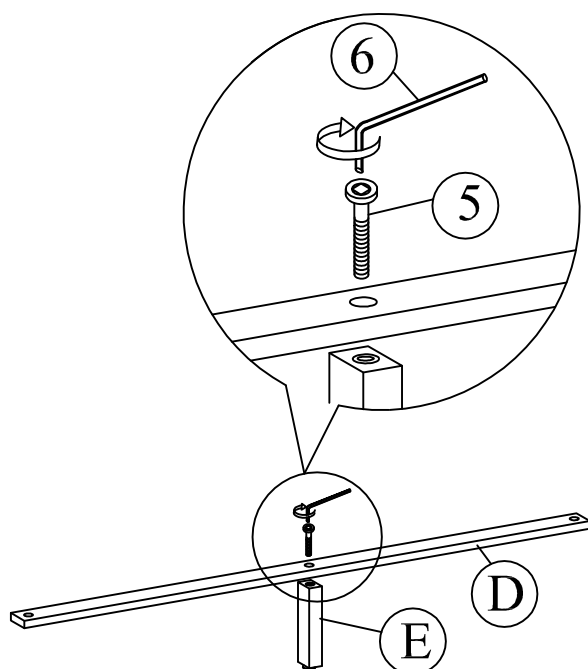

## STEP 6

Align and fasten bed slats to bed rails using screw and tighten with screw driver (Not included).

