


ALICE NIGHTSTAND



ALICE NIGHSTAND







Helping You Find Your Parts!

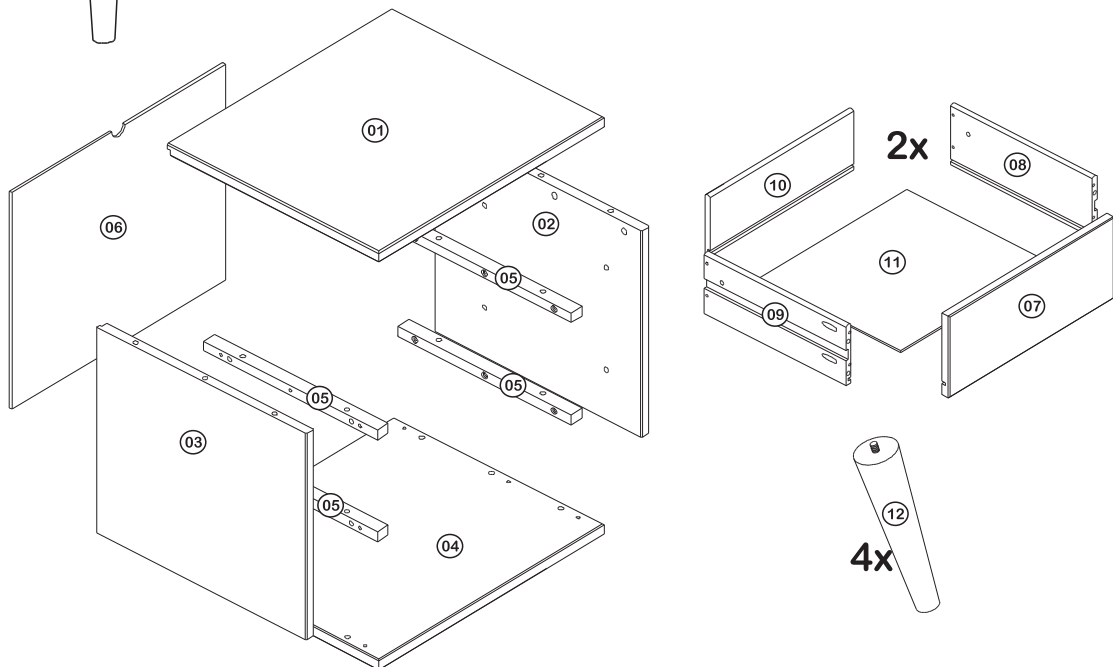


Part Number	Description	Dimensions (in)	Qty.
1	Top panel	17,7 x 15,3	1
2	Right side panel	13,2 x 15,2	1
3	Left side panel	13,2 x 15,2	1
4	Bottom panel	17,7 x 15,3	1
5	Slide	12,6 x 0,9	4
6	Back panel	16,8 x 13,9	1
7	Drawer front panel	15,9 x 6,4	2
8	Drawer right side panel	12,6 x 4,7	2
9	Drawer left side panel	12,6 x 4,7	2
10	Drawer bottom panel	13,9 x 4,7	2
11	Drawer back panel	14,3 x 12,6	2

Thank you for choosing us, it is an honor to be in your home!
If you have any questions, feedback, or need replacement parts, please contact us at:
info@fromthetreefurniture.com or service@fromthetreefurniture.com


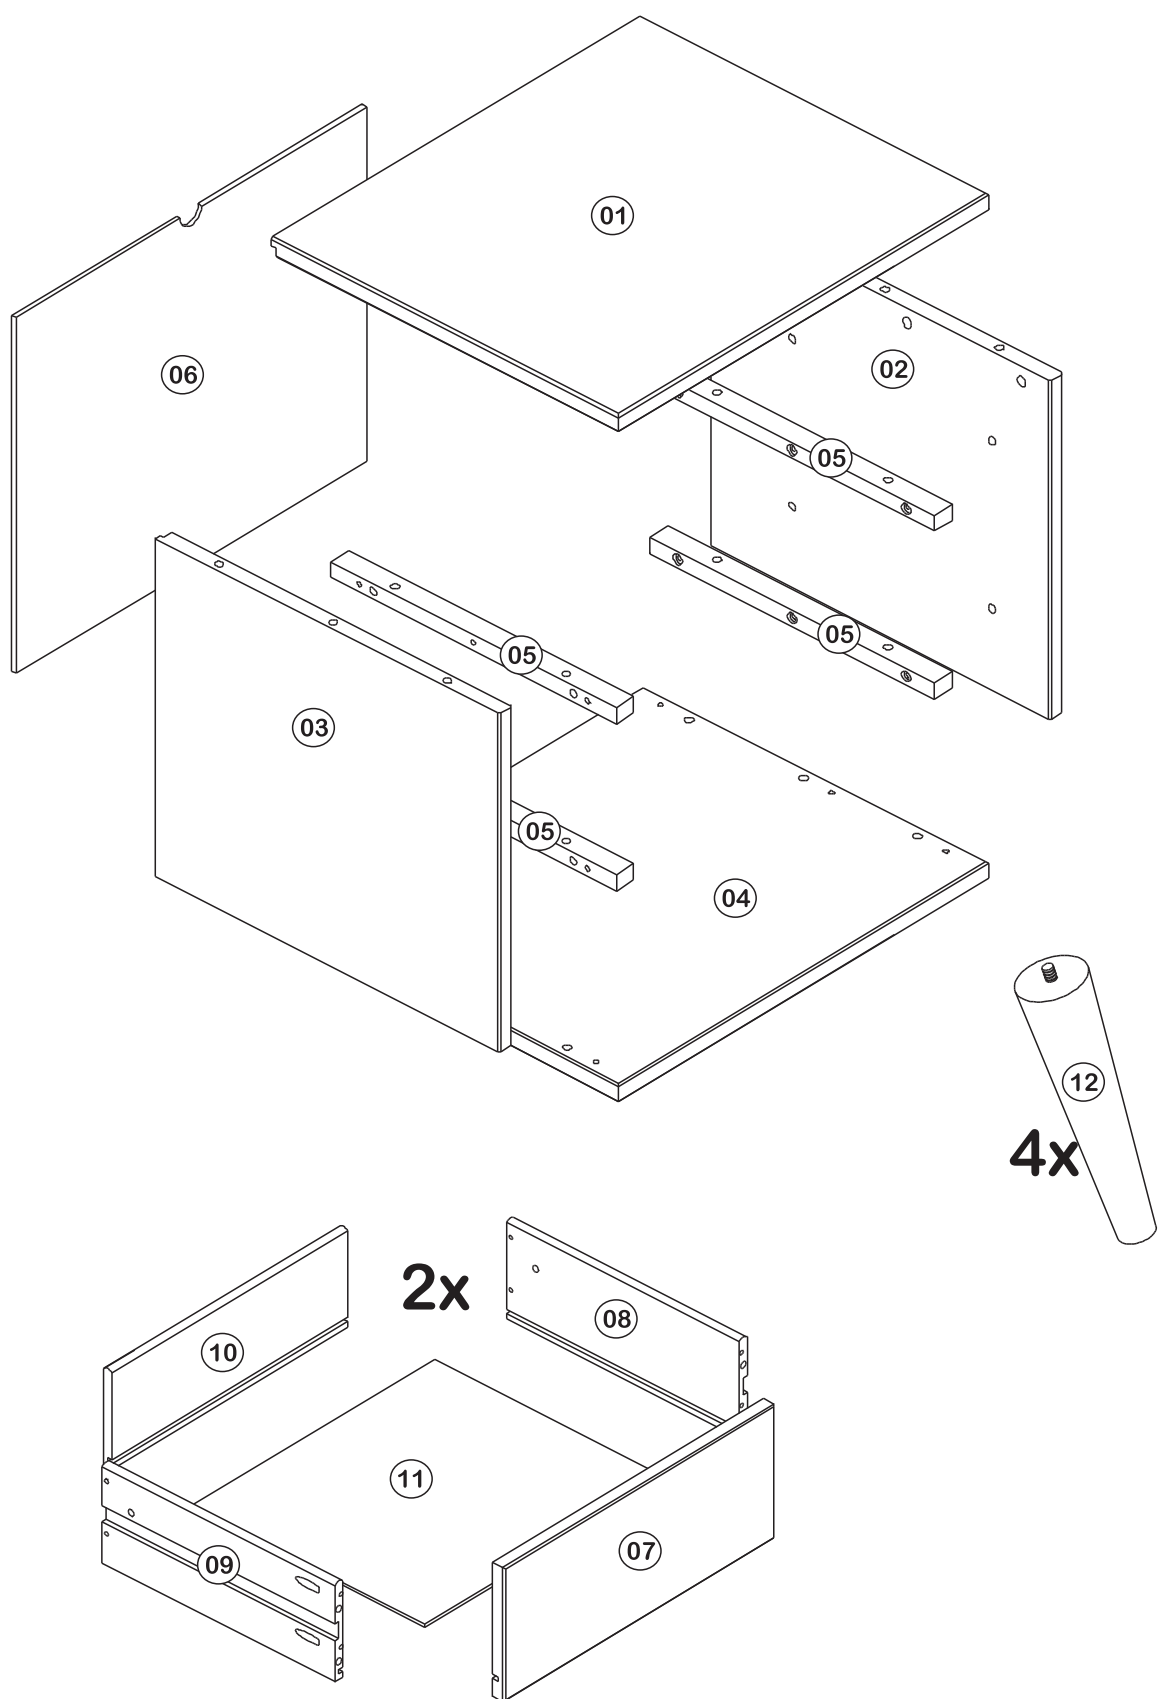


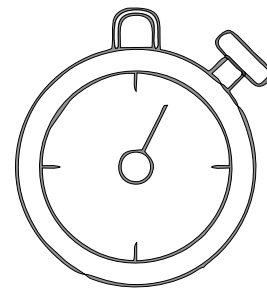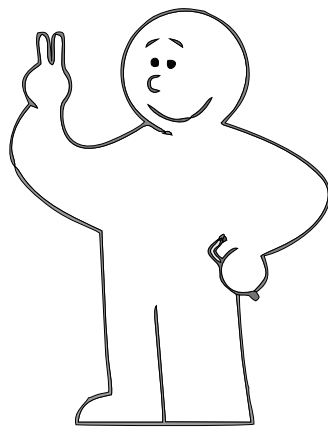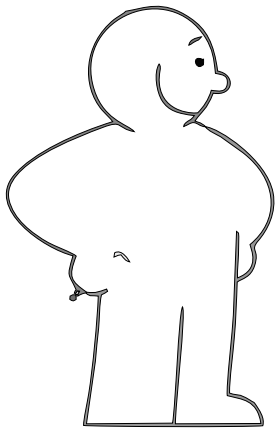


40 Min

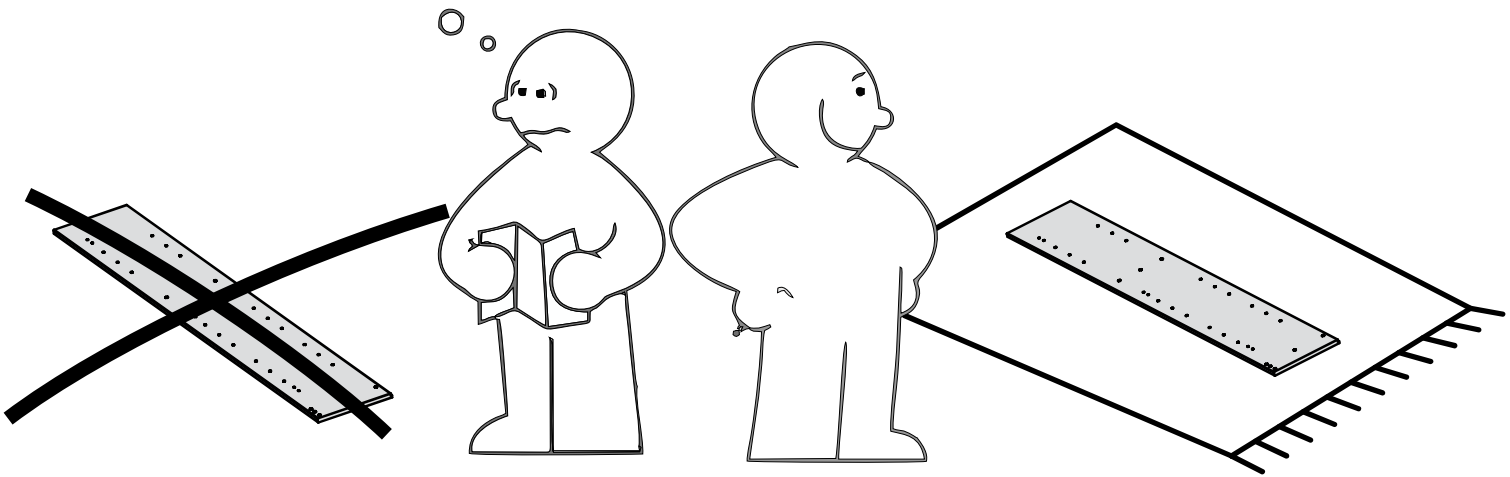

Tools required

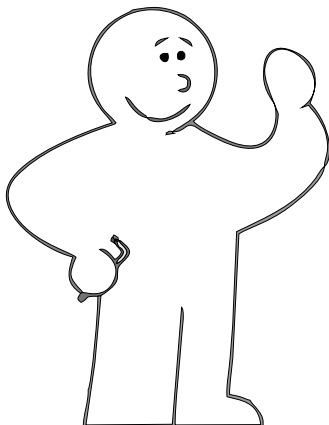

Phillips screwdriver
(medium & large)

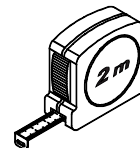






Ruler/tape
measure



Small
hammer




Eye protection
(when using a
hammer or glue)

A	 8x25mm	36	B	 4,0x25mm	06
C	 4,0x40mm	06	D	 3,5x14mm	21
E	 3,5x30mm	21	F		06
G	 3,0x30mm	08	H		02
I		12	J		04
K		01	L		02




HARDWARE IS LOCATED INSIDE A CARDBOARD BOX ! CHECK FOR IT BEFORE DISPOSING PACKAGING


Ruler - Use this ruler to help correctly identify the screws






01

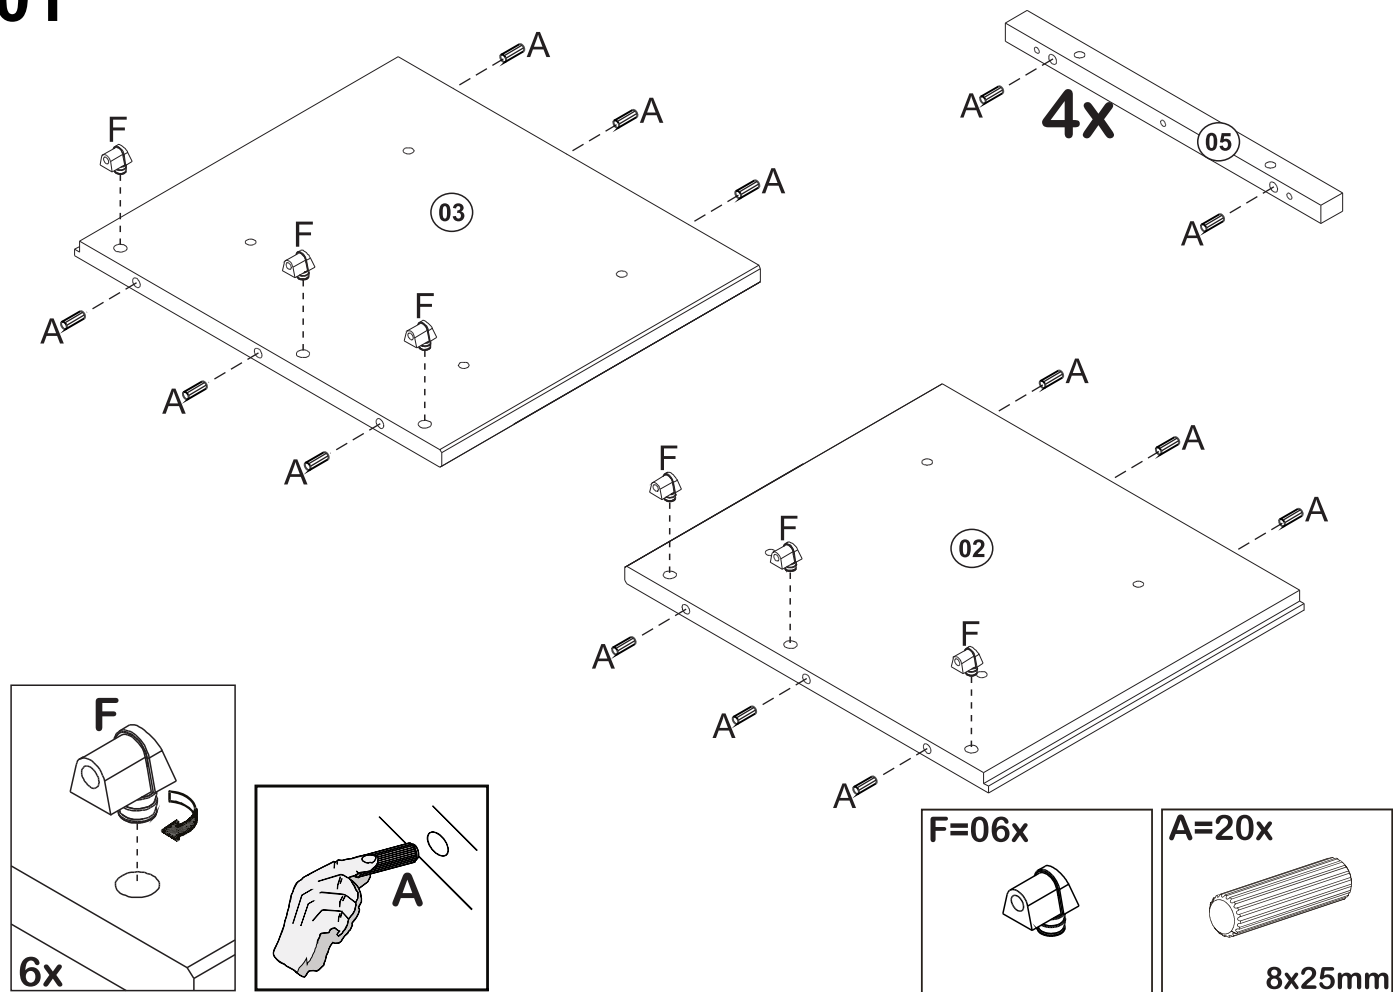





02

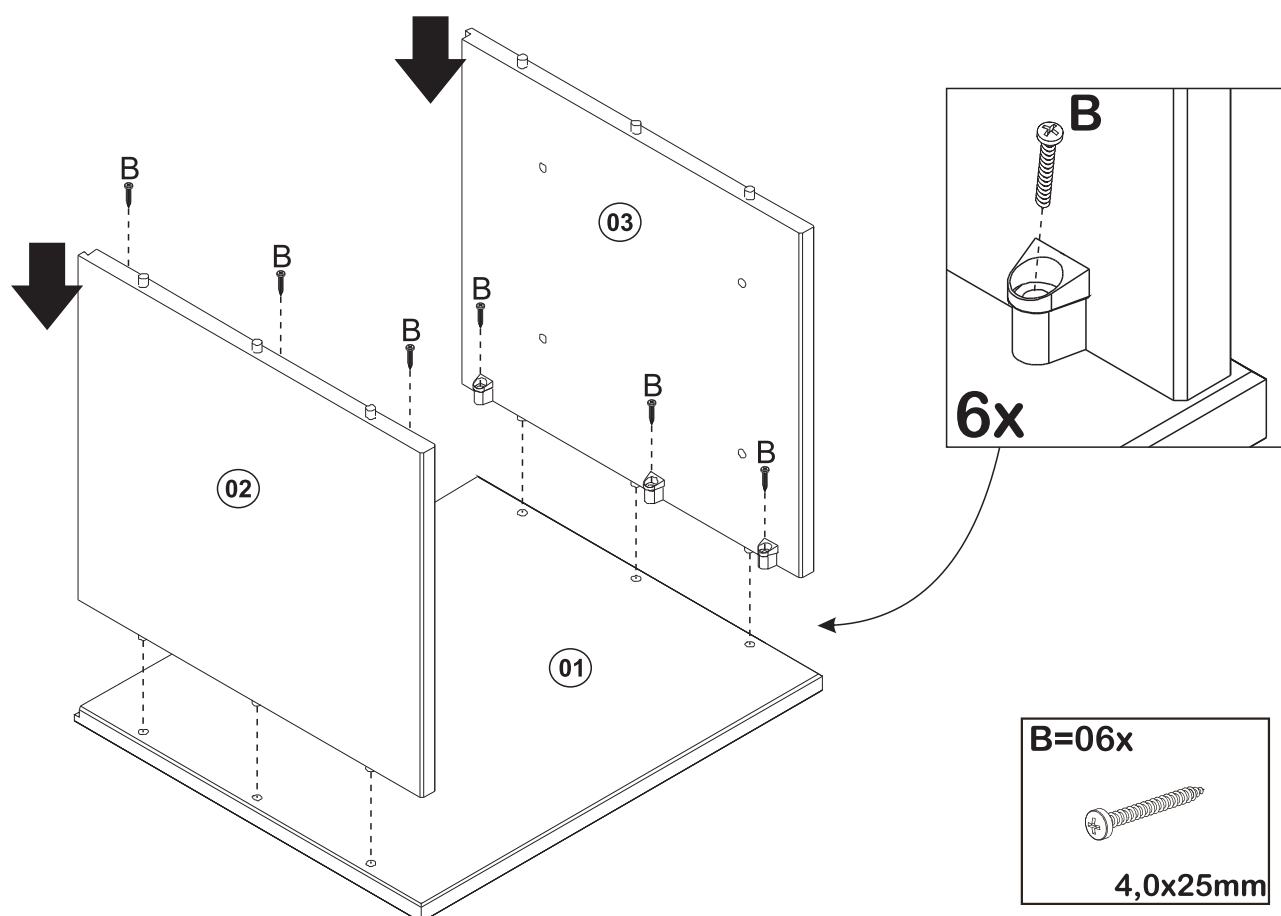


03

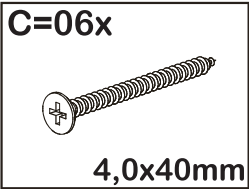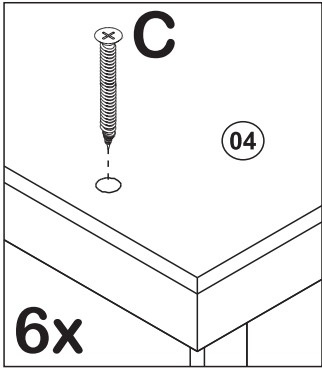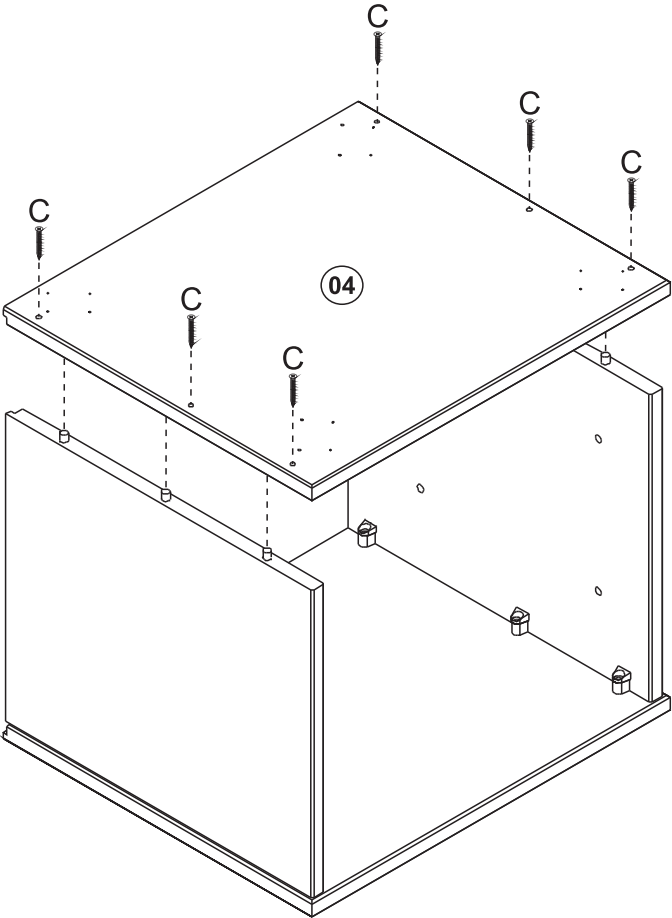



04

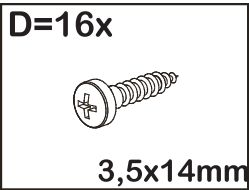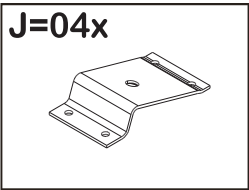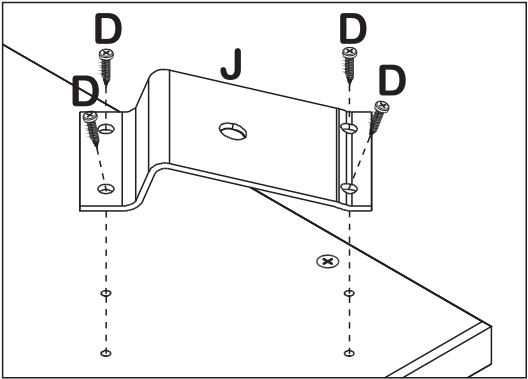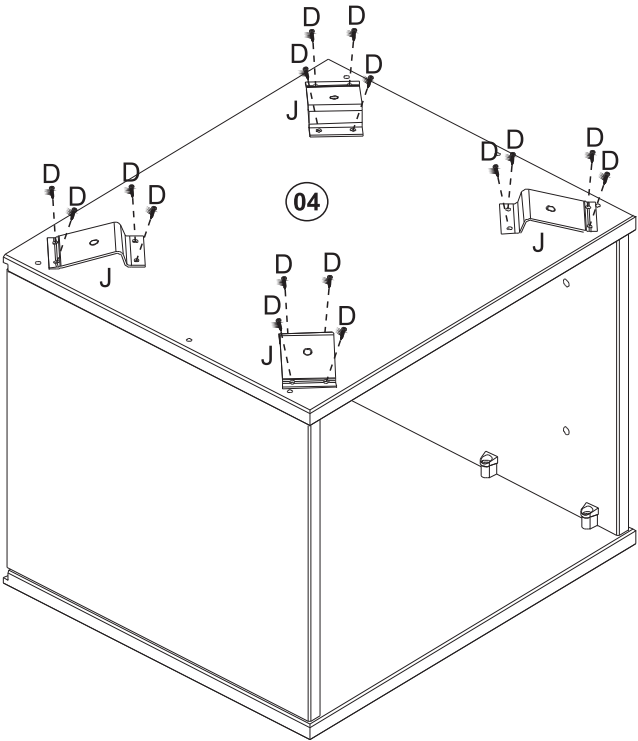






05

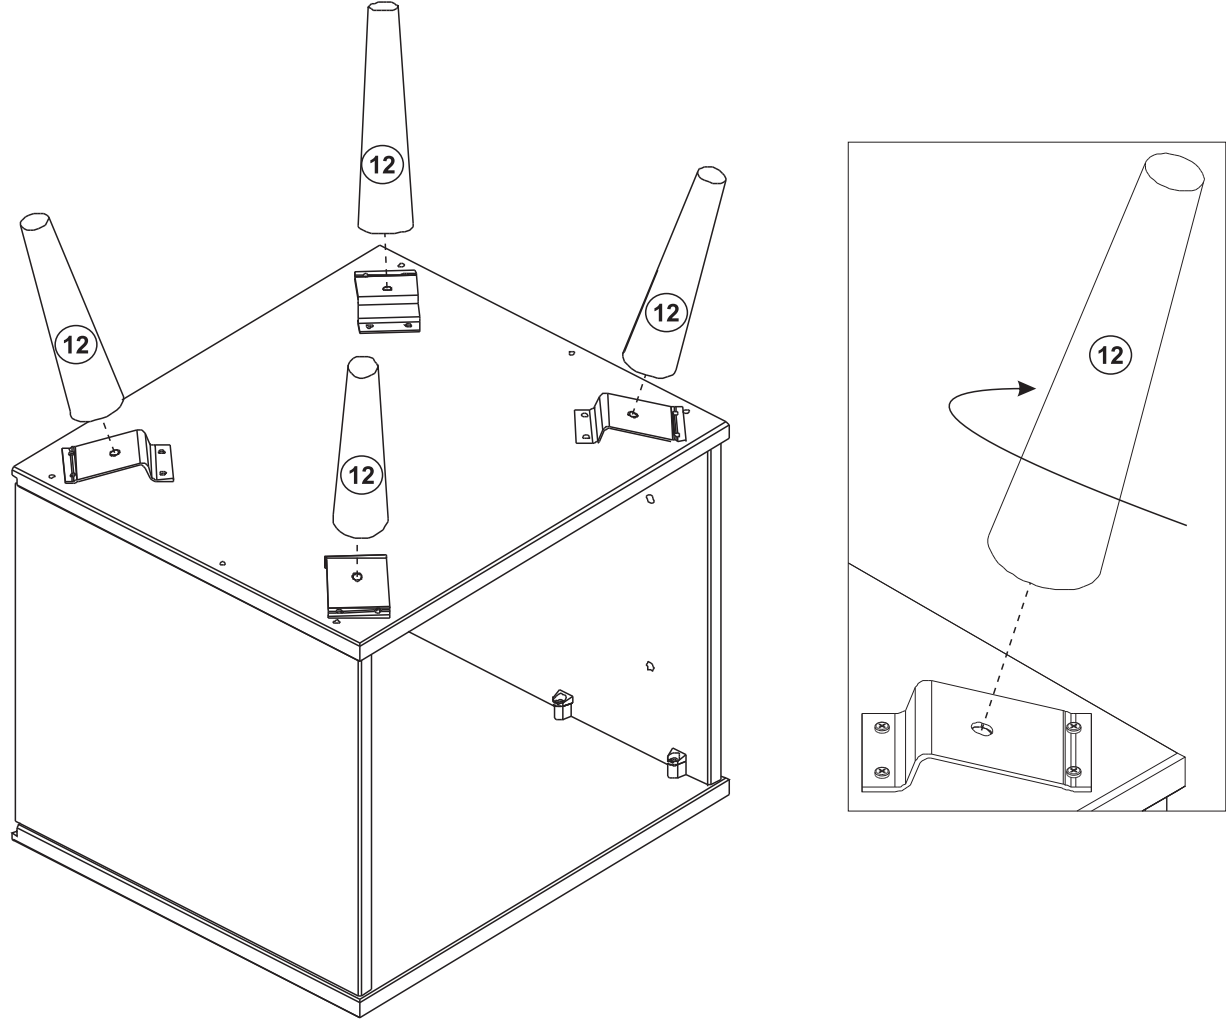

06

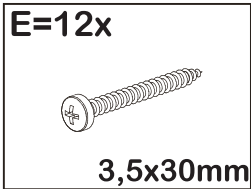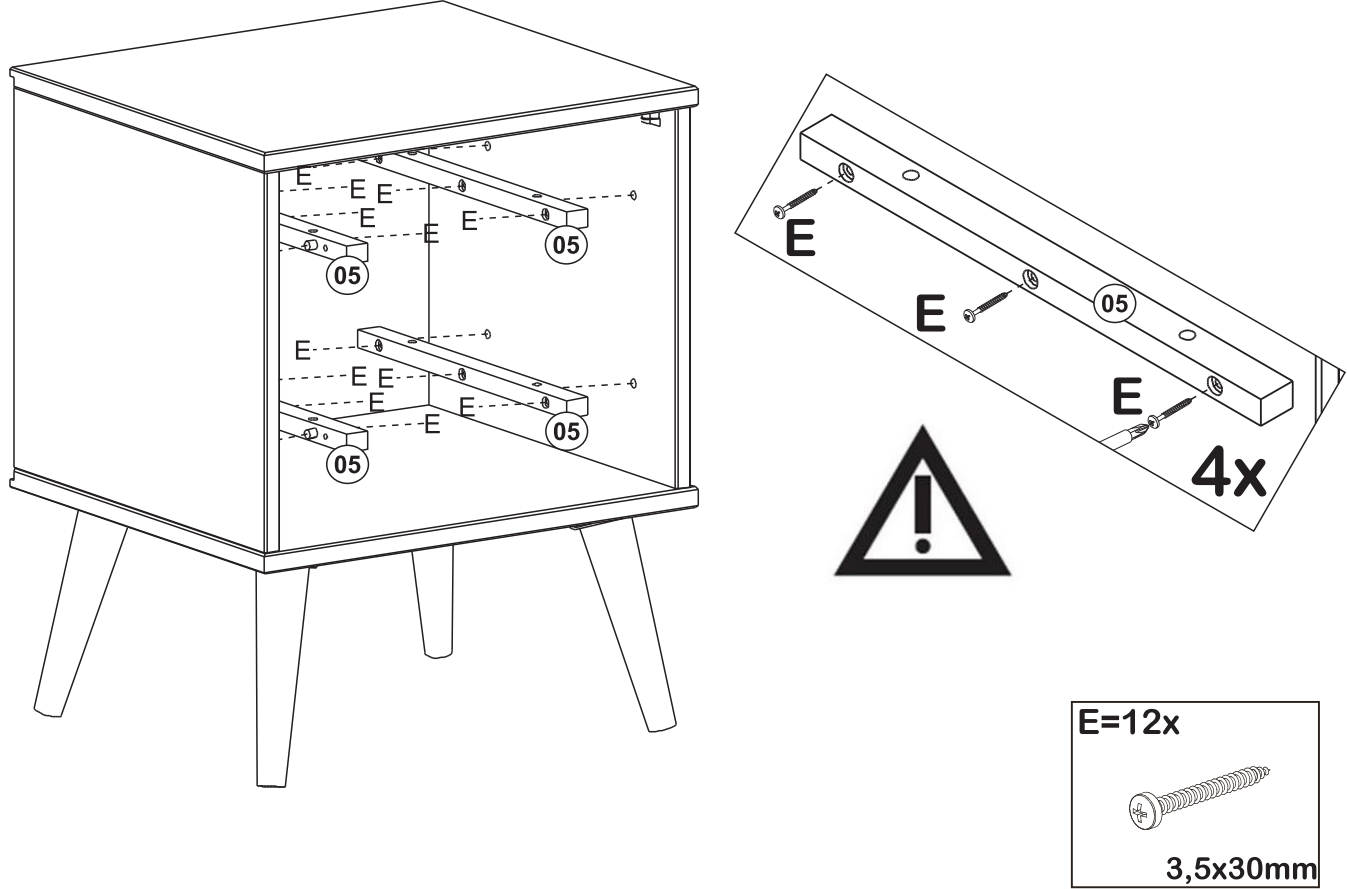

07

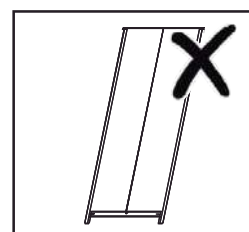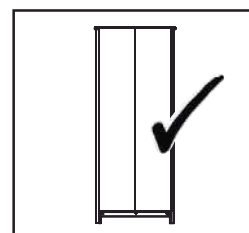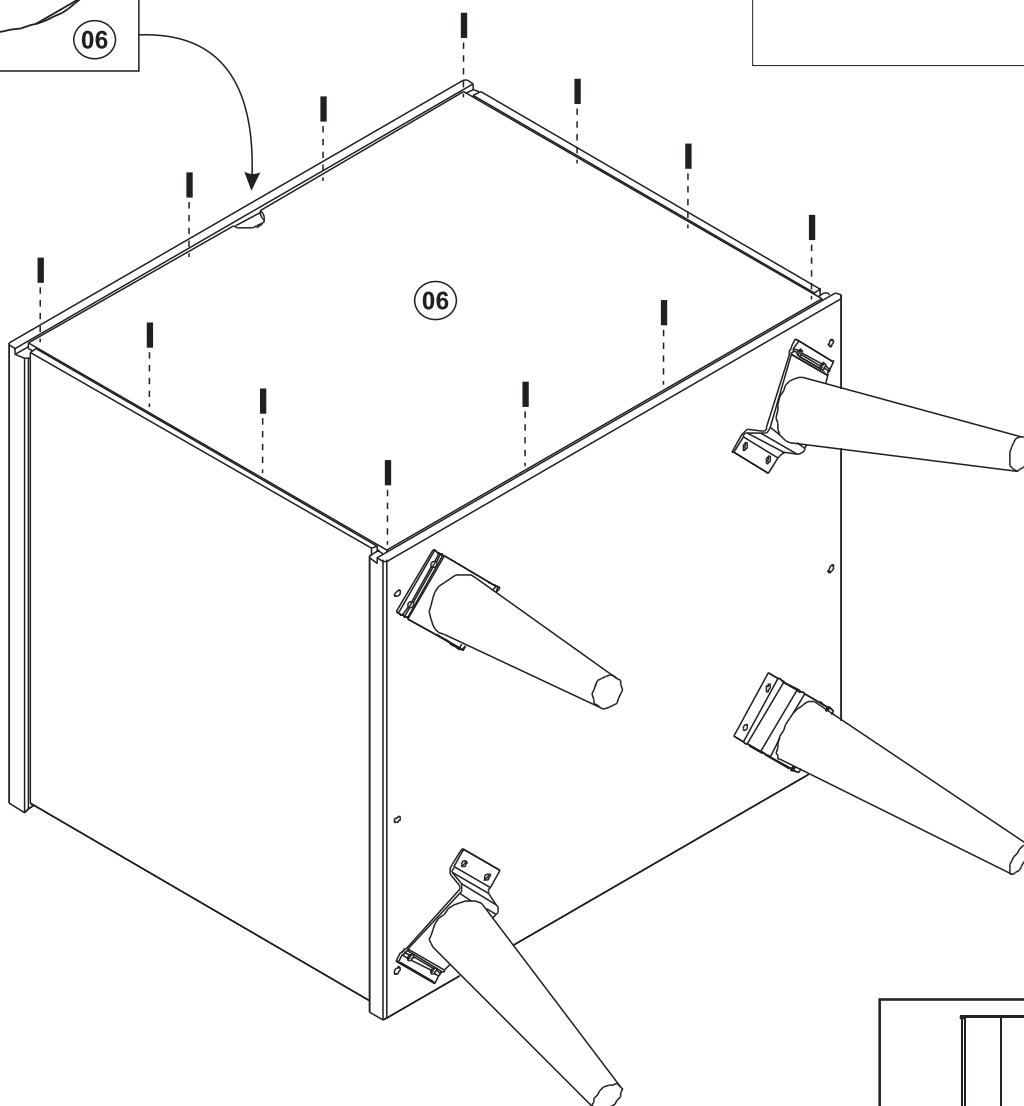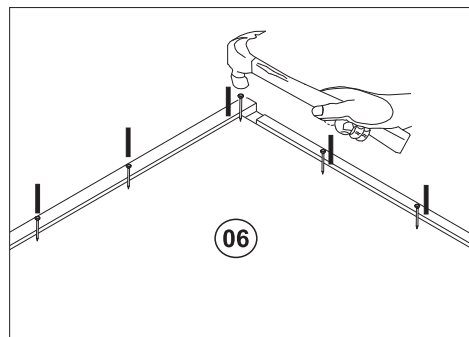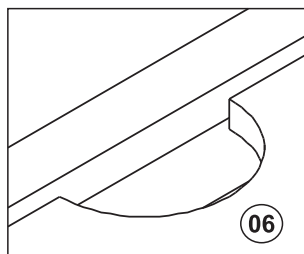

Use all back panels nails.
Evenly spaced, they help
make the unit strong.



Important:
Cabinet **MUST** be
'square' when back panel
is attached.



I=12x




08



Position the furniture into place and make a mark to the wall, as shown.

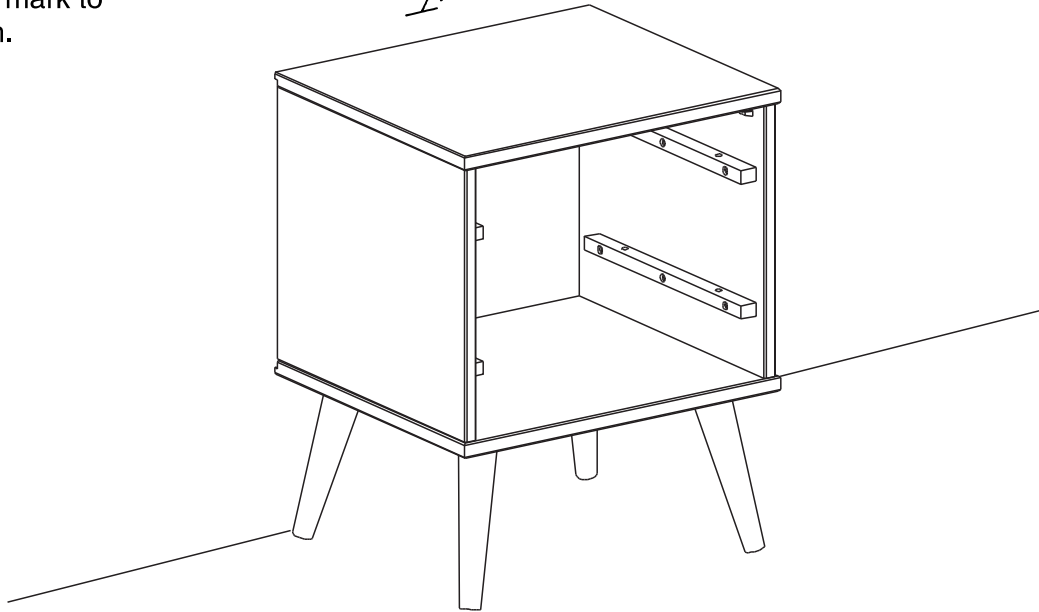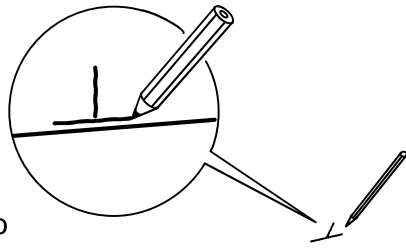

09

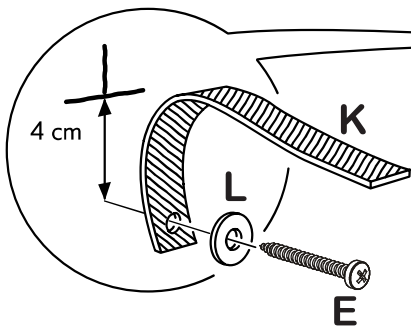



With help, carefully move the furniture away to access the mark in the wall.

Drill hole on wall 4cm bellow the mark, as shown in the diagram.




Before drilling, check wall for hidden pipes and cables.

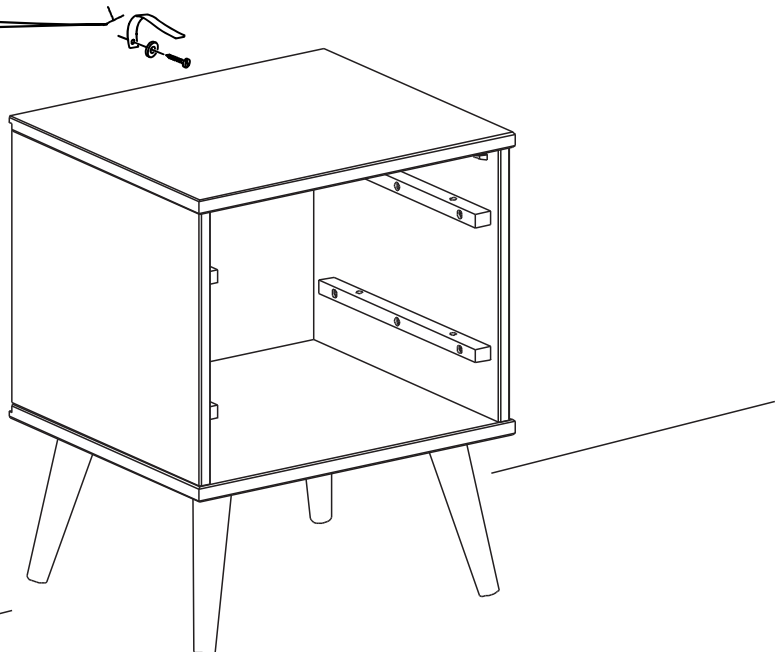


E=01x	L=01x	K=01x
		
3,5x30mm		



10

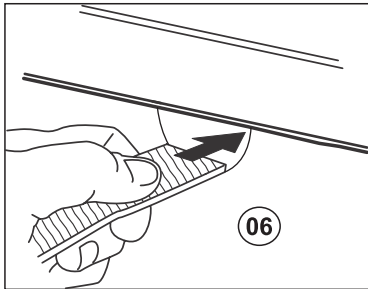


With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.






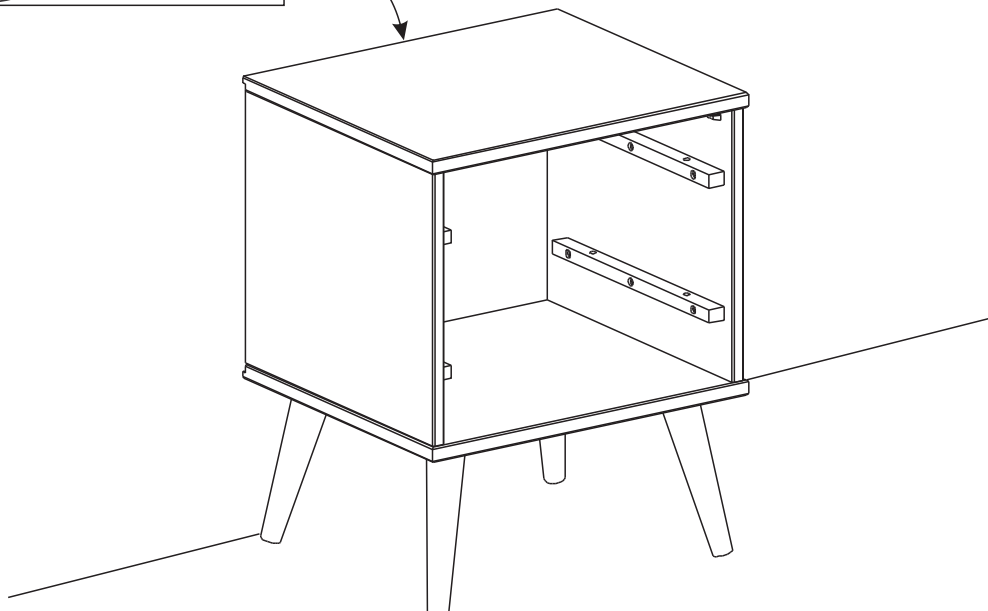


11


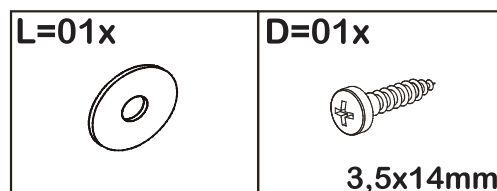
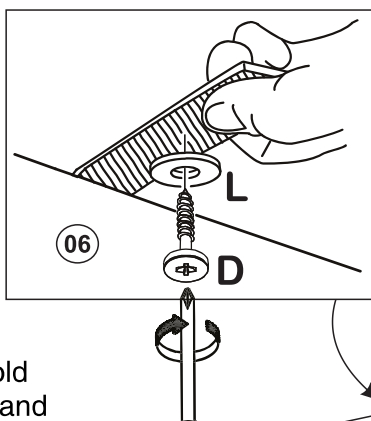


Inside the cabinet, hold wall strap in position and fix it using washer and screw , as shown.

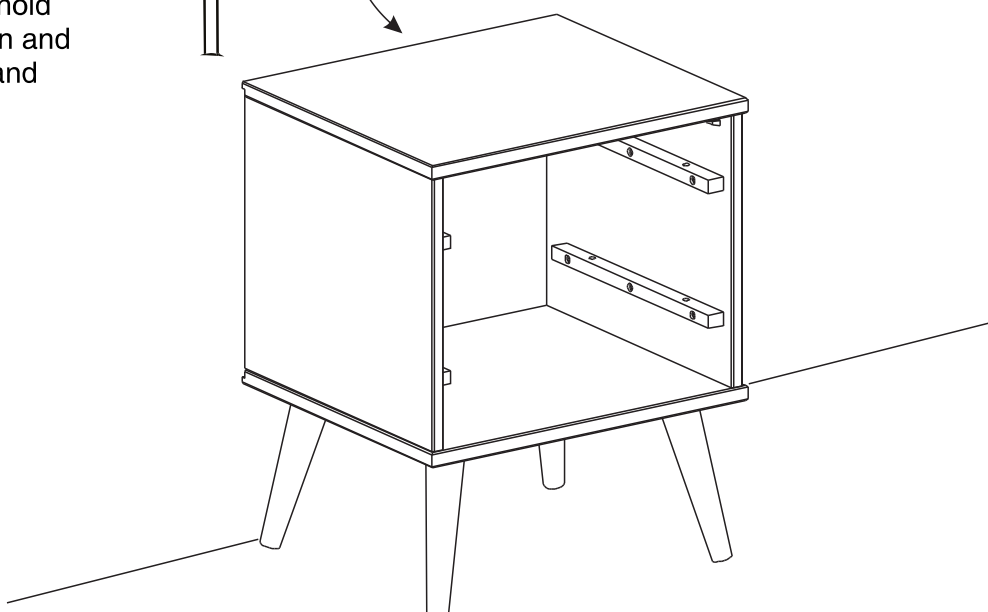

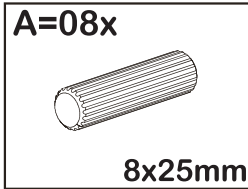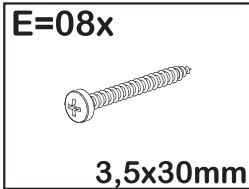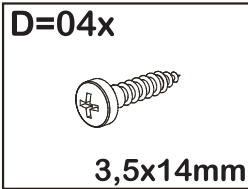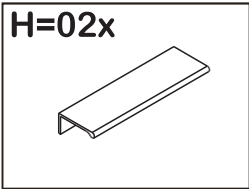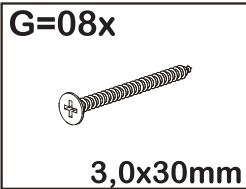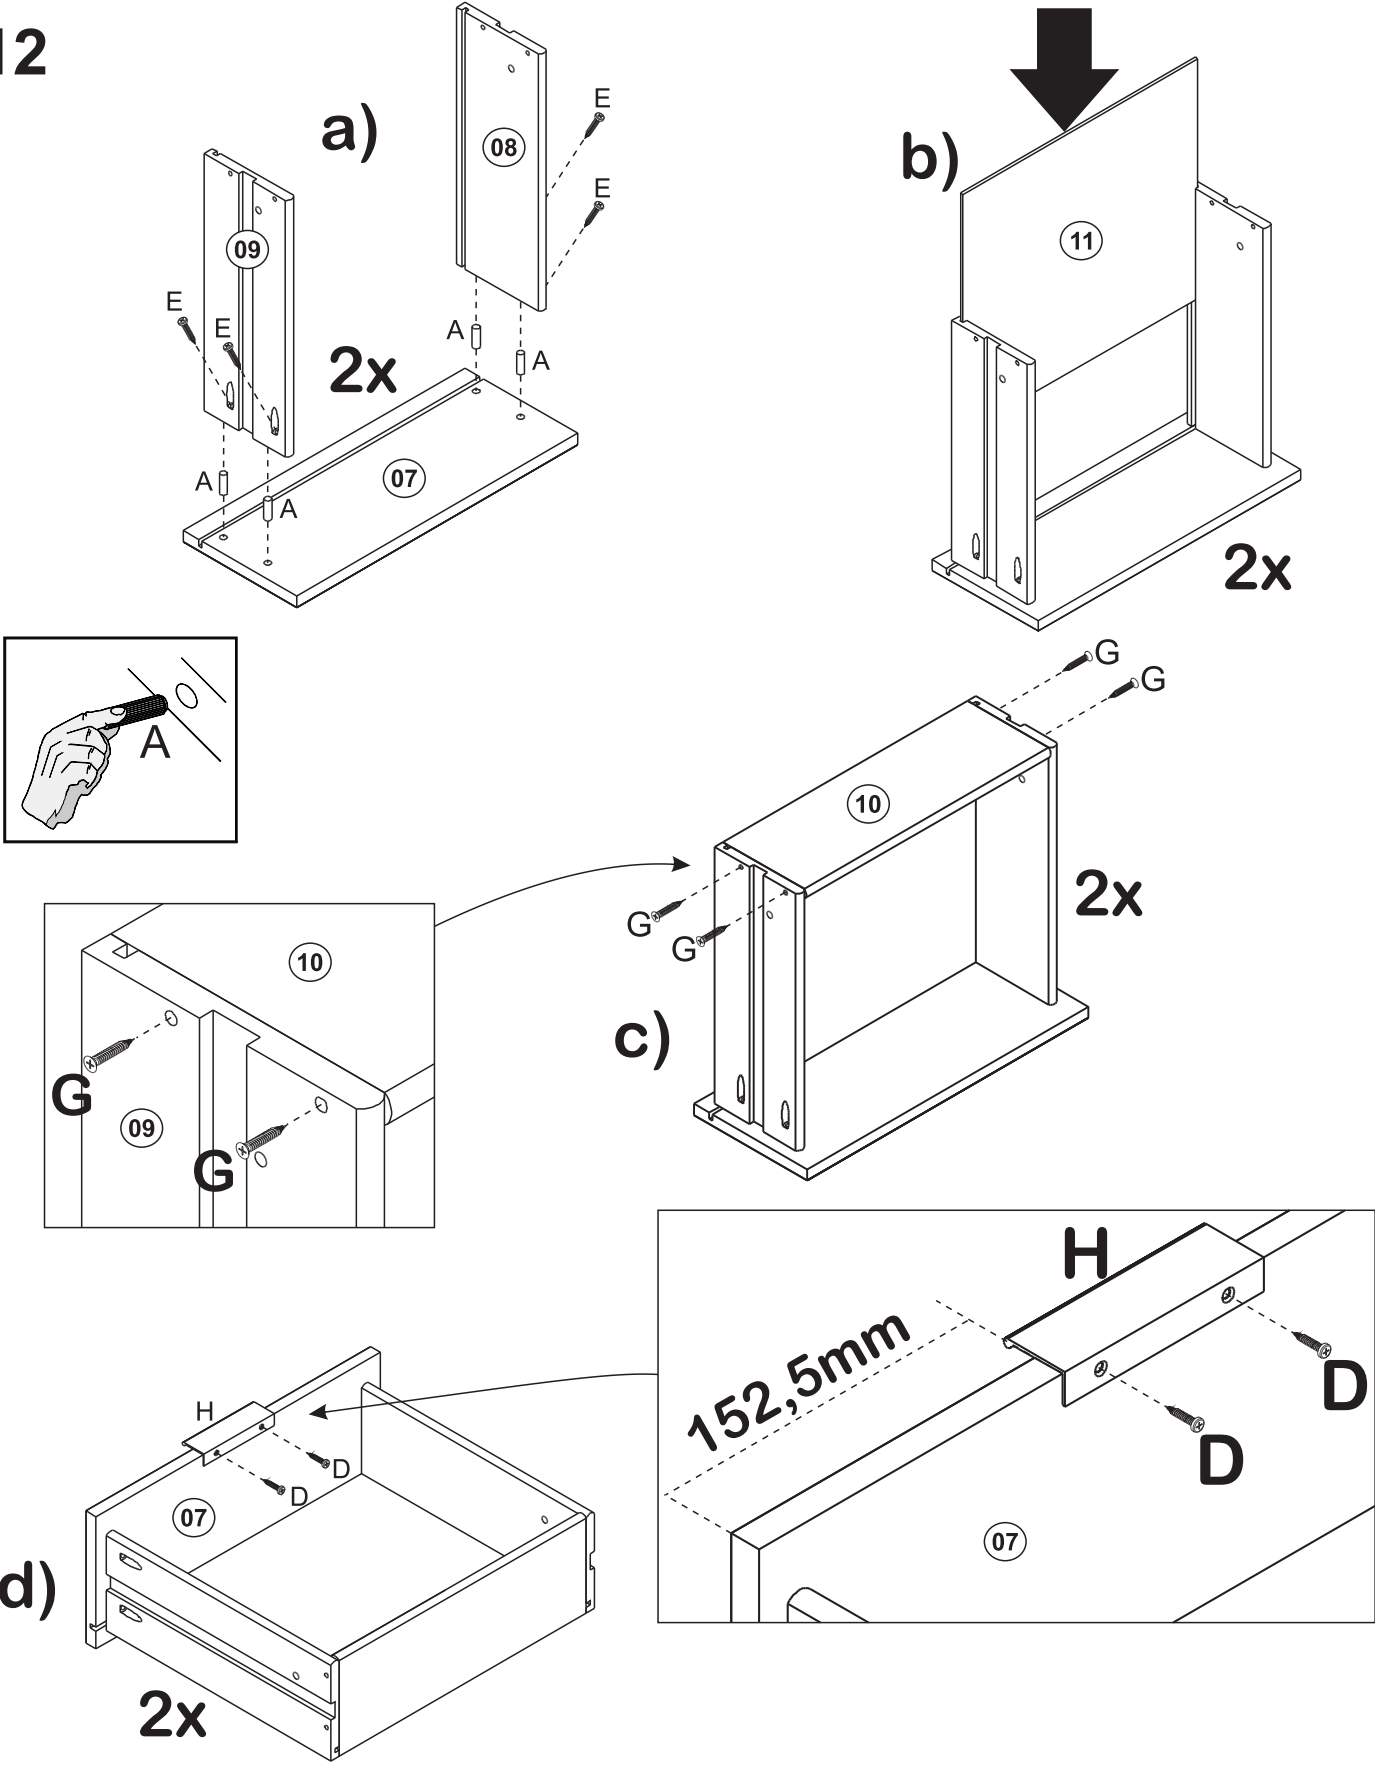

13

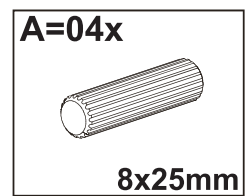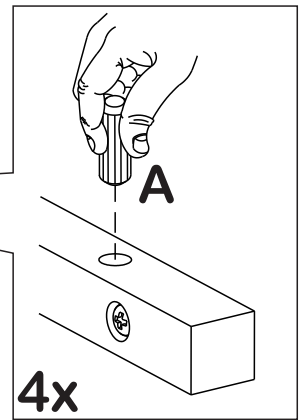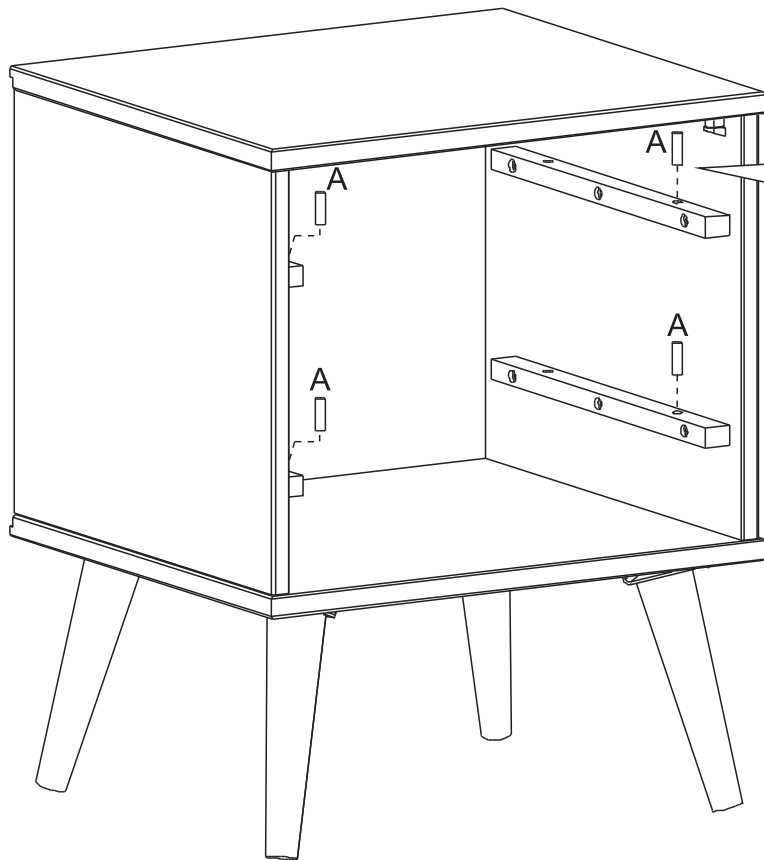

14

