




MCombo®

OWNER'S MANUAL

OUTDOOR STORAGE SHED

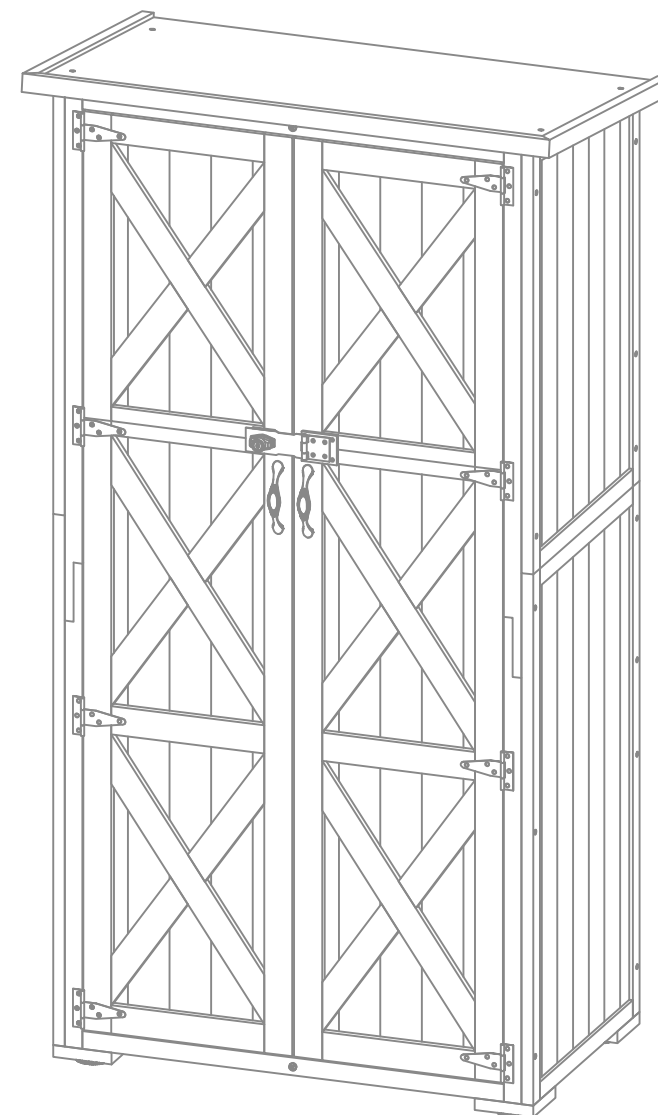

6056-1628

I . CATALOG

I . CATALOG — — — — —	1
II . PRODUCT PRECAUTIONS — — — — —	1
III . DISCLAIMER — — — — —	1
IV . INSTALLATION PREPARATION — — — — —	2
V . ACCESSORIES LIST — — — — —	3
VI . INSTALLATION INSTRUCTION — — — — —	5
VII . WARRANTY — — — — —	12
VIII . RETURN/REPLACEMENT POLICY — — — — —	13
IX . CARE AND MAINTENANCE — — — — —	13

II . PRODUCT PRECAUTIONS



Read and follow the information in the user's manual.



Please keep kids away from small components to ensure safety.



Recommend to cover the item in extreme weather.



Do not place overweight items.



The item is polished, can be DIY for freely.



To prolong the service life, recommend to oil.




Please handle wood and other accessories properly.

III . DISCLAIMER

























We ask that you read this manual completely before assembling and operating your new item. We are not and cannot be held responsible for any damage or injury incurred due to improper or unsafe use of the item. We specifically disclaim responsibility for any bodily injury or property damage that may occur during any use that does not comply with applicable federal, state, or local laws or ordinances. Please keep this manual for future reference.

IV. INSTALLATION PREPARATION

1. Please prepare a carpet or mat to protect your floor. You need to spread out all the accessories.
2. Please prepare a pair of gloves to avoid being scratched by sharp wooden sawdust that may occur during installation.
3. Please open all the boxes to check that the accessories are complete and in good condition (The accessories list in page 3).
4. The box contains some **small components**, please place them properly before installation to keep them **away from kids** and ensure safety.
5. If you need to use power tools to install this product, please **set the speed to low speed in advance**. Due to the characteristics of wood products, the use of high speed during installation is probably to damage the wood.
6. When installing, please align all the holes and **do not tighten all the screws first**, otherwise it may make the installation difficult.

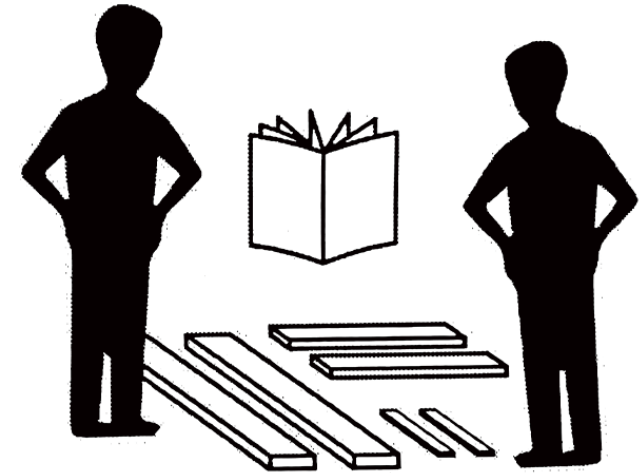

V . Accessories List

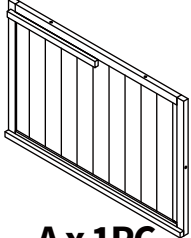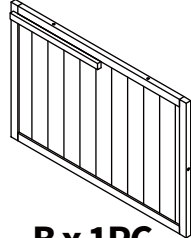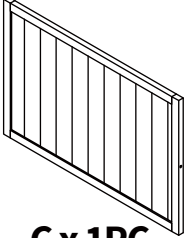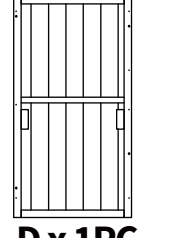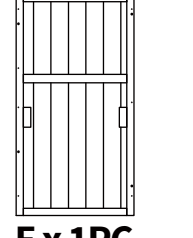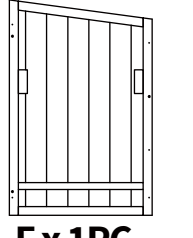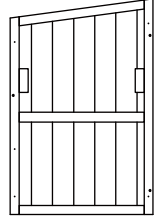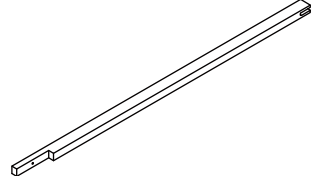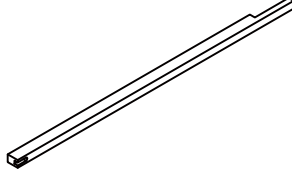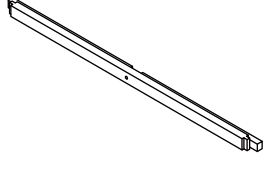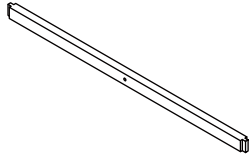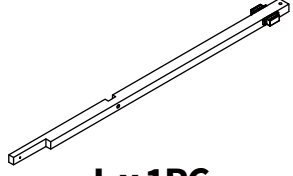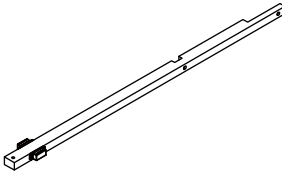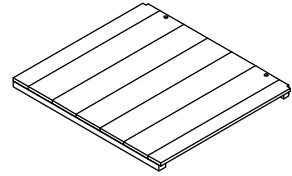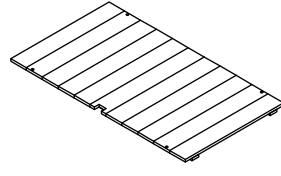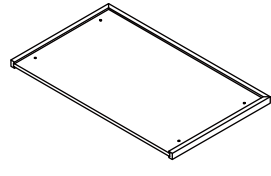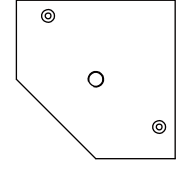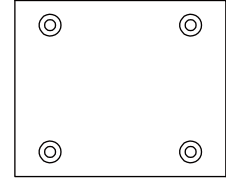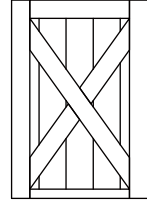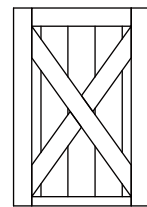


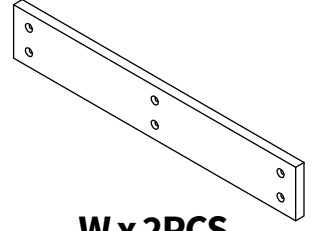




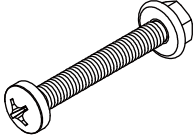

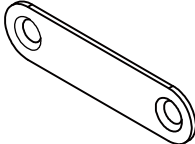
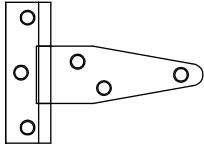
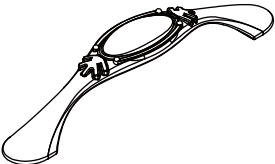
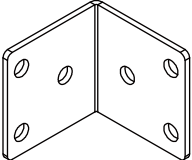
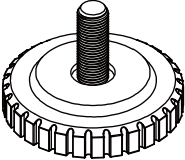
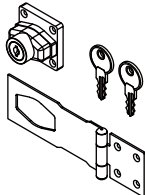
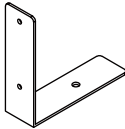
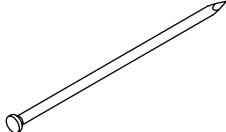
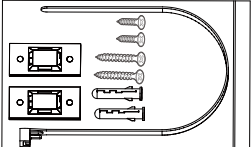
 A x 1PC	 B x 1PC	 C x 1PC	 D x 1PC	 E x 1PC	 F x 1PC
 G x 1PC	 H x 2PCS	 I x 2PCS	 J x 1PC	 K x 1PC	 L x 1PC
 M x 1PC	 N x 2PCS	 O x 1PC	 P x 1PC	 Q x 4PCS	 R x 1PC
 S x 1PC	 T x 1PC	 U x 1PC	 V x 1PC	 W x 2PCS	 M3*12mm ① x 48+2



Kindly Notes:

Please open all boxes to check the quantity and condition of accessories.

V. Accessories List

 M3*14mm ② x 8+1	 M3*16mm ③ x 48+2	 M3*20mm ④ x 12+1	 M3.5*25mm ⑤ x 20+2	 M3.5*30mm ⑥ x 12+1	 M3.5*35mm ⑦ x 38+2
 M3.5*50mm ⑧ x 4	 M4*22mm ⑨ x 4	 M6*45mm ⑩ x 2	 wood stick $\phi 8^*20\text{mm}$ ⑪ x 22+2	 ⑫ x 4	 ⑬ x 8
 ⑭ x 2	 ⑮ x 8	 ⑯ x 4	 ⑰ x 1	 ⑱ x 4	 ⑲ x 4
 ⑳ x 2					




Kindly Notes:

Please open all boxes to check the quantity and condition of accessories.


VI . INSTALLATION INSTRUCTION

STEP 1

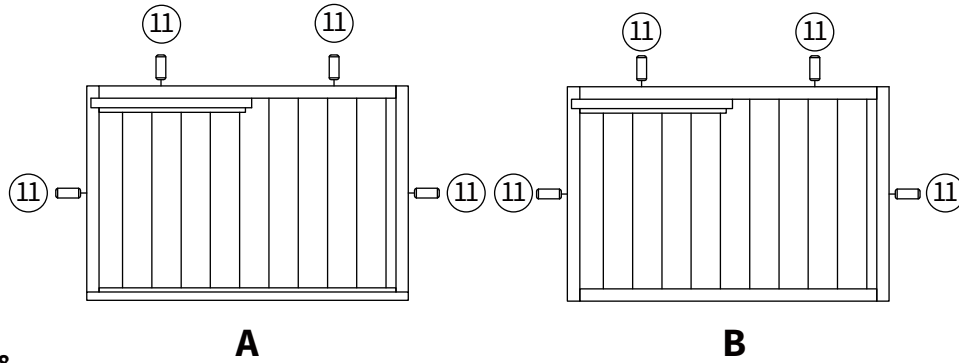


⑪ x8
A x1PC
B x1PC

STEP 2

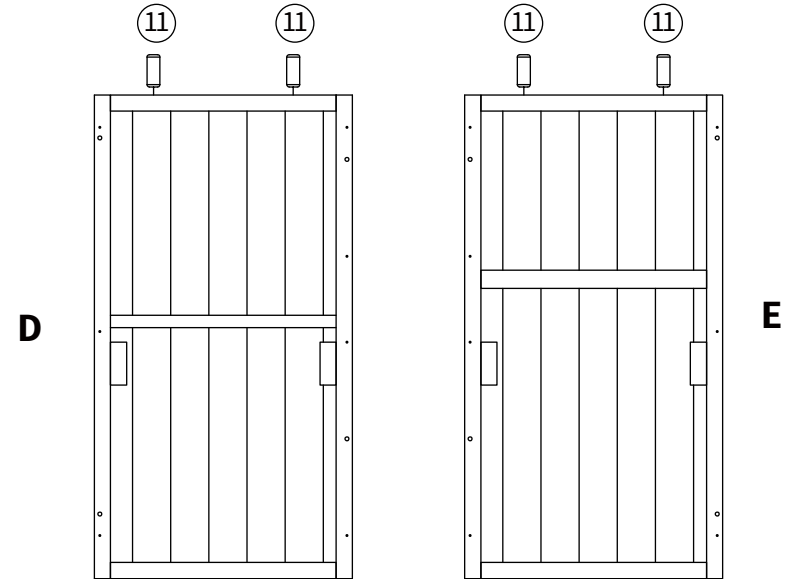

⑪ x4
D x1PC
E x1PC


STEP 3

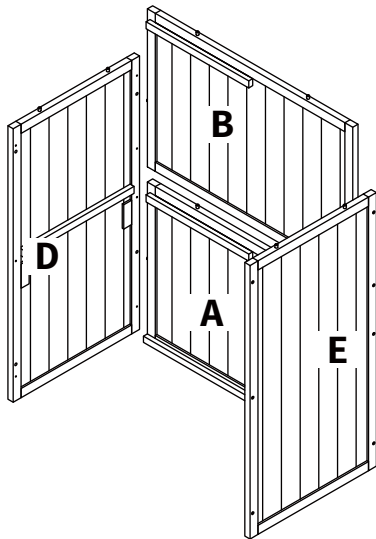

Please Note:

Insert part #B completely into part #A, then insert part #D & part #E with no gaps.


STEP 4

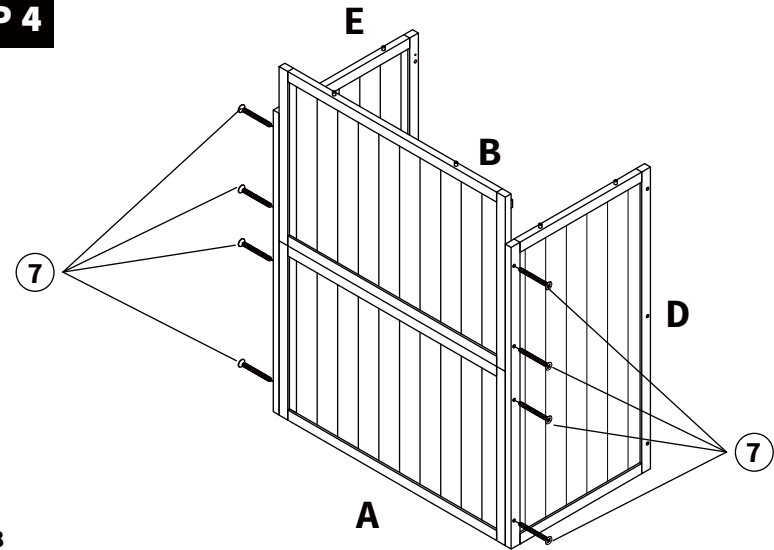

⑦ x8

VI . INSTALLATION INSTRUCTION

STEP 5

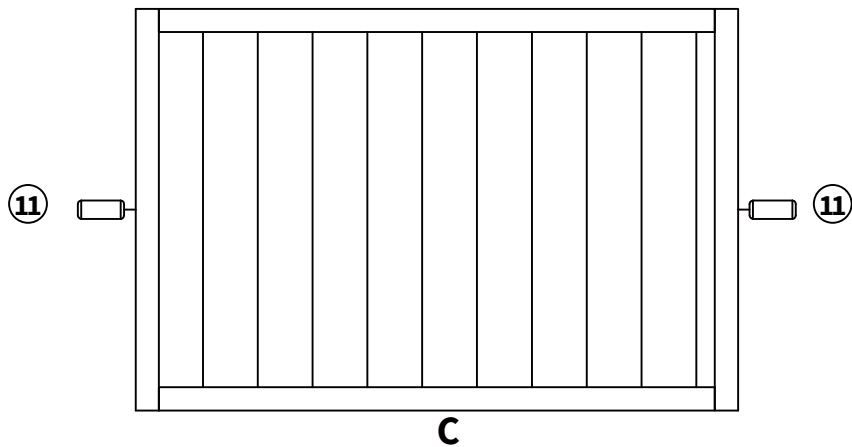


⑪ x2
C x1PC

STEP 6

Please Note:


First, insert part #C completely into part #B with no gaps.

Second, insert the two side panels (part #F & #G) into part #C with no gaps.

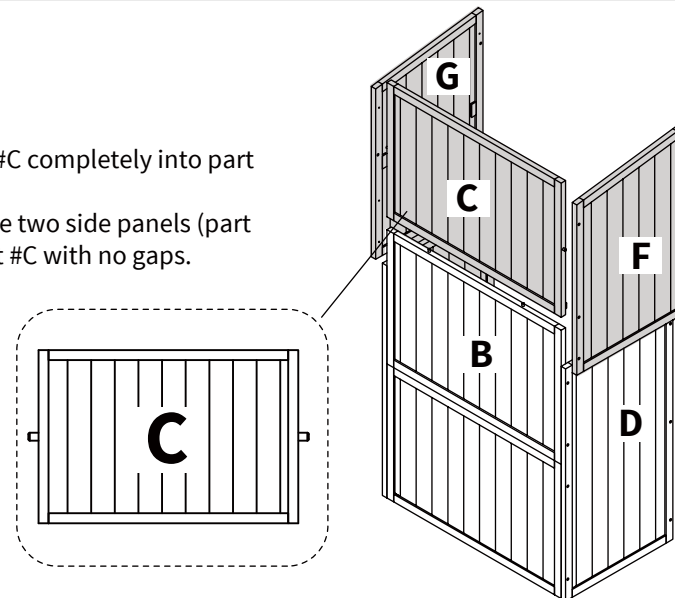

F x1PC
G x1PC


STEP 7

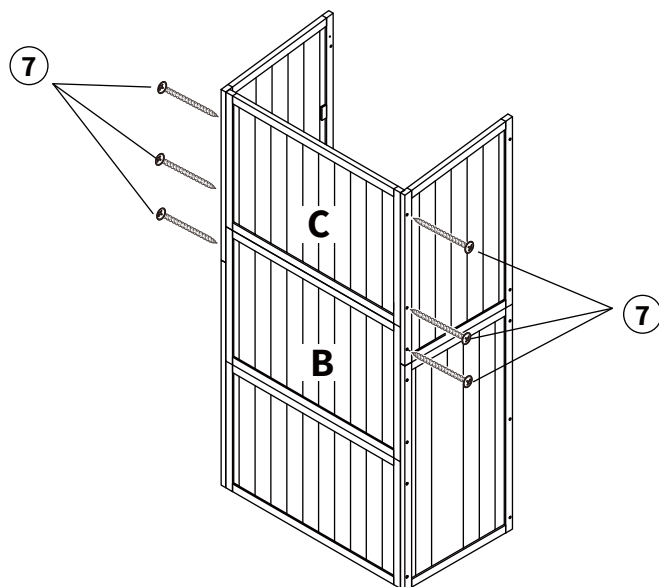

⑦ x6

STEP 8

⑤ x4
⑪ x8
H x2PCS
I x2PCS
L x1PC
M x1PC

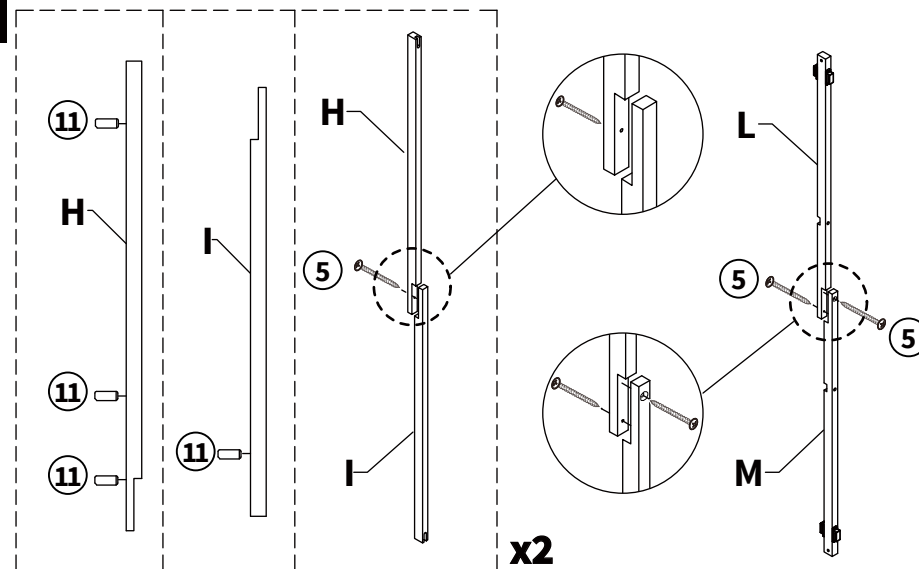


VI . INSTALLATION INSTRUCTION

STEP 9

Please Note:

Please pay attention to the direction of the part #J.

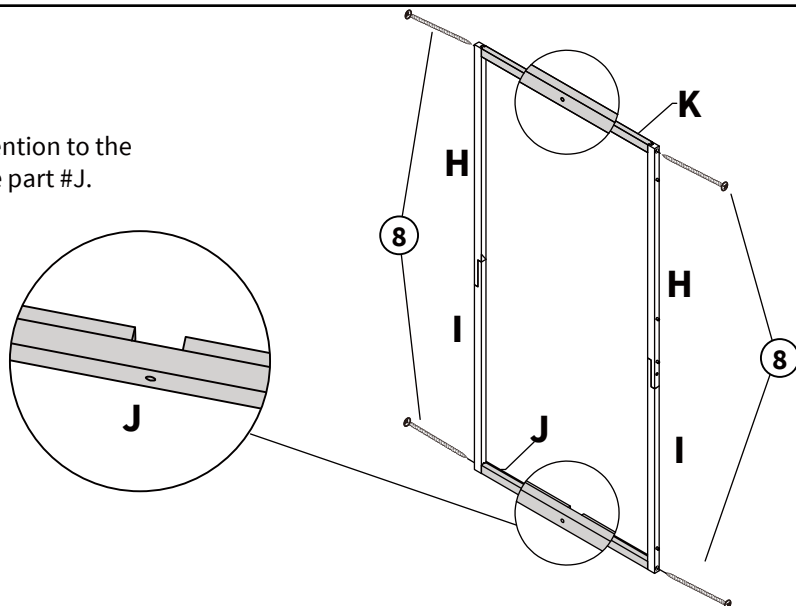


⑧ x4
J x1PC
K x1PC

STEP 10

Please Note:

First, insert the door frame.
Second, fix the door frame with screws #7.

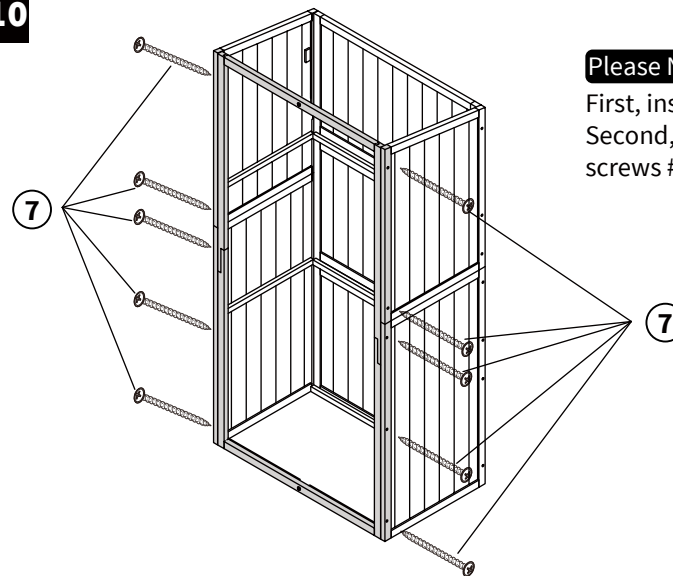


⑦ x10

STEP 11

Please Note:

Please pay attention to the direction of the part #L & #M.

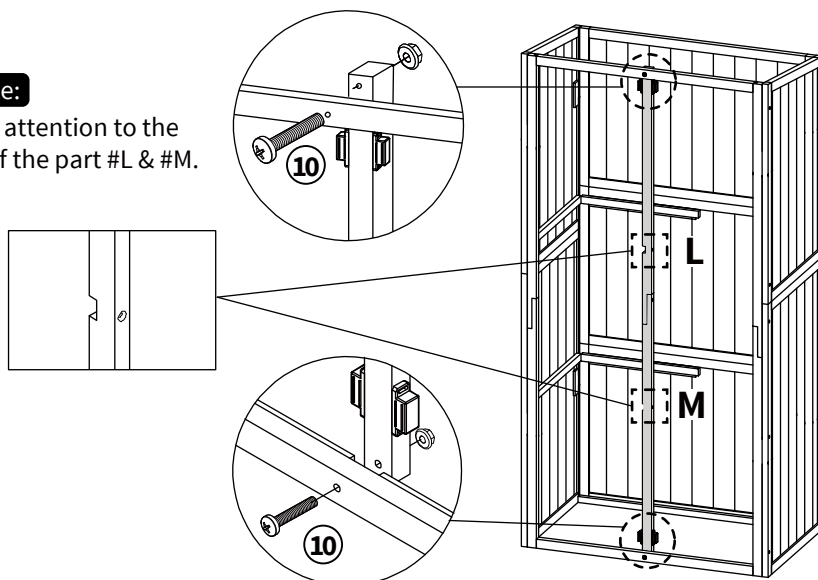


⑩ x2

STEP 12

Please Note:


Install hardware for added stability.

① x48
⑮ x8

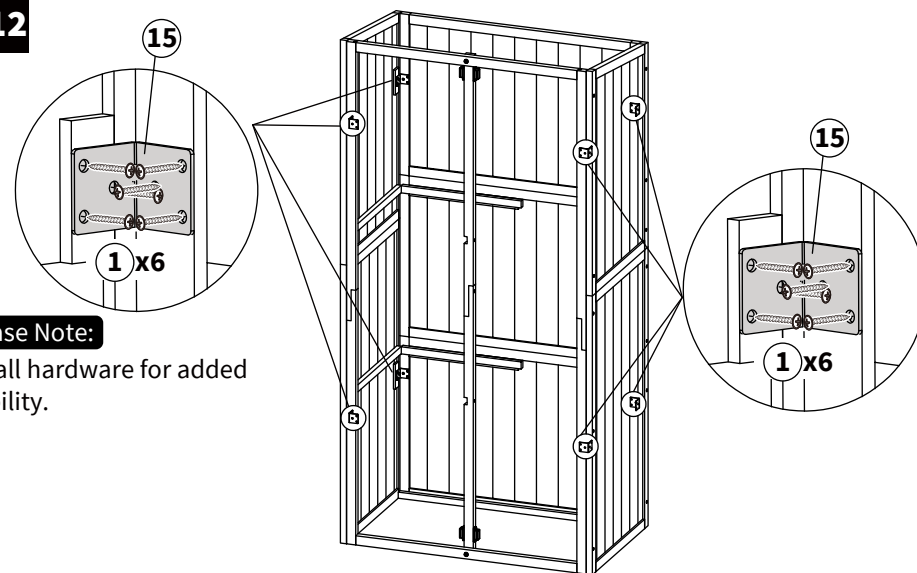

VI . INSTALLATION INSTRUCTION

STEP 13

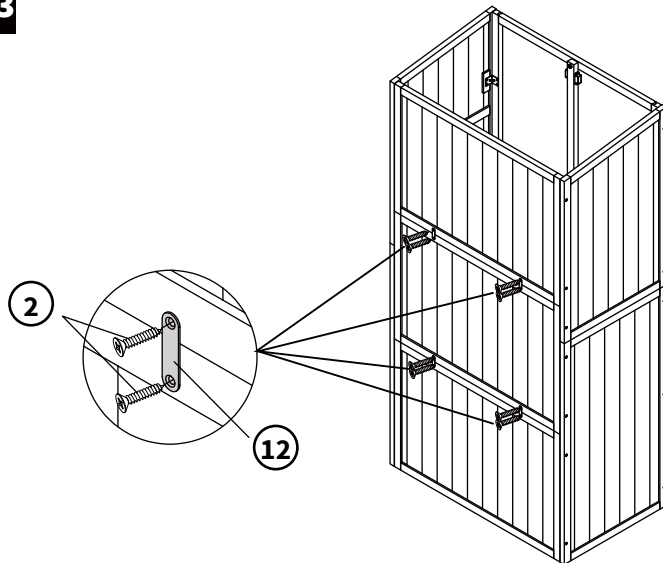


② x8
⑫ x4

STEP 14


Please Note:

First, put the part #O on the lower level.
Finally, put the part #N on the upper level.

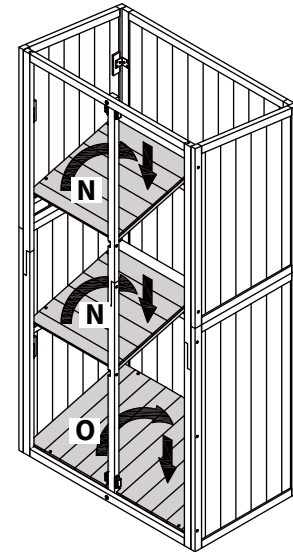

N x2PCS
O x1PC

STEP 15

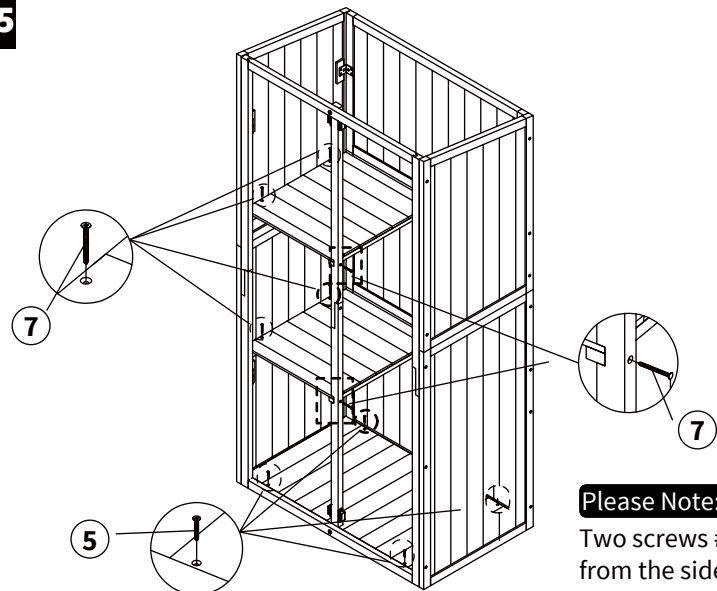


⑤ x4
⑦ x6

Please Note:

Two screws #7 are screwed in from the side.


STEP 16

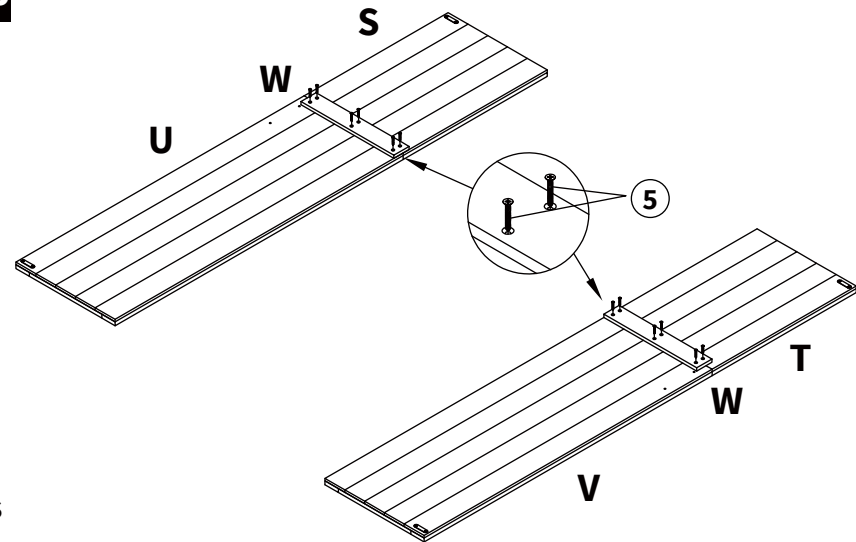

⑤ x12
S x1PC
T x1PC
U x1PC
V x1PC
W x2PCS


VI . INSTALLATION INSTRUCTION

STEP 17

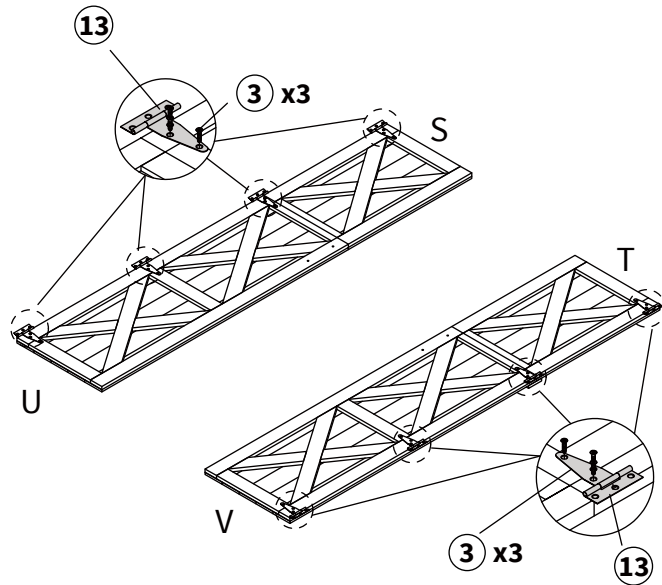


③ x24
⑬ x8

STEP 18

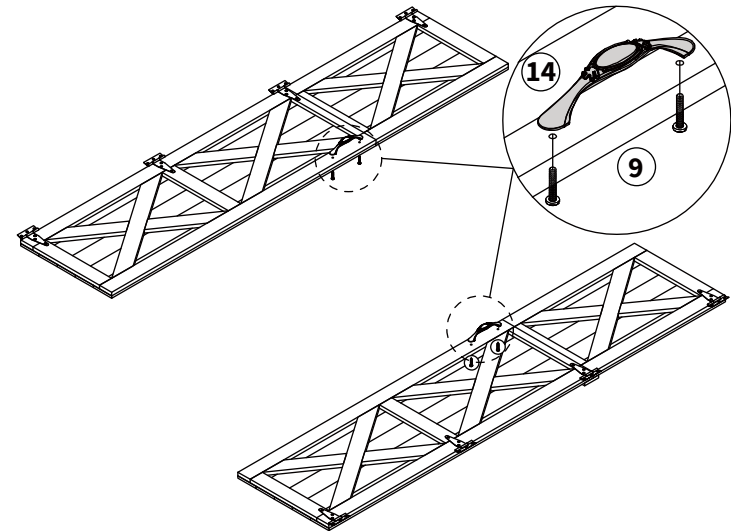


⑨ x4
⑭ x2

STEP 19

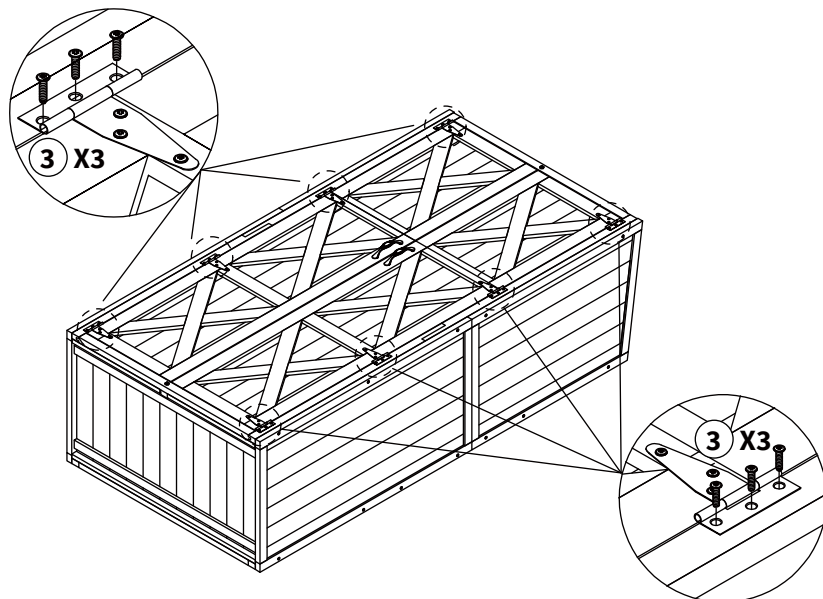

③ x24

STEP 20

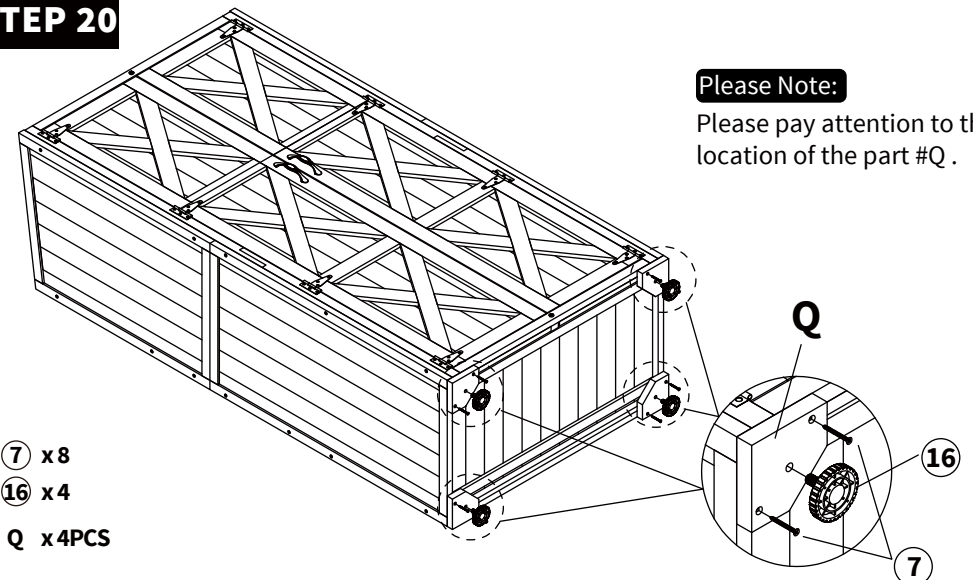

Please Note:
Please pay attention to the location of the part #Q .

⑦ x8
⑯ x4
Q x4PCS


VI . INSTALLATION INSTRUCTION

STEP 21

Please Note:


The holes of the roof are in the asphalt panels, not in the wooden slats on the sides.

④ x4
⑥ x4
P x1PC
R x1PC

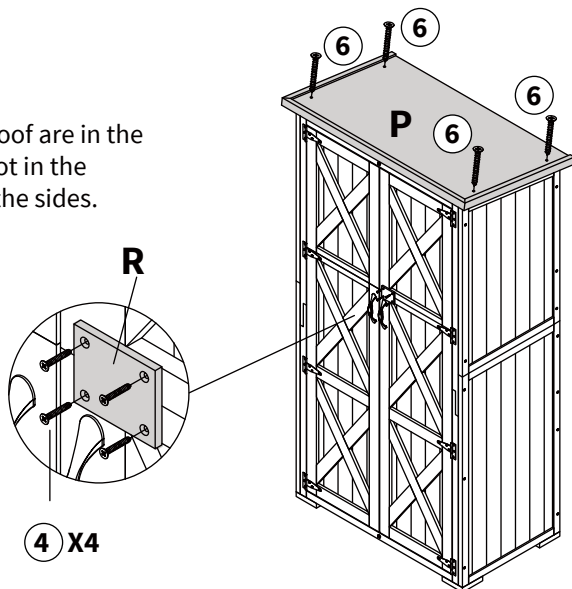


STEP 22

④ x8
⑰ x1

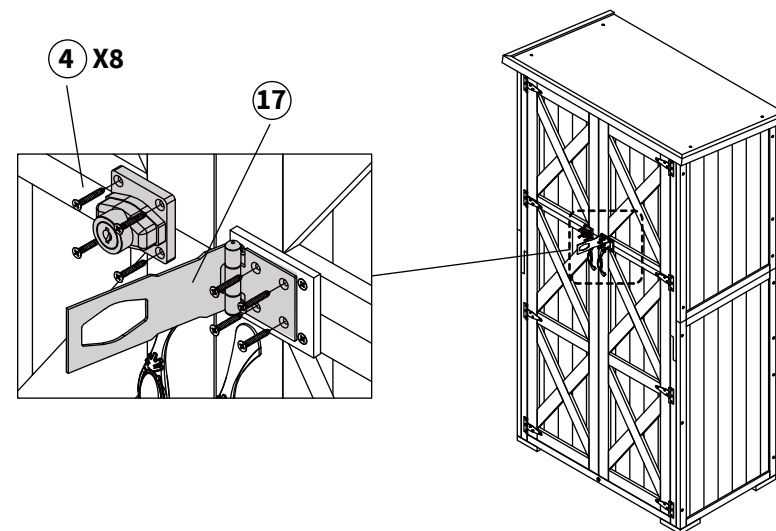

STEP 23

⑥ x8
⑱ x4
⑲ x4

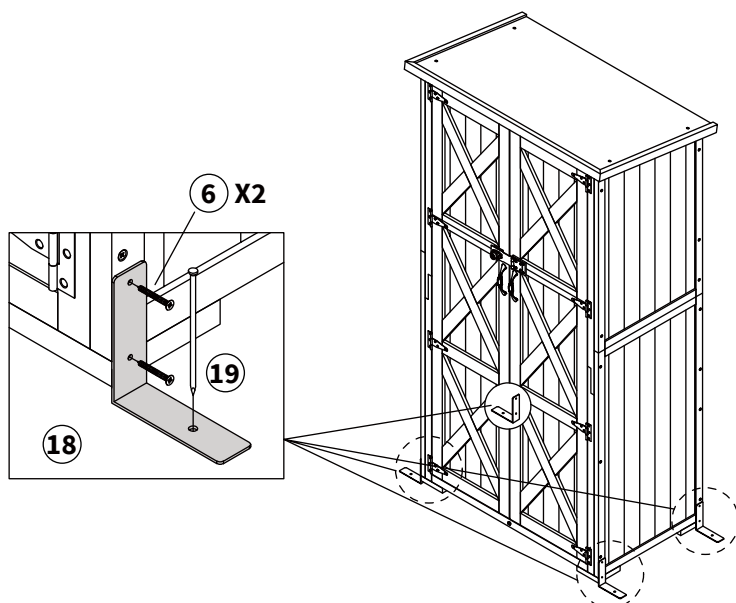


STEP 24

		✓
		✓
		✓

!
The parts marked with ✓ are required for this installation step.

⑳ x2

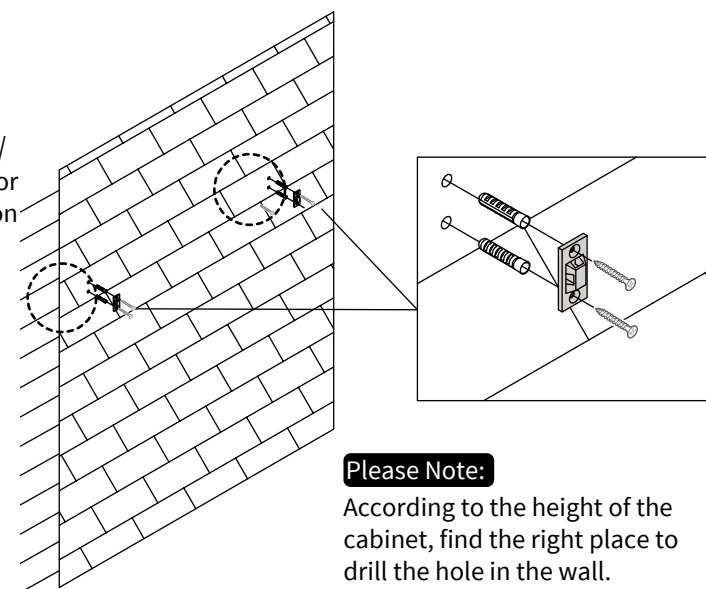










Please Note:



According to the height of the cabinet, find the right place to drill the hole in the wall.

VI . INSTALLATION INSTRUCTION

STEP 25





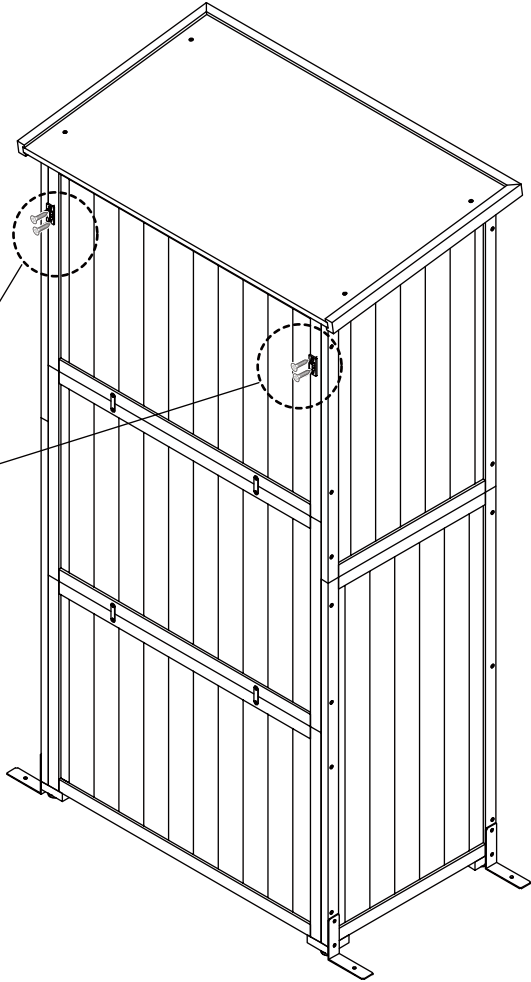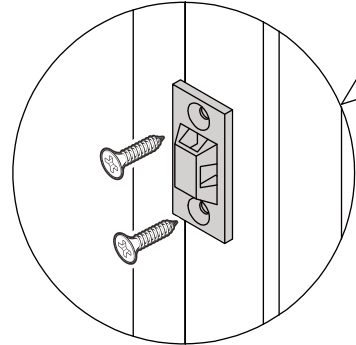




		
		✓
		
		
		✓

⚠ The parts marked with ✓ are required for this installation step.





20 x2

STEP 26

		✓
		
		
		
		

⚠ The parts marked with ✓ are required for this installation step.

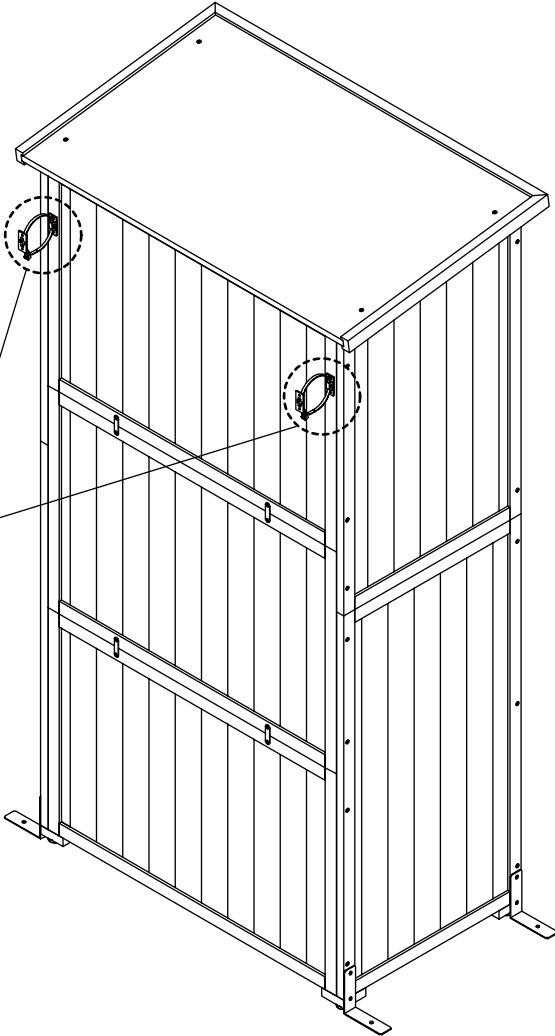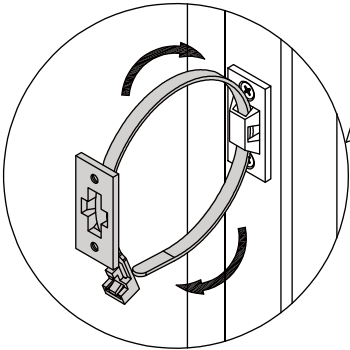

20 x2

VII . WARRANTY

Wood	1 Year
Hardware	6 months

Limitations Applicable to All Warranties

All warranties begin on the date of delivery.

All warranties are to the original purchaser

from MCombo /ExacMe ONLY.

WARRANTY DETAIL EXPLANATION

- MCombo will replace the defective parts or send a replacement item provided that the warranty parts have not been subjected to misuse, abuse, or improper service by the consumer, for example, damaged part arising in consequence of negligence or improper operation.

- Exclusions also include components with damage caused by:

Contamination

Abuse, misuse, accident or negligence

Commercial use, or use other than normal

Improper operation maintenance, or storage

- MCombo will pay standard shipping rates on all warranted parts for the first year. We can also sell you the replacement part for a discount price when your item is out of warranty policy.

VIII . RETURN/REPLACEMENT POLICY

MCOMBO: All items come with a 30-day return/replace policy during this time we will cover the shipping cost of return and replacement for a defective and damaged item, and provide pre-paid return label or pick-up service for customer's convenience.

Note: Please disassemble the item before you return it, otherwise there will be a huge cost as oversized and it could even exceed your order amount.

Please do not purchase return labels for a damaged defective item by yourself.

If you have any problem to return the item please contact us immediately we will do our best to help you.

MCombo is not responsible for the returns that the customer bought by mistake or changed their mind and other non-quality issues. But we can help customers arrange pick-up service at a reasonable price.

Note: The customer is responsible for freight costs unless the item is defective items returned due to being refused delivery by the customer or deemed undeliverable by freight carrier are subject to fees for a 20% restocking fee.

IX . CARE AND MAINTENANCE

- We recommend covering the product under extreme weather outdoors.
- Due to the characteristics of wood and the gap between the boards, in order to prolong the service life of the product, we recommend that you regularly coat a waterproof oil and sealant on the product.

MCombo®