


CHZZ001 36-Phone Storage Cabinet

CHZZ002 36-Phone Storage Cabinet with Wall Mount Kit User Instructions

PARTS KEY:

Included with Cabinet

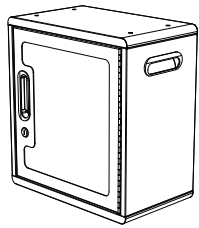

A x 1


Pre-Assembled Cabinet with
Foam Insert



B x 2

Door Key

Included with Wall Mount Bracket (CHZZ002 Only)

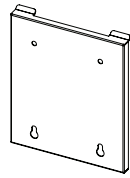

C x 1

Wall-Mount Plate



D x 4

ST4.8 x 39mm Pan Head
Self-Tapping Screw



E x 4

M5 Flat Washer



F x 4


D8 x 40mm Expanding
Drywall Anchor




G x 2

M5 x 12mm
Pan Head Screw

Tools Required




Screwdriver
Phillips Head

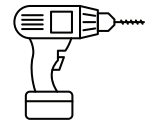


Drill
with 5/16" Drill Bit

WALL-MOUNT INSTRUCTIONS (CHZZ002 Only)


- 1** Hold the wall-mount plate (C) in desired position on the wall, mark the center of the four mounting holes.

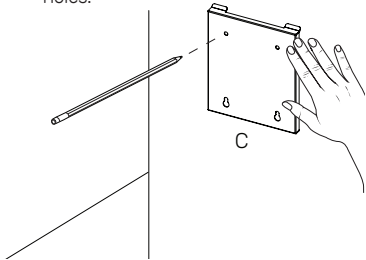


- 2** Pre-drill four 5/16" holes and insert drywall anchors (F).

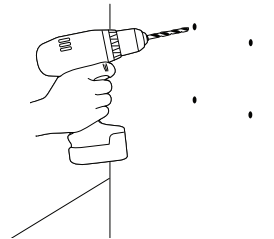


- 3** Once drywall anchors (F) have been inserted, attach the wall-mount plate (C) to the wall using four washers (E) and four self-tapping screws (D).

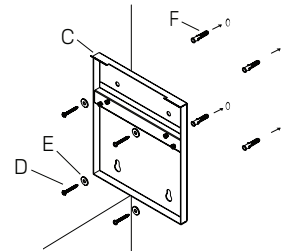


- 4** Carefully remove the foam insert from the cabinet (A). **TIP:** Pull GENTLY while wiggling the insert up and down.

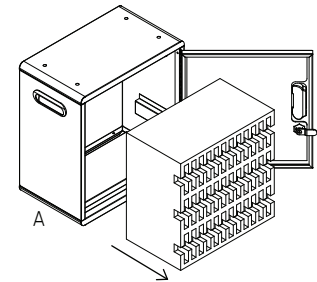

- 5** Tilt cabinet (A) and hang onto wall-mount plate (C).

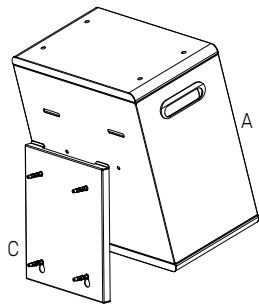

- 6** Secure cabinet (A) to wall-mount plate (C) from the inside of the locker using two pan head screws (G).

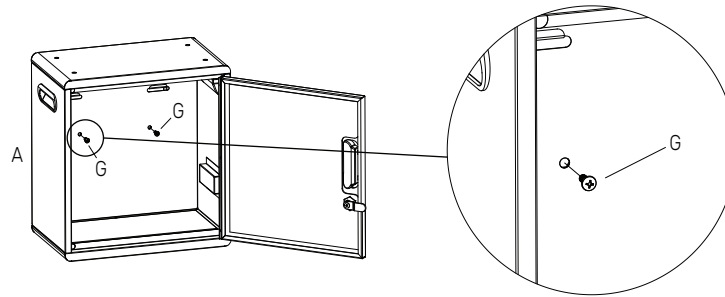

- 7** Carefully replace the foam insert inside the cabinet.

