



SKU:SF001067

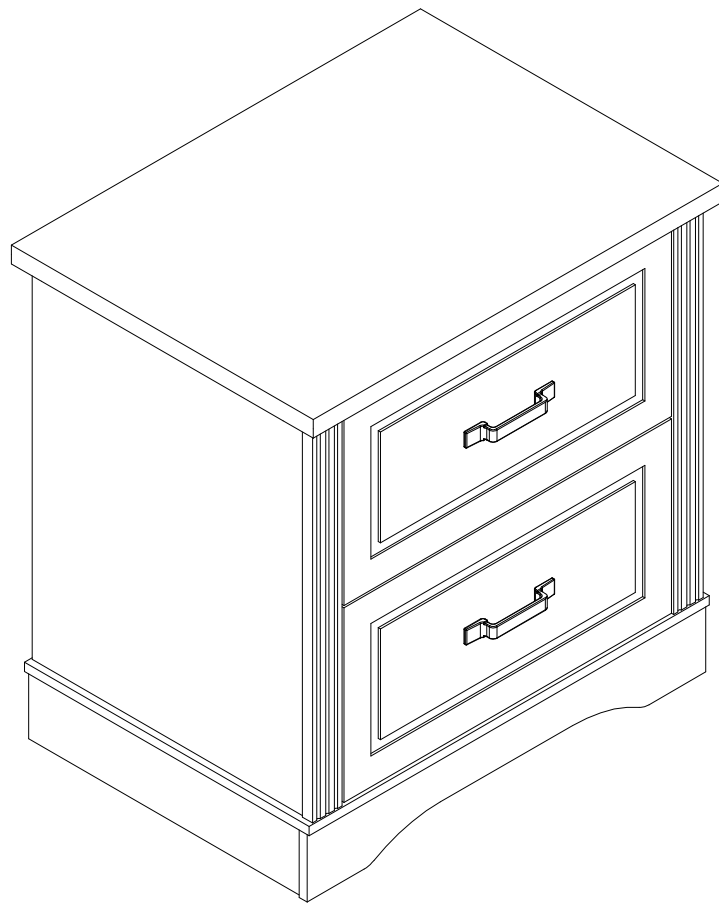

ASSEMBLY INSTRUCTIONS

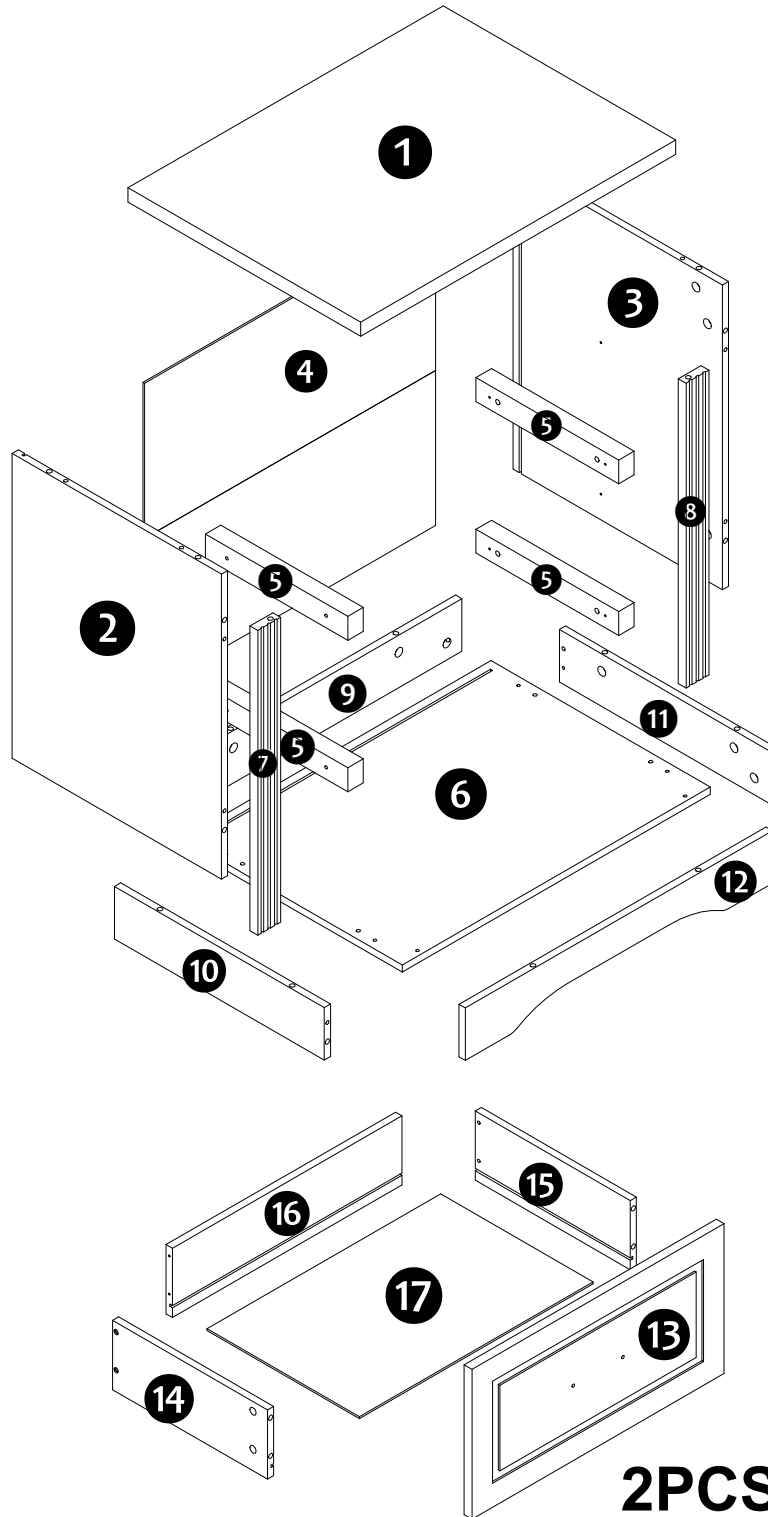

Trouble Shooting

Missing/Damaged pieces)
Wrong size and installation issues



Contact us with your problem, pic,
number and gty to the "Contact seller"
button in the detail page of your order




Respond with 24 hours to solve issue

Before You Start


















1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight.
Failure to do so may result in stripping the screw

Cam Lock Fastening System

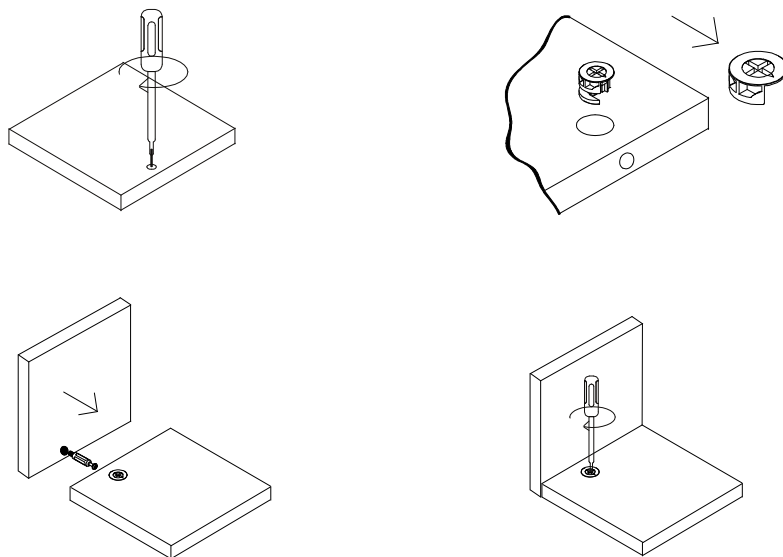






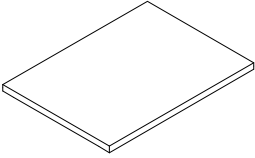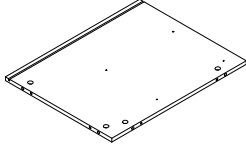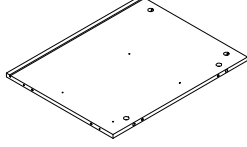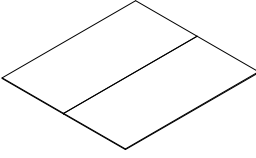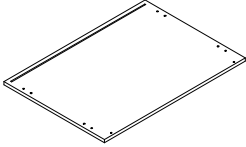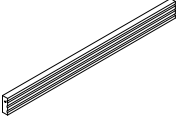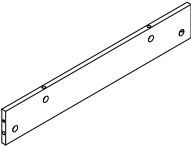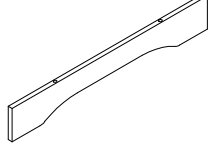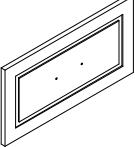


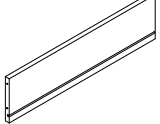
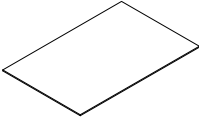


This Cam Lock Fastening System will be used throughout the assembly process












Parts List

			
1 1PC	2 1PC	3 1PC	4 1PC
			
5 4PCS	6 1PC	7 1PC	8 1PC
			
9 1PC	10 1PC	11 1PC	12 1PC
			
13 2PCS	14 2PCS	15 2PCS	16 2PCS
			
17 2PCS			




Hardware List

	 $\phi 12 \times 9 \text{mm}$	 $M6 \times 30 \text{mm}$	 $\text{Ø}4 \times 40 \text{mm}$
A	30PCS	B	30PCS
	 $M3 \times 12 \text{mm}$	 $M4 \times 18 \text{mm}$	
E	2PCS	F	16PCS
 300mm	 300mm	 300mm	 300mm
I	2PCS	J	2PCS
 $M3 \times 14 \text{mm}$	 $\text{Ø}4 \times 30 \text{mm}$		
M	4PCS	N	8PCS










STEP 1

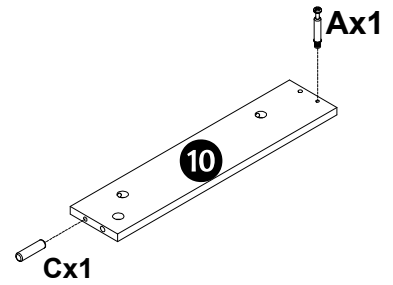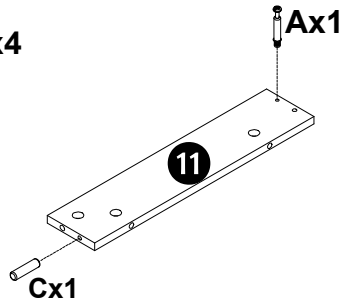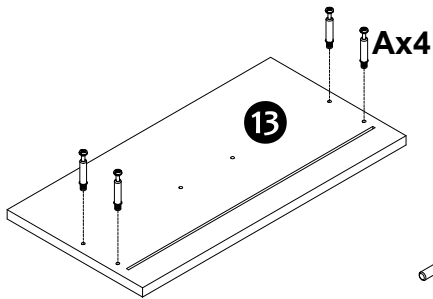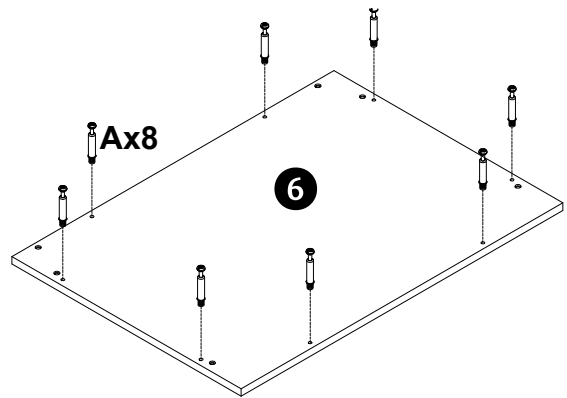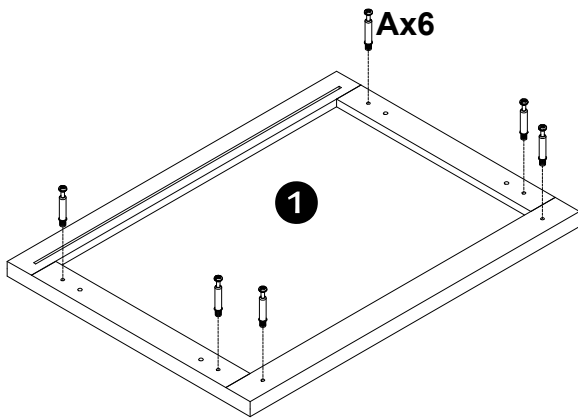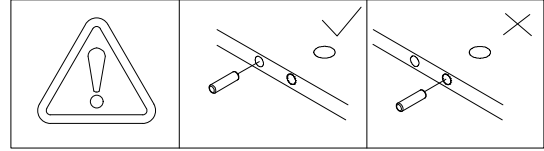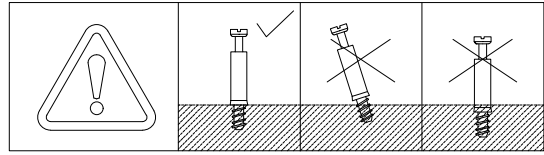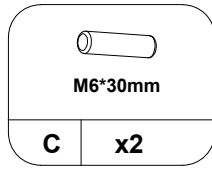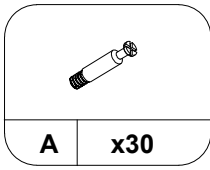






x2PCS

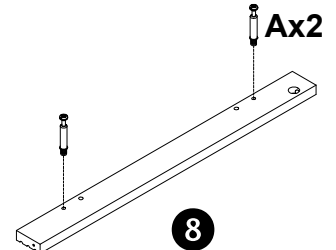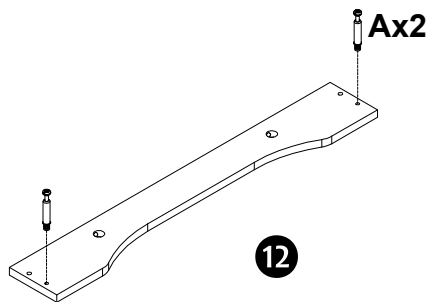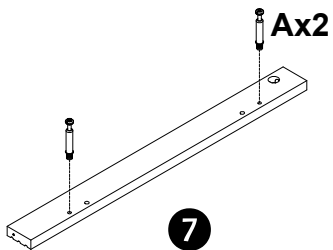





STEP 2

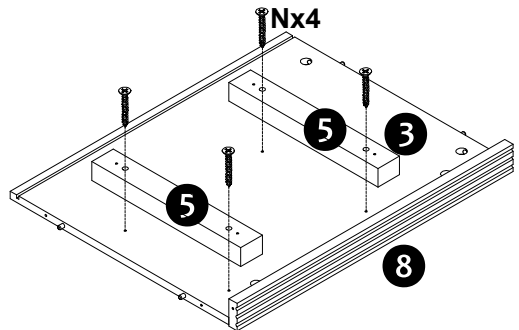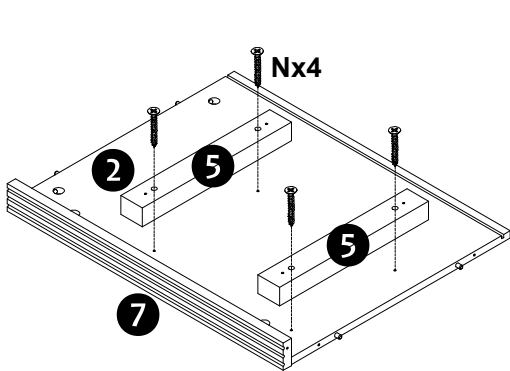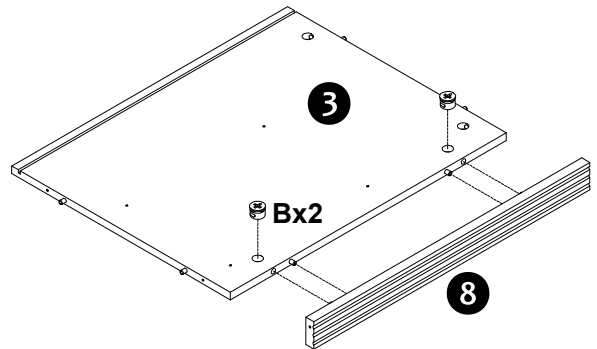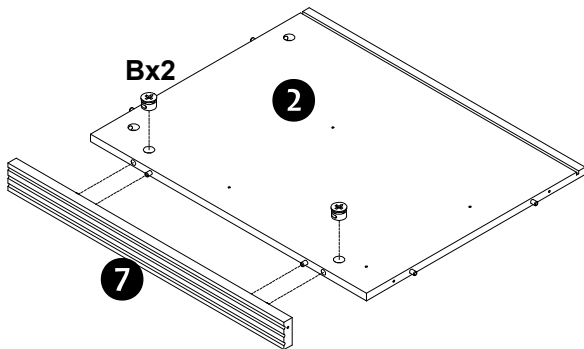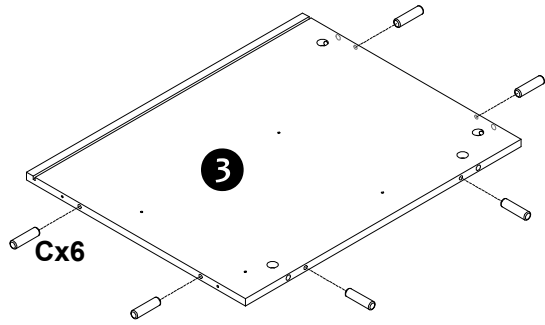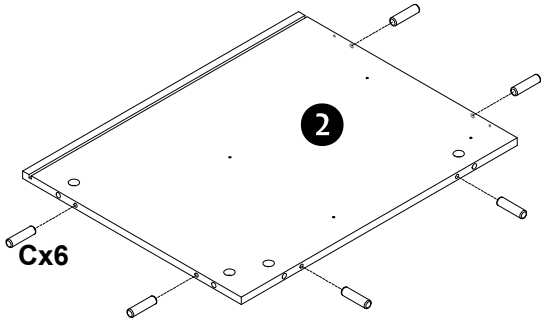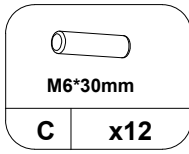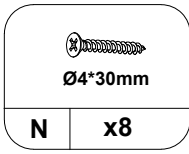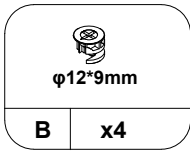






STEP 3

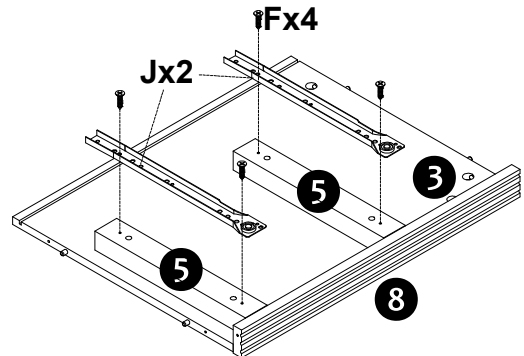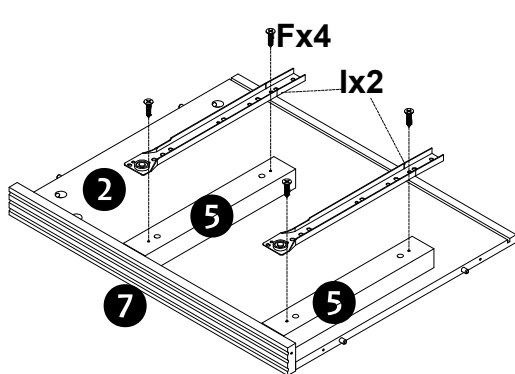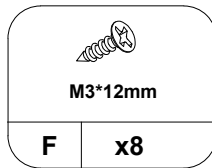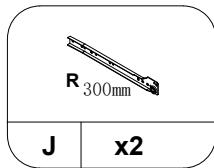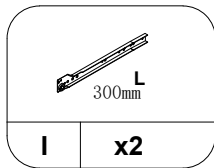


STEP 4

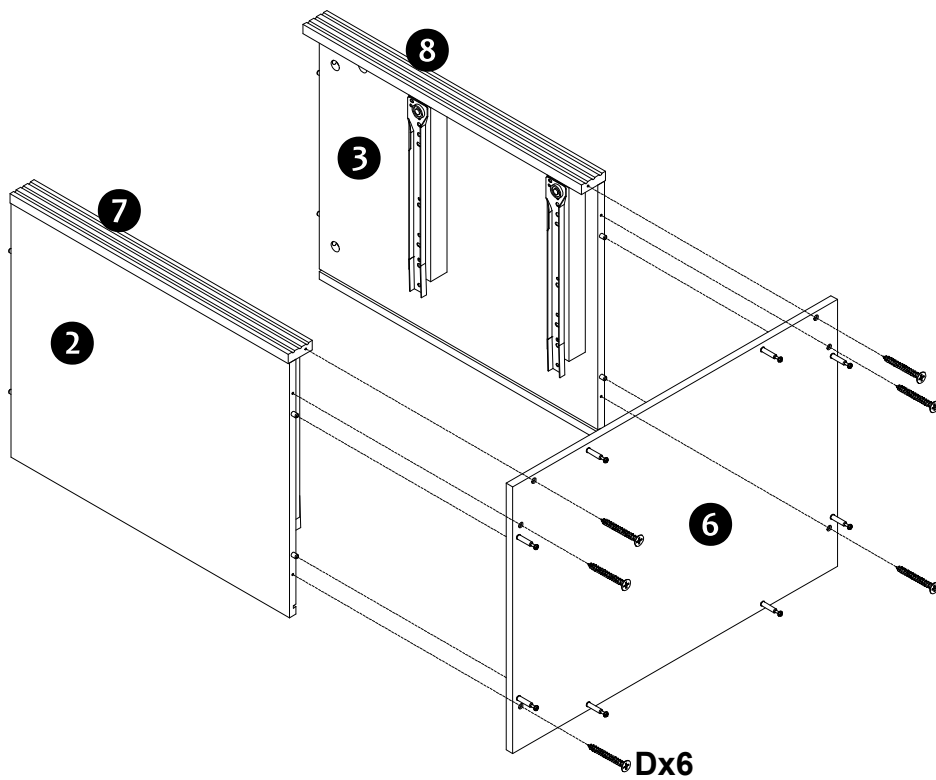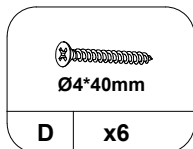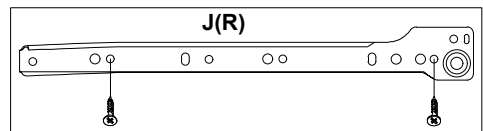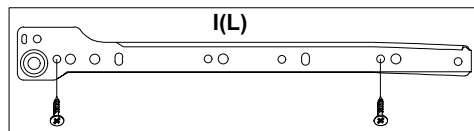



STEP 5

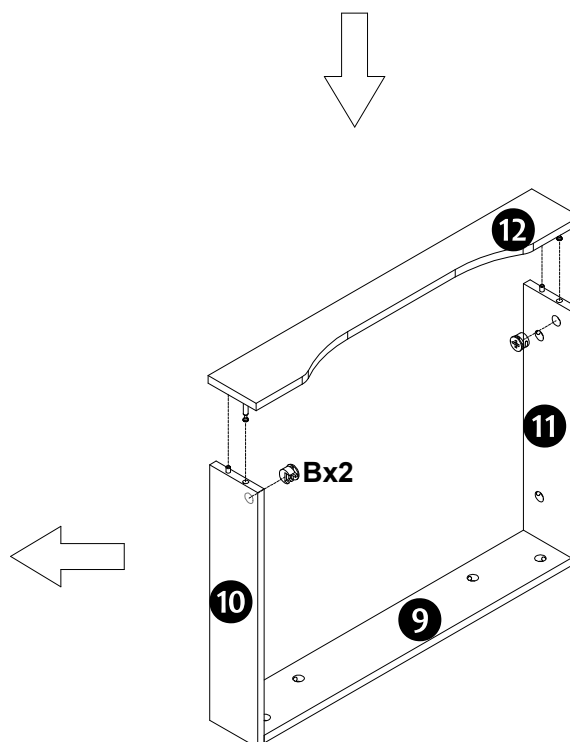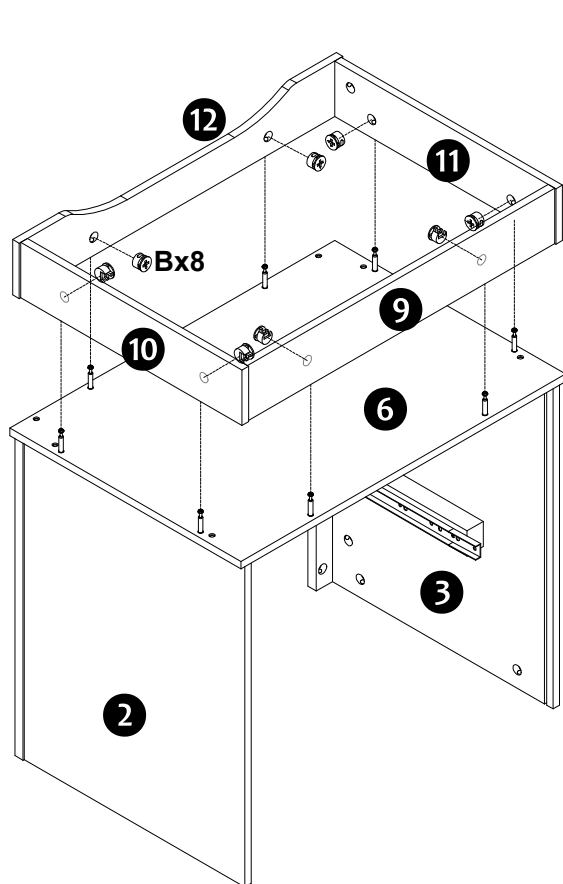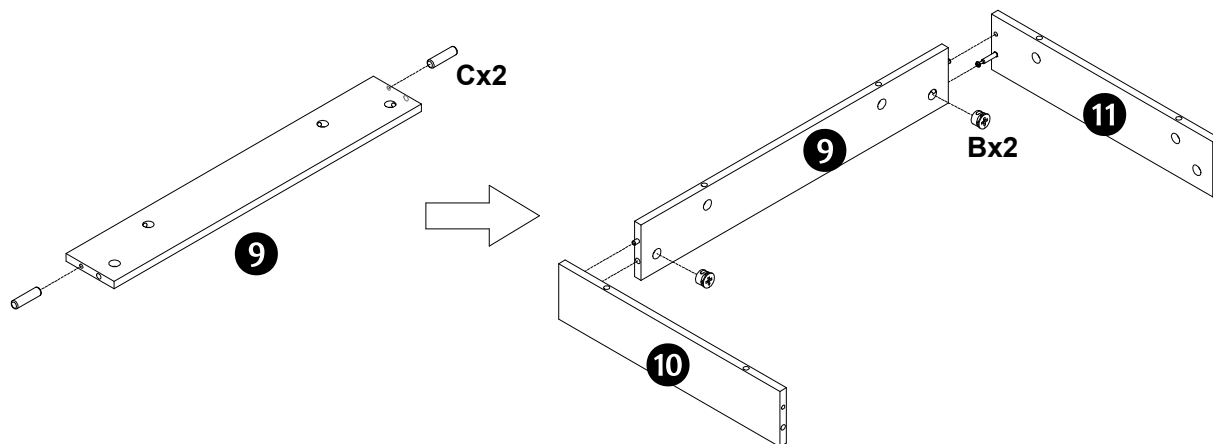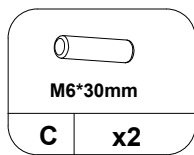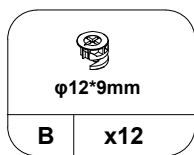













STEP 6

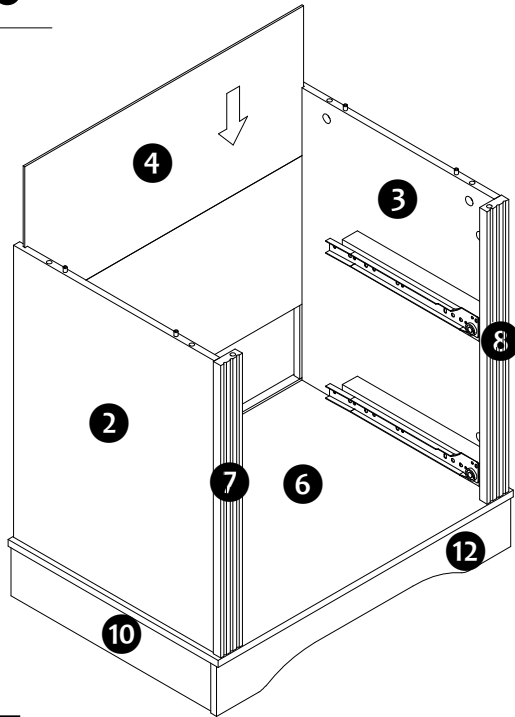




STEP 7

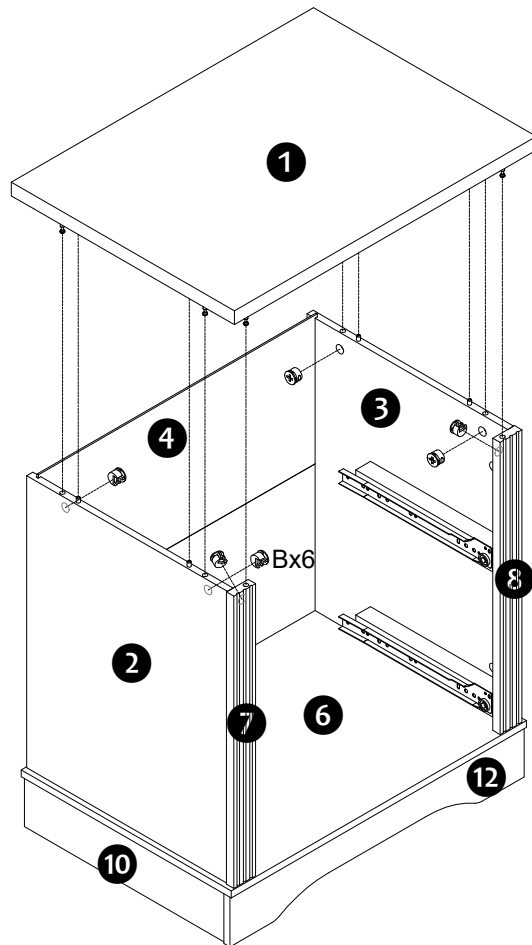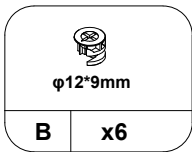

STEP 7

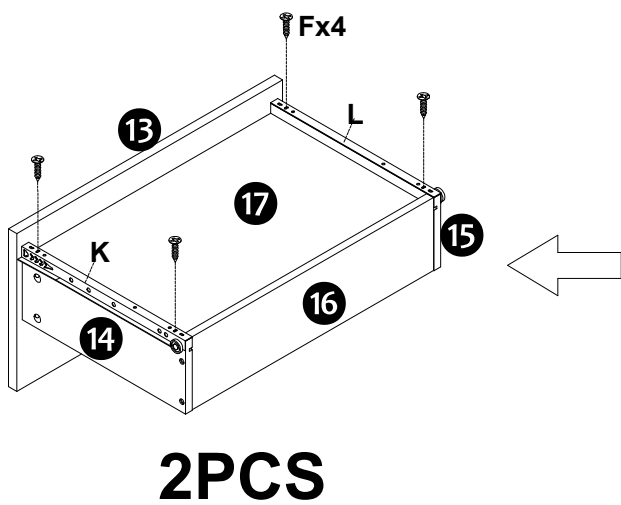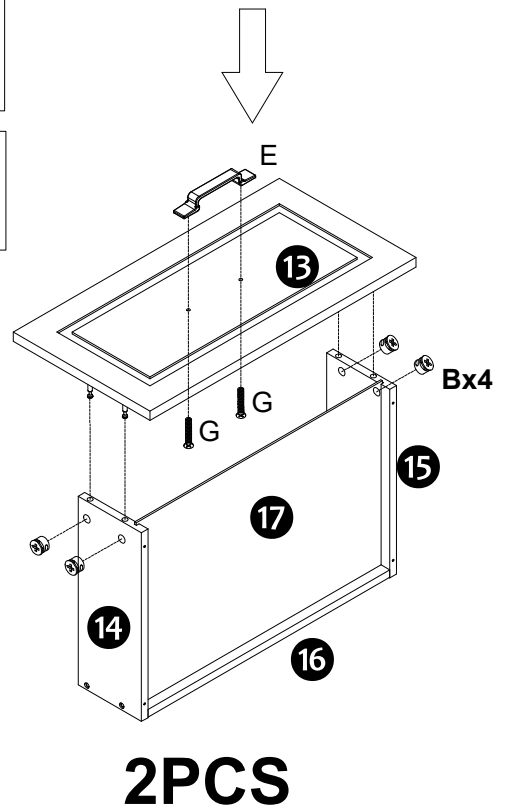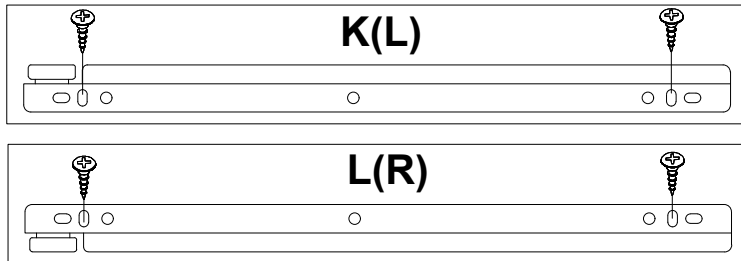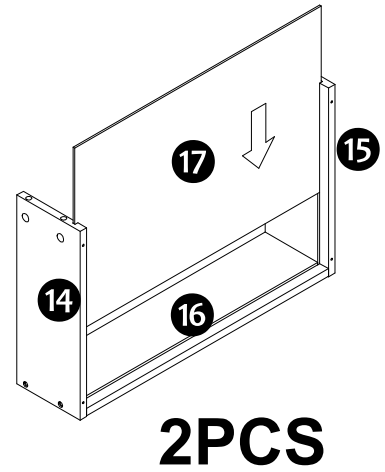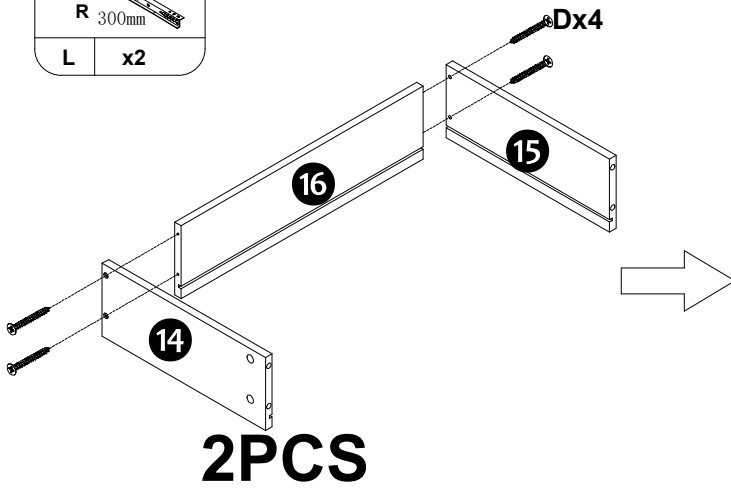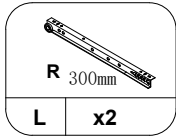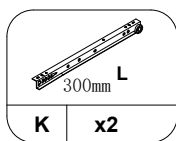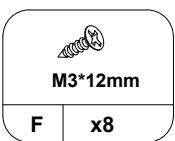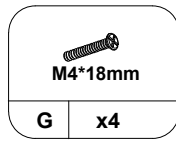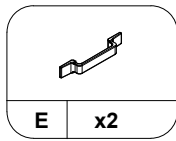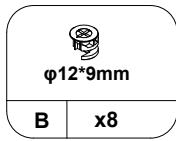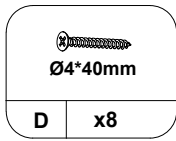

STEP 8

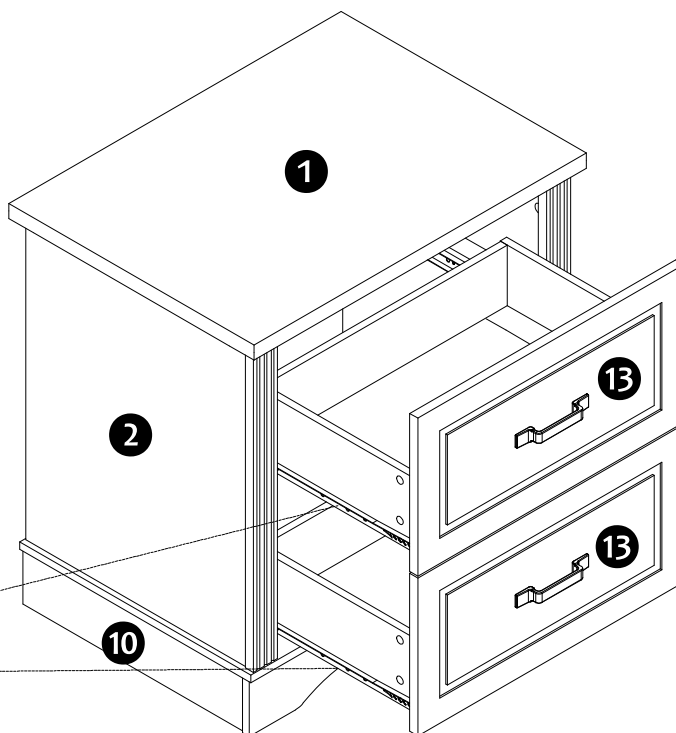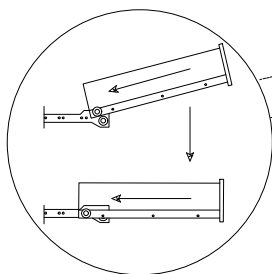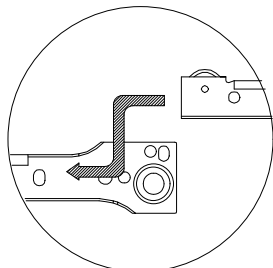

STEP 9

