


ASSEMBLY INSTRUCTIONS

Storage Cabinet

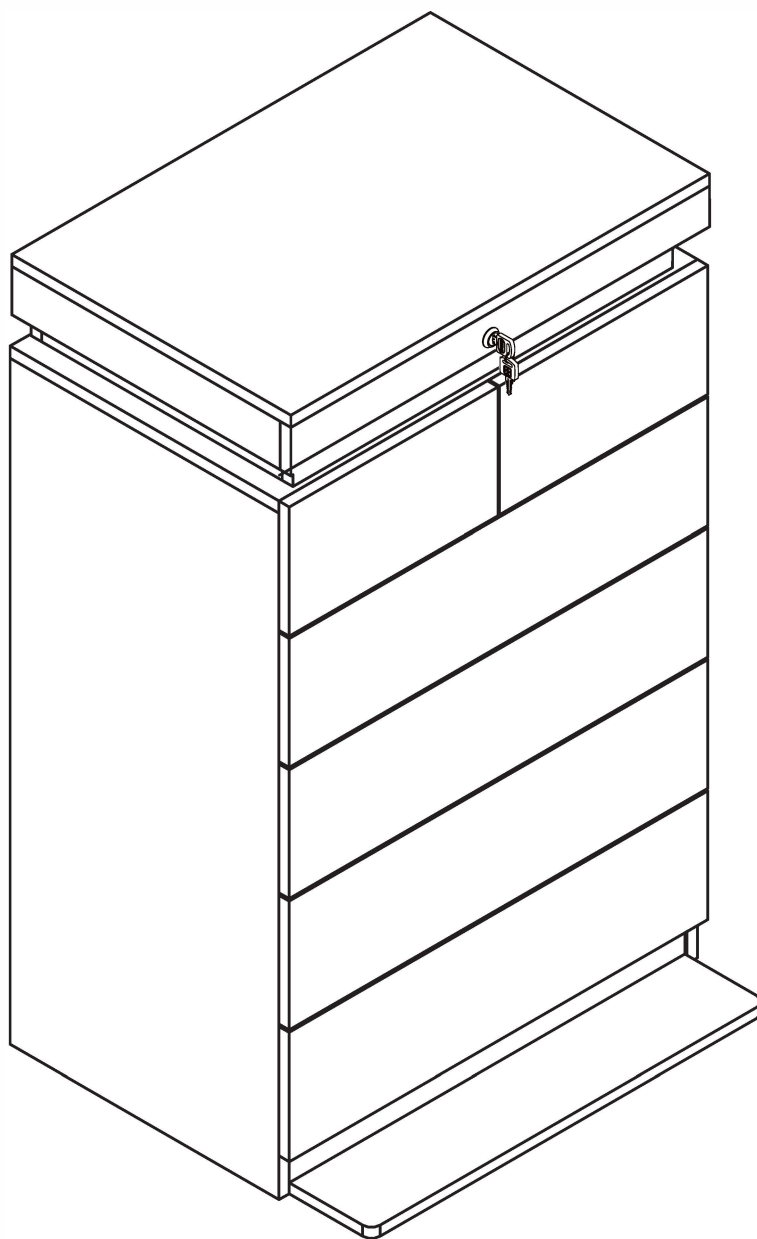

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damaged parts or hardware. Please also tell us your "Order ID", We will solve for you as soon as possible.

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. Keep all hardware parts out of reach of children.
2. Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals..

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.










Part List

Please check if all the pieces listed below are received

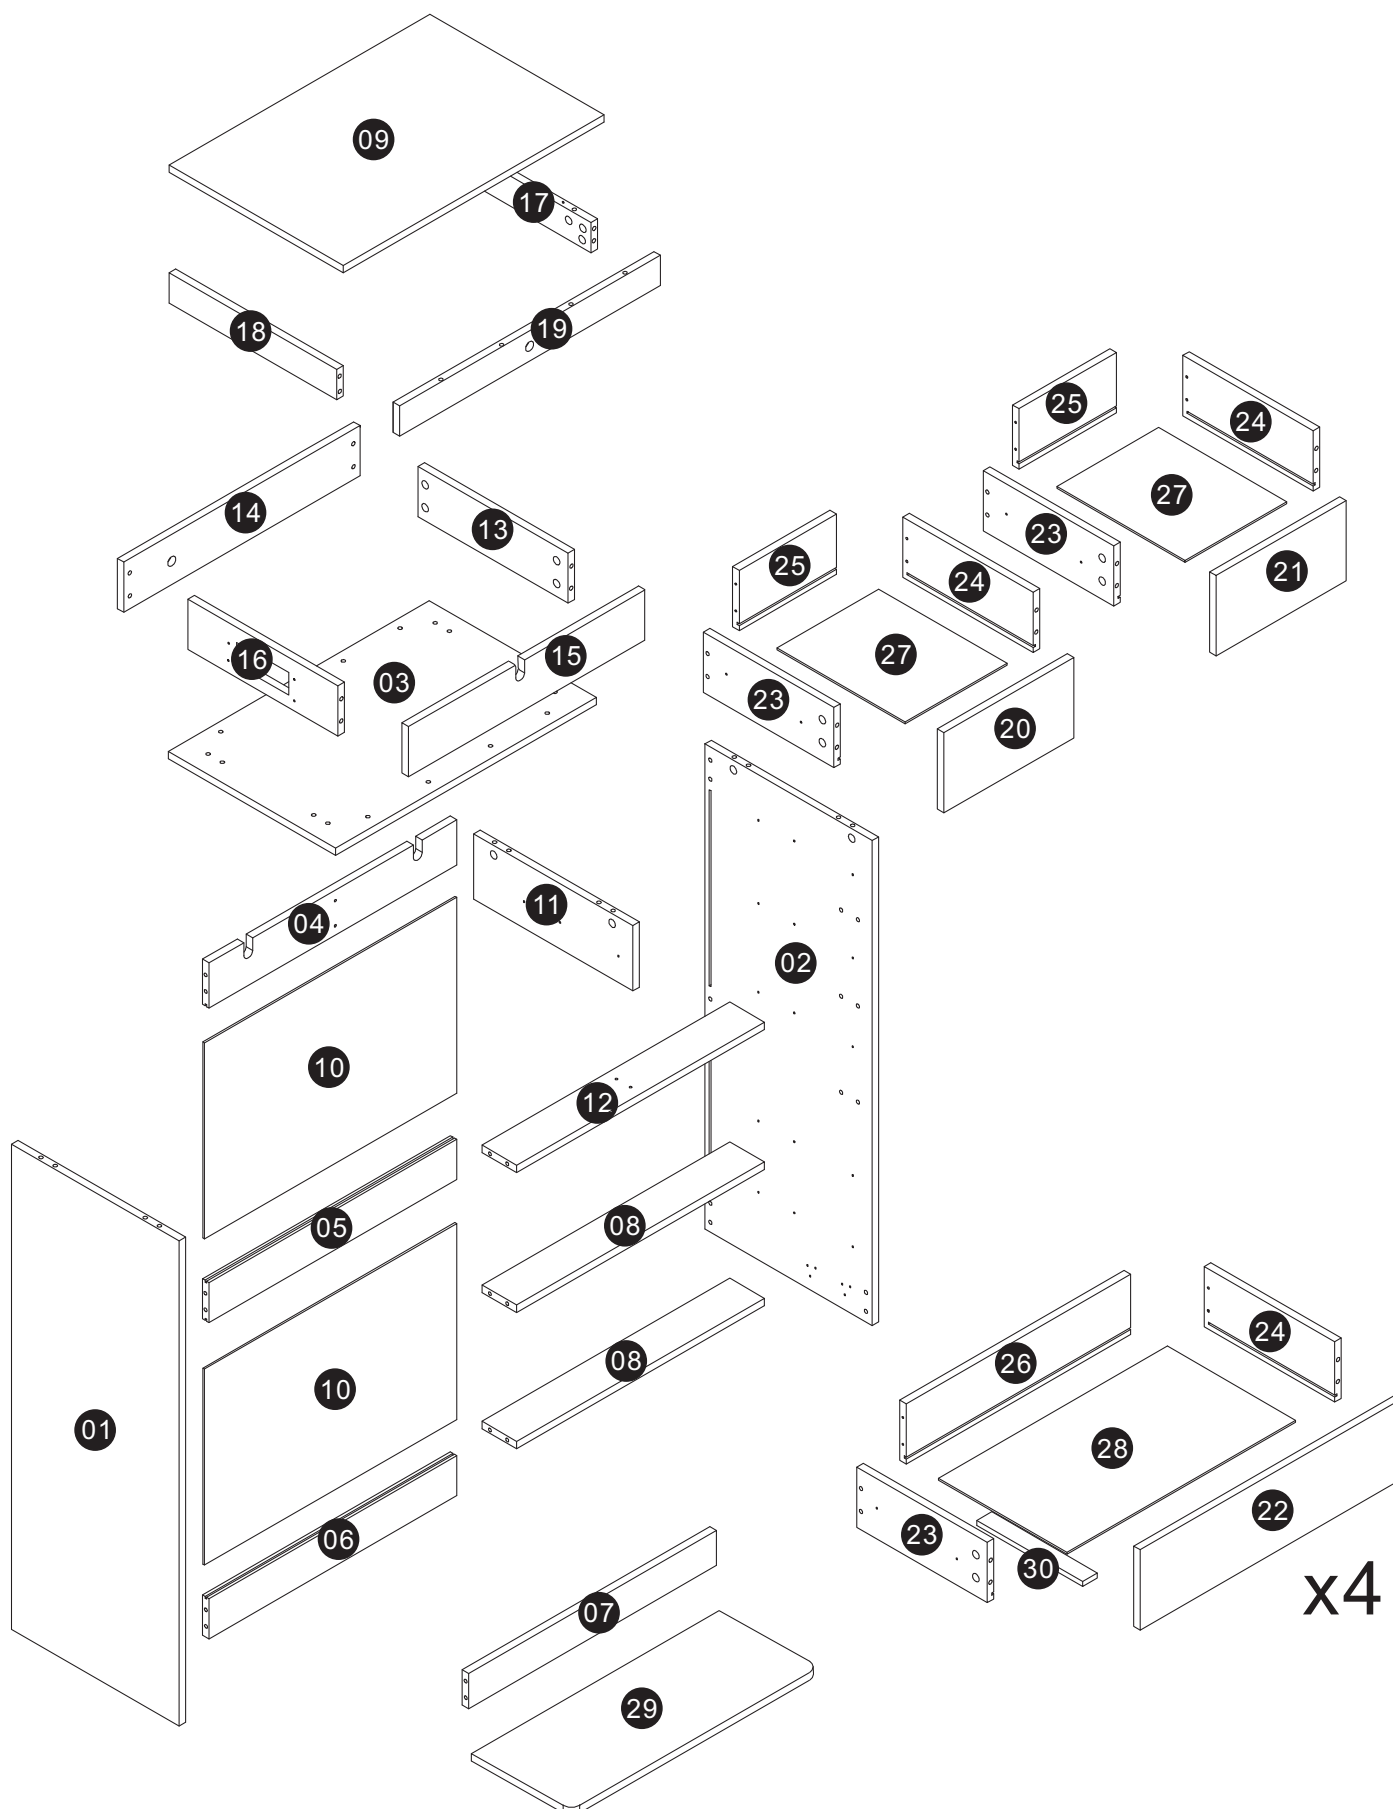

Hardware List

Please check if all the piece listed bellow are received

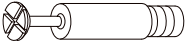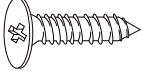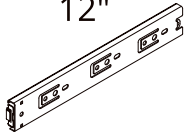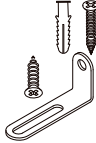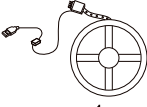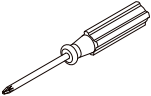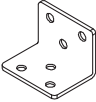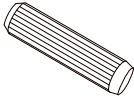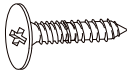A  Cam Bolt Ø6×35mm Qty: 84	B  Cam Lock Ø15×10mm Qty: 84	C  Screw Ø3×12mm Qty: 112	D  Screw Ø4×25mm Qty: 42	E 12"  Slide Rail Qty: 14
G  Anti-tip Accessories Qty: 2	H  1pc  1pc  4pcs LED strip			J  Plastic Wedge Qty: 12
K  Screwdriver Qty: 1	L  Metal Sheet Qty: 7	M  Wood Dowel Ø6×30mm Qty: 14	N  Screw Ø3×14mm Qty: 12	O  Lock Qty: 1

**ASSEMBLY
REQUIREMENTS**


4-5Hours
Assembly Time
(Approximate)

2 -Person Assembly




Tools Required (Not Provided):

Mark Pencil
Power Drill




How the knock down assembly system works

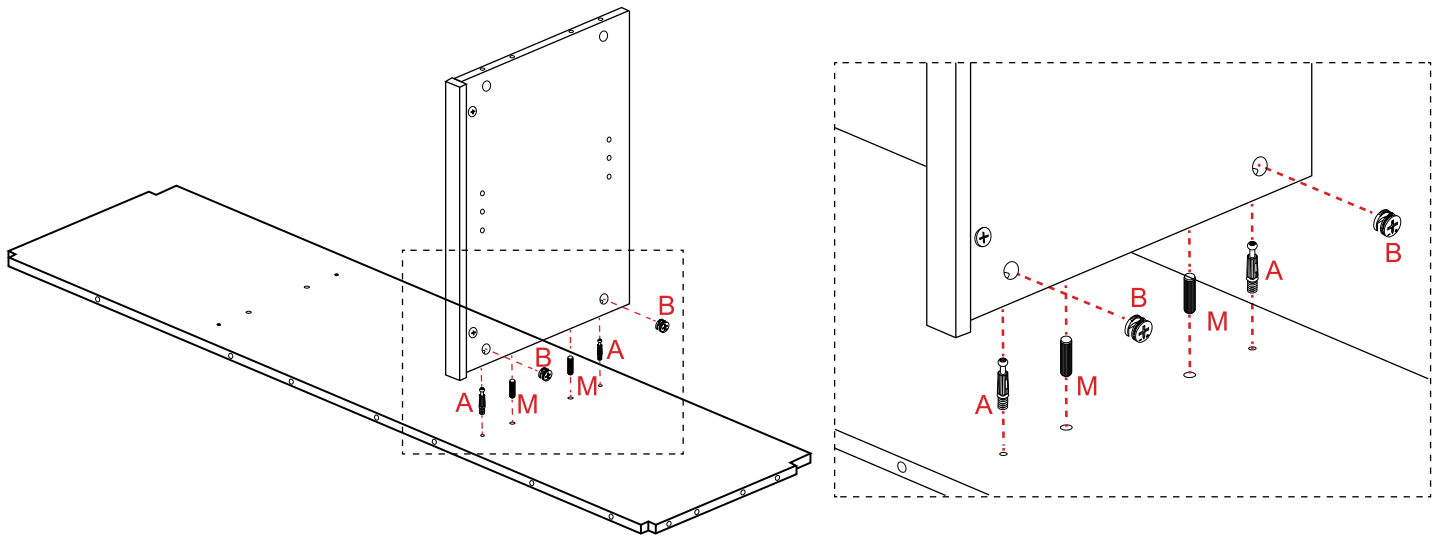


How to Install Wood Dowel


Insert the wood dowel (M) at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

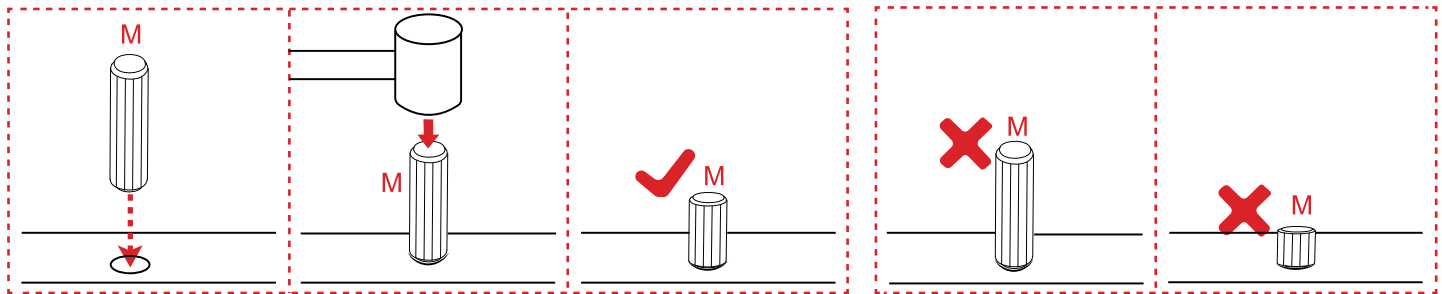

CAM LOCK SYSTEM OPERATION

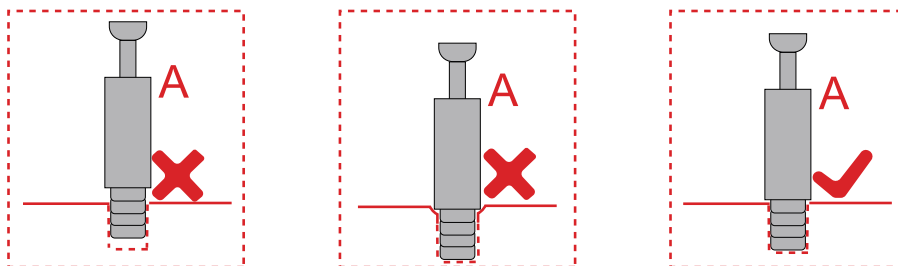

1. Screw the cam bolt (A) into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt (A) goes into the pre-drilled large hole on the end of panel for cam lock (B).
3. Insert the cam lock (B) into the pre-drilled large hole on the panel. Make sure the cross slot of cam lock (B) faces out (The arrow should point towards Screw No. A).
4. Rotate the cam lock (B) clockwise with a self-supplied phillips screwdriver to lock the cam bolt (A) in place (Rotate 100-180 degrees until tight).

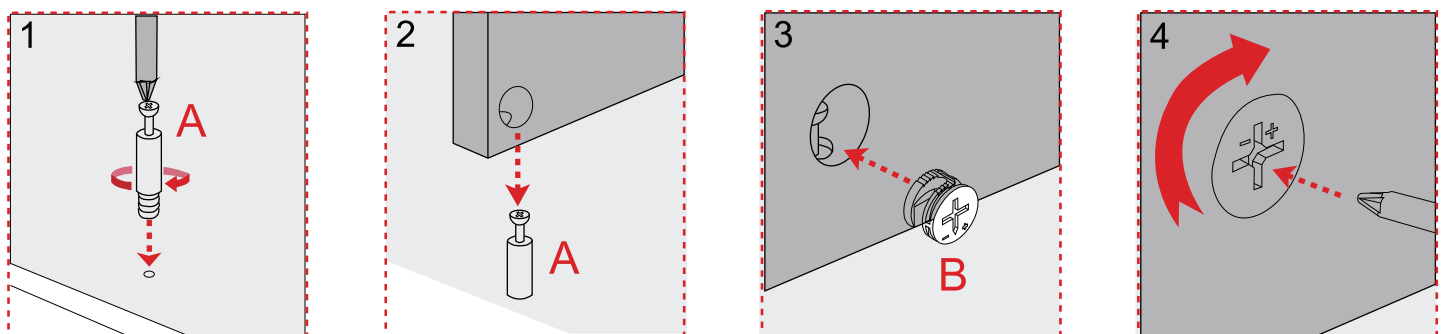





Hardware installation demonstration

- Before installing the drawer rails, you need to split rail No.E into outer rail No.E1 and inner rail No.E2

1.Place the rail No.E as shown in picture, Then Pull out the E2

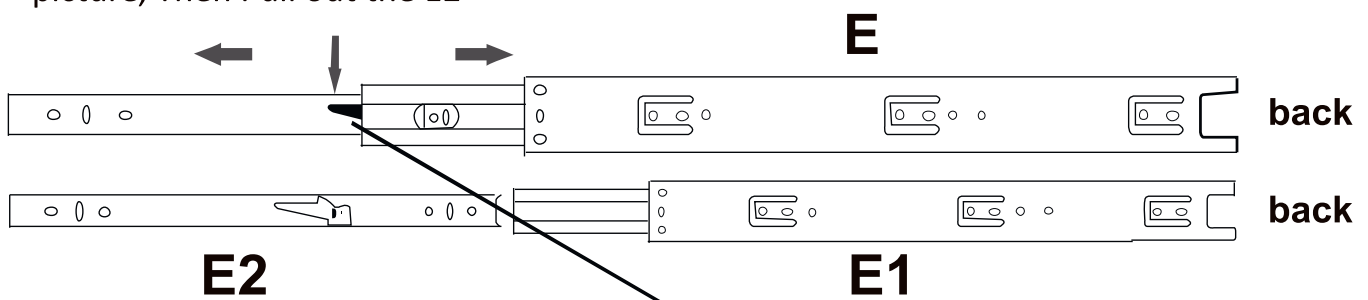


2.Find the latch position,press it and split.

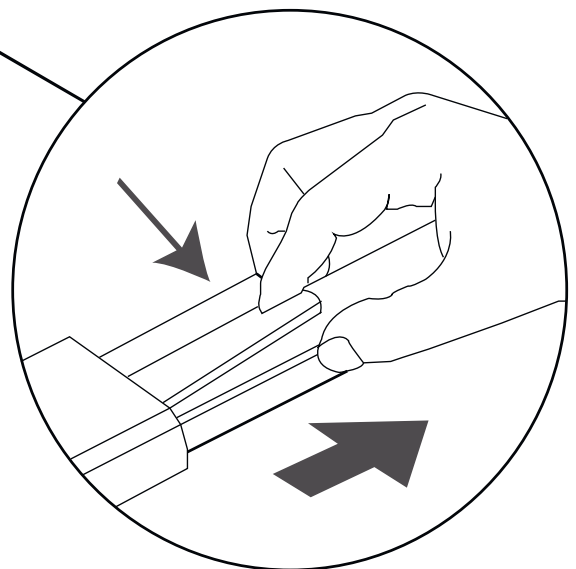

Warm Reminder:Press it and split


Step 1

I. Use screws (C) to attach the slide rail (E1) to panel (1).

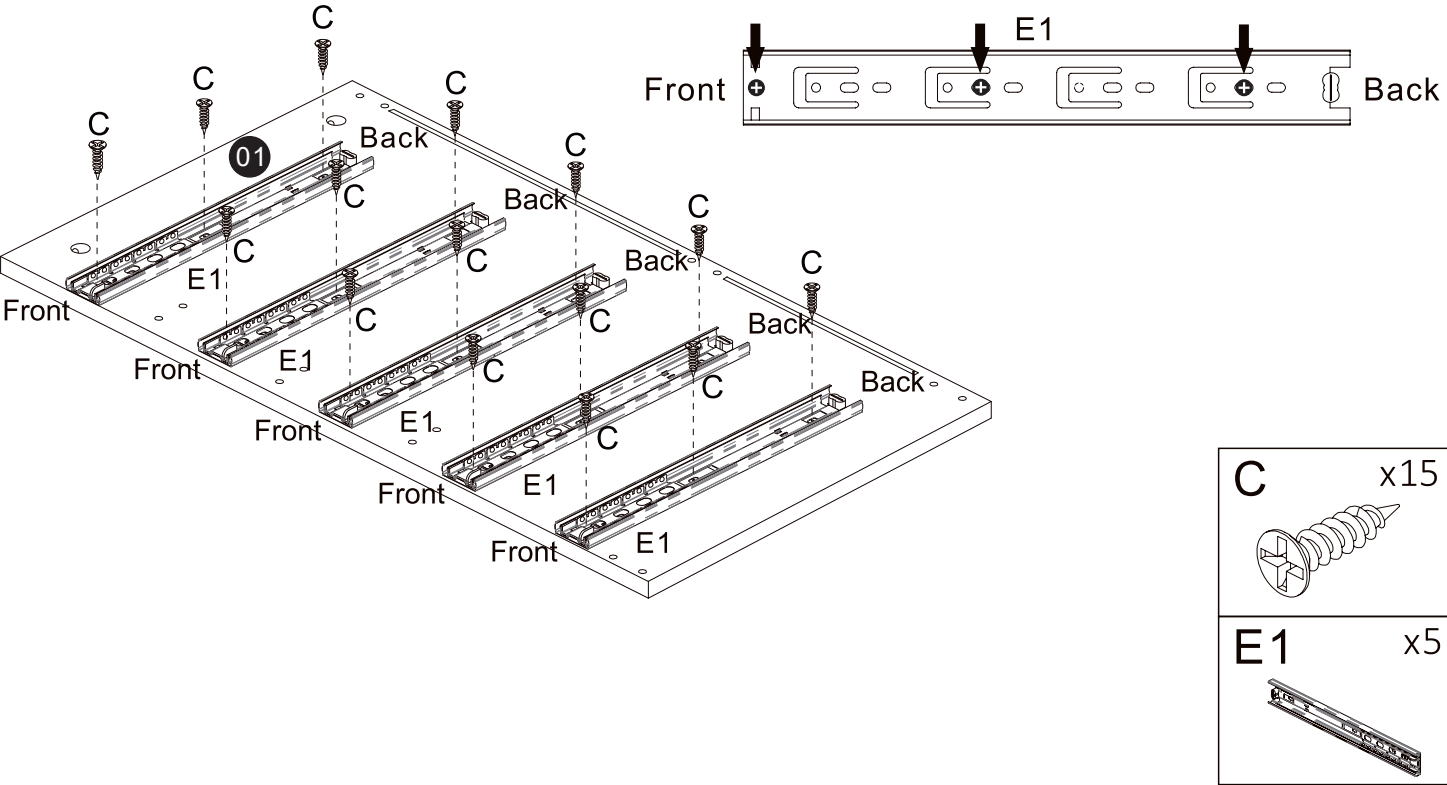

Step 2

I. Use screws (C) to attach the slide rail (E1) to panel (2).

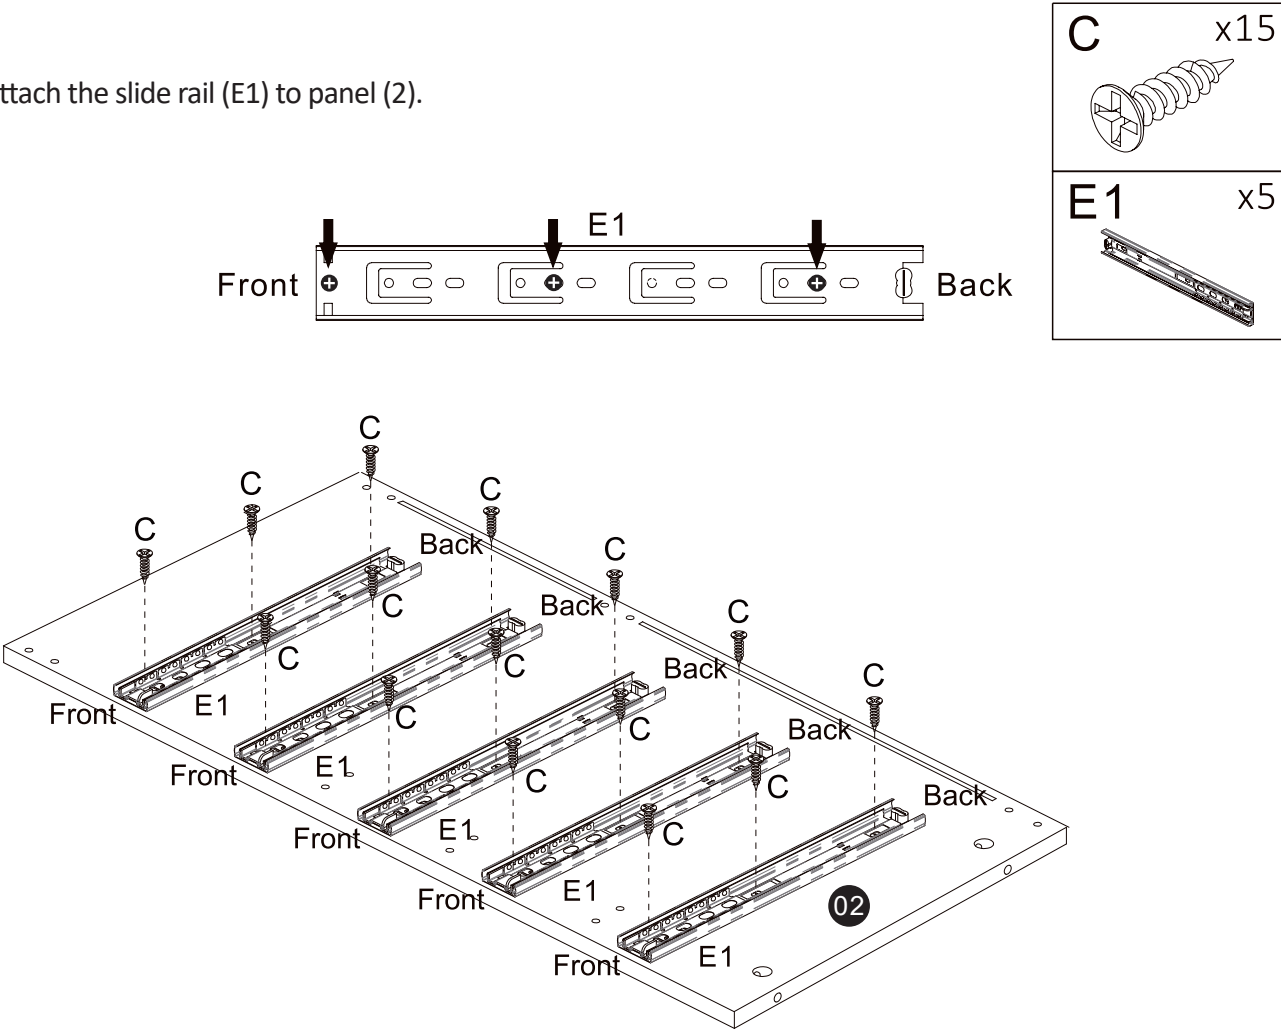

I. Use screws (C) to attach the slide rail (E1) to panel (11).

Diagram of a beam with three downward point loads. The beam is labeled "Back" on the left and "Front" on the right. The internal force diagrams show alternating positive and negative regions between the loads.

Note: The side with holes is the back


Back

11


E1

Front

Diagram illustrating the assembly of the front panel. The top part shows a side view of the front panel with three screws being inserted into the top edge. The bottom part shows a perspective view of the front panel being tilted at an 80-degree angle. Three screws, labeled 'C', are shown being inserted into the back of the front panel. A callout box shows a close-up of a screw 'C' and a part 'E1'.

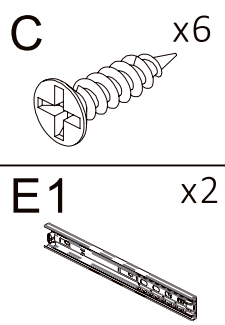



I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (1).

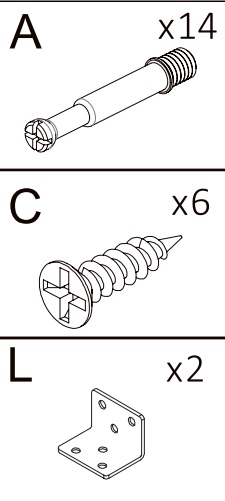

Step 5

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (2).



II. Use screws (C) to attach the metal sheet (L) to panel (2).

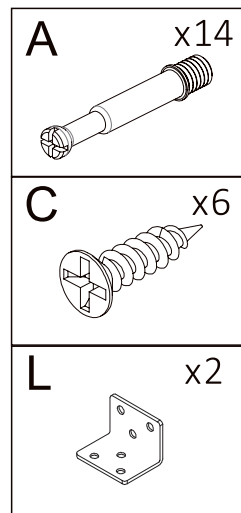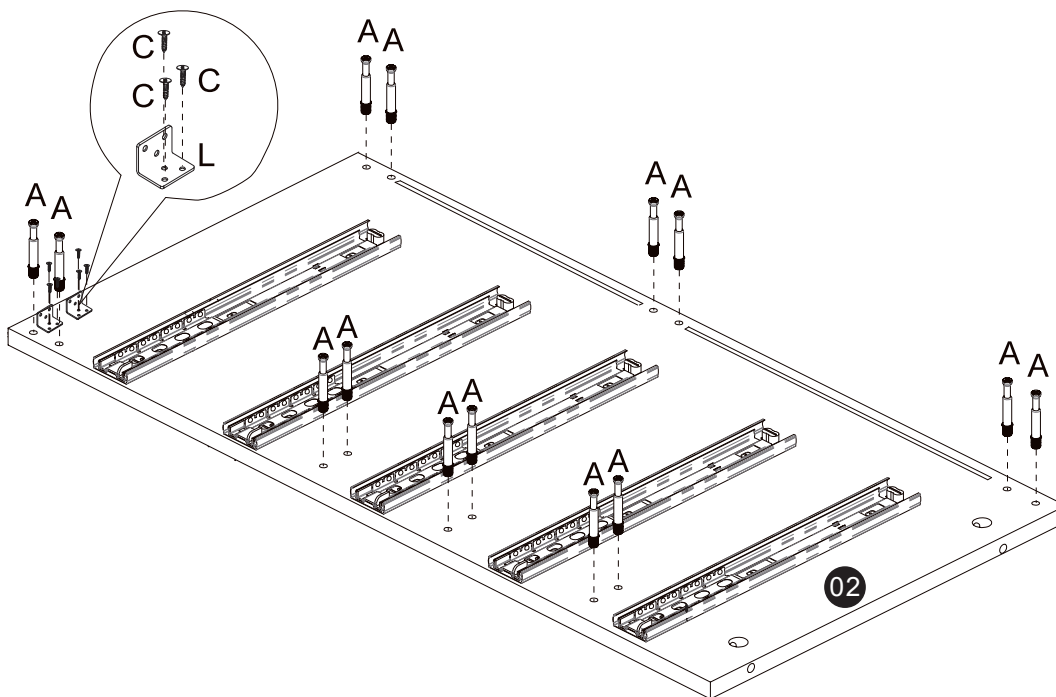

Step 6



I. Use screws (C) to attach the metal sheet (L) to panel (7).

II. As shown in the illustration, connect the panels (7、8、8 and 12) to panel (2), insert the cam lock (B) into the corresponding holes on panel (7、8、8 and 12), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

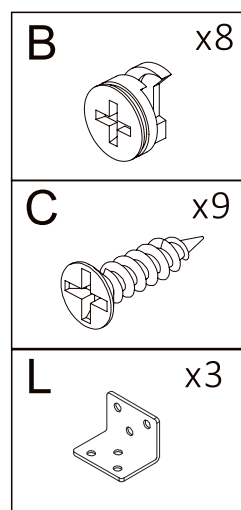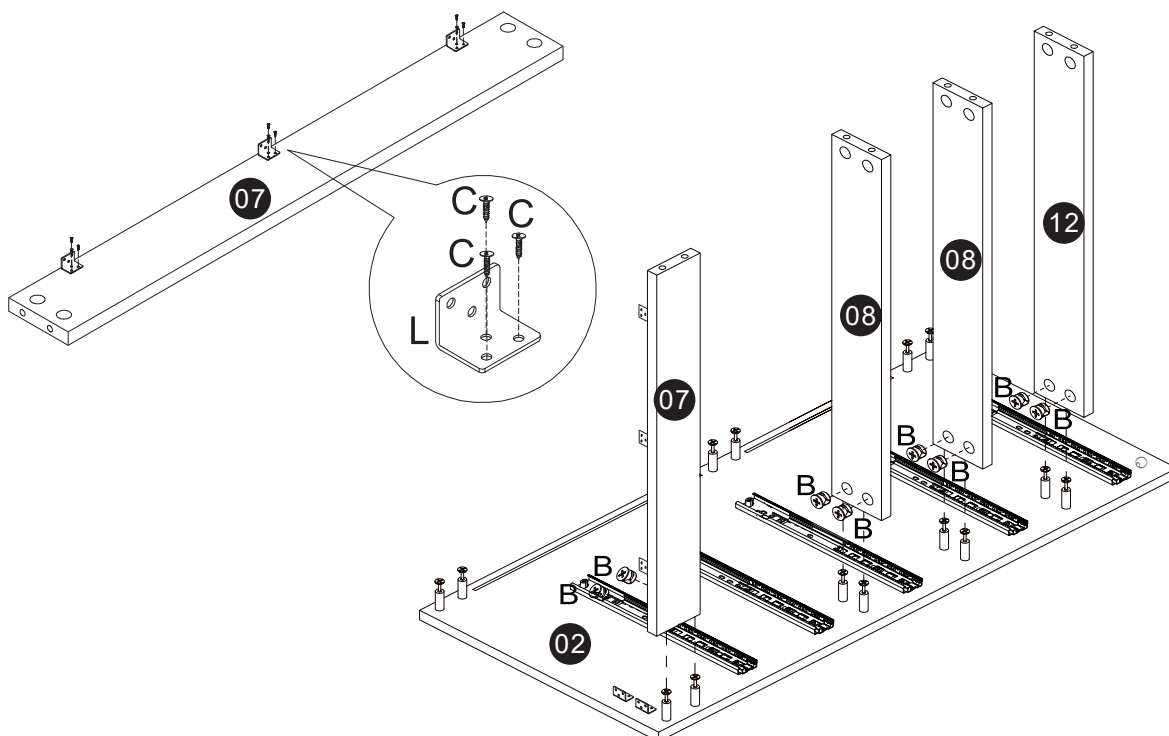


Step 7

I. As shown in the illustration, connect the panels (4、 5 and 6) to panel (2), insert the cam lock (B) into the corresponding holes on panel (4、 5 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

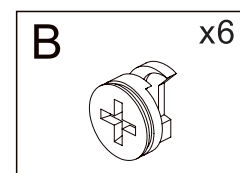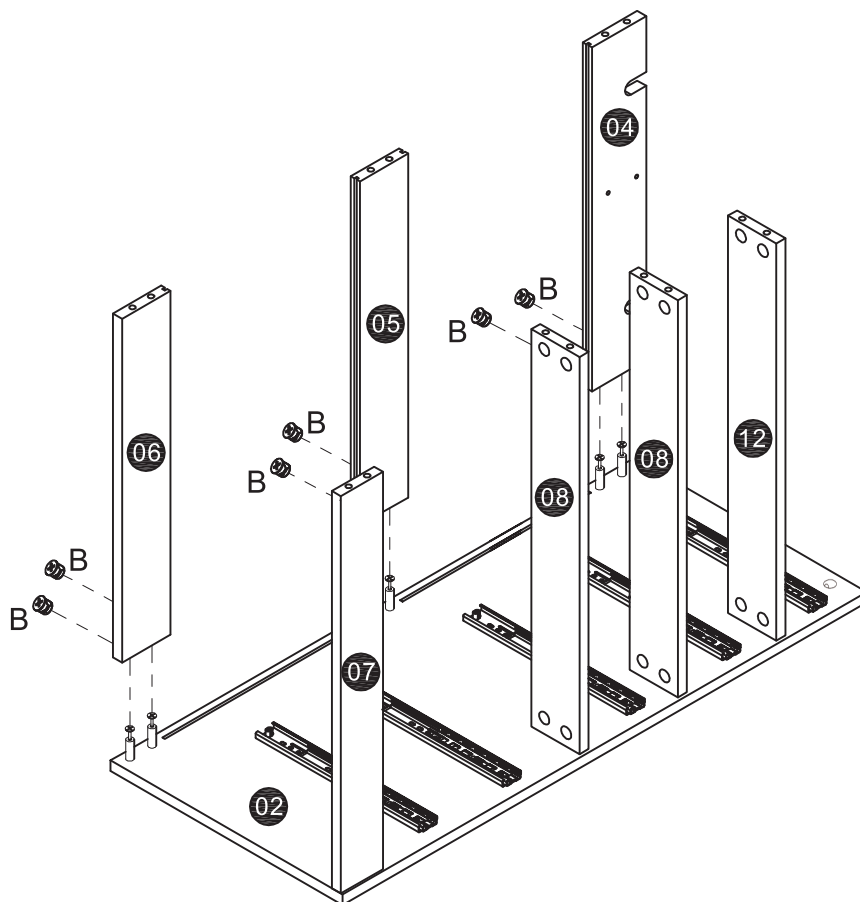



Step 8

I. Install panels (10 and 10) as per diagram and slide them into the grooves until they are fully seated.

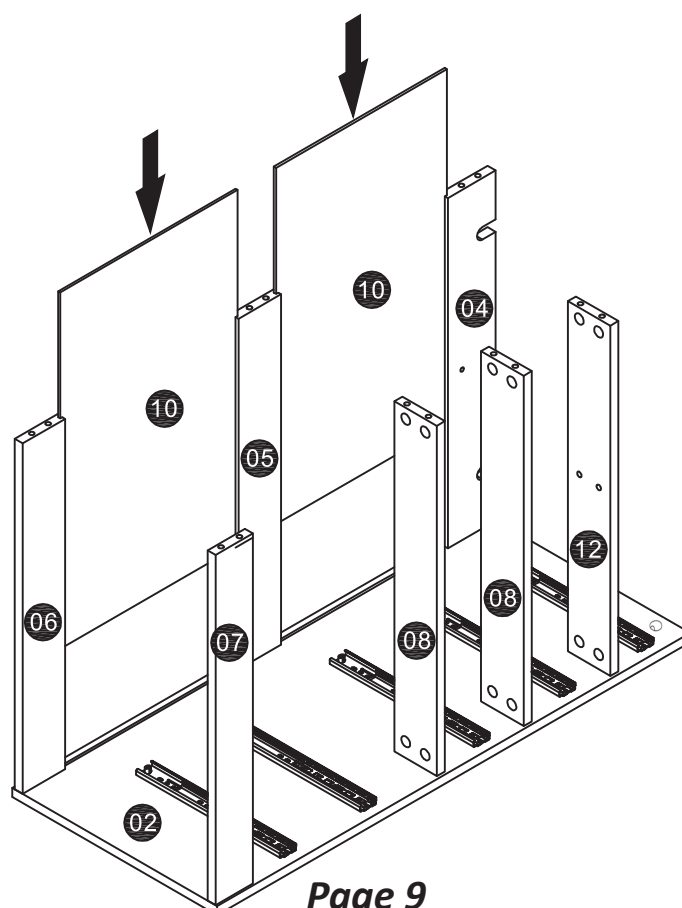




Step 9

I. As shown in the illustration, connect the panel (1) to panels (4、 5、 6、 7、 8、 8 and 12), insert the cam lock (B) into the corresponding holes on panel (4、 5、 6、 7、 8、 8 and 12), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

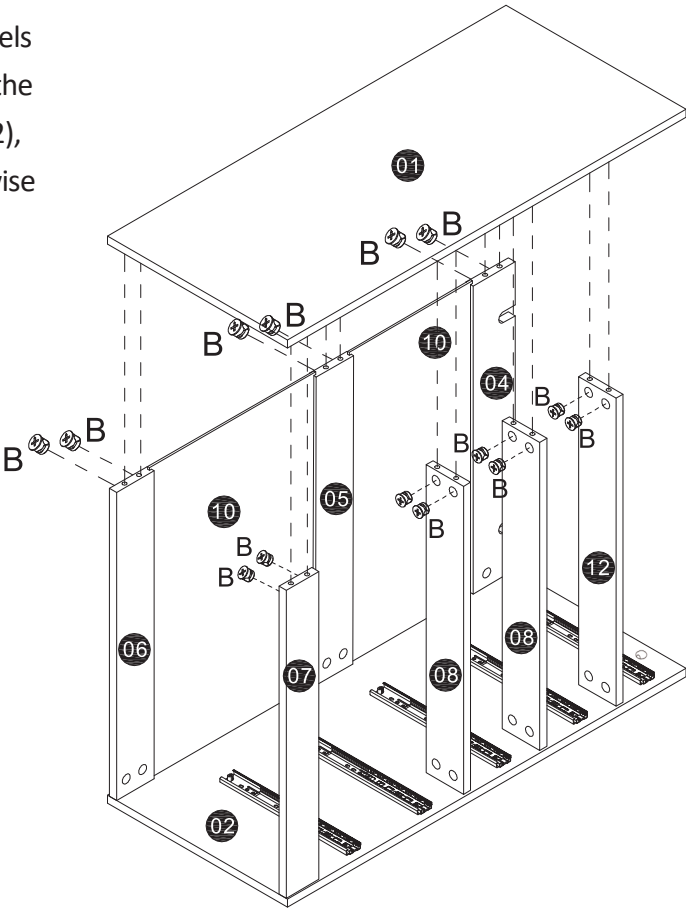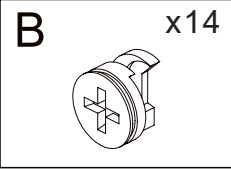

Step 10



- I. Use screws (D) to attach panel (11) to panel (4 and 12).
- II. Use screws (C) to attach the metal sheet (L) on panels (1、 2、 7) to panel (29).

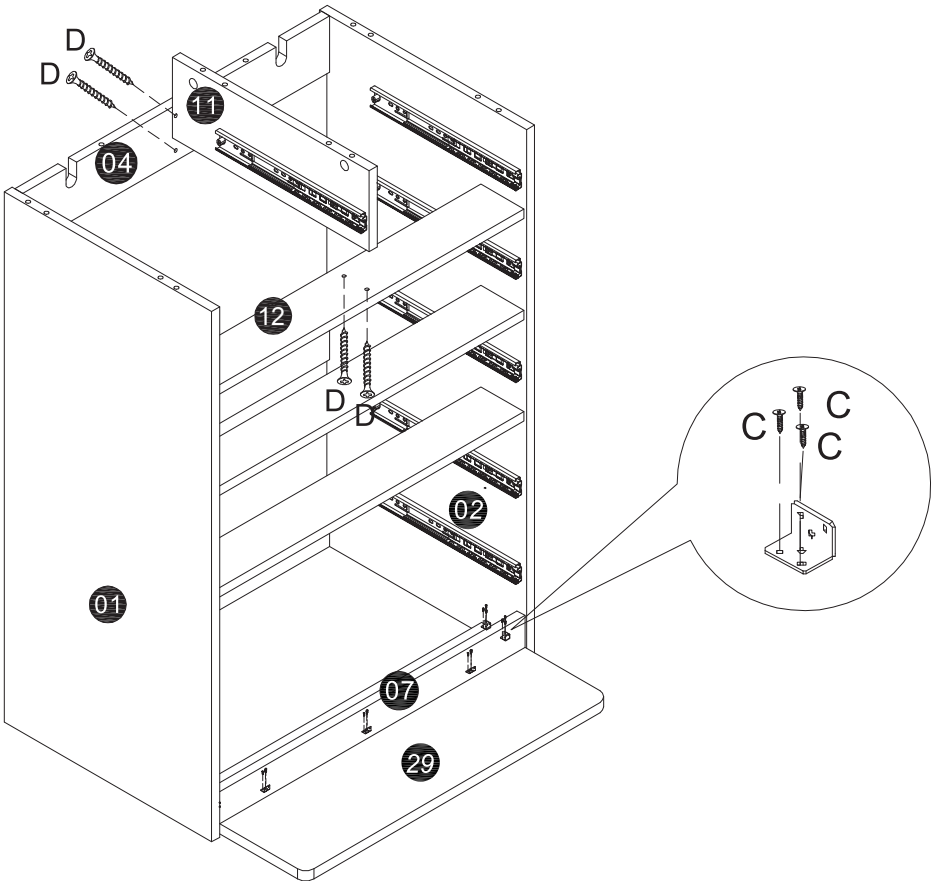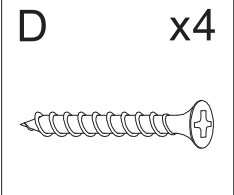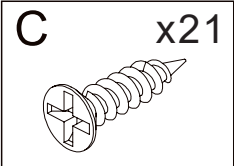

Step 11




I. As shown in the illustration, connect the panels (14 and 15) to panels (13 and 16), insert the cam lock (B) into the corresponding holes on panels (13 and 16), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

Note: This hole is an outlet hole, which is installed on the left as shown in the figure.

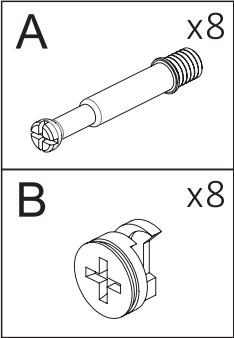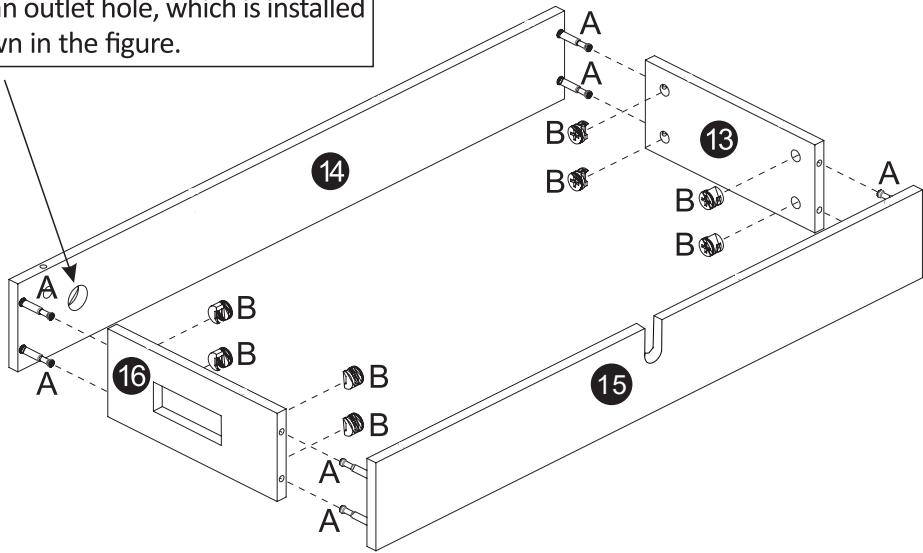

Step 12




I. Assemble panels (13, 14, 15 and 16), then arrange them as shown in the diagram. Use screws (C) to attach the slide rail (E1) to panel (13 and 16).

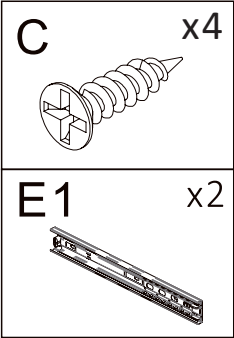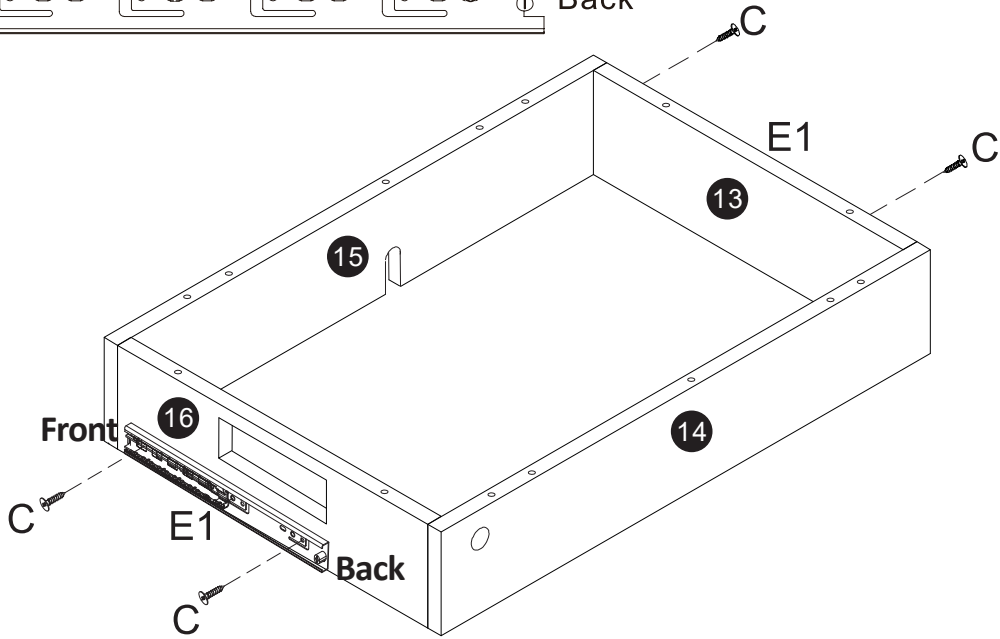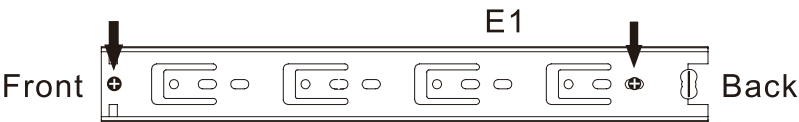

Step 13

I. Peel off the adhesive backing from the light strip (H) and the light strip clips (H).



II. Attach the light strip (H) to the panels (13、14、15 and 16). Use the light strip clips (H) to hold the light strip (H) in place for added stability.

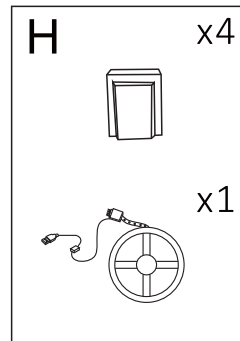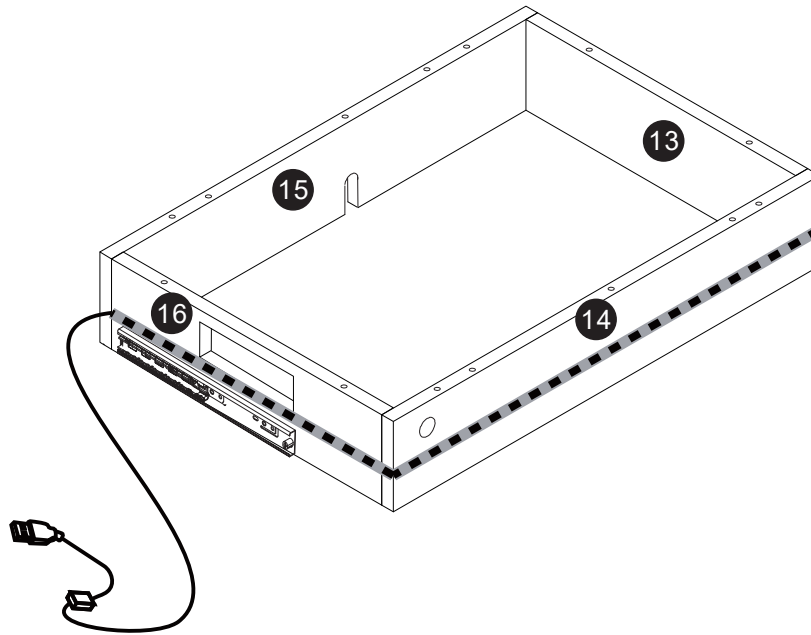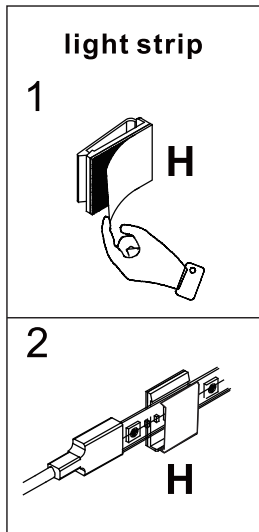

Step 14

I. Insert the wood dowel (M) into the panels (14 and 15).

II. Use screws (D) to attach panel (3) to panels (13、14、15 and 16).

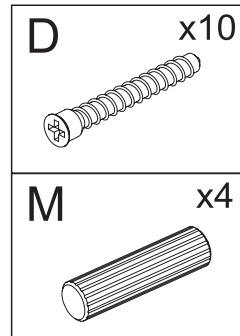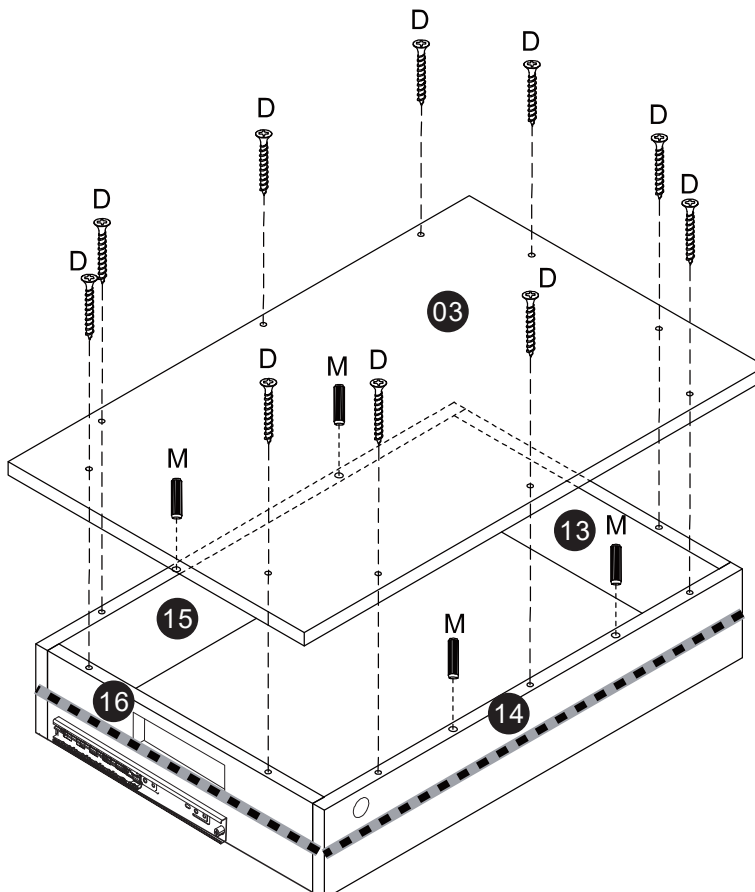


Note: Refer to Step 15. The holes for installing anti-tip accessories (G) must be on the same side as panel (14).


Step 15

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (3).

II. Use screws (G) to attach anti-tip accessories (G) to panel (3).

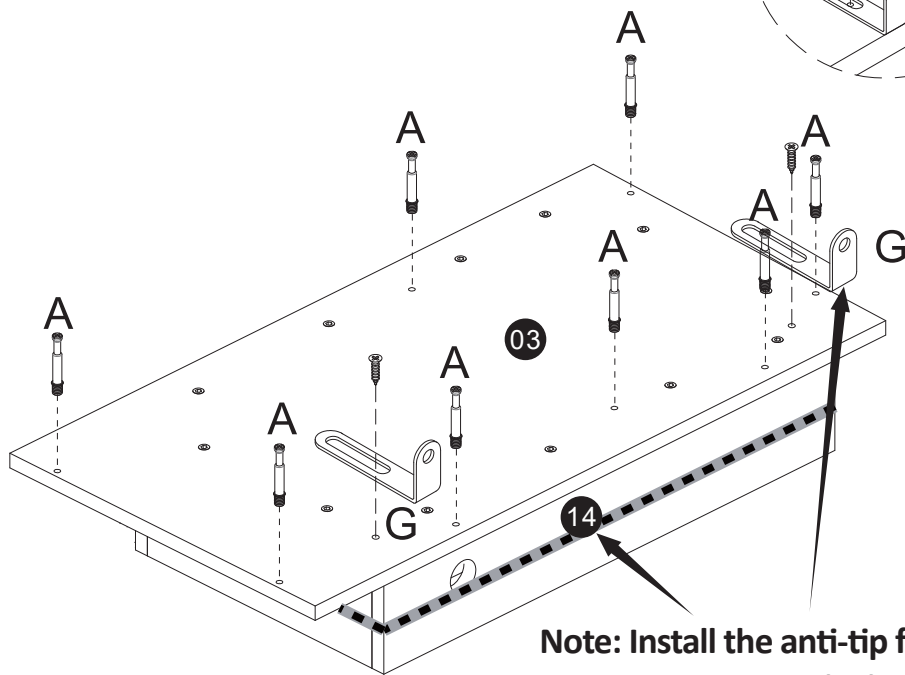



Note: Install the anti-tip fitting (G) on the same side as panel (14).

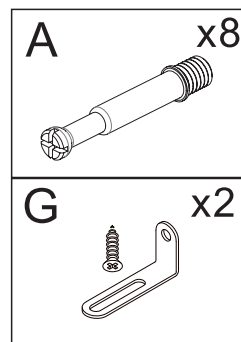

Step 16



I. Insert the wood dowel (M) into the panels (1, 2 and 11).

II. As shown in the illustration, connect the panel (3) to panels (1, 2, 4 and 11), insert the cam lock (B) into the corresponding holes on panels (1, 2, 4 and 11), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

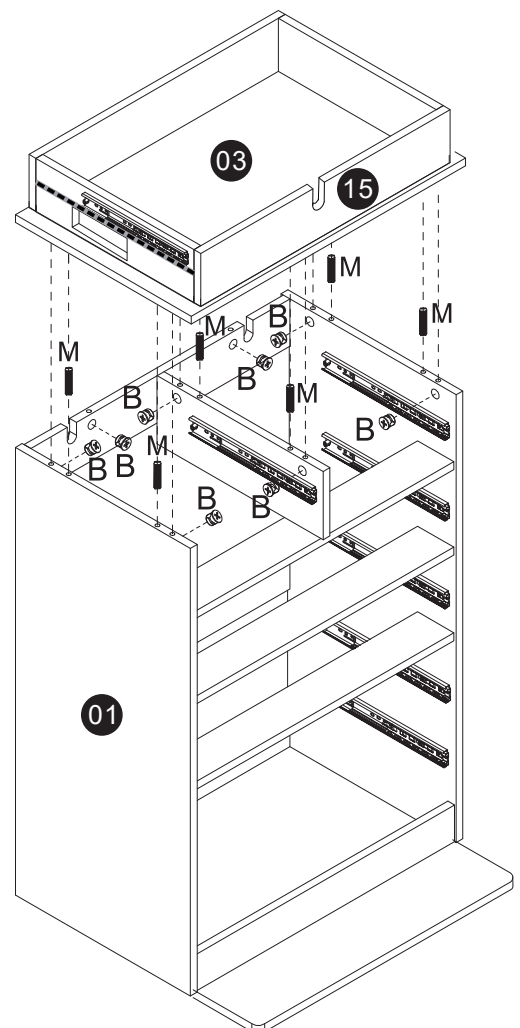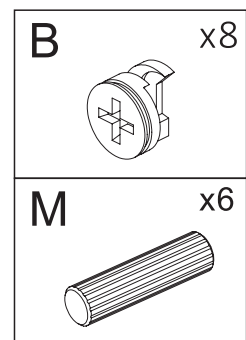



Step 17

- I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (19).
- II. As shown in the illustration, connect the panel (19) to panels (17 and 18), insert the cam lock (B) into the corresponding holes on panels (17 and 18), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

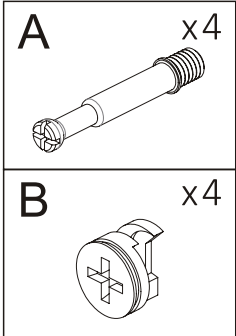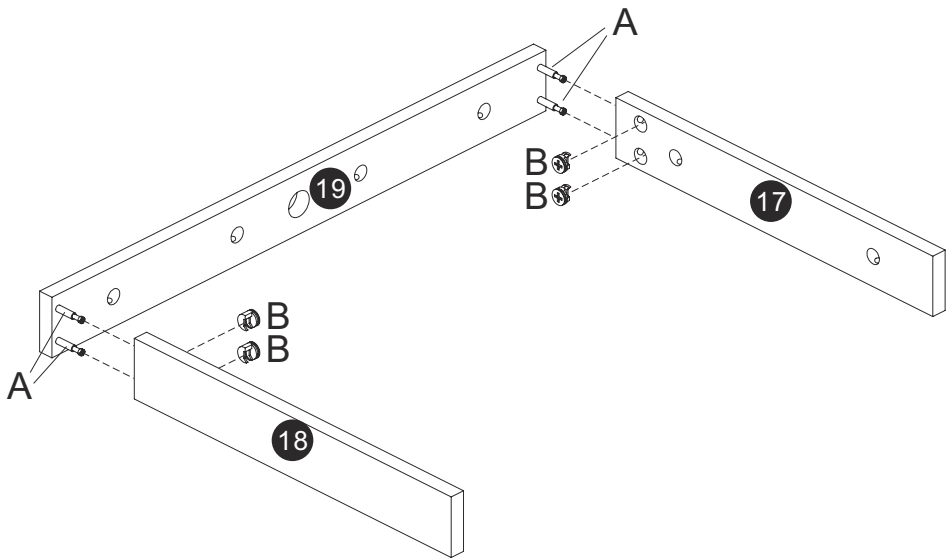



Step 18

- I. As shown in the illustration, connect the panels (17 and 18) to panel (19), insert the cam lock (B) into the corresponding holes on panels (17 and 18), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

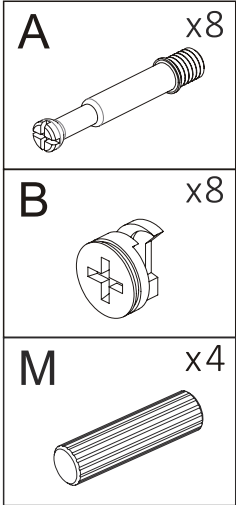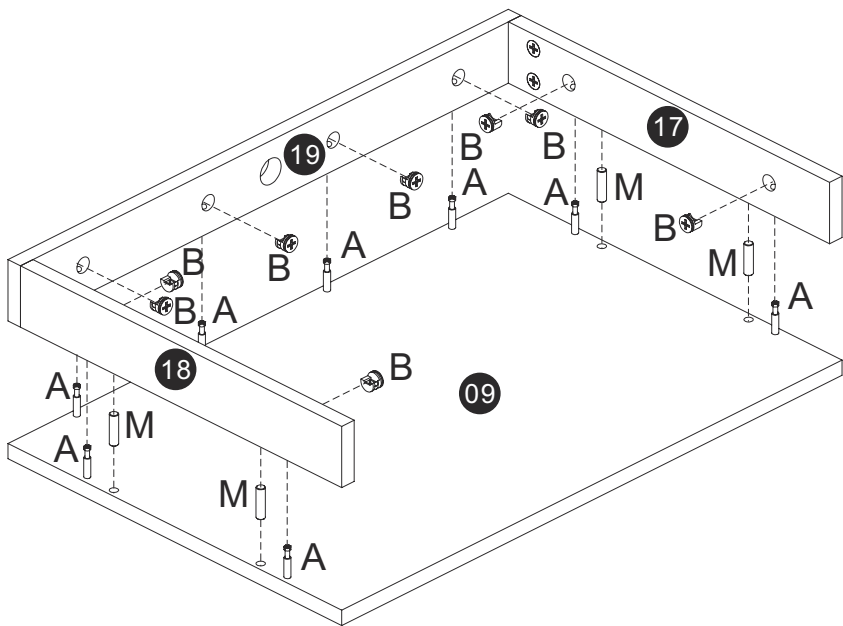




Step 19

I. Use screws (C) to attach the slide rail (E2) to panels (17 and 18).

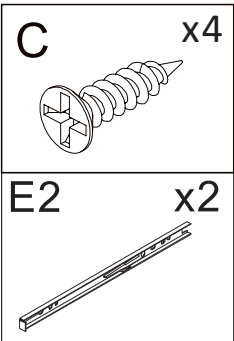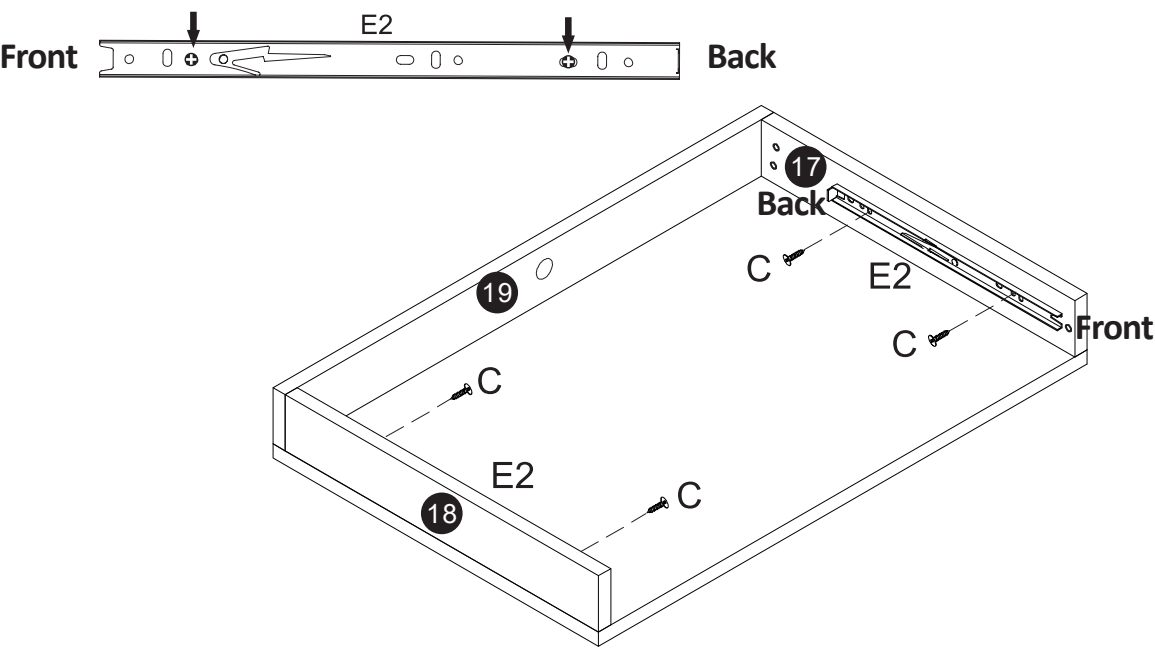


Step 20

- I. Secure the charging station (I) to panel (16) using screws (C).
- II. As shown in the diagram, align the slide rail (E2) on the assembled panel (9) with the slide rail (E1) on the cabinet, then push it in slowly until it moves smoothly.

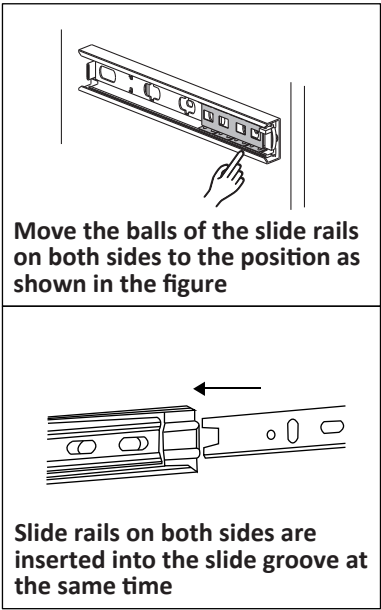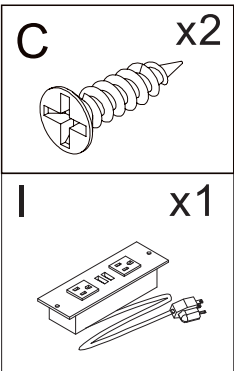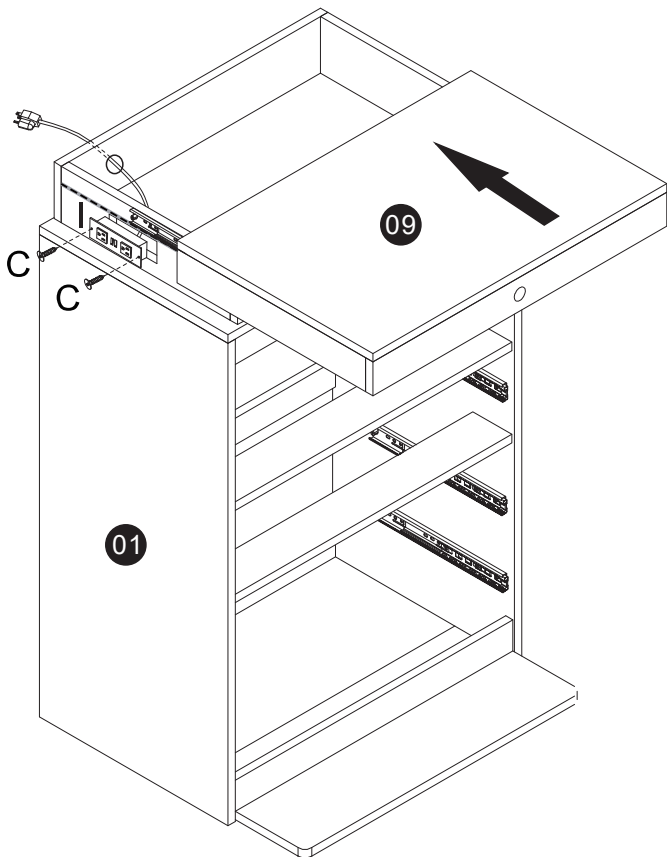


Step 21

I. Insert the thinnest side of the plastic wedge (J) into the gap between the back panel and the cabinet, then secure it with screws (N).

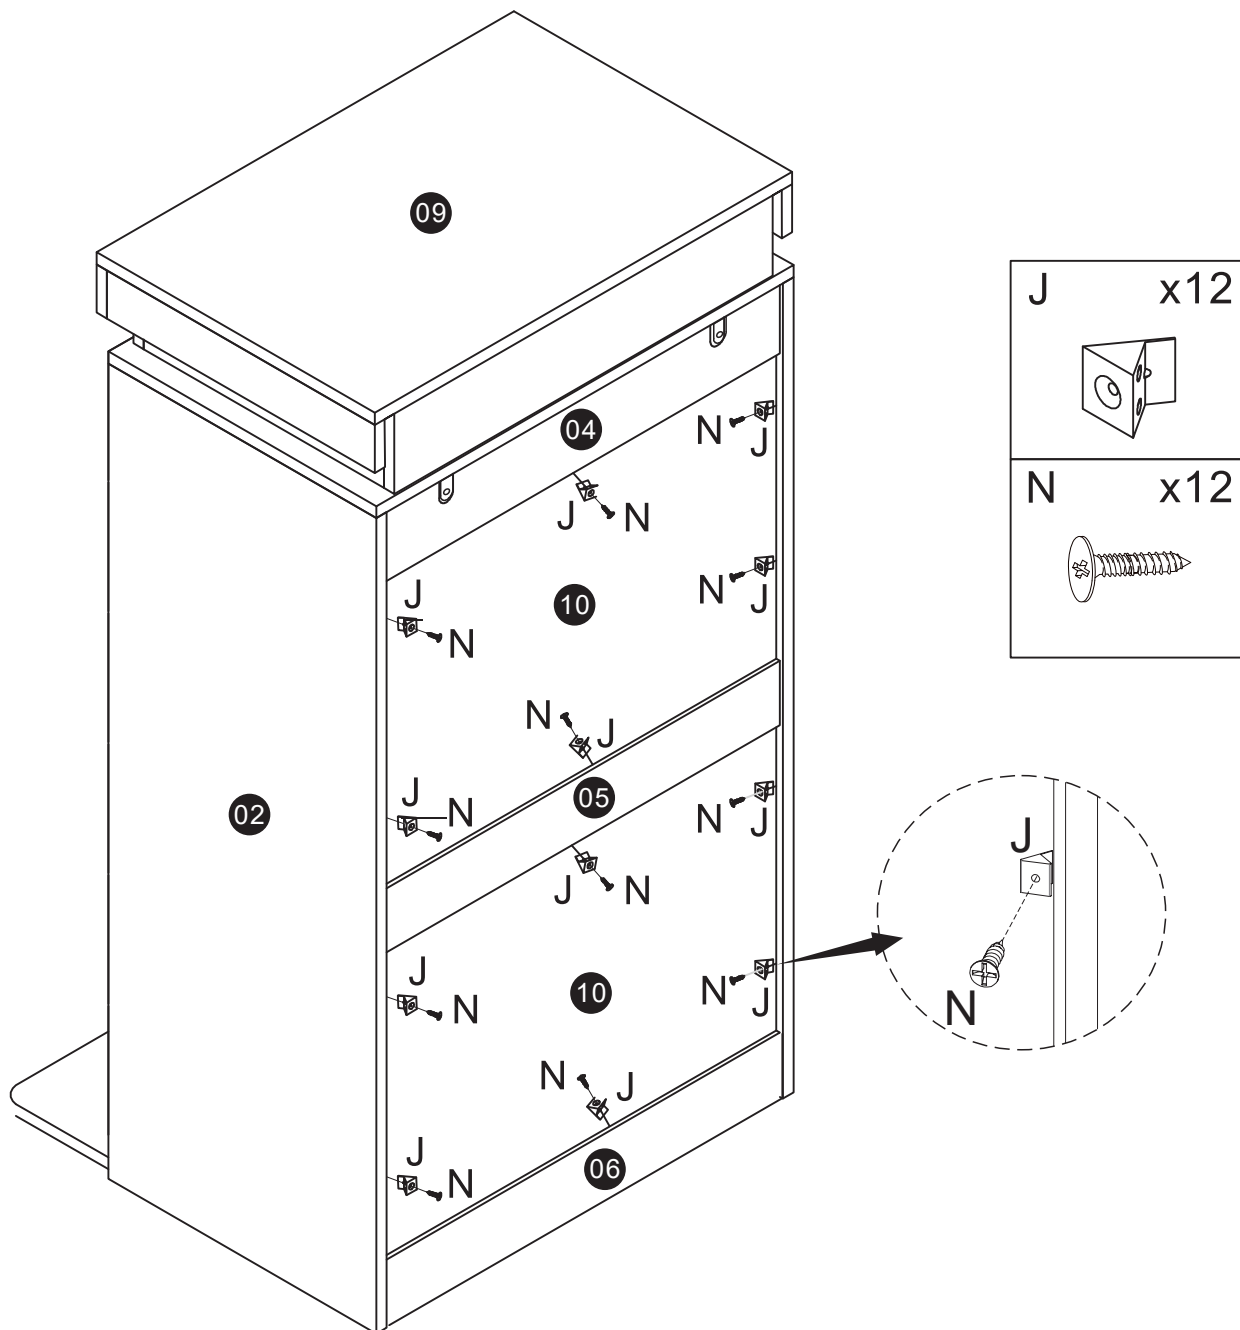





Step 22

I. As shown in the diagram, install the lock (O) onto panel (19).

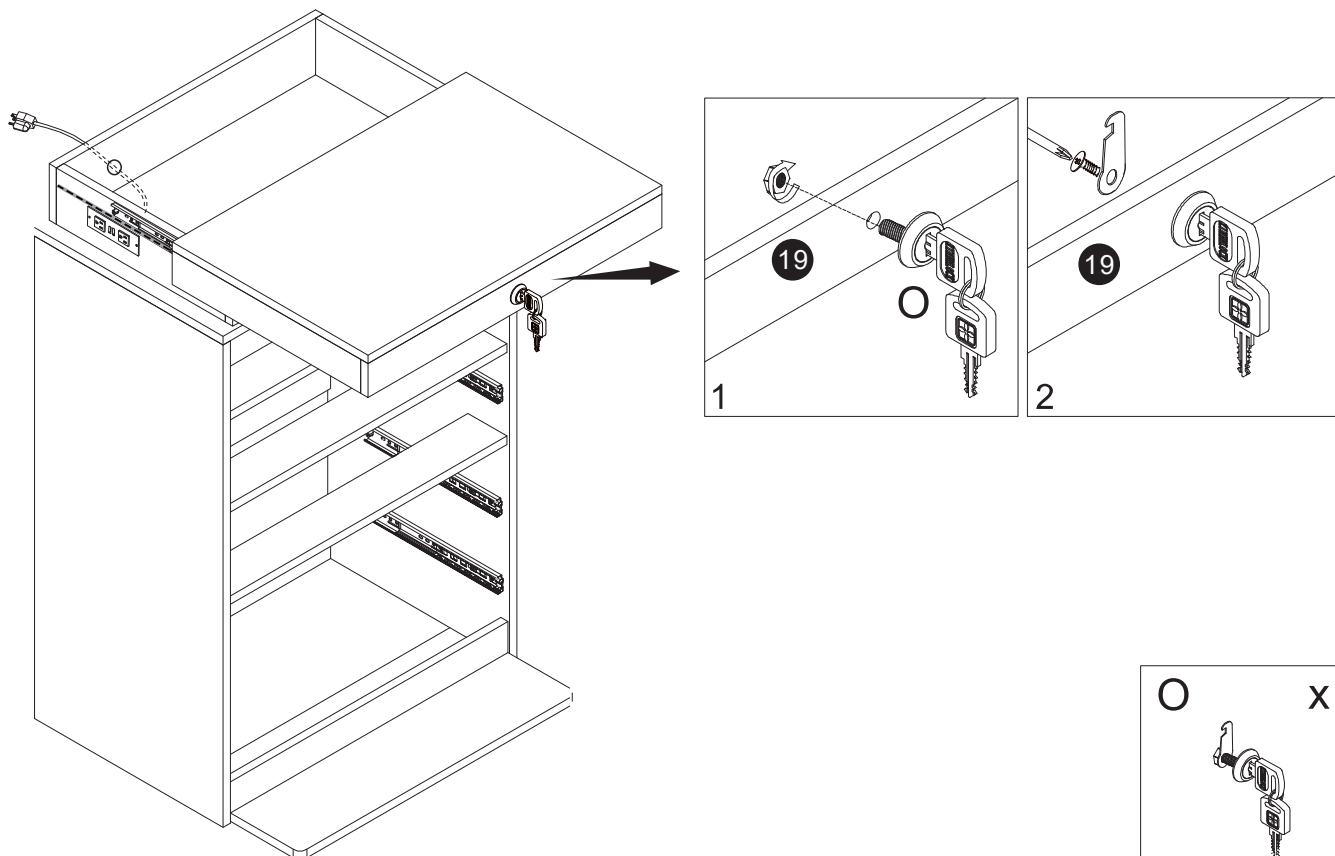



Step 23

- I. Mark the drill position on the wall with a pencil.
- II. Drill a small hole on the marked position.
- III. Insert drywall anchor (G) into the drilled hole.
- IV. Use screws (G) to secure the L-shaped bracket on panel (3) to the drywall anchors (G).

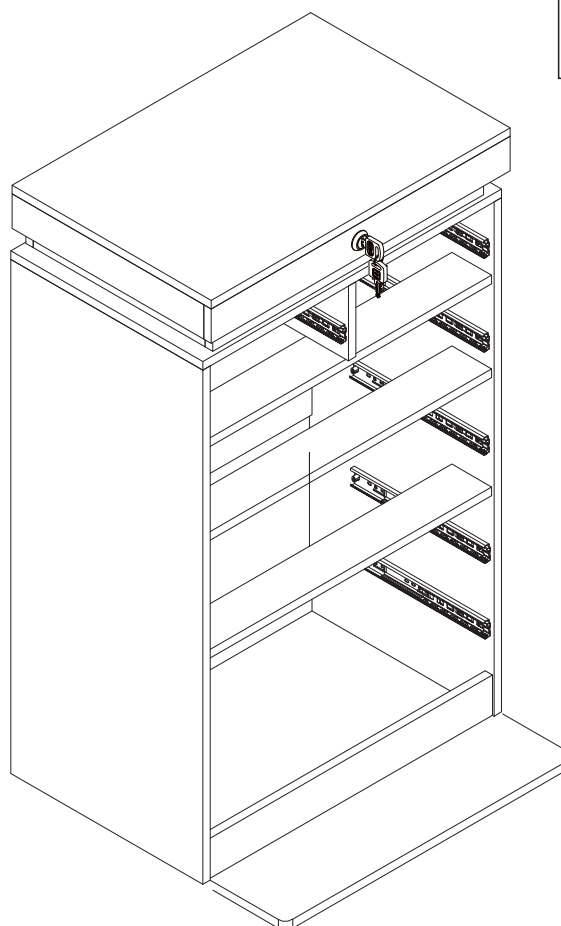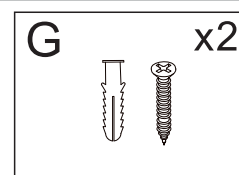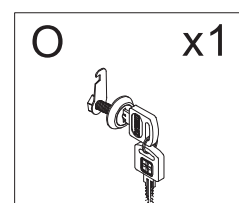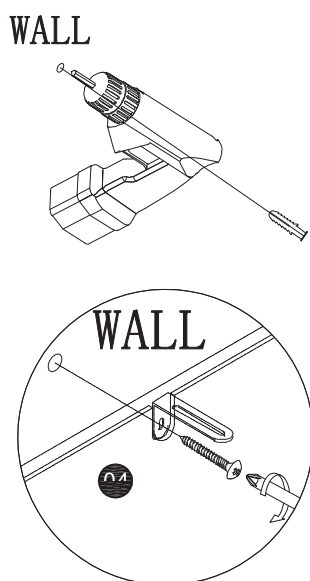


Step 24

I. Use screws (D) to attach panels (23 and 24) to panels (25).

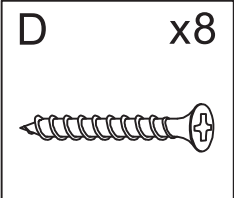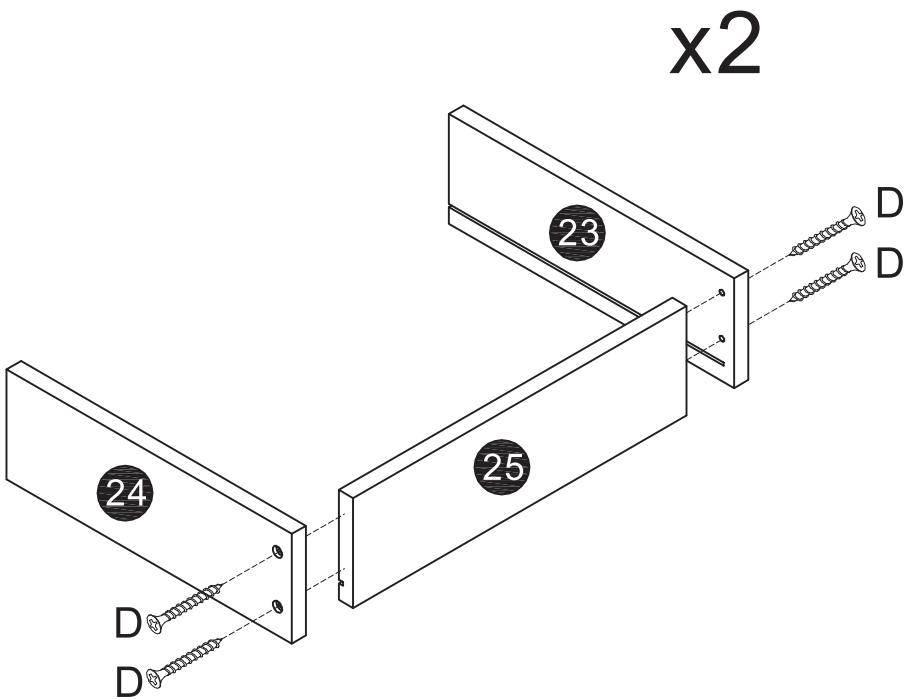



Step 25

I. Install panels (27) as per diagram and slide them into the grooves until they are fully seated.

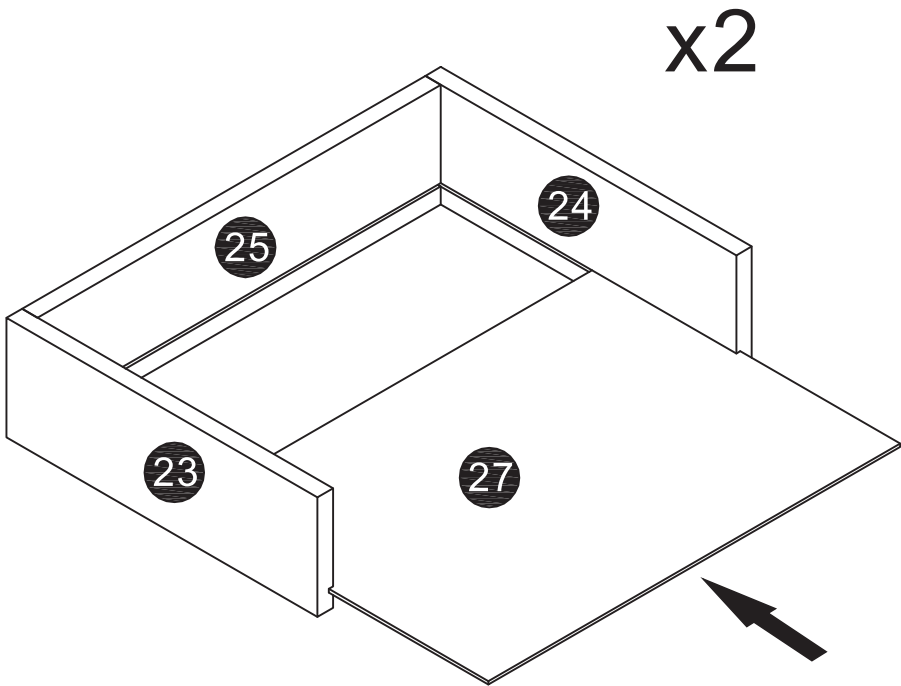



Step 26

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (20 and 21).

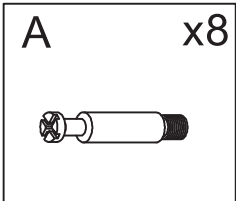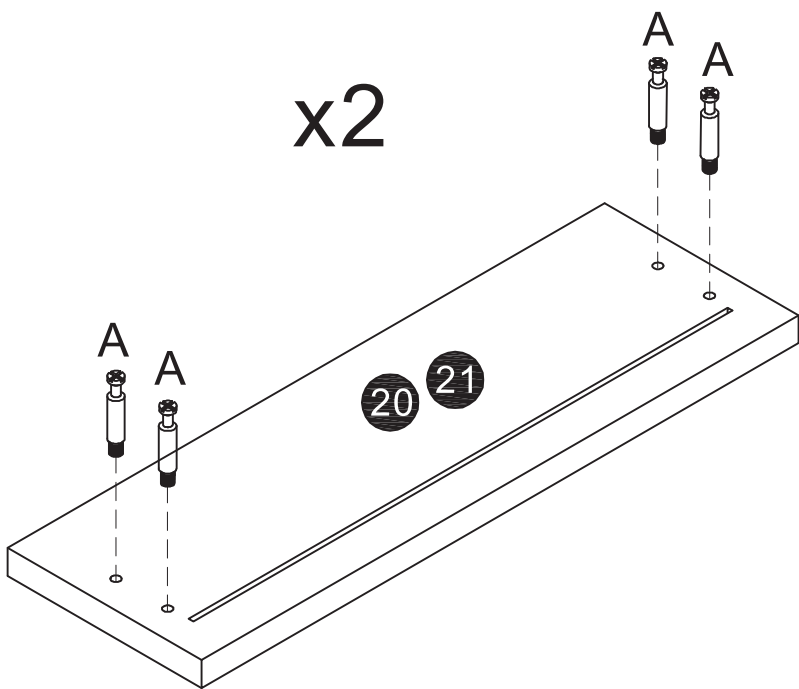



Step 27

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (22).

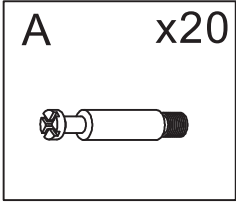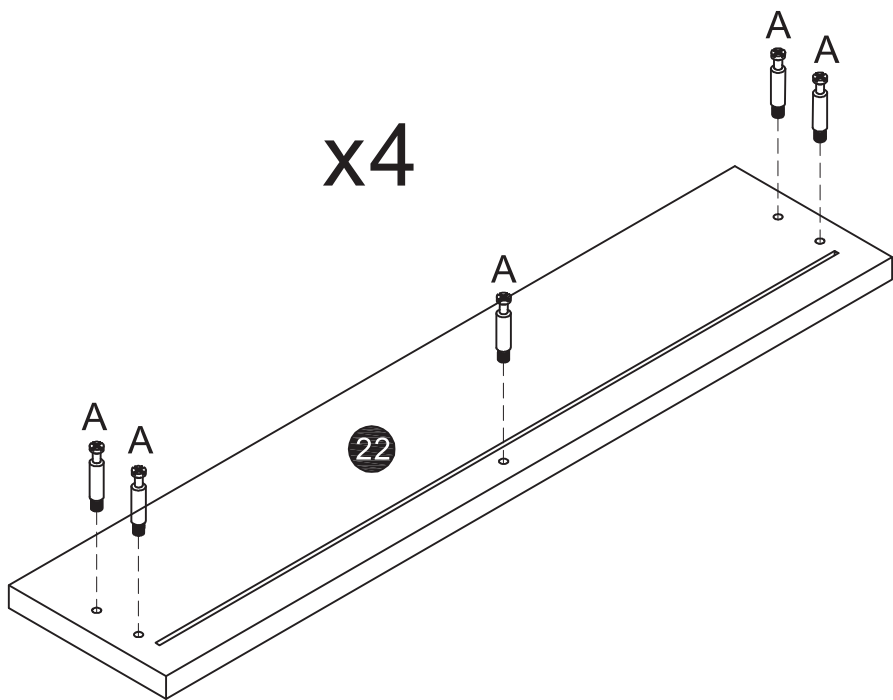



Step 28

I. As shown in the illustration, connect the panels (20 and 21) to panels (23 and 24), insert the cam lock (B) into the corresponding holes on panels (23 and 24), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

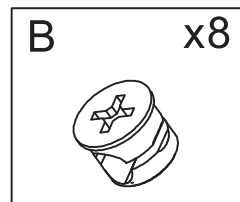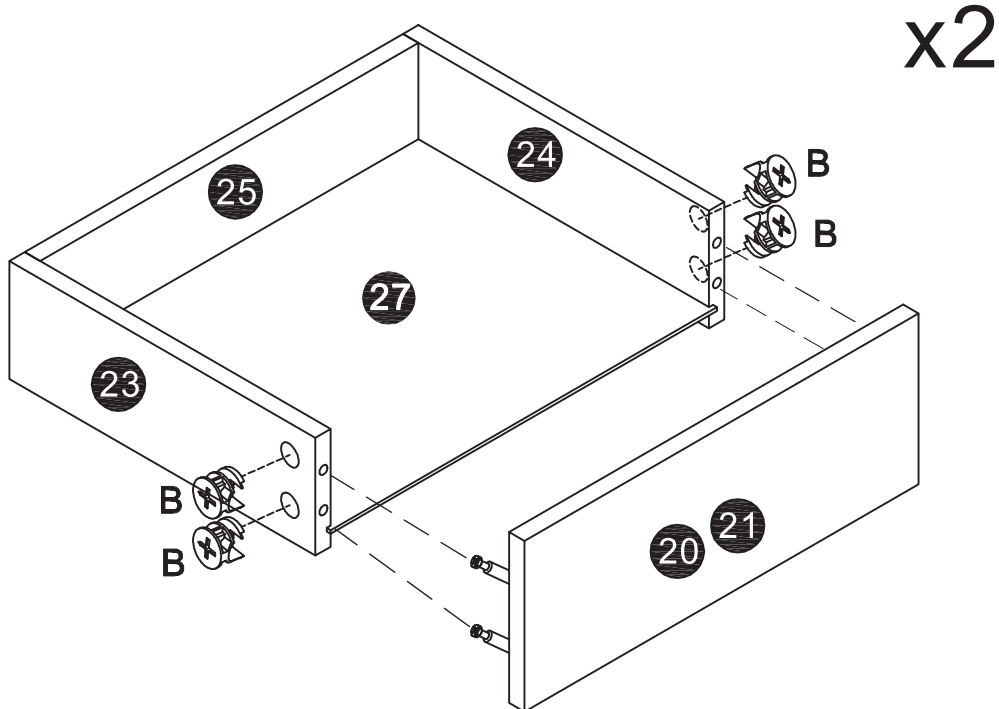


Step 29

I. Use screws (D) to attach panels (23, 24 and 30) to panels (26).

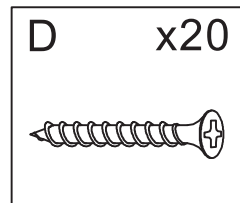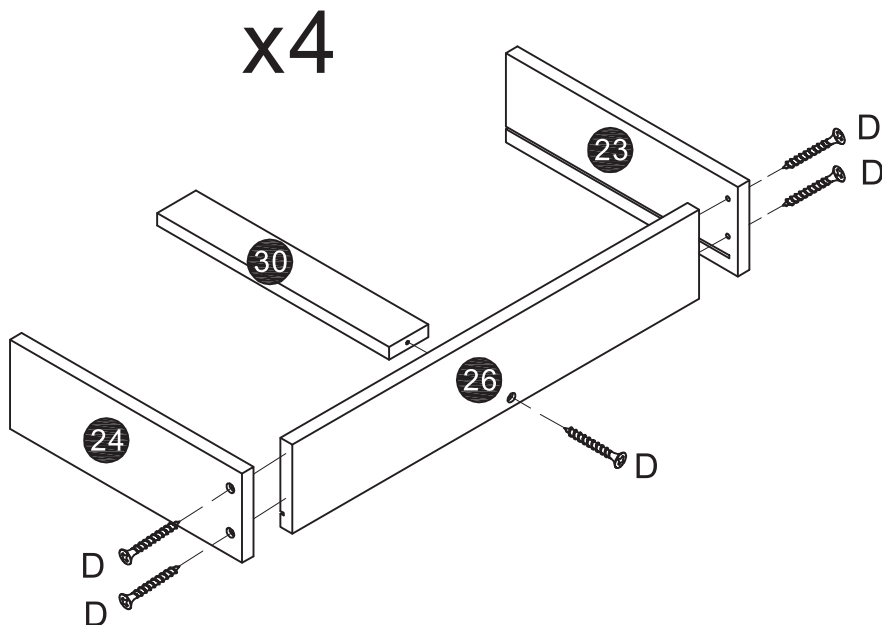



Step 30

I. Install panels (28) as per diagram and slide them into the grooves until they are fully seated.

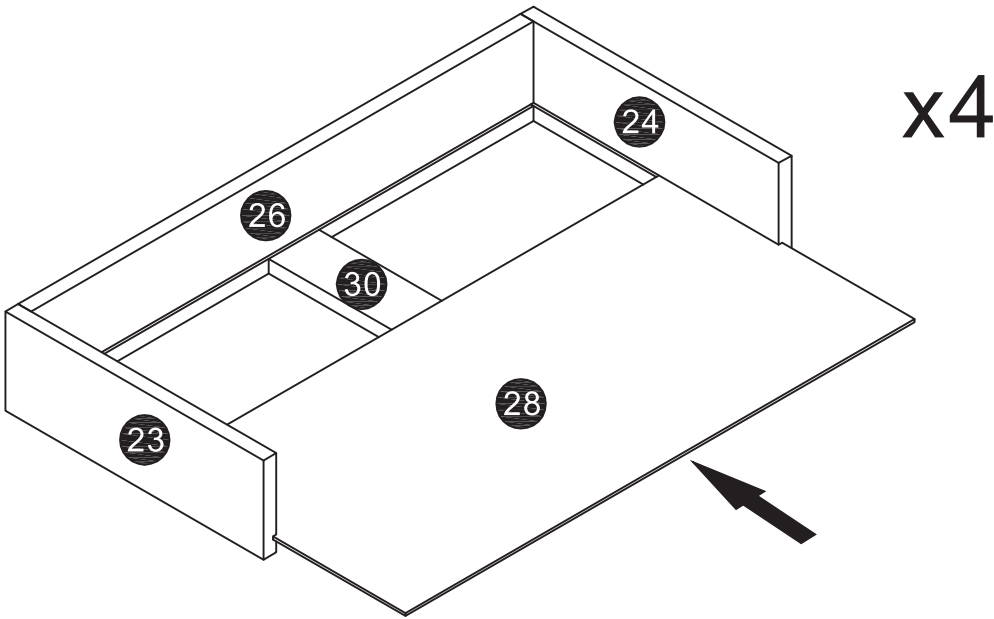


Step 31

I. As shown in the illustration, connect the panel (22) to panels (23、 24 and 30), insert the cam lock (B) into the corresponding holes on panels (23、 24 and 30), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

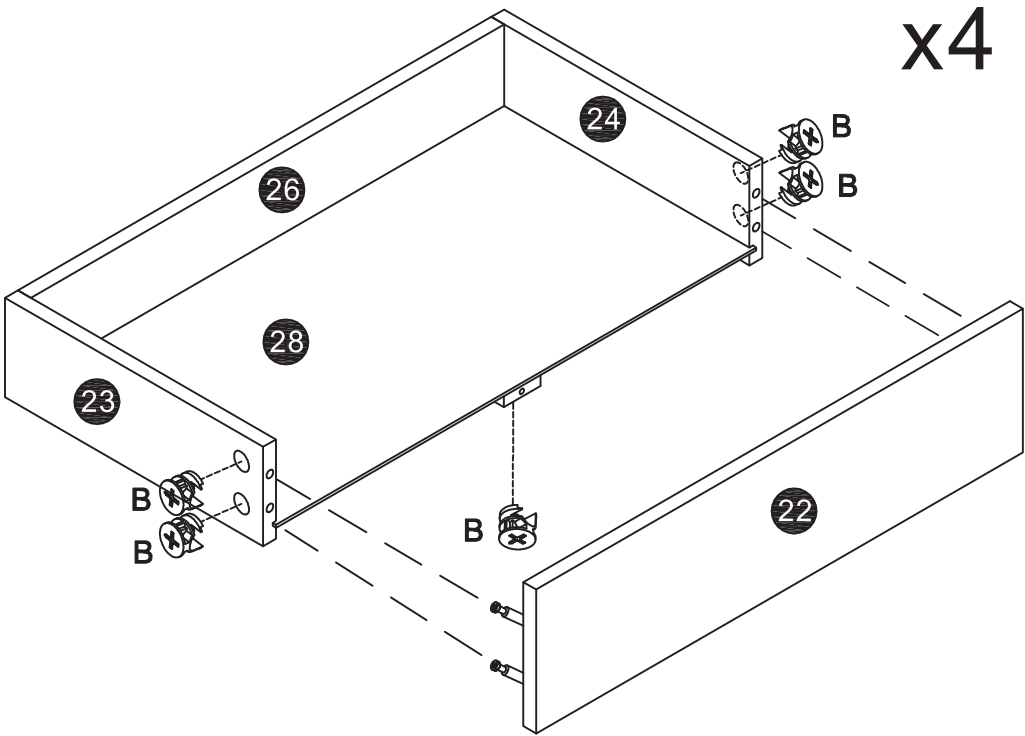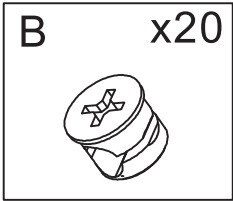

Step 32

I. Use screws (C) to attach the slide rail (E2) to panels (23 and 24).

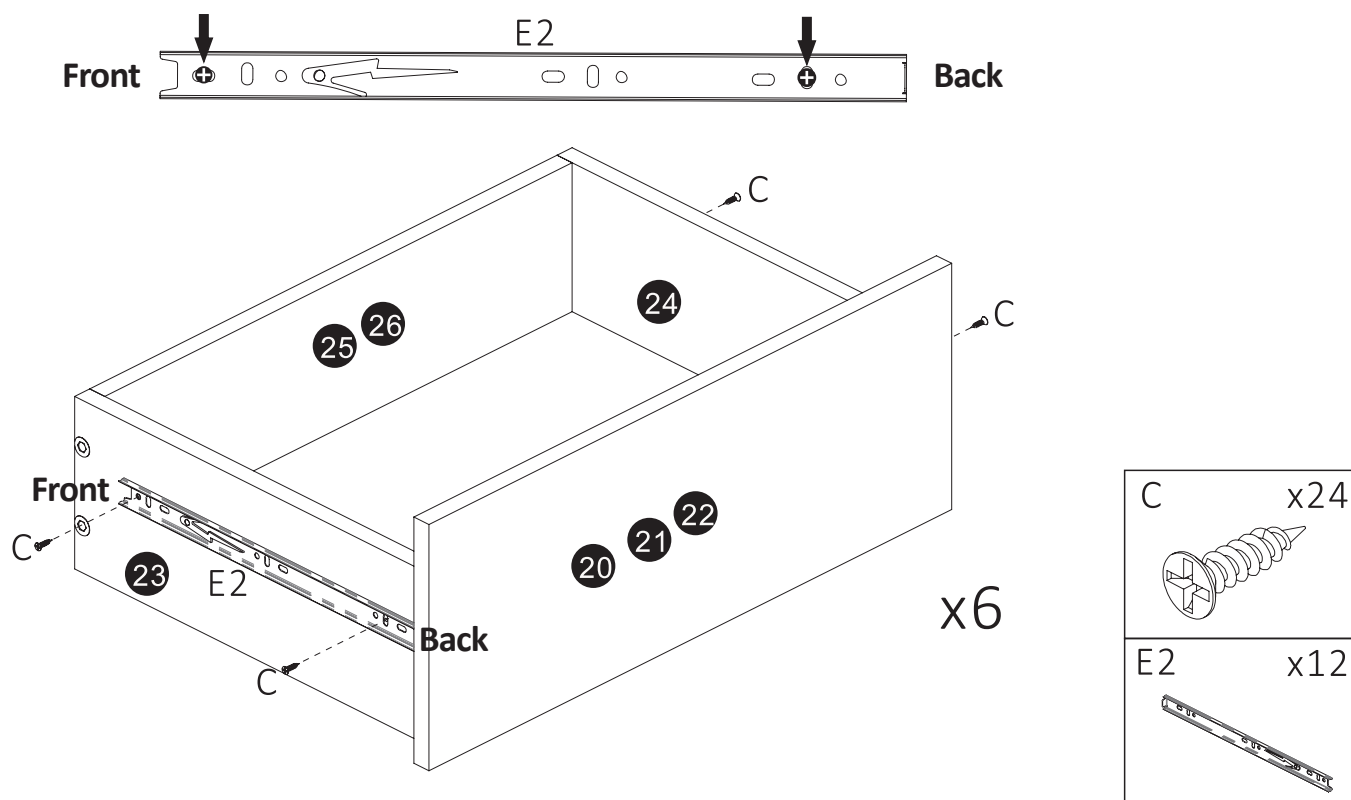

Step 33

I. Install the drawer into the cabinet.

Note: Install drawer 20 on the left and drawer 21 on the right.

