


Assembly Instructions

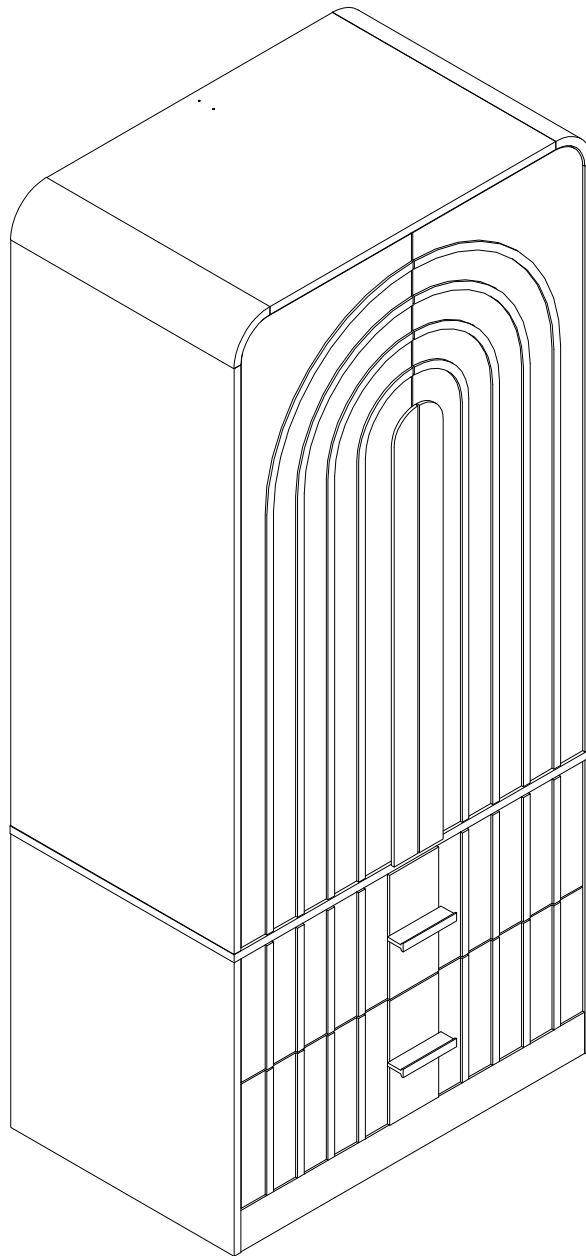

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

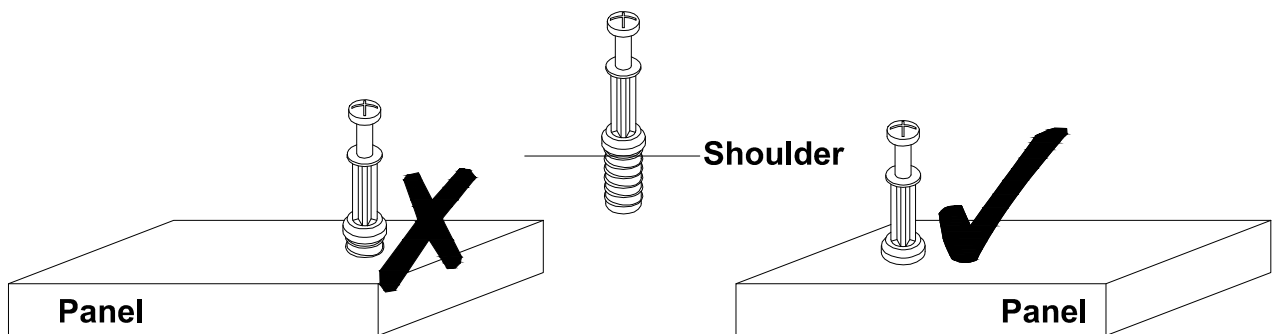


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

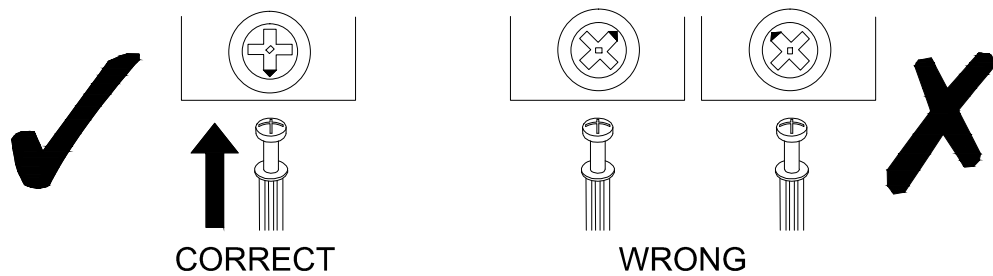


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

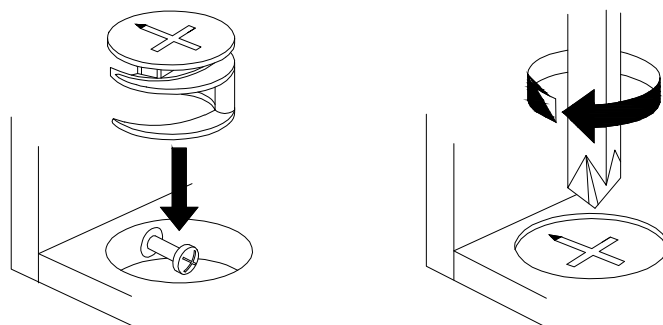

Turn cam lock clockwise to tighten.

Product structure

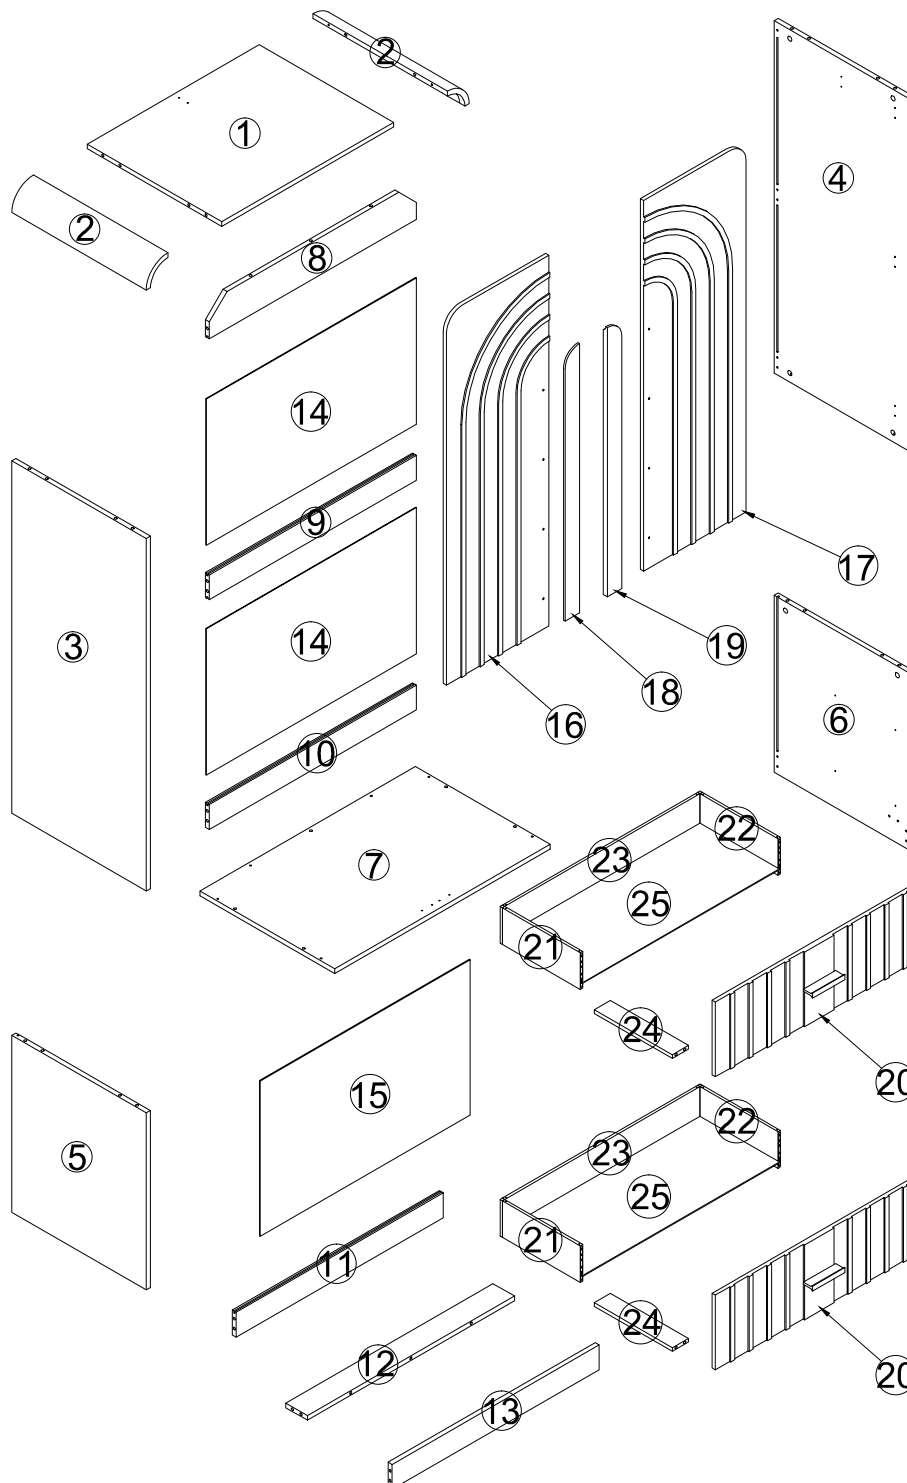

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


No. A

Quantity: 48 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity: 48 Pcs
Cam
φ15




No. C

Quantity: 48 Pcs
Sticker
Ø20




No. D

Quantity: 19 Pcs
Dowel
8*30mm




No. E

Quantity: 2 Sets
Ordinary bottom-dragging rail
12"

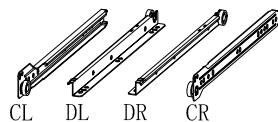


No. F

Quantity: 6 Pcs
Large curved door hinge




No. G

Quantity: 64 Pcs
Screw
M3.5*12mm



No. H

Quantity: 4 Pcs
Screw
M4*30mm




No. I

Quantity: 6 Pcs
Foot Pad
Ø15




No. J

Quantity: 2 Pcs
Handle



No. K

Quantity: 12 Pcs
Screw
M4*20mm




No. L

Quantity: 8 Pcs
Screw
M3.5*14mm



No. M

Quantity: 8 Pcs
Cam Lock Dowel
8*25mm




No. N

Quantity: 8 Pcs
Rubber particles
Ø6*12mm




No. O

Quantity: 4 Pcs
Drawer Connector






No. P


Quantity: 16 Pcs
Screw
M3*12mm




Part List

No. Q Quantity:4 Sets Magnetic Door Catcher 	No. R Quantity:2 Pcs Pothook 	No. S Quantity:1 Pc Supporting Rod 763*28*15mm 	No. T Quantity:12 Sets Plastic Wedge 
No. U Quantity:1 Sets Hardware anti-falling belt 			

STEP 1

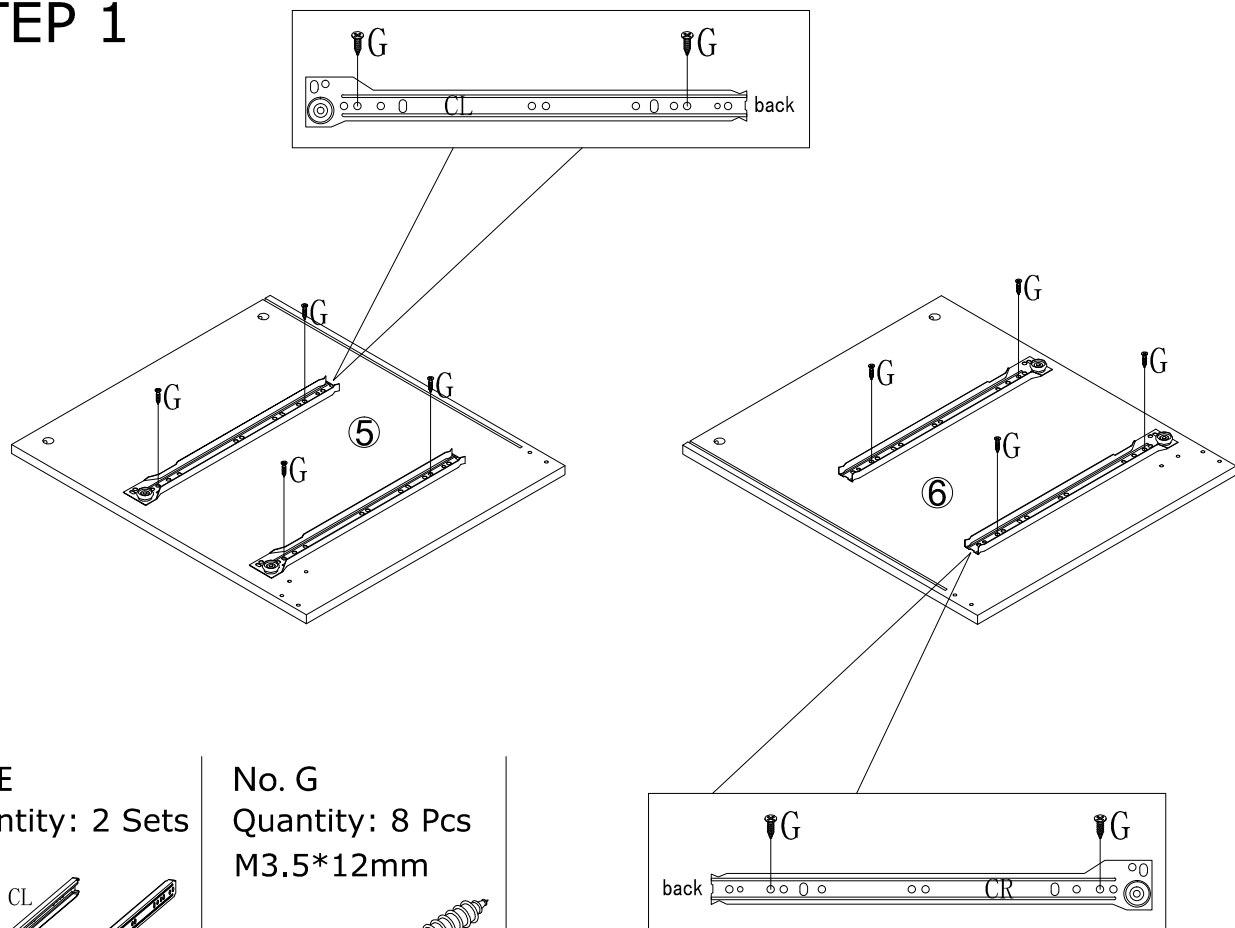


No. E
Quantity: 2 Sets
12"




No. G
Quantity: 8 Pcs
M3.5*12mm



STEP 2

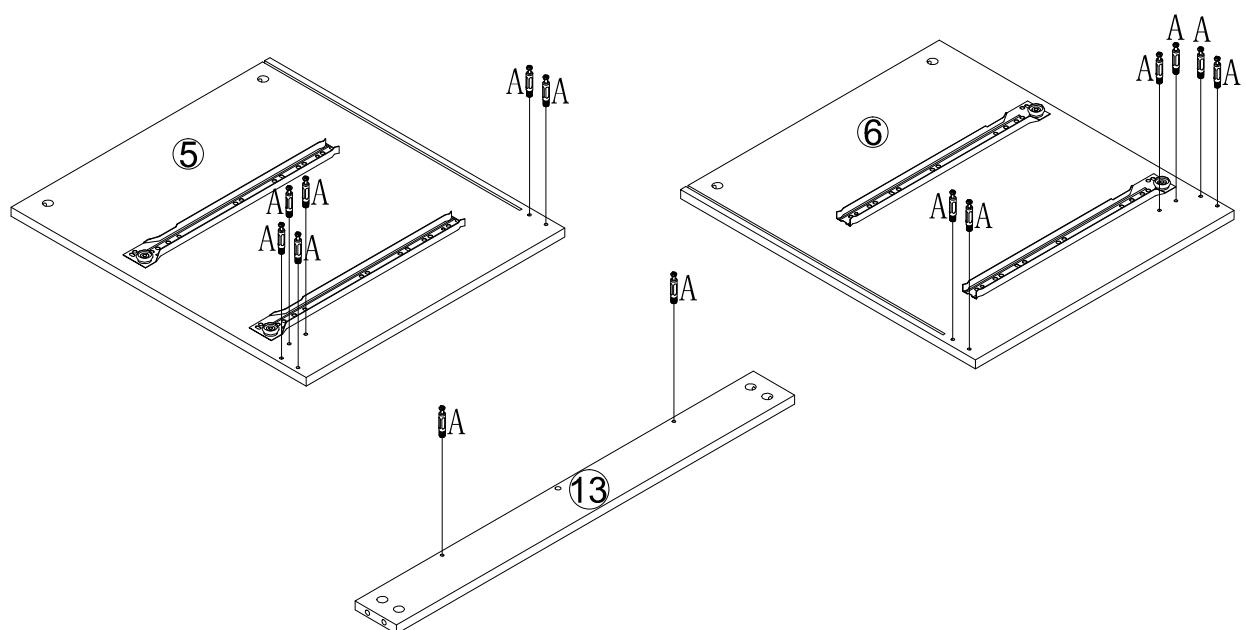

No. A
Quantity: 14 Pcs
8*28 mm



STEP 3



No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20



No. D
Quantity: 1 Pc
8*30mm

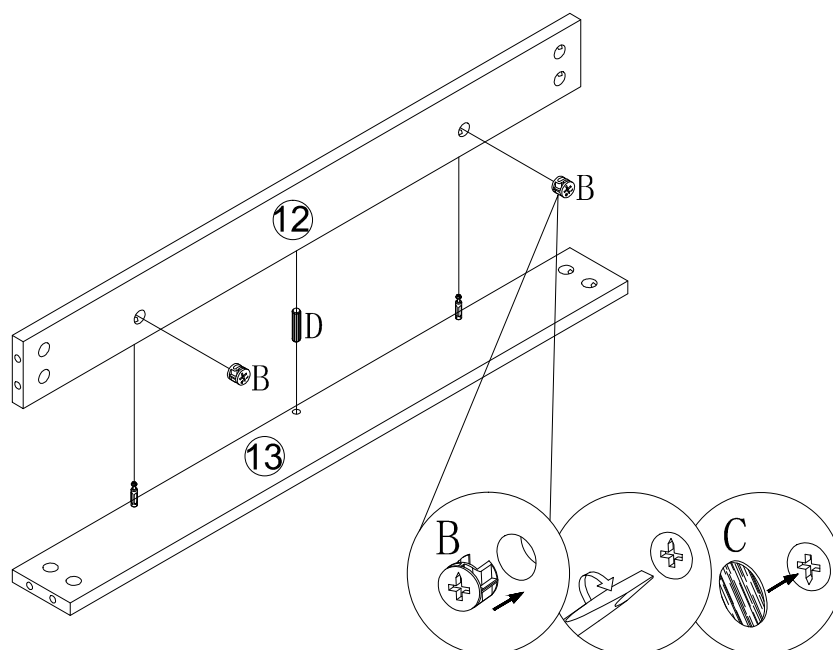


STEP 4


No. B
Quantity: 12 Pcs
Ø15



No. C
Quantity: 12 Pcs
Ø20

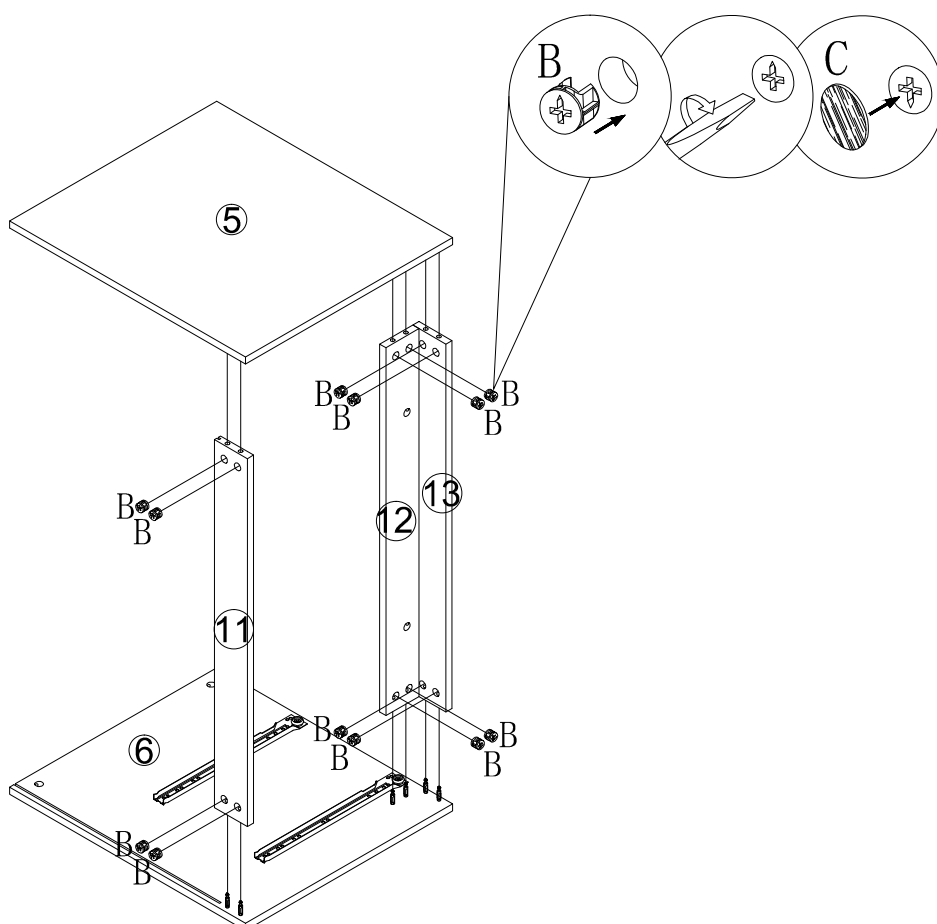


STEP 5

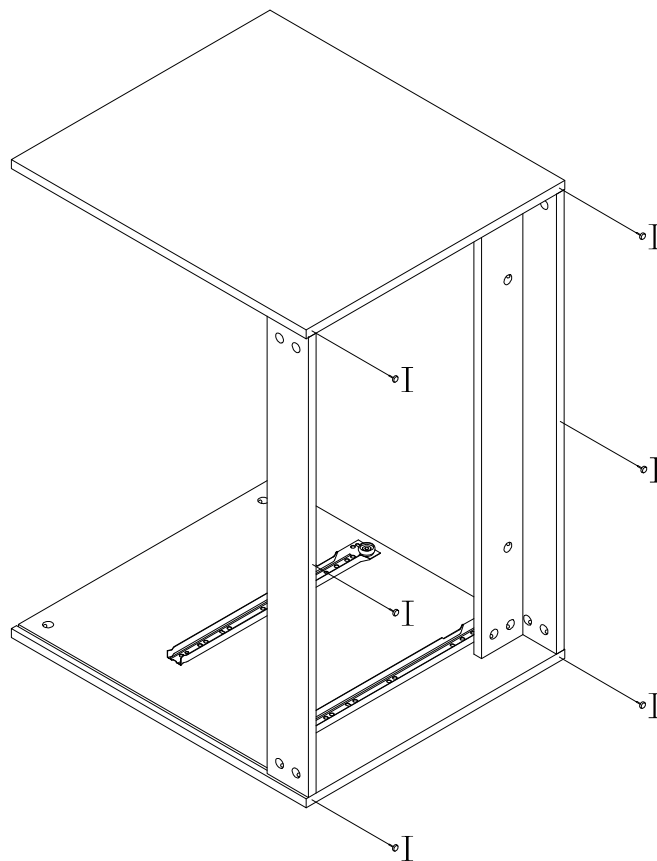


No. I
Quantity: 6 Pcs
Ø15




STEP 6

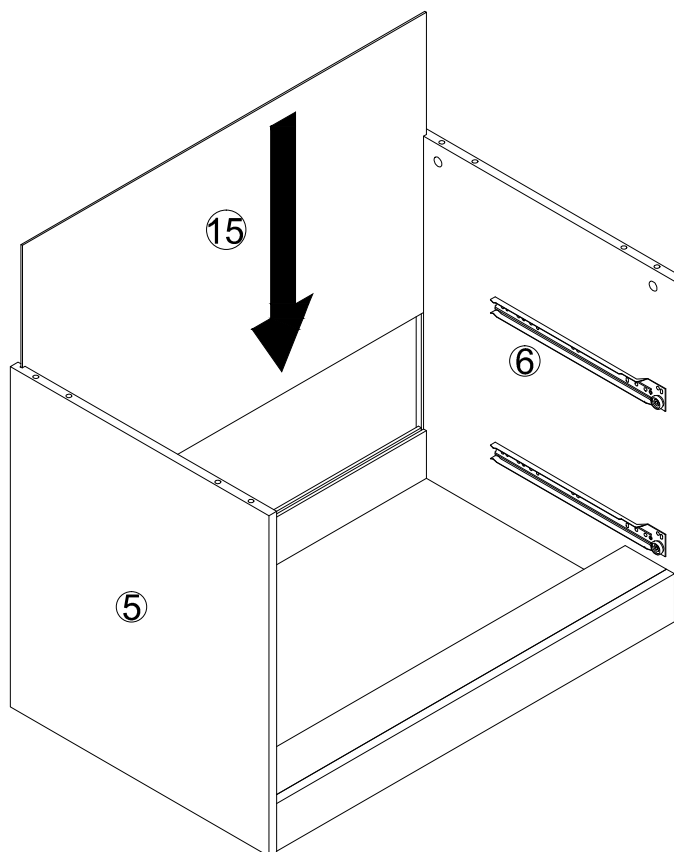


STEP 7

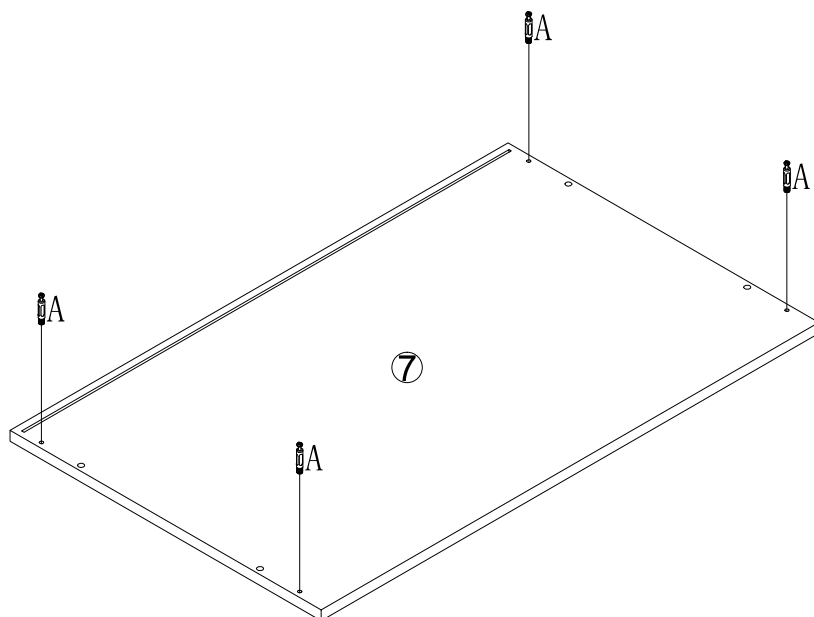

No. A
Quantity: 4 Pcs
8*28 mm



STEP 8

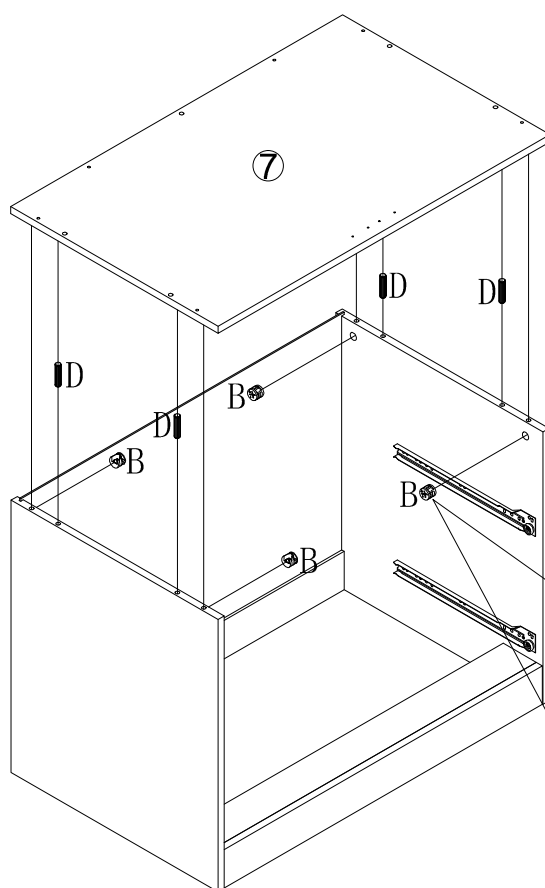



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm

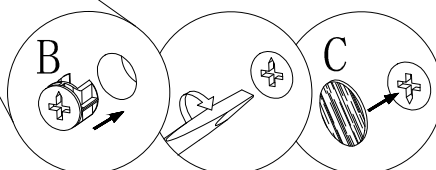

STEP 9



No. A
Quantity: 6 Pcs
8*28 mm





No. L
Quantity: 4 Pcs
M3.5*14mm



No. Q
Quantity: 2 Pcs

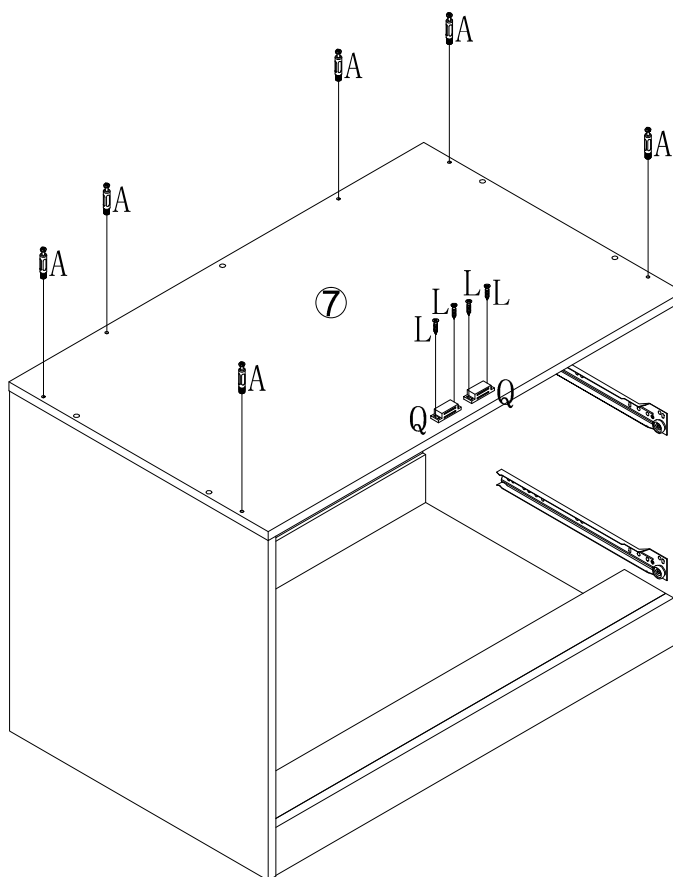

STEP 10

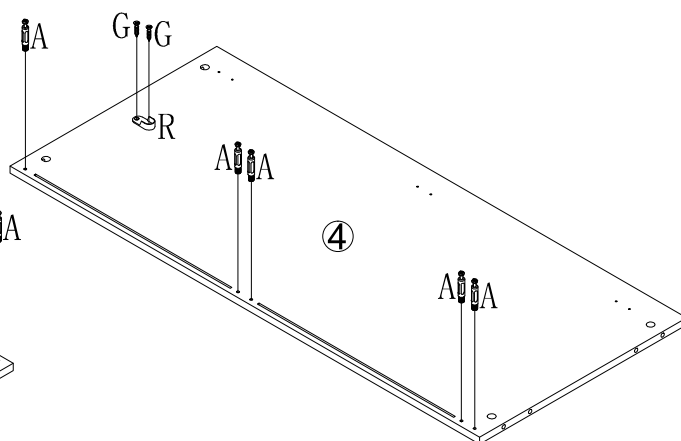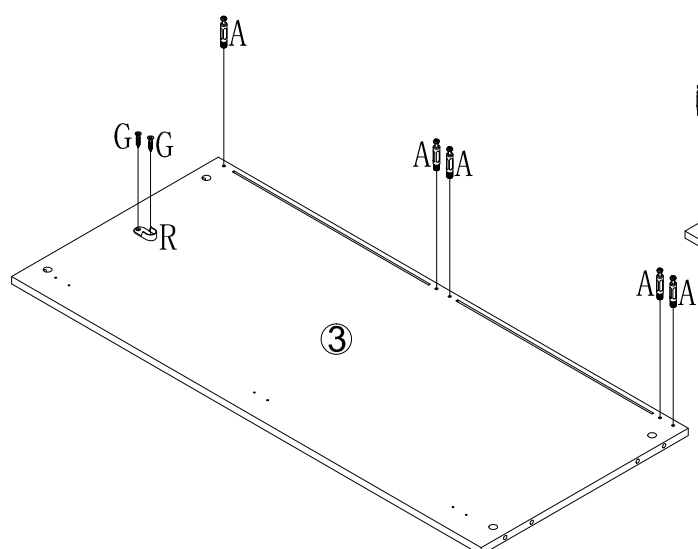

No. A
Quantity: 10 Pcs
8*28 mm




No. G
Quantity: 4 Pcs
M3.5*12mm




No. R
Quantity: 2 Pcs



STEP 11

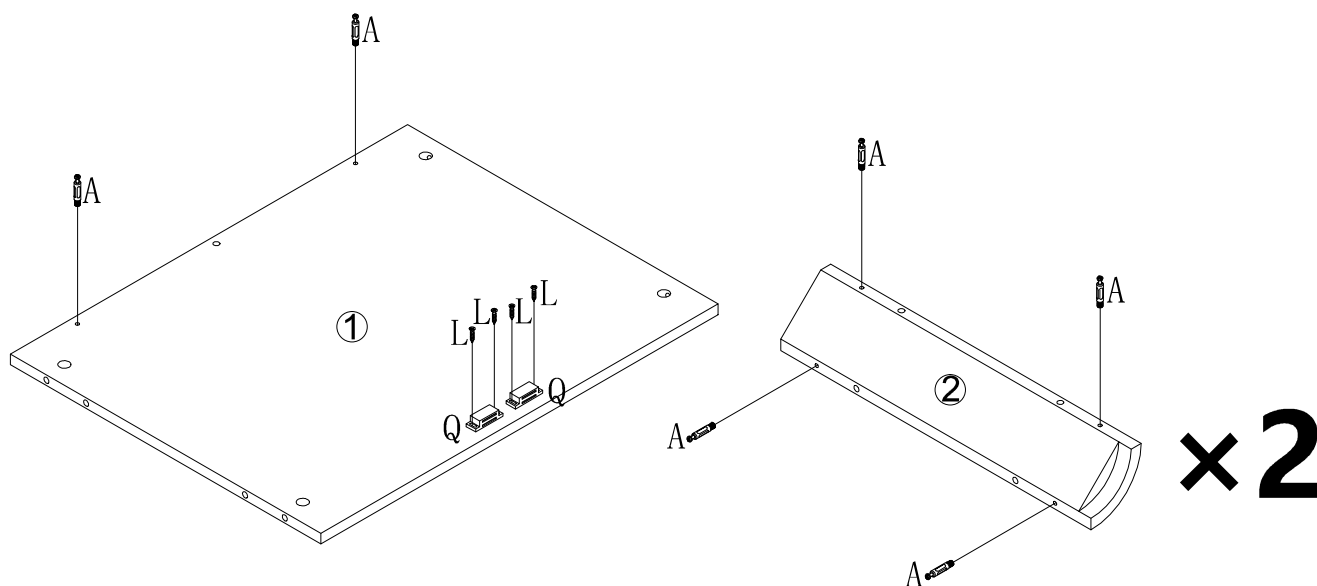


No. A
Quantity: 10 Pcs
8*28 mm




No. L
Quantity: 4 Pcs
M3.5*14mm



No. Q
Quantity: 2 Pcs



STEP 12

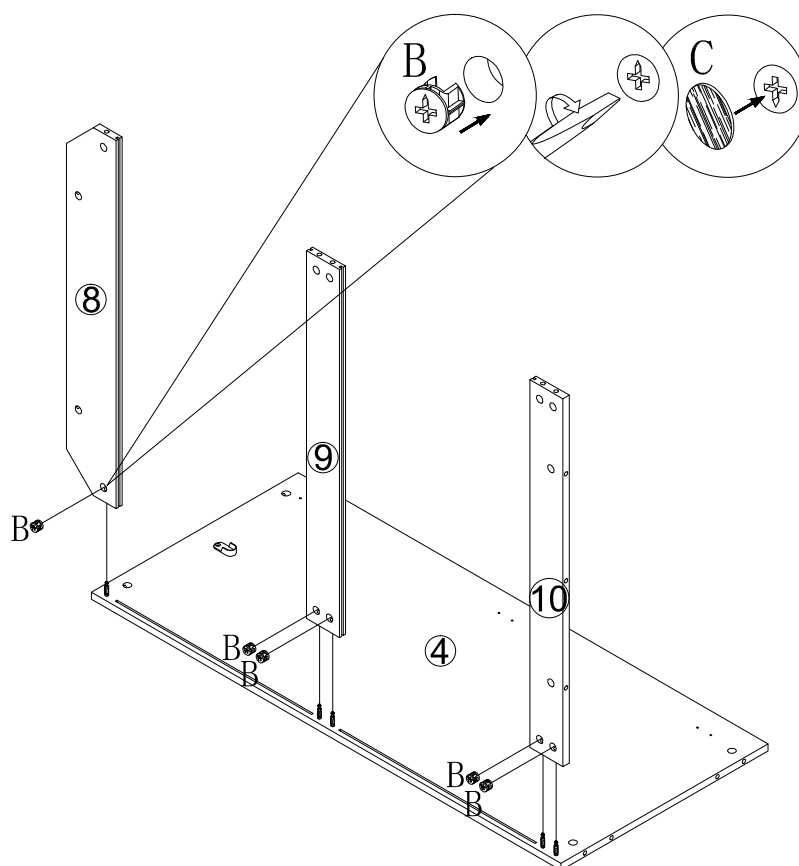


No. B
Quantity: 5 Pcs
Ø15




No. C
Quantity: 5 Pcs
Ø20



STEP 13

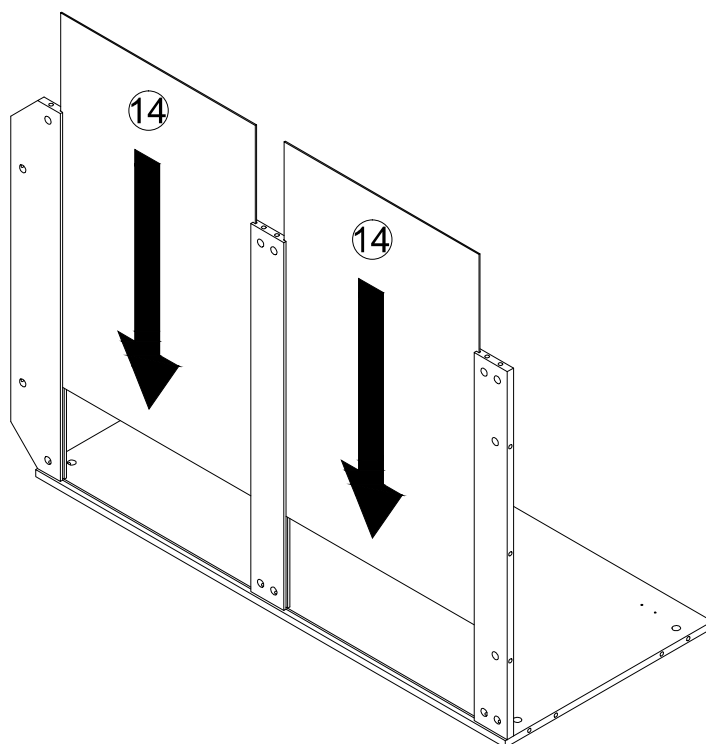

STEP 14

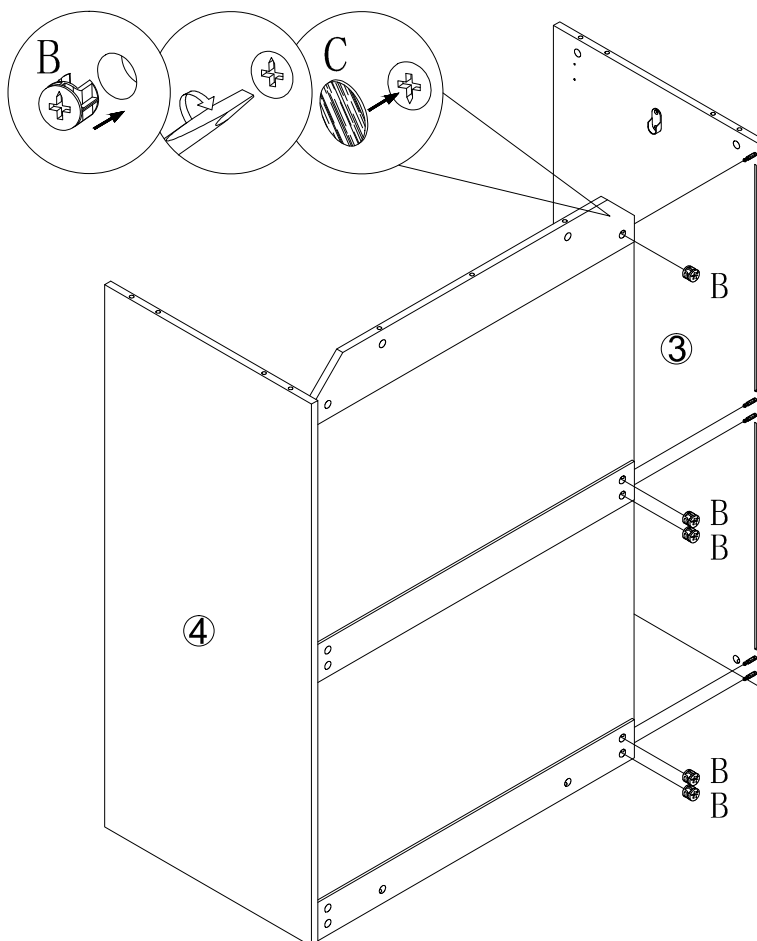

No. B
Quantity: 5 Pcs
Ø15



No. C
Quantity: 5 Pcs
Ø20



STEP 15



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm

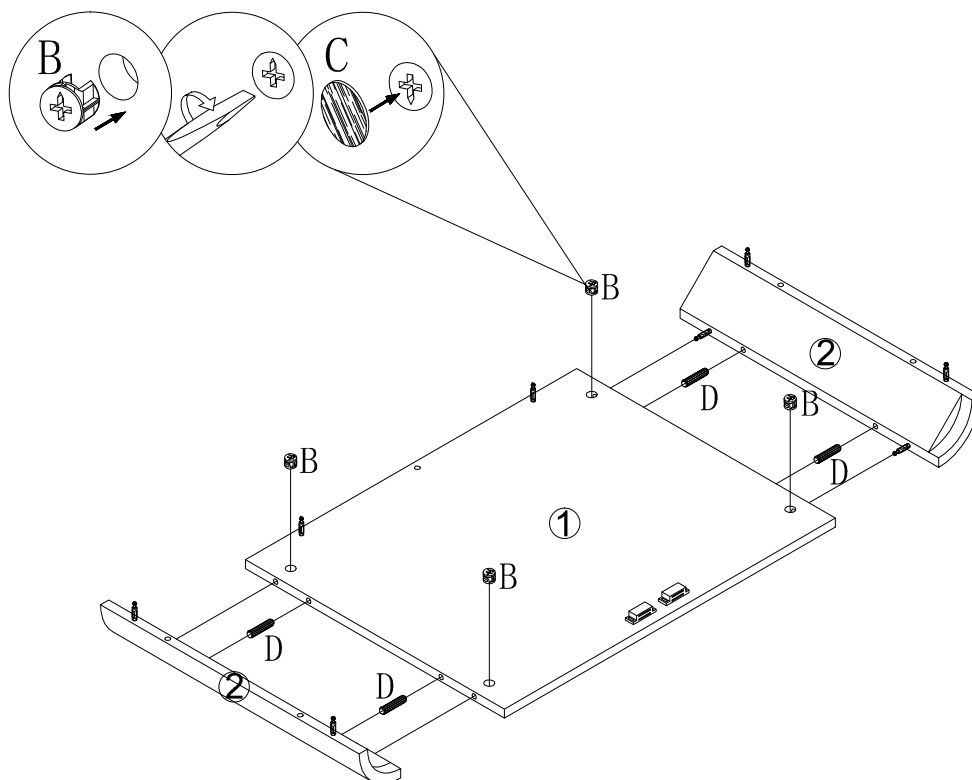

STEP 16



No. B
Quantity: 6 Pcs
Ø15



No. C
Quantity: 6 Pcs
Ø20



No. D
Quantity: 5 Pcs
8*30mm

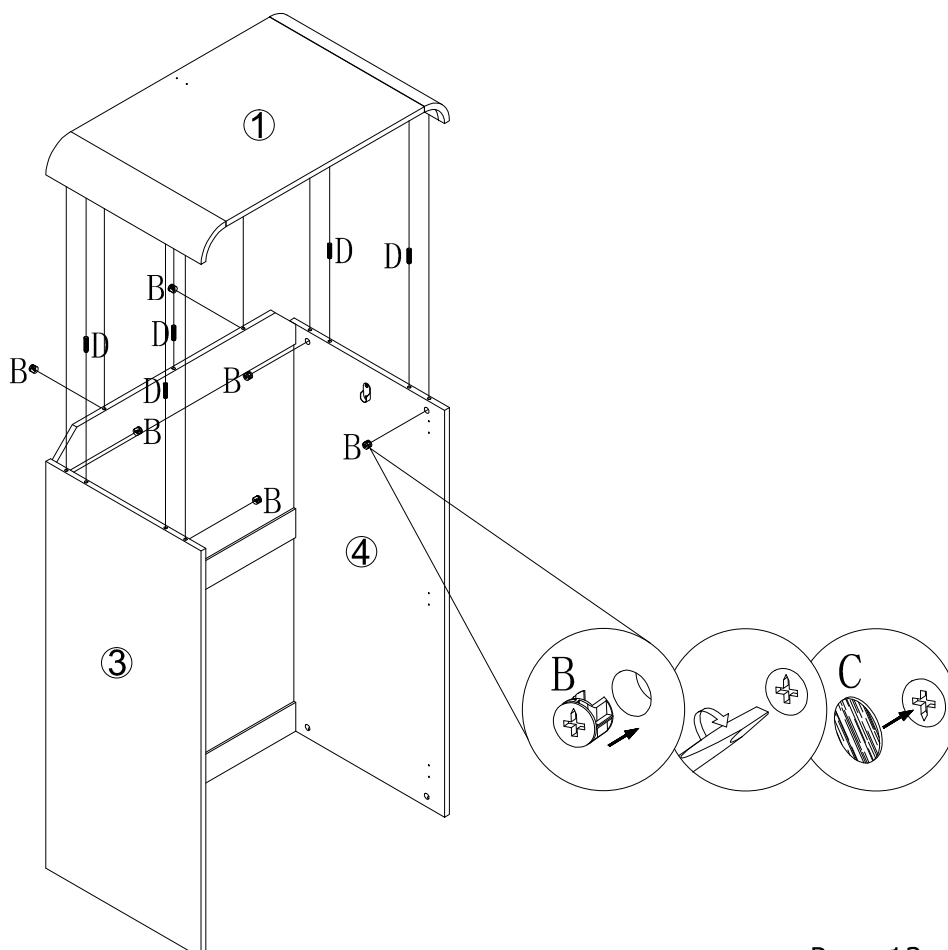

STEP 17



No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20



No. D
Quantity: 5 Pcs
8*30mm

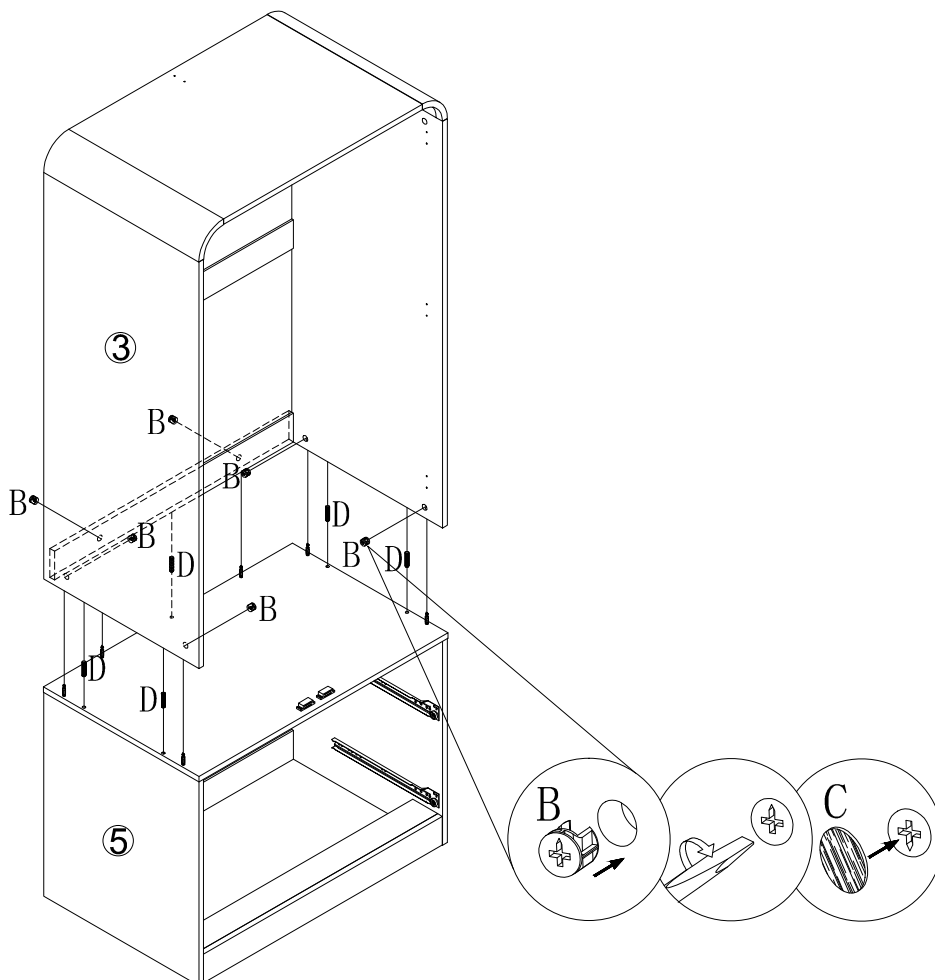


STEP 18

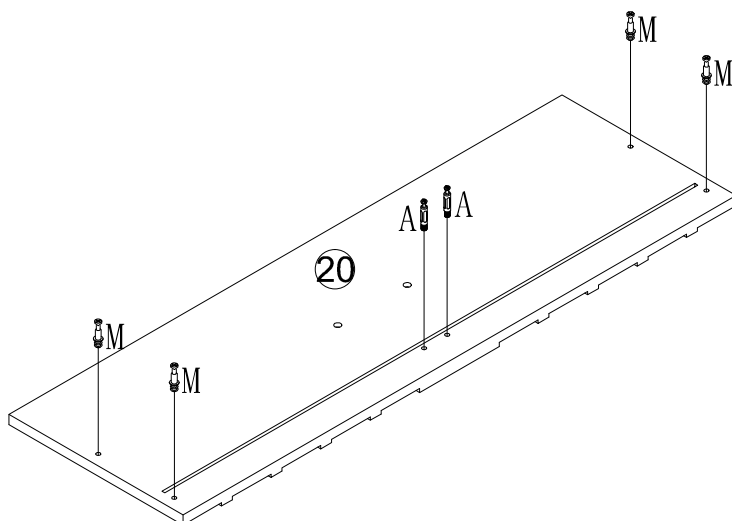


x2


No. A
Quantity: 4 Pcs
8*28 mm




No. M
Quantity: 8 Pcs
8*25mm




STEP 19

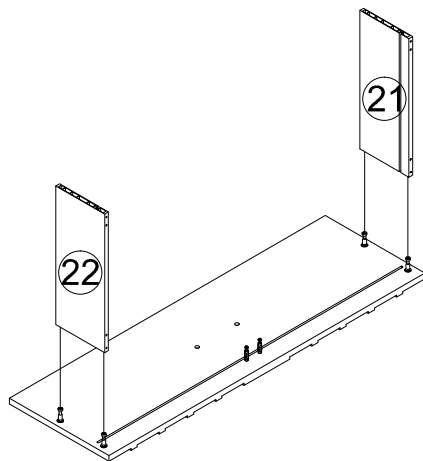

Please note that at the connection, both above and below, the glue beads need to be tapped into place.



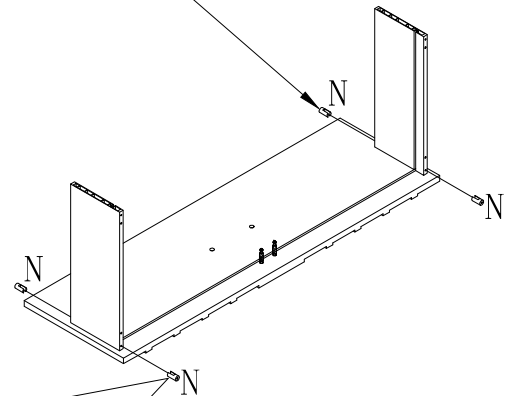


No. N
Quantity: 8 Pcs
Ø6*12mm

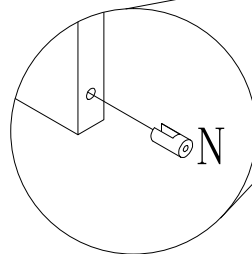

×2

STEP 20

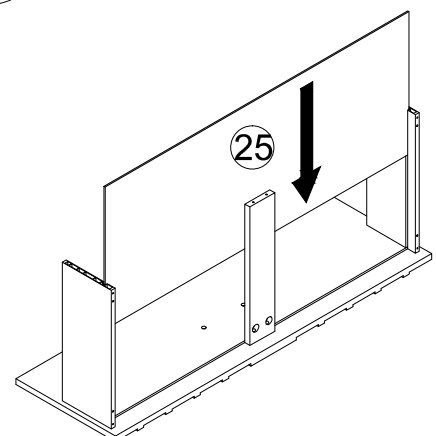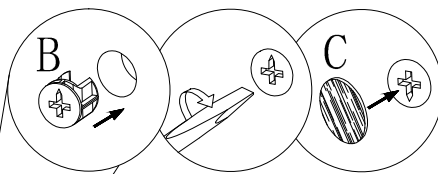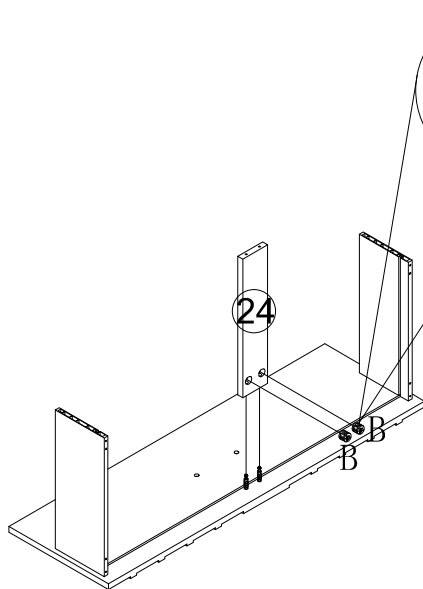

No. B
Quantity: 4 Pcs
Ø15





No. C
Quantity: 4 Pcs
Ø20




×2

STEP 21

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

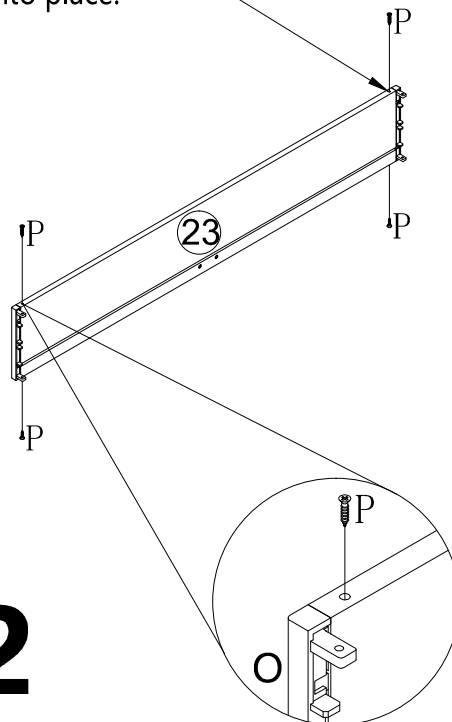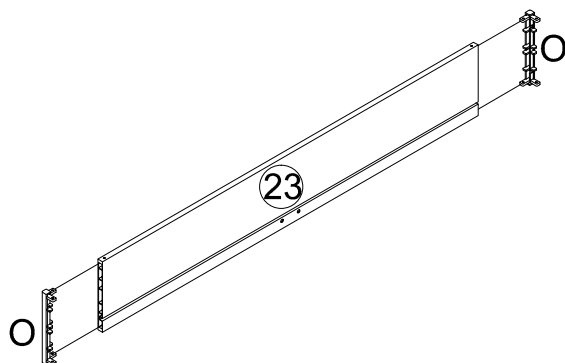

No. O
Quantity: 4 Pcs





No. P
Quantity: 8 Pcs
M3*12mm




x2

STEP 22


Please note that at the connection, both above and below, the glue beads need to be tapped into place.

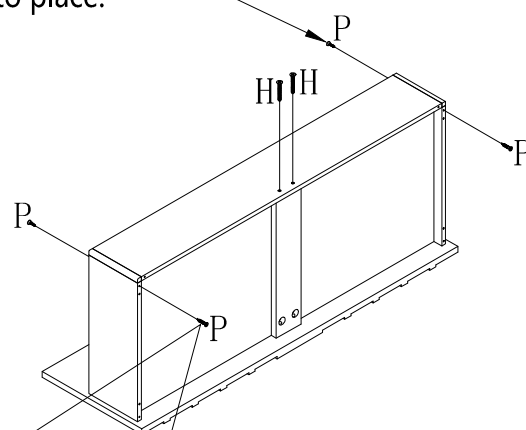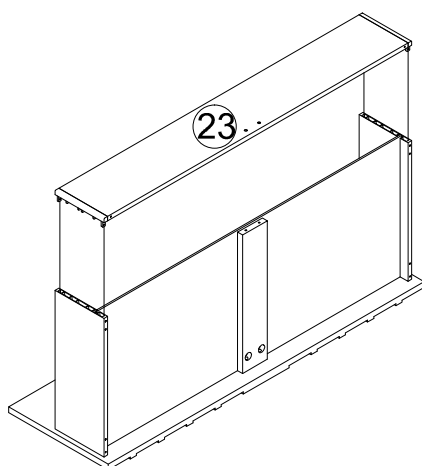

No. H
Quantity: 4 Pcs
M4*30mm




No. P
Quantity: 8 Pcs
M3*12mm




x2

STEP 23


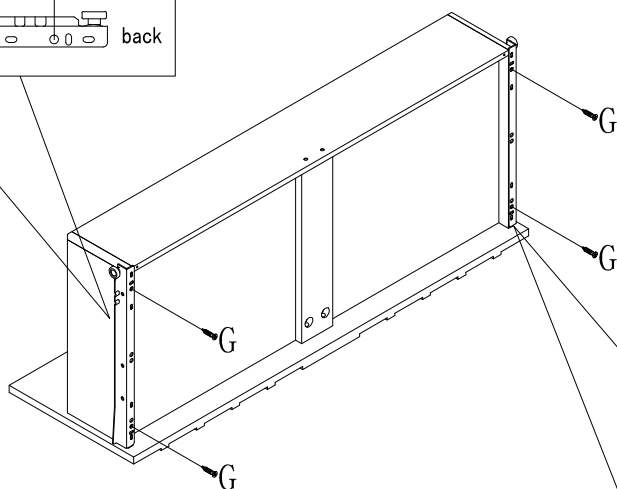


×2


No. E
Quantity: 2 Sets
12"



No. G
Quantity: 8 Pcs
M3.5*12mm

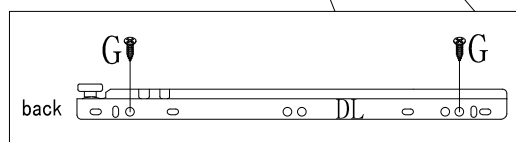


STEP 24

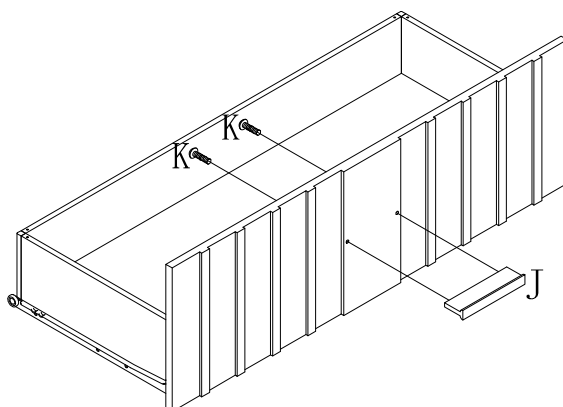

×2


No. J
Quantity: 2 Pcs




No. K
Quantity: 4 Pcs
M4*20mm




STEP 25

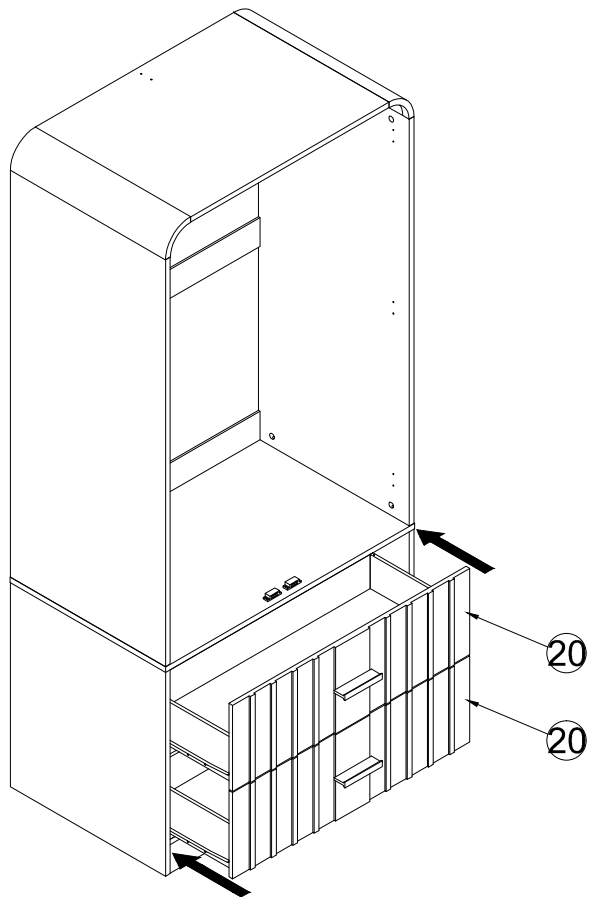


STEP 26

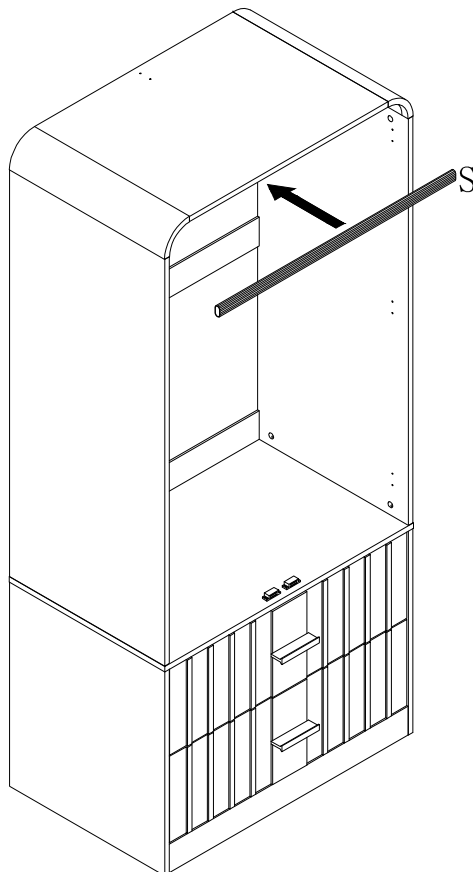


No. S
Quantity: 1 Pc
763*28*15mm




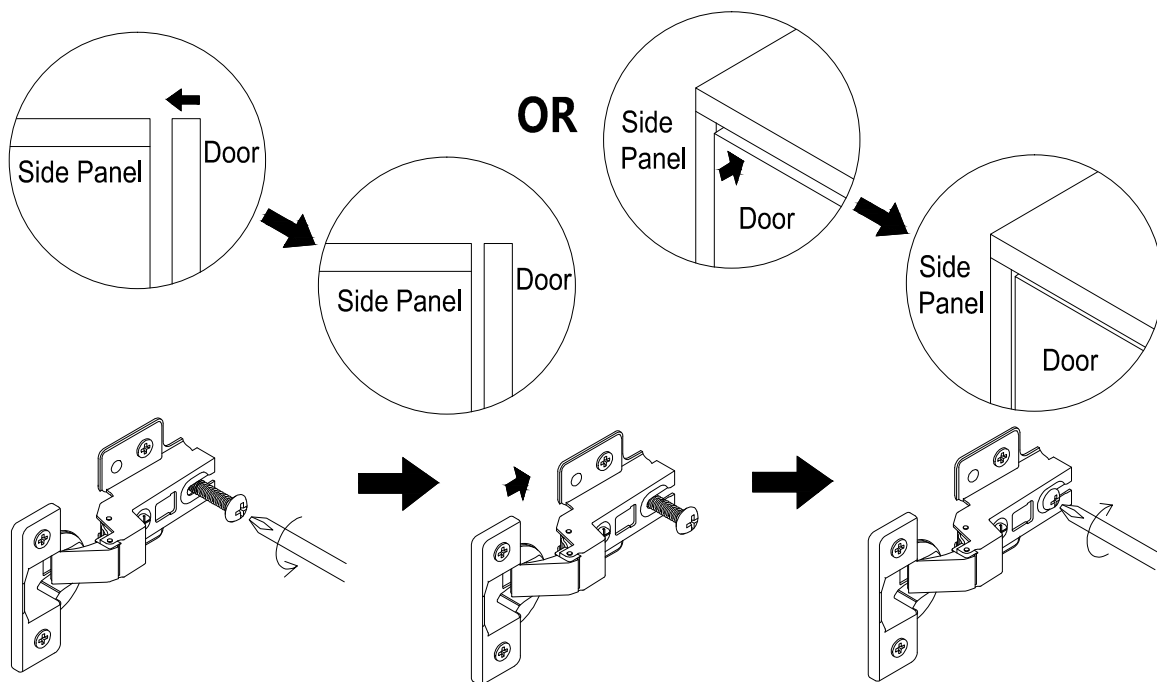


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.


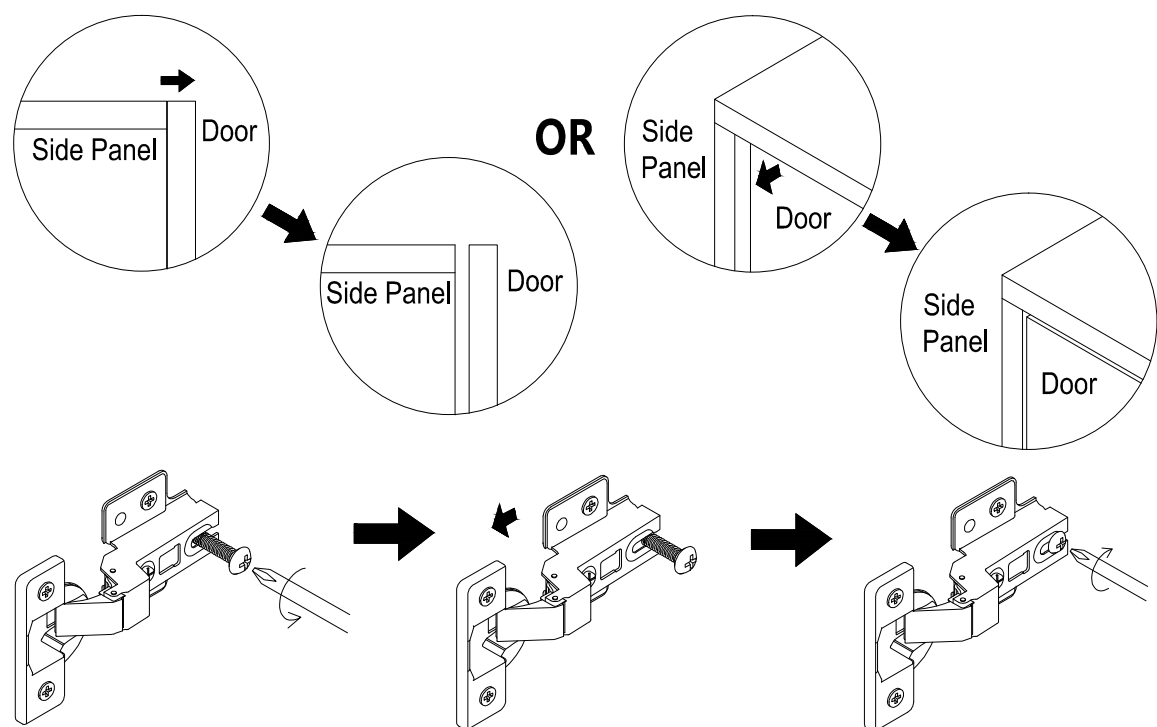


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.



! IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

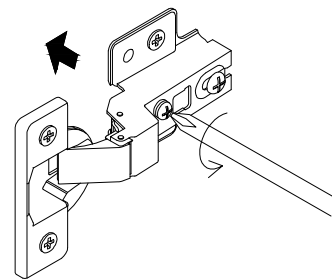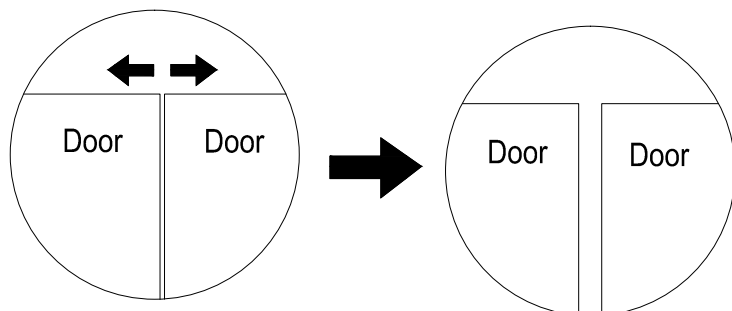


If the gap is too small between two doors, loose the front screw as shown.

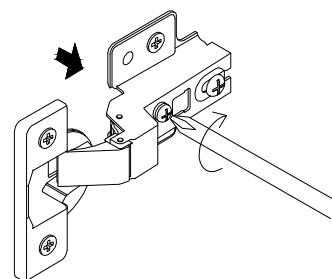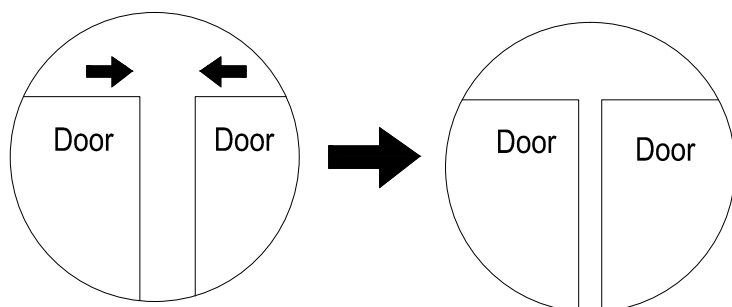

If the gap is too small between two doors, loose the front screw as shown.

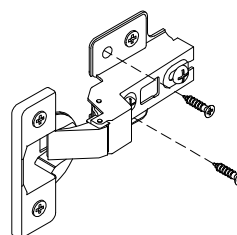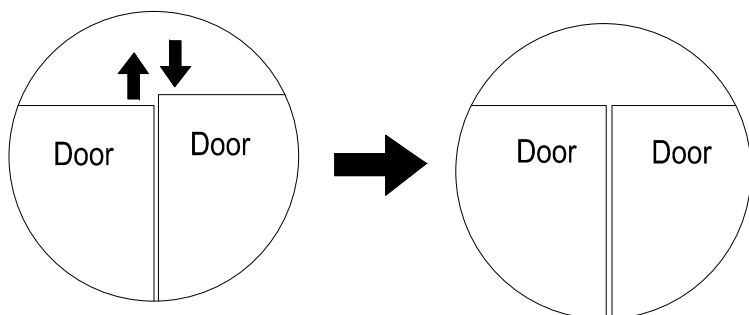


Attention:
After adjusted Hinges,
then lock screws.

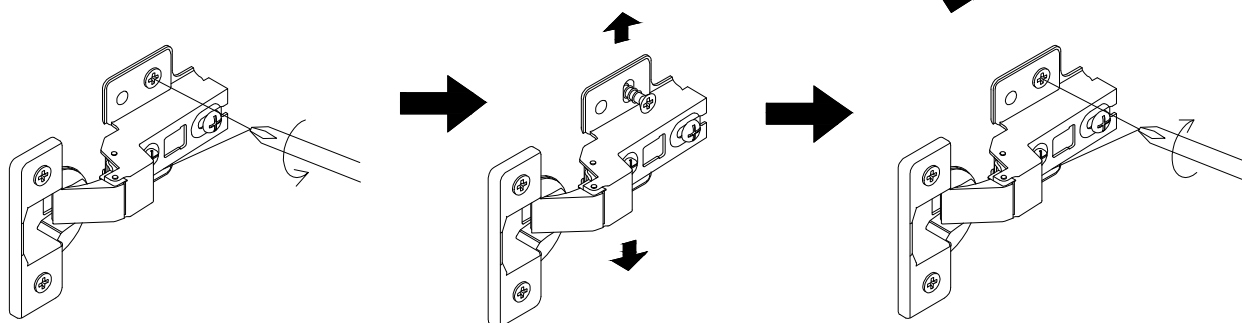

If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.Screw front two screws on wing when all are in place.

STEP 27

No. F
Quantity: 6 Pcs





No. G
Quantity: 20 Pcs
M3.5*12mm



No. K
Quantity: 8 Pcs
M4*20mm




No. Q
Quantity: 4 Pcs

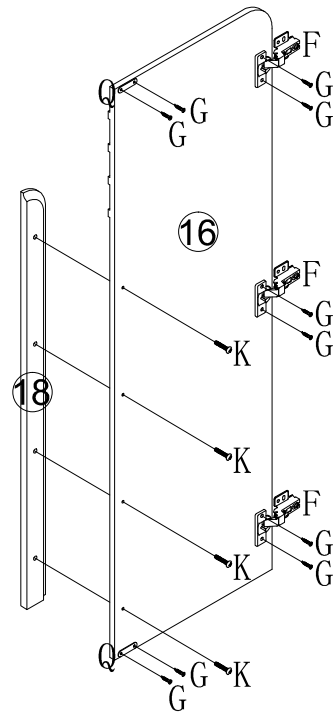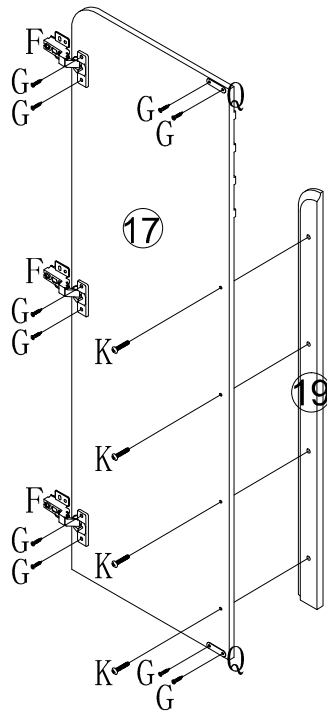


STEP 28

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

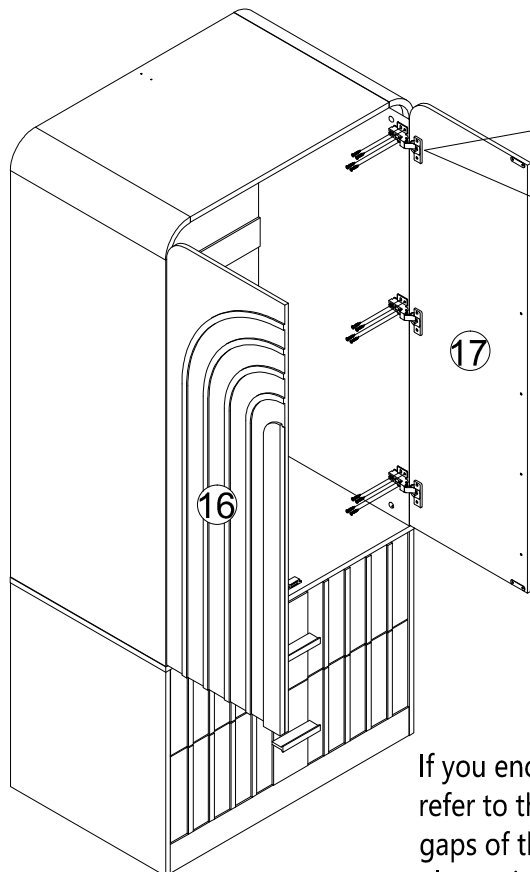

No. G
Quantity: 24 Pcs
M3.5*12mm


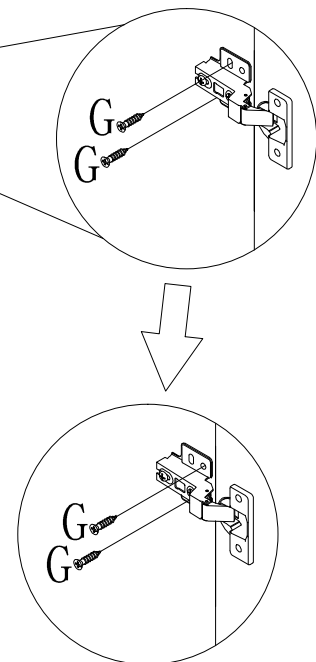


If you encounter difficulties during adjustment, please refer to the guidance on pages 18 and 19 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

STEP 29




“DO NOT skip Step 29. The Plastic Wedges (T) are crucial for the stability of the cabinet.”

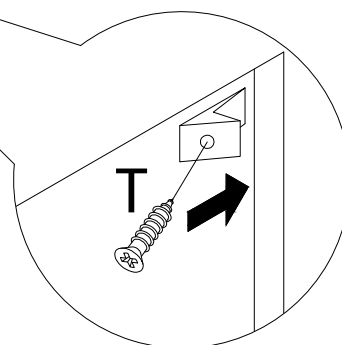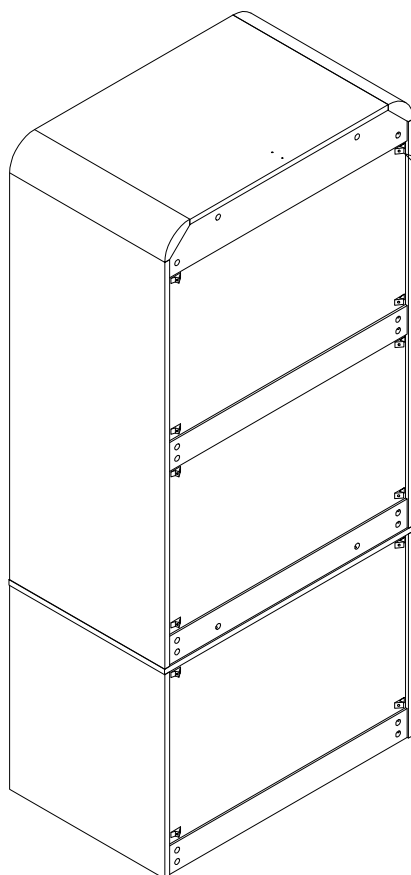


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. T
Quantity: 12 Sets



STEP 30

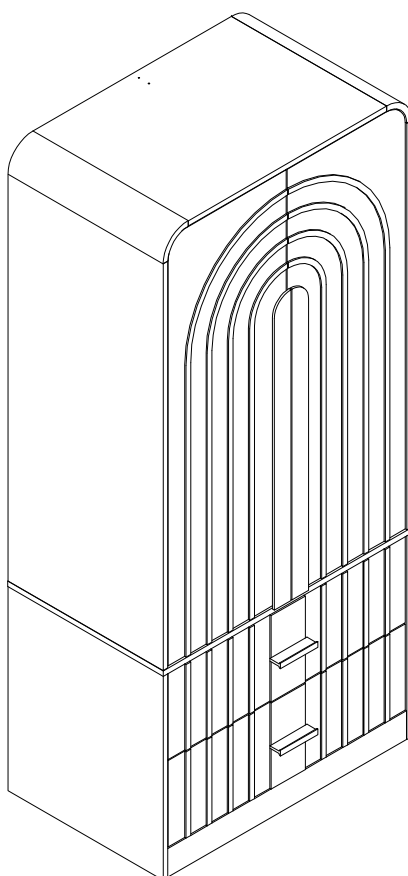


STEP 31









WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.


WALL

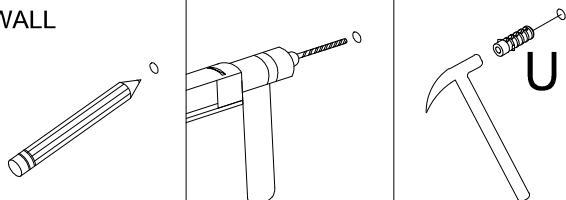

1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

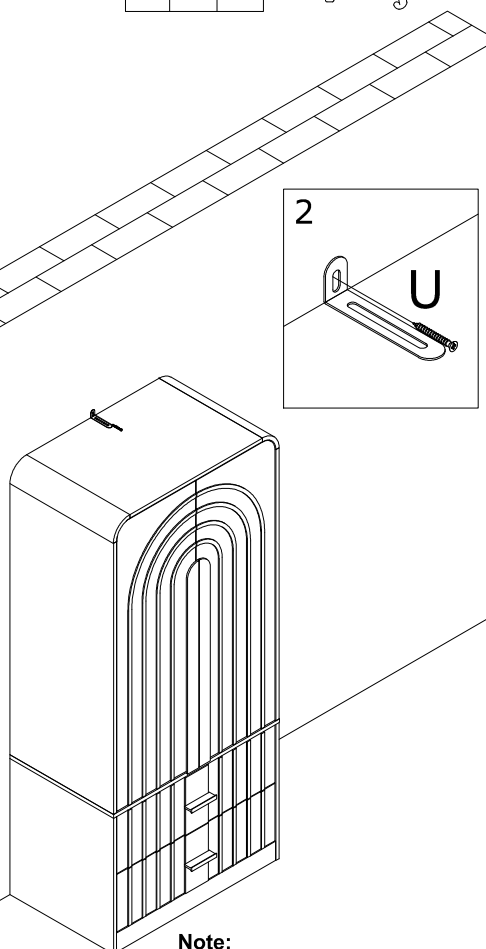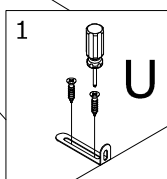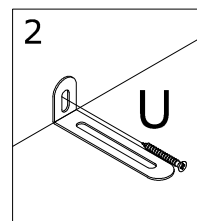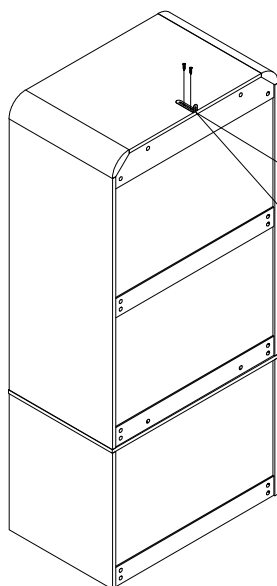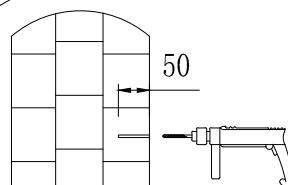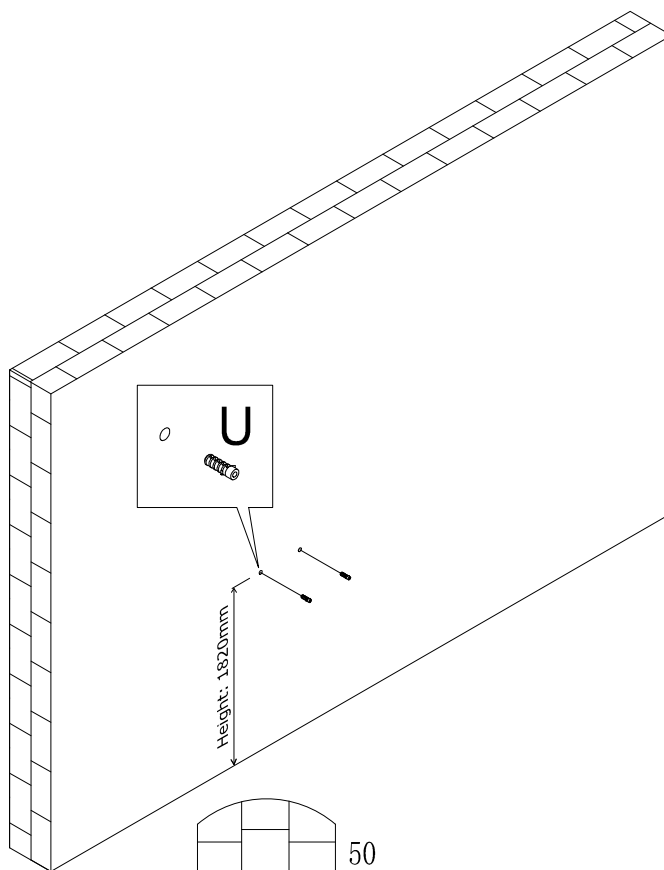

No. U
Quantity: 1 Sets



Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.