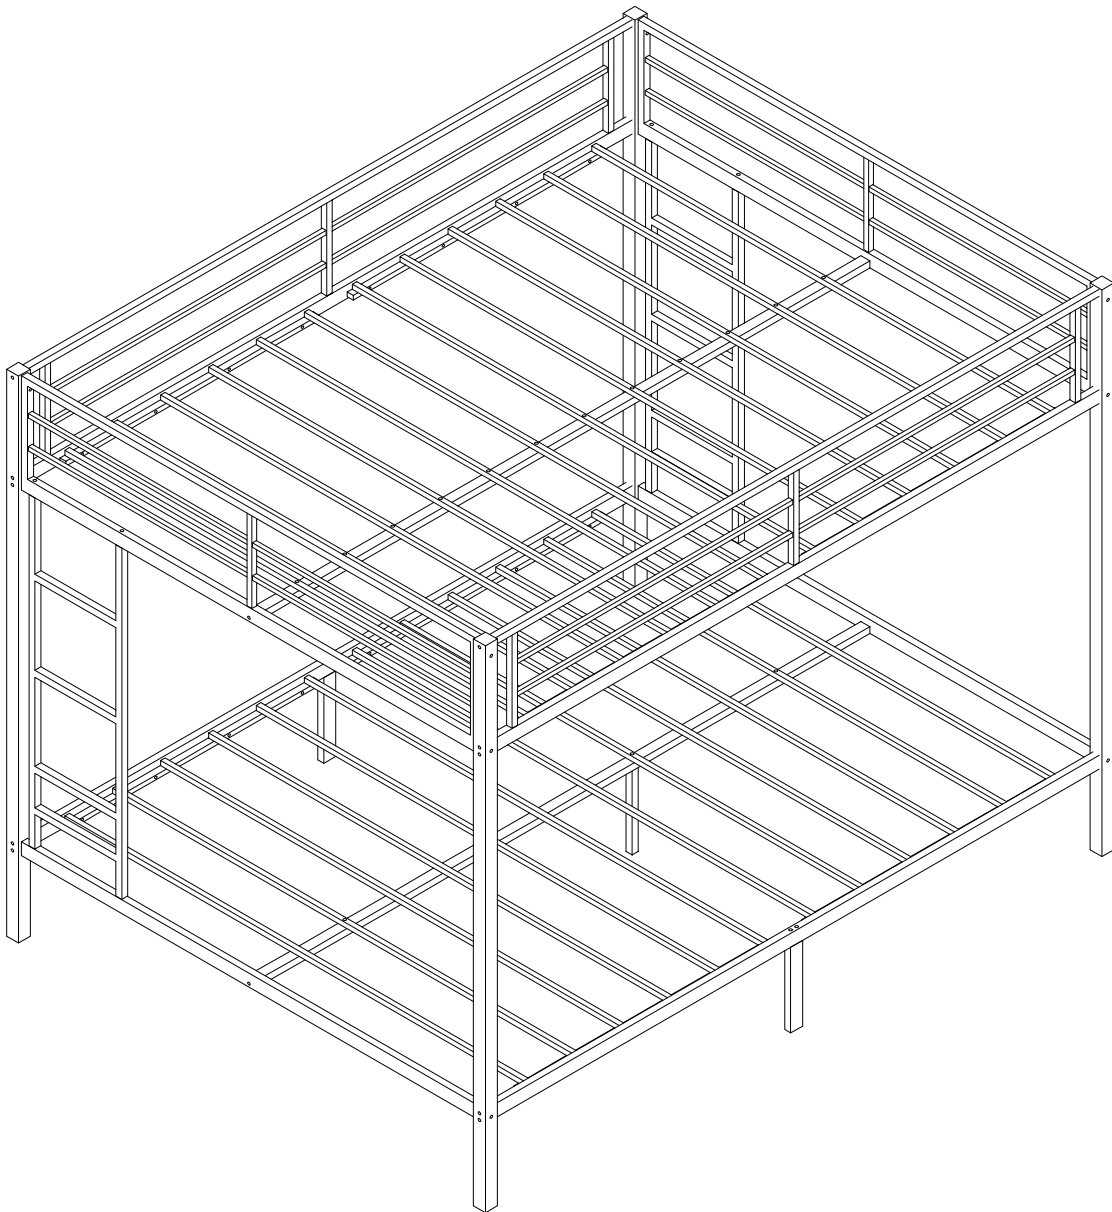


SKU:
LX-TC69Q-HY-BL

QUEEN OVER QUEEN METAL BUNK BED ASSEMBLY INSTRUCTIONS



SAFETY WARNINGS AND GENERAL NOTES

1. Follow all warning information on the bunk bed frame and shipping carton. Do not remove any warning labels from the bed.
2. Always use the recommended mattress size on the mattress support to help prevent entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check the guardrails, ladder, and all other components to make sure they are in the correct position, free from damage, and that all fasteners are tight.
5. Do not allow horseplay on or under the bed.
6. Do not allow jumping or rough play on the bed.
7. Do not exceed weight capacity. (see product specifications)
8. Mattress must fit securely within the frame.
9. Always secure the bed to the wall using the anti-tip kit.
10. Do not allow more than one person on the upper bunk at a time.
11. Always use the ladder when entering or leaving the upper bunk.
12. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts only.
13. Using a night light may provide additional safety for anyone using the upper bunk.
14. Always use guardrails on both long sides of the upper bunk.
15. If the bunk bed is placed next to a wall, the full-length guardrail should be positioned against the wall to help prevent entrapment between the bed and the wall. The use of water mattresses or sleep flotation mattresses are prohibited.
16. **STRANGULATION HAZARD:** Never attach or hang items to any part of the bunk bed that is not designed for use with the bed, including but not limited to hooks, belts, and jump ropes.
17. Keep these instructions for future reference.
18. We recommend assembling the bunk bed on the shipping carton or on a protected surface to help protect your floor or carpet.
19. Make sure all staples are removed from the carton before beginning assembly.
20. Use only the mattress sizes specified below.

Upper Bunk Mattress

Bed Type: Queen Standard

Length: 79-1/2"

Width: 59-1/2"

Maximum Thickness: 6" max

Lower Bunk Mattress

Bed Type: Queen Standard

Length: 79-1/2"

Width: 59-1/2"

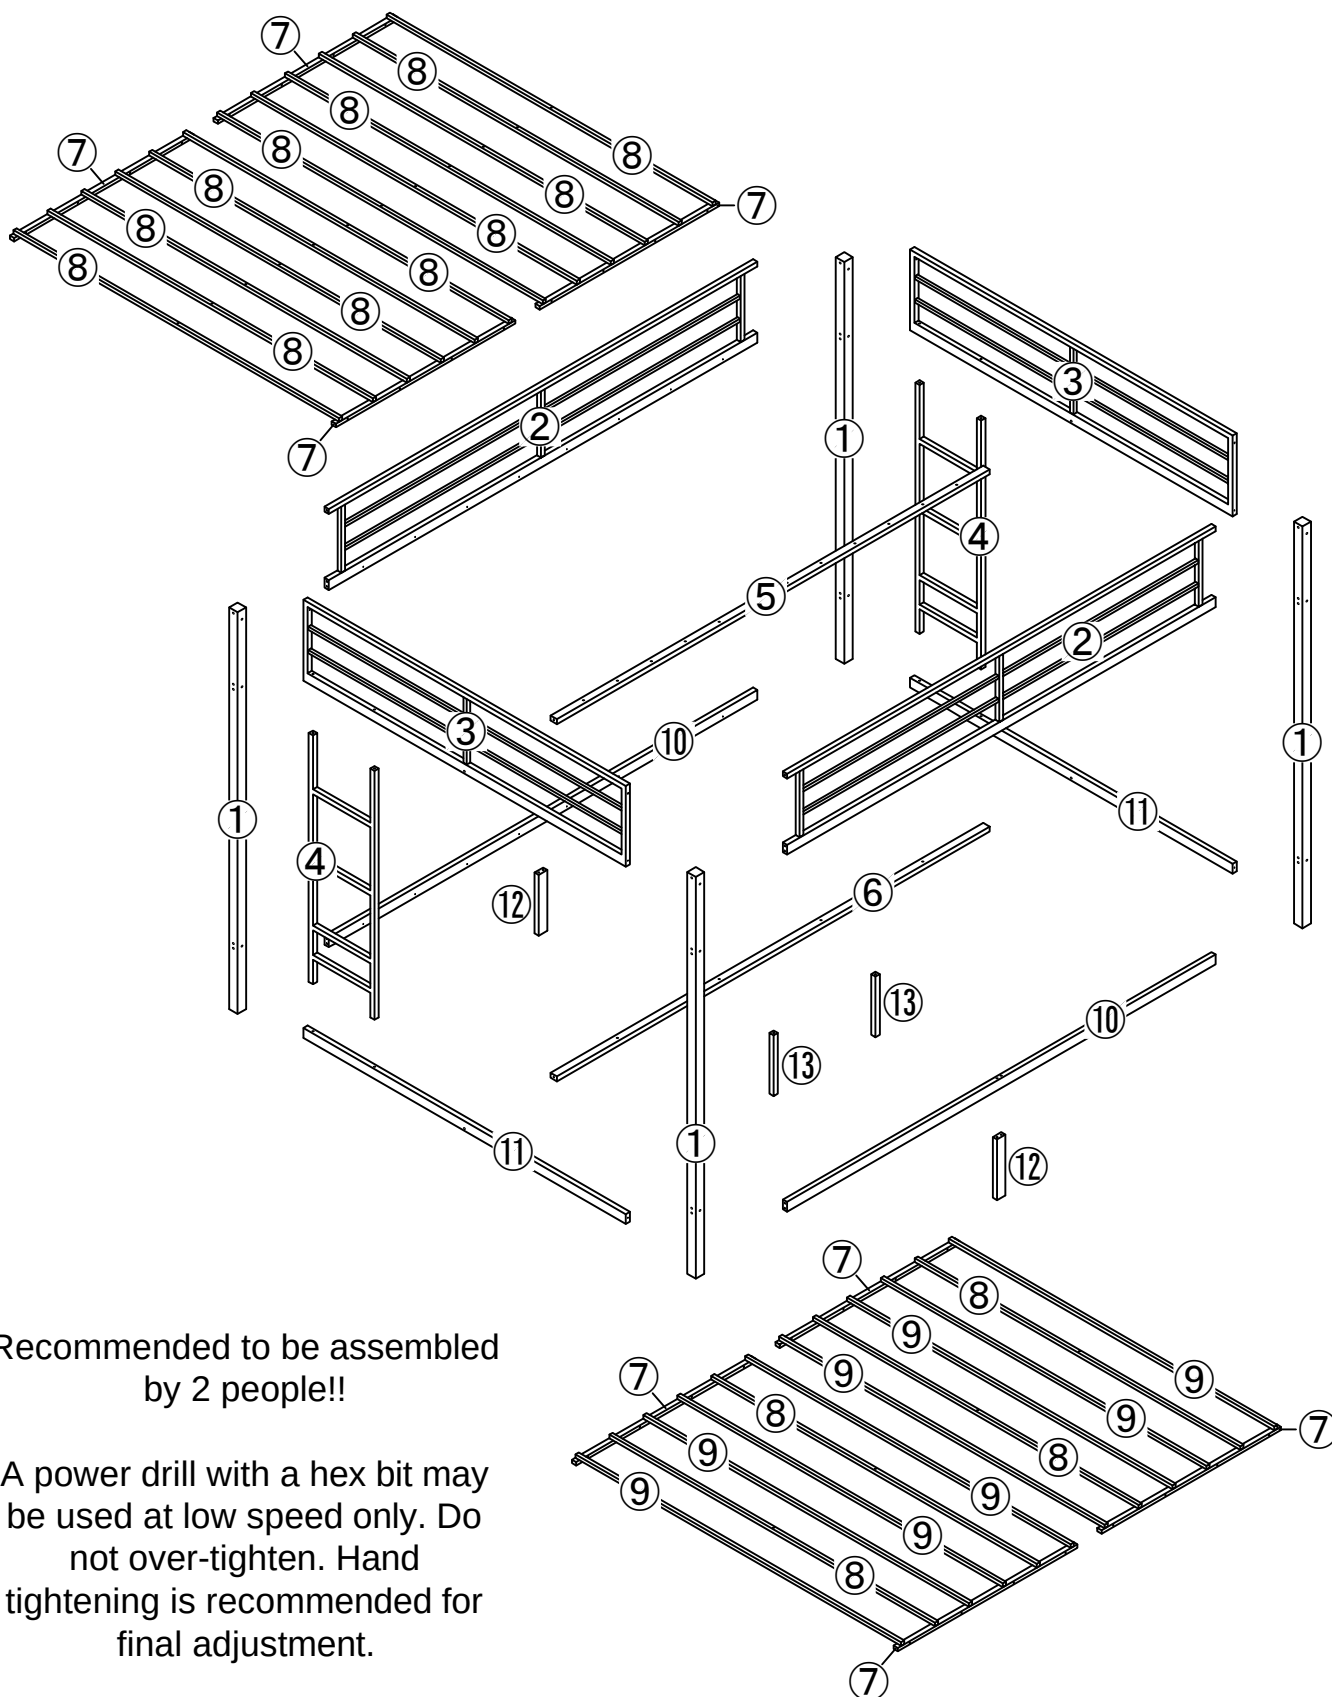
Maximum Thickness: 8" max

21. The top surface of the mattress must be at least 5" (127 mm) below the upper edge of the guardrails.
22. Replacement parts, including additional guardrails, may be obtained from the manufacturer or dealer.
23. This product must be secured to a wall using the included anti-tip hardware. Failure to do so may result in serious injury or death.

Before Assembly:

- Check all parts and hardware against the parts list
- Leave all bolts slightly loose until the frame is fully assembled and aligned. Tighten all bolts during the final check.
- Assembly requires 2 adults
- Estimated assembly time: 1–2 hours








Bed Parts View





Recommended to be assembled
by 2 people!!

A power drill with a hex bit may
be used at low speed only. Do
not over-tighten. Hand
tightening is recommended for
final adjustment.

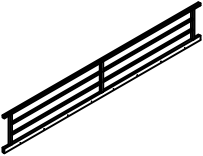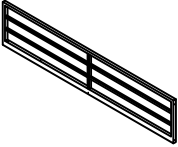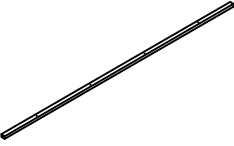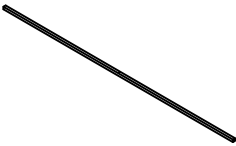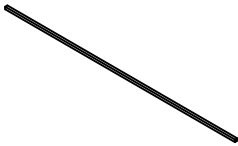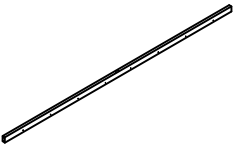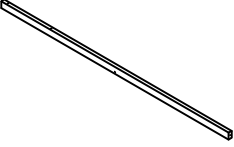Part List

				
① - 4pcs	② - 2pcs	③ - 2pcs	④ - 2pcs	⑤ - 1pc
				
⑥ - 1pc	⑦ - 8pcs	⑧ - 16pcs	⑨ - 8pcs	⑩ - 2pcs
				
⑪ - 2pcs	⑫ - 2pcs	⑬ - 2pcs		

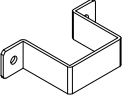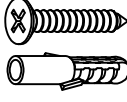
Hardware List



				
M8*60mm Ⓐ - 40pcs	M8*55mm Ⓑ - 6pcs	M8*35mm Ⓒ - 4pcs	M8*30mm Ⓓ - 14pcs	M8*15mm Ⓔ - 18pcs
				
M6*30mm Ⓖ - 32pcs	M6*25mm Ⓗ - 48pcs	Ⓓ - 2pcs	Ⓖ - 4sets	

Tool List



			
M5mm Ⓕ - 2pcs	M4mm Ⓖ - 1pc	Attention: Please wear gloves during assembly	

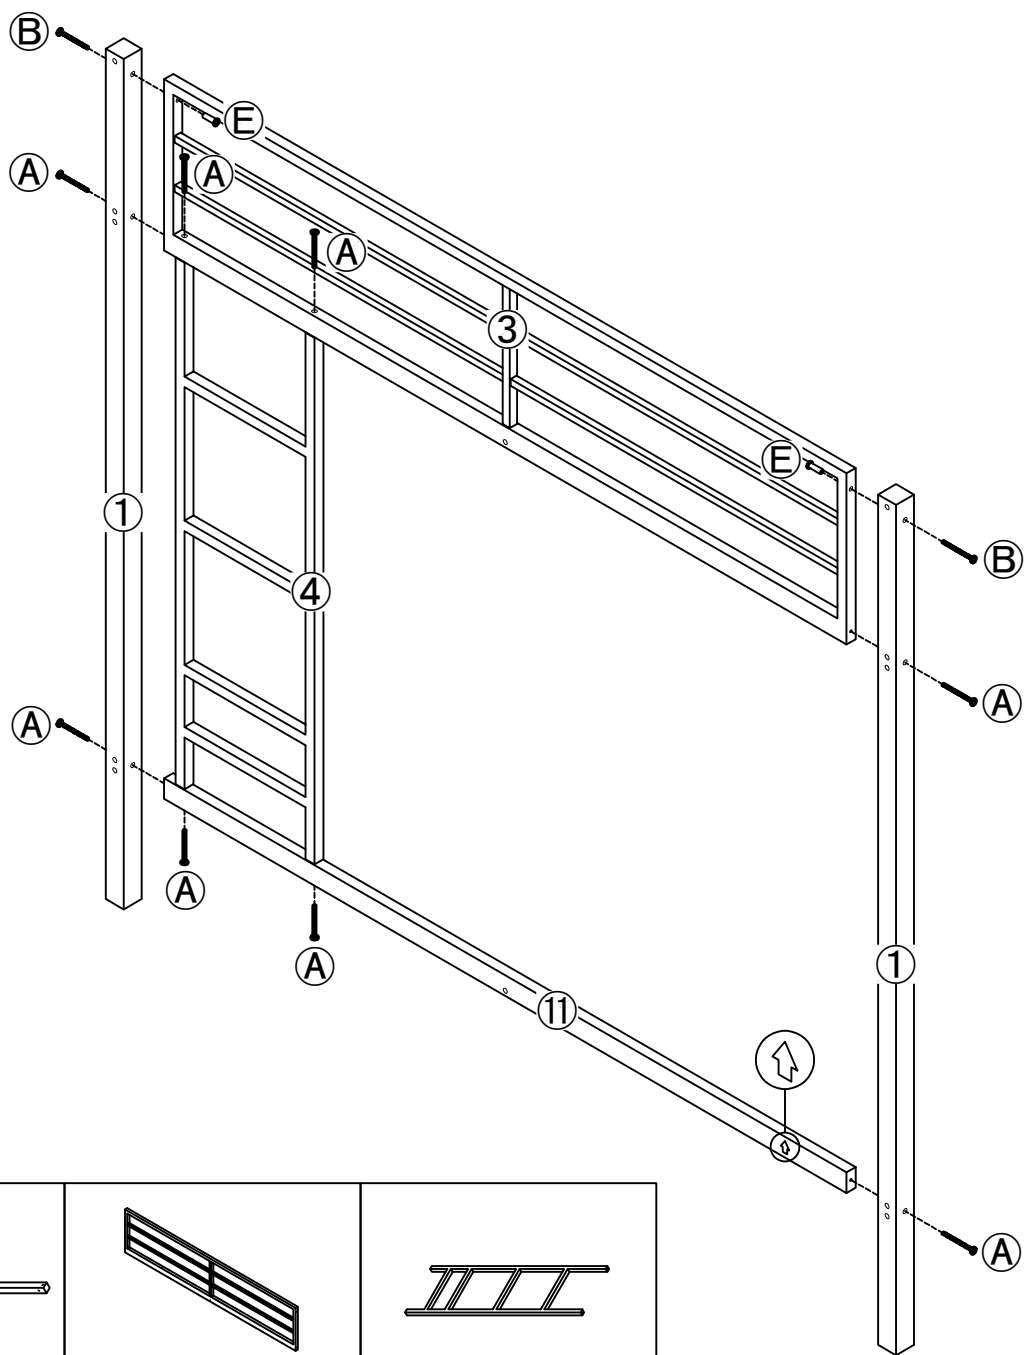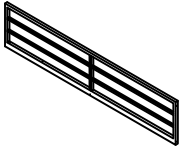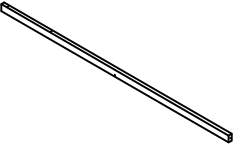Step 1: Assemble two side frames as shown using Parts #1, #3, #4, and #11. Use Bolts A, B, and E with Allen Key F. Do not fully tighten the bolts until all parts are aligned. Make sure the ladder is positioned on the correct side before tightening.



				
① - 4pcs	③ - 2pcs	④ - 2pcs		
	 M8*60mm A - 16pcs	 M8*55mm B - 4pcs	 M8*15mm E - 4pcs	 M5mm F - 2pcs
⑪ - 2pcs				

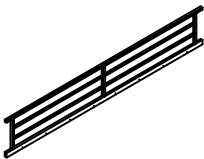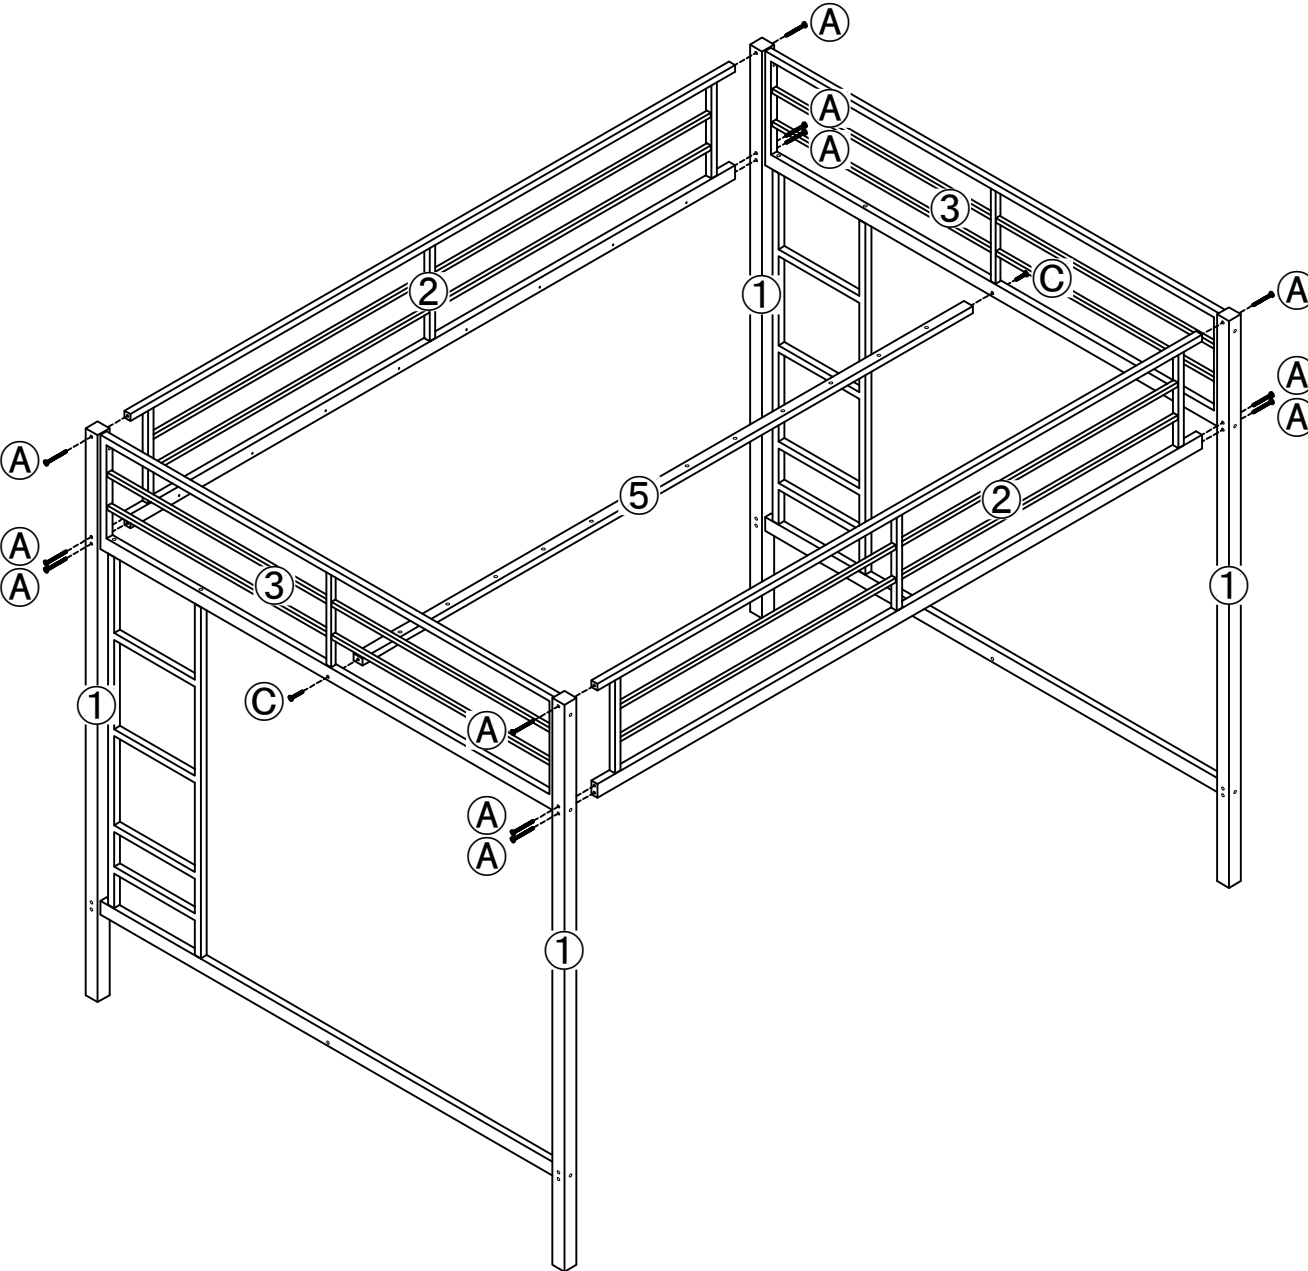Step 2: Use hardware A, C and F to connect #2, #5 and side frames together. Check alignment before fully tightening all bolts.



② - 2pcs



⑤ - 1pc



M8*60mm

① - 12pcs



M8*35mm

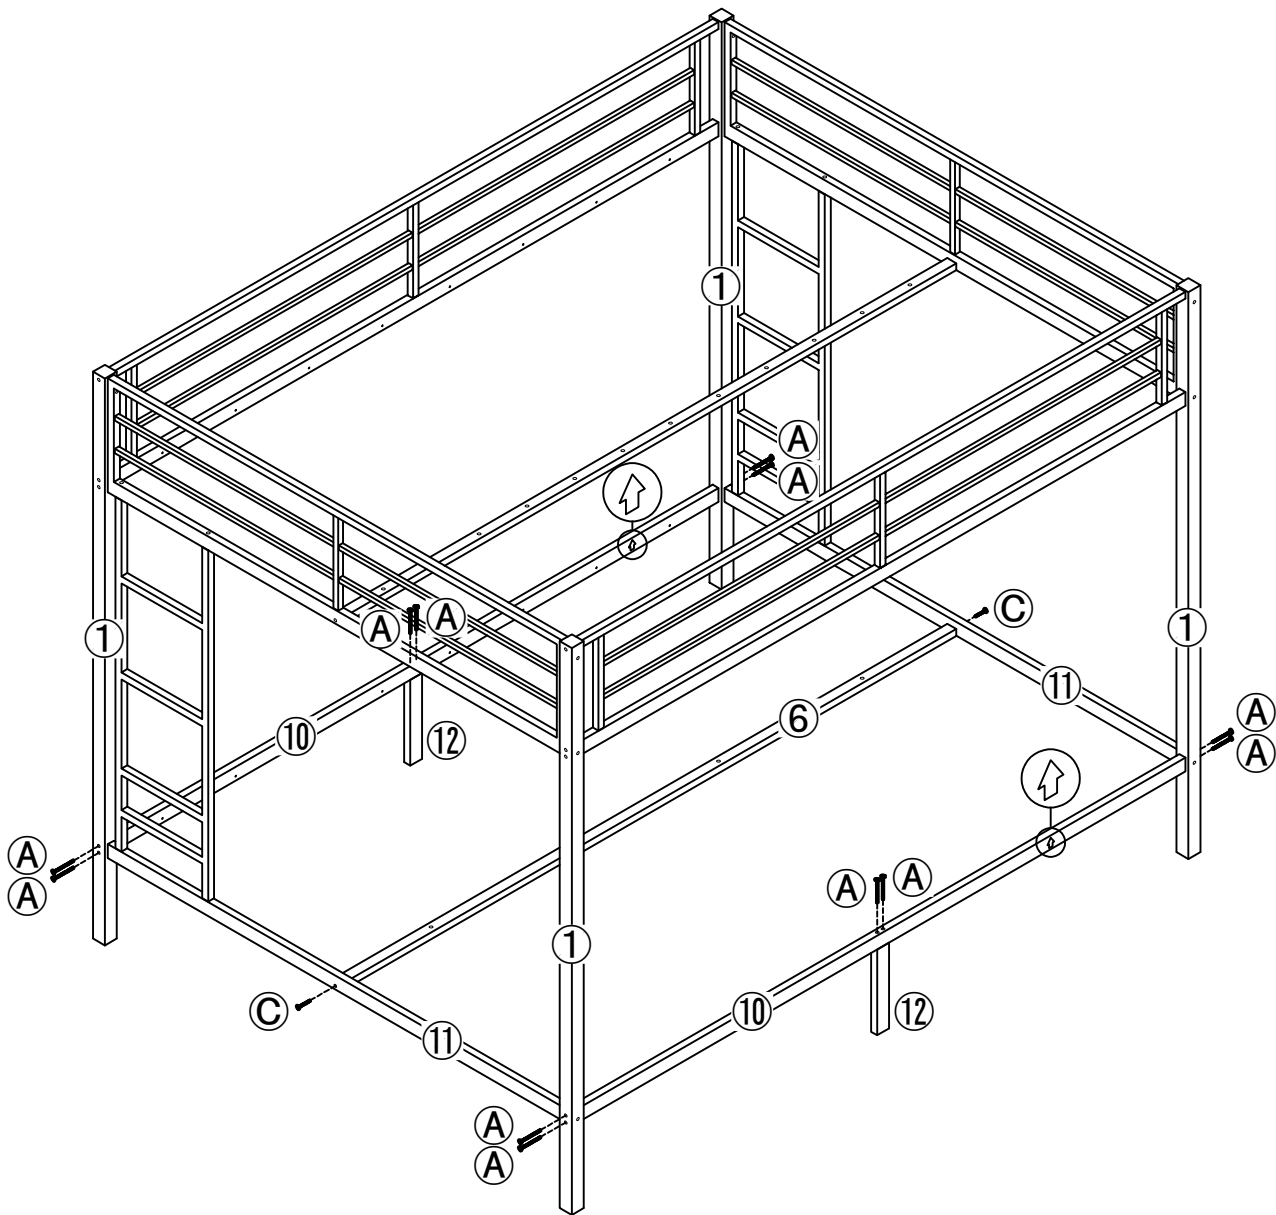
③ - 2pcs

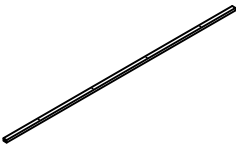
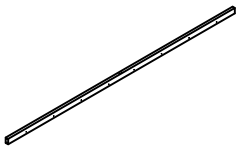


M5mm

④ - 1pc


Step 3: Use hardware A, C and F to connect #6, #10, #12 and bed frame together. Check alignment before fully tightening all bolts. Make sure all pre-drilled holes face inward toward the mattress area.




 ⑥ - 1pc				
 ⑩ - 2pcs	 ⑫ - 2pcs	 M8*60mm Ⓐ - 12pcs	 M8*35mm Ⓒ - 2pcs	 M5mm Ⓕ - 1pc


Step 4: Use hardware H and L to assemble the two slat panels as shown.

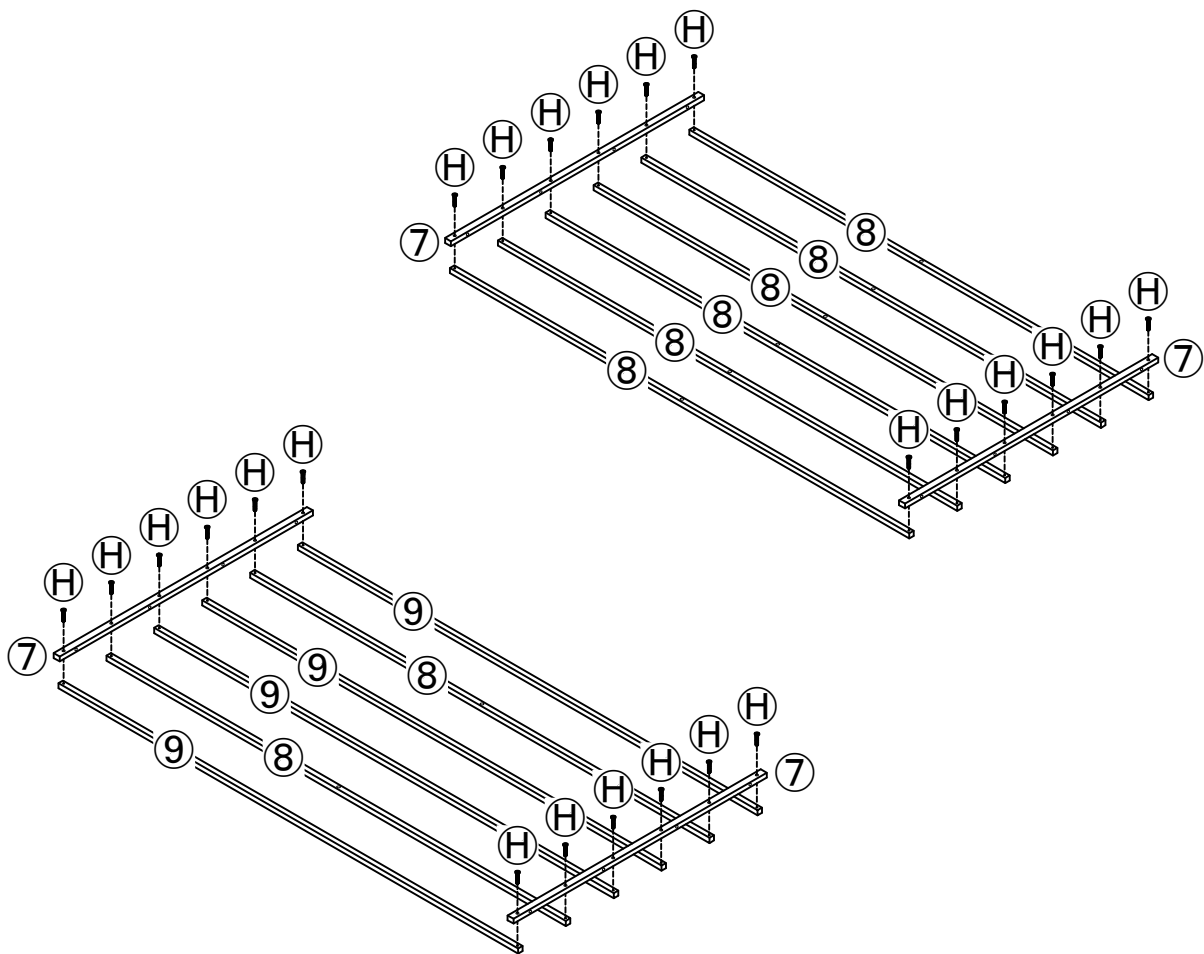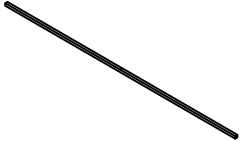Assemble the upper slat panel using parts #7 and #8.
Assemble the lower slat panel using parts #7, #8, and #9.
Once assembled, flip both panels over for installation.




 ⑦-8pcs	 ⑧-16pcs	 ⑨-8pcs	 M6*25mm ①-48pcs	 M4mm ②-1pc
---	--	---	---	--

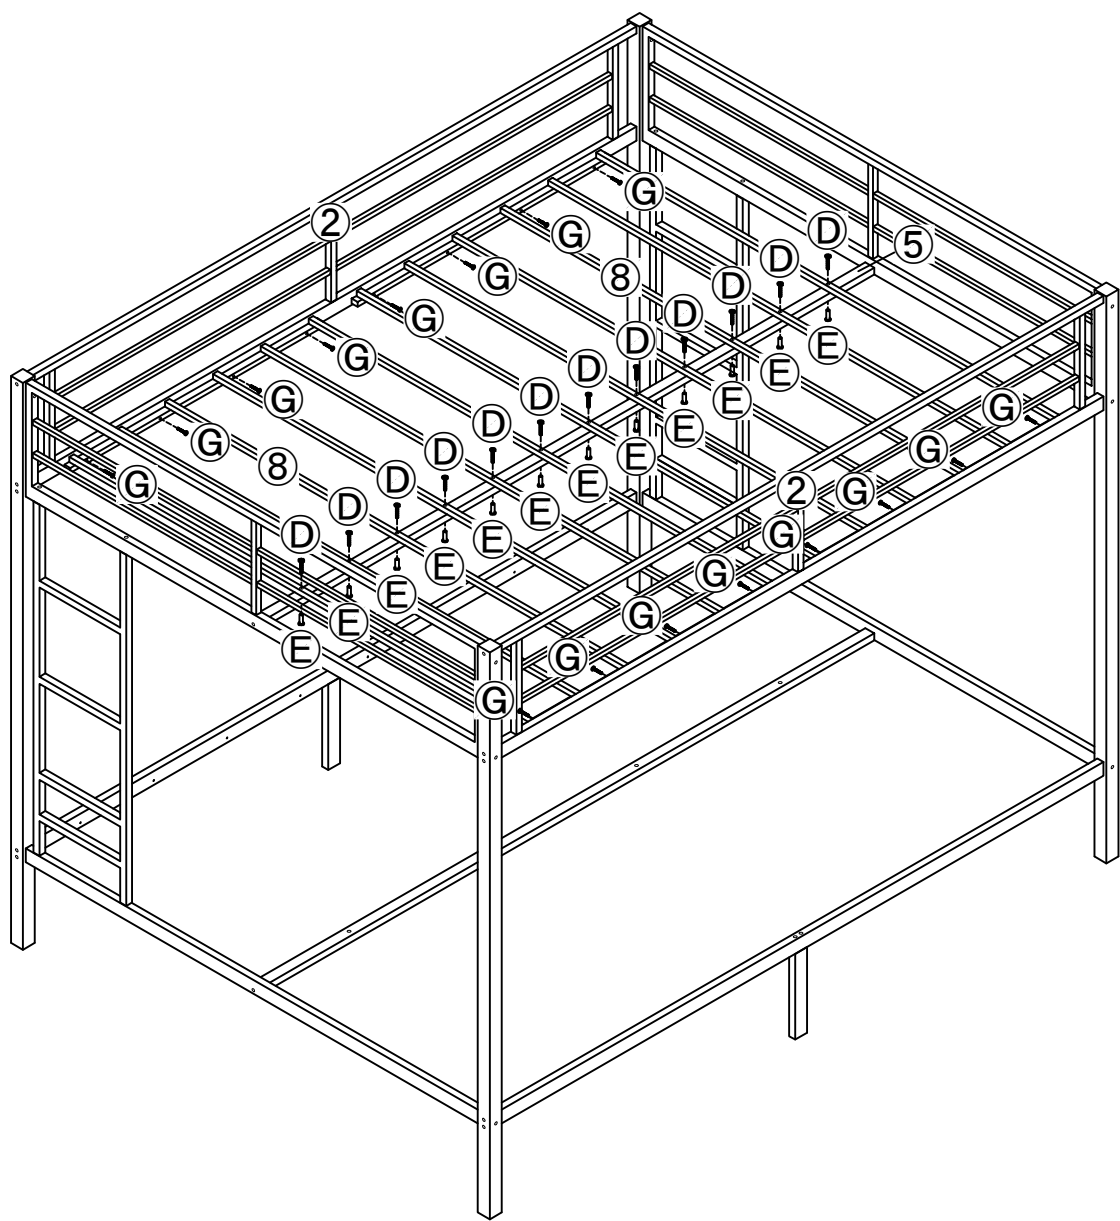Step 5: Attach the assembled upper slat panel to the upper bed frame using Bolts D, E, and G. Use Allen Keys F and L as needed. Do not step on the slats without a mattress in place.



				
M8*30mm	M8*15mm	M5mm	M6*30mm	M4mm
Ⓓ - 12pcs	Ⓔ - 12pcs	Ⓕ - 2pcs	Ⓖ - 16pcs	Ⓛ - 1pc

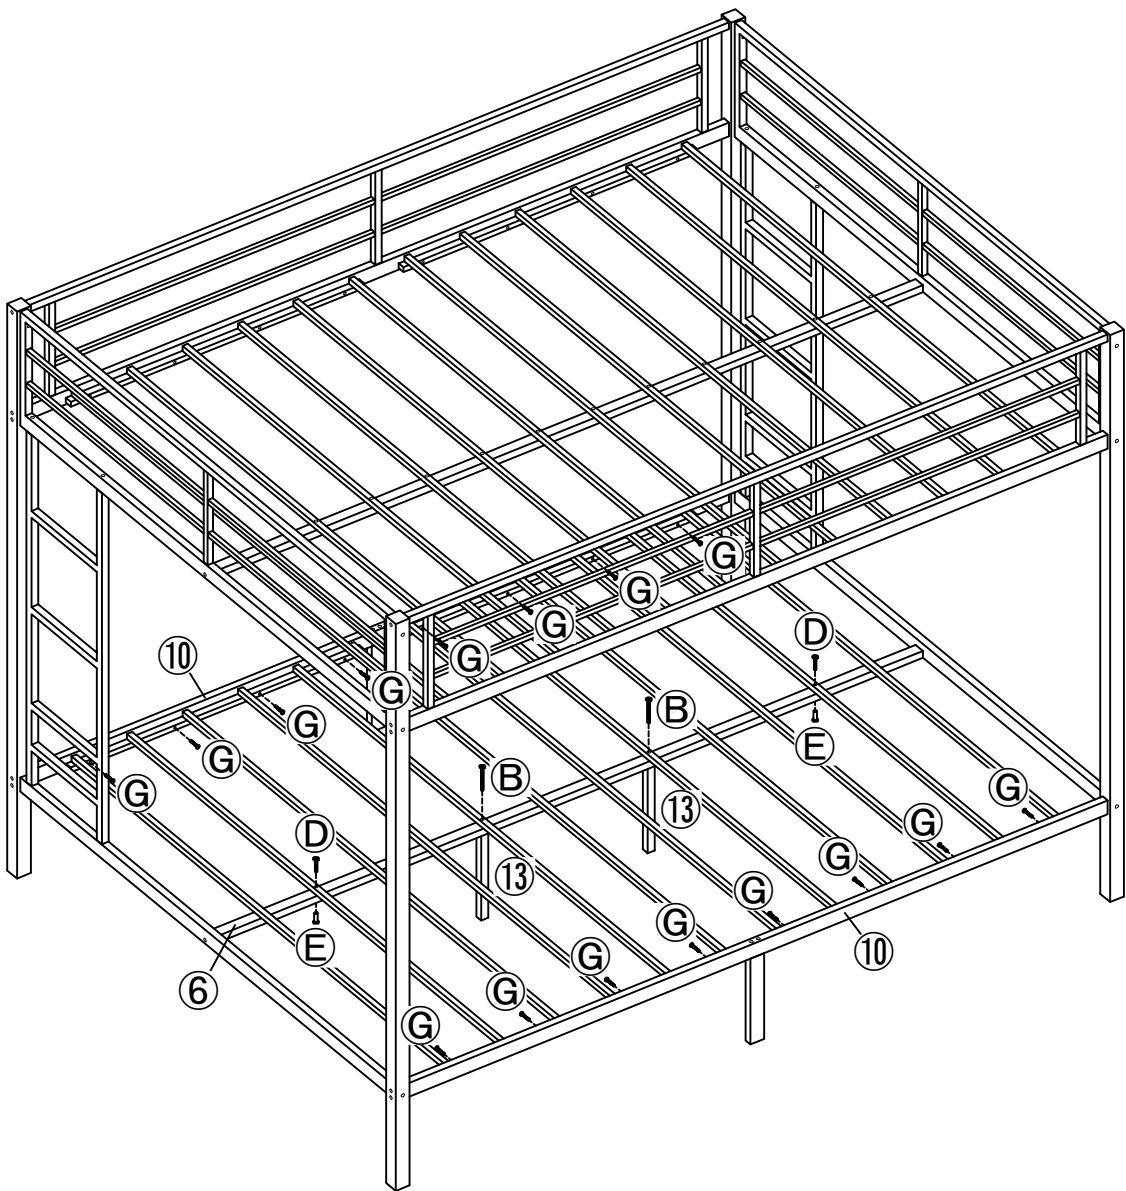Step 6: Attach Parts #13 and the assembled lower slat panel to the lower bed frame using Bolts B, D, E, and G. Use Allen Keys F and L as needed. Do not step on the slats without a mattress in place.



			 ⑬ - 2pcs	 M8*55mm Ⓑ - 2pcs
 M8*30mm Ⓓ - 2pcs	 M8*15mm Ⓔ - 2pcs	 M6*30mm Ⓖ - 16pcs	 M5mm Ⓕ - 2pcs	 M4mm Ⓛ - 1pc

Step 7: Secure the bed to the wall using anti-tip hardware T and U before use. For best results, attach the anti-tip brackets to wall studs when possible. If mounting to drywall, masonry, or another wall type, use anchors suitable for that wall material.

Final Check:

Tighten all bolts after the frame is fully assembled.

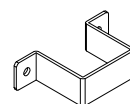
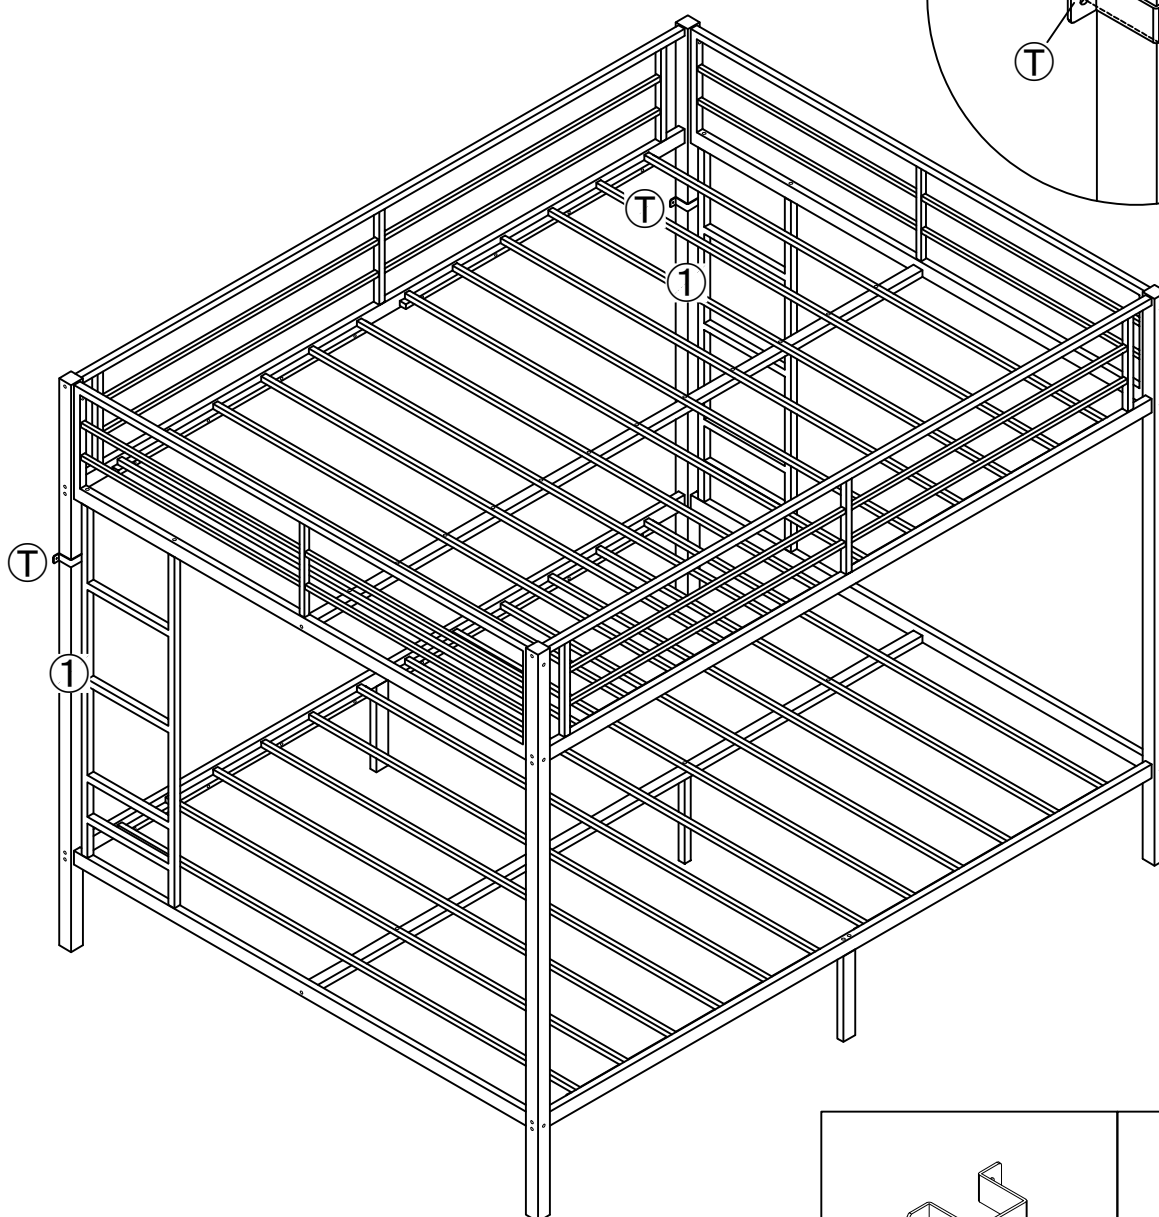
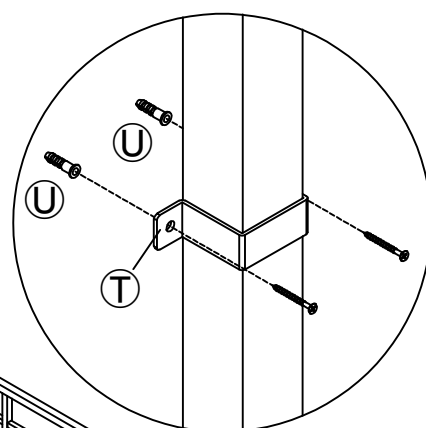
Confirm the ladder is securely attached.

Confirm the anti-tip brackets are secured to the wall.


Place the correct mattress on the frame before use.

Confirm all slats are securely fastened and evenly positioned.

Make sure the bed is level and stable before use.



Ⓣ - 2pcs

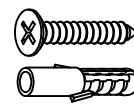

Ⓢ - 4sets