


ASSEMBLY INSTRUCTIONS

Storage Cabinet

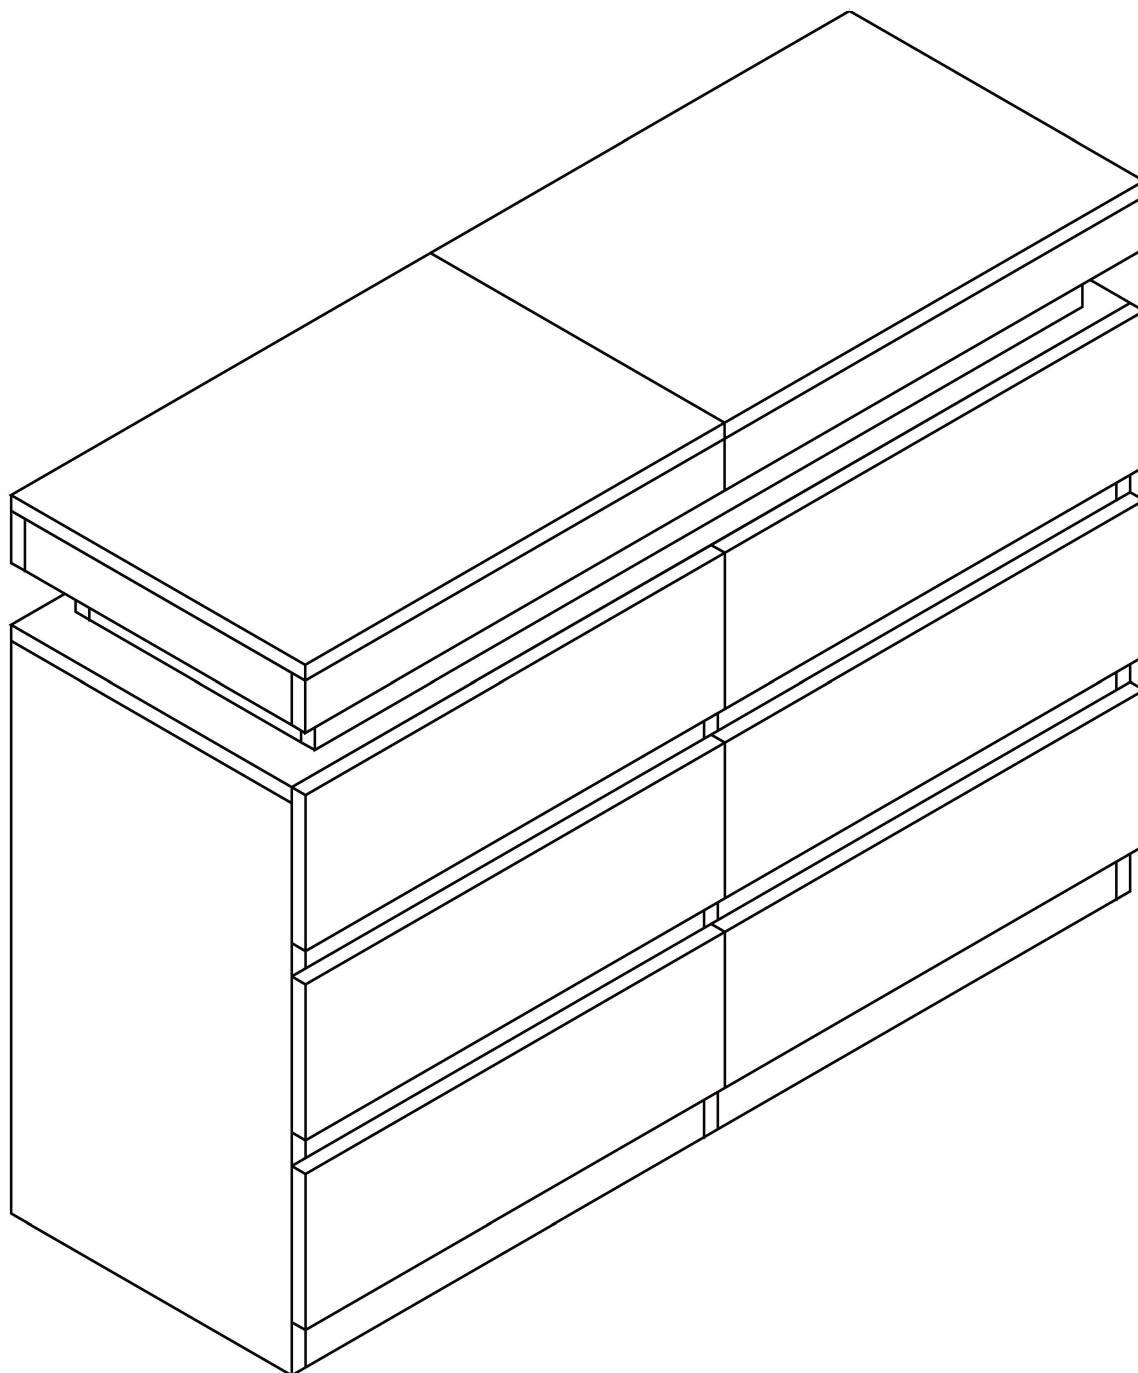

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damaged parts or hardware. Please also tell us your "Order ID", We will solve for you as soon as possible.

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. Keep all hardware parts out of reach of children.
2. Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals..

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.






Part List

Please check if all the pieces listed below are received

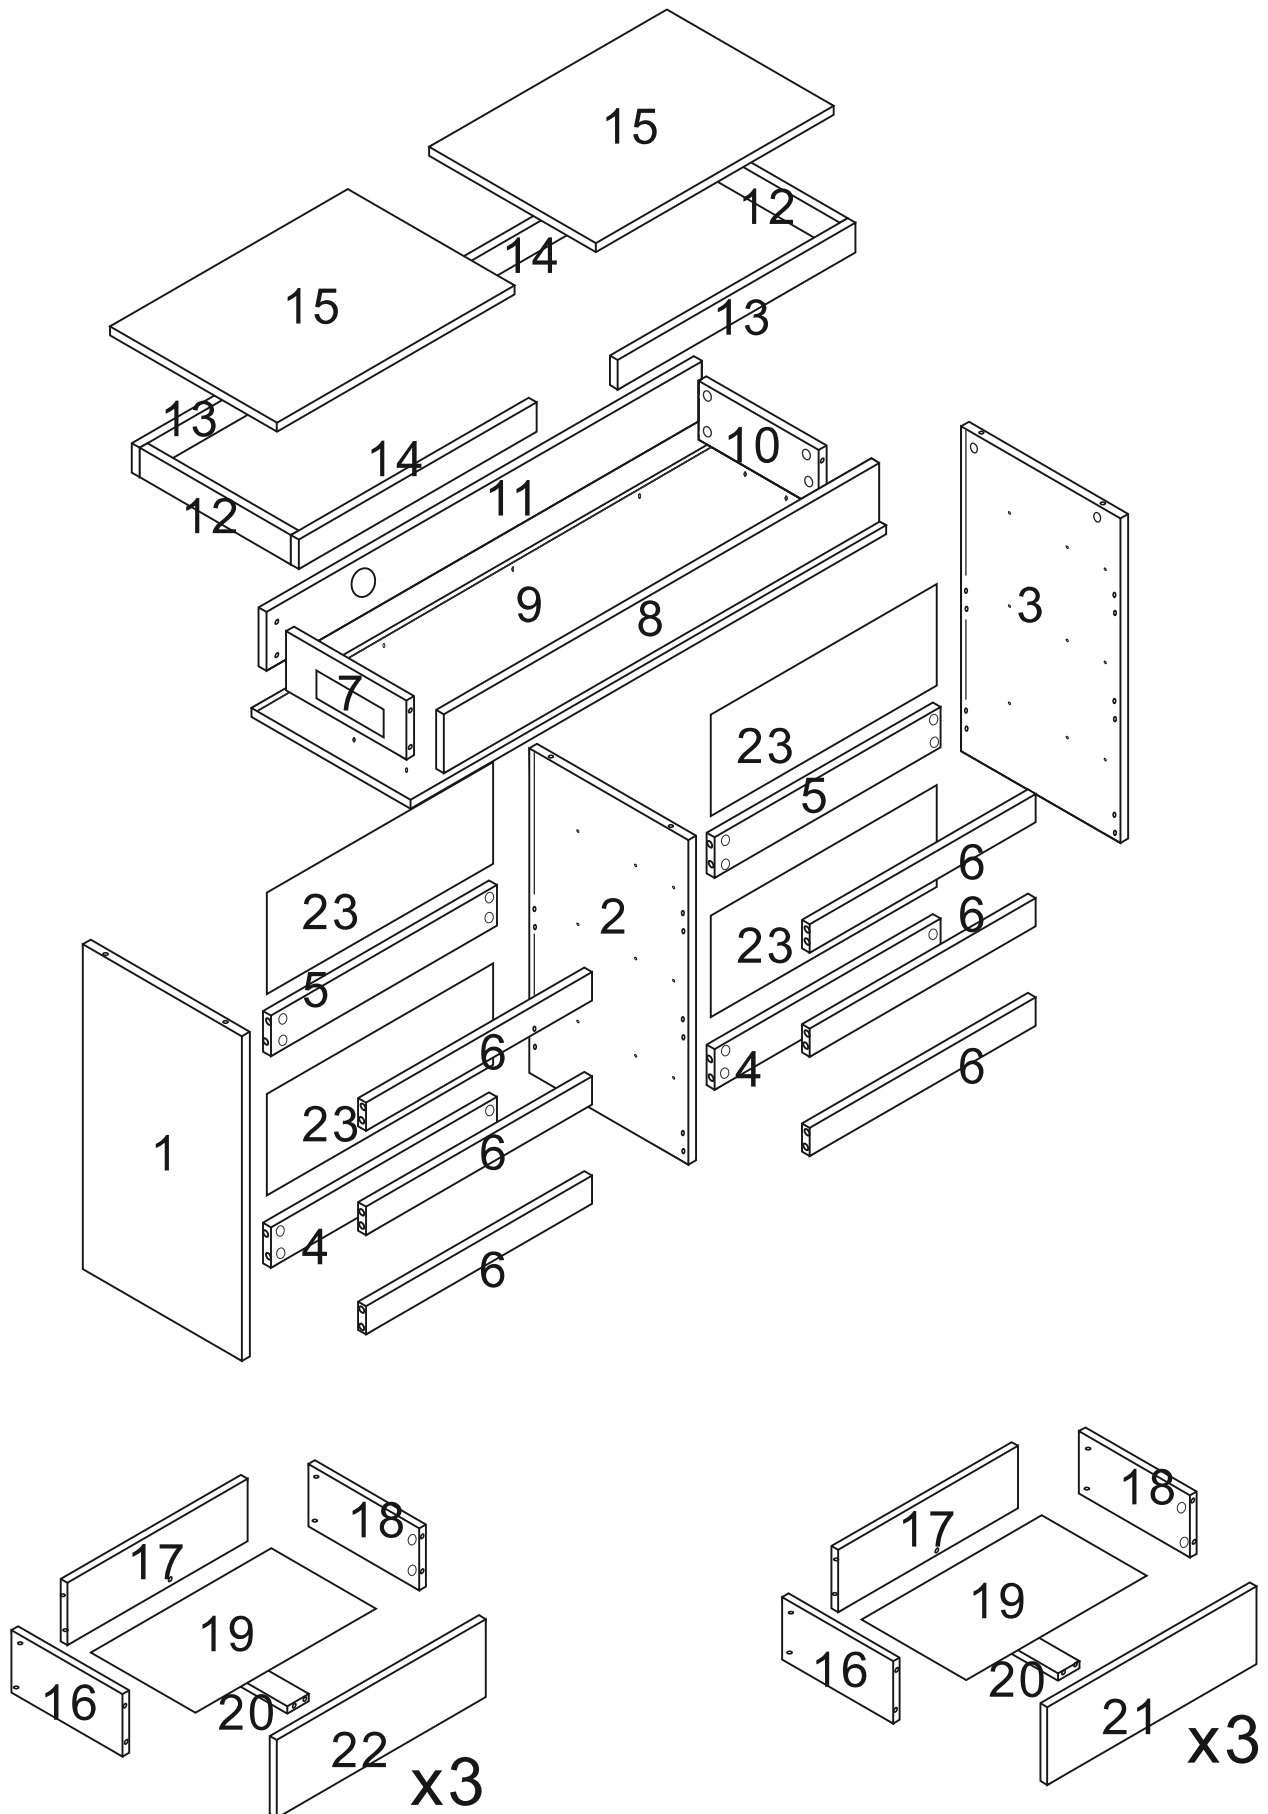

Hardware List

Please check if all the pieces listed below are received

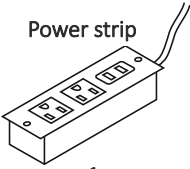A Cam bolt  110pcs	B Cam lock  110pcs	C Screw  94pcs	D Screw  40pcs	E 11.8in drawer slide  12pcs
F Plastic wedge  8pcs	G Screw  6pcs	H Light strip  1pcs	I Remote control  1pcs	J Light strip clip  4pcs
K Power strip  1pcs	L Screwdriver  1pcs	M Anti-tip accessory  2pcs	N 13.8in drawer slide  4pcs	

**ASSEMBLY
REQUIREMENTS**

3 Hours
Assembly Time
(Approximate)

2 -Person Assembly




Tools Required (Not Provided):


Power Drill




HOW the knock down assembly system work

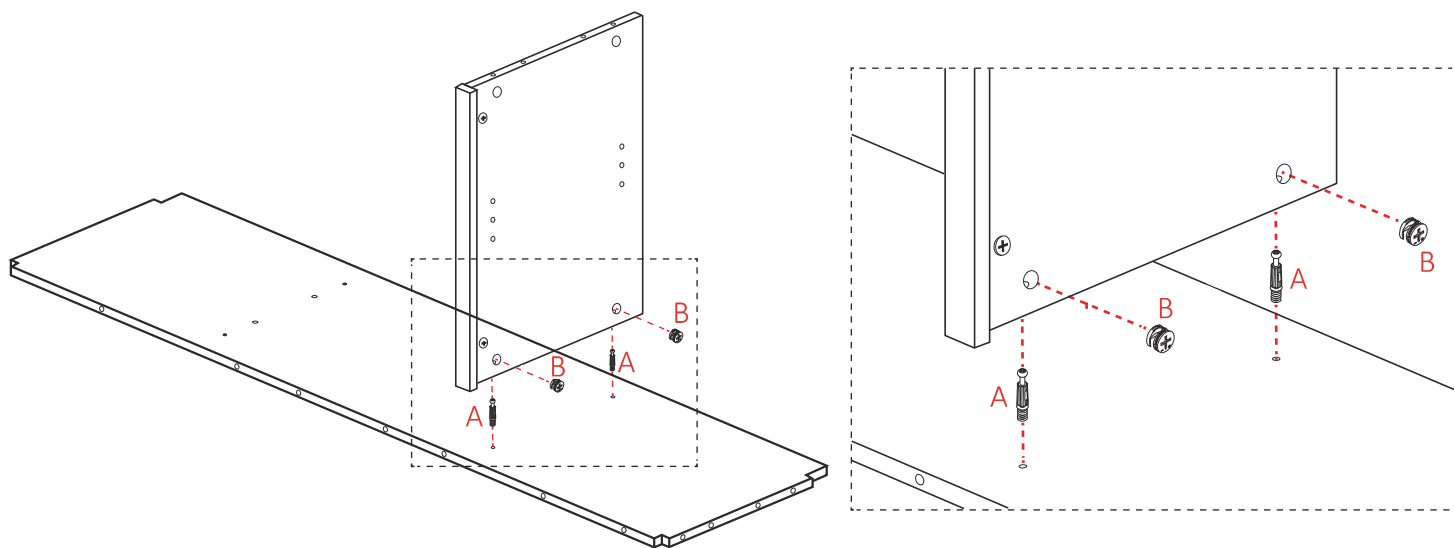

CAM LOCK SYSTEM OPERATION

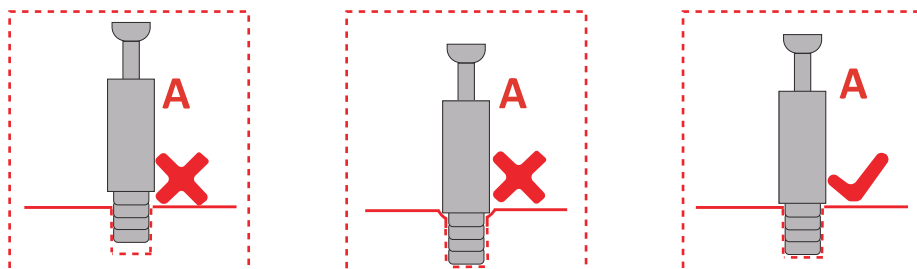

1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt[A] goes into the pre-drilled large hole on the end of panel for cam lock[B].
3. Insert the cam lock[B] into the pro-drilled large hole on the panel. Make sure the cross slot of cam lock [B] faces out (The arrow should point towards Screw No. A).
4. Rotate the cam lock [B] clockwise with a self-supplied phillips screwdriver to lock the cam bolt [A] in place (Rotate 100-180 degrees until tight).

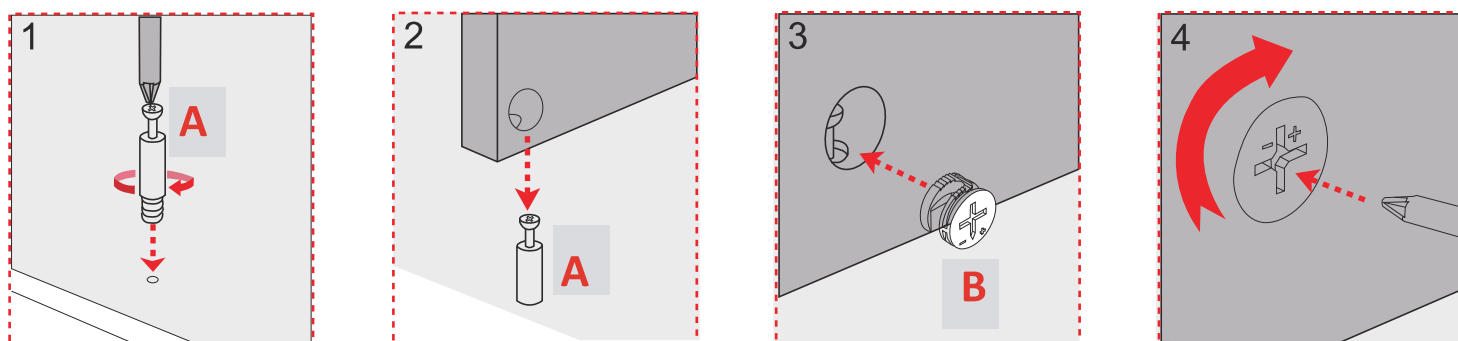





Hardware installation demonstration

- Before installing the drawer rails, you need to split rail No. E into outer rail No. E1 and inner rail No. E2

1. Place the rail No. E as shown in picture, Then Pull out the E2

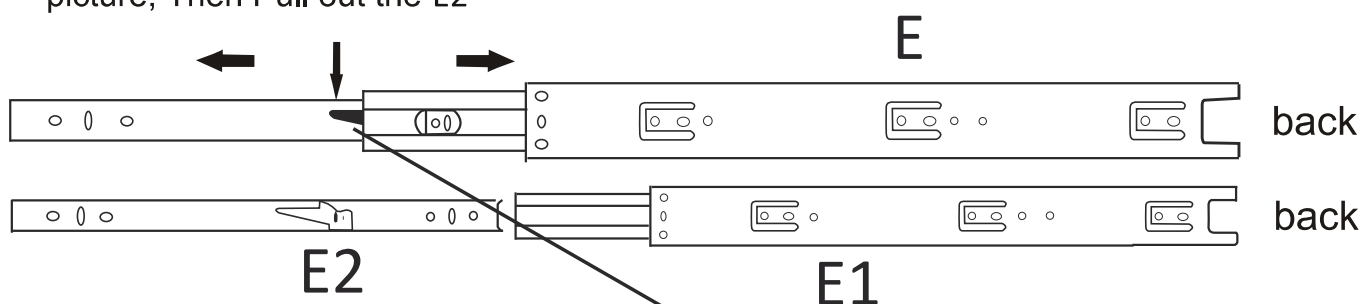

2. Find the latch position, press it and split.


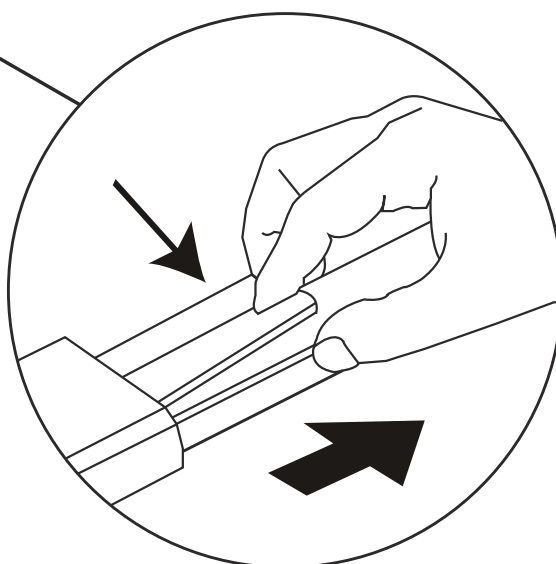


Warm Reminder: Press it and split

Step 1

I. Use screws (C) to attach the slide rail (E1) to panels (1).

This is the front view of slide rail (E1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(E1) to panel (1).

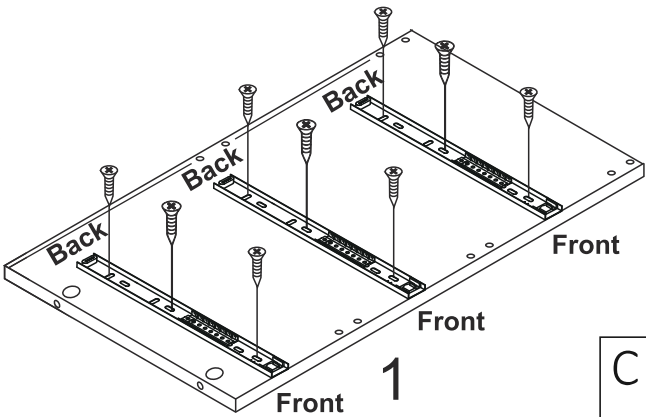
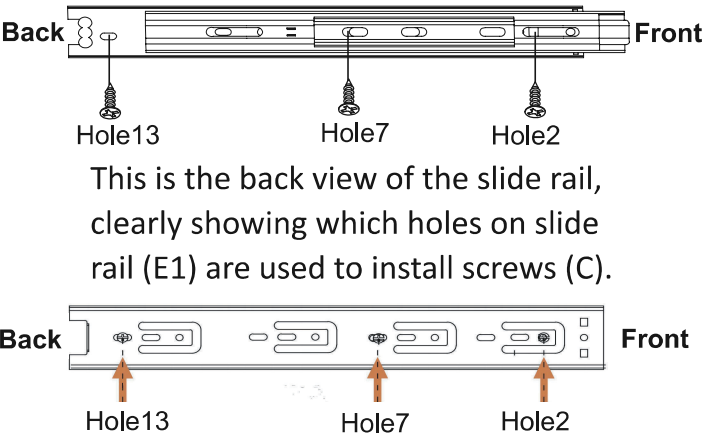


C	X9
	
E1	X3
	

Step 2

I. Use screws (C) to attach the slide rail (E1) to panels (3).




This is the front view of slide rail (E1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(E1) to panel (3).

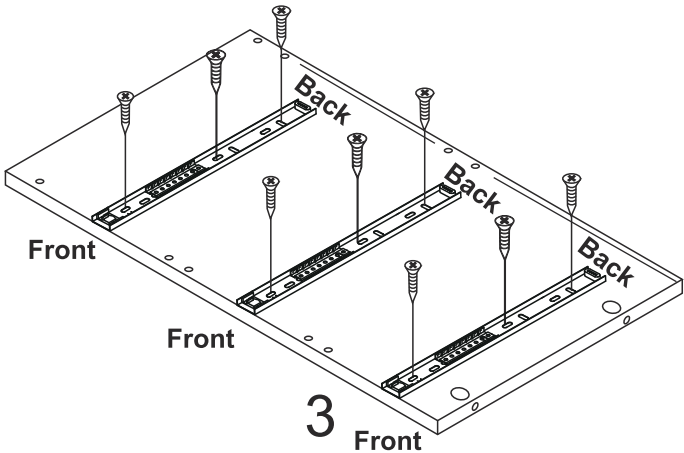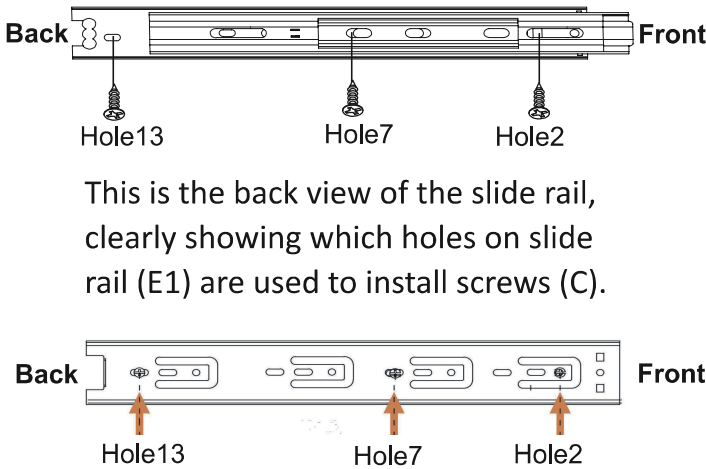

C	X9
	
E1	X3
	


Step 3

I.Screw in cam-bolt (A) into the designated holes on panel (1,3).

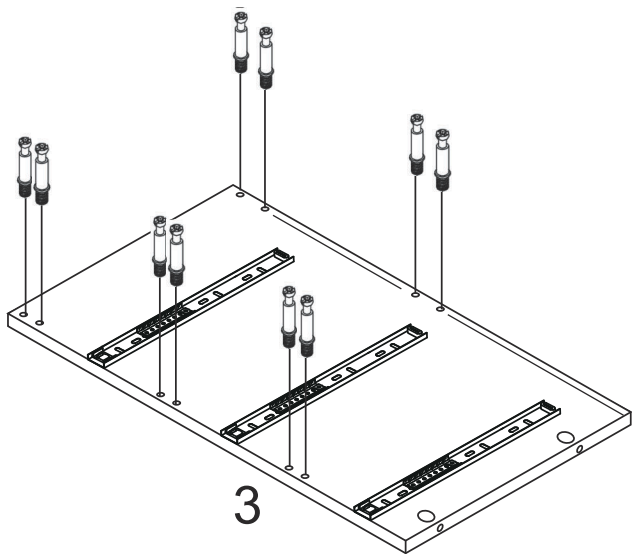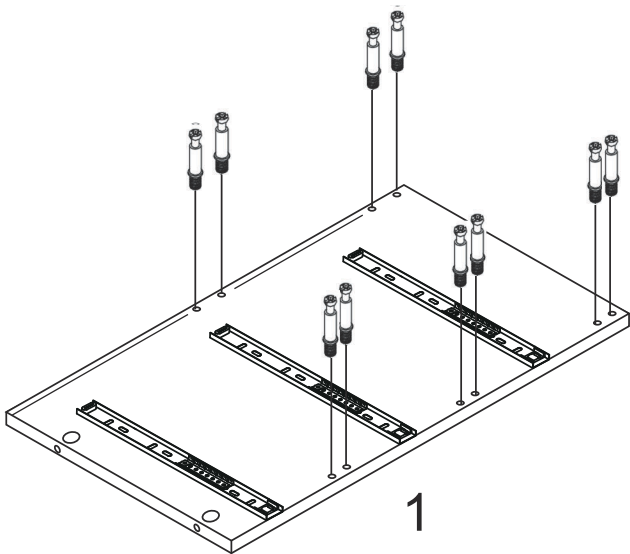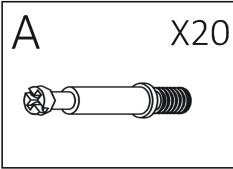


Step 4



I. Use screws (C) to attach the slide rail (E1) to panels (2).

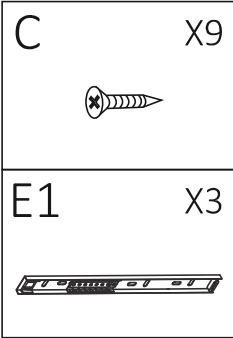

This is the front view of slide rail (E1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(E1) to panel (2).

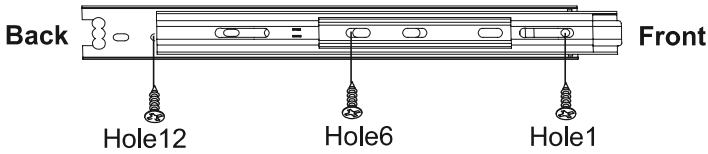

This is the back view of the slide rail,
clearly showing which holes on slide
rail (E1) are used to install screws (C).

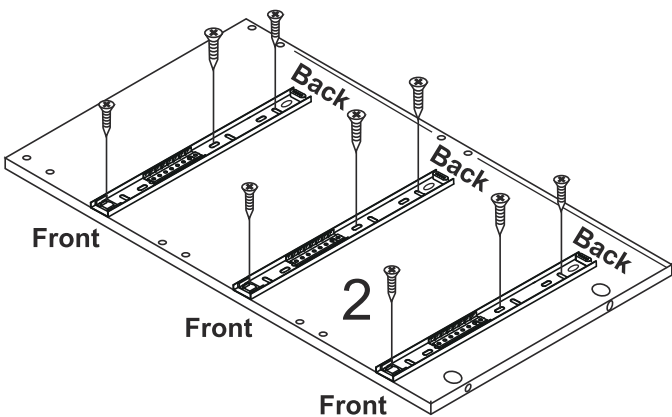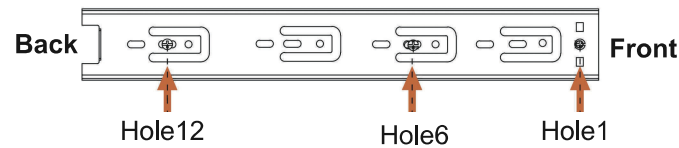


Step 5



I. Rotate panel (2) 180 degrees, use screws (C) to attach the slide rail (E1) to panels (2).

This is the front view of slide rail (E1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(E1) to panel (2).

C	X9
	
E1	X3
	

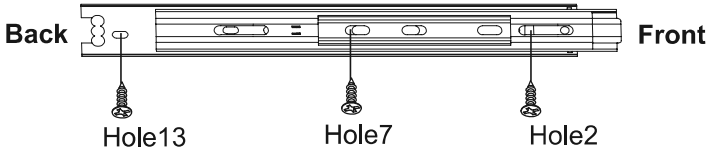




This is the back view of the slide rail,
clearly showing which holes on slide
rail (E1) are used to install screws (C).

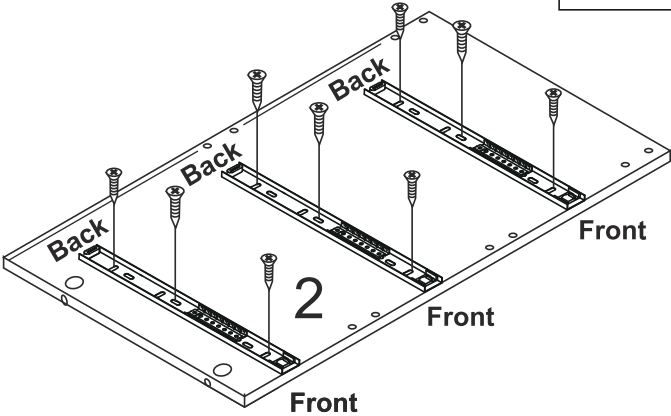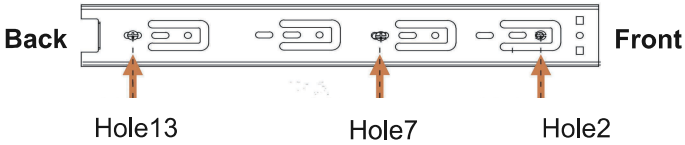

Step 6

I.Screw in cam-bolt (A) into the designated holes on panel (2).
Note:Install cam-bolt (A) on panel 2, please use a manual screwdriver.
It is not recommended to use an electric screwdriver.


A	X20
	

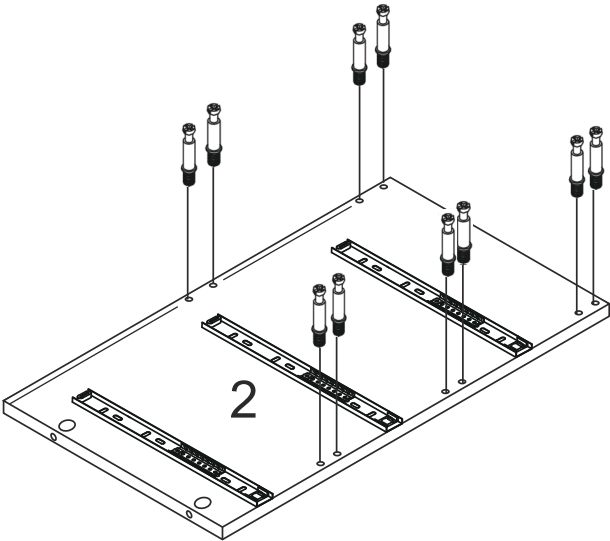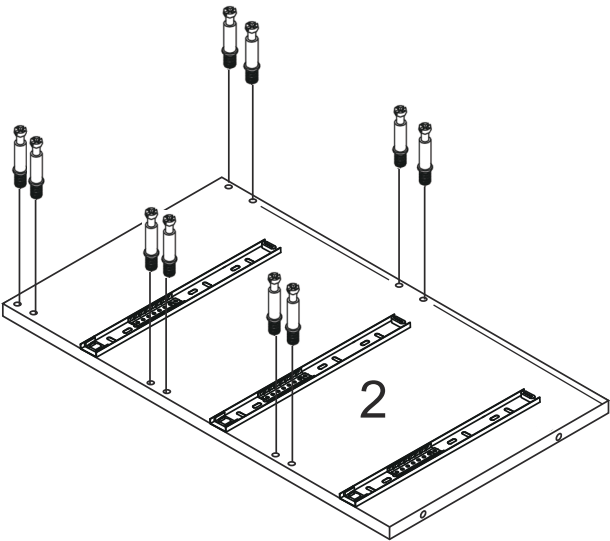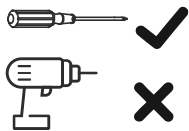

Step 7


I.Attach panel (4,5,6,6,6) to panel (3),insert cam-lock (B) into the panel (4,5,6,6,6), then turn clockwise to lock onto cam-bolt.

Note: The direction of installing cam-lock (B) is shown in the figure

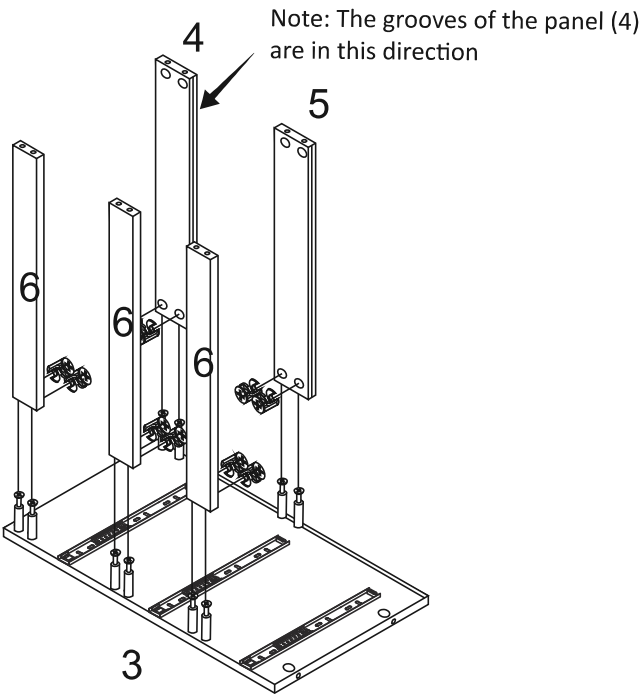



Step 8

I.Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

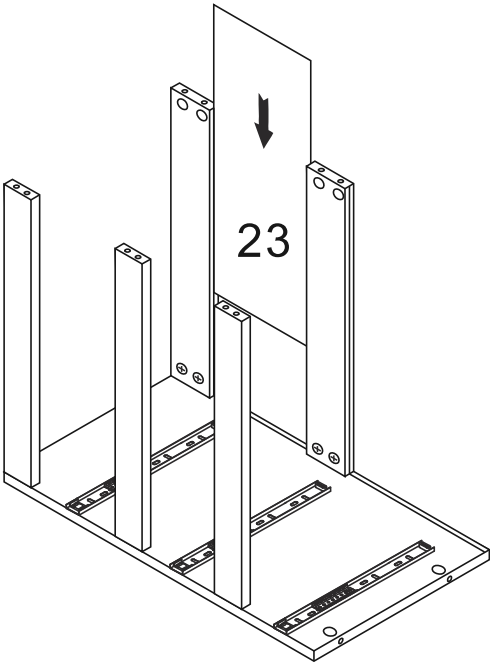

Step 9



I.Attach panel (2) to panel (4,5,6,6,6,23),insert cam-lock (B) into the panel (4,5,6,6,6), then turn clockwise to lock onto cam-bolt .

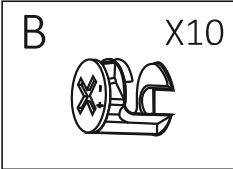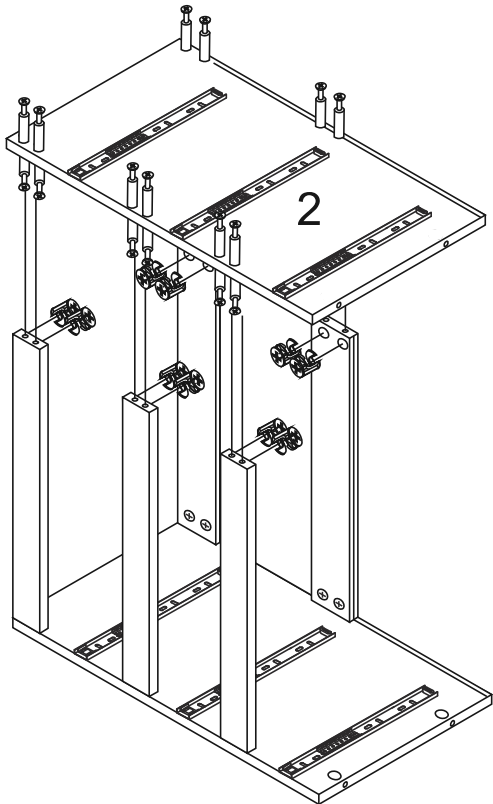

Step 10


I.Attach panel (4,5,6,6,6) to panel (2),insert cam-lock (B) into the panel (4,5,6,6,6), then turn clockwise to lock onto cam-bolt.

Note: The direction of installing cam-lock (B) is shown in the figure

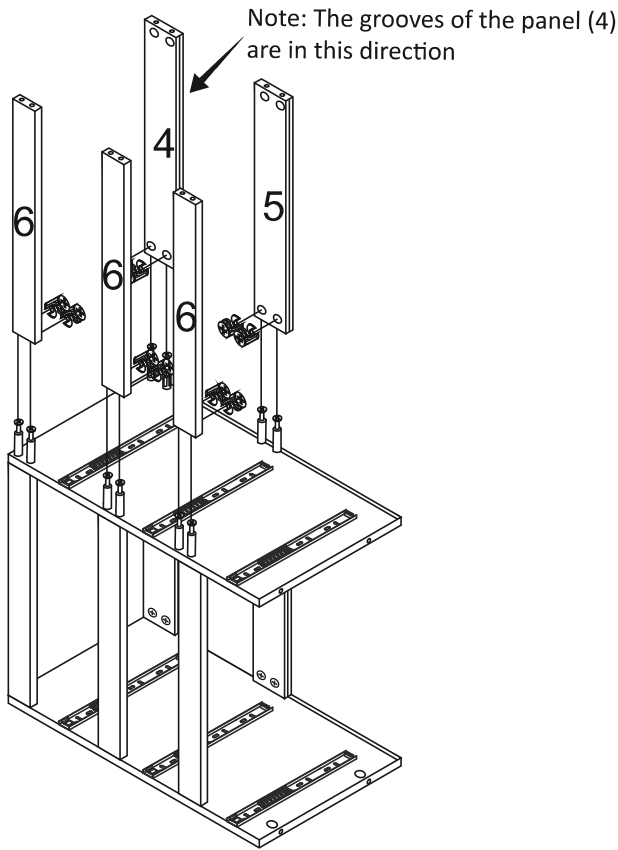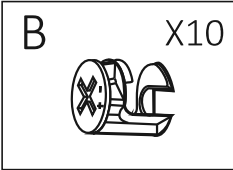



Step 11

I. Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

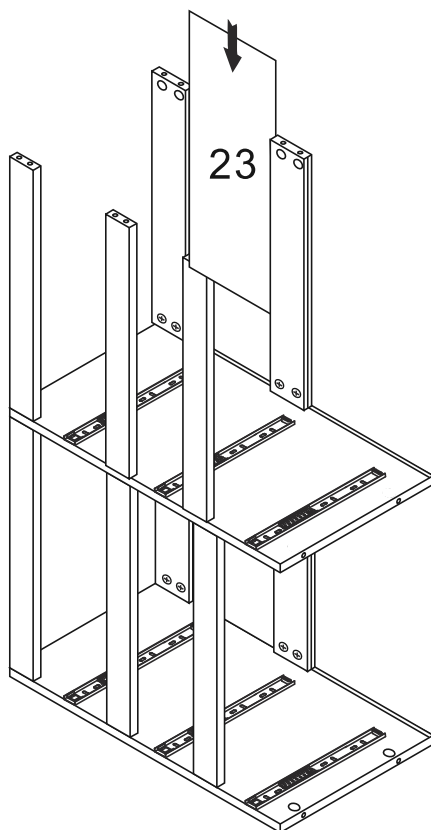


Step 12

I. Attach panel (1) to panel (4,5,6,6,6,23), insert cam-lock (B) into the panel (4,5,6,6,6), then turn clockwise to lock onto cam-bolt.

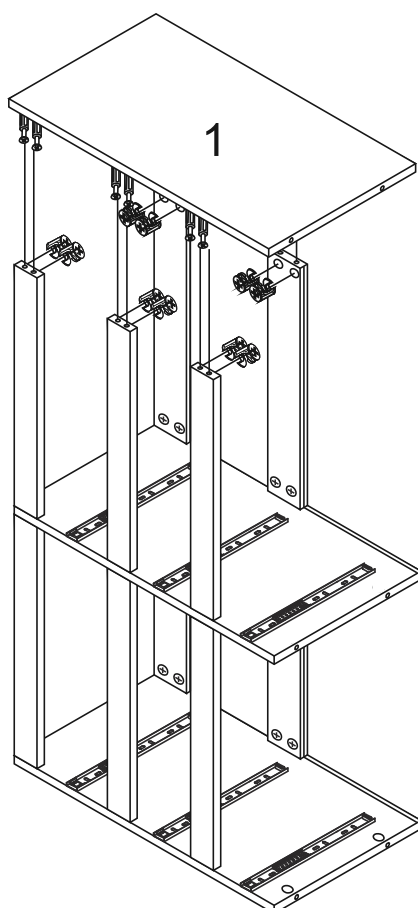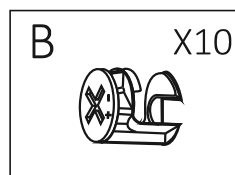



Step 13

I. Install panel (23,23) as per diagram and slide them into the grooves until they are fully seated.

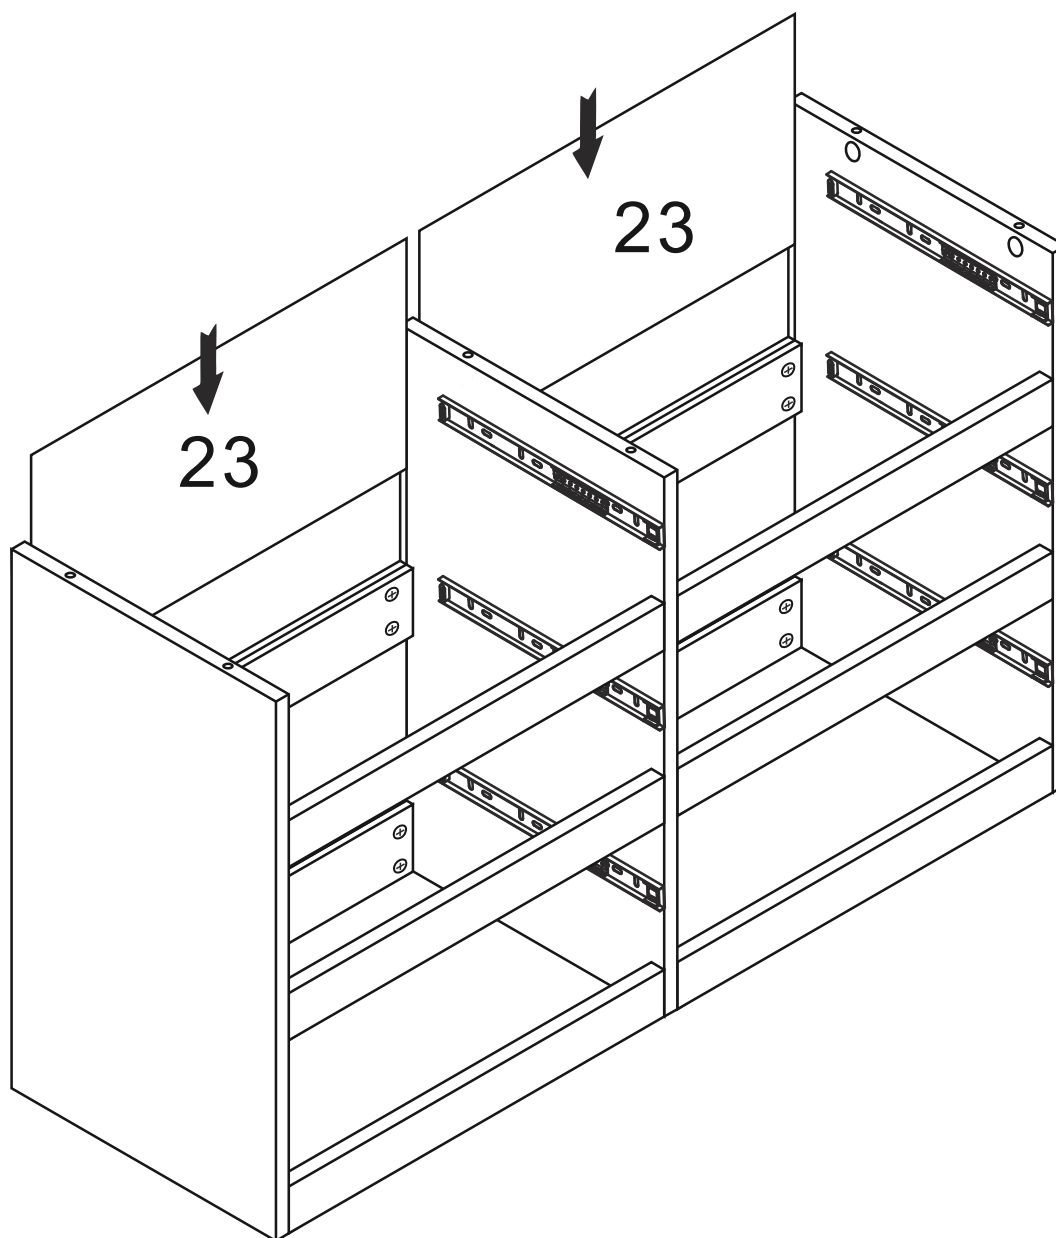



Step 14

I.Screw in cam-bolt (A) into the designated holes on panel (9).

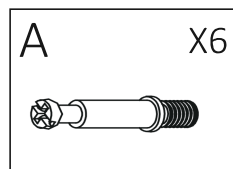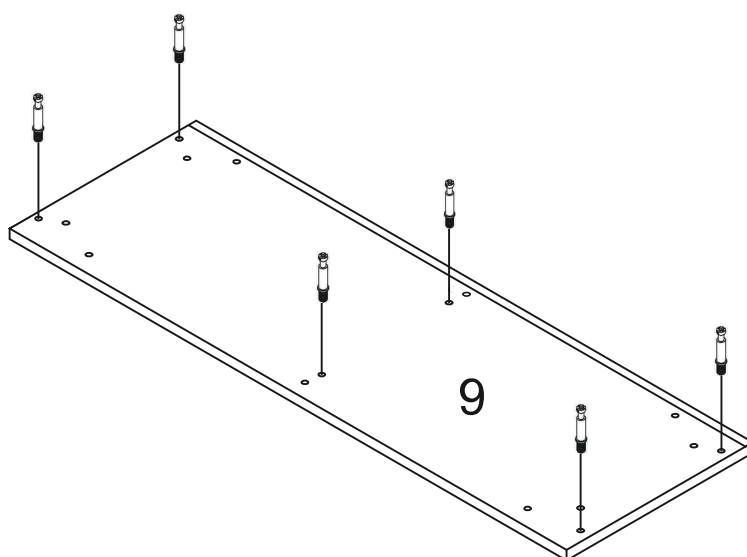

Step 15



I.Screw in cam-bolt (A) into the designated holes on panel (8,11).

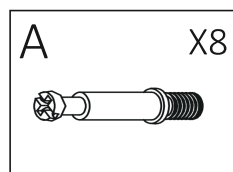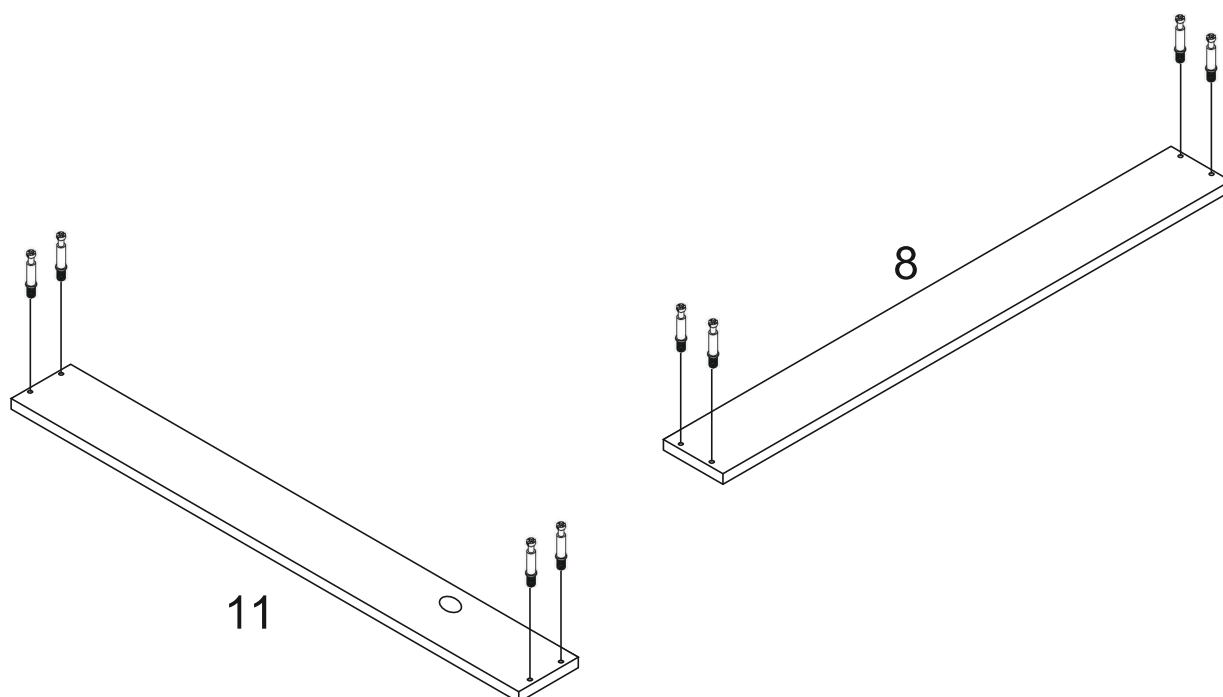

Step 16

I. Use screws (C) to attach the slide rail (N1) to panels (11).

This is the front view of slide rail (N1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(N1) to panel (11).

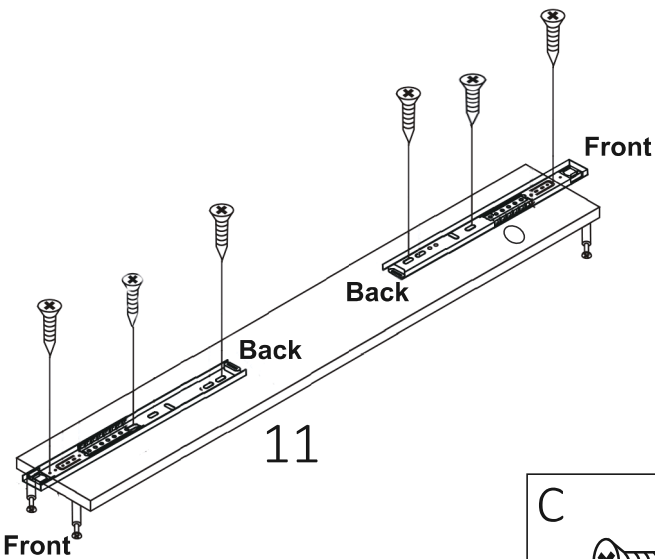
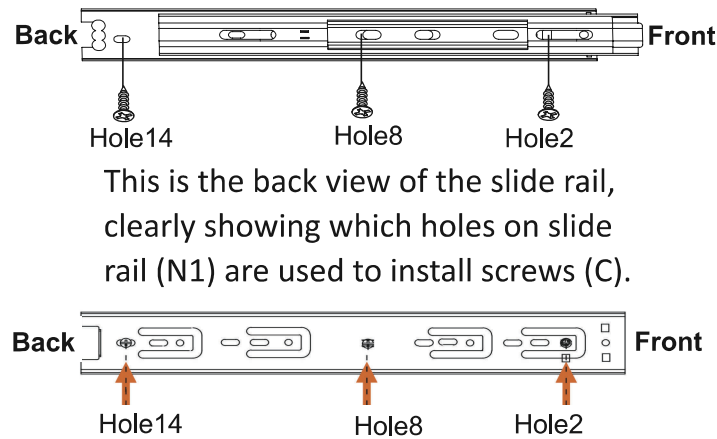


C	X6
N1	X2

Step 17

I. Use screws (C) to attach the slide rail (N1) to panels (8).



This is the front view of slide rail (N1).
From the front side of the slide rail,
install screws (C) to secure slide rail
(N1) to panel (8).

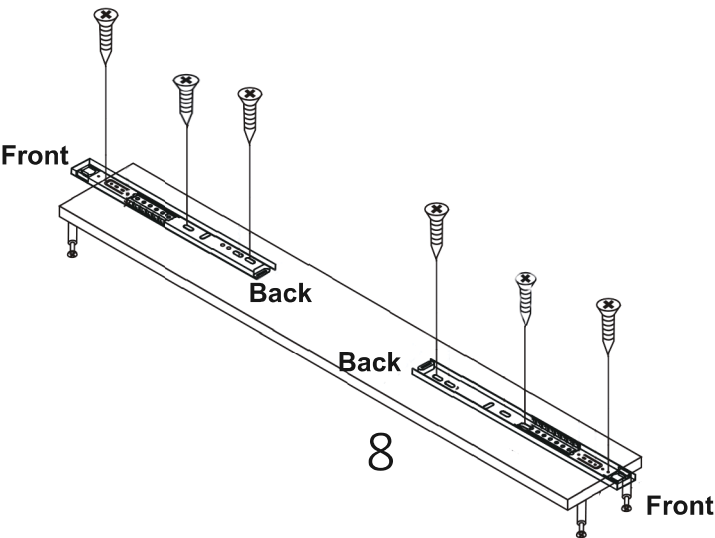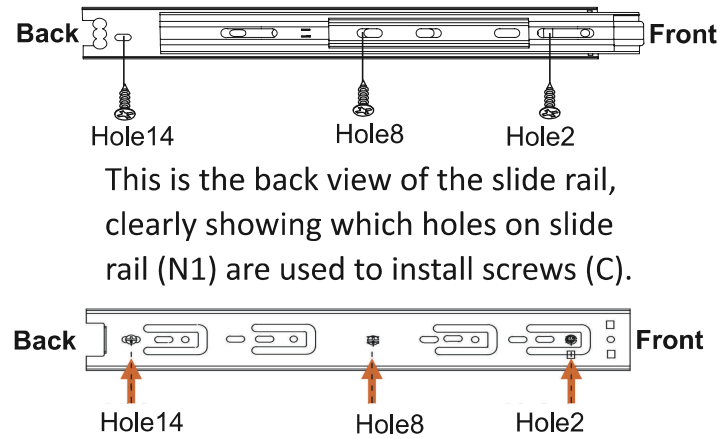

C	X6
N1	X2



Step 18

- I. Attach panel (7,10) to panel (11),insert cam-lock (B) into the panel (7,10), then turn clockwise to lock onto cam-bolt.
- II. Attach panel (8) to panel (7,10),insert cam-lock (B) into the panel (7,10), then turn clockwise to lock onto cam-bolt.

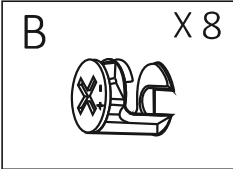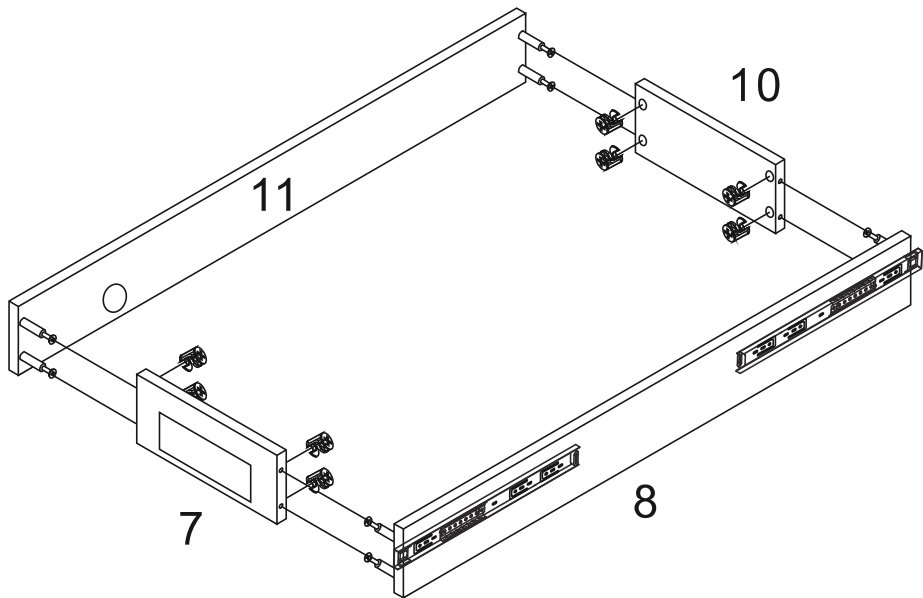

Step 19



- I. Use screws (D) to attach panel (9) to panels (7, 8, 10 and 11).

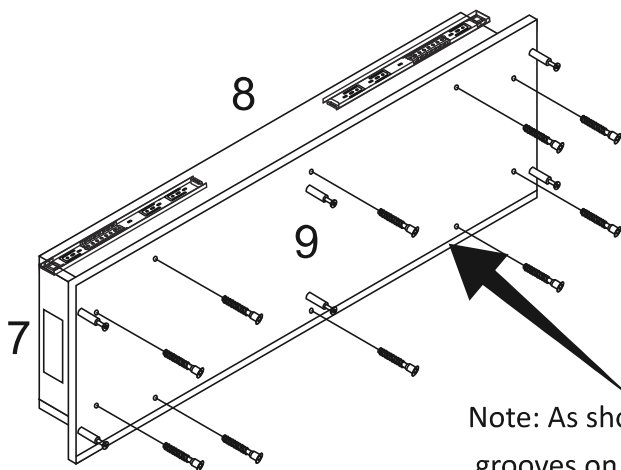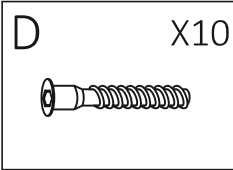

Note: As shown in the figure, the grooves on the panel (9) are in this direction and in the same direction as the panel (11).




Step 20

I. Attach panel (9) to panel (1,2,3), insert cam-lock (B) into the panel (1,2,3), then turn clockwise to lock onto cam-bolt.

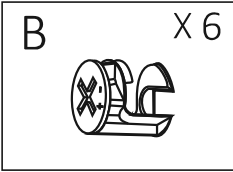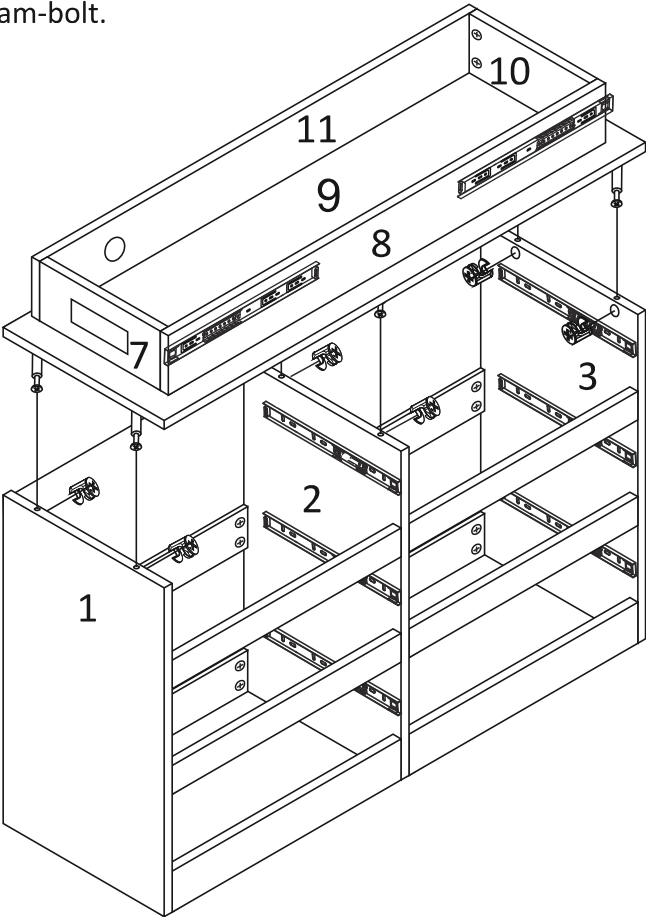



Step 21

I. As shown in the illustration, use screws (C) to secure the power strip to panel (7).

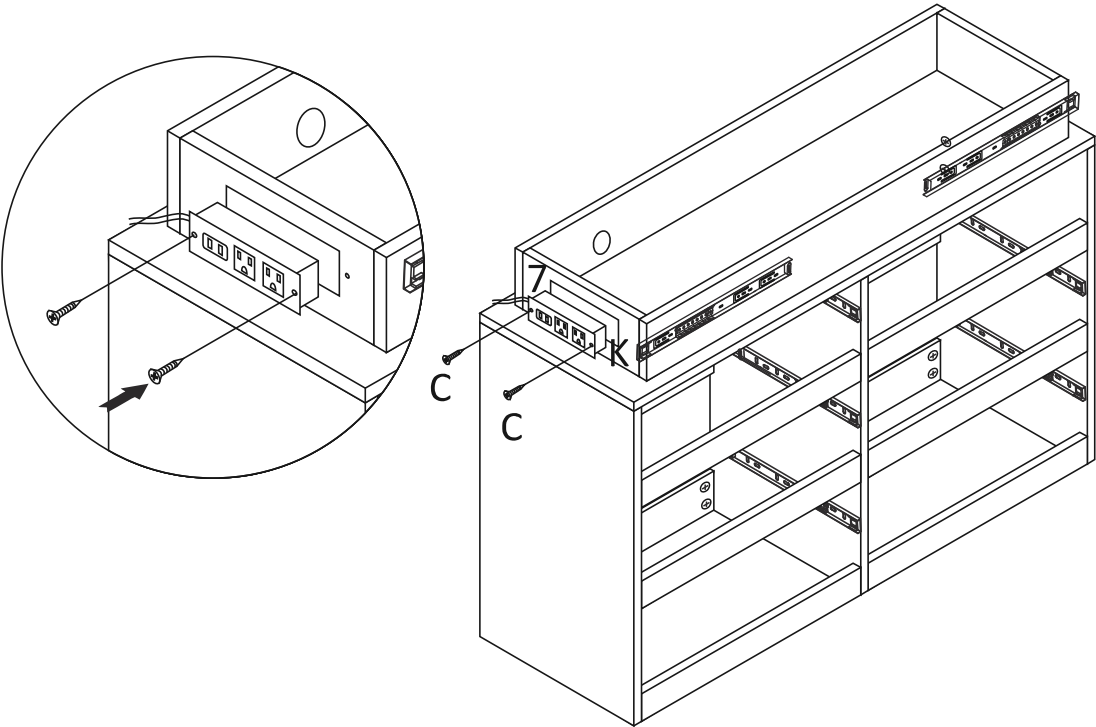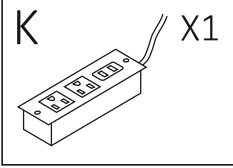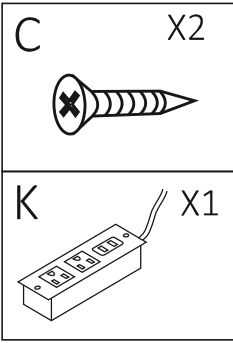



Step 22

- I. Peel off the adhesive backing from the light strip (H) and the light strip clips (J).
- II. Attach the light strip (H) to panels (7, 8, 10, and 11). Use the light strip clips (J) to hold the light strip (H) in place for added stability.

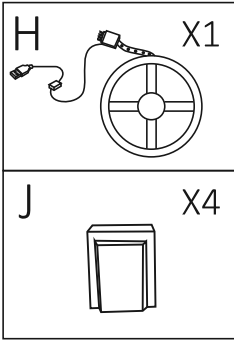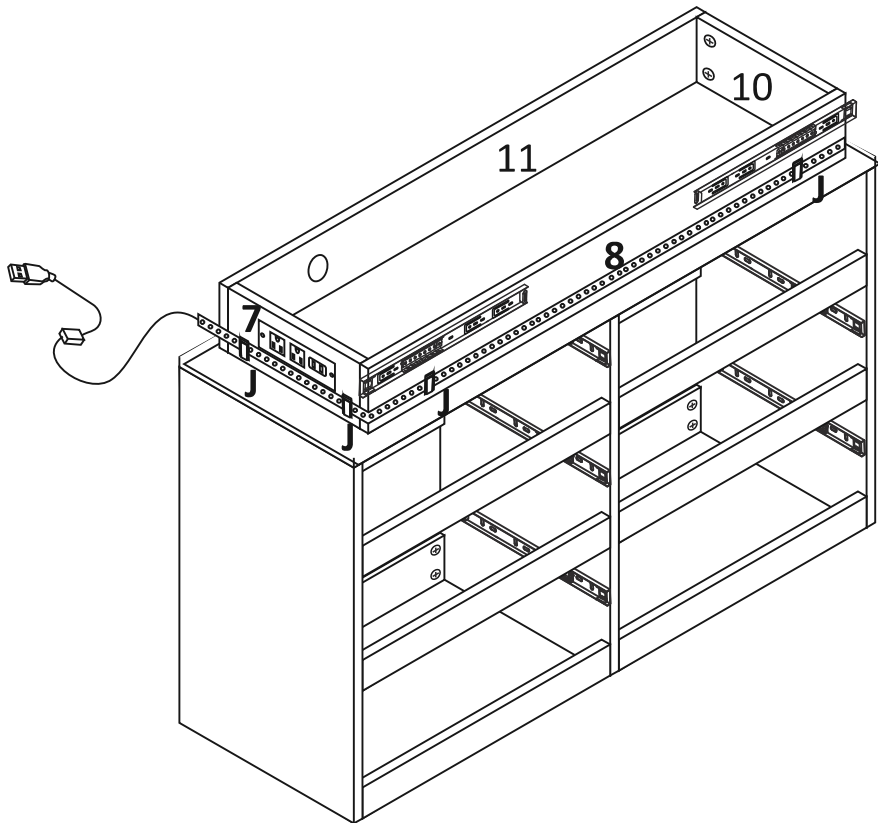



Step 23

- I. Insert the thinnest side of Plastic wedge (F) into the gap between panel (1) and panel (23), and secure the Plastic wedge (F) with screws (C).

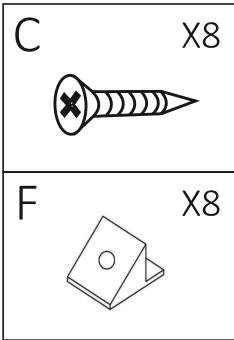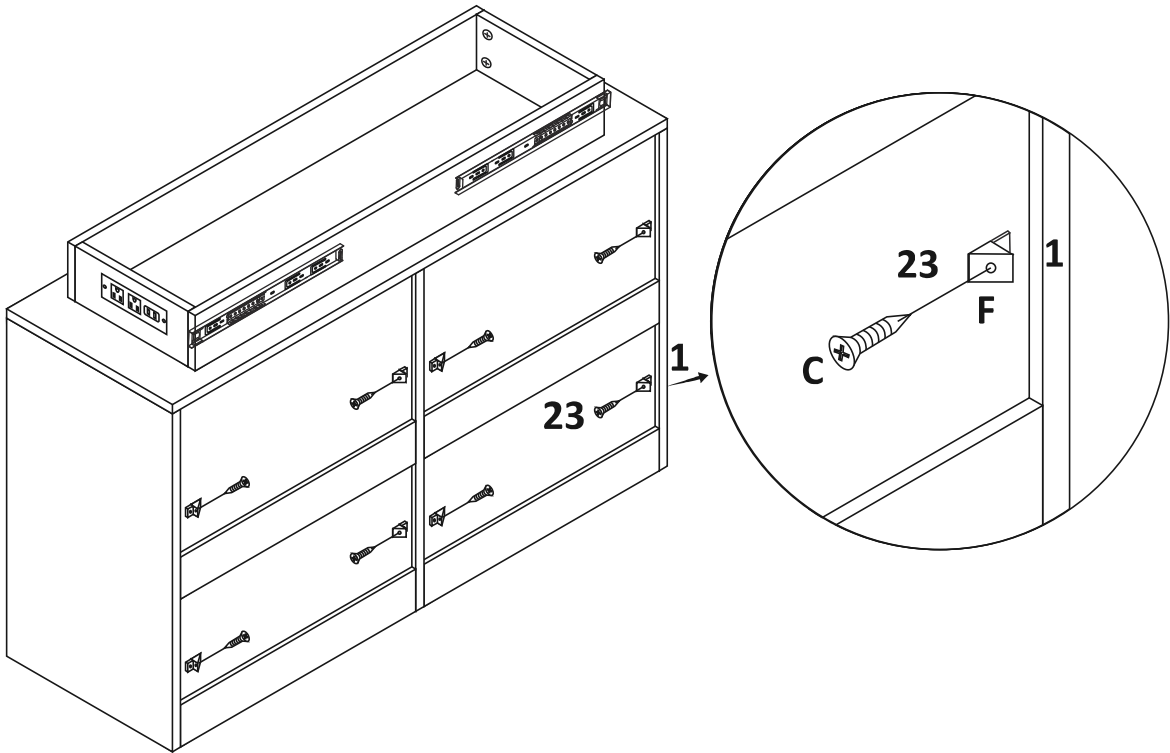



Step 24

I.Screw in cam-bolt (A) into the designated holes on panel (13,13,14,14,15).

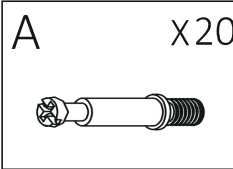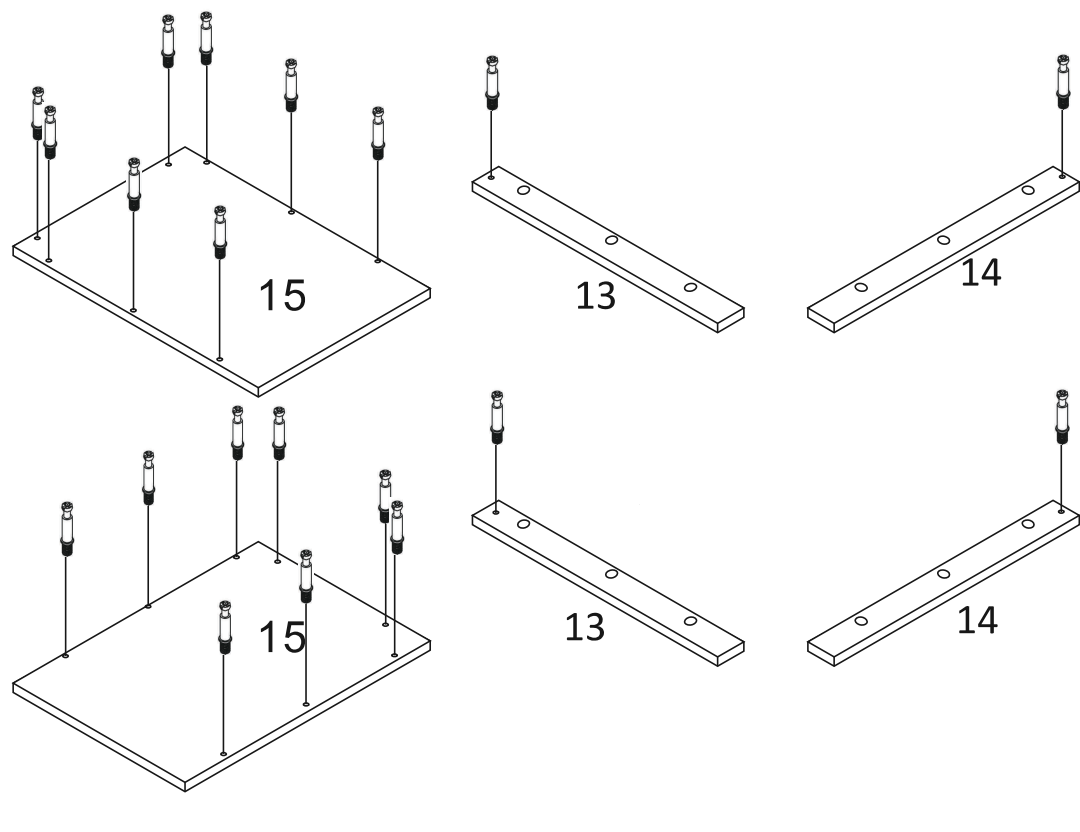


Step 25

I. As shown in the illustration, connect panels (13 and 14) to panel (12), insert the cam lock (B) into the corresponding holes on panels (12), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

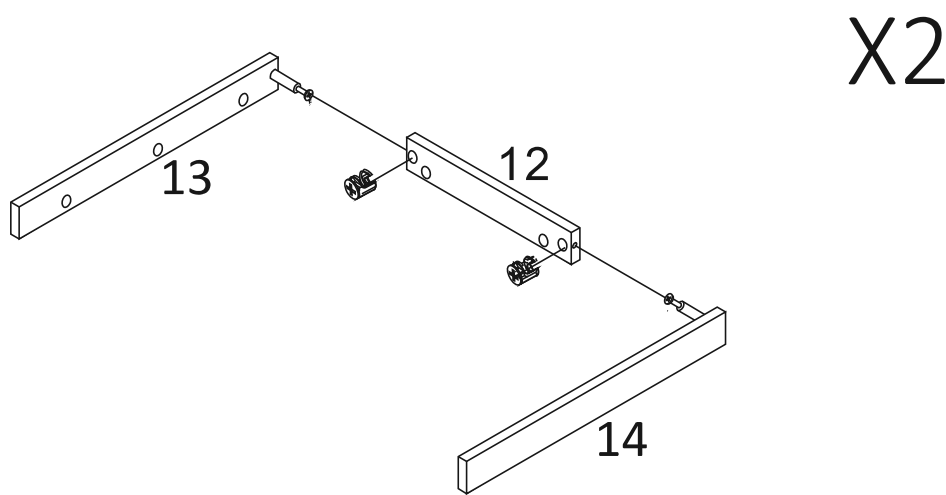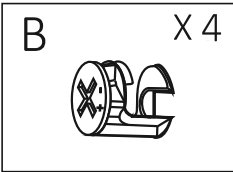


Step 26

I. As shown in the illustration, connect panels (12, 13 and 14) to panel (15), insert the cam lock (B) into the corresponding holes on panels (12, 13 and 14), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).




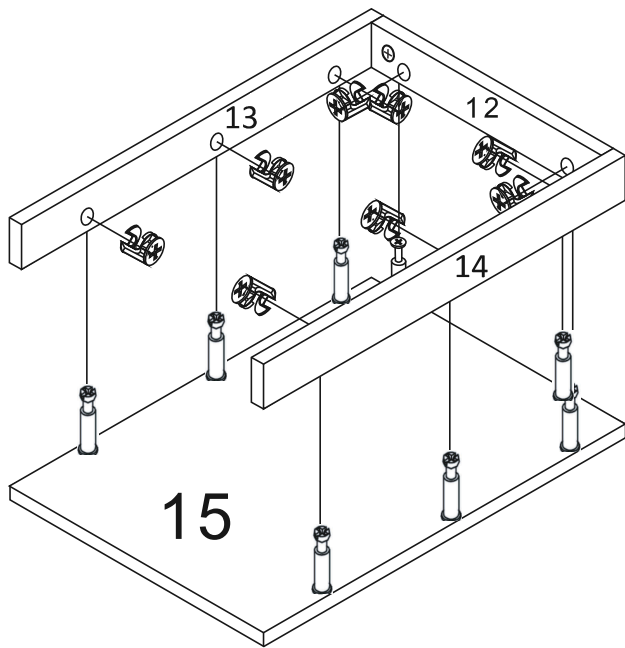


X2

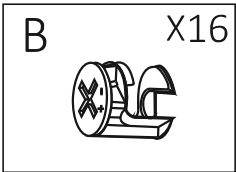

Step 27



I. Use screws (C) to attach the slide rail (N2) to panels (13, 13, 14 and 14).

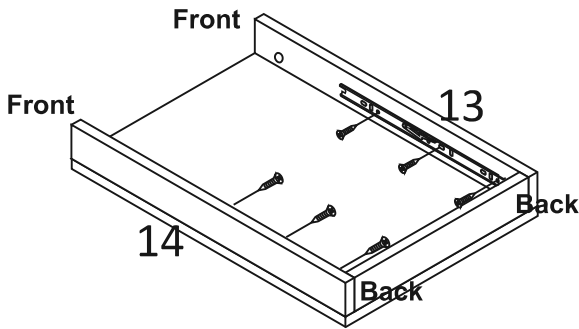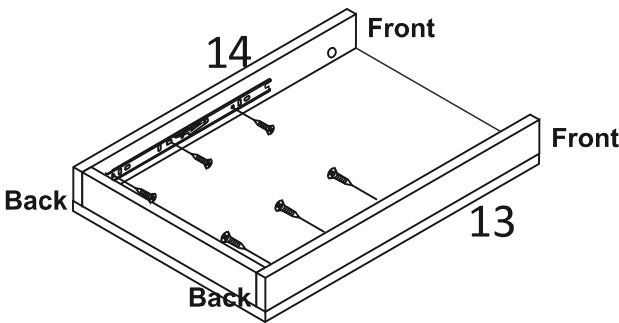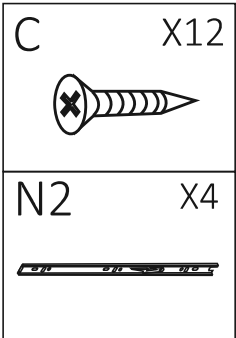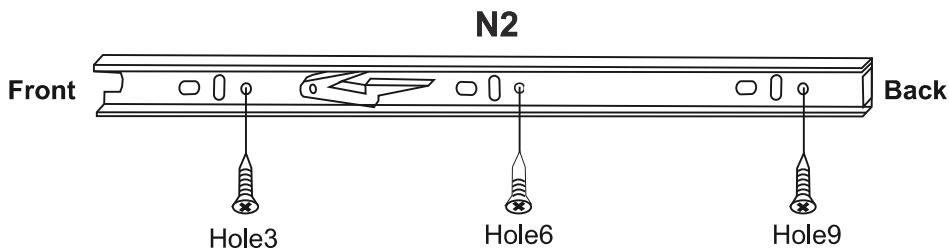

Step 28


I. Use screws (D) to attach panels (16, 18 and 20) to panel (17).

X6

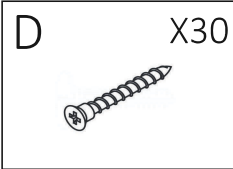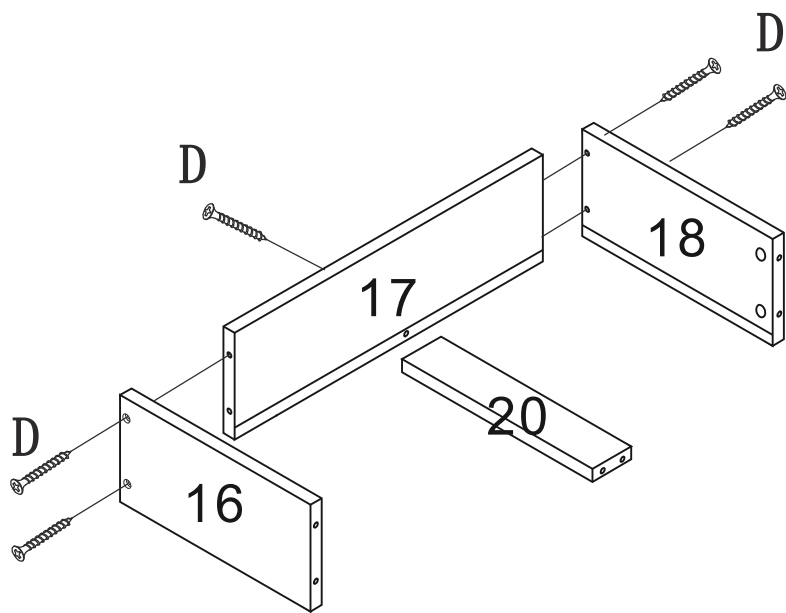


Step 29

- I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding hole on panel (21 and 22).
- II. As shown in the illustration, connect panels (21 and 22) to panel (16, 18 and 20), insert the cam lock (B) into the corresponding holes on panels (16, 18 and 20), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A)

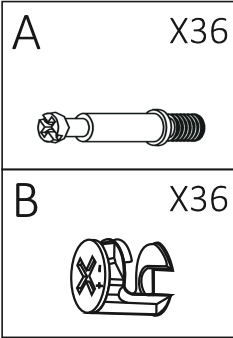


X6

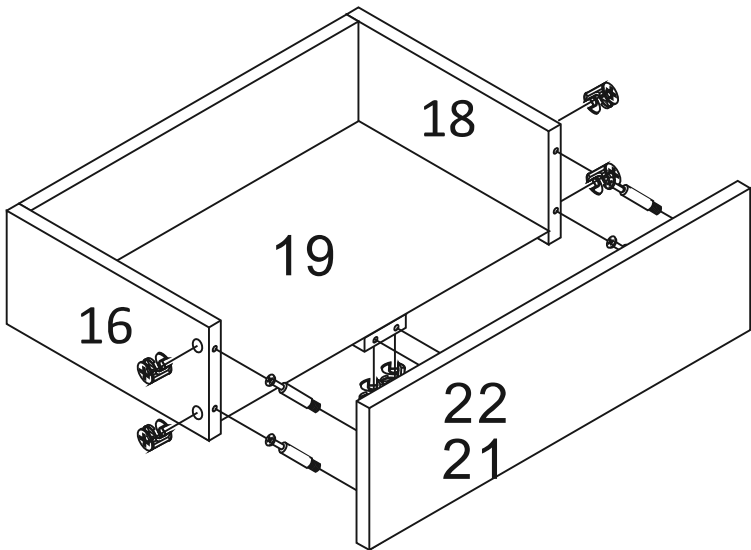

Step 30



I. Use screws (C)to sesure the slide rail (E2)to the panel(16,18)and ghten them with a screwdriver.
Note:For the correct orienta on of slide rail(E2) ,please refer to the imgae.(front and back).

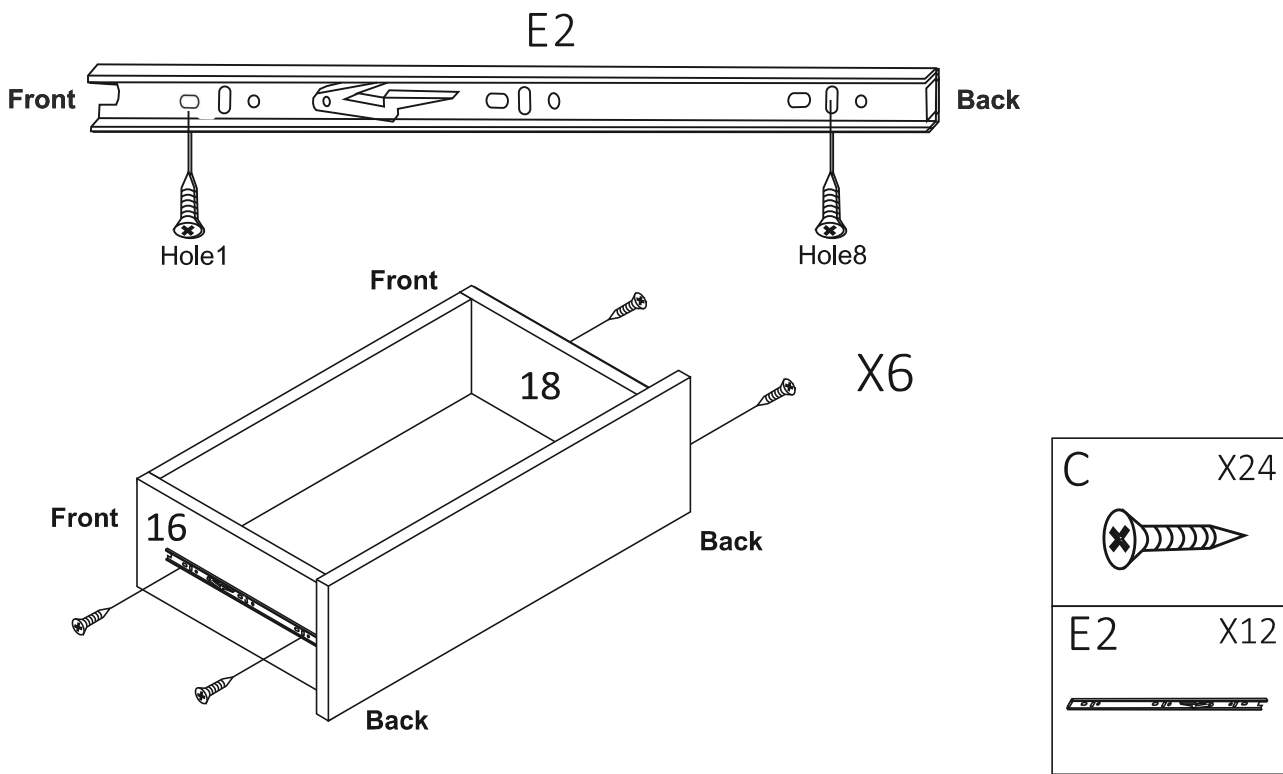

Step 31



I.Connect the assembled panels (13,14,15) to the panels (8,11), align the slide rails (N2) on the panels (13,14) with the slide rails (N1) on the panels (8,11), and then push them in the direction of the arrow;

Note: This step requires two people to assemble: one person holds the assembled panel (13, 14, 15), and the other person squats under the assembled panel (13, 14, 15), pushes out part of the steel balls on the slide rail (N1), then aims at the slide rail (N2), and then pushes in the direction of the arrow.

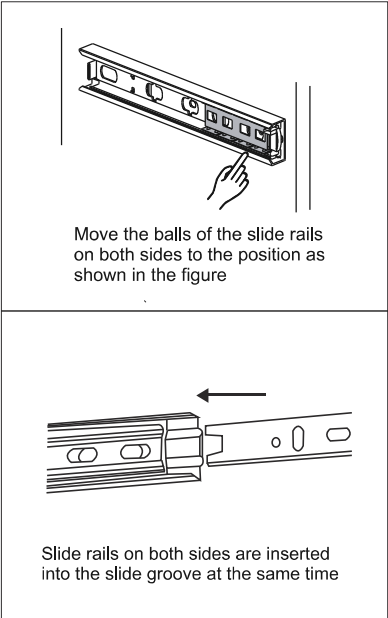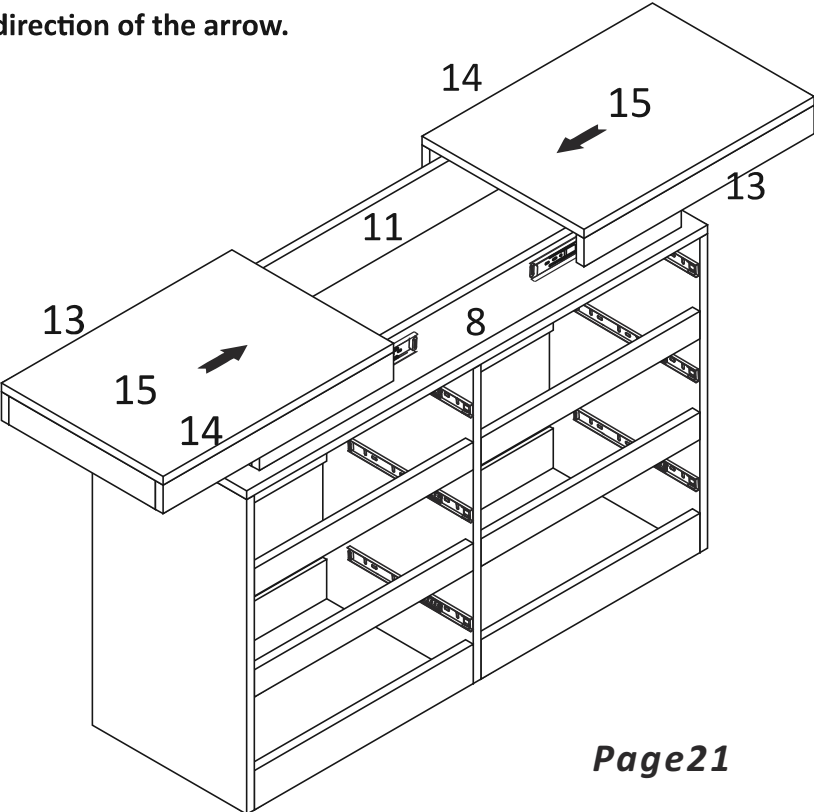


Step 32


I. Install the assembled drawer on the cabinet.
Note: Please install the drawer (21) of the assembled drawer on the right as shown in the figure, and install the drawer (22) of the assembled drawer on the left.

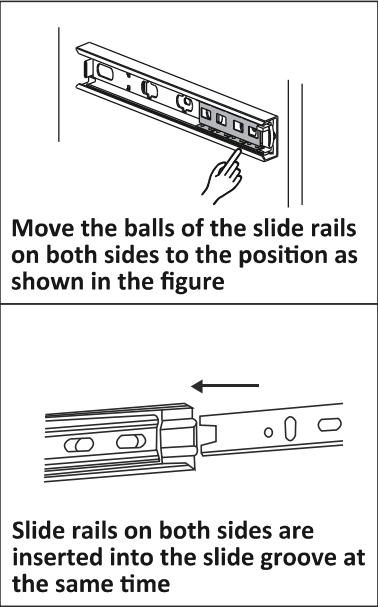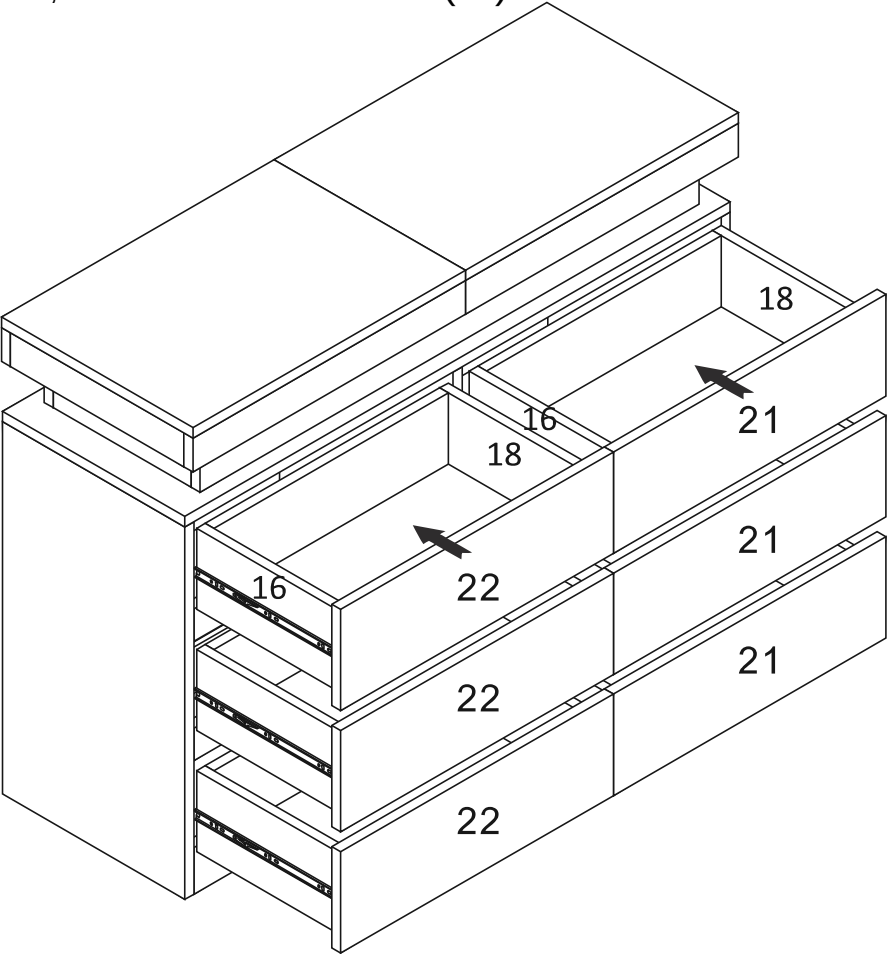

Drawer Alignment Adjustment Steps

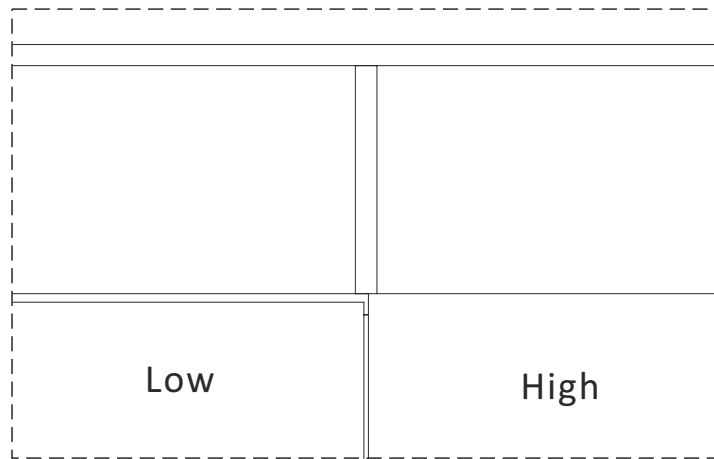


Step1

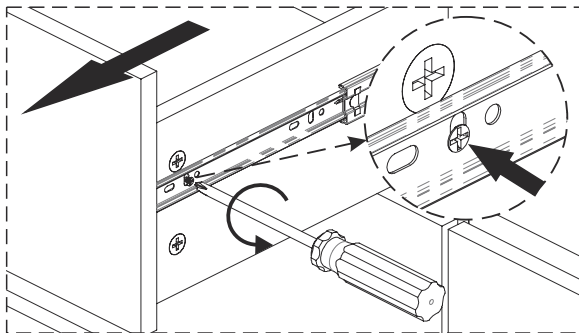


Pull out the left drawer (the lower drawer). Use a screwdriver to slightly loosen the C screw on slide rail E2.

Step2

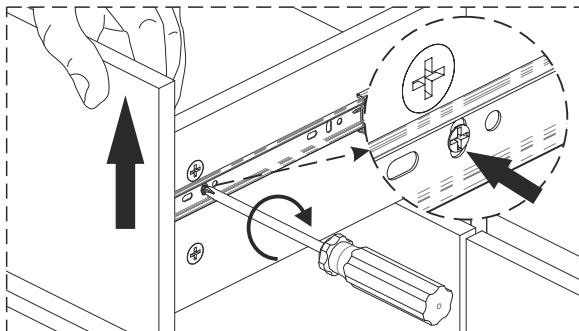

Lift the drawer slightly, then use a screwdriver to tighten the C screw.

Step3

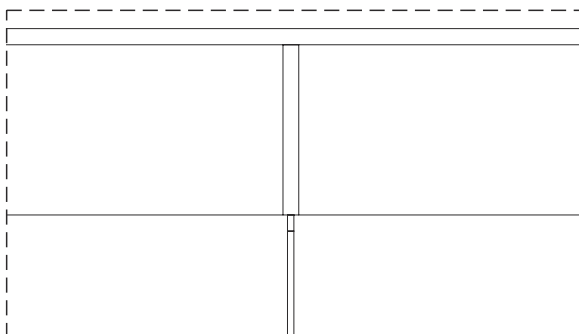

Close the left drawer and check whether it is aligned with the right drawer. The image shown here illustrates the drawers properly aligned.

If the drawers are not aligned, repeat the steps above:

- ① If the left drawer is still slightly lower than the right drawer, lift the left drawer a little higher.
- ② If the left drawer is higher than the right drawer, lower the left drawer slightly.



The right slide rail of this drawer has been adjusted. Please adjust the left slide rail of the drawer to the same position.

If the gap between the upper and lower drawers is uneven, you can also adjust it using the steps above. Pull out the drawer you want to adjust and slightly loosen the C screws on slide rails E2 on both sides of the drawer. Then raise or lower the drawer to the desired position, and tighten the C screws on both sides.

Step 33



I. Fix the plastic board (M) to the panel (9) with short screws (M).

(It is strongly recommended to install this device, especially if there are children in the household.)

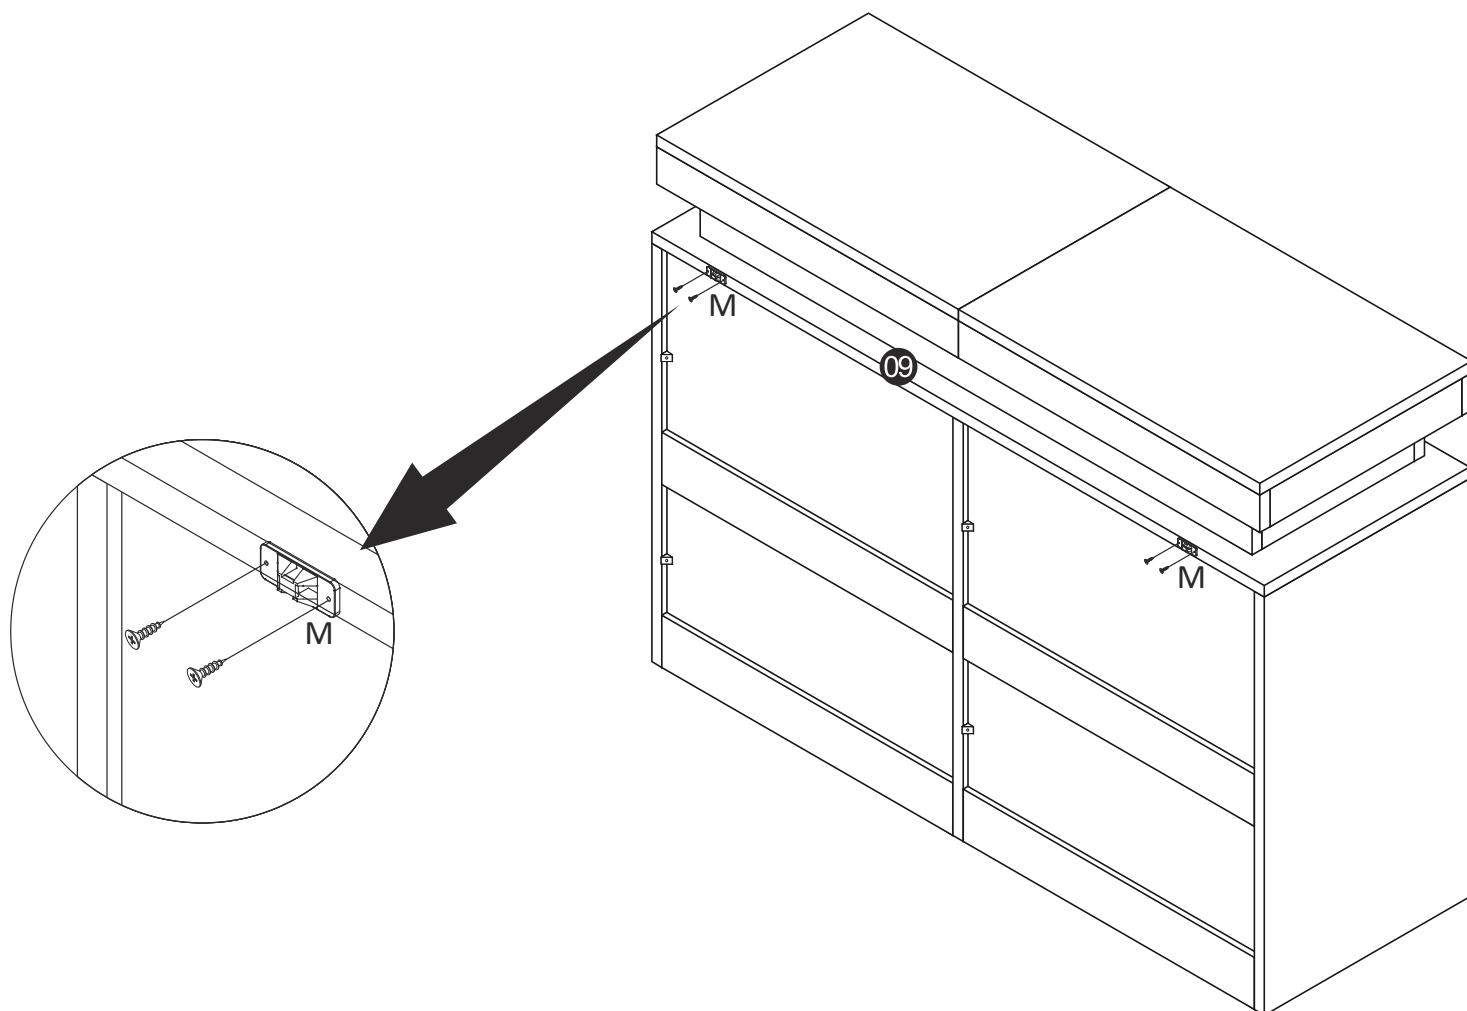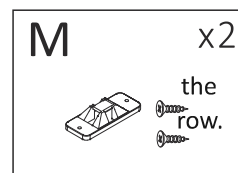

Step 34

- I. Mark the drill position on the wall with a pencil.
- II. Drill a small hole on the marked position.
- III. Insert drywall anchor (M) into the drilled hole.
- IV. Use long screws (M) to secure the plastic board (M) to the drywall anchor (M).

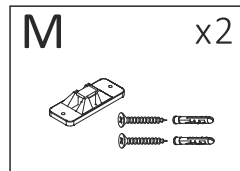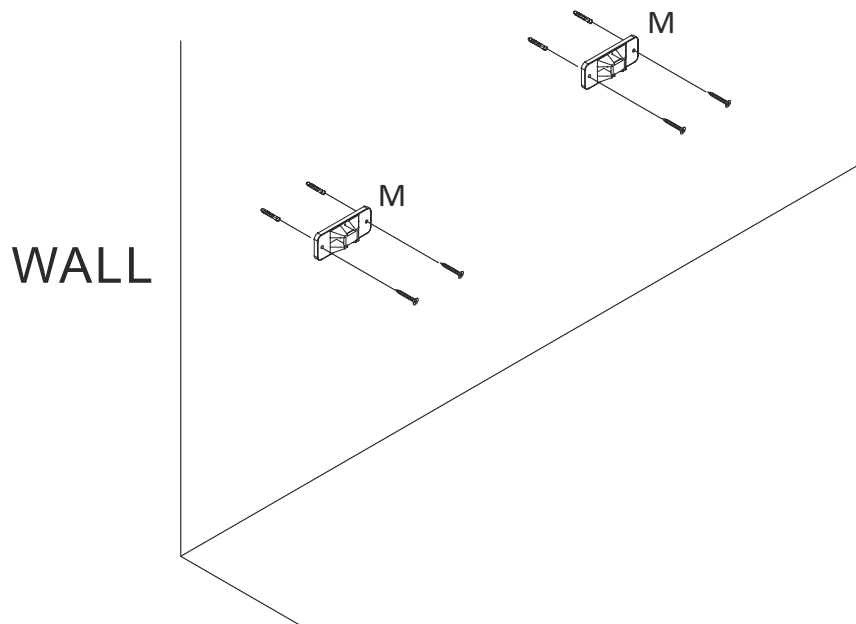

Step 35

- I. Use the plastic strap (M) to connect the plastic board on the wall to the plastic board on panel (9).

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent this, we recommend that the furniture be permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure the hardware is suitable for your walls before installation, as different wall materials may require different types of anchors.

