

INSTALLATION MANUAL



Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.





Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

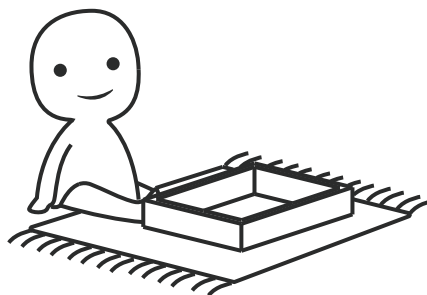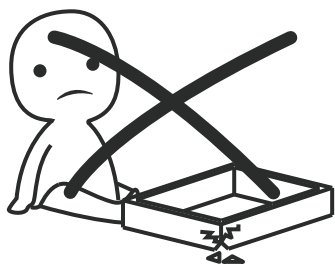

AVOID SCRATCHES!

In order to avoid scratching the furniture should be assembled on a soft layer-could be a rug.

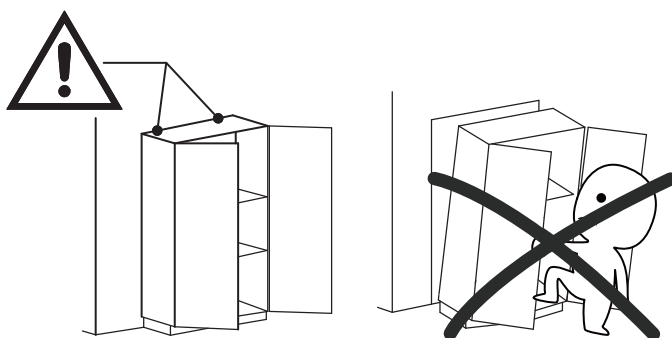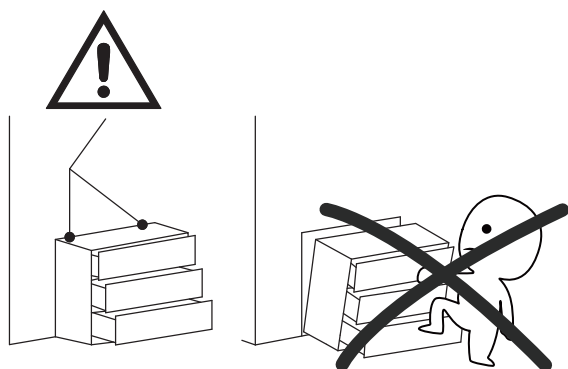

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

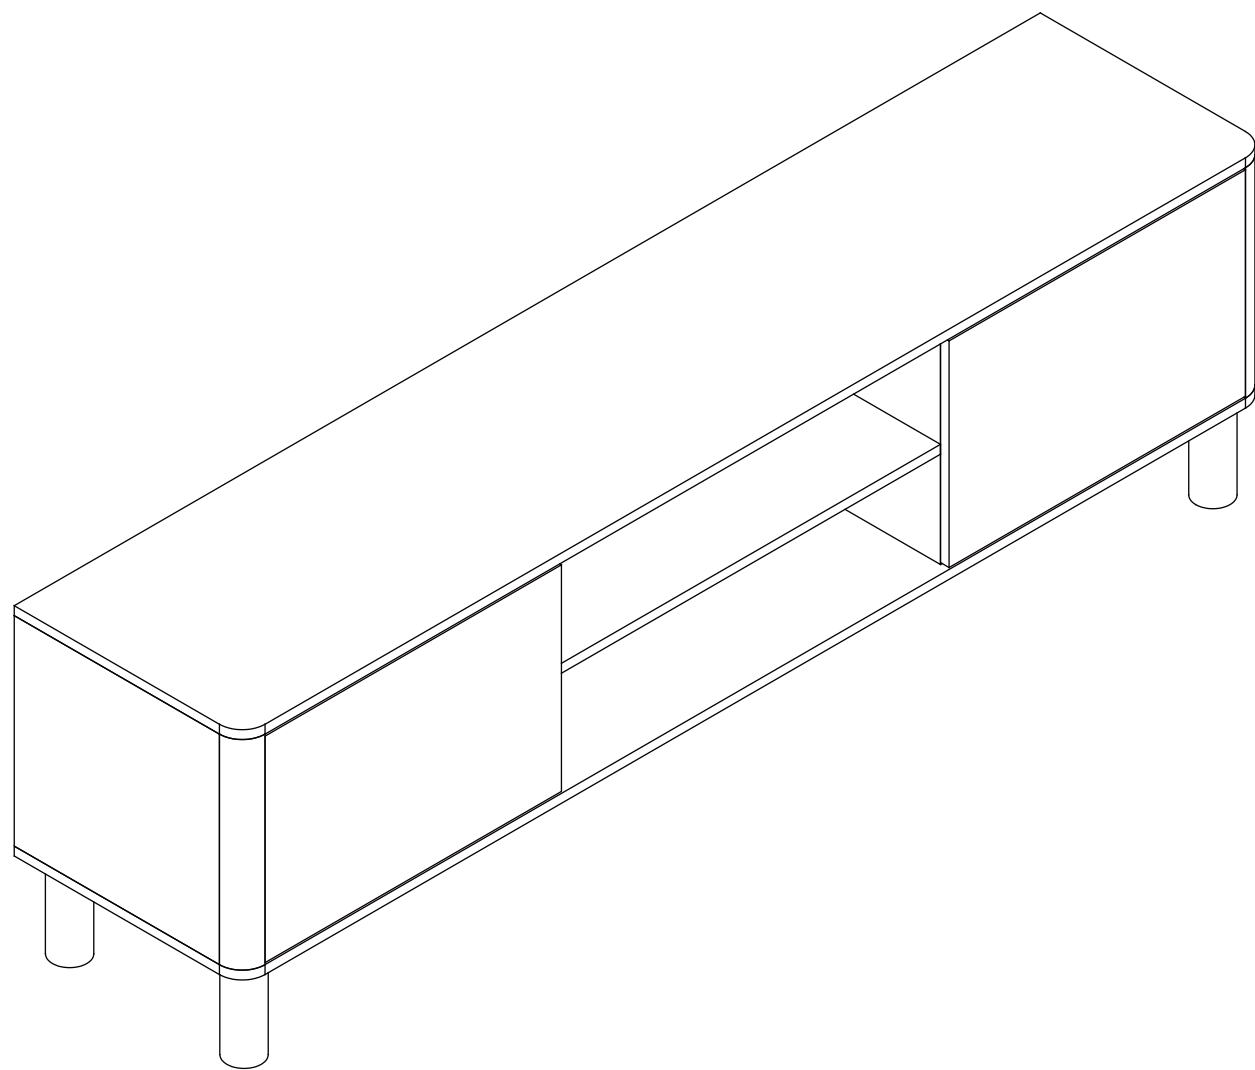


Parts Description

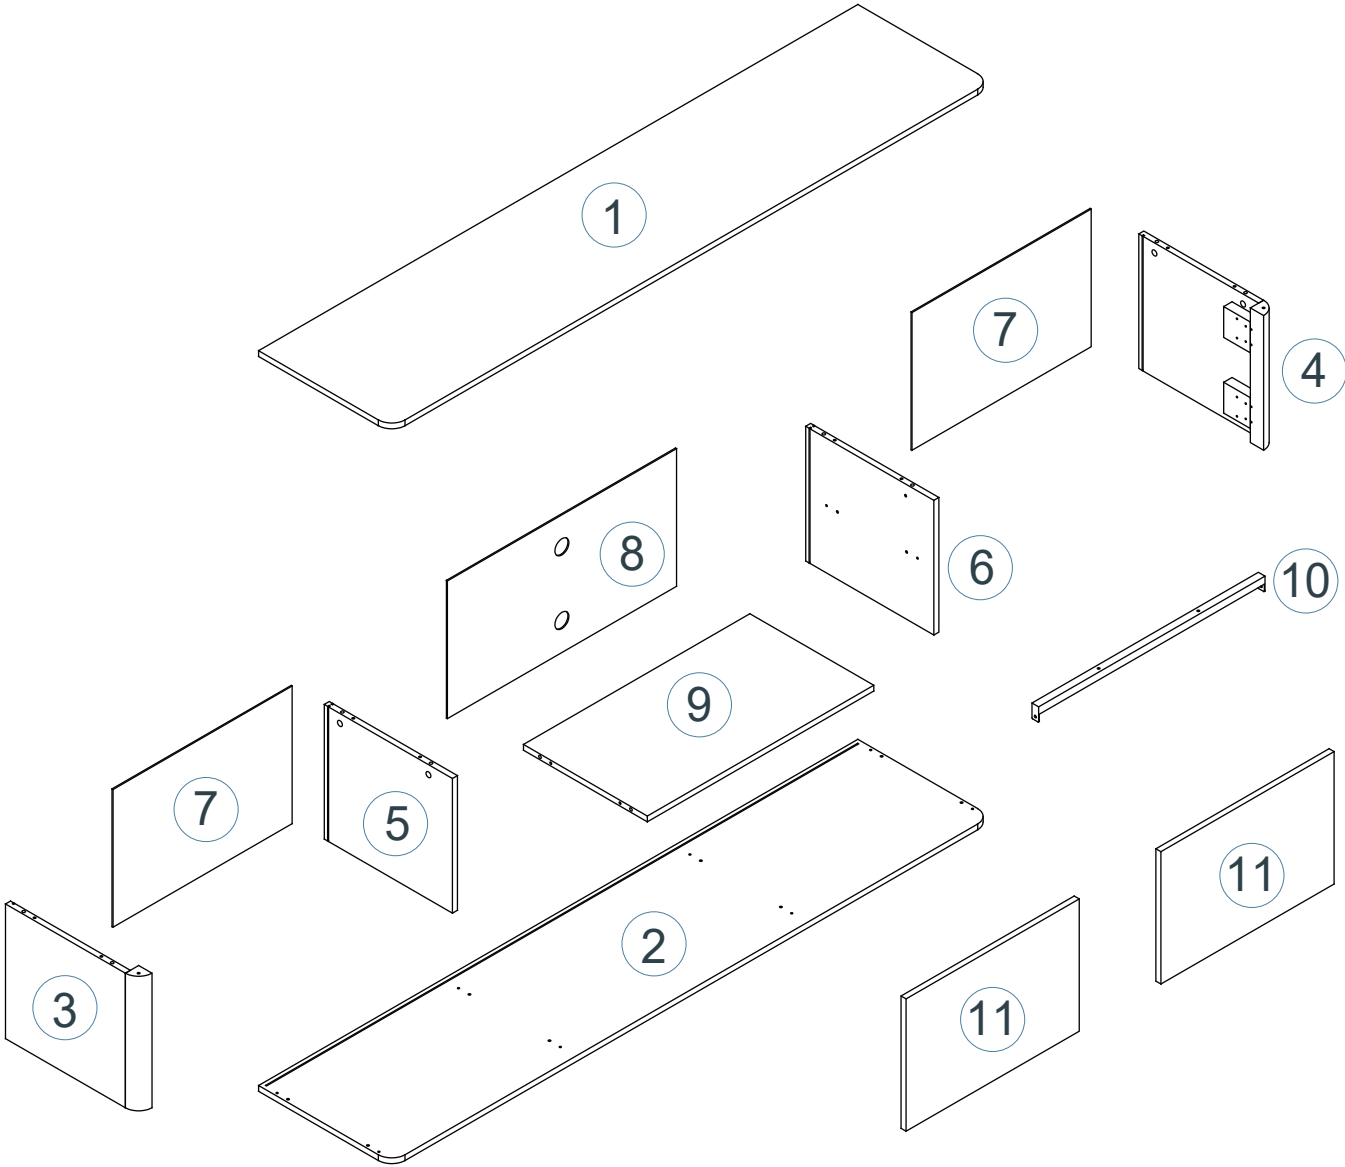


12  x2


13  x4

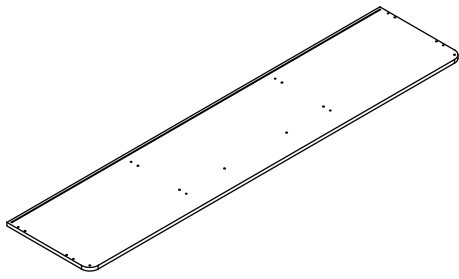


①

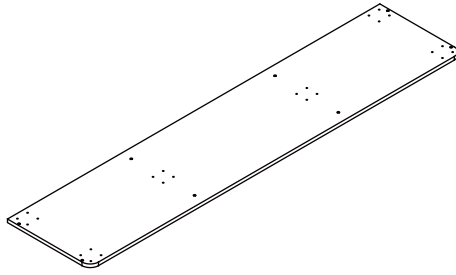


②

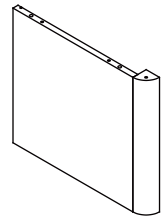


③

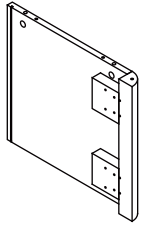


④

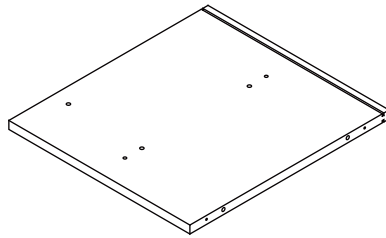


⑤

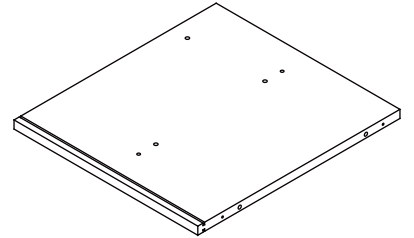


⑥

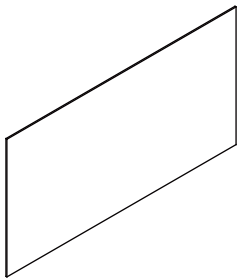


⑦ x2

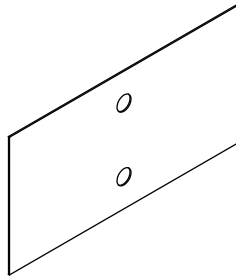


⑧

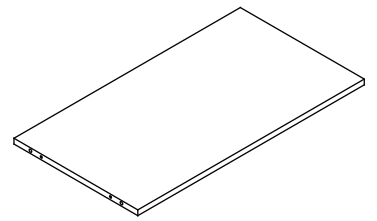


⑨

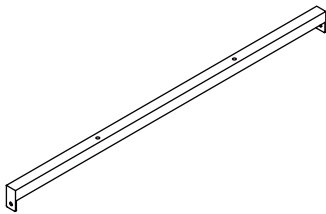

⑩

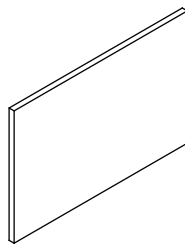













⑪ x2



⑫ x2



⑬ x4

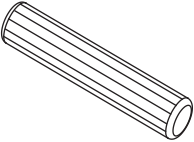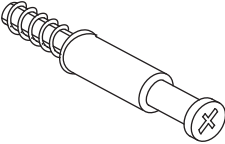A  8 x 30mm Dowels 24pcs	B  4 x 40mm Screws 20pcs	C  Cam Bolts 12pcs	D  Cam Nuts 12pcs
E  3.5 x 14mm Screws 24pcs	F  Hinges 4pcs	G  Brackets 6pcs	H  Screws 26pcs
I  Adjusters 2pcs	J  Wedges 8pcs	K  Wedge Screws 8pcs	L  Allen Key 1pc
M  Felt Pads 4pcs	N  Bolts 2pcs		



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

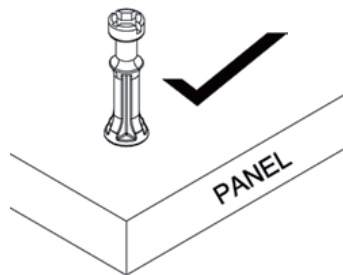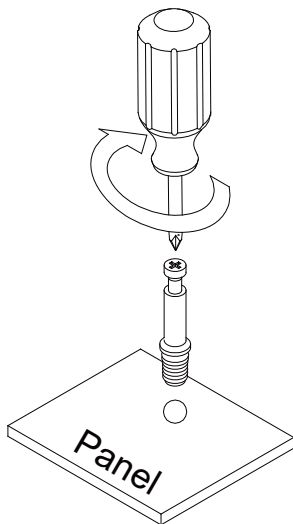



Shoulder is flushed
(on the same level)
with the panel.

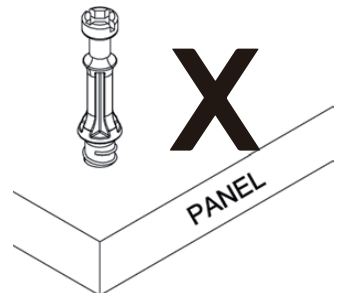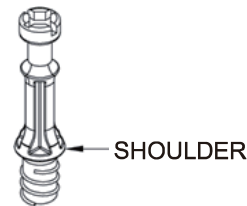

Shoulder is
above the panel.

CAM-LOCK


Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

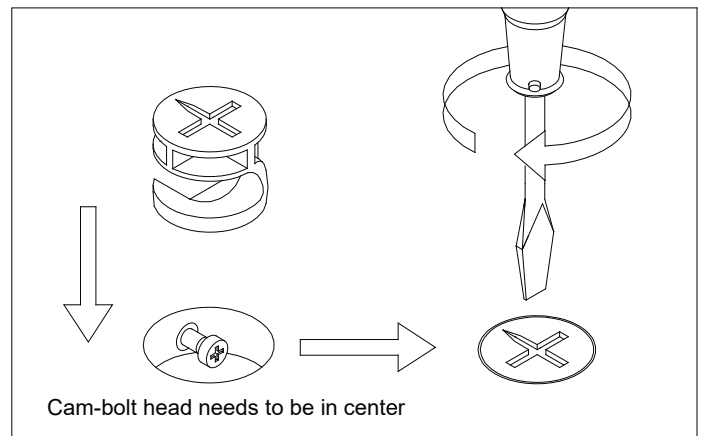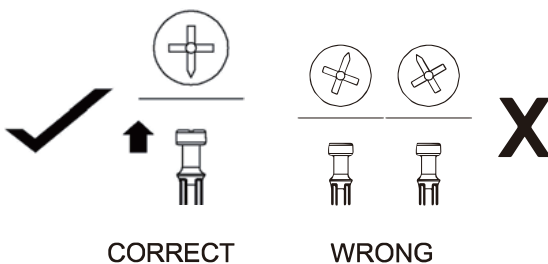

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.


Step 1

Hardware Needed		
C		X4

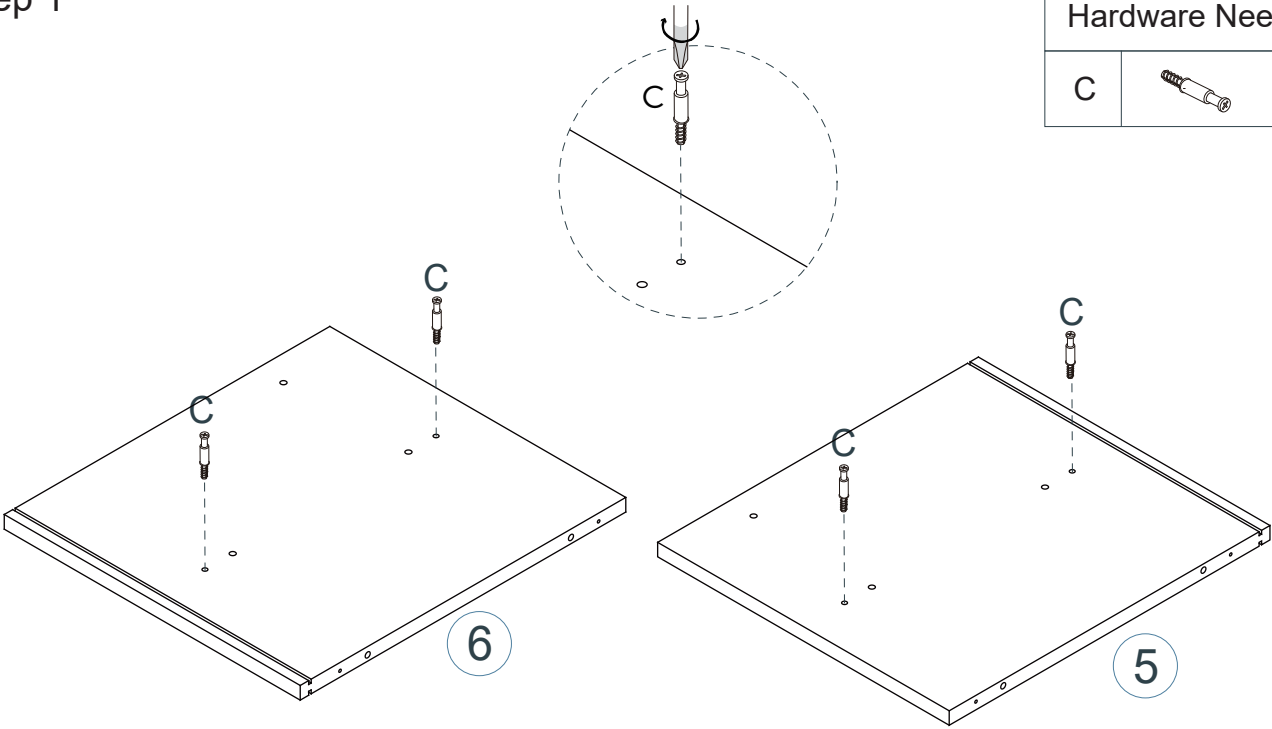


Step 2

Hardware Needed		
A		X4
D		X4

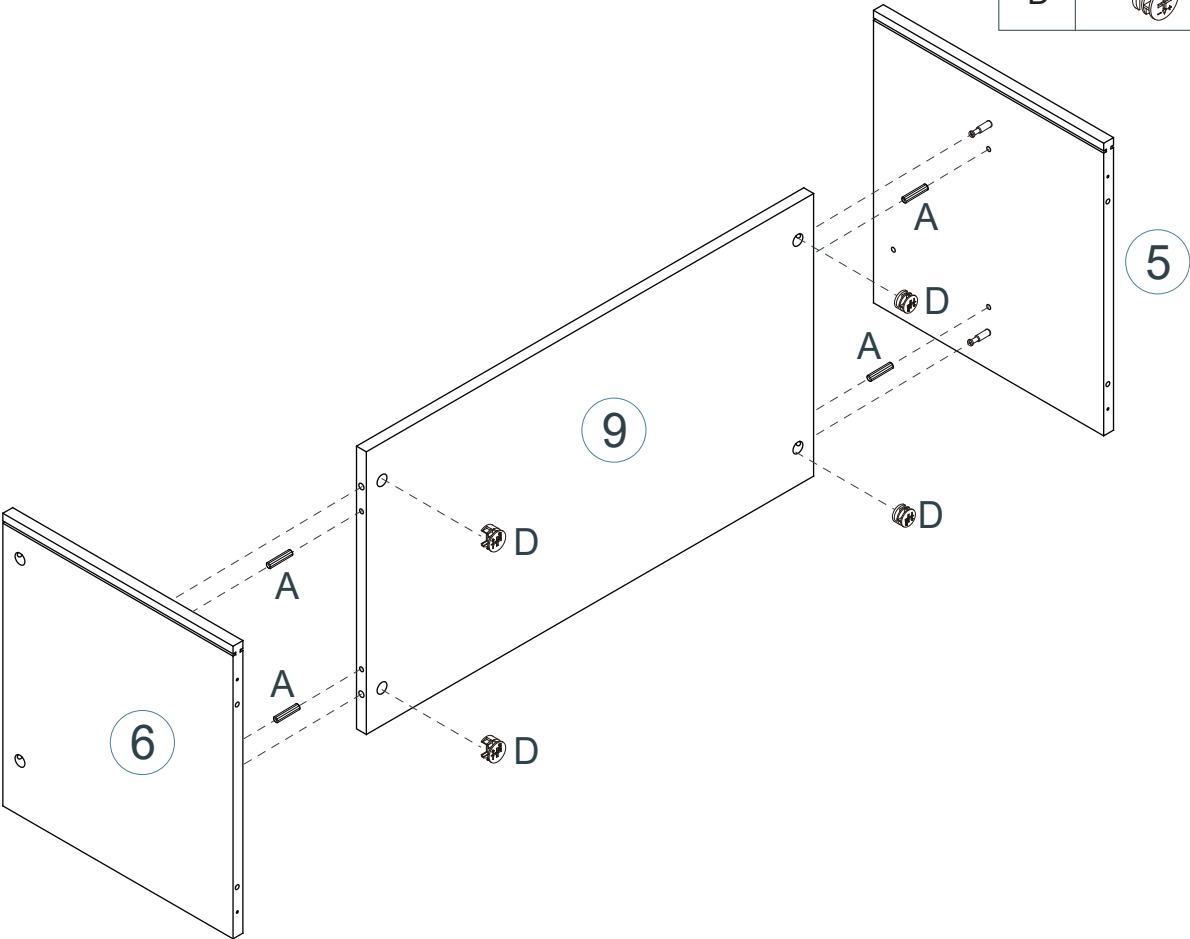


Step 3

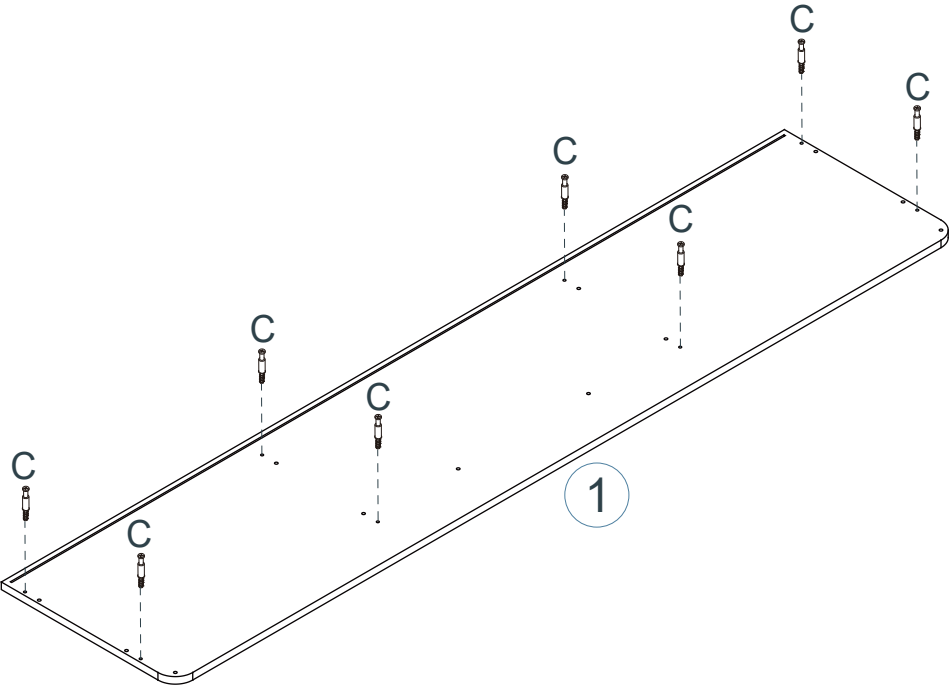


Hardware Needed		
C		X8

Step 4

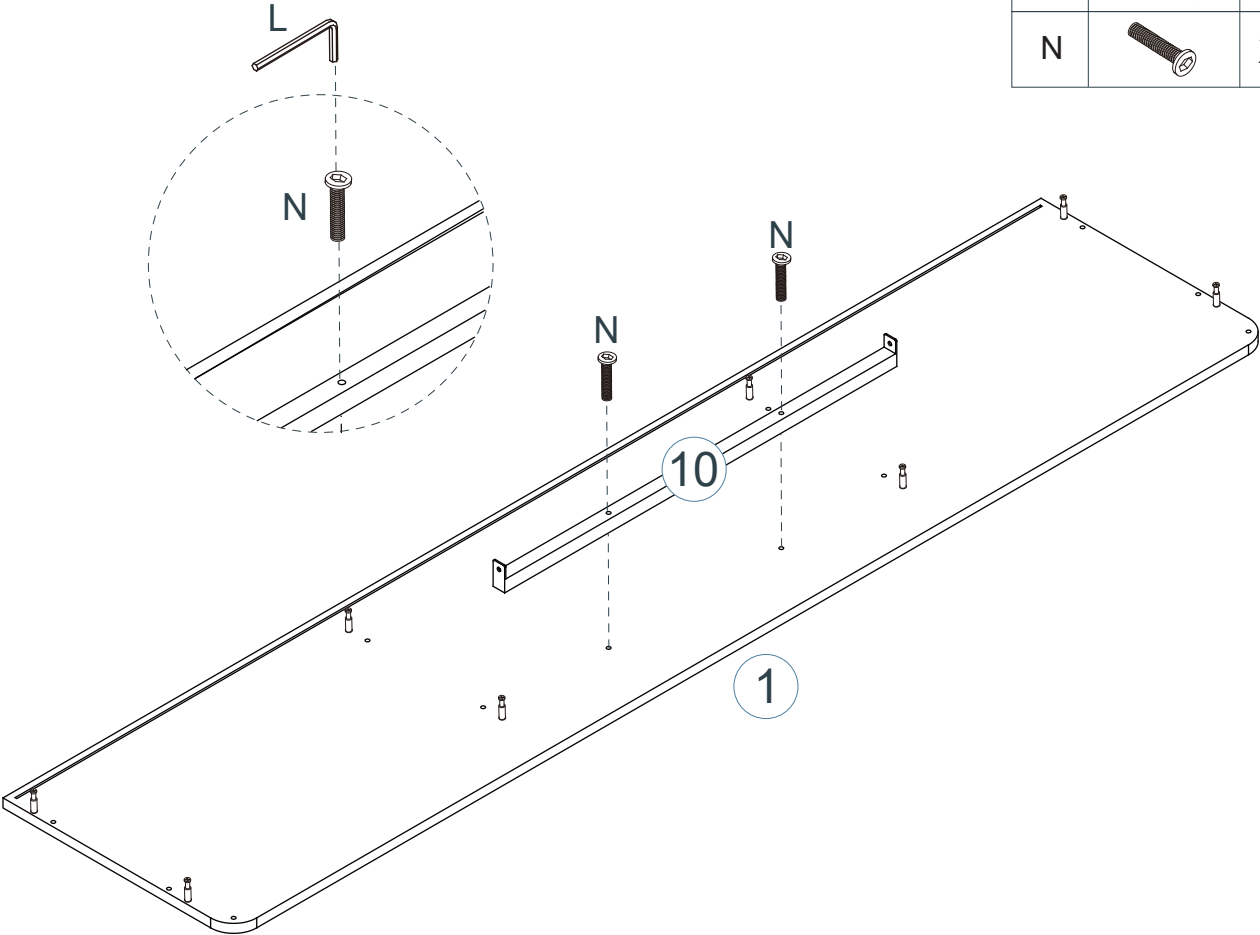


Hardware Needed		
L		X1
N		X2

Step 5

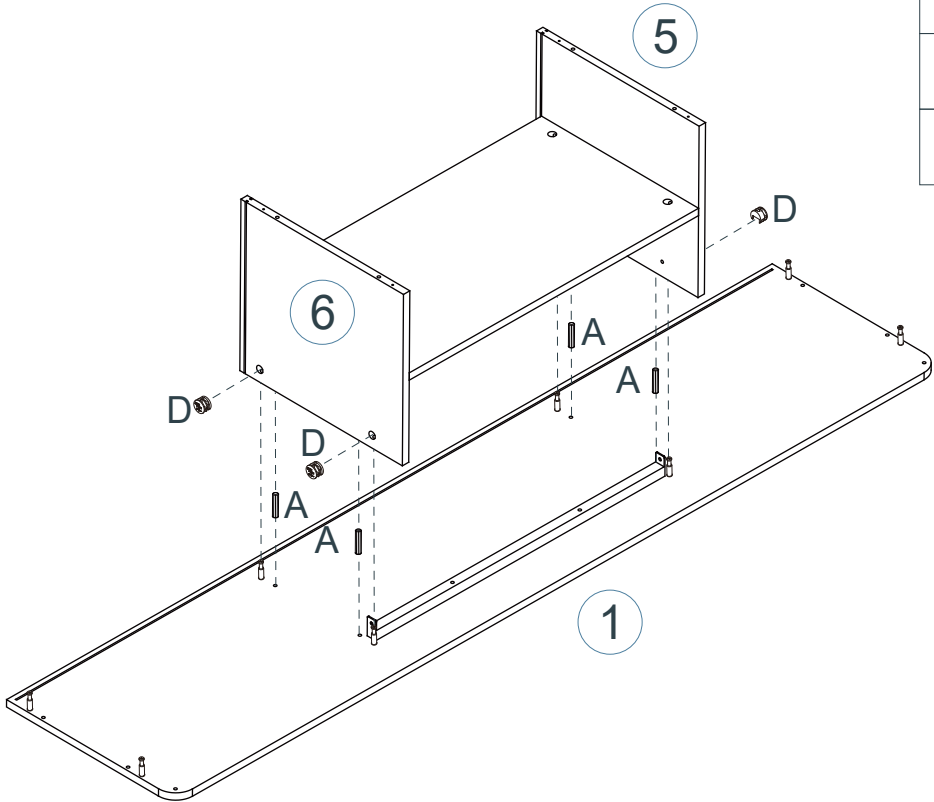


Hardware Needed		
A		X4
D		X4

Step 6

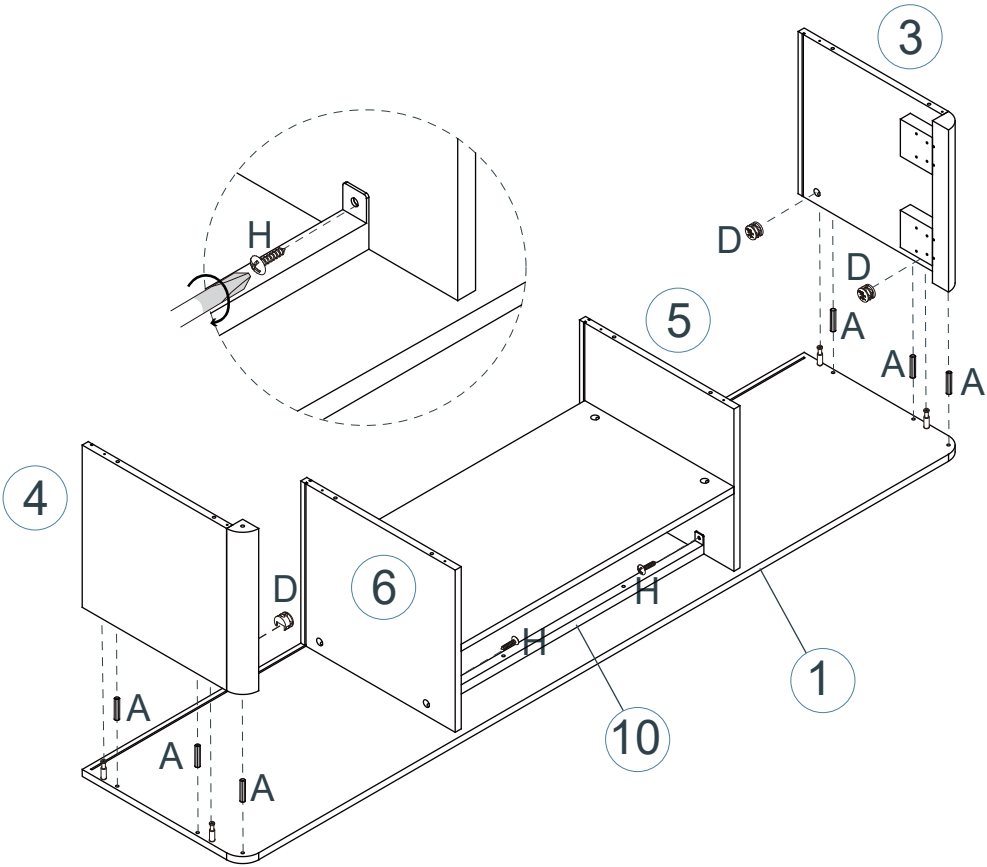


Hardware Needed		
A		X6
D		X4
H		X2

Step 7

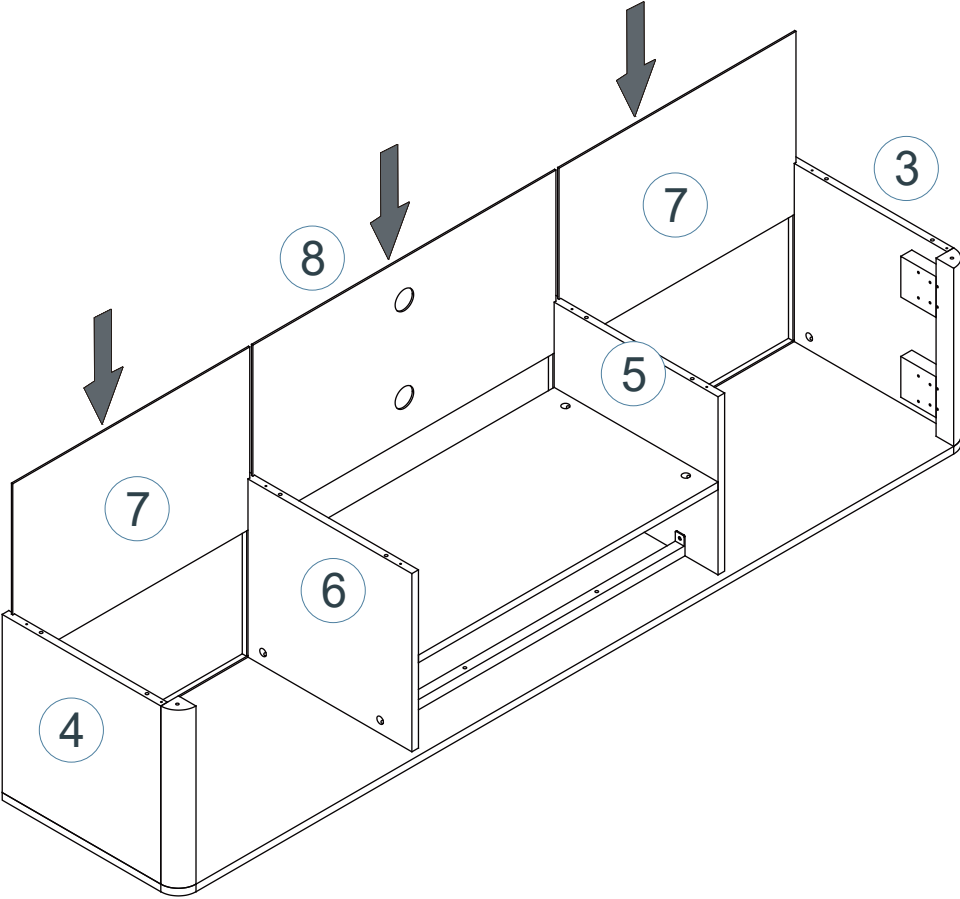


Step 8

Hardware Needed		
A		X10
B		X8

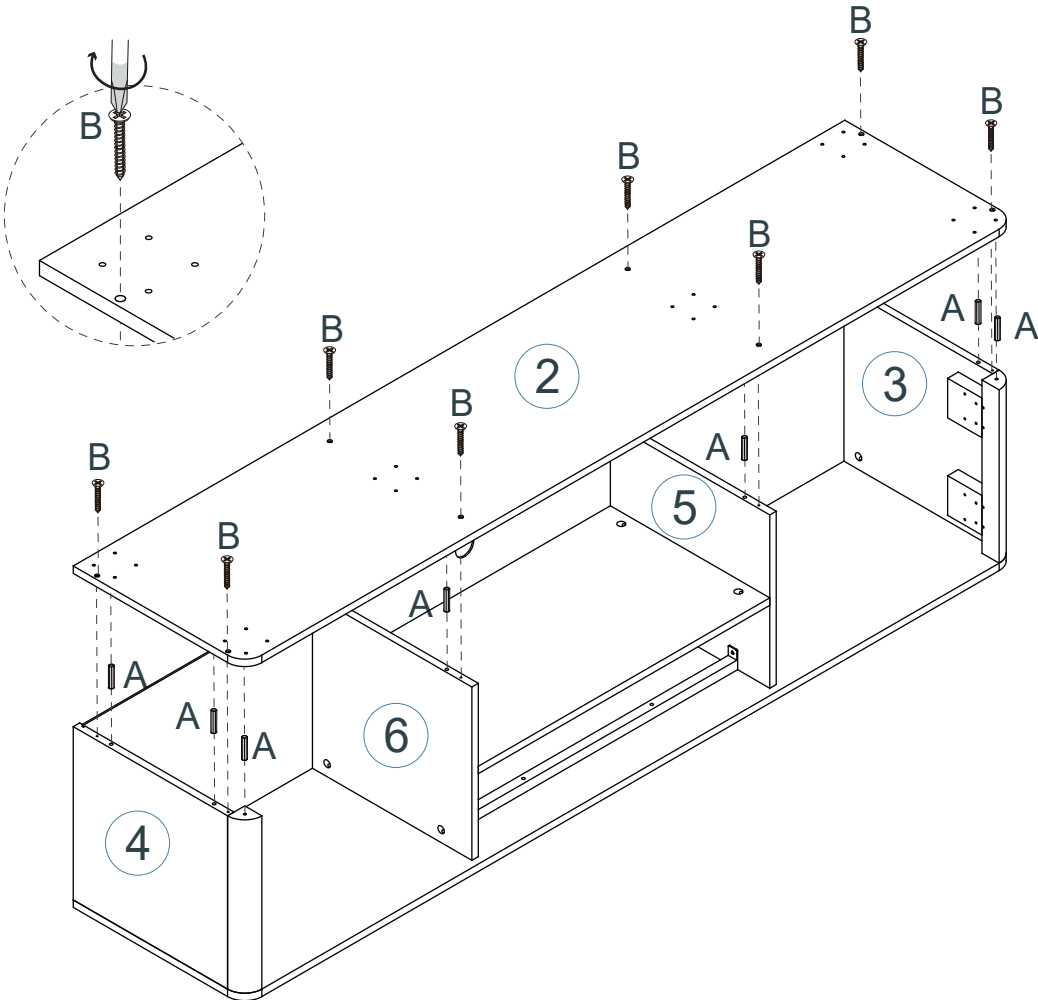


Step 9

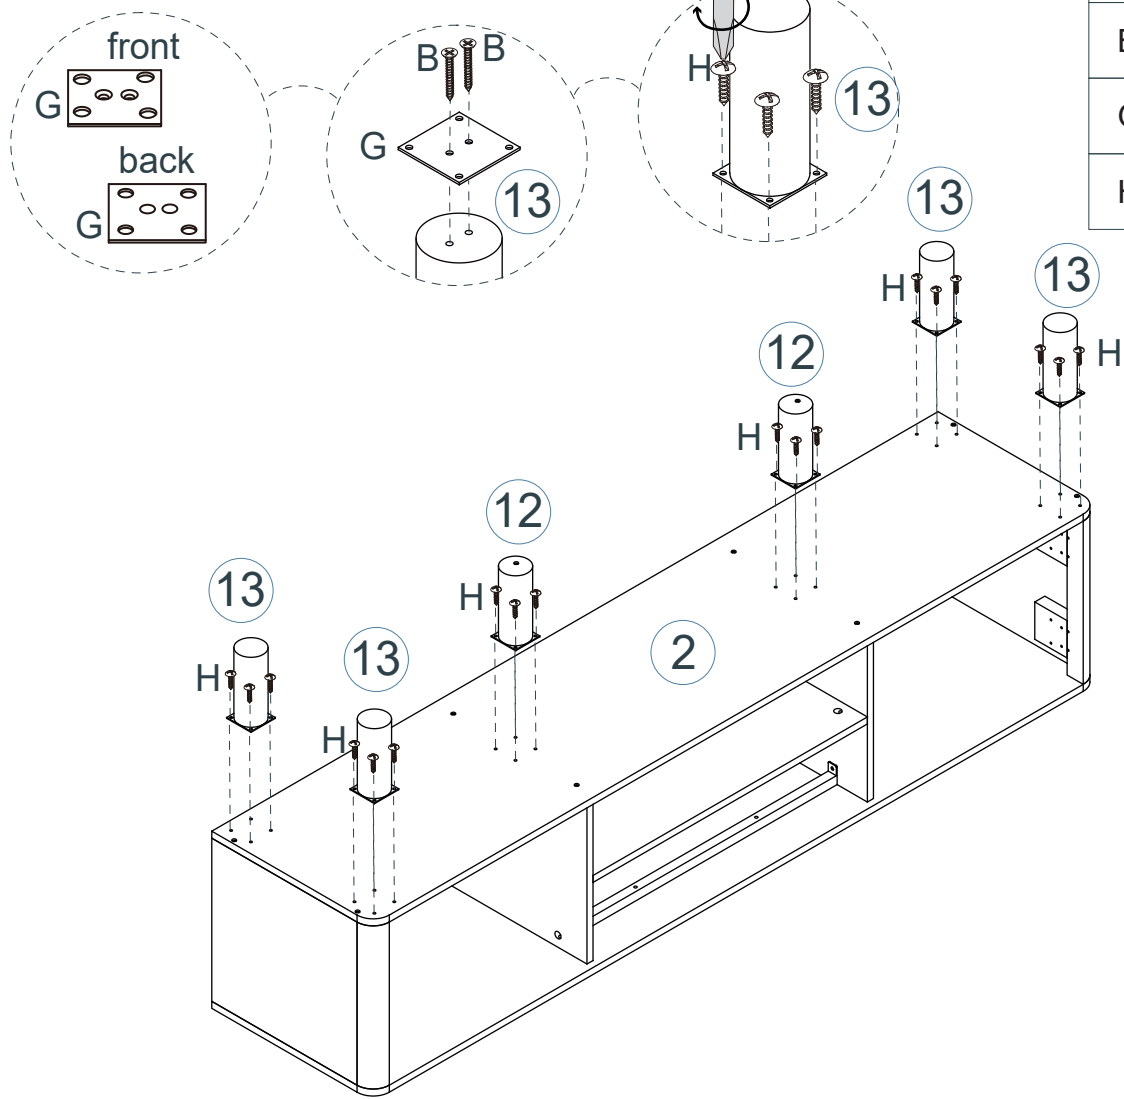


Hardware Needed		
B		X12
G		X6
H		X24

Step 10

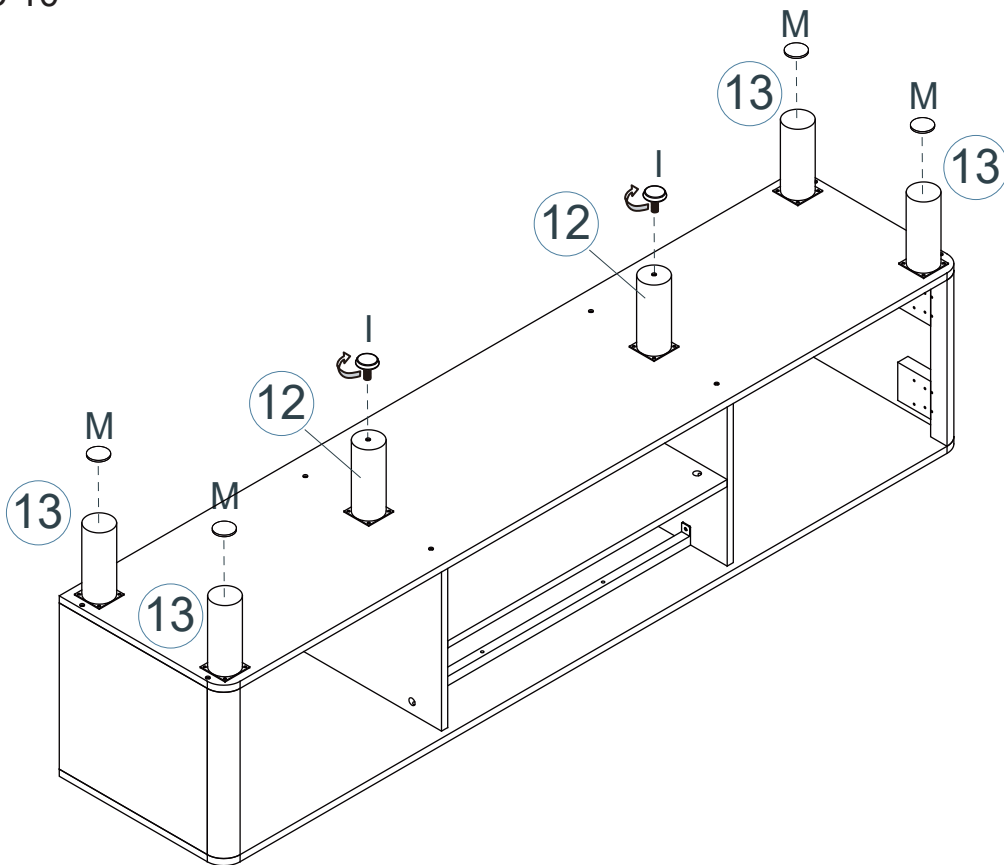


Hardware Needed		
I		X2
M		X4

Step 11

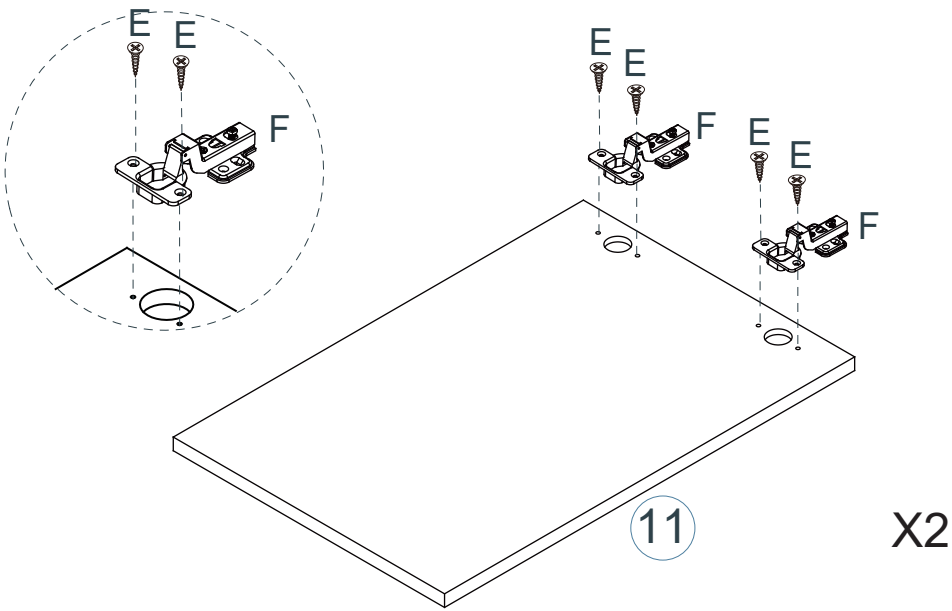

Hardware Needed		
E		X8
F		X4


Step 12

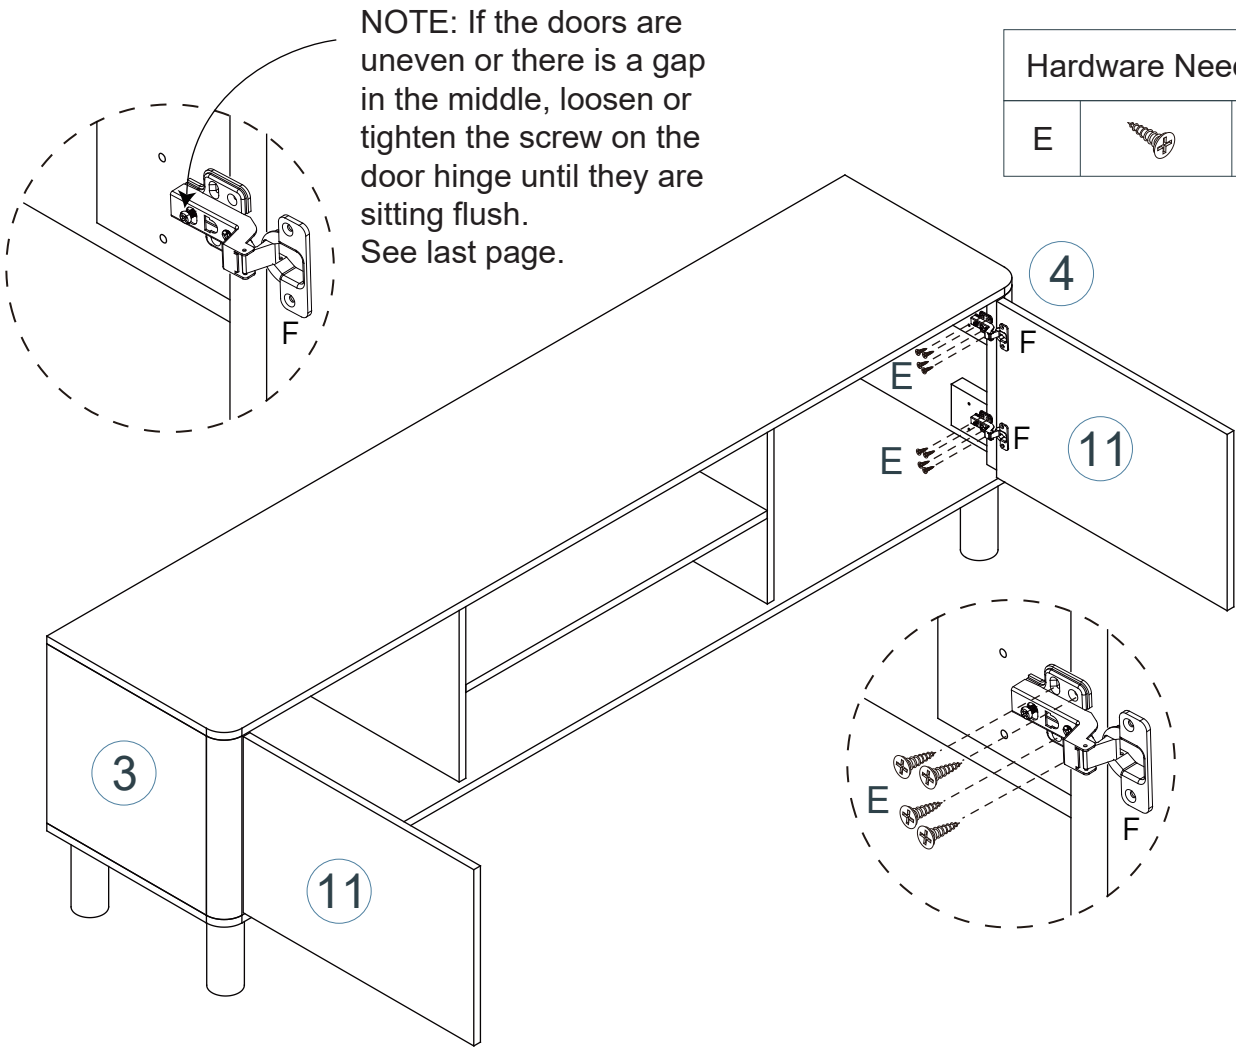

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush. See last page.


Hardware Needed		
E		X16

Step 13

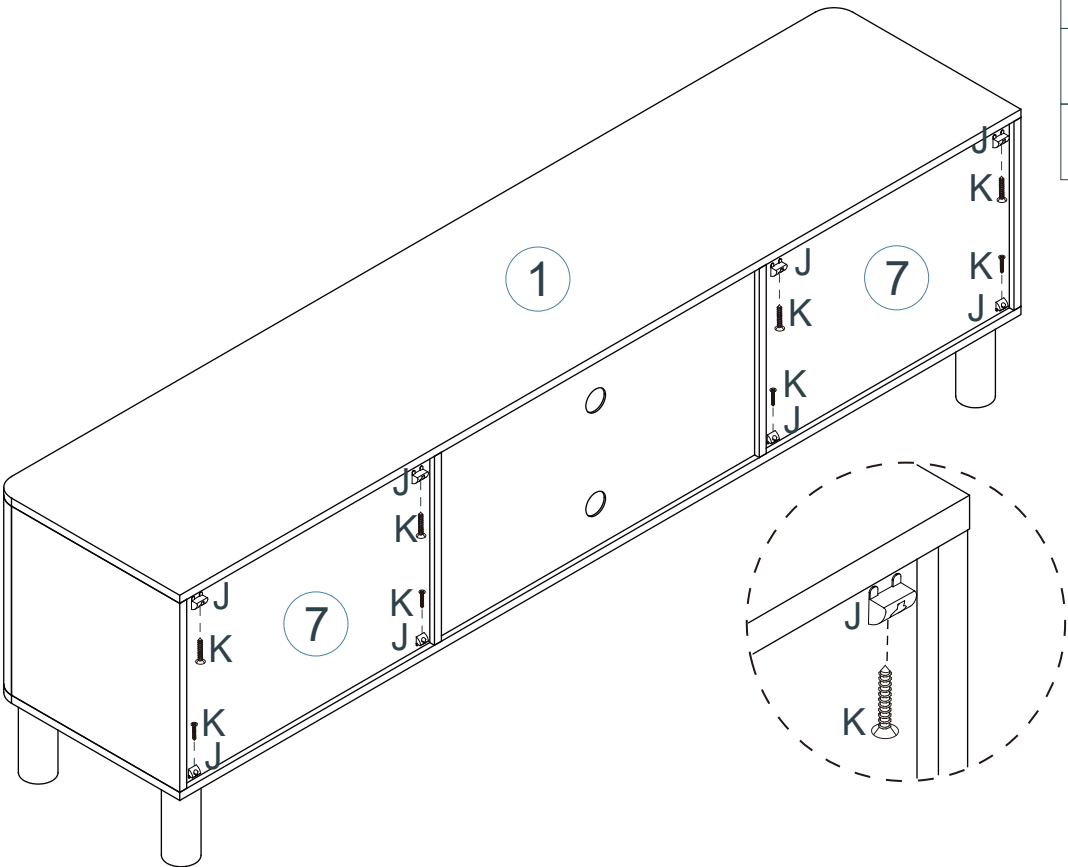

Hardware Needed		
J		X8
K		X8

Step 14

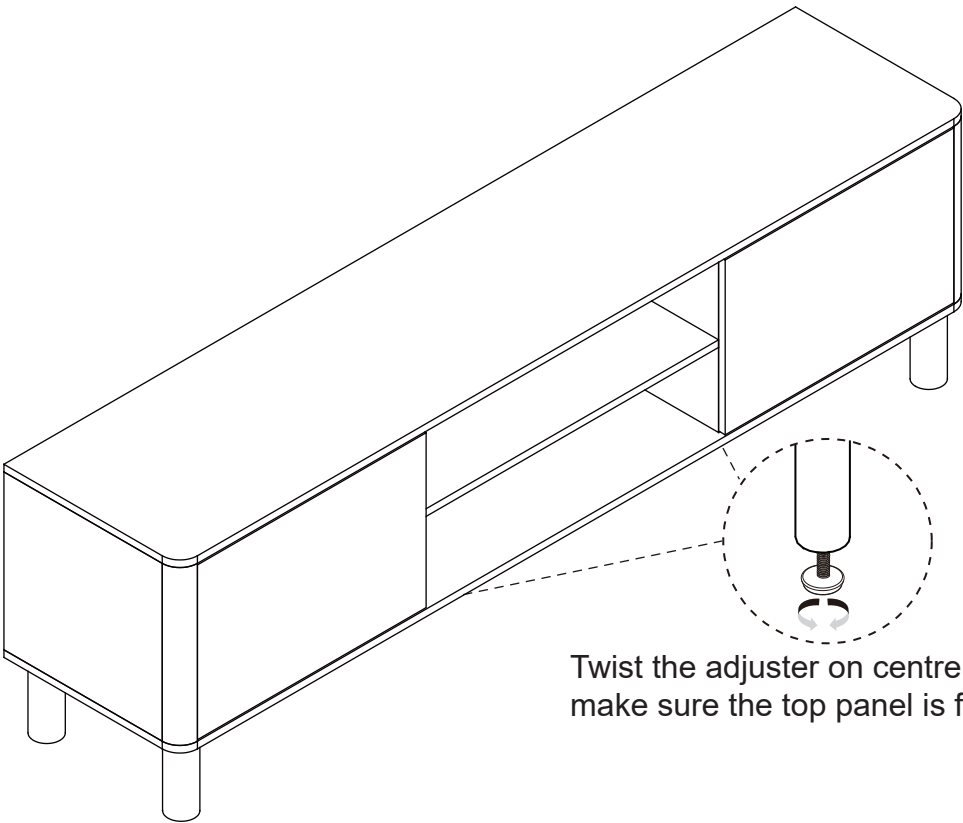

Twist the adjuster on centre leg to make sure the top panel is flush.

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

