



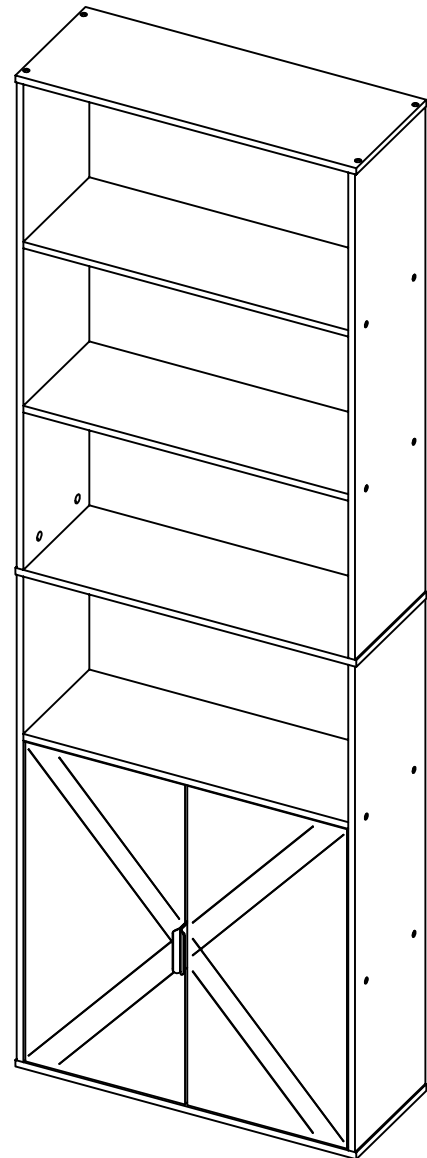


Installation Instruction


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

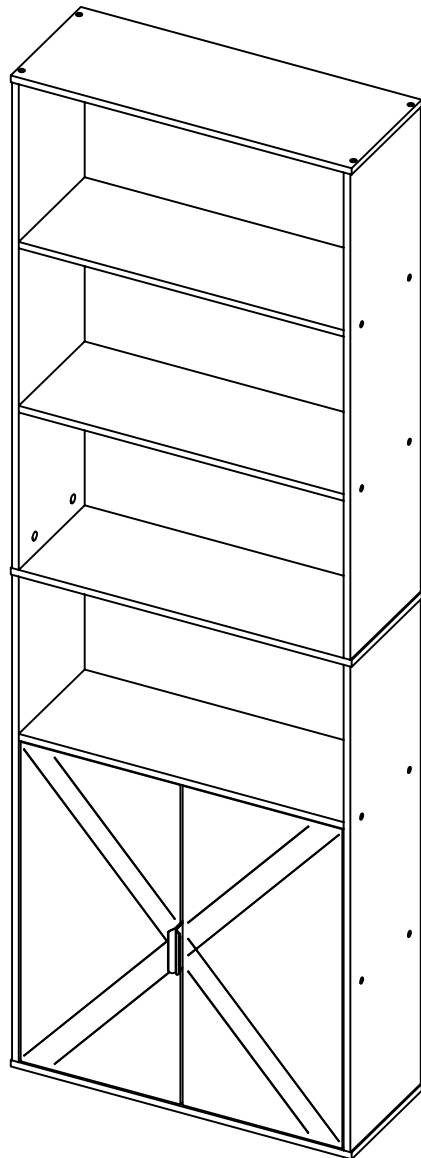


HARDWARE LIST

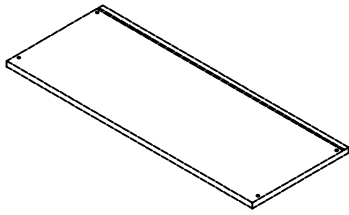


①×2PC

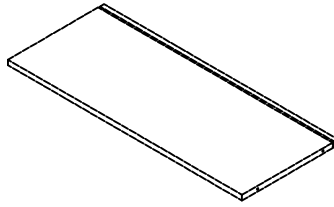


②×4PCS

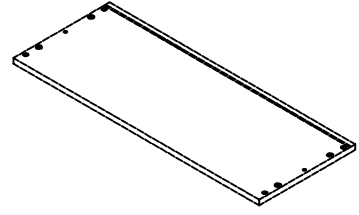


③×2PC

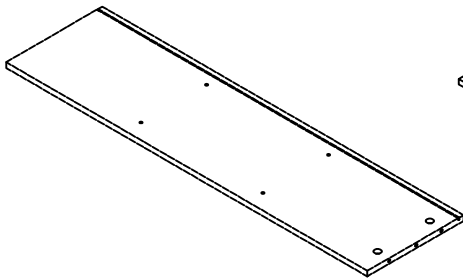


④×2PC

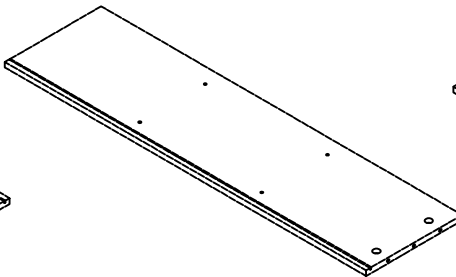


⑤×2PC

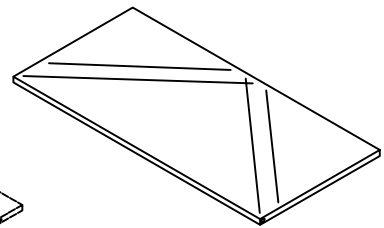


⑥×4PCS

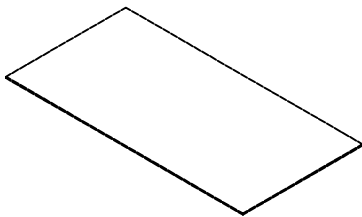


⑦×12PCS

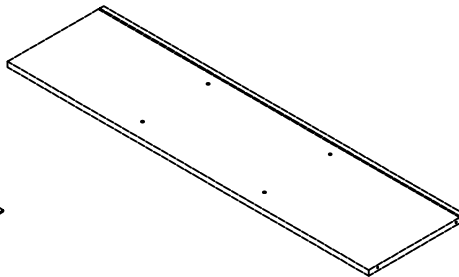


⑧×4PCS

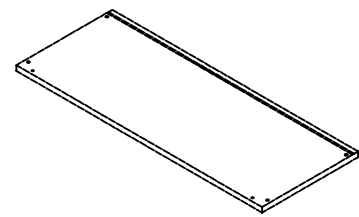

⑨×2PC

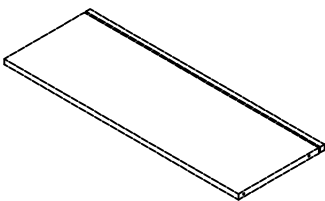


⑩×2PC

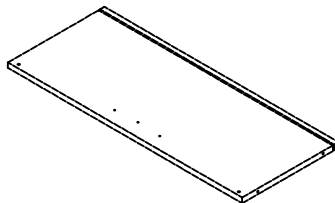


⑪×2PC


PARTA LIST




M4
A×1PC




Ø6x25mm
B1×2PC




M4
B2×2PC



Ø8xM4x25mm
B3×2PC

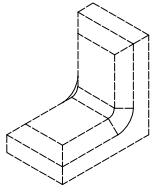


28x28x18mm
C1×2PC

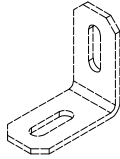


26x26x13.5mm
C2×2PC




Ø6xM3x12mm
C3×18+4PCS



D×4PCS

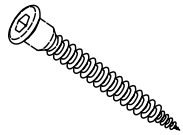


M5x45mm
E×56+2PCS



Ø6.5*36mm
F1×8PCS




Ø15*9.5mm
F2×8PCS




14x14x11mm
G1×48PCS




Ø6xM3x16mm
G2×54+2PCS




Ø12*25mm
H×8PCS

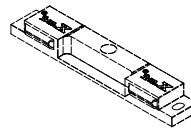


120*19mm
I1×2PC




54*12*1.0mm
I2×4PCS




30*30*2.0mm
J×8PCS



Ø6*30mm
K×4PCS

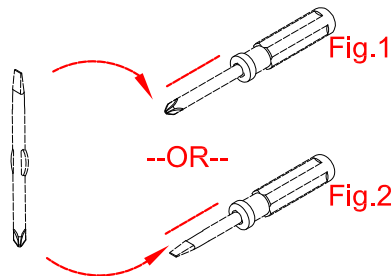


1

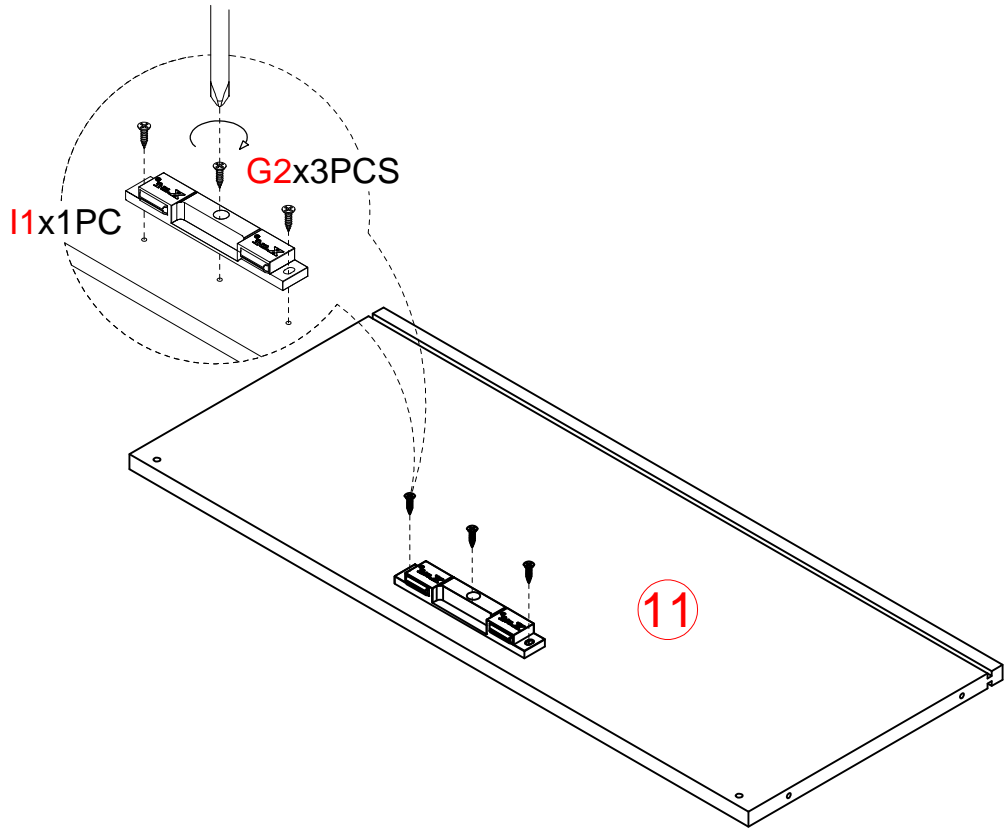

x2

I1x2PC
G2x6PCS
⑪x2PC


2

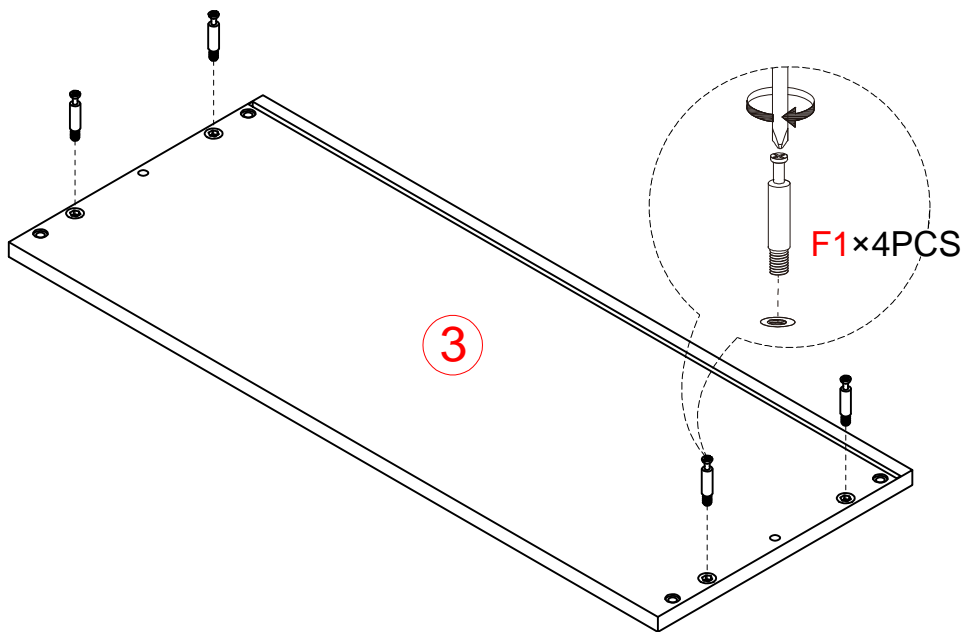

x2

F1x8PCS
③x2PC

3

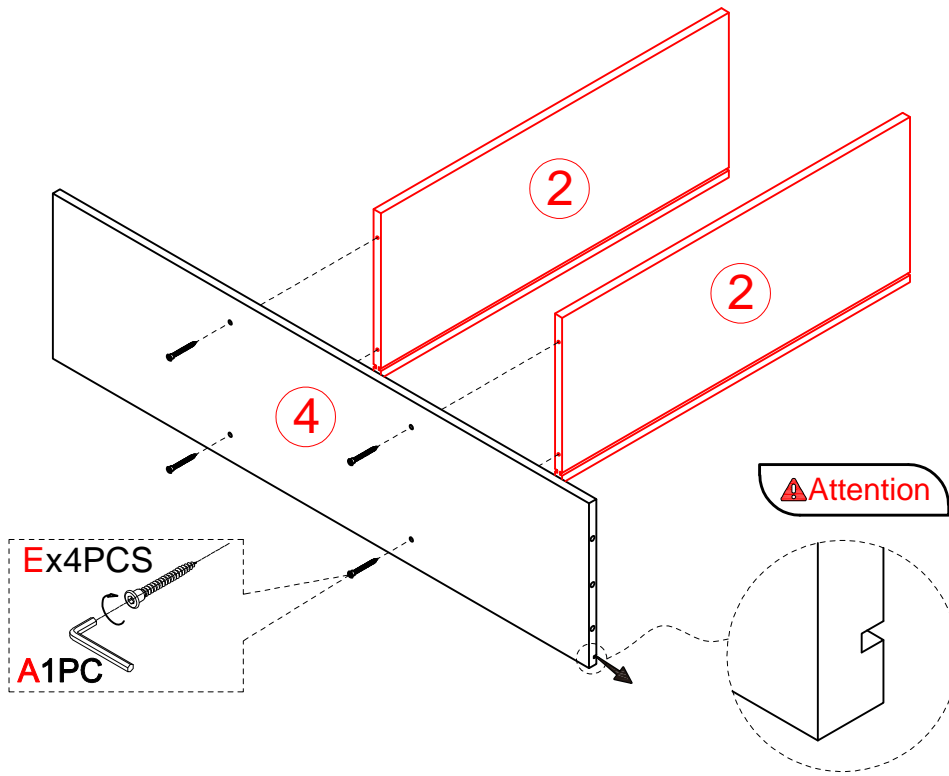


x2

E x4PCS
A 1PC

A x1PC
E x8PCS
2 x4PCS
4 x2PCS


4

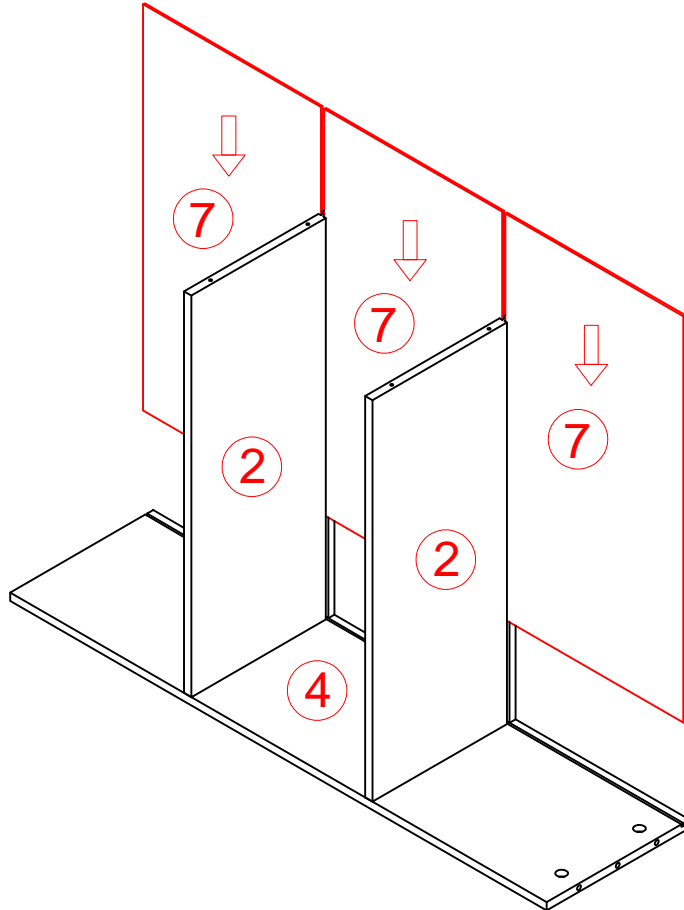

x2

7 x6PCS


5

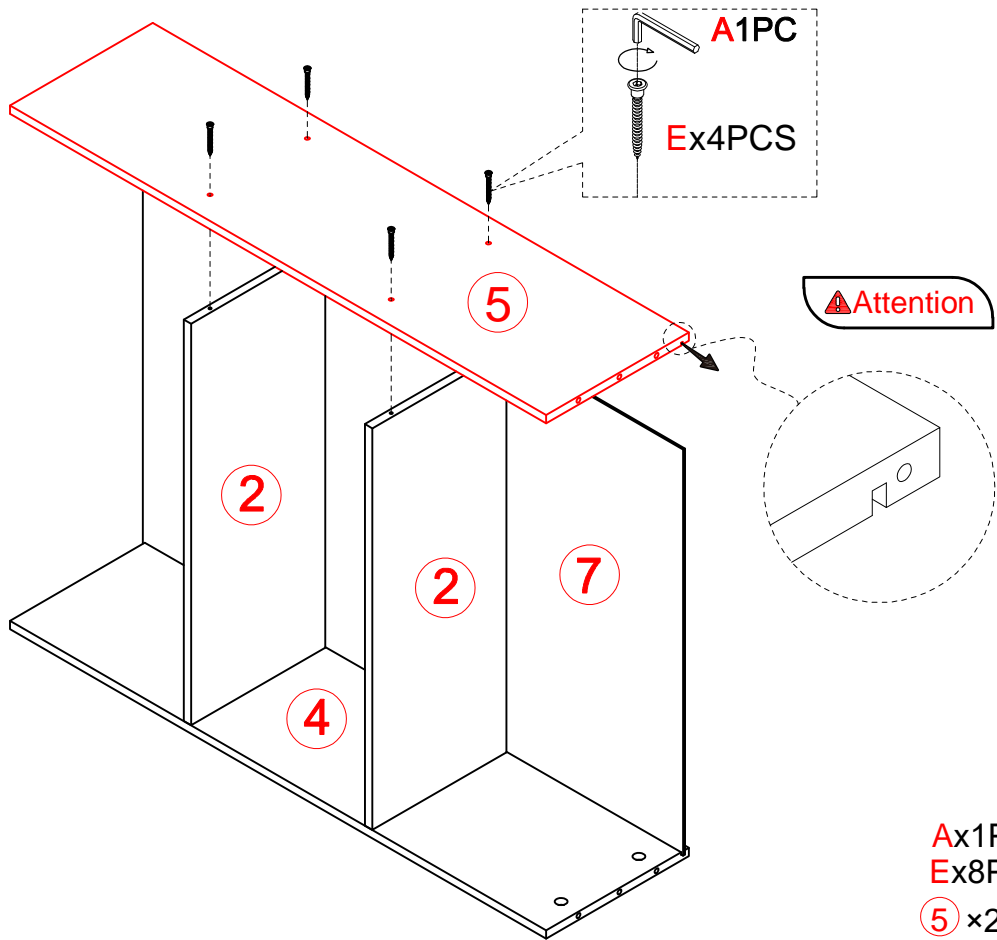

x2

Ax1PC
 Ex4PCS
 (5) x2PC

6

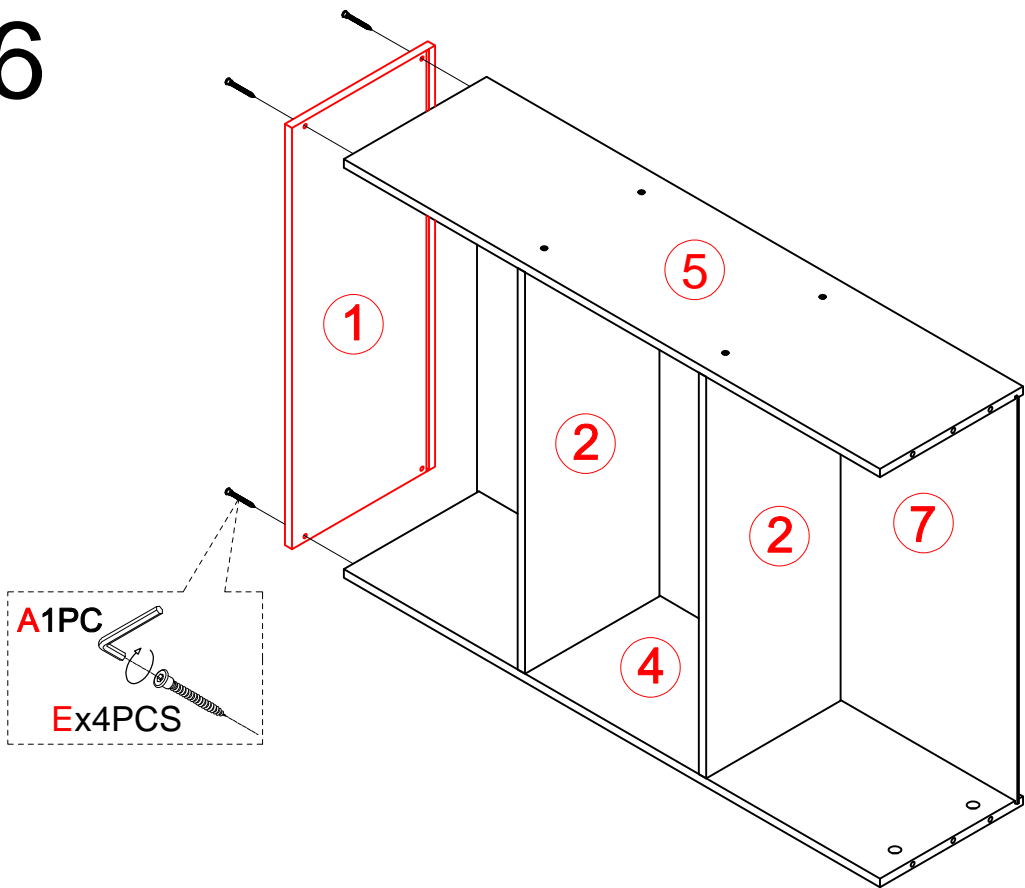


x2

Ax1PC
 Ex4PCS
 (1) x2PC


7

x2

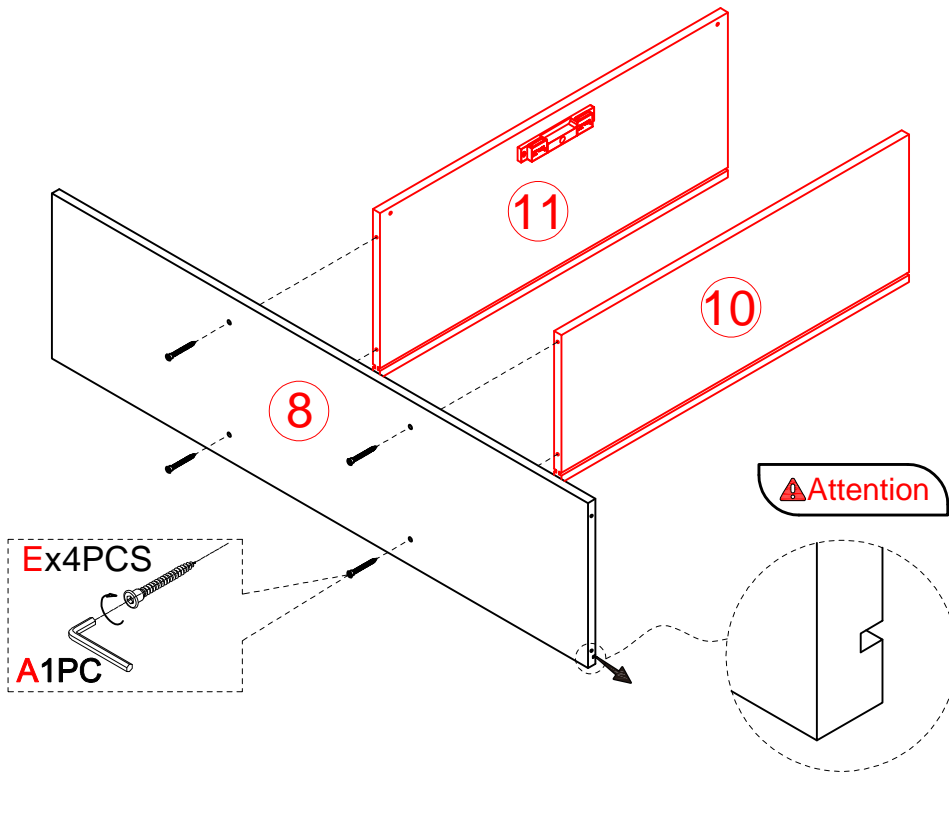


8

x2

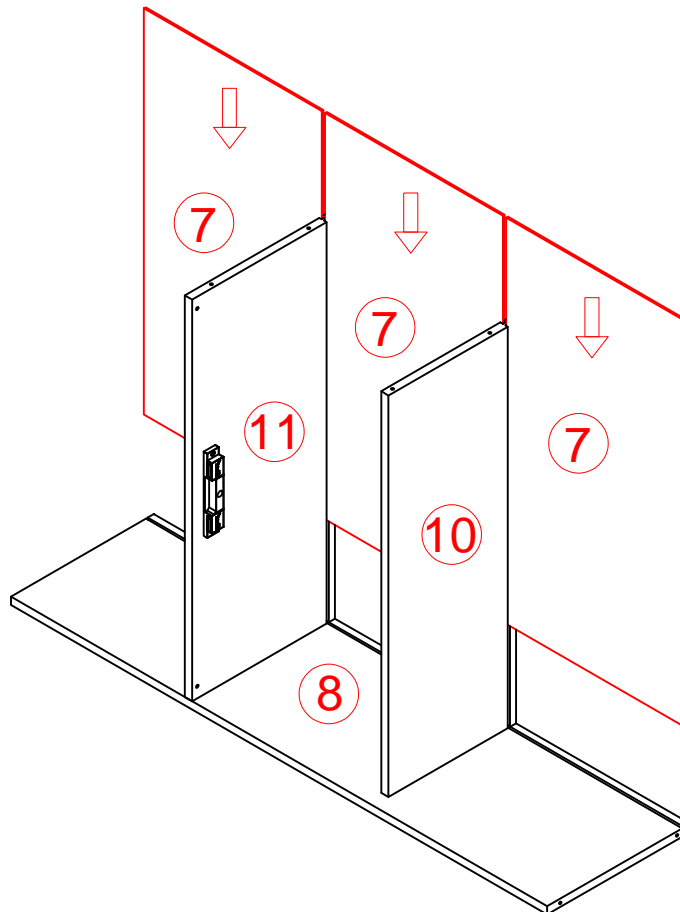


7 x6PCS

9

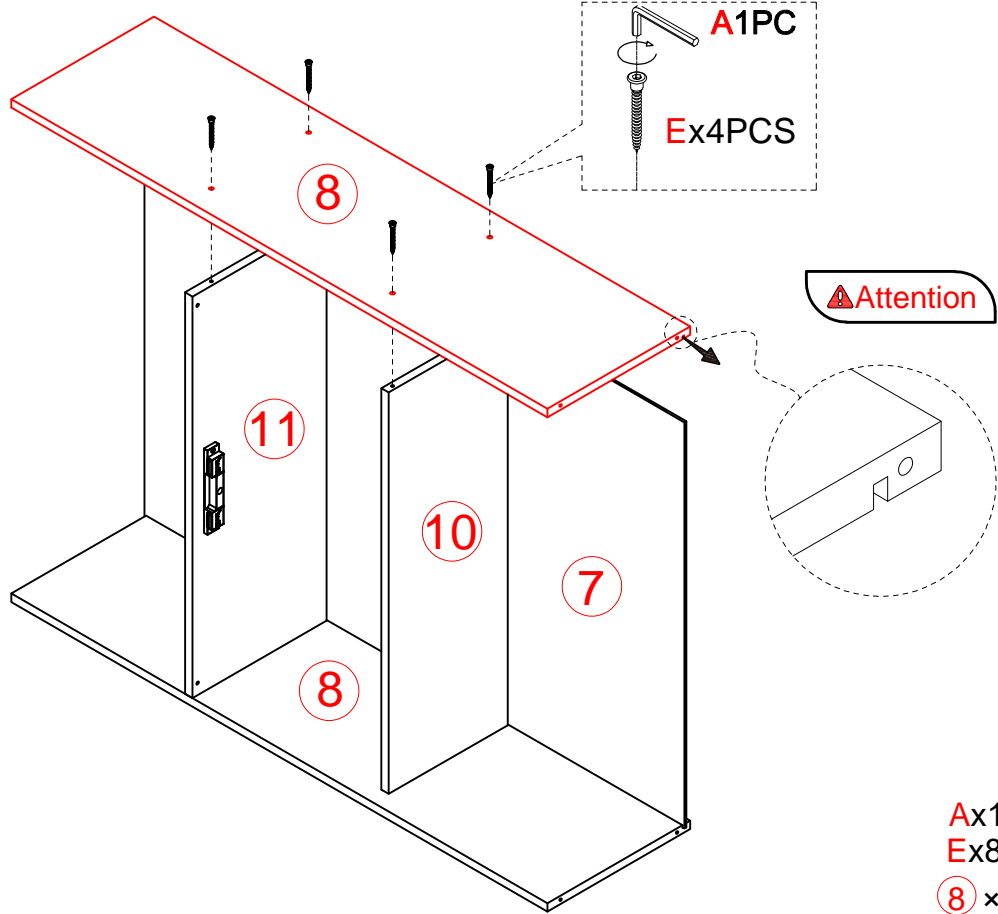


10

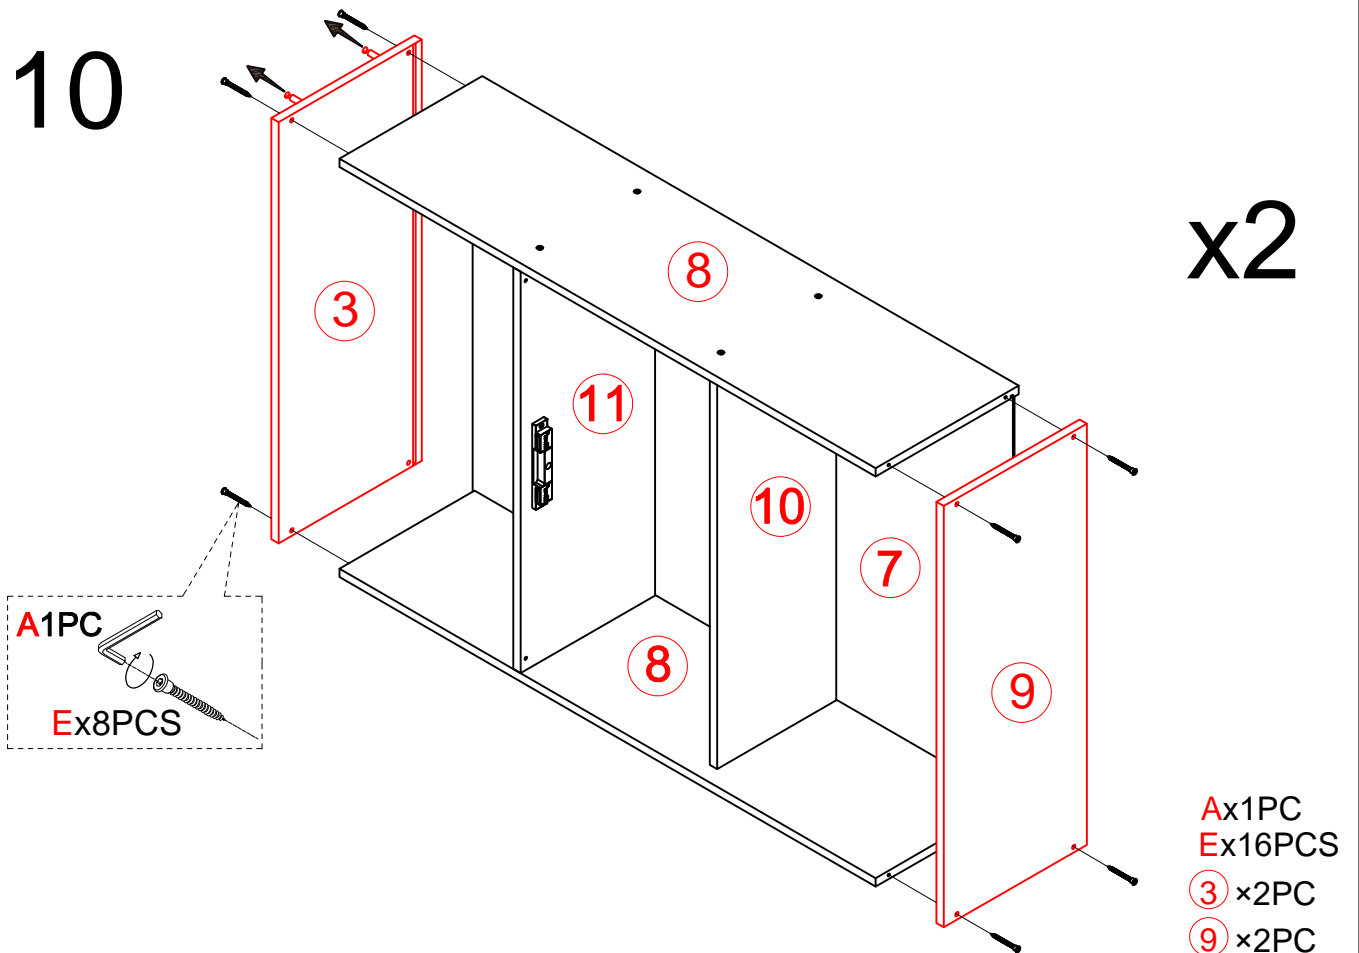


11

x2

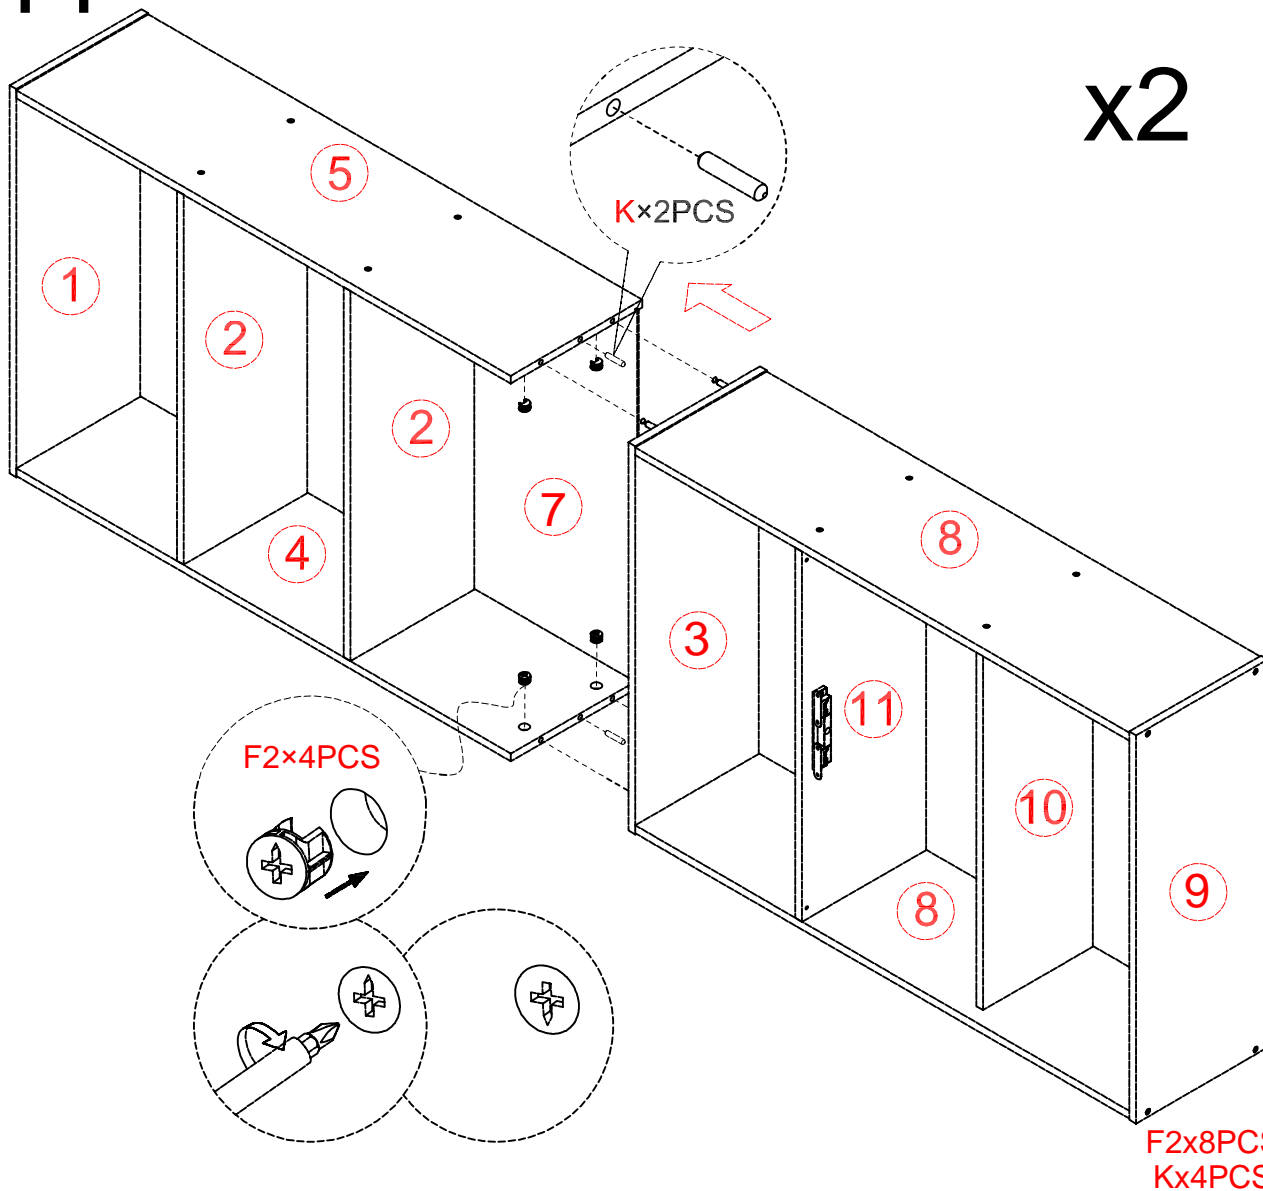


12

x2

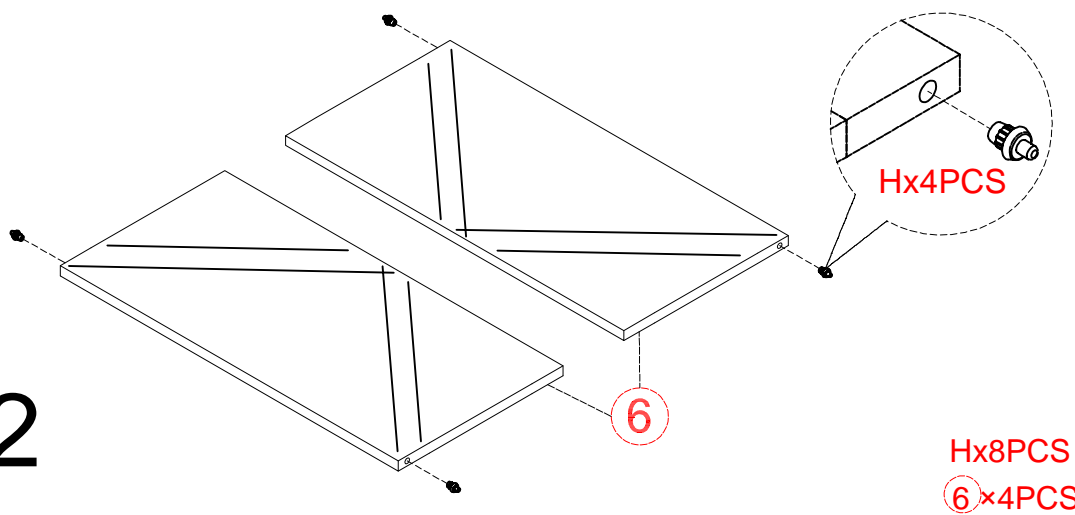


13

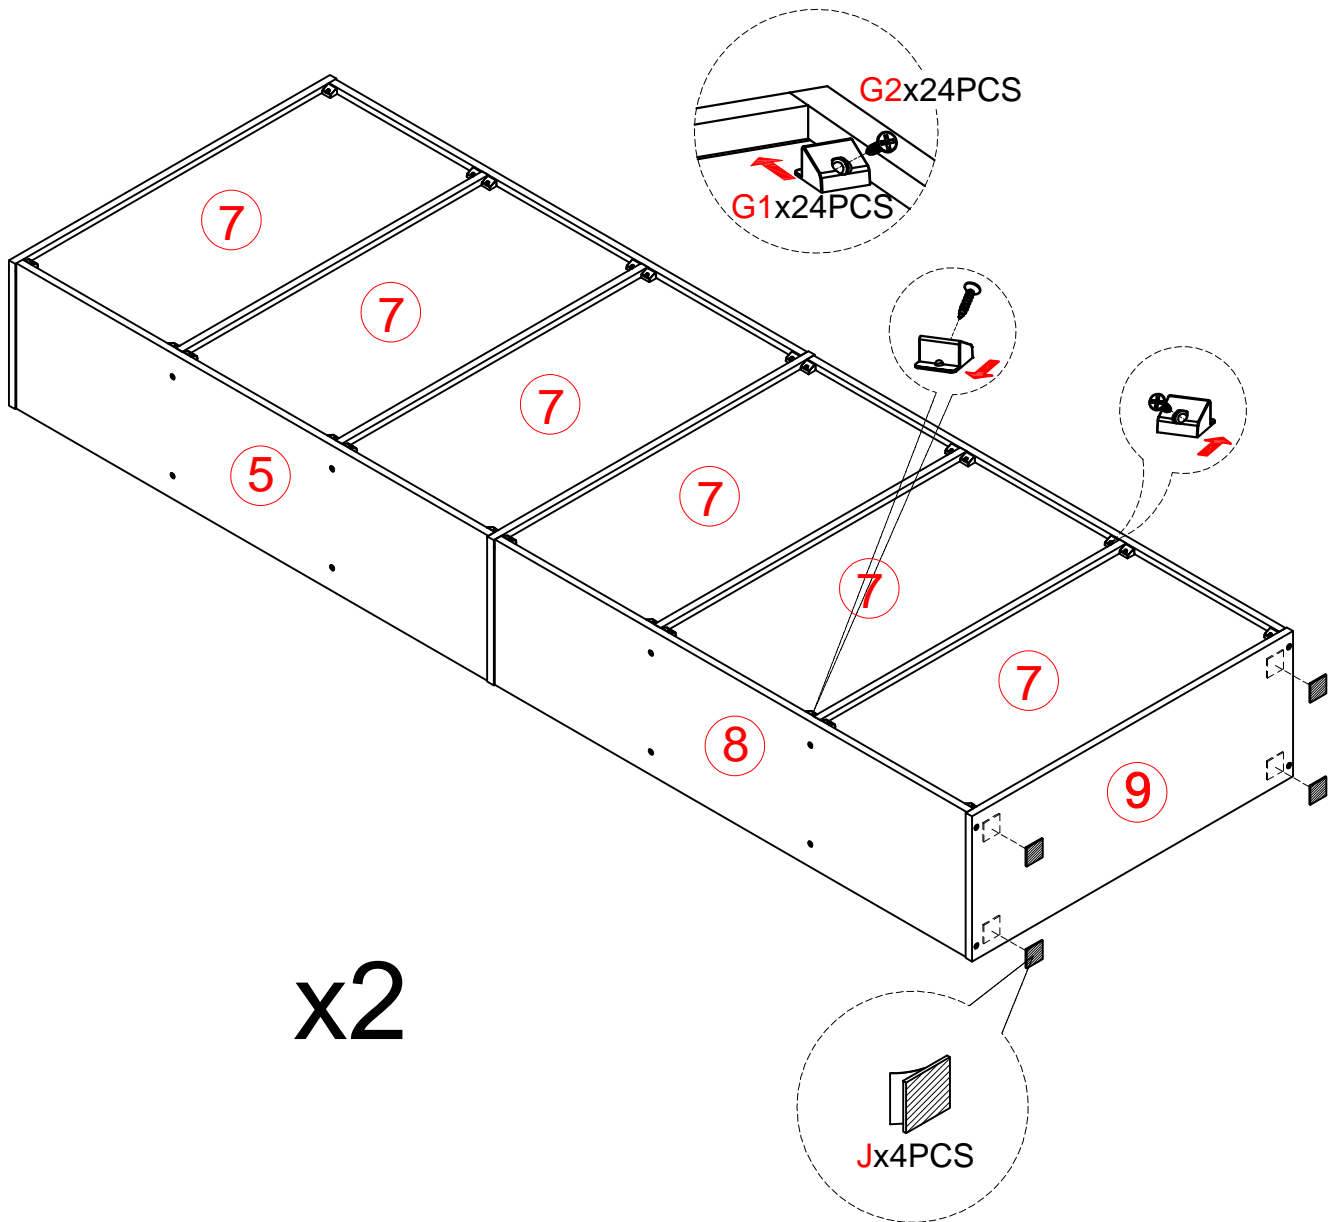

x2

G1x48PCS
G2x48PCS
Jx8PCS


14

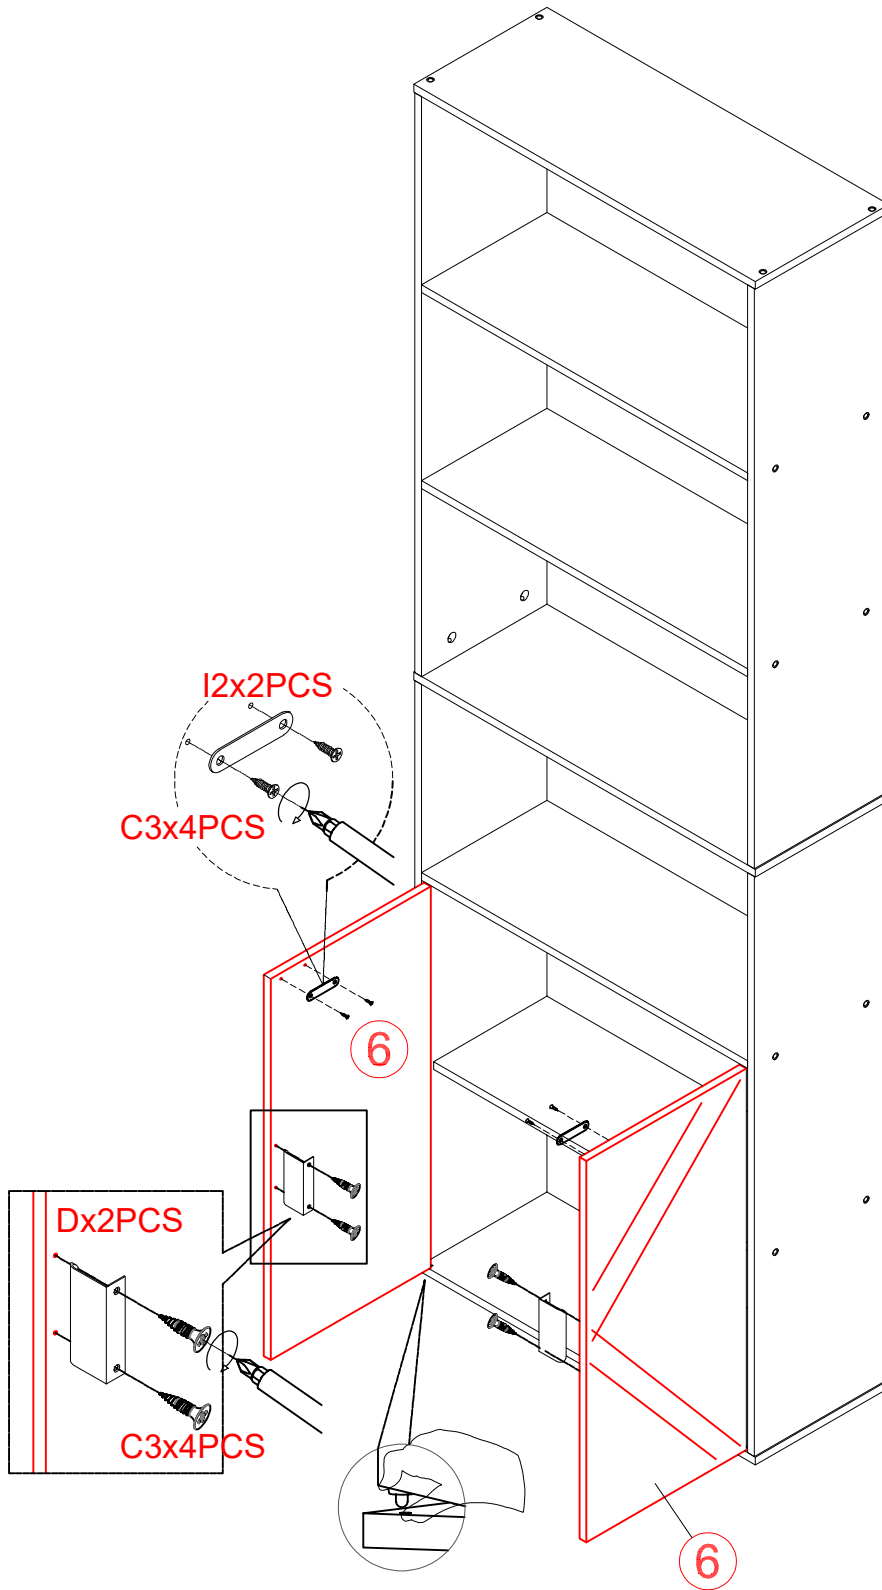

x2


- C3x16PCS
- Dx4PCS
- I2x4PCS
- ⑥x4PCS

15

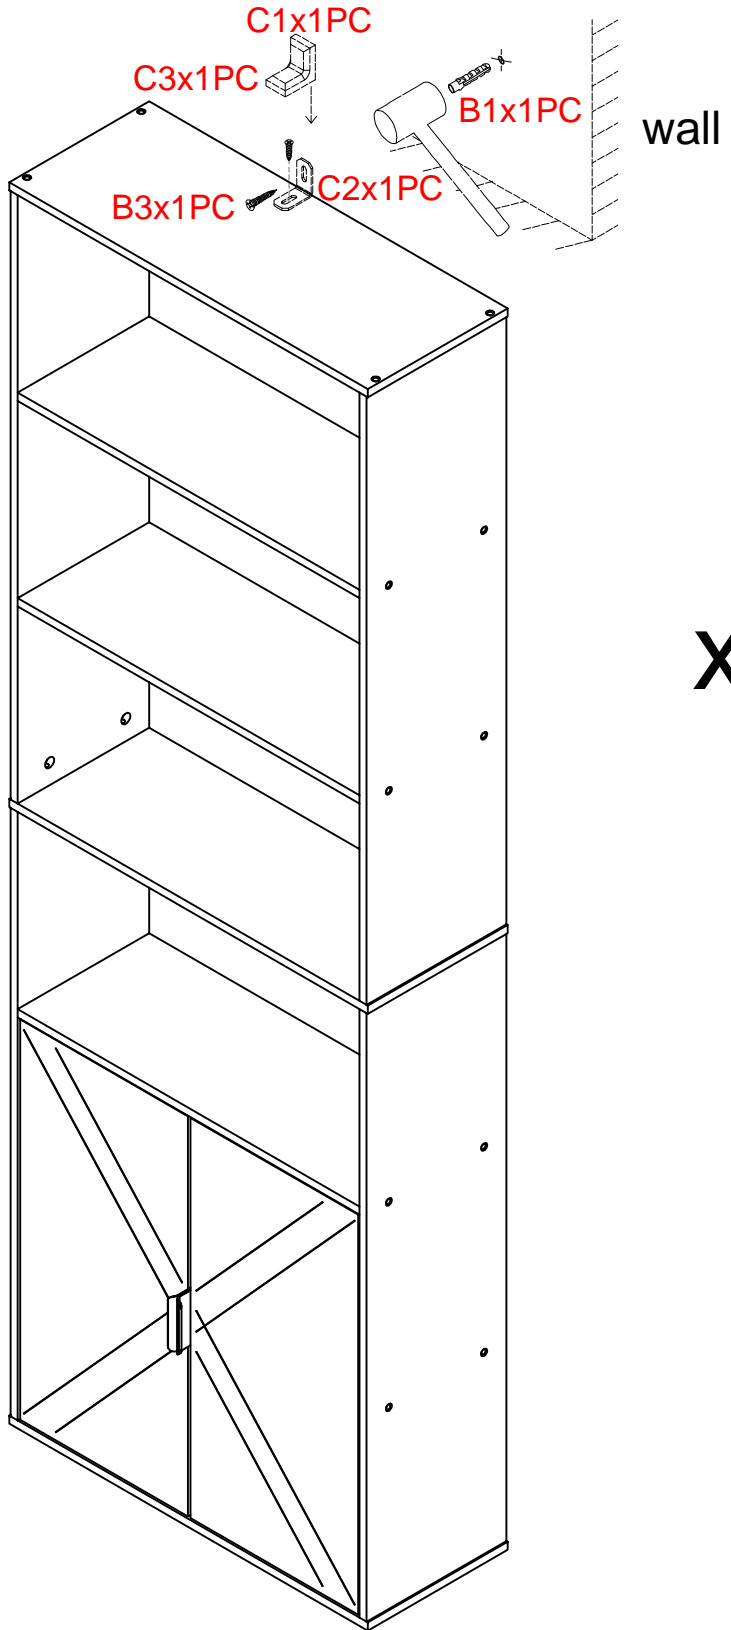

- B1x2PC
- B3x2PC
- C1x2PC
- C2x2PC
- C3x2PC

16

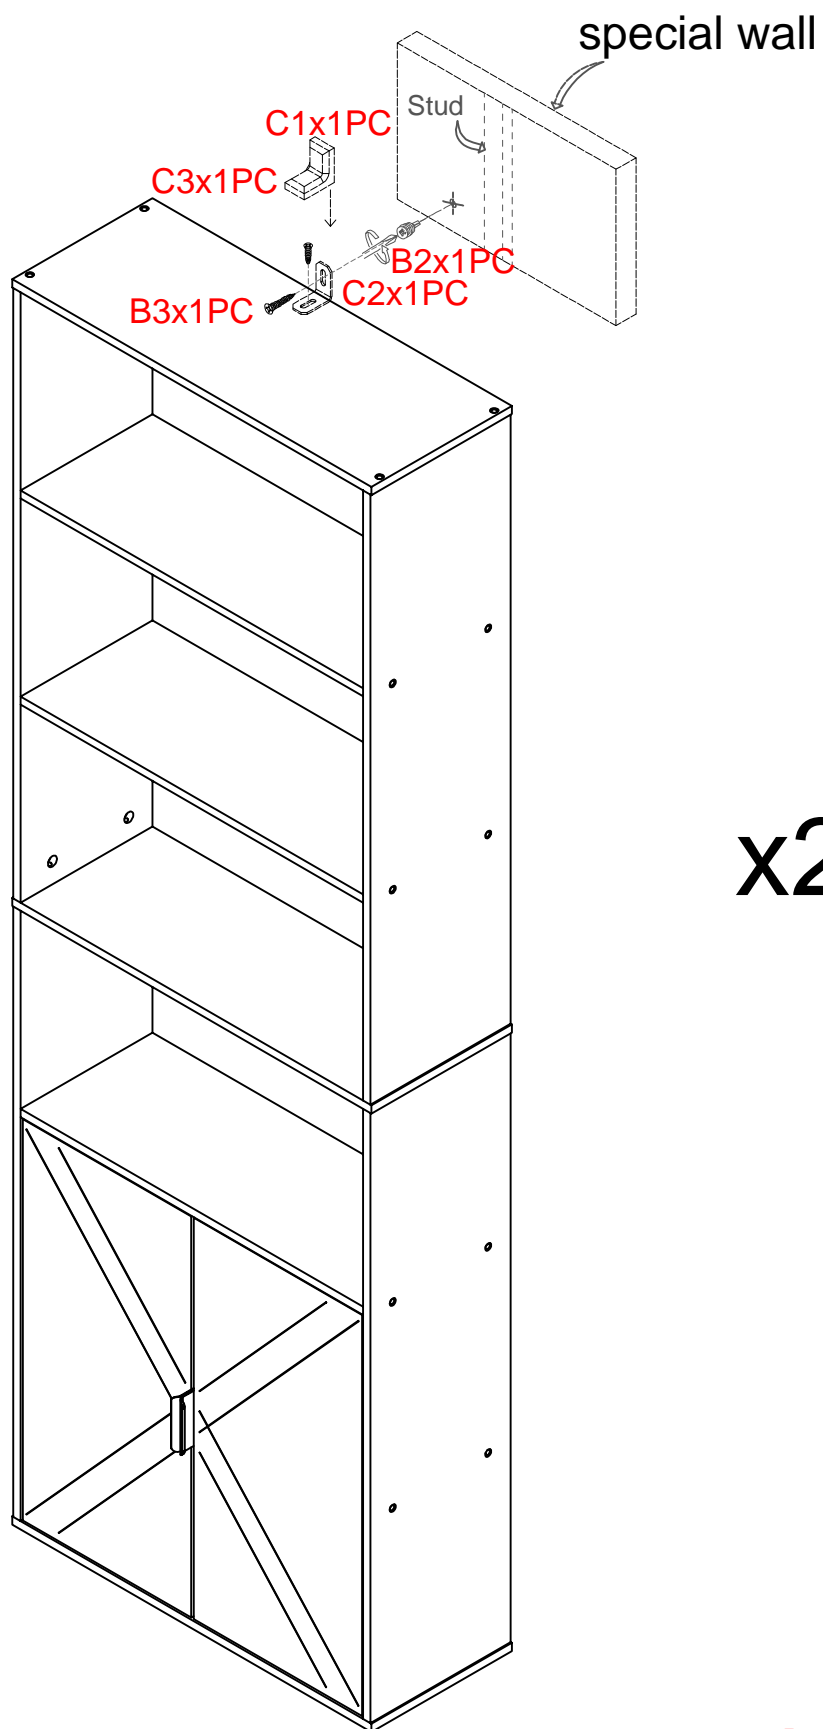

x2

B2x2PC
B3x2PC
C1x2PC
C2x2PC
C3x2PC