

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

-   • Not for commercial use. For residential use only.
-   • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-   • Do not put hot items directly on furniture surface.
-   • Do not clean furniture with harsh cleansers or polish.
-   • Do not place furniture under direct sunlight.
-   • Do not place furniture near heating or cooling vents.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • Do not place furniture outside . For indoor use only.
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Children should not climb or jump on the furniture.
-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Before Installation



Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



Cam Lock Assembly Instructions

Diagram A

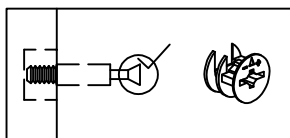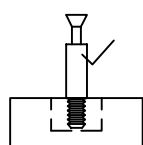



Insert Cam Bolt into hole as shown in diagram A.

Diagram B

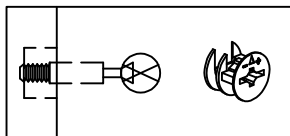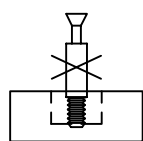


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.

Diagram C

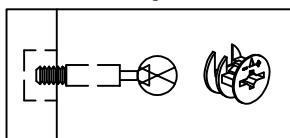
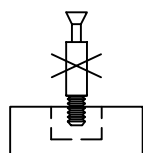


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

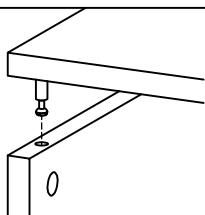


Connect the panels together.

ARROW SIGN

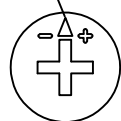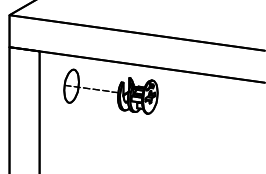


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

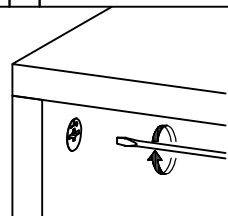

To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

ASSEMBLY INSTRUCTION

SKU CODE: N778P473783











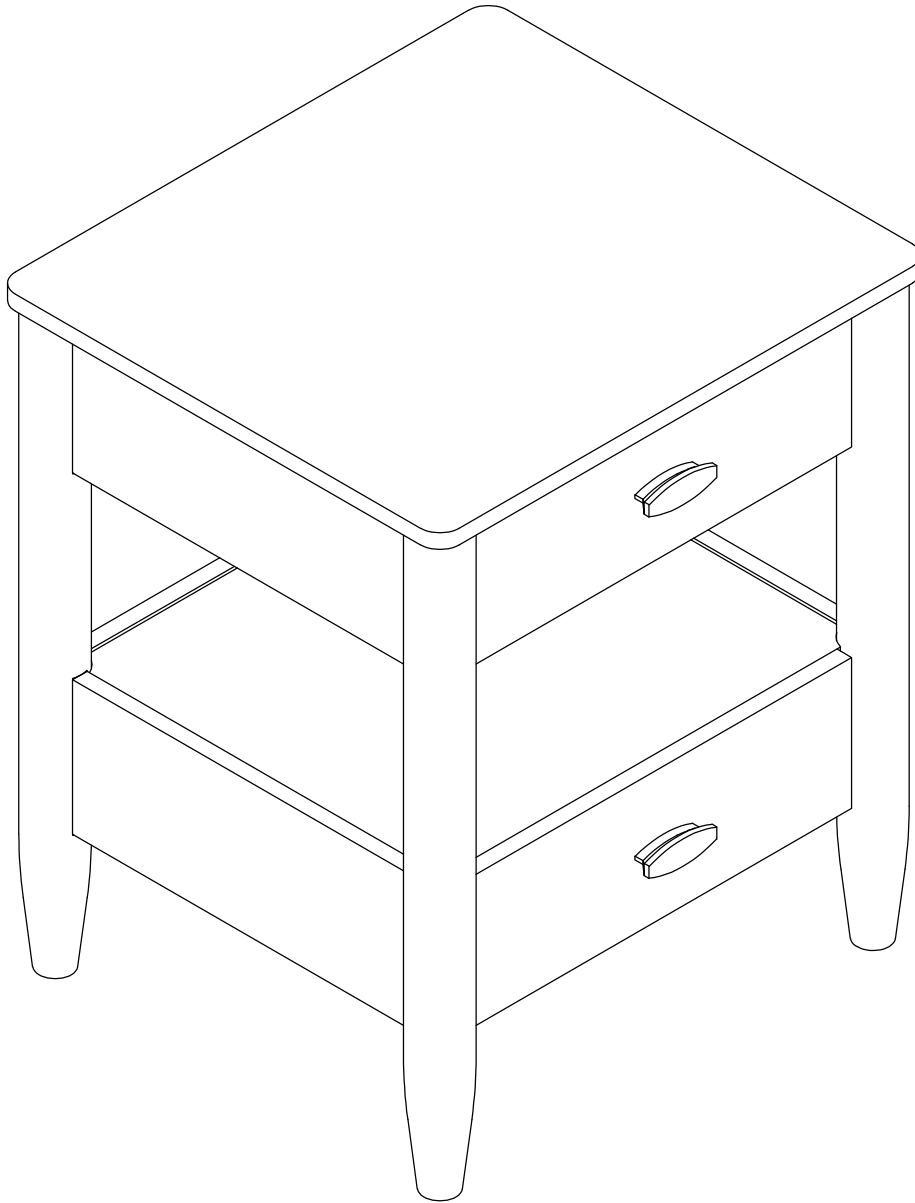


Place the Nightstand on a **LEVEL SURFACE**.
Inspect it and make sure all parts are adequately connected.




CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.
DO NOT tighten any screw fully and then towards the next one.
WARNING!! IF NIGHTSTAND IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.
The nightstand is ready to be used.


Caution 2: This nightstand can only be used on a flat, level surface.

Part List

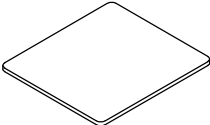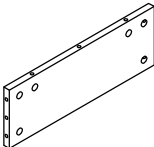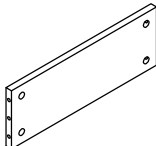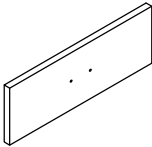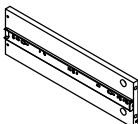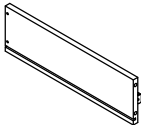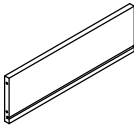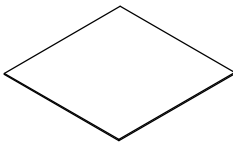Label	Picture	Description	QTY
A		Left side cabinet	1pc
B		Right side cabinet	1pc
C		Top cabinet	1pc
D		Shelf	1pc
E		Back panel 1	1pc
F		Back panel 2	1pc
G		Front drawer	2pcs
H		Left side drawer	2pcs
I		Right side drawer	2pcs
J		Back drawer	2pcs
K		Bottom drawer	2pcs

Hardware


Label	Picture	Description	QTY
1		Wood dowel Ø8*20mm	9pcs
2		Three in one bolts	26pcs
3		Three in one locks	26pcs
4		M4 x 50mm Wood screws	8pcs
5		Cross dowel	8pcs
6		Handle	2pcs



Assembly Tools Required (Not Included)

Assembly Preparation


Before Beginning Assembly:

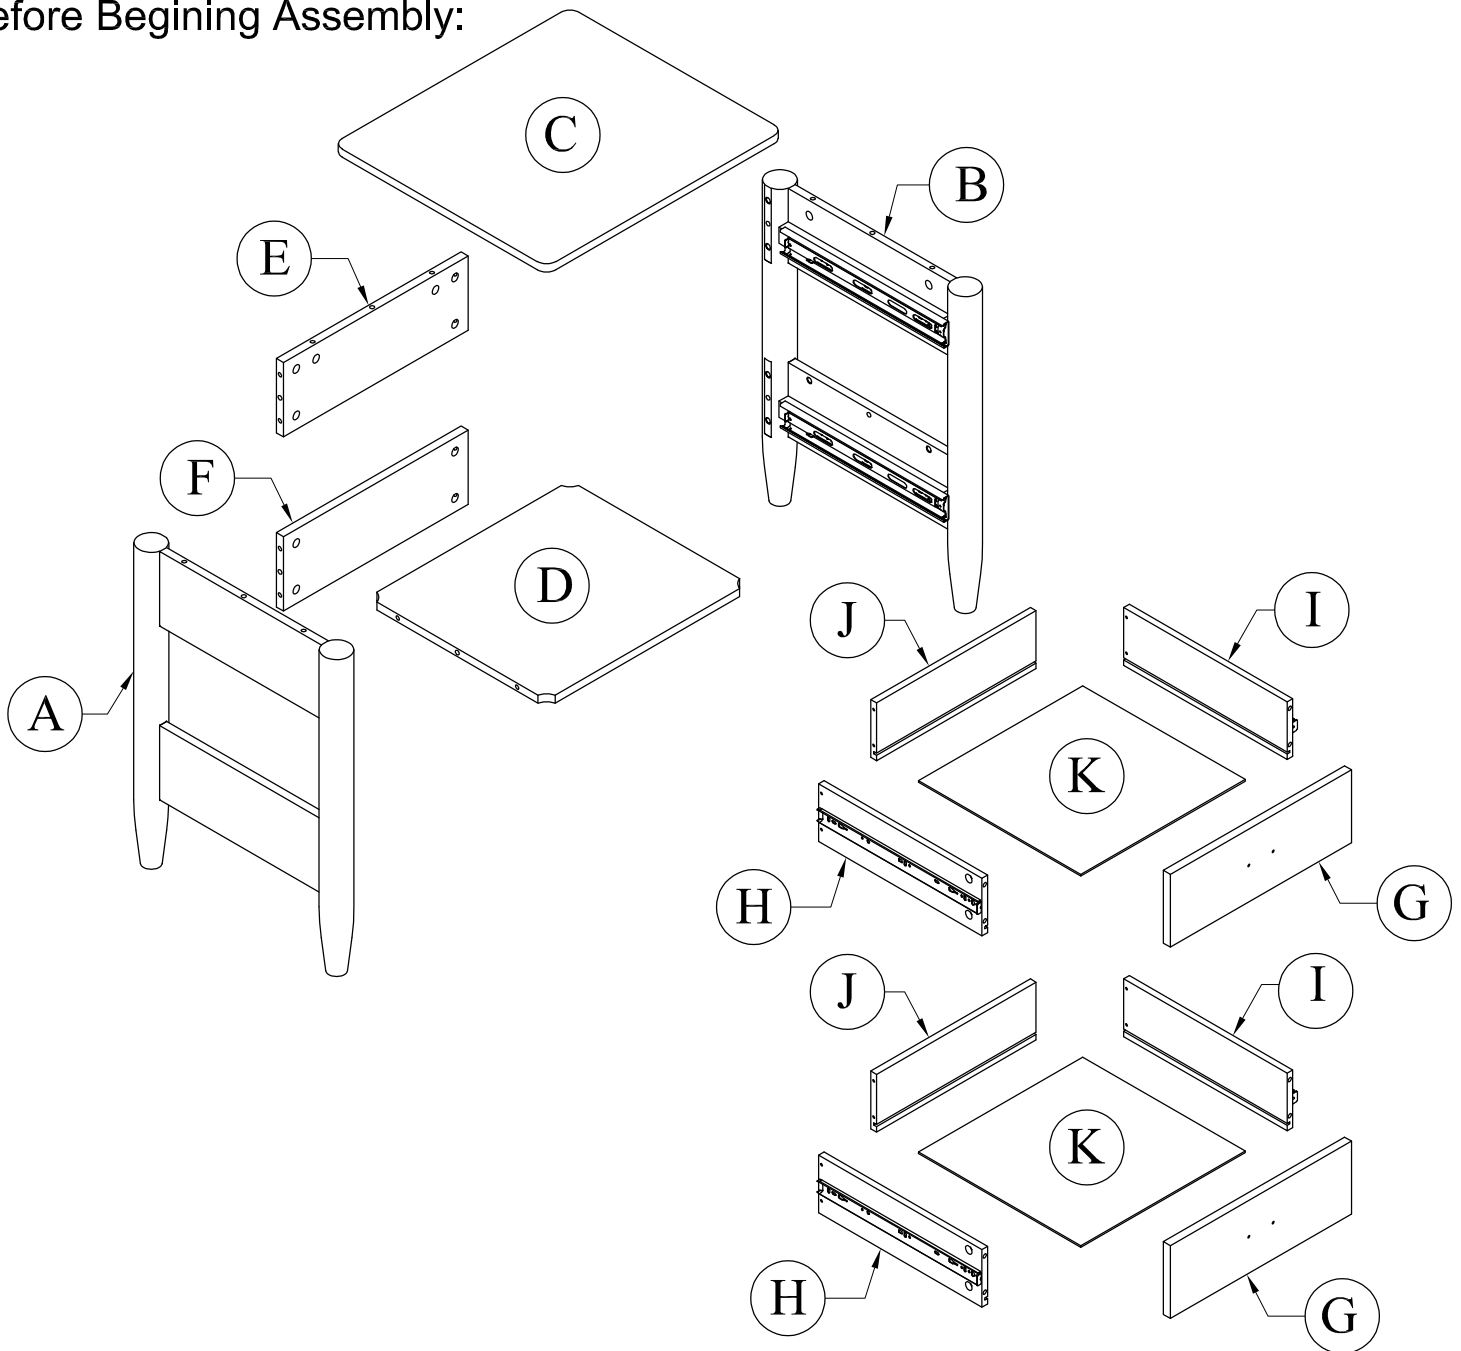

- Read instruction, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.


Assembly Steps

Overview

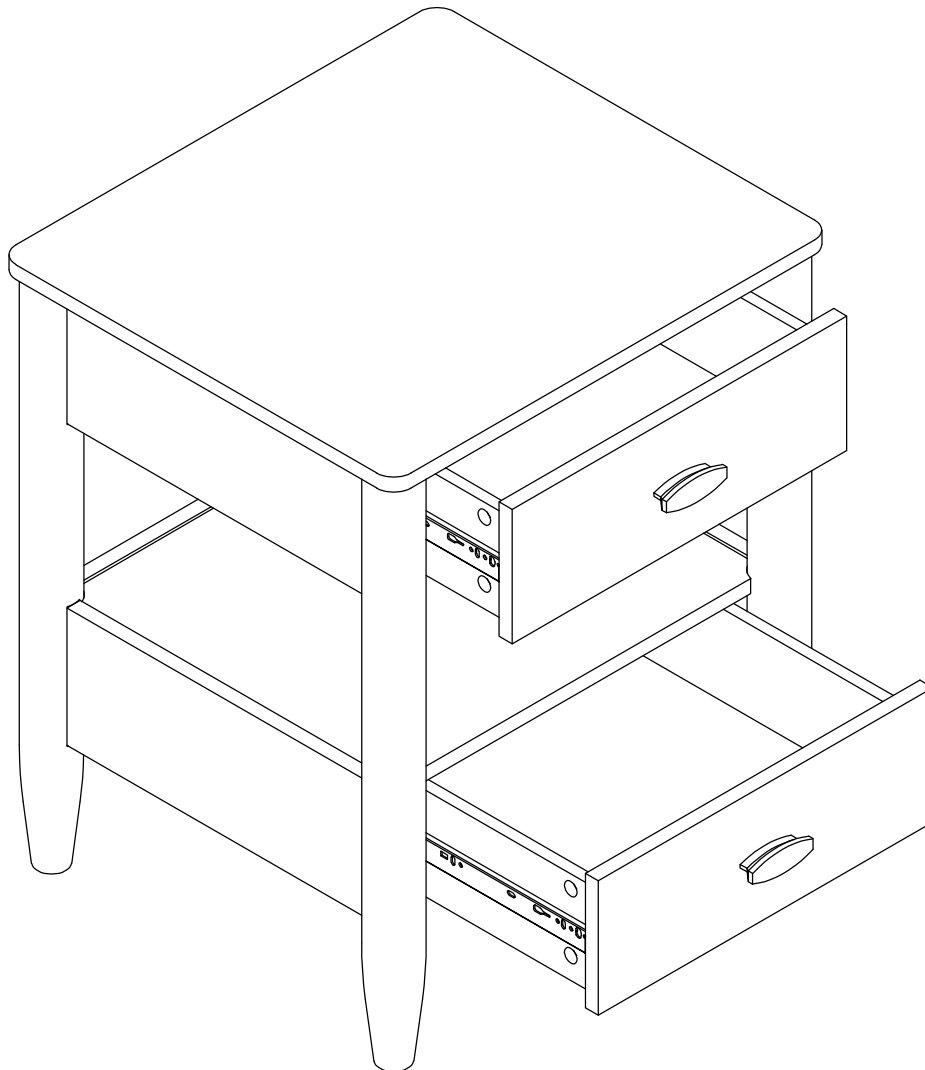


This Nightstand has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Nightstand parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



Step 1

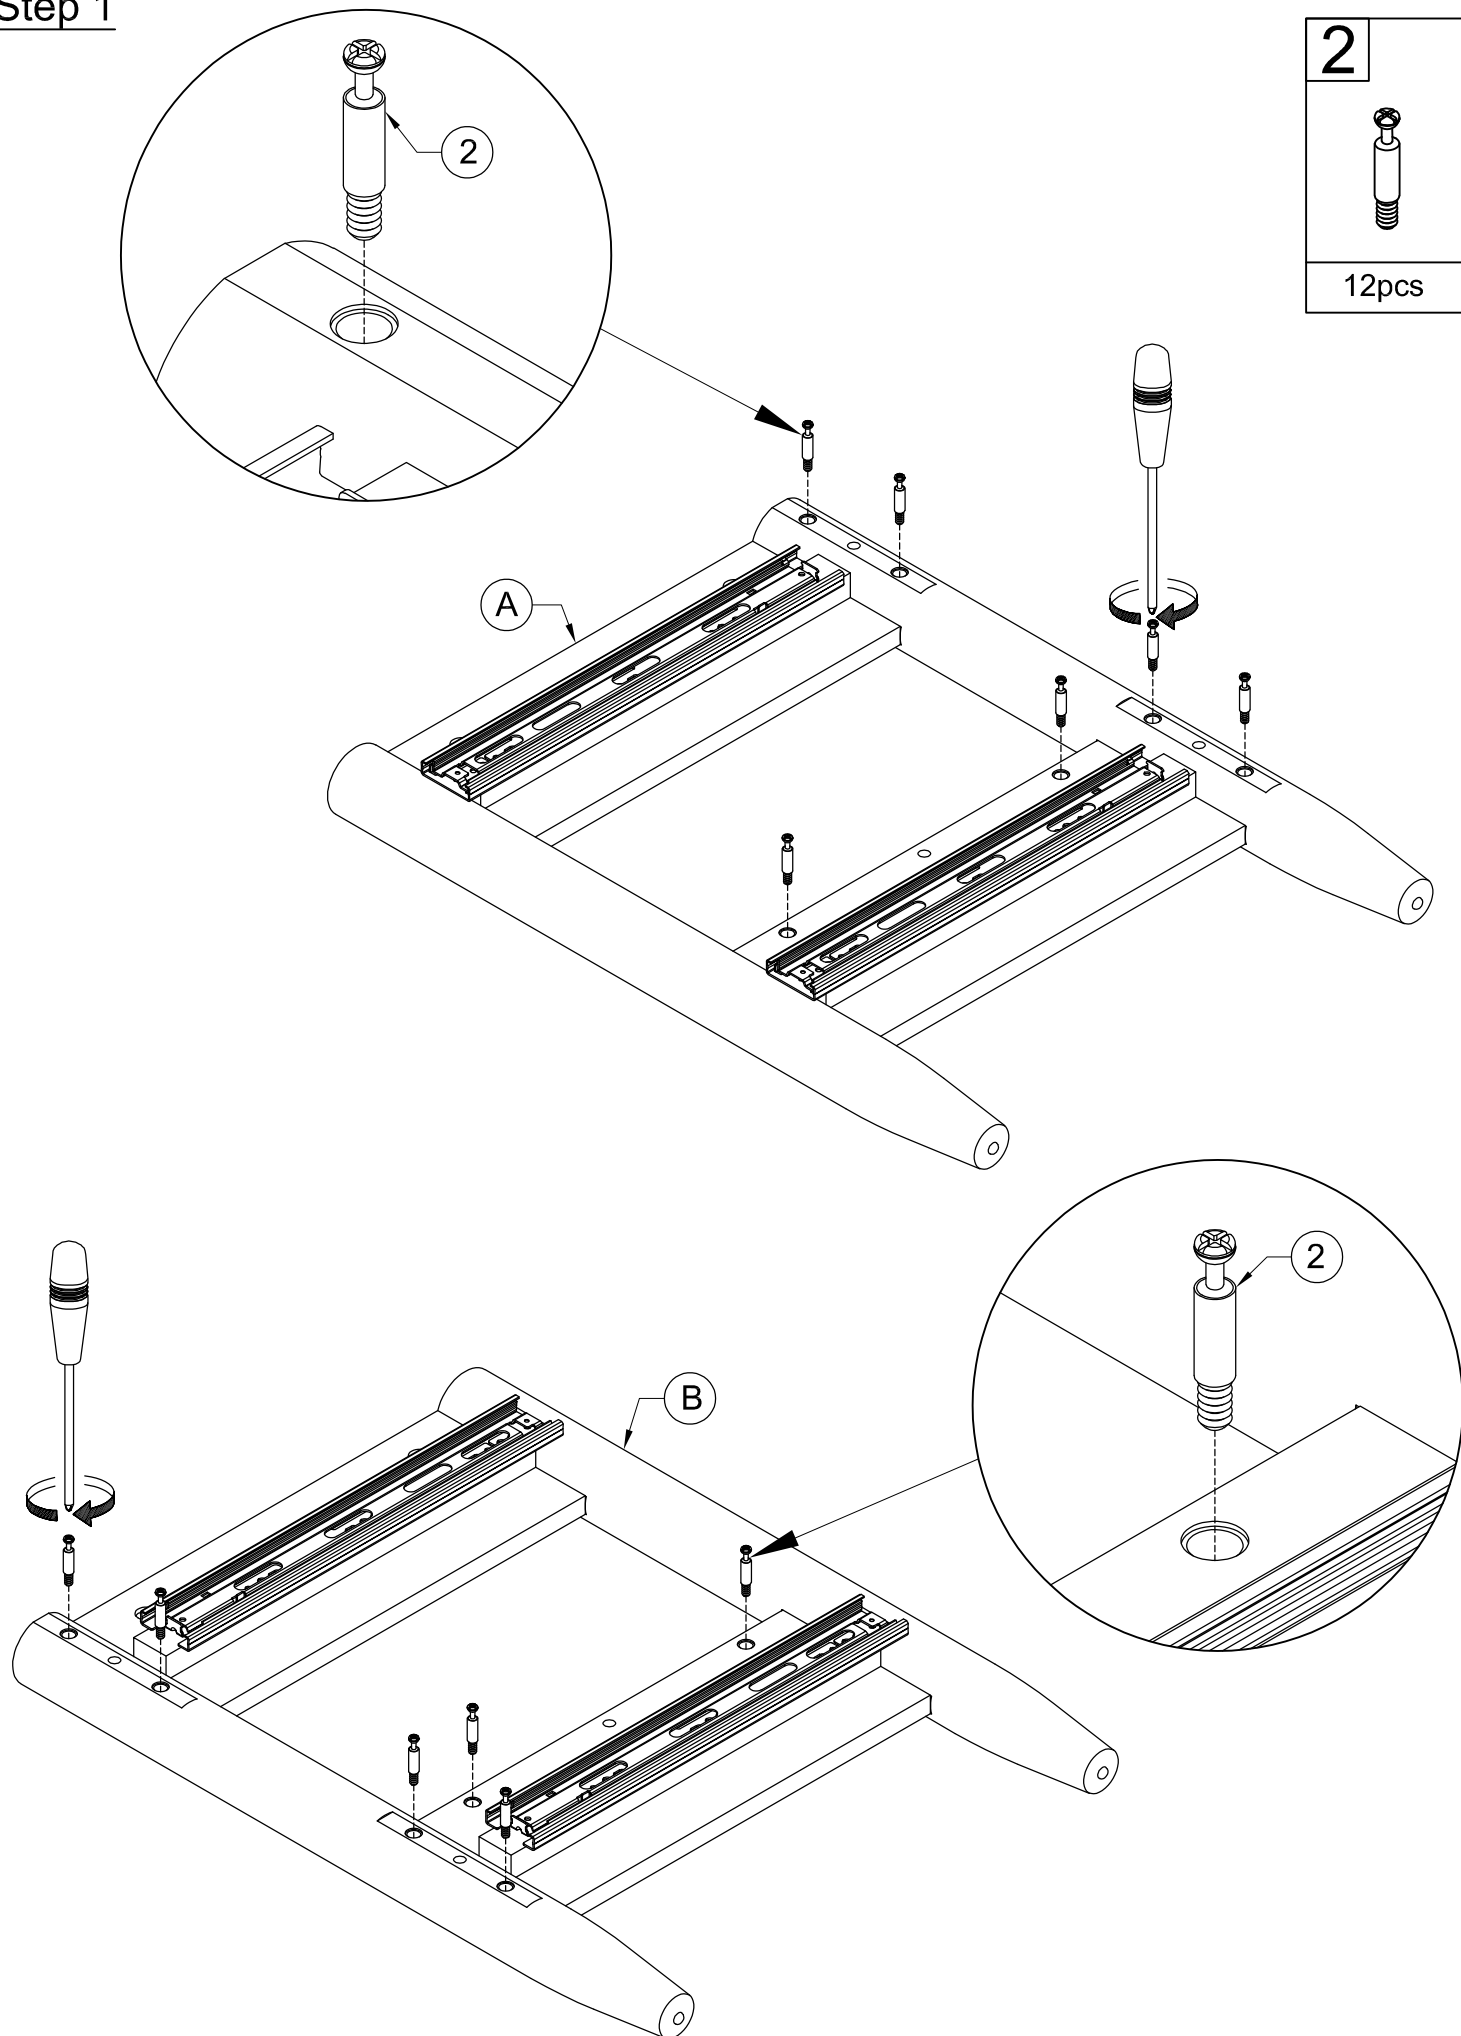

-Attach Three in one bolts (2) to Left side cabinet (A) , Right side cabinet (B)


Step 2

1	3
	
2pcs	4pcs

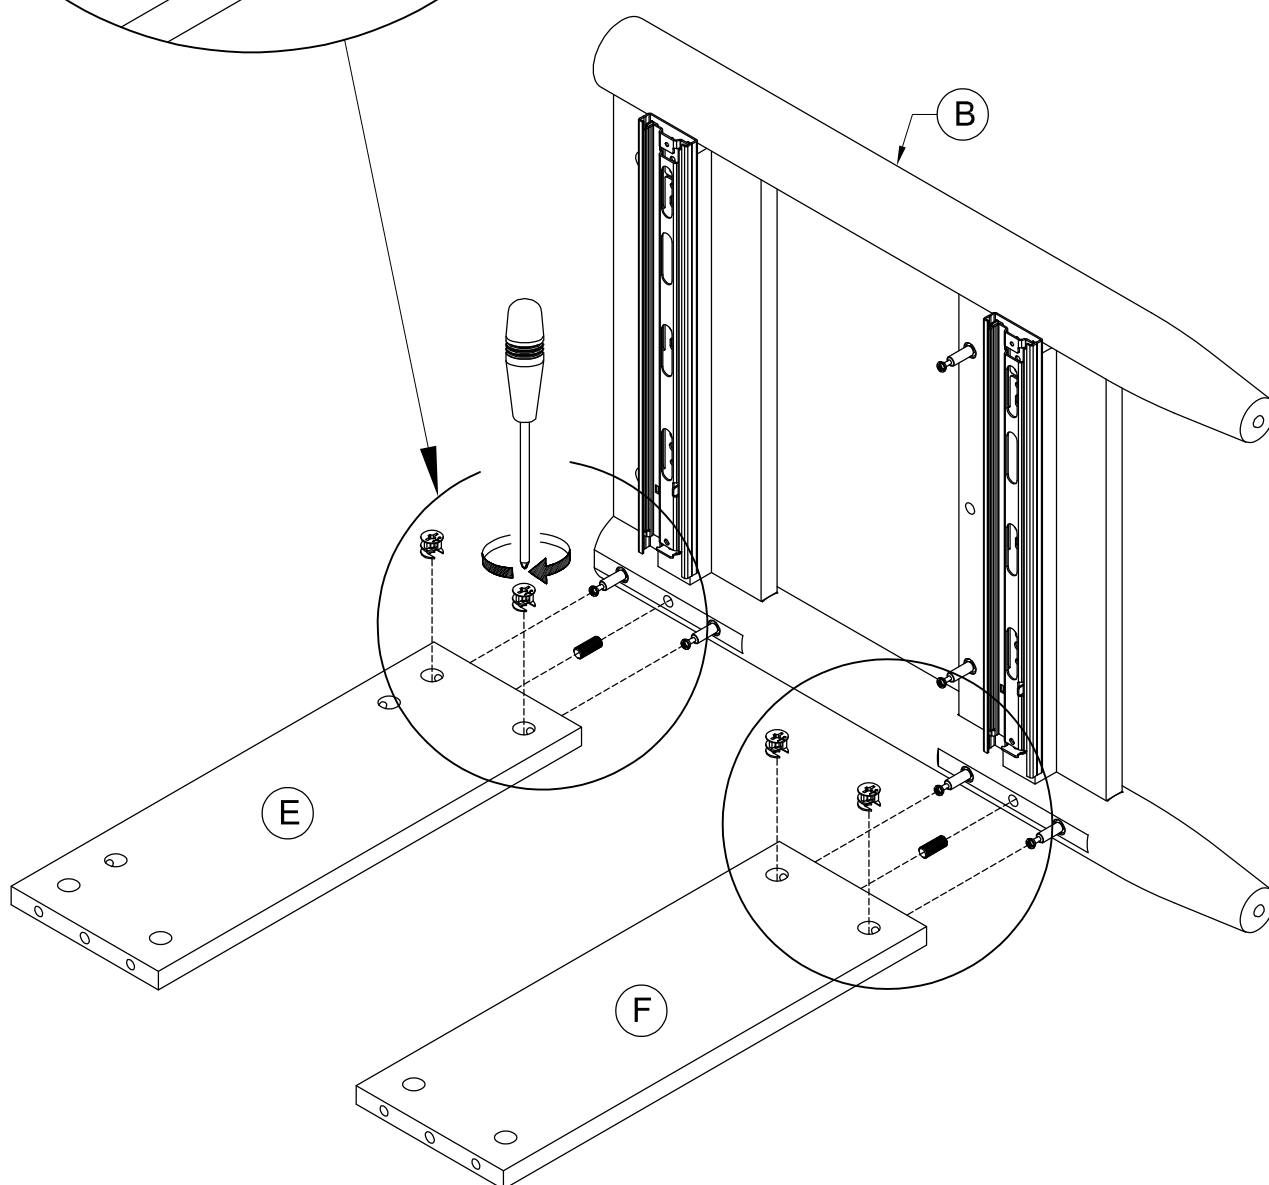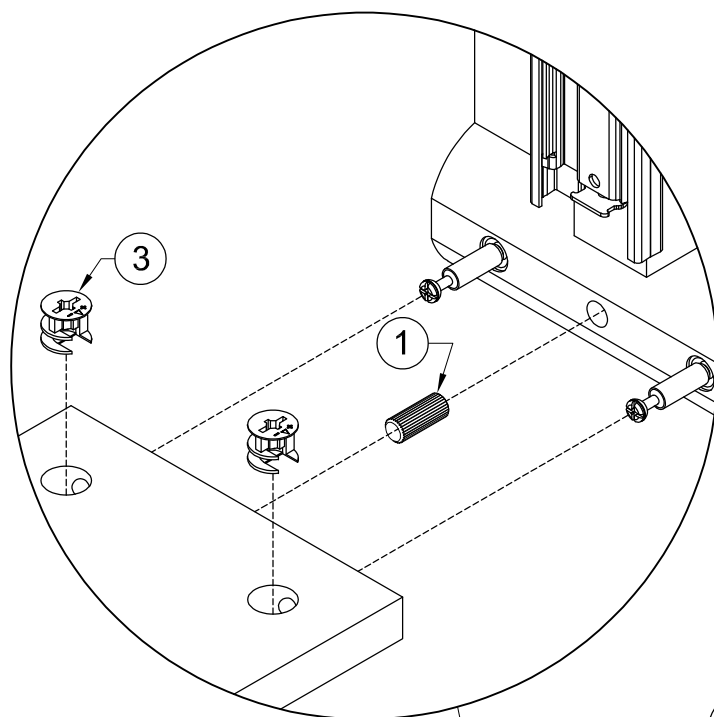


-Attach Back panel 1 (E) , Back panel 2 (F) to Right side cabinet (B) using Wood dowel Ø8*20mm (1) & Three in one locks (3)

Step 3



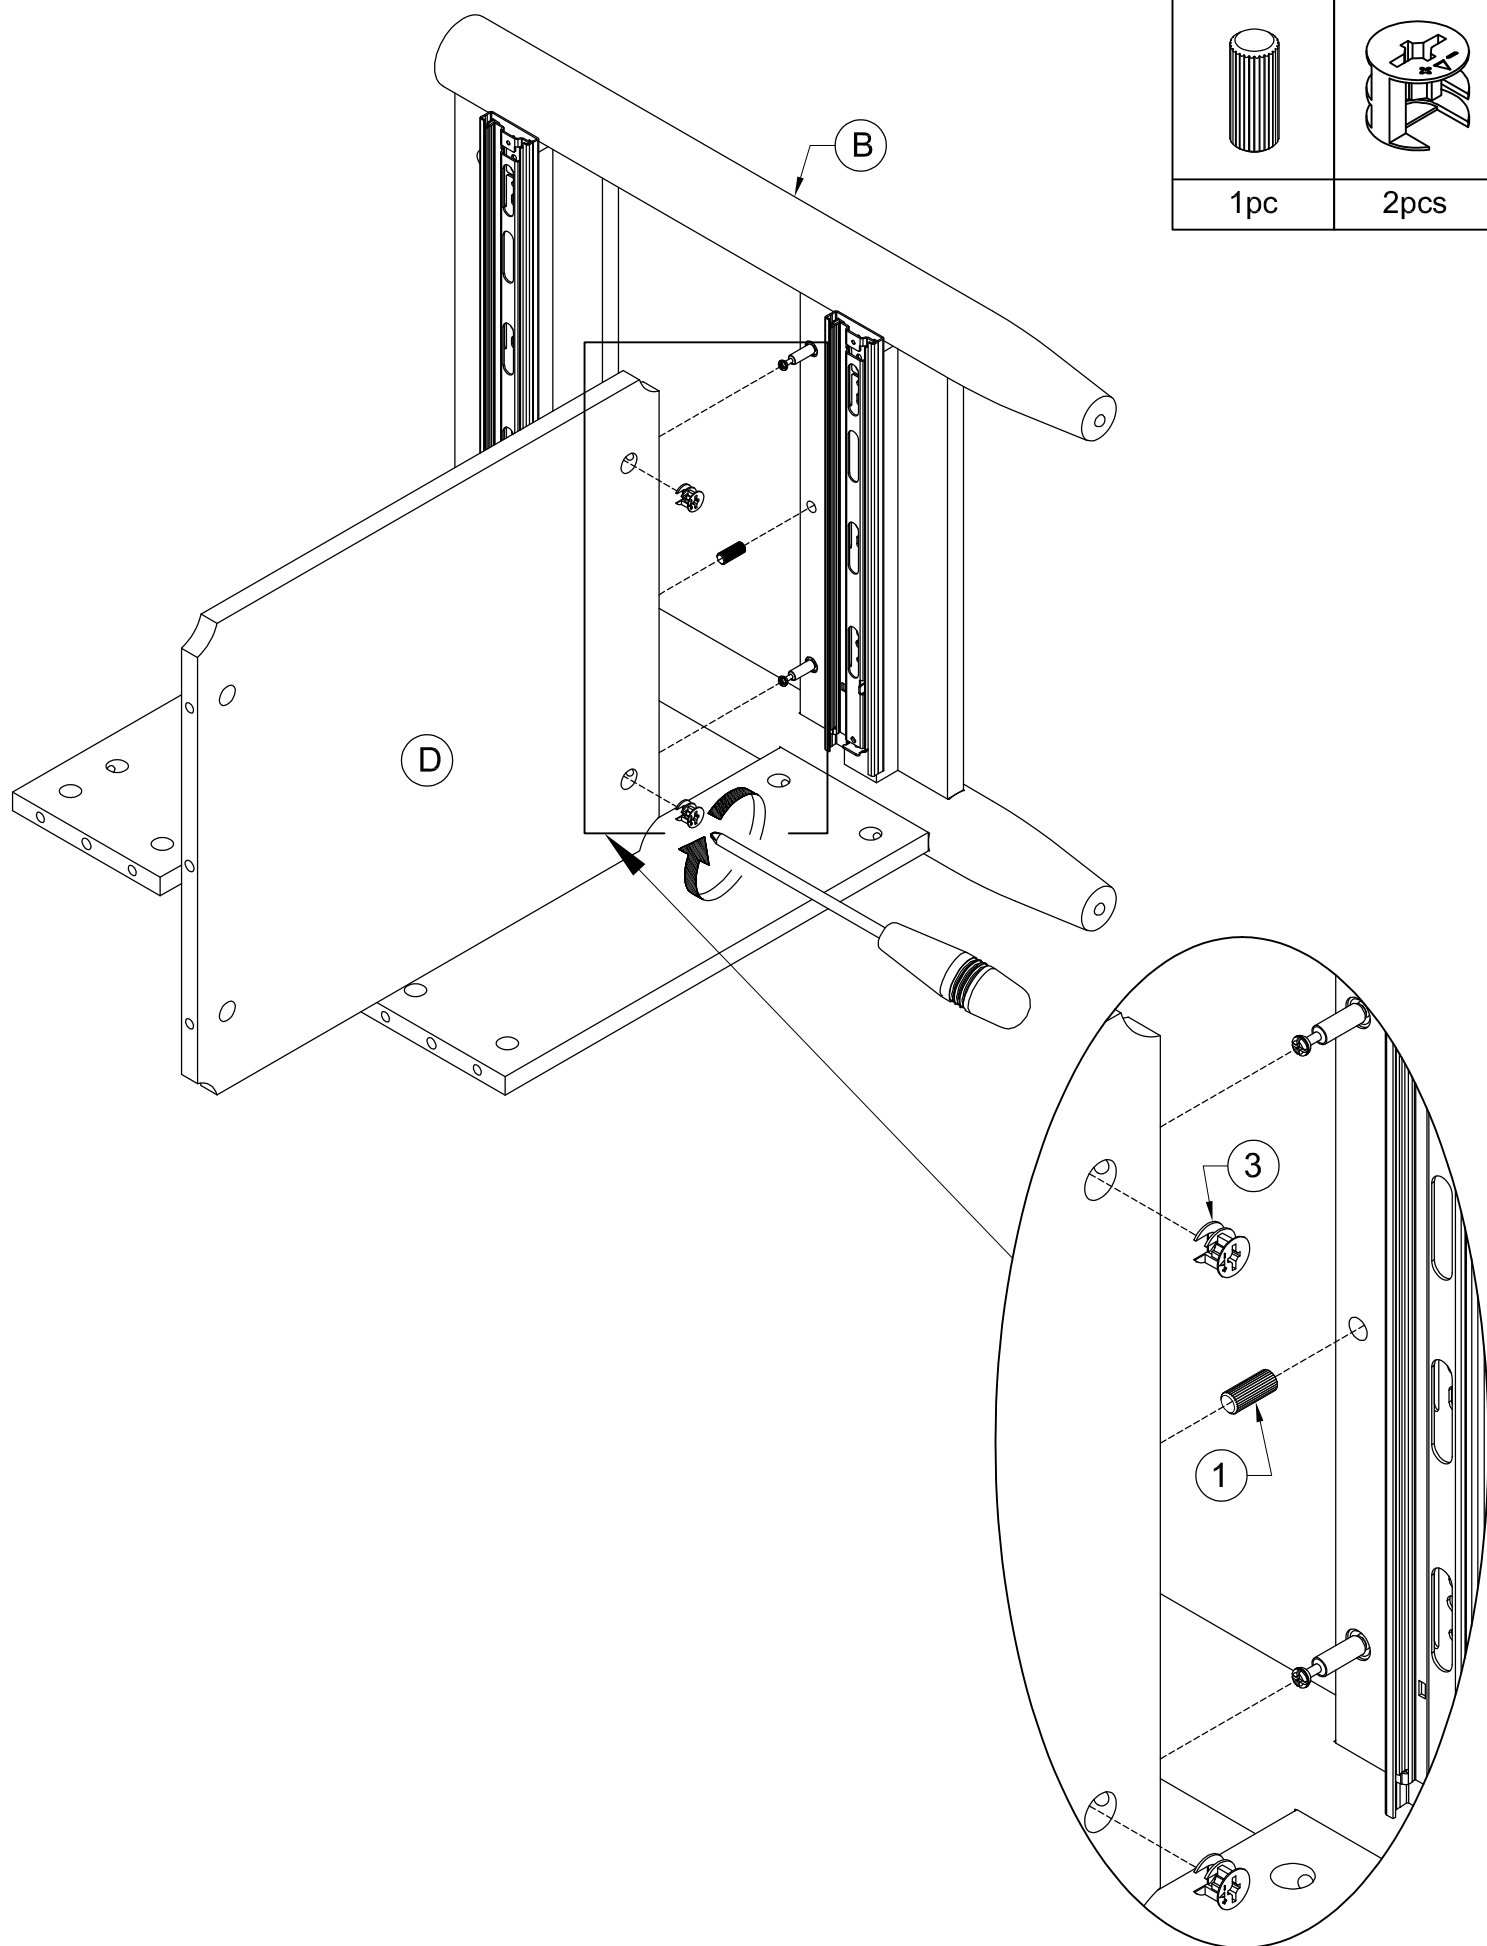


-Attach Shelf (D) to Right side cabinet (B) using
Wood dowel Ø8*20mm (1) & Three in one locks (3)

Step 4

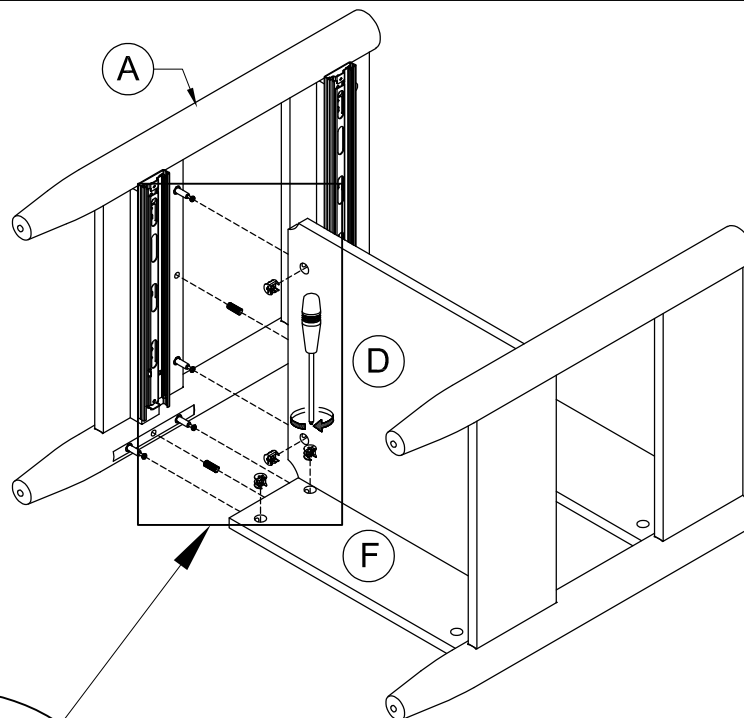


1	3
3pcs	6pcs

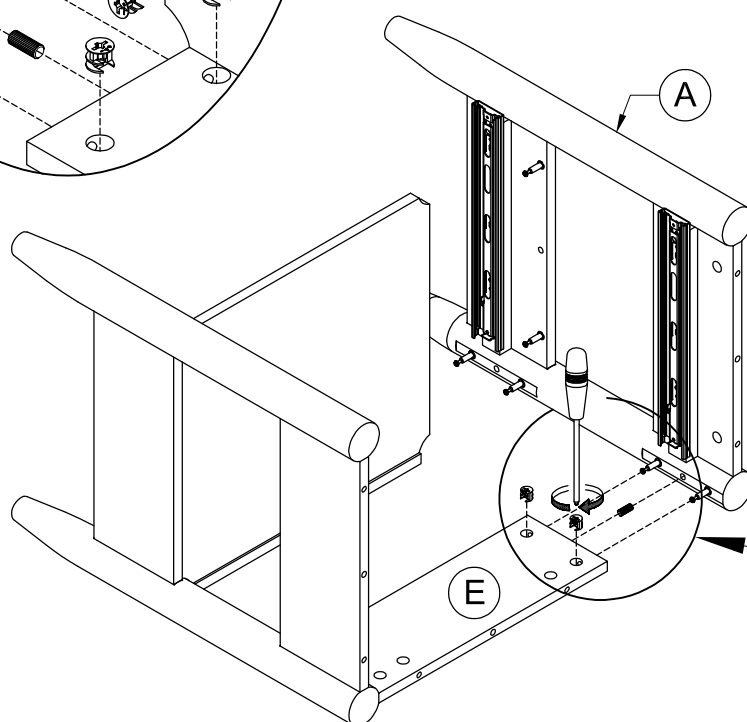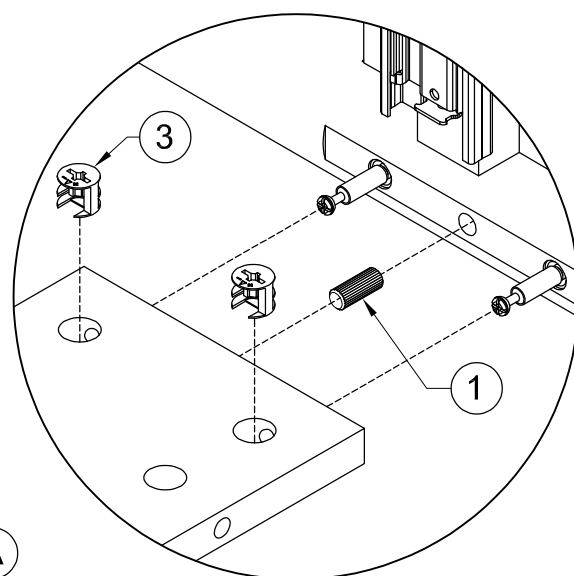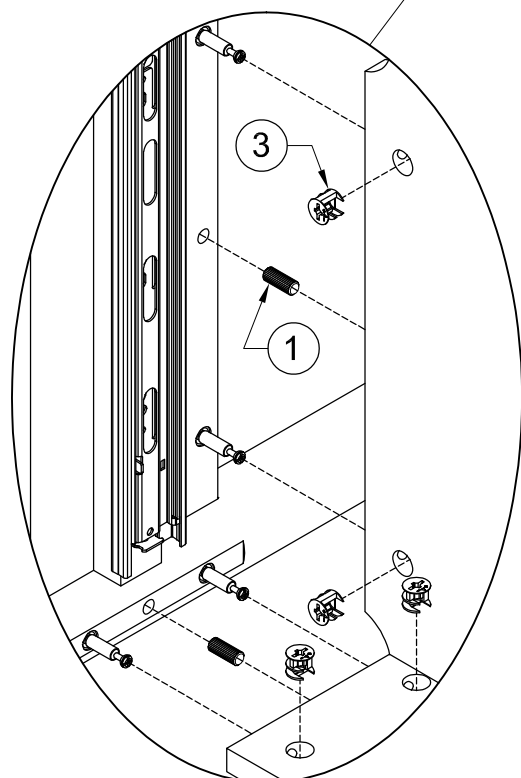

-Attach Left side cabinet (A) to Shelf (D) & Back panel 2 (F) using Wood dowel Ø8*20mm (1) & Three in one locks (3)


-Attach Left side cabinet (A) to Back panel 1 (E) using Wood dowel Ø8*20mm (1) & Three in one locks (3)

Step 5

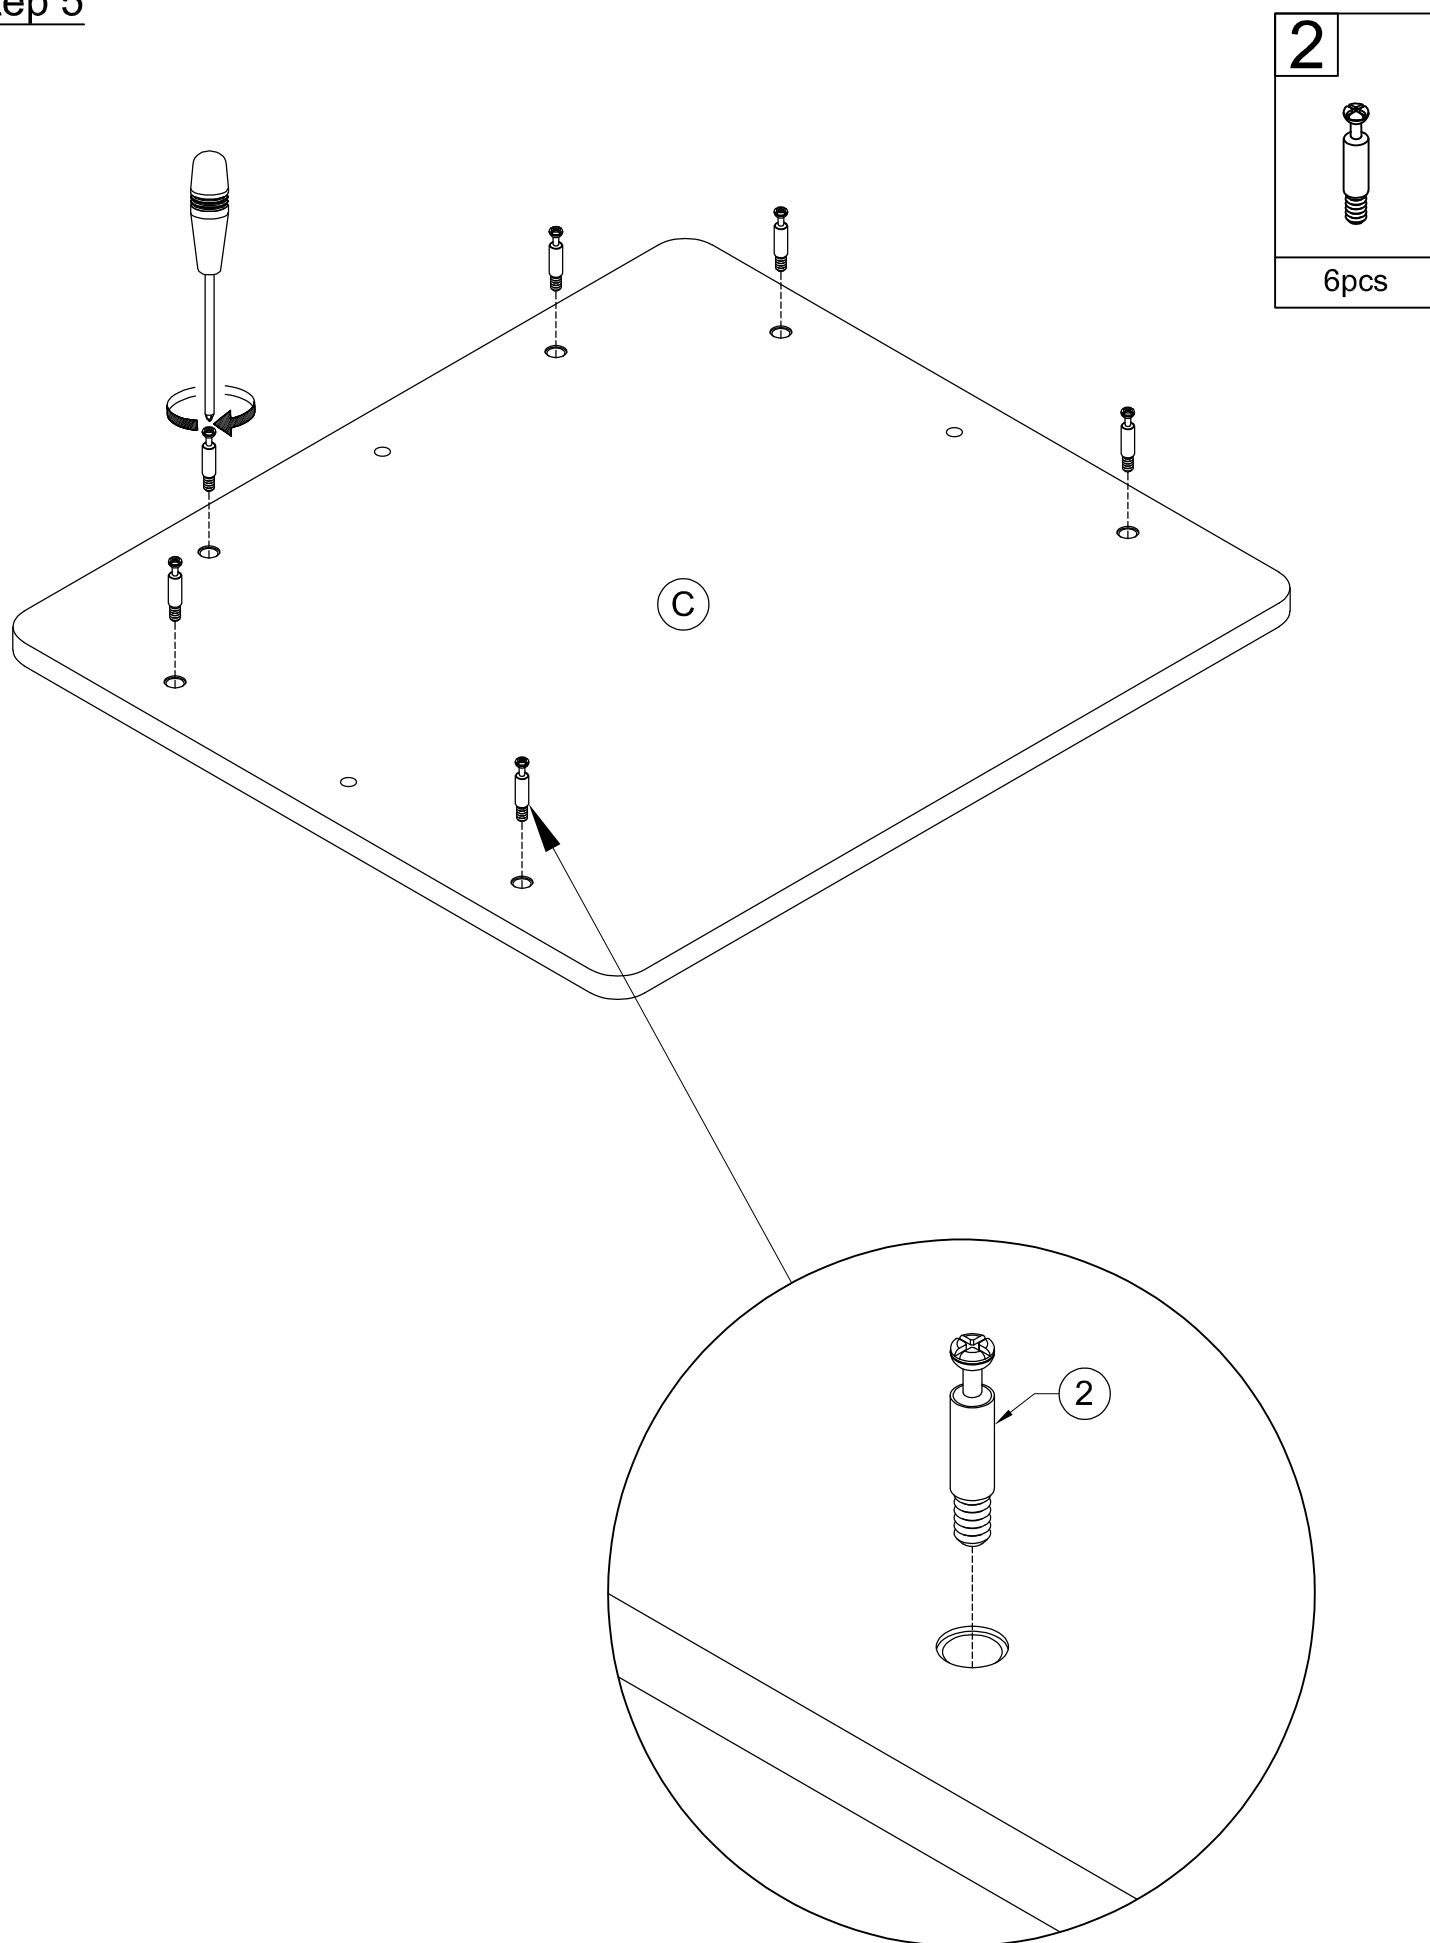



-Attach Three in one bolts (2) to Top cabinet (C)

Step 6

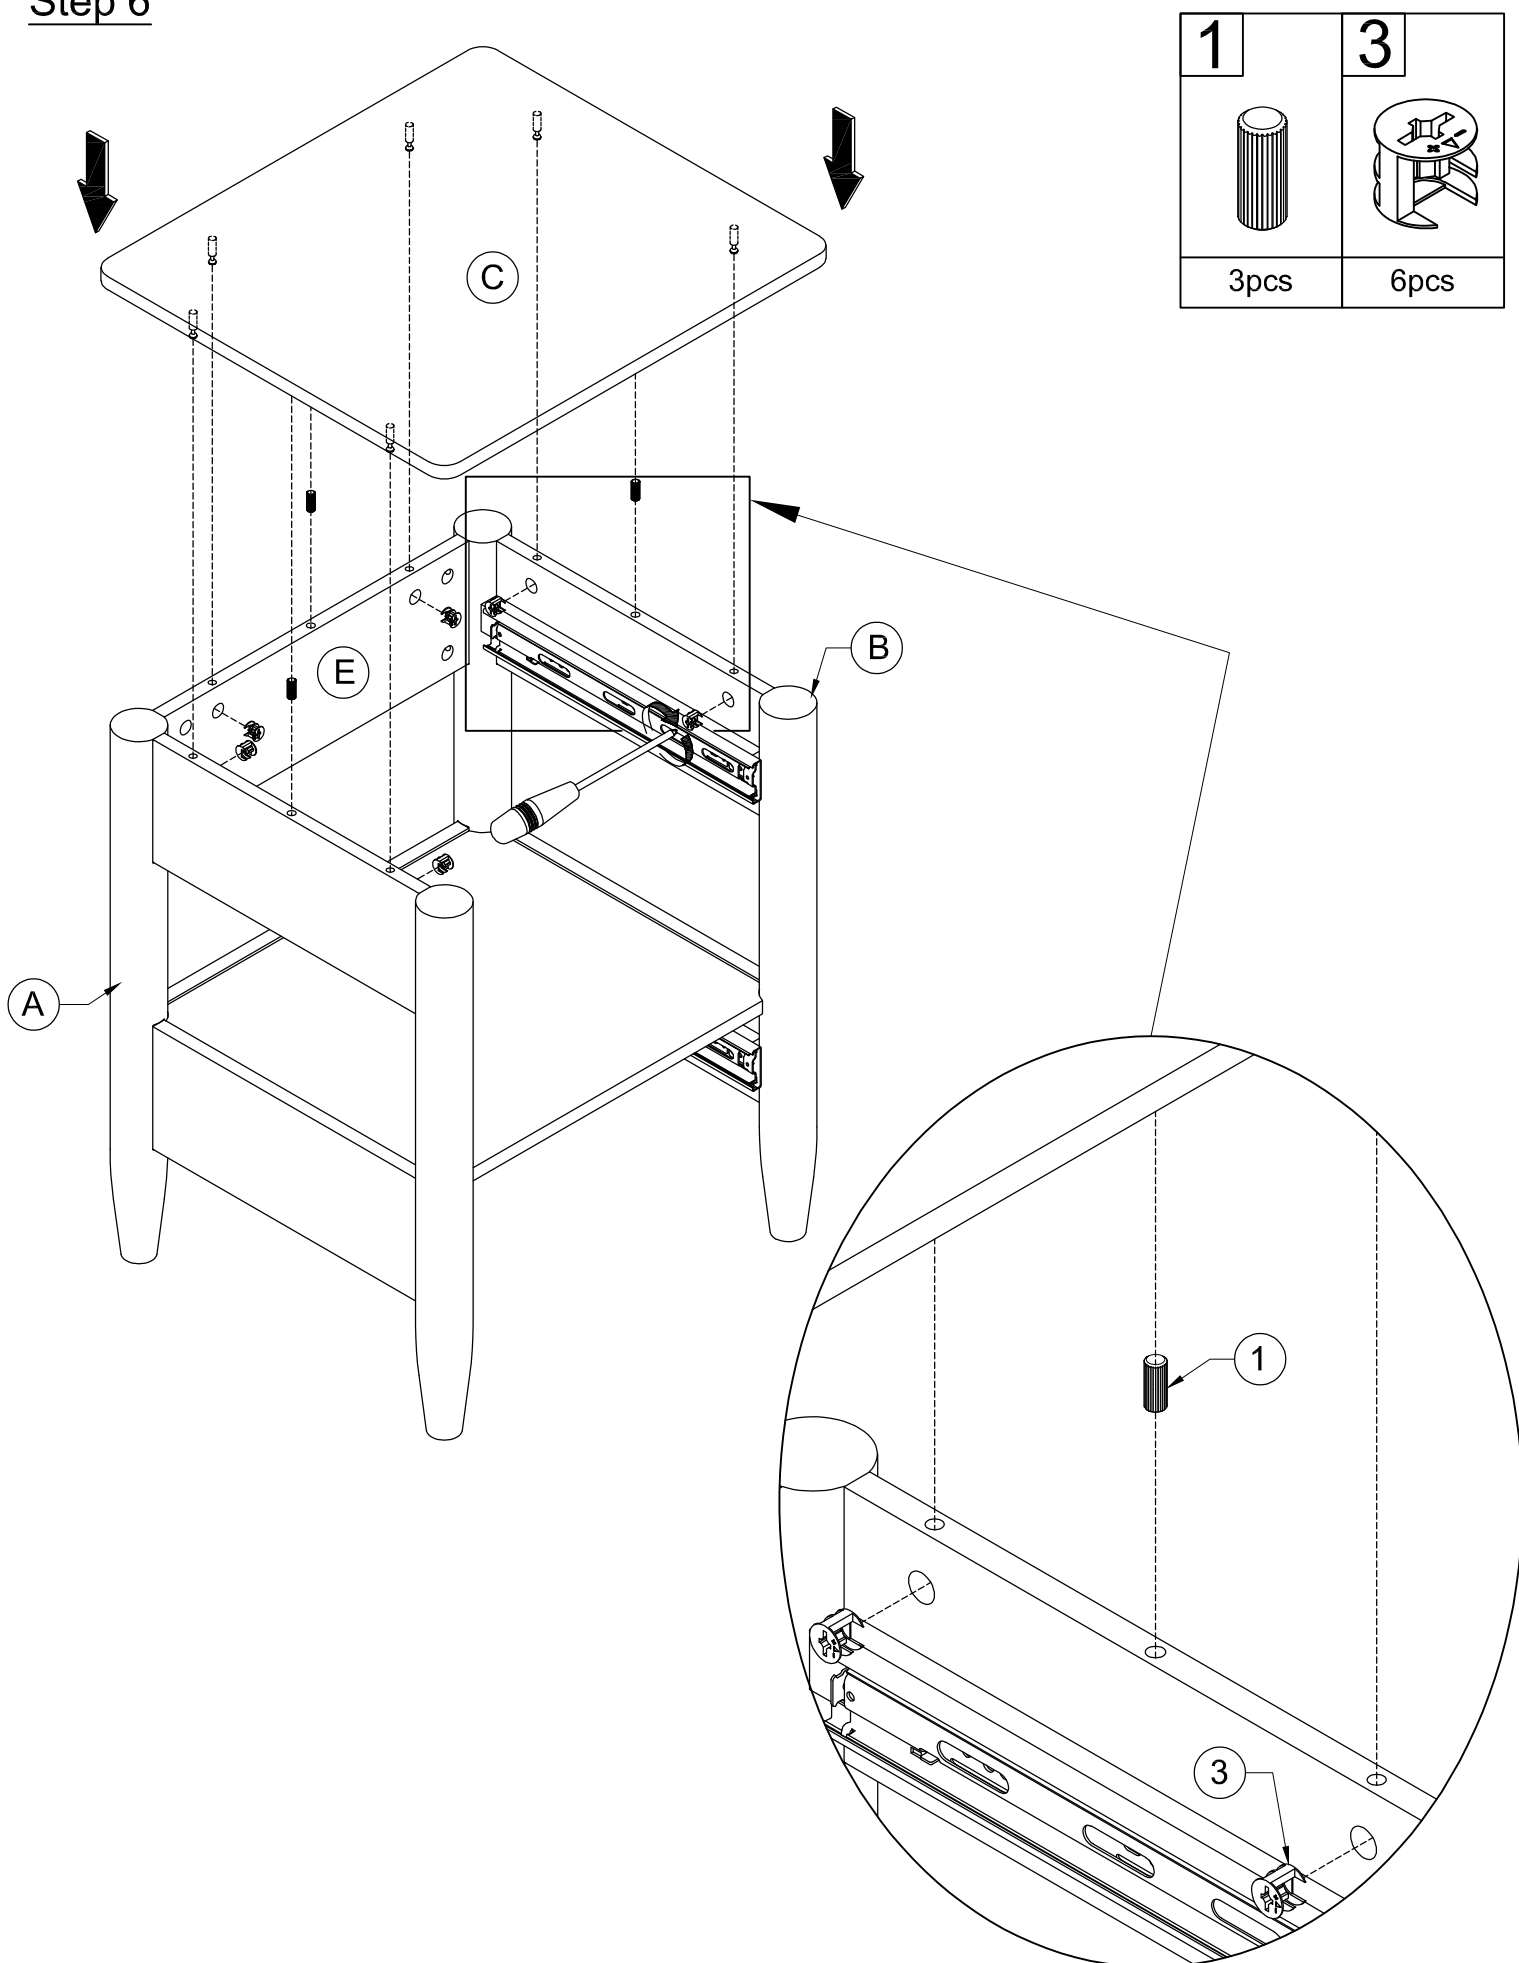

-Attach Top cabinet (C) to Left side cabinet (A), Right side cabinet (B), Back panel 1 (E) using Wood dowel Ø8*20mm (1) & Three in one locks (3)

Step 7

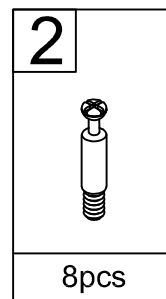
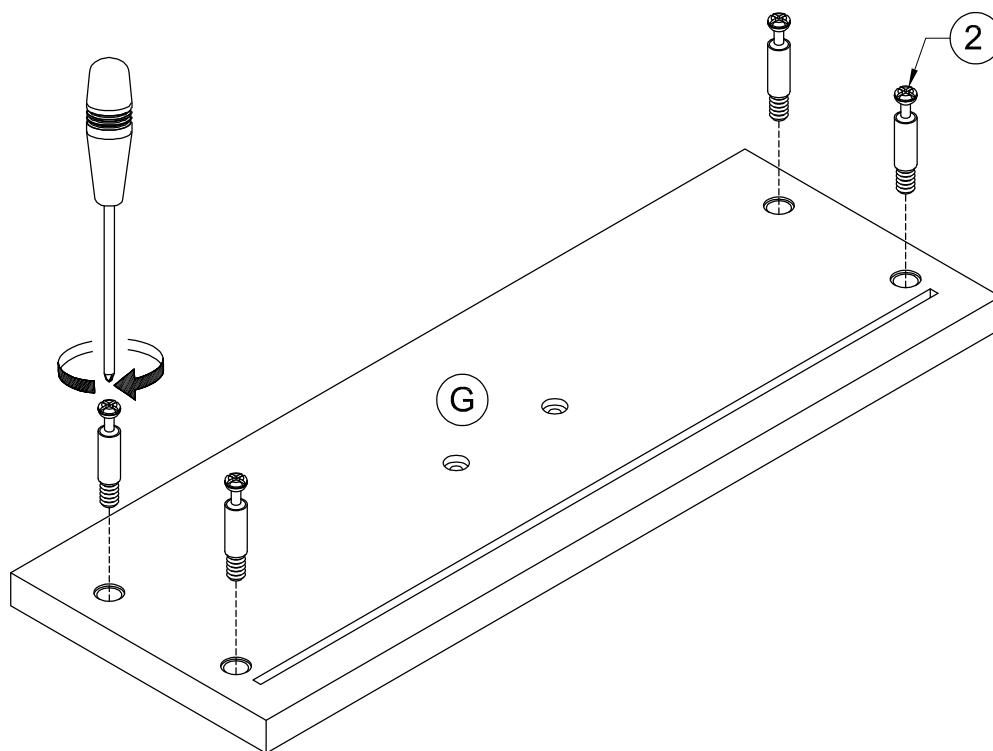


x2

-Attach Three in one bolts (2) to Front drawer (G)


Step 8

x2

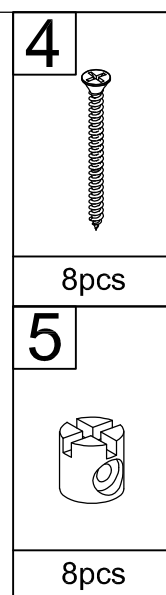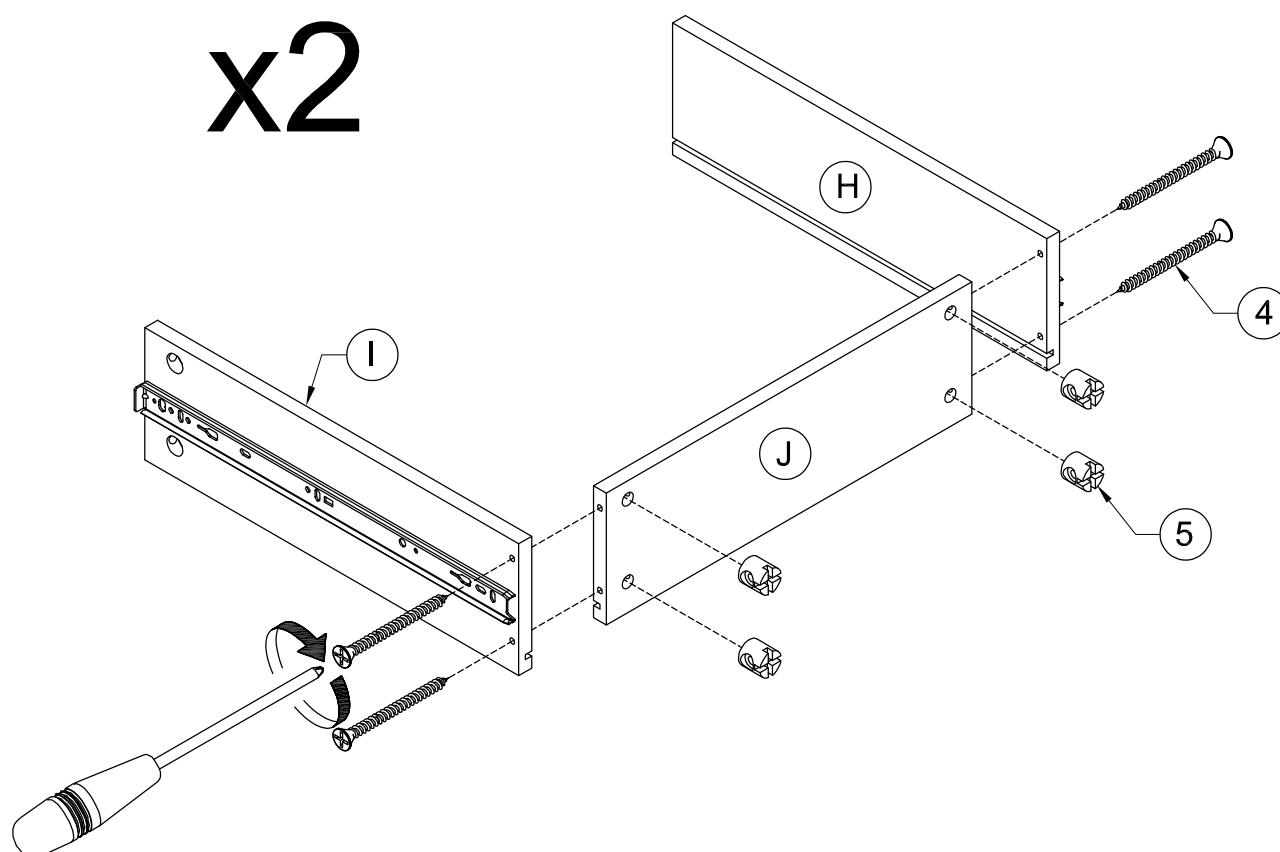

-Attach Back drawer (J) to Right side drawer (I) & Left side drawer (H) using M4 x 50mm Wood screws (4) , Cross dowel (5)


Step 9

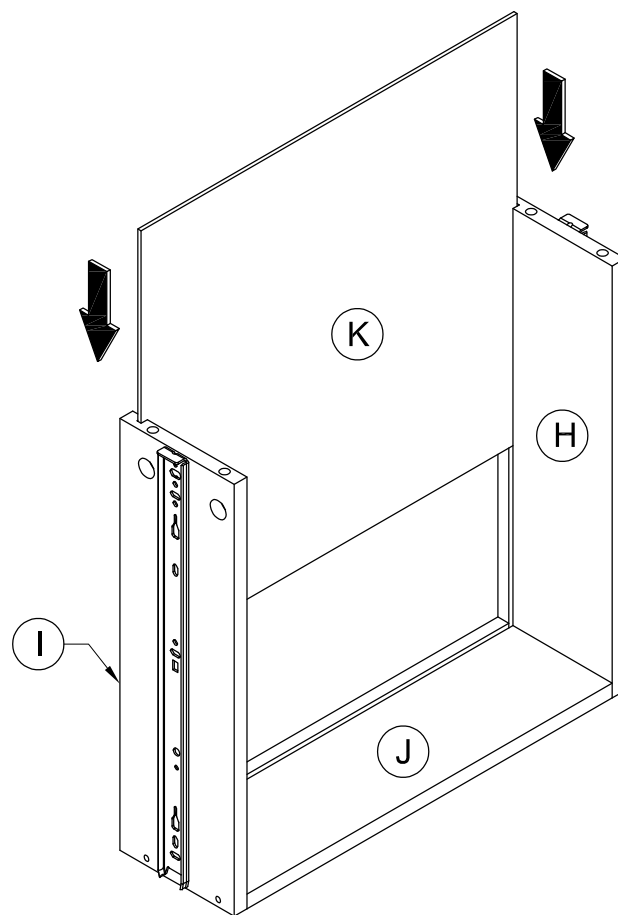

x2

-Attach Bottom drawer (K) to Left side drawer (H) , Right side drawer (I) & Front drawer (G)

Step 10

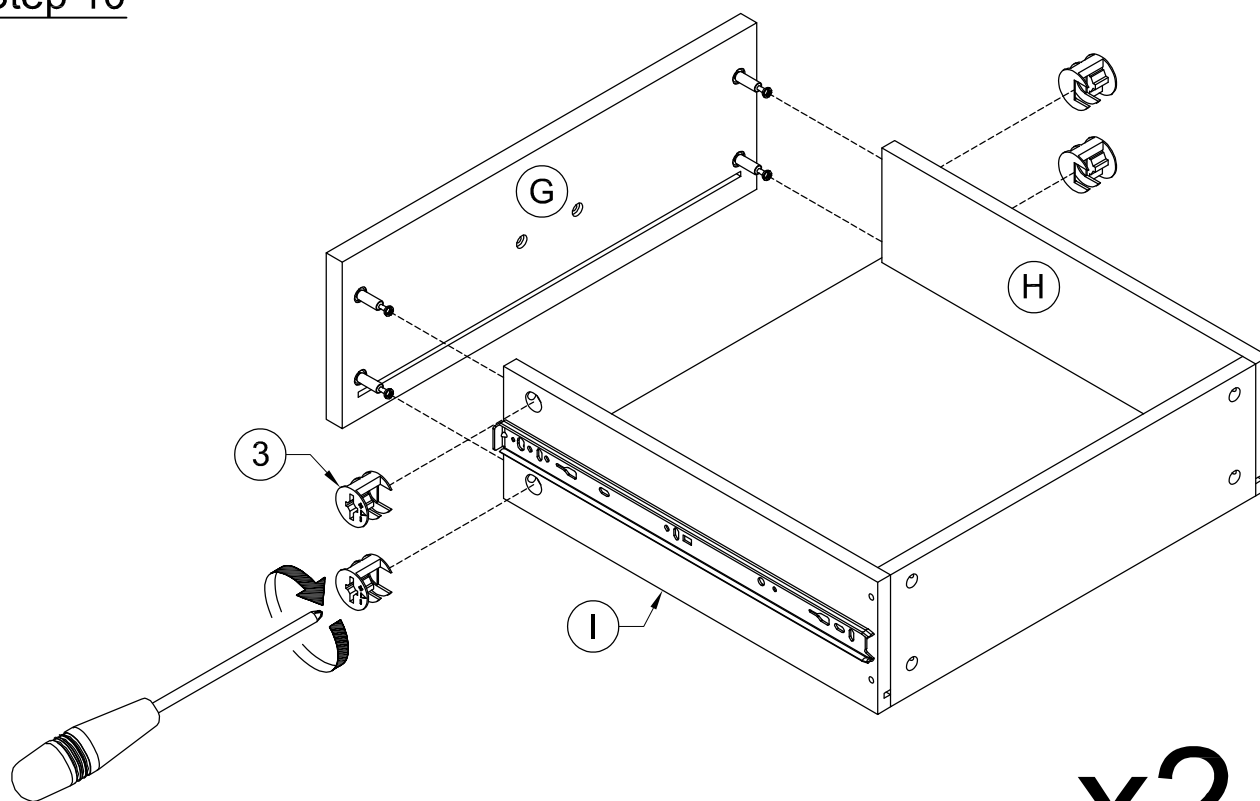

3




8pcs

x2


-Attach Front drawer (G) to Left side drawer (H) , Right side drawer (I) using Three in one locks (3)

Step 11

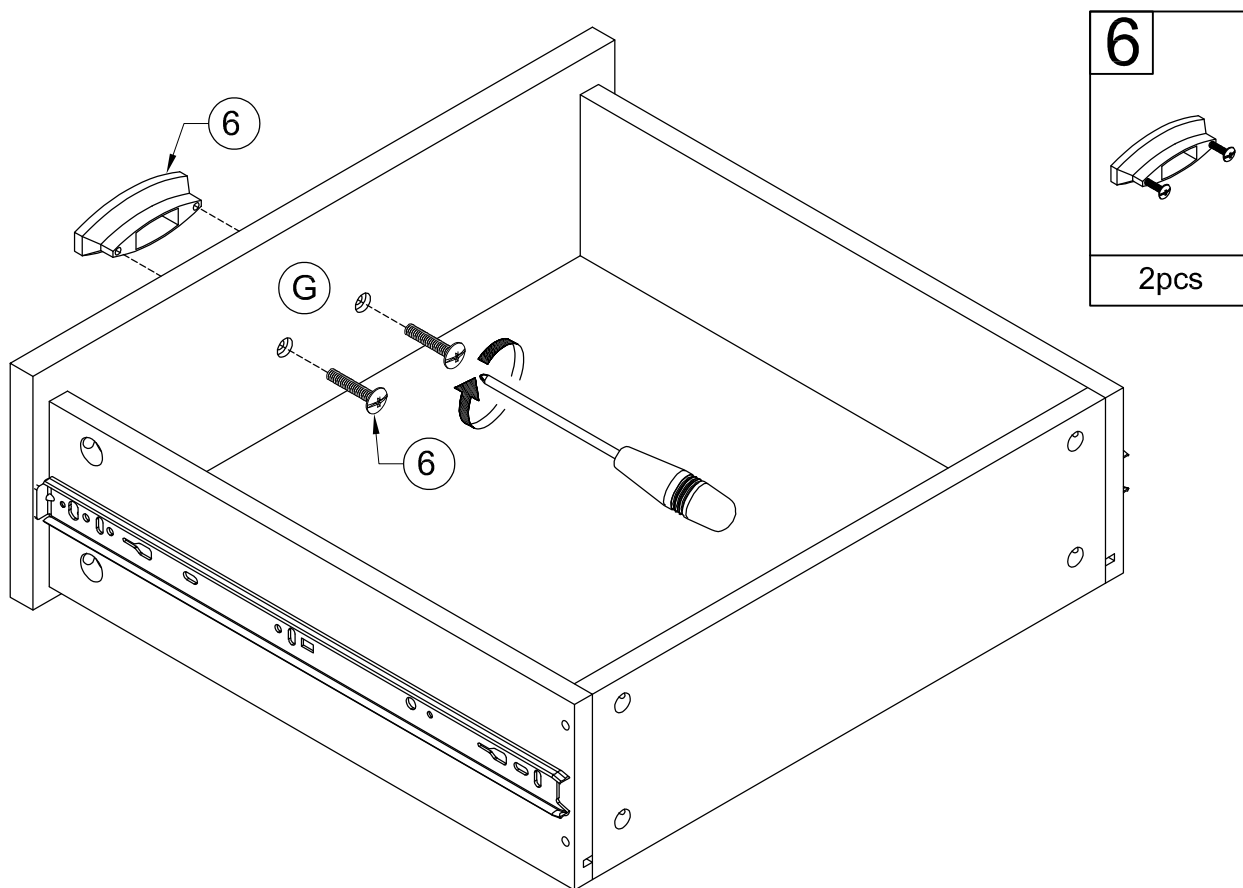

-Attach Handle ⑥ to Front drawer (G)

Step 12

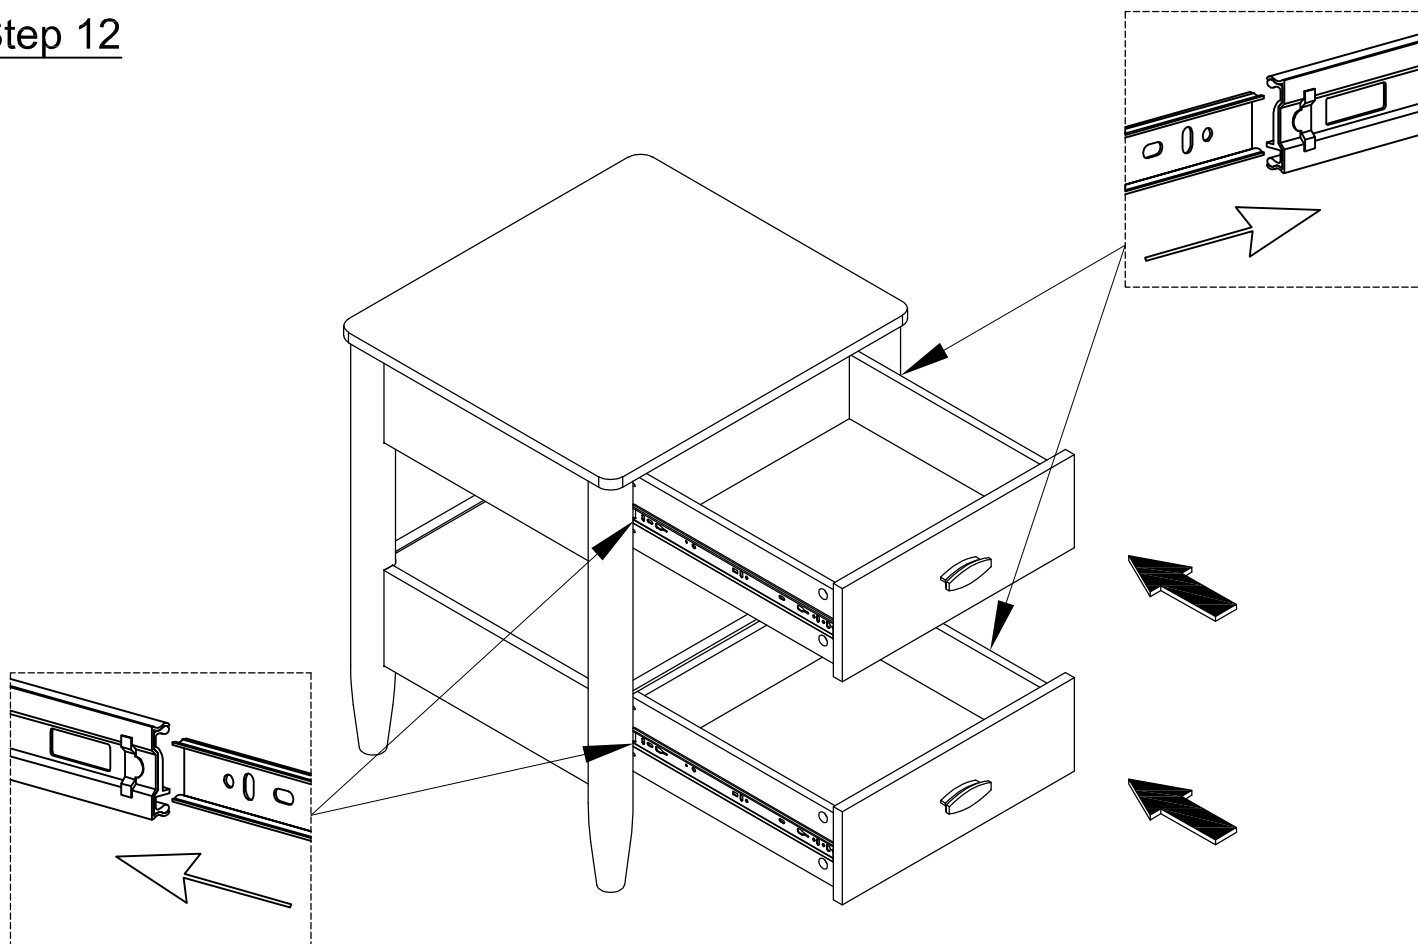

-Attach Left side drawer (H) , Right side drawer (I) to Left side cabinet (A) & Right side cabinet (B)

