




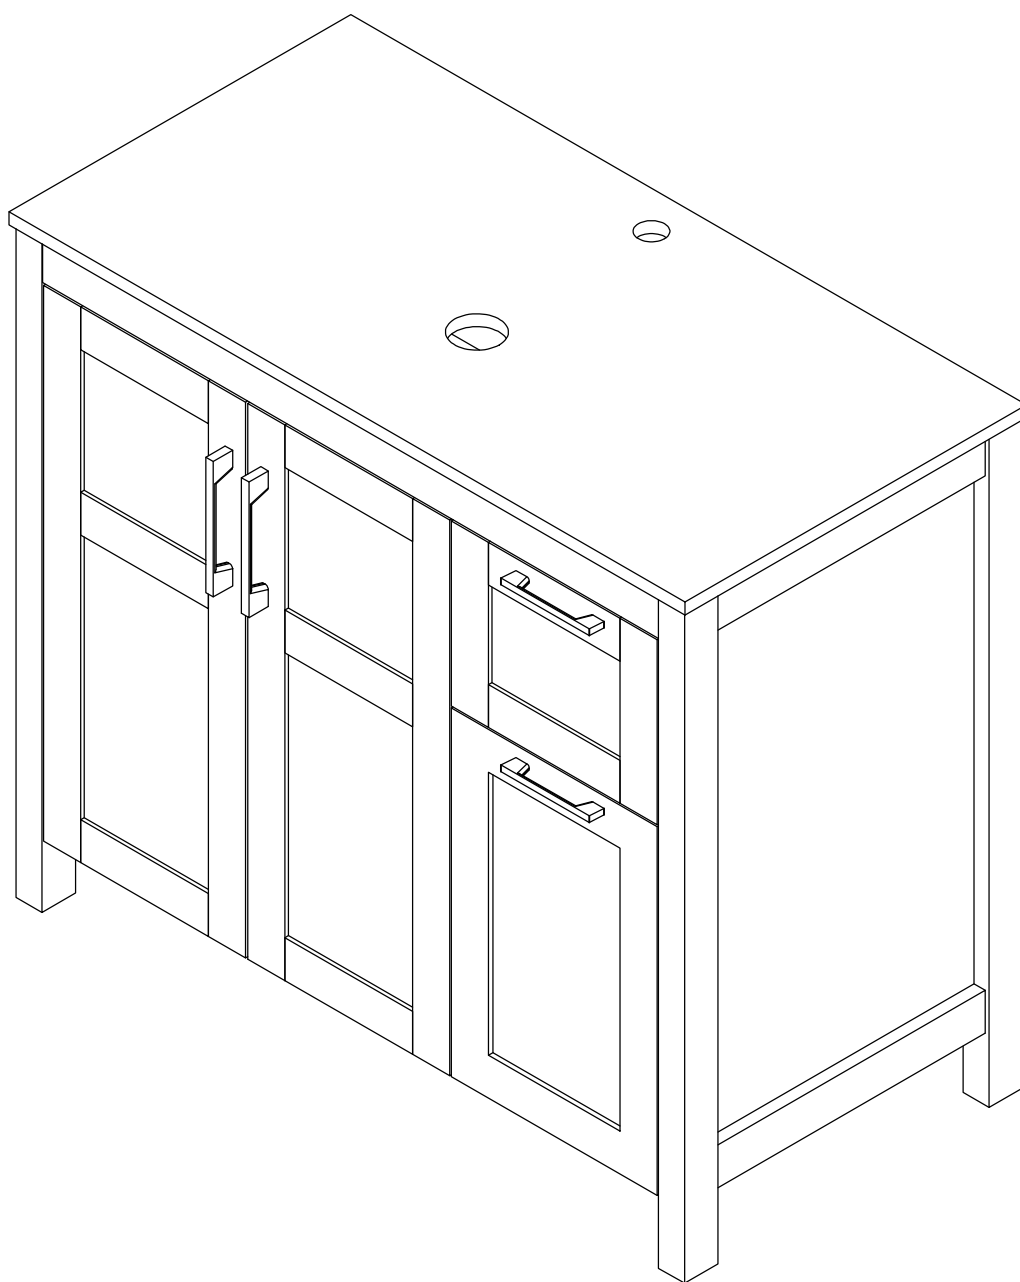


BTC8004-36"

# INSTALLATION INSTRUCTIONS

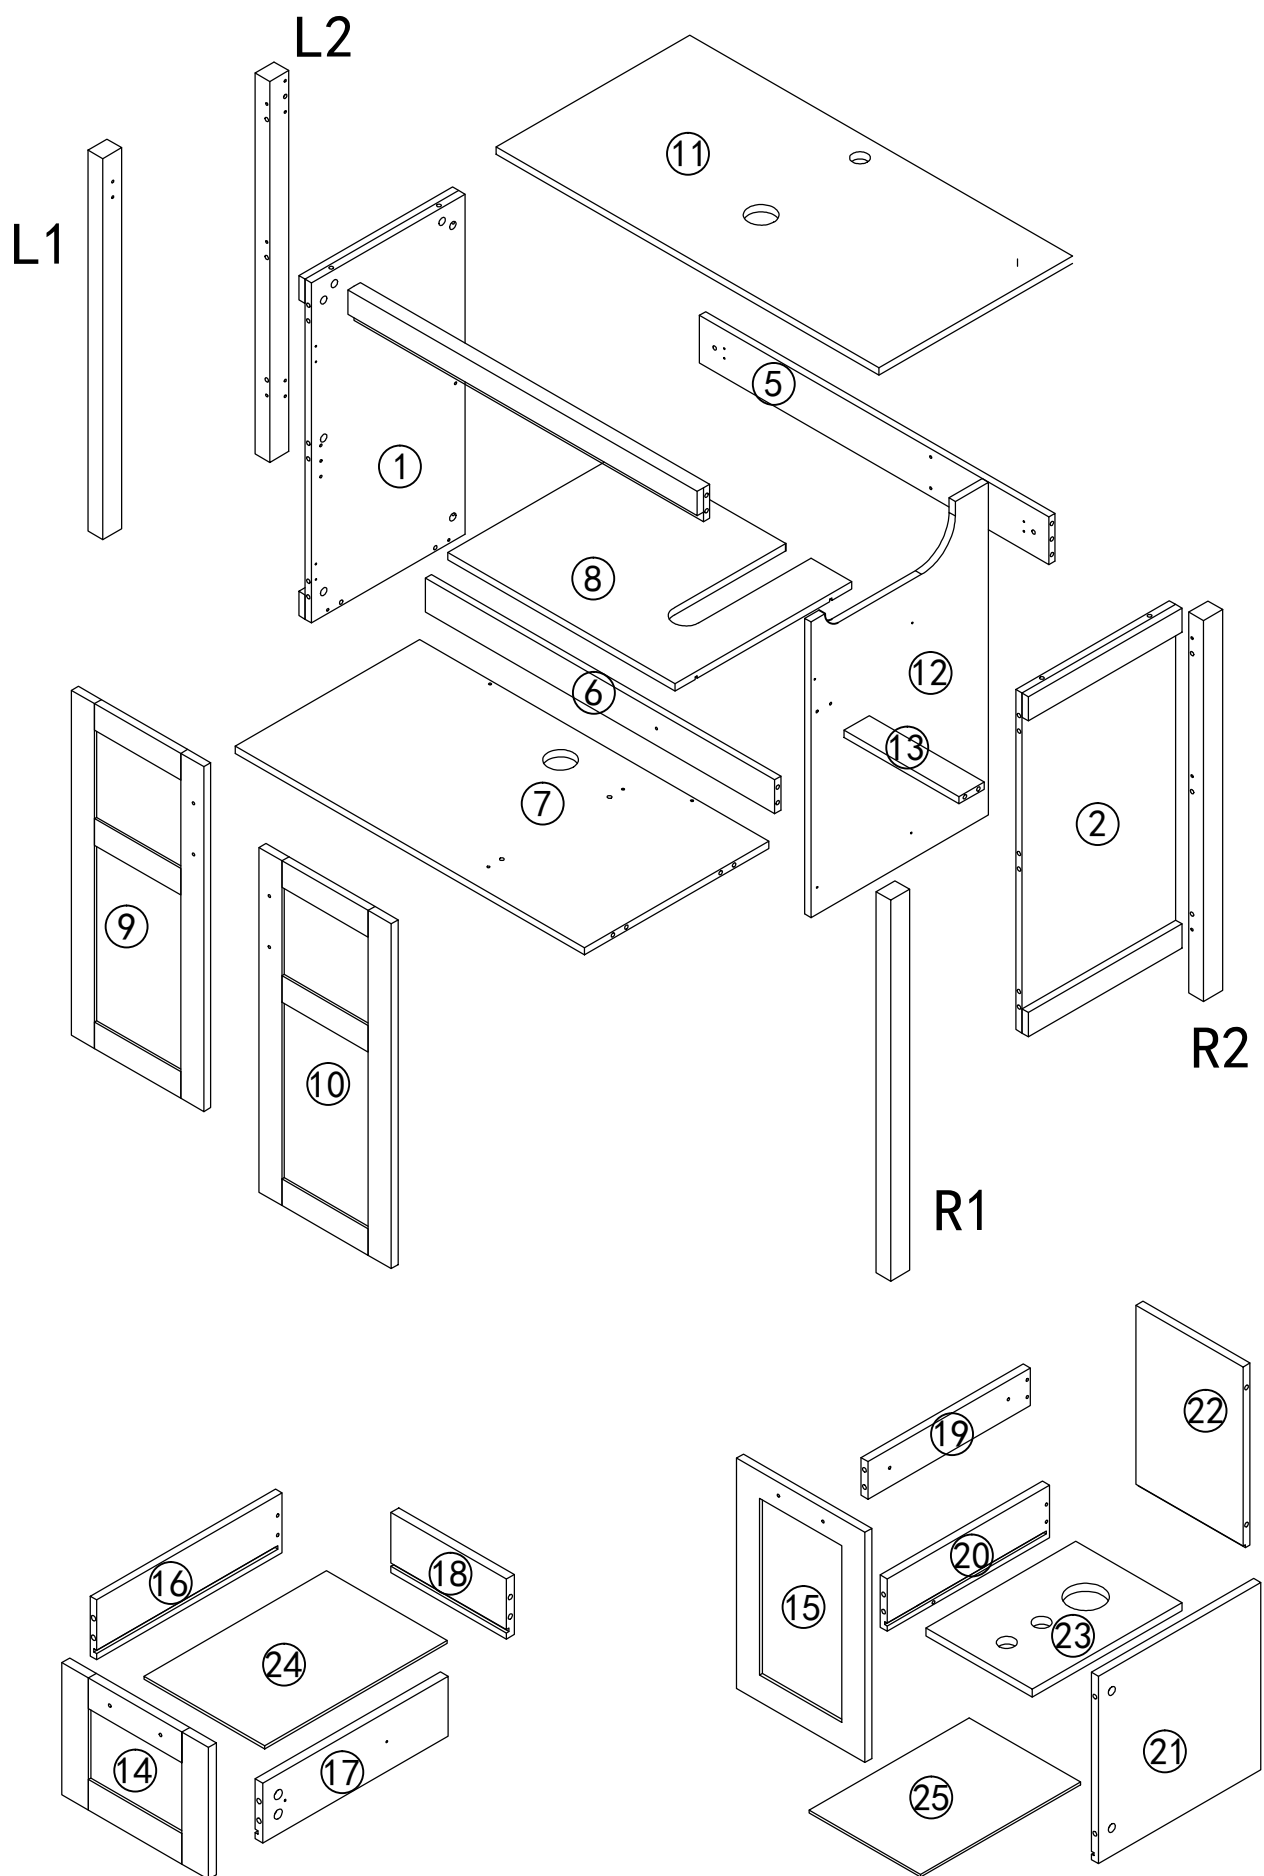


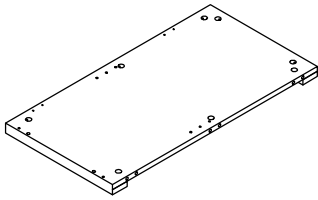


①

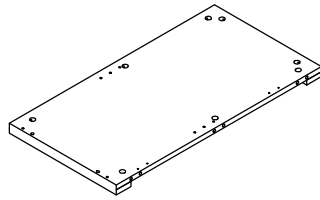


②

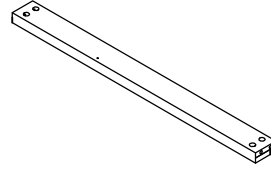


③

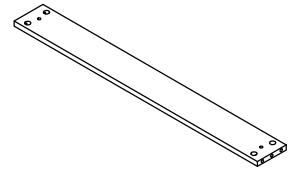


⑤

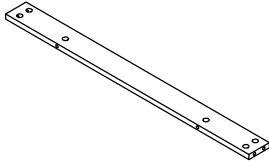


⑥

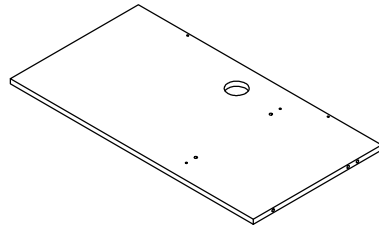


⑦

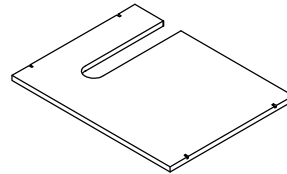


⑧

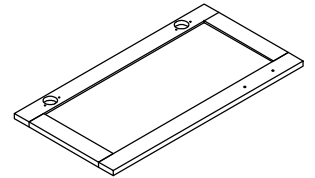


⑨

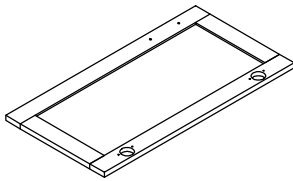


⑩

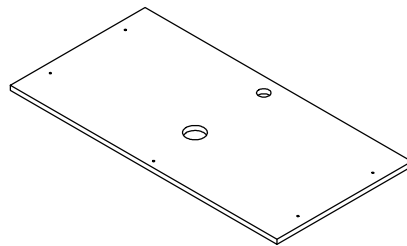


⑪

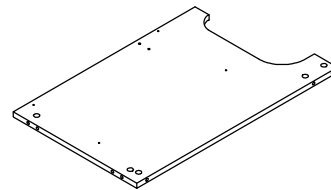


⑫




⑬




⑭

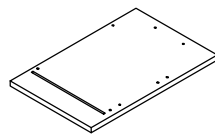


⑮




⑯




⑰




⑱




⑲




⑳

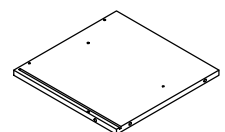


㉑




22




23




24




25

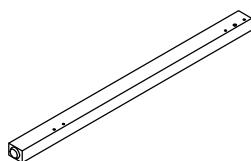


R2

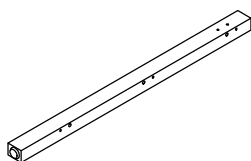

L1

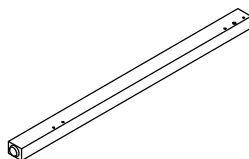


L2

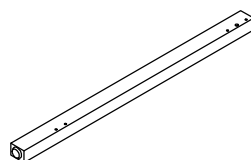

R1

Ax64

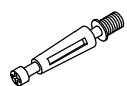

Ø5x36mm

Bx64



Ø14.5x11.5mm

Cx64




Ø17mm

Dx20



Ø8x30mm


Ex1

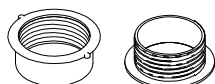

Fx2



Gx54

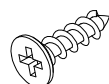


Ø3.5x14mm

Hx4




Ix8

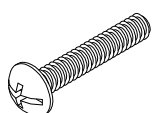

Ø4x18mm

Jx2

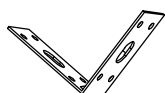

Kx1



Mx4



Ø5mm

Nx4




Ø4x20mm


Ox2



Px1

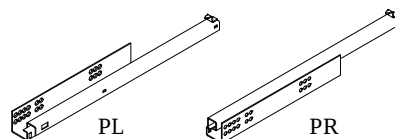

Qx2



Q2

Q1

Sx1



Xx2



Yx2






Zx2



## Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

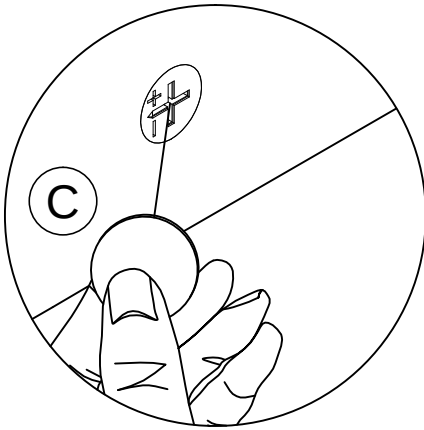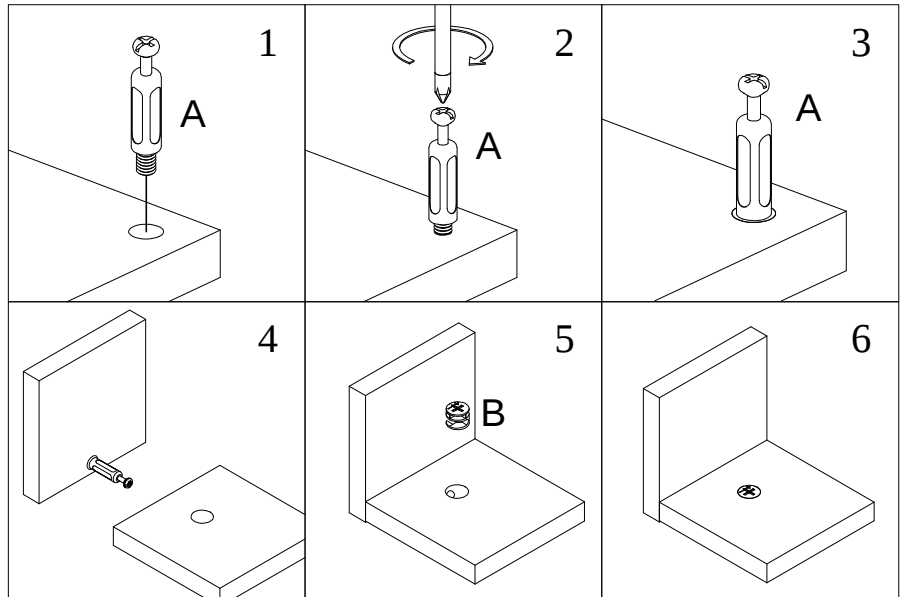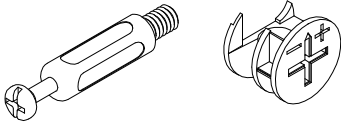

Apply decorative stickers (C) to all CAM LOCK (B) units.

### **\*\*Important Notes:\*\***


-When assembling the side panels and columns, pay attention to the distinction between left and right, as well as the orientation of the side panels (top and bottom). Refer to the illustration for guidance on the correct assembly position and method.

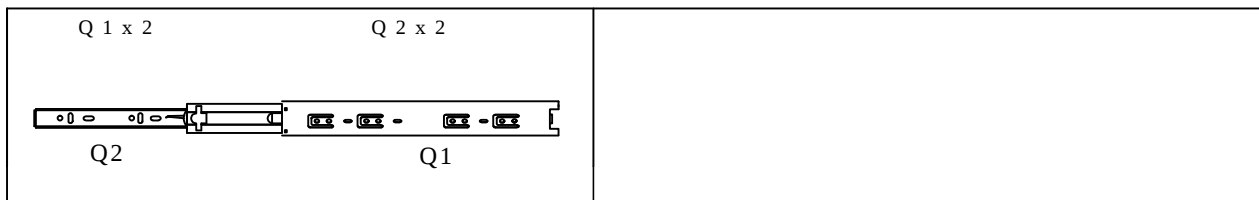


## TIPS

### How To Separate A Ball Bearing Slider


- 1) Pull toward arrow to open the slider until it's stops and then flip it over

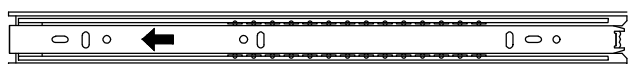


- 2) Push plastic lever down and pull apart the slider at the same time

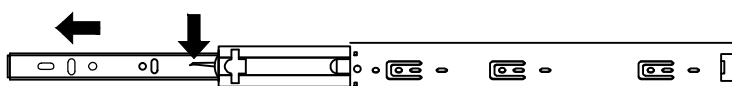

- 3) After disassembly




### How to Assemble the Slider





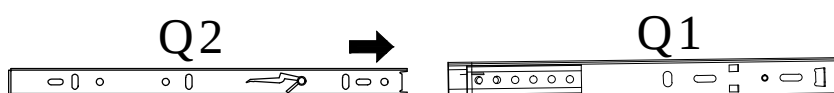


Align the outer track(Q2) with the center of the inner track(Q1) and push in.



# STEP 1

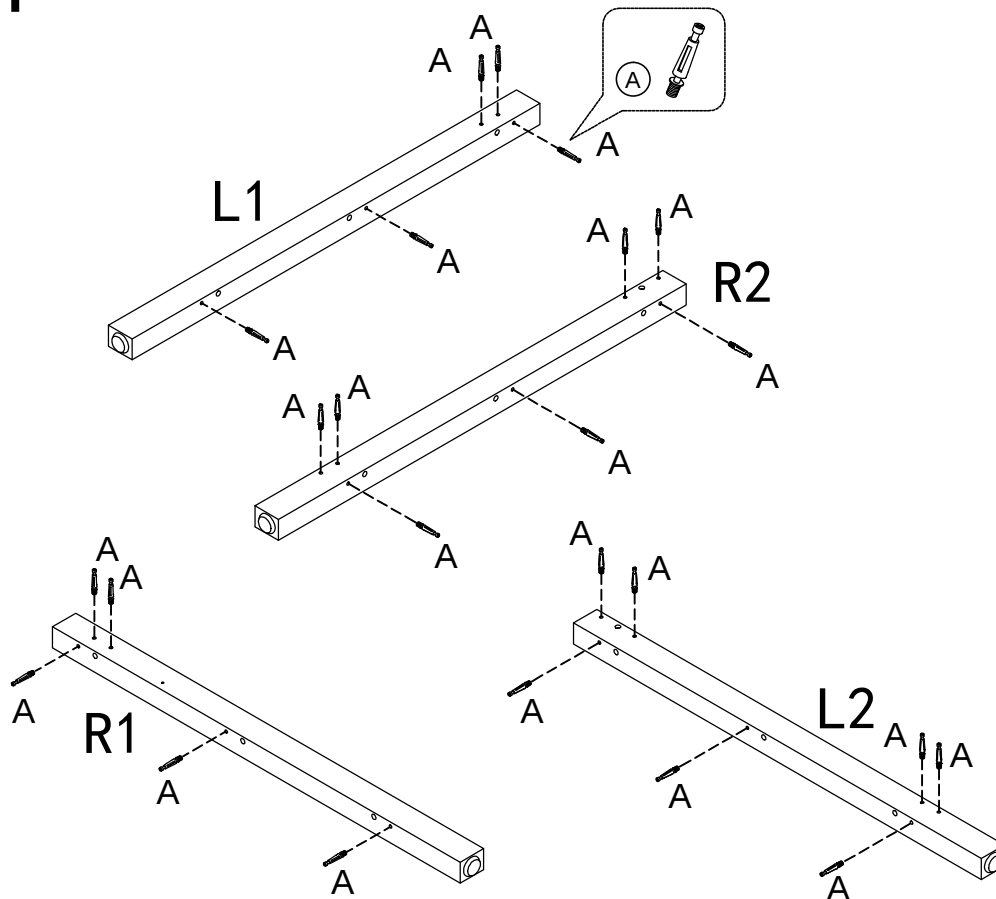



# STEP 2

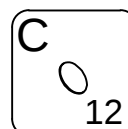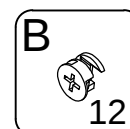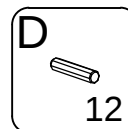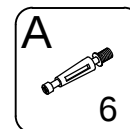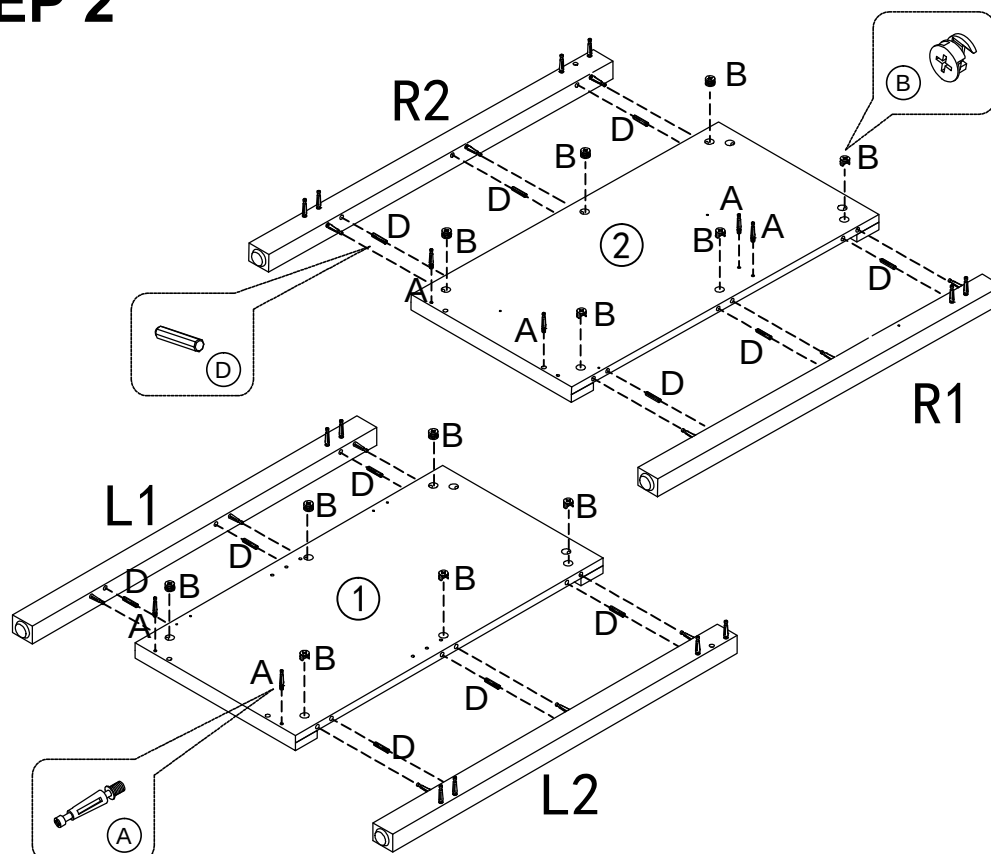




STEP 3

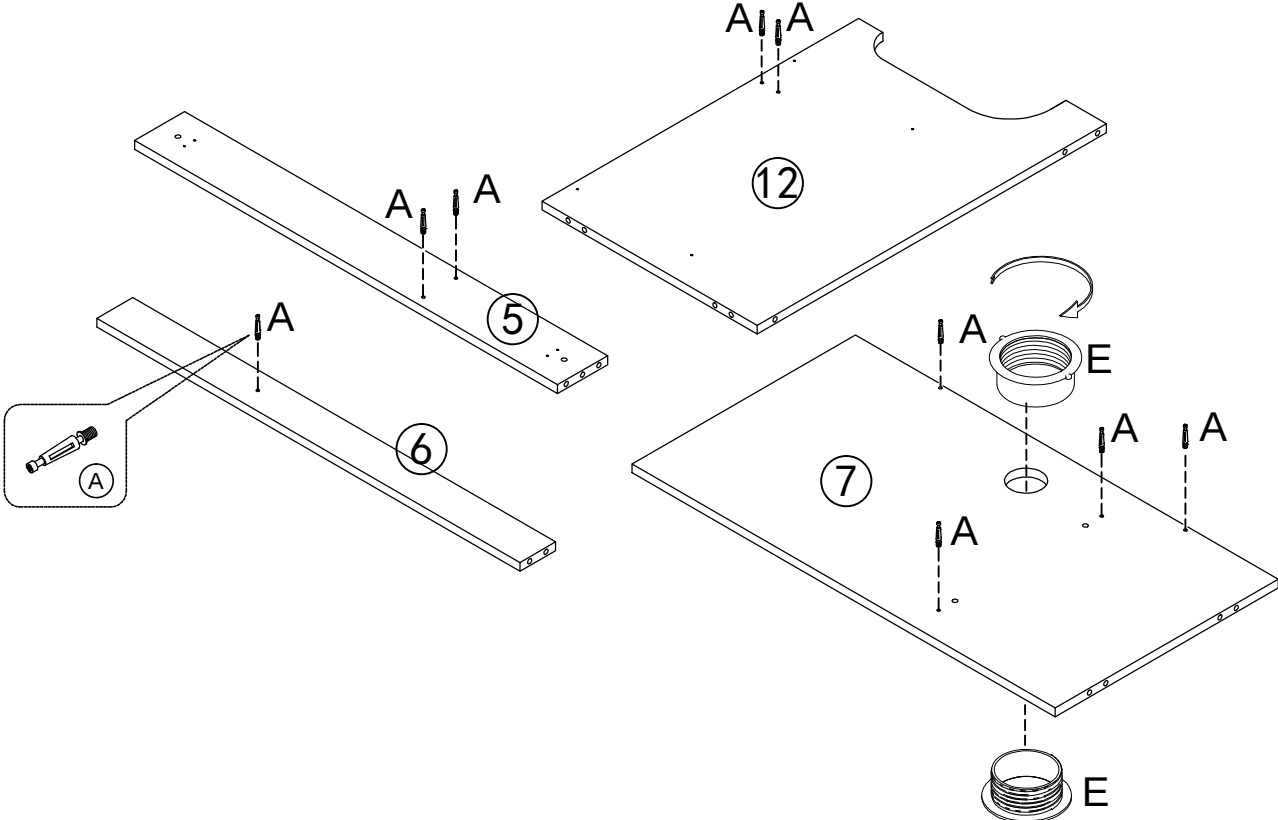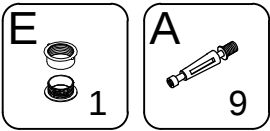





STEP 4

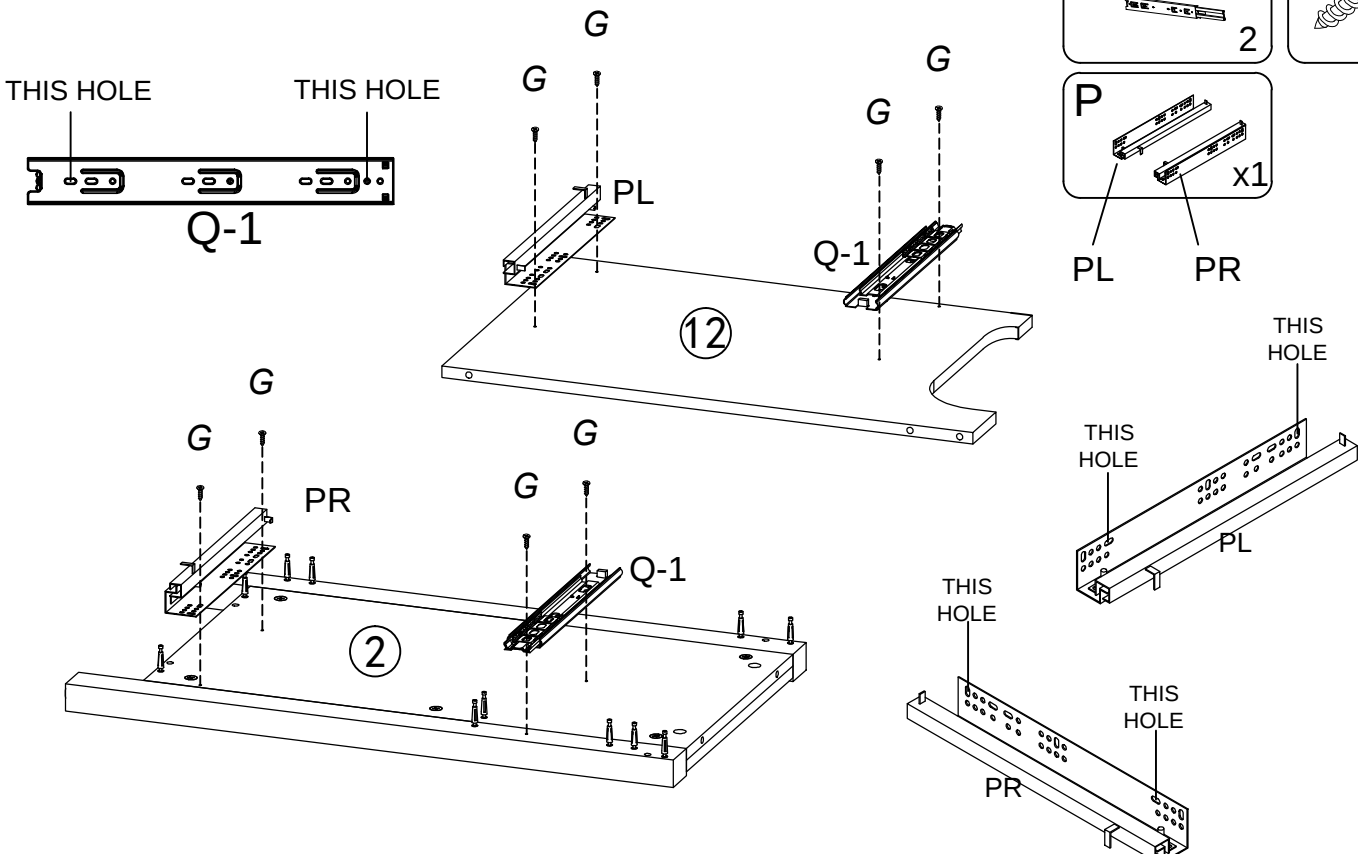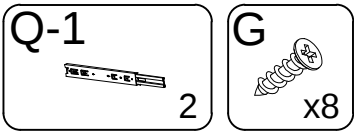





STEP 5

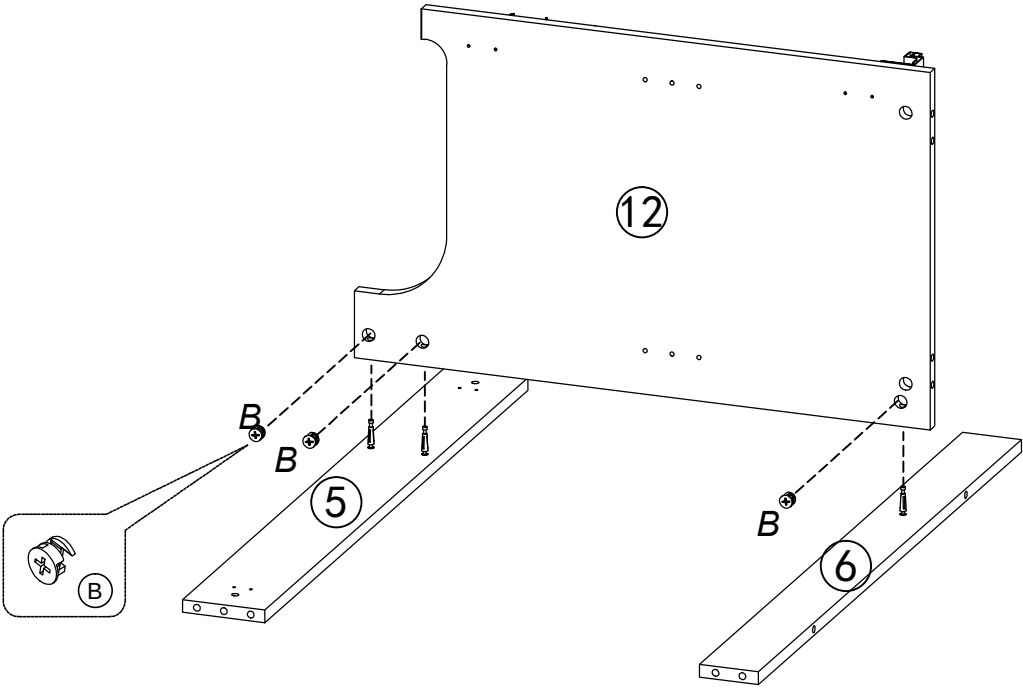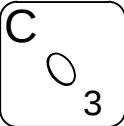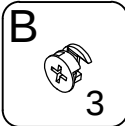




STEP 6

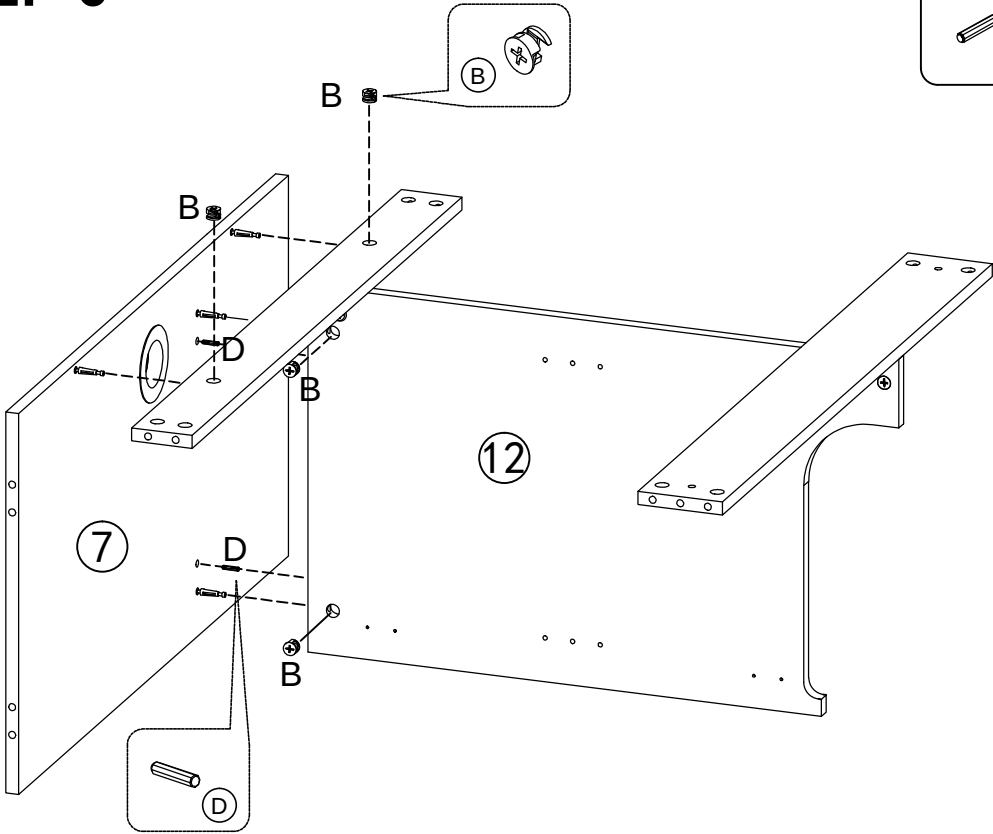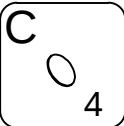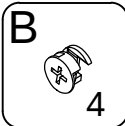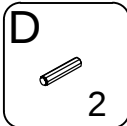




STEP 7

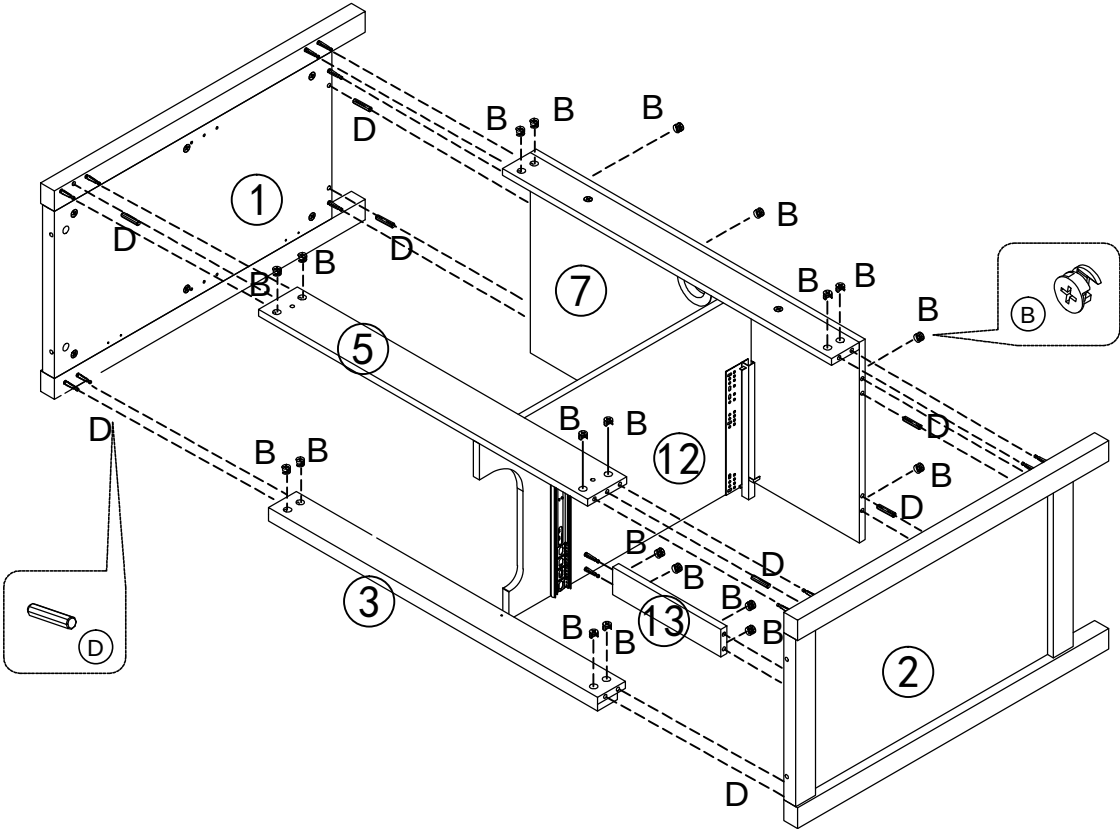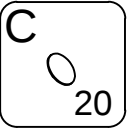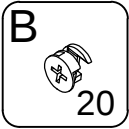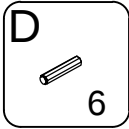



STEP 8

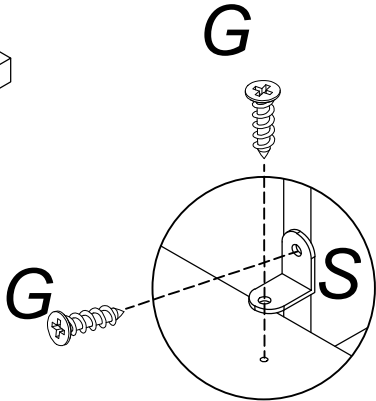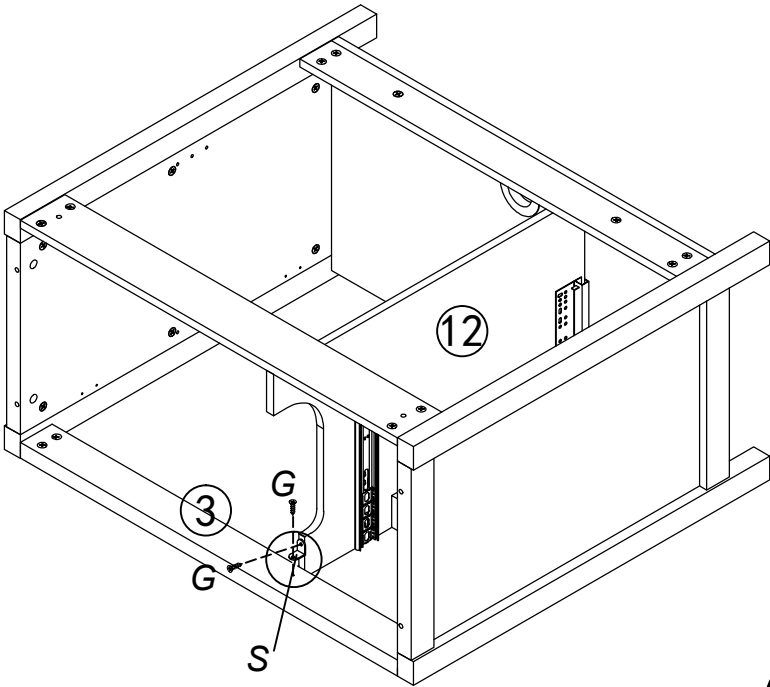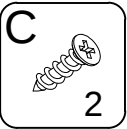



STEP 9

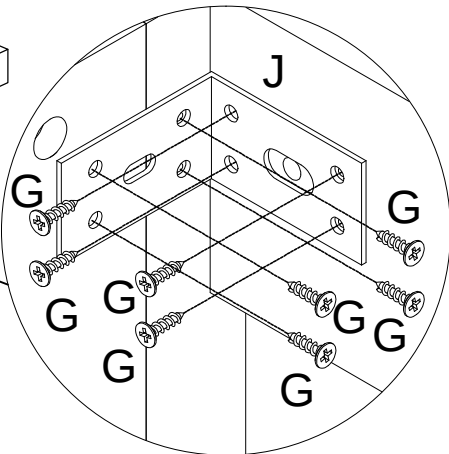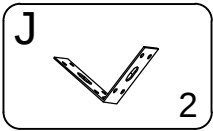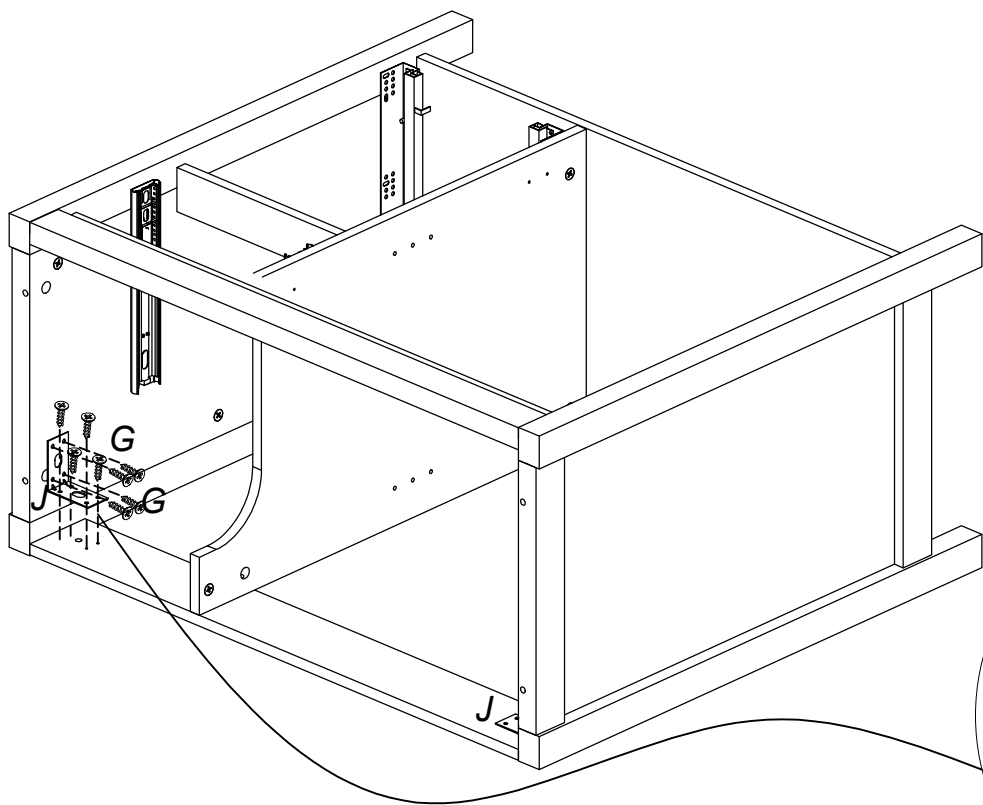

STEP 10

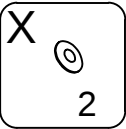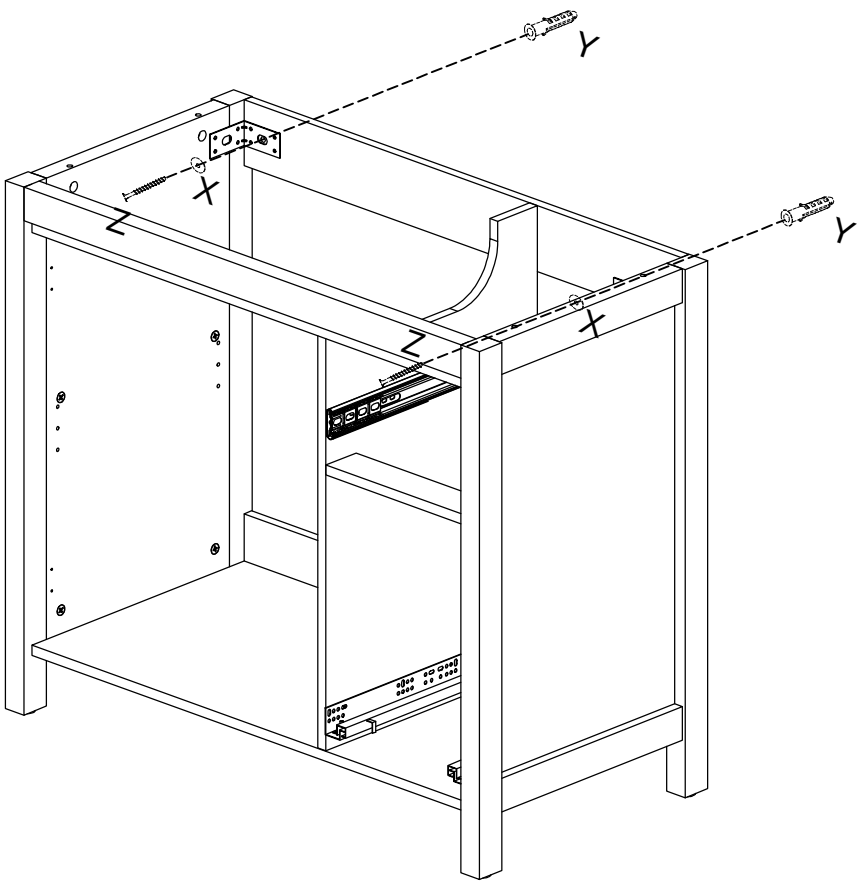

punch two holes in the wall to install accessor.

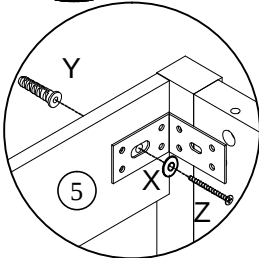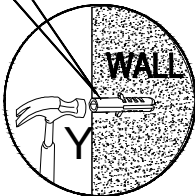

STEP 11

A



4

B




4


C



4

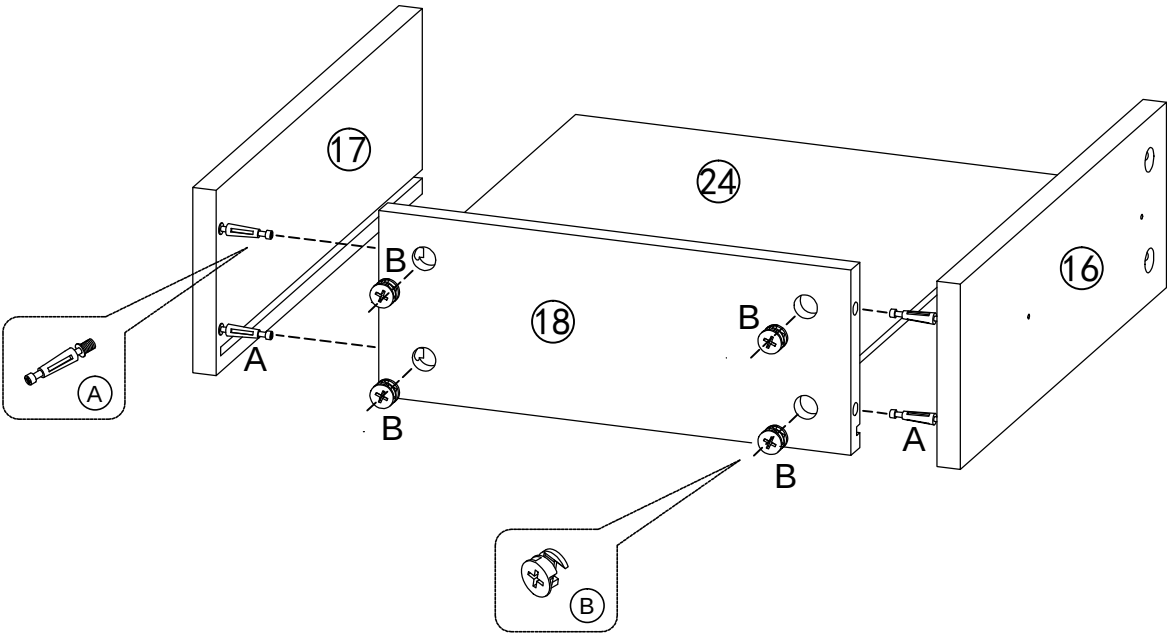

STEP 12



A



4

B



4

C



4

Q-2



2

G



4

H




1


I






2

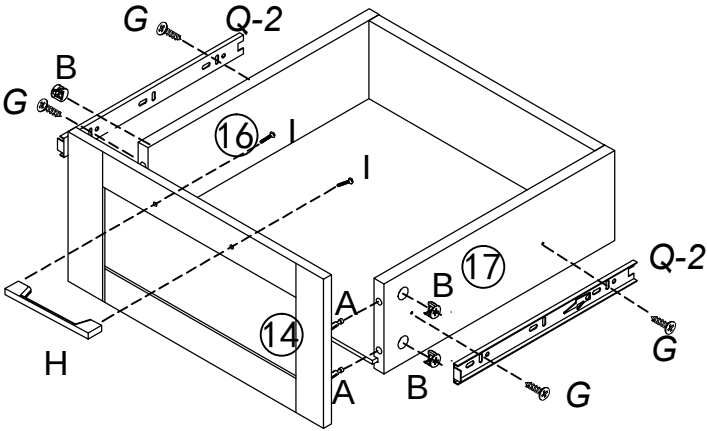


STEP 13

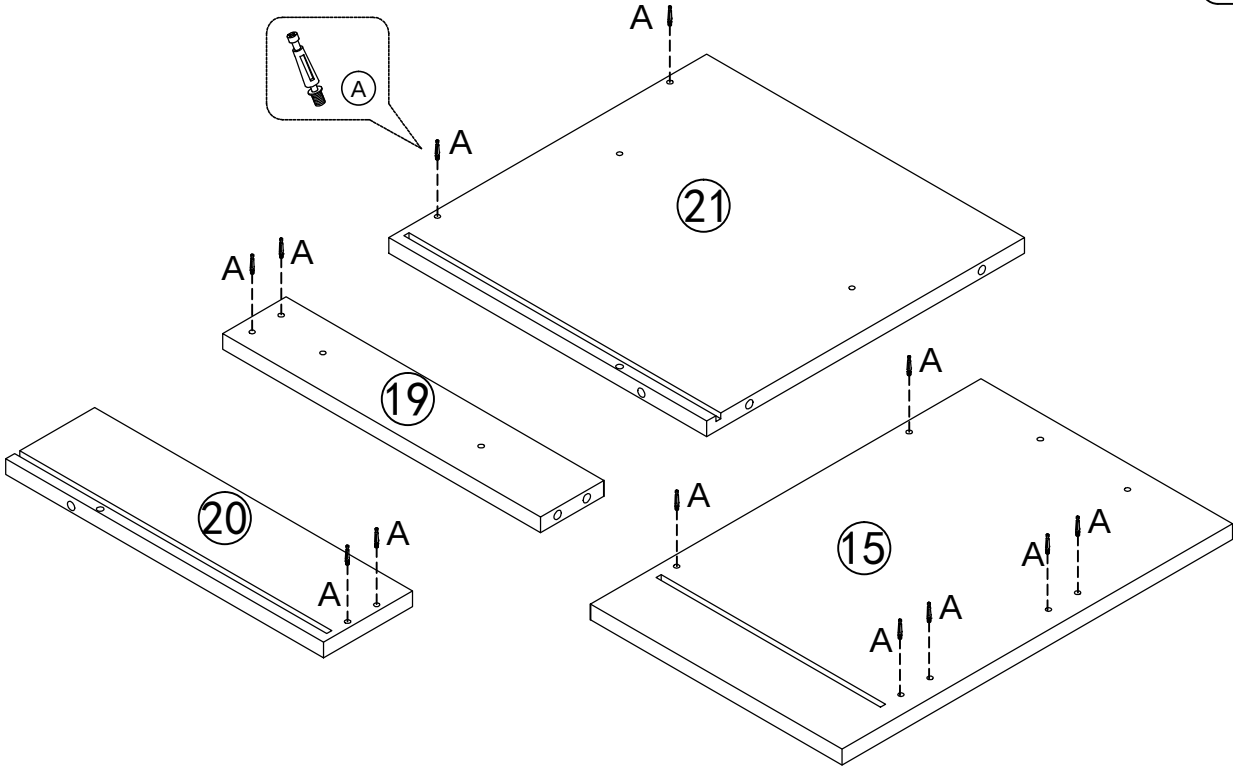


STEP 14

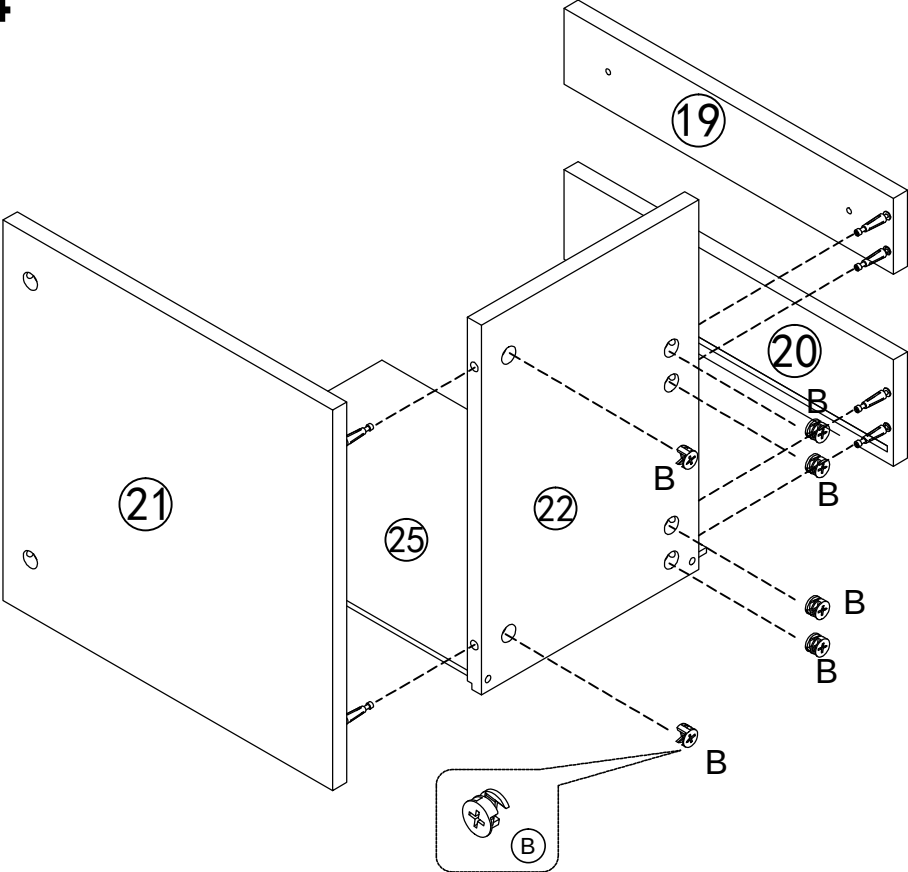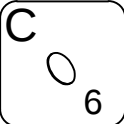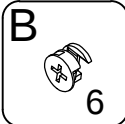



STEP 15

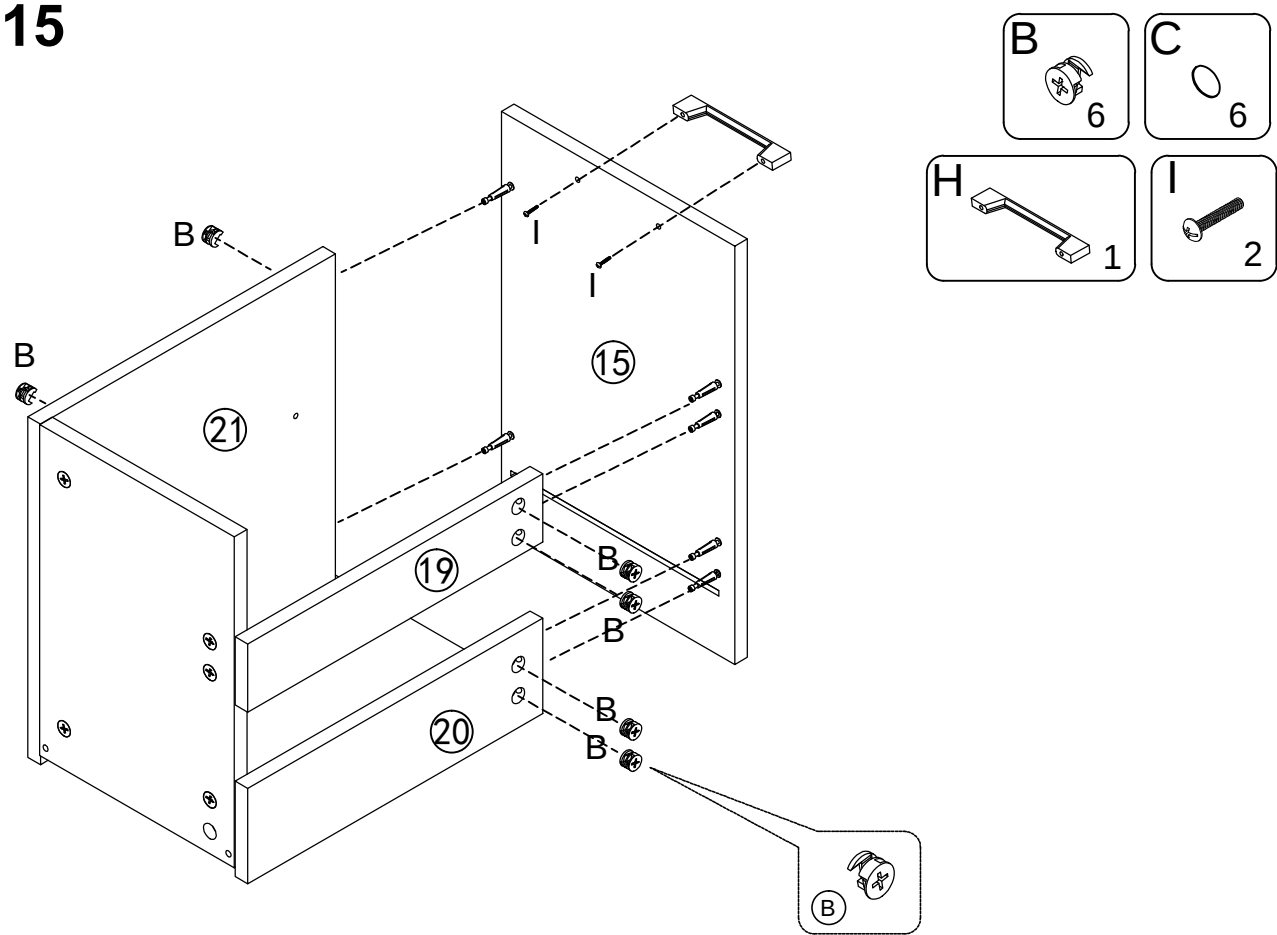




STEP 16

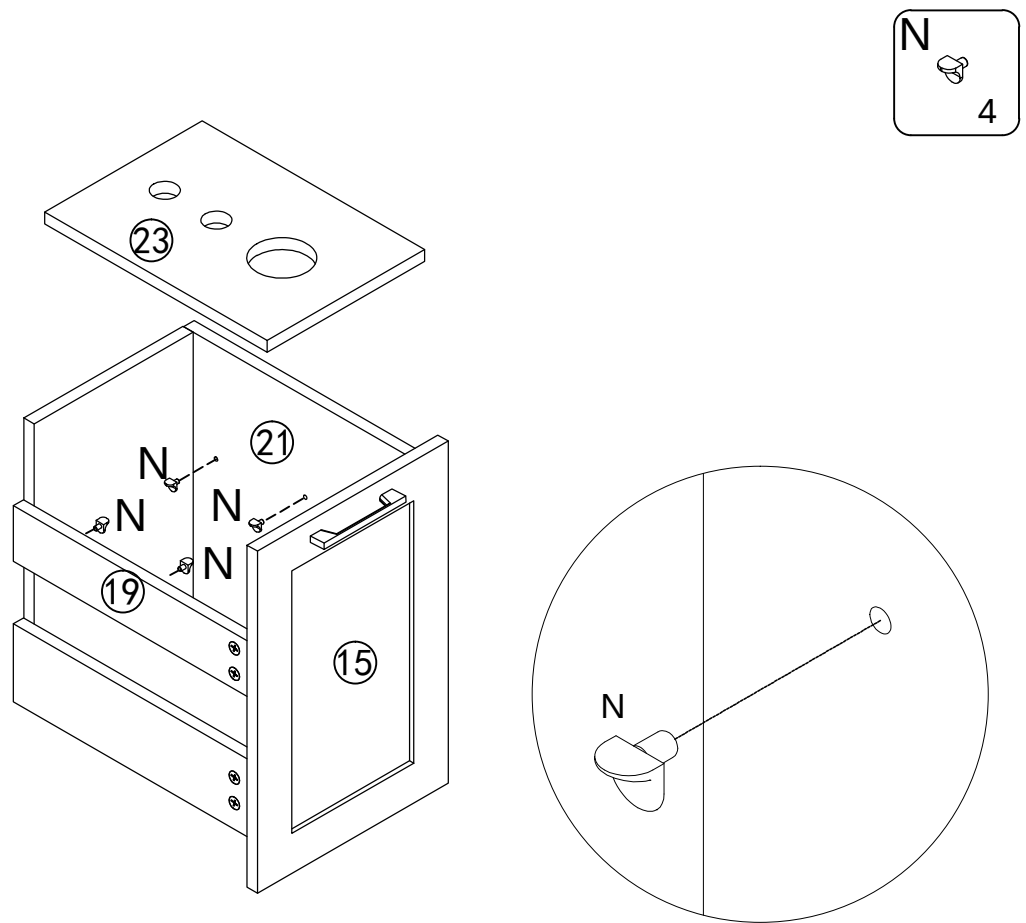


STEP 17

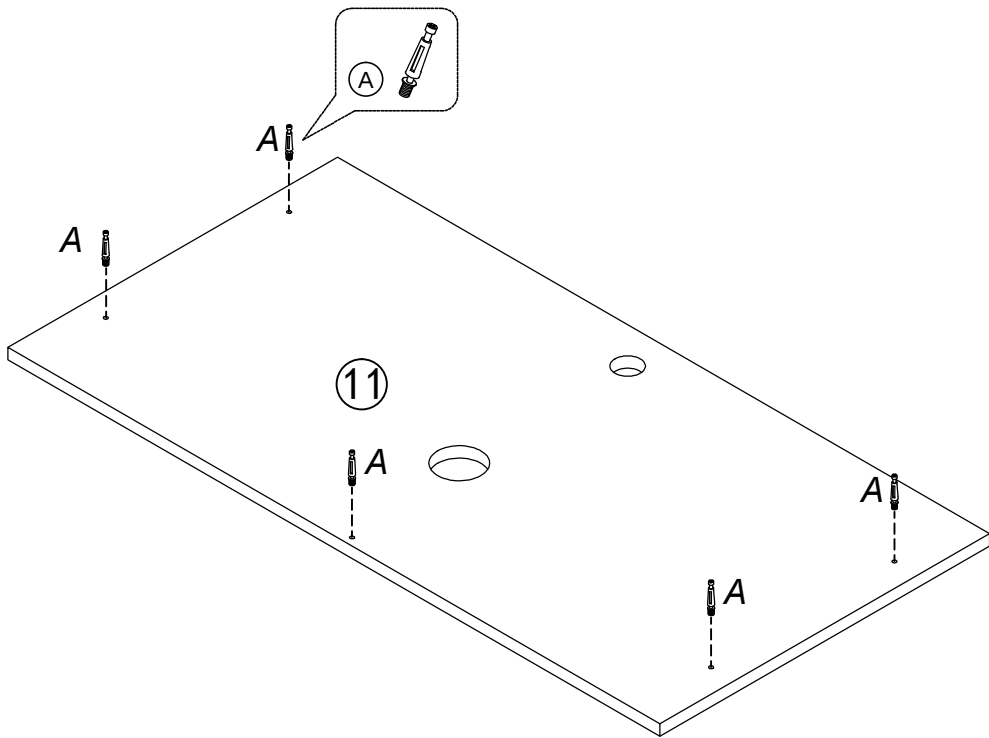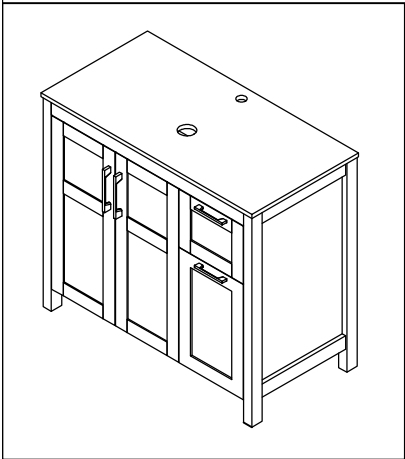


STEP 18

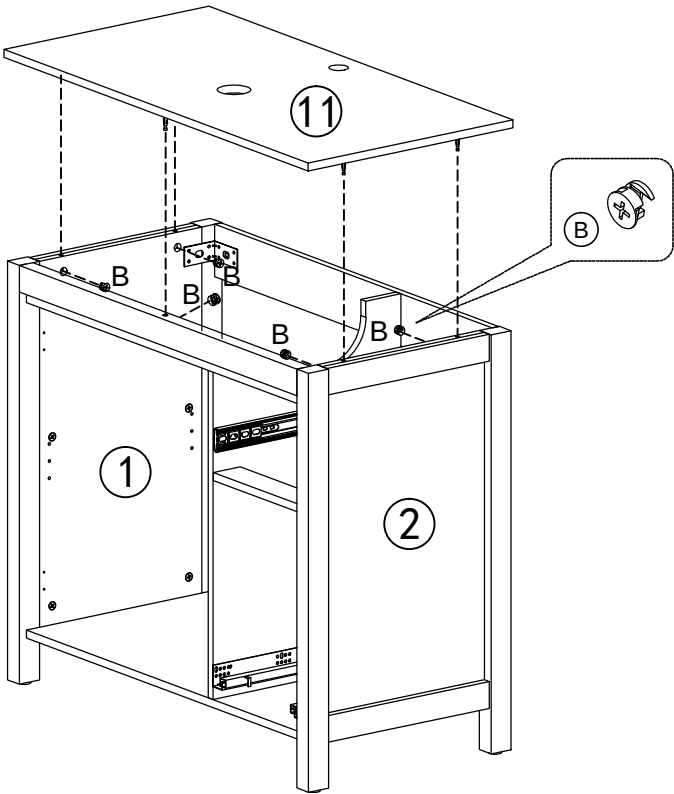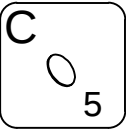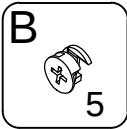







**STEP 19**

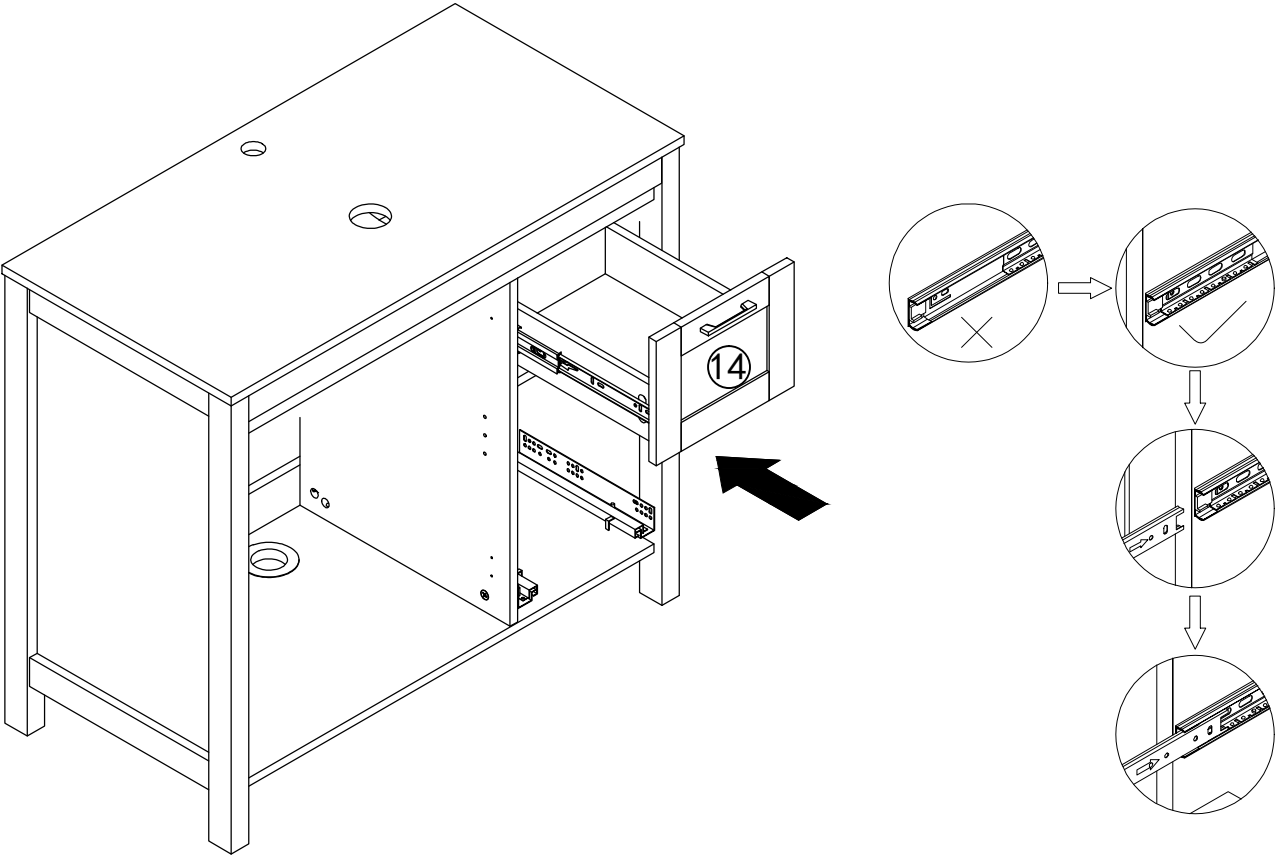




**STEP 20**

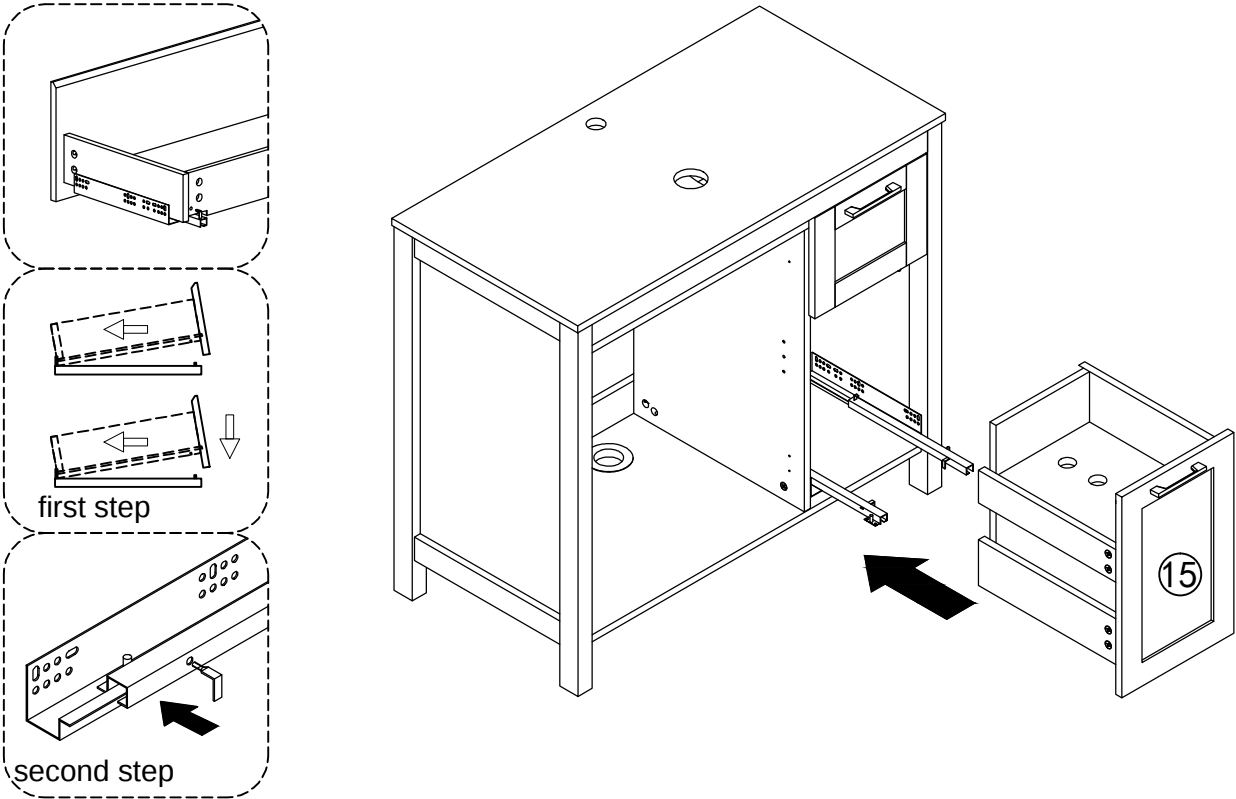

## STEP 21

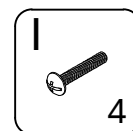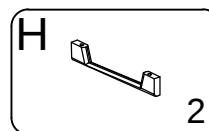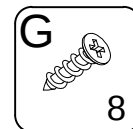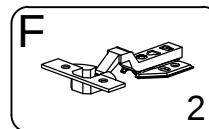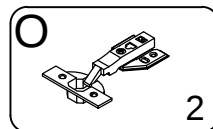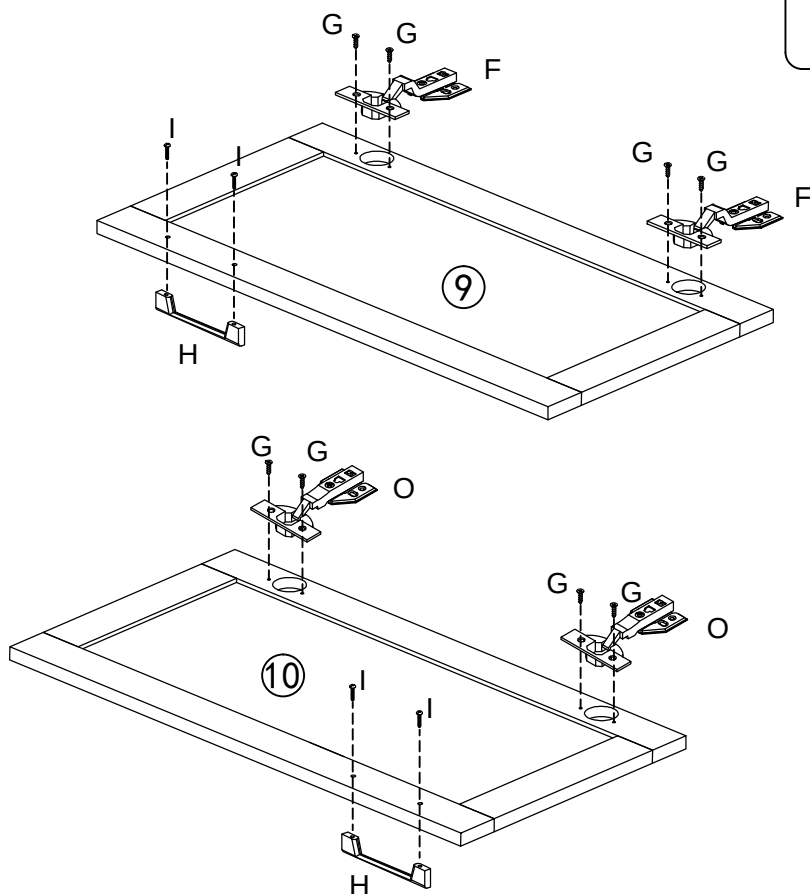



## STEP 22

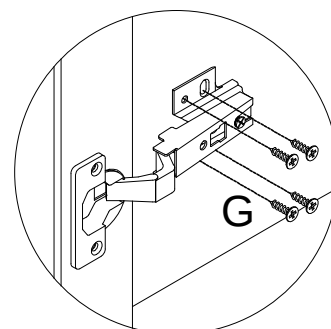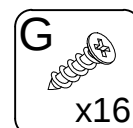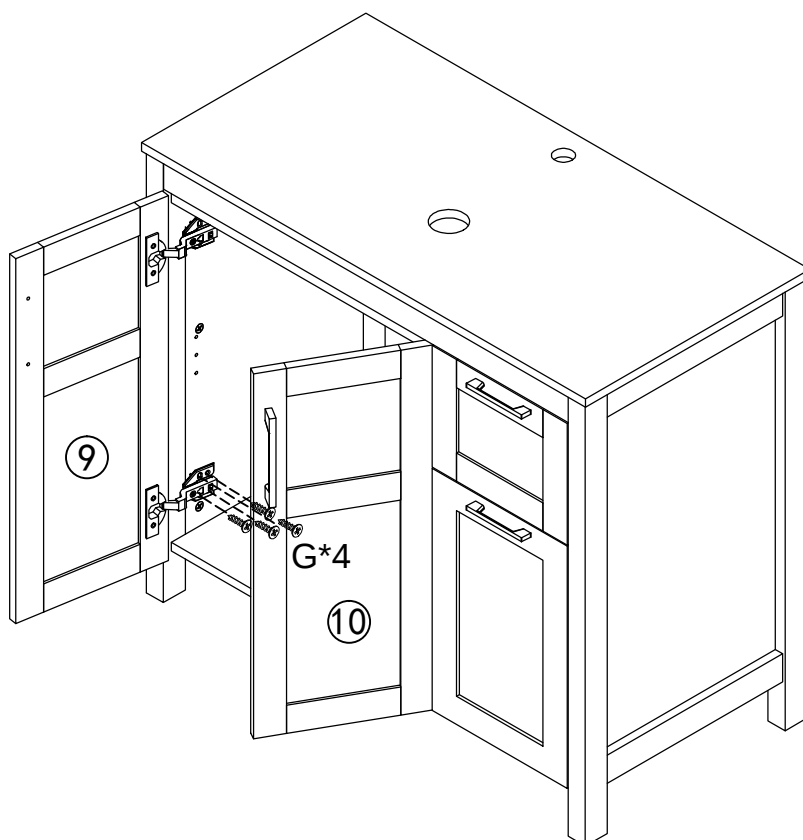

## STEP 23

### Sideways/Gap Adjustment

Turning the screw "2" on the hinges of each door allows you to adjust the door to the left or right by a few millimeters.

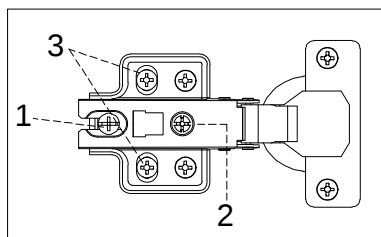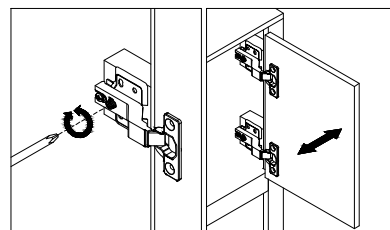


### Hinge Adjustment Guide

Three-way adjustable hinge for perfectly aligned doors


### Forward/Backward Alignment

Loosen screw "1" to adjust the door forward or backward. After adjustment, Tighten screw "1".



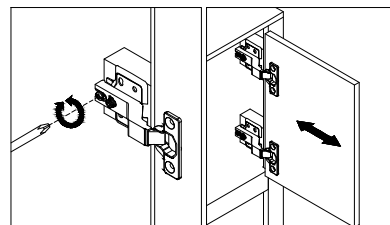


### Vertical Height Adjustment


Loosen screw "3" to adjust the door up or down. After adjustment, hold the door panel and tighten screw "3".

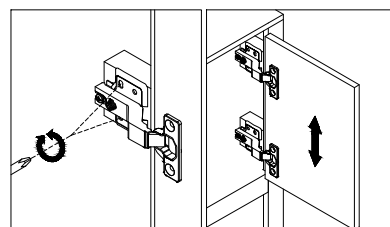



## STEP 24

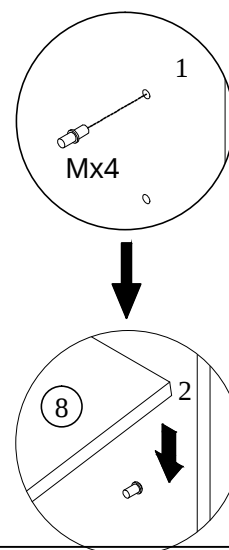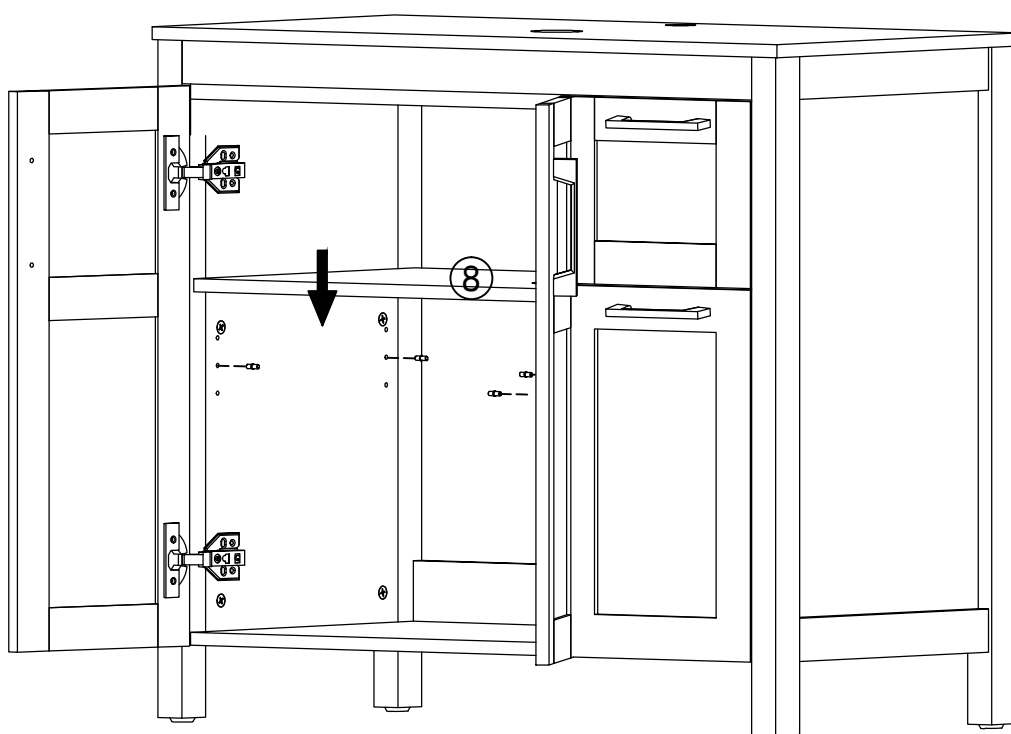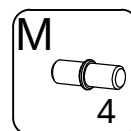



**STEP 25**

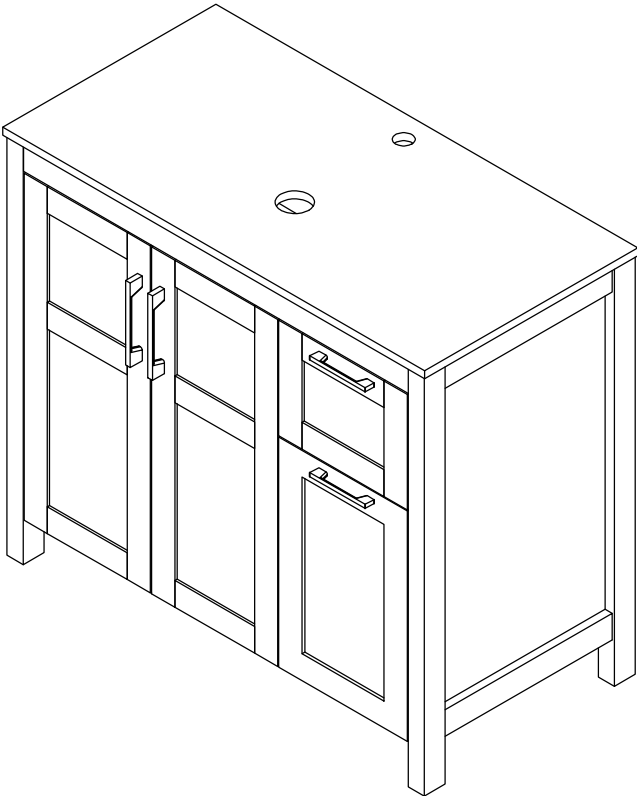





STEP 26

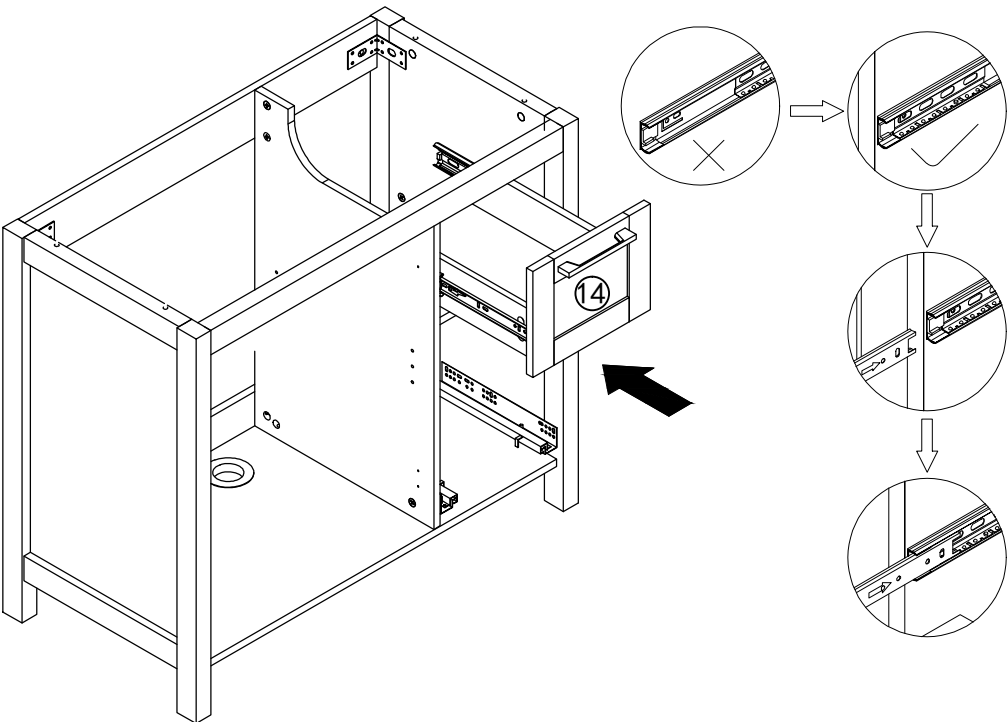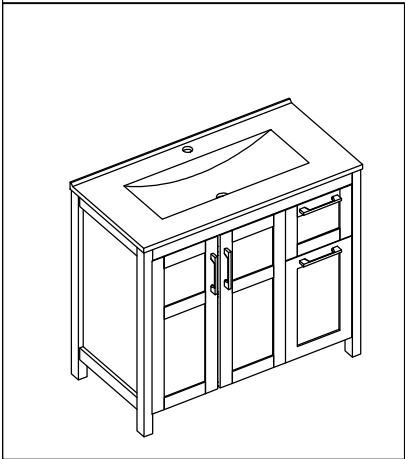



STEP 27

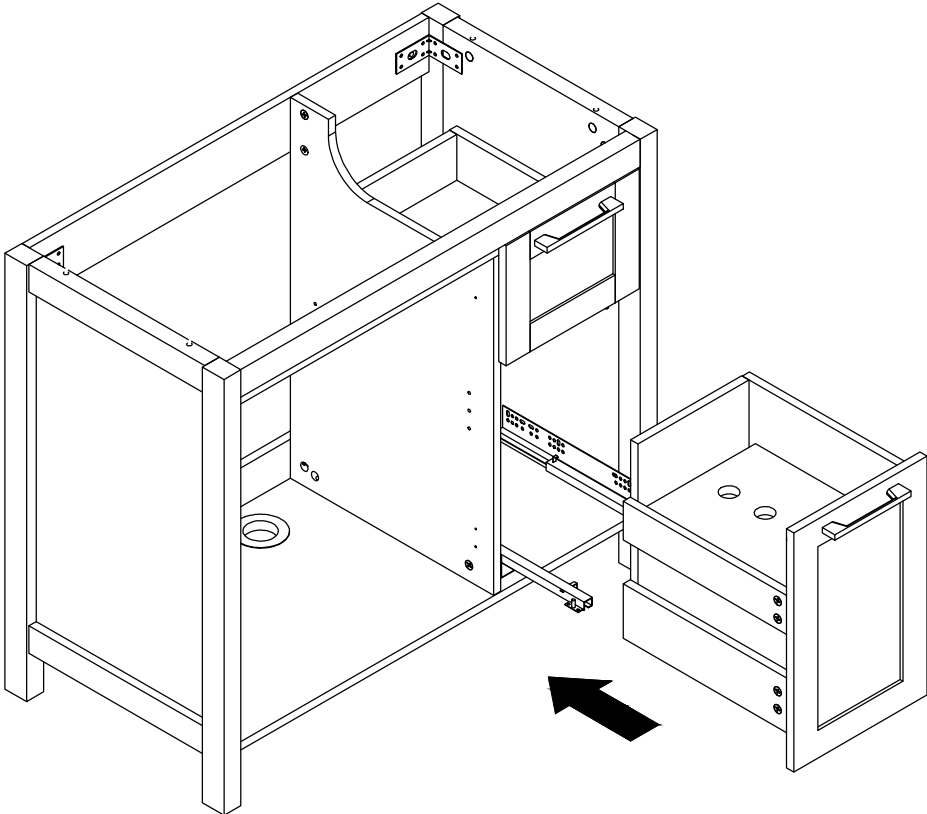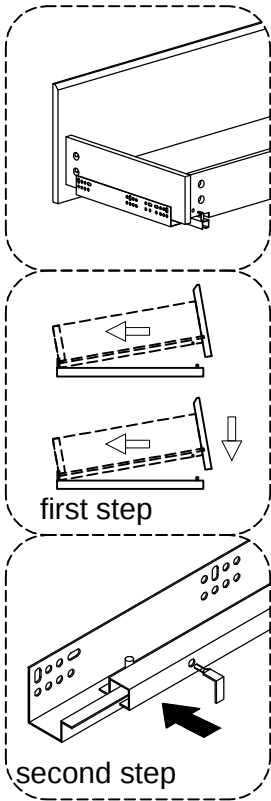

STEP 28

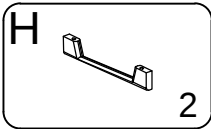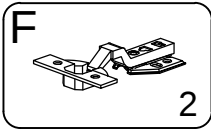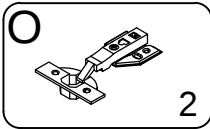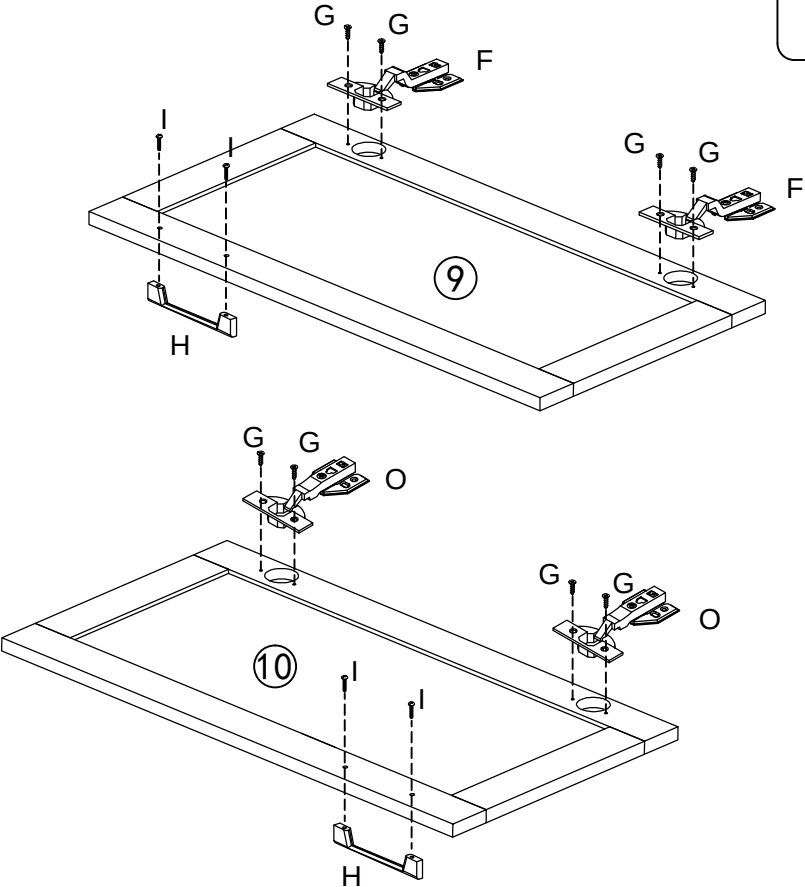


STEP 29

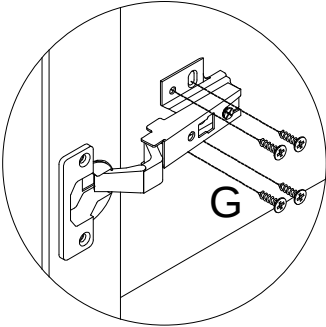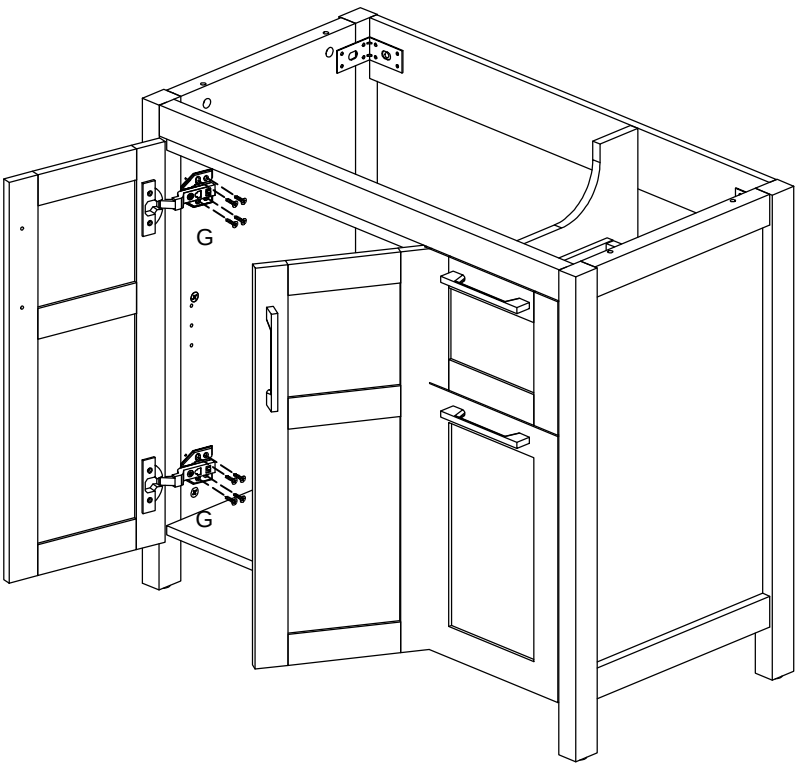

# STEP 30


## Sideways/Gap Adjustment

Turning the screw “2” on the hinges of each door allows you to adjust the door to the left or right by a few millimeters.

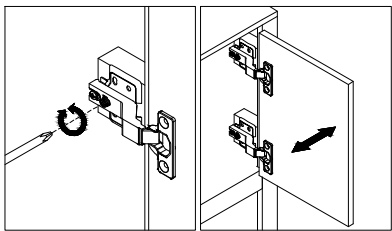



## Forward/Backward Alignment

Loosen screw “1” to adjust the door forward or backward. After adjustment, Tighten screw “1”.

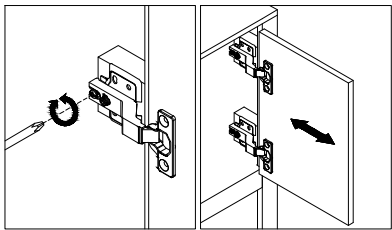

## Vertical Height Adjustment




Loosen screw “3” to adjust the door up or down. After adjustment, hold the door panel and tighten screw “3”.

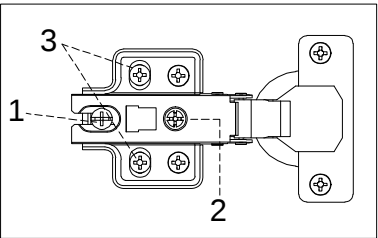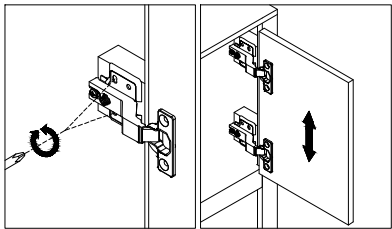


## Hinge Adjustment Guide

Three-way adjustable hinge for perfectly aligned doors

# STEP 31

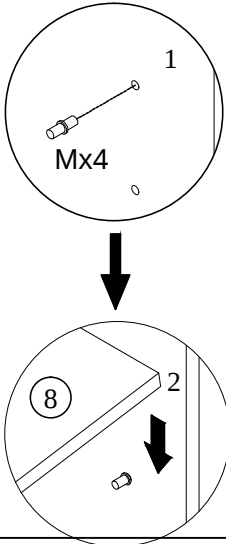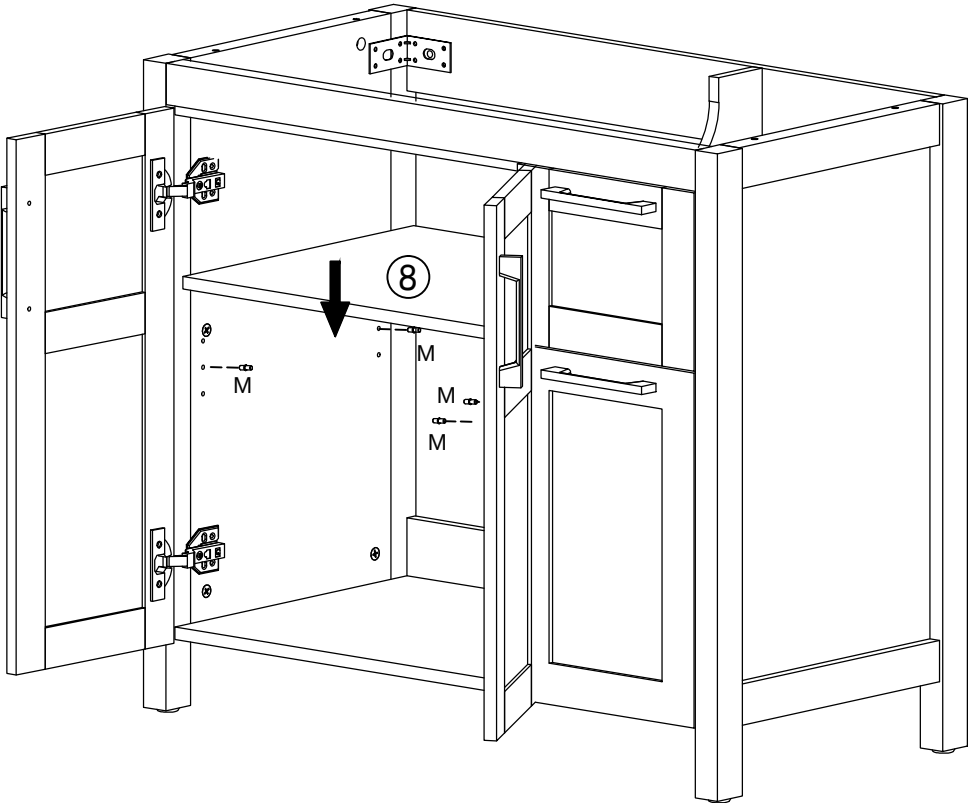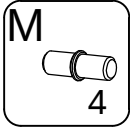

## STEP 32

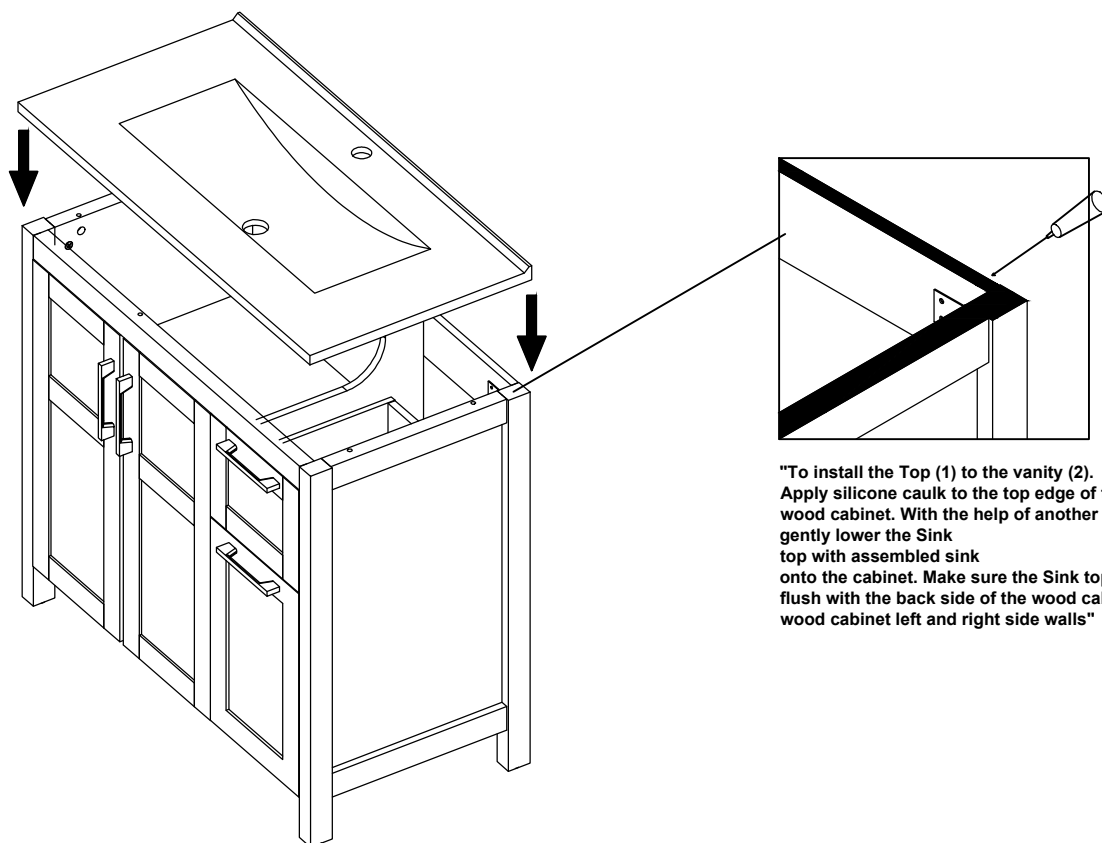

"To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls"

## STEP 33

