




Assembly Instruction

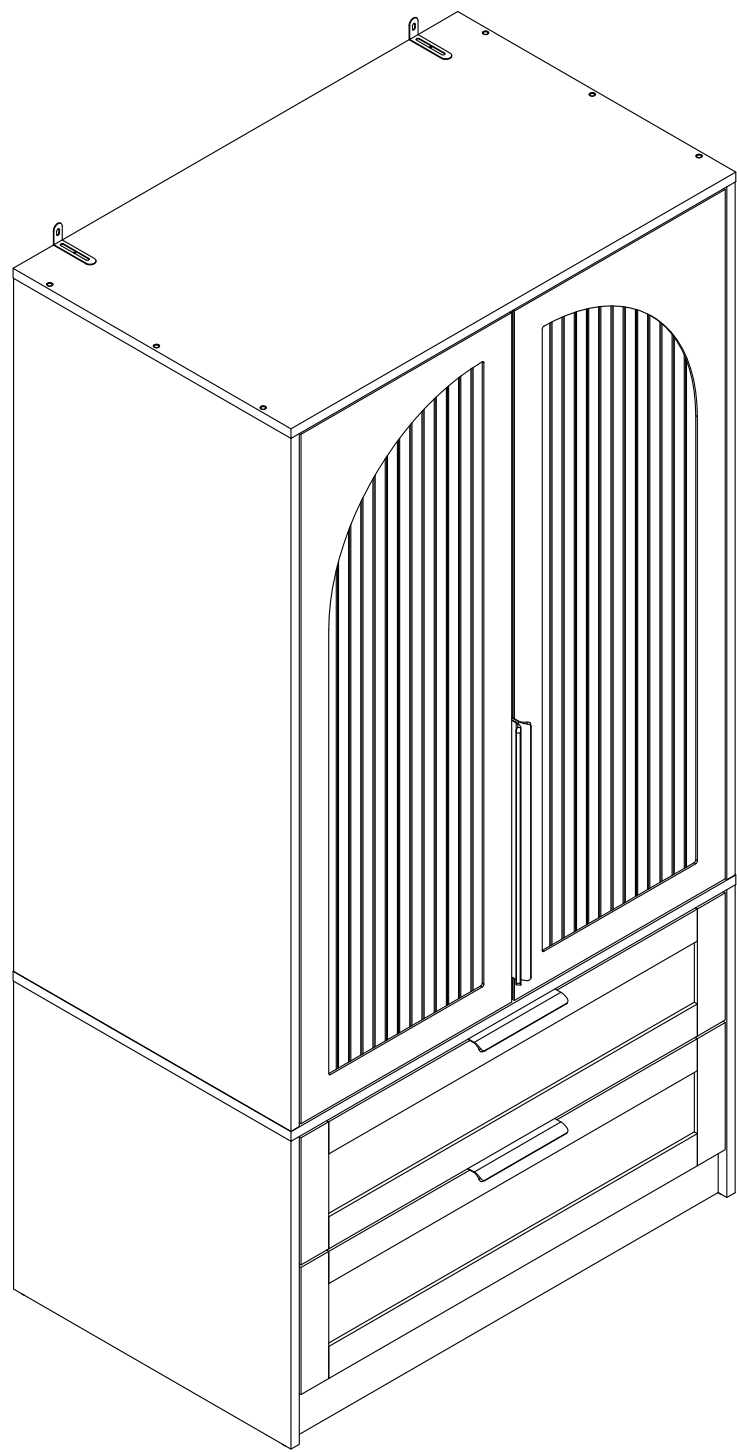


HINGE INSTRUCTIONS

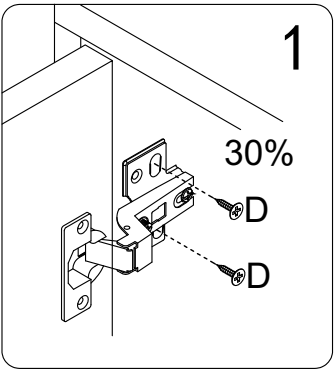


Tighten the screws only 30% as long as the door can be secured.

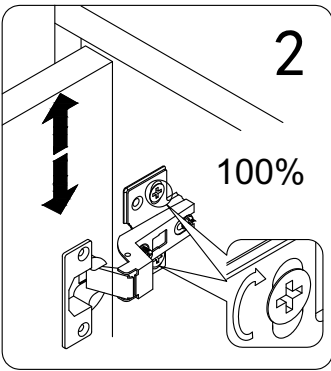


Move the door up and down until it is centred, then tighten the screw 100%.

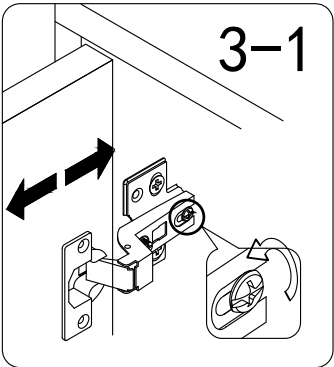


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's aligned to side board.

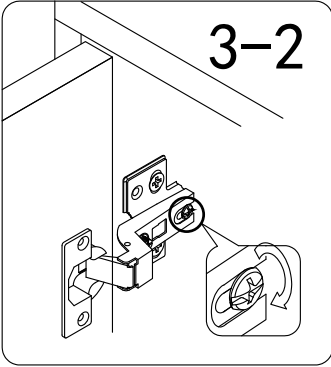


Tighten the screw **clockwise** once the door is **aligned**.

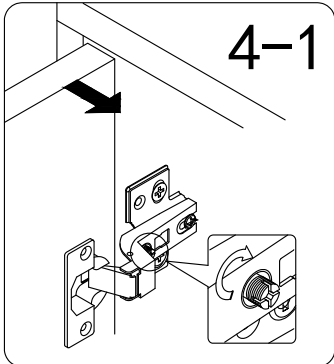


To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

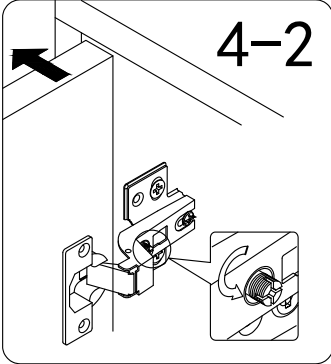

To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.


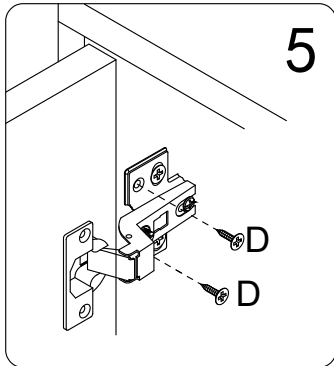






















After adjusting the doors properly above, finally tighten these two screws and secured the door.

A	X38	B	X38	C	X2	D	X48	E	X1	F	X12	G	X13	H	X2
															
M6x35mm						M3.5x14mm		4mm		M5x40mm					
I	X2	J	X8	K	X12	M	X2	N	X2	O	X6	P	X2	Q	X1
															
				M4x35mm								M4x12			
S	X2	T	X18	U	X16	V	X2	W	X20	L	X2	R	X2		
															
M3x12mm		M3x16mm						M3.5x12mm							


Cam Lock Fastening System

Insert the cam bolt into the hole first,then insert the cam lock and lock it.

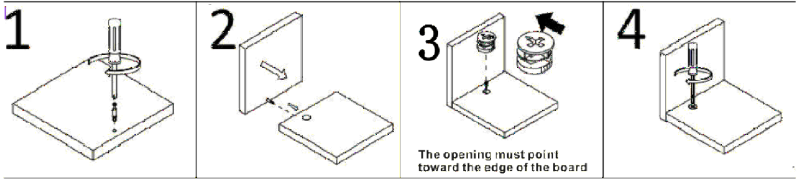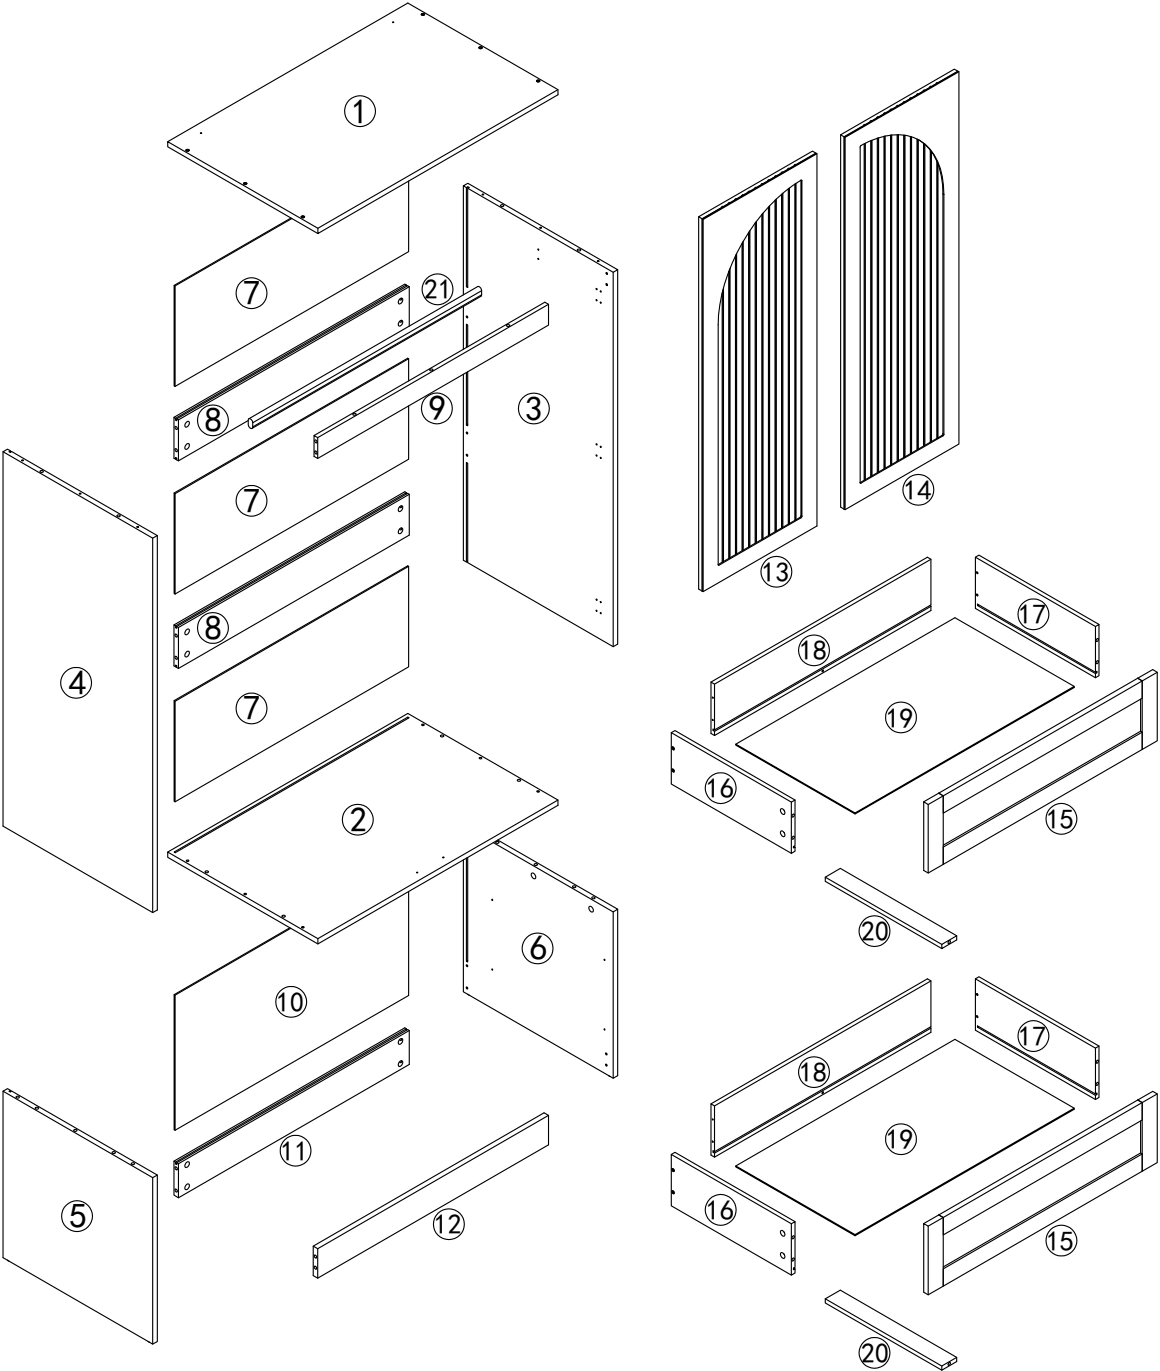

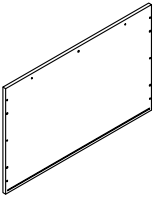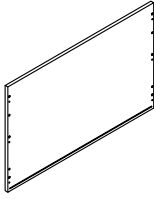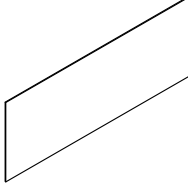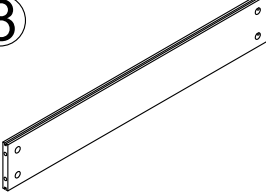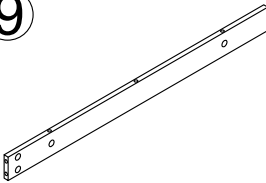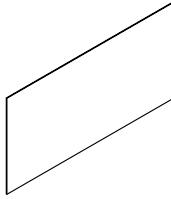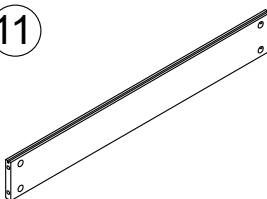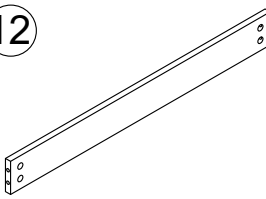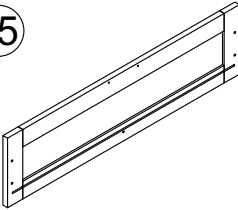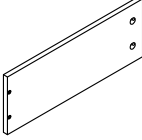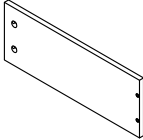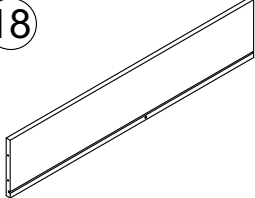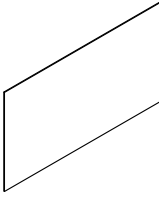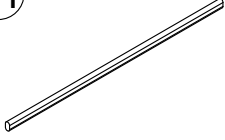①		②		③		④	
1PC		1PC		1PC		1PC	
⑤		⑥		⑦		⑧	
1PC		1PC		3PCS		2PCS	
⑨		⑩		⑪		⑫	
1PC		1PC		1PC		1PC	
⑬		⑭		⑮		⑯	
1PC		1PC		2PCS		2PCS	
⑰		⑱		⑲		⑳	
2PCS		2PCS		2PCS		2PCS	
㉑							
1PC							

1

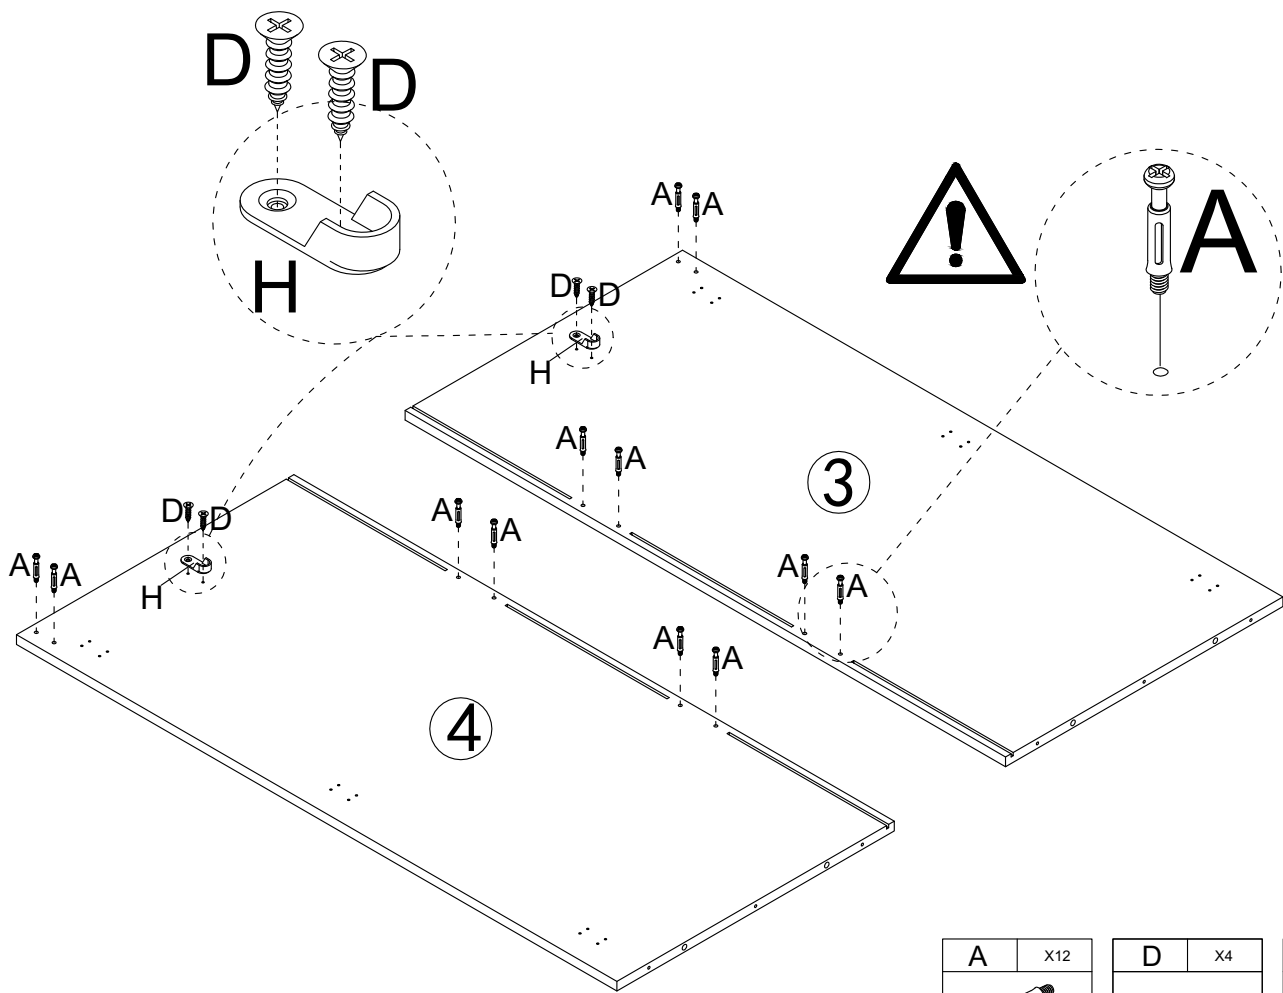


A	X12
	
M6x35mm	


D	X4
	
M3.5x14mm	

H	X2
	

2

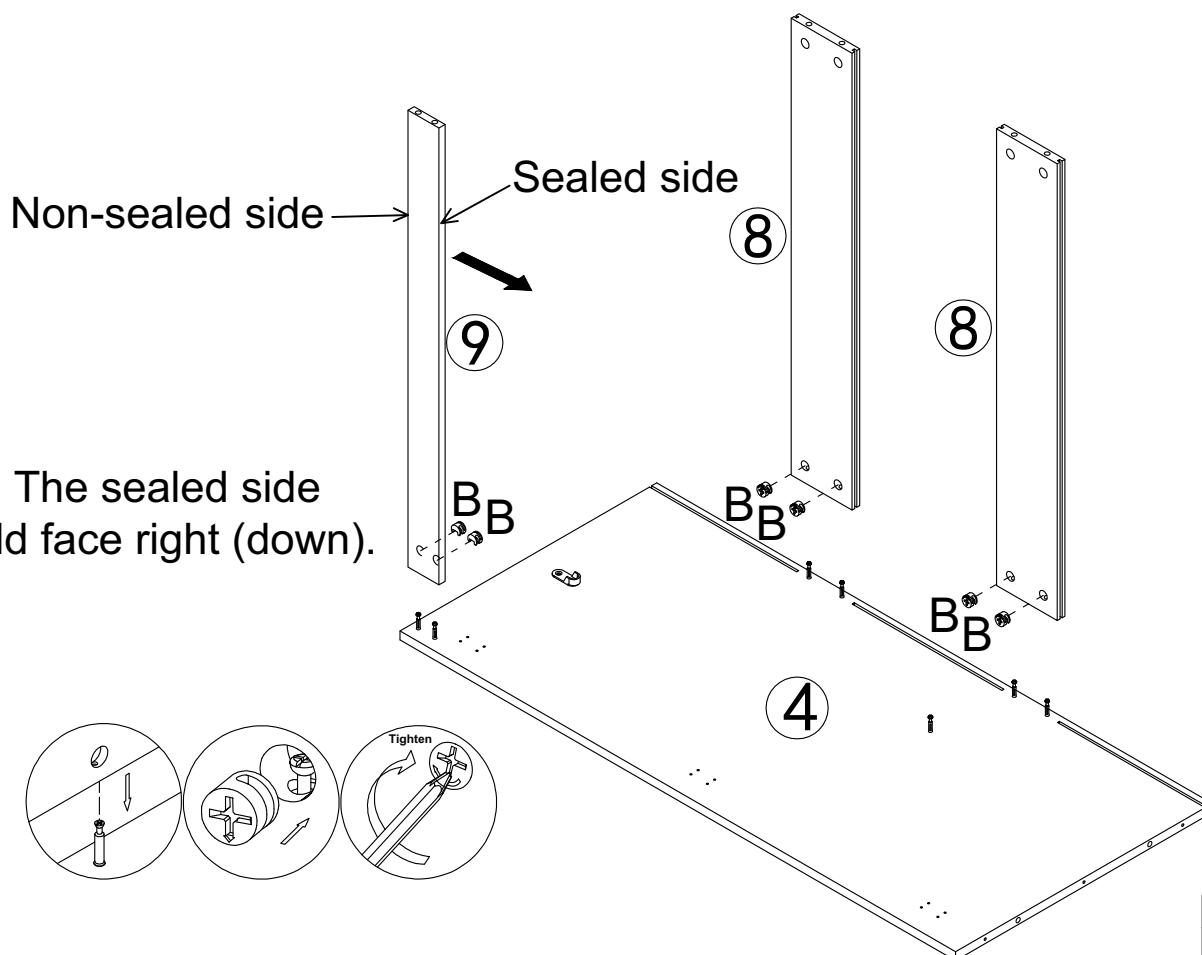


Note:
Note: The sealed side
should face right (down).


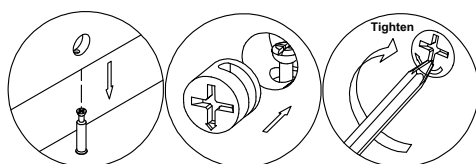


B	X6
	

3

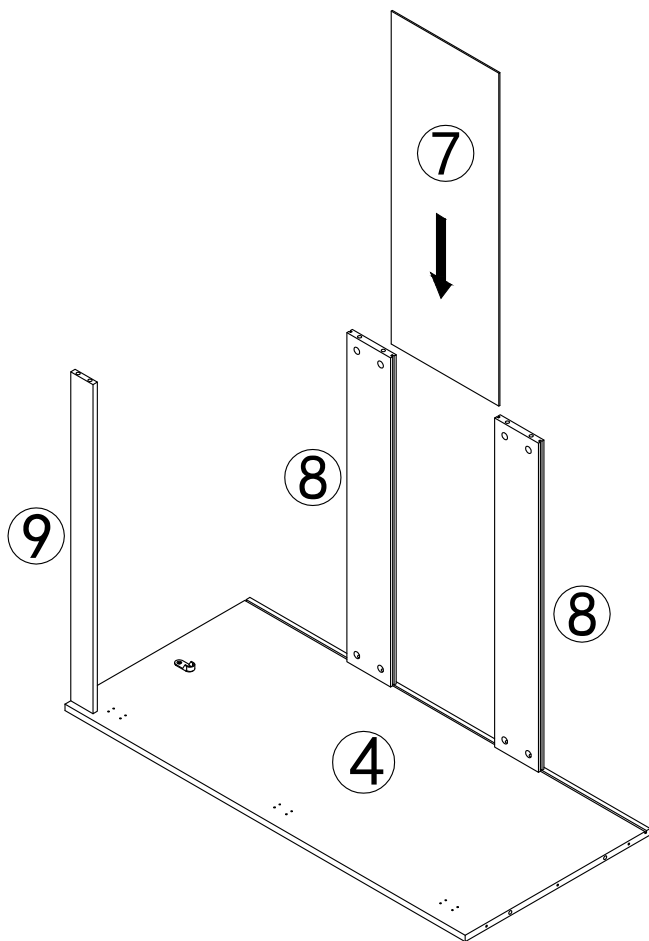


4

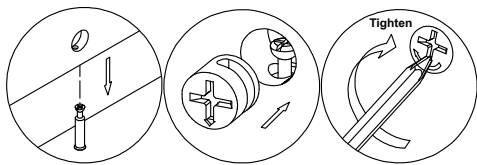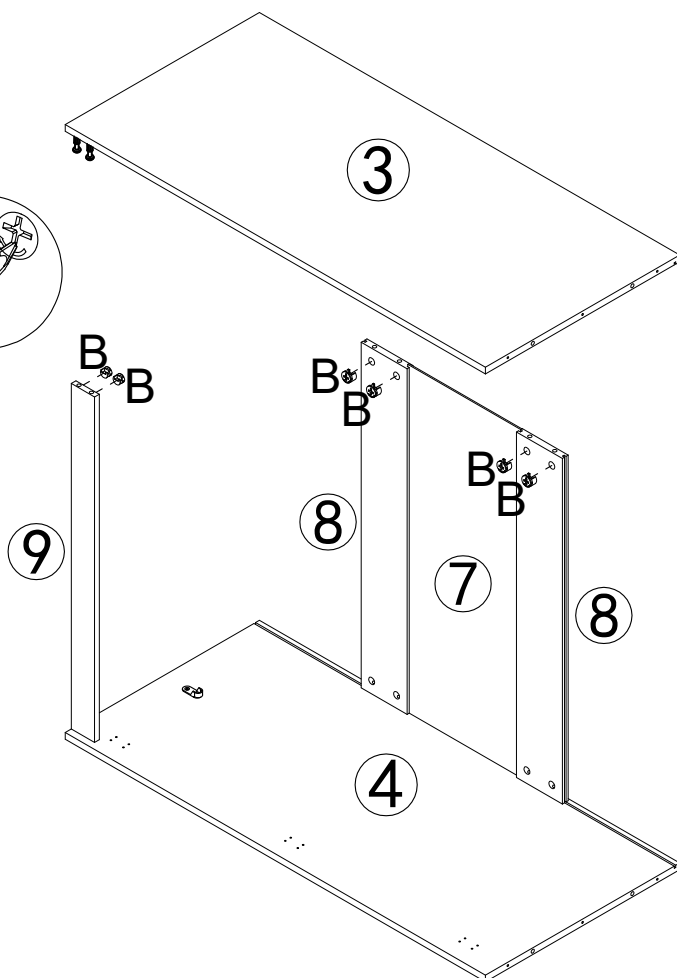


B	X6
	

5

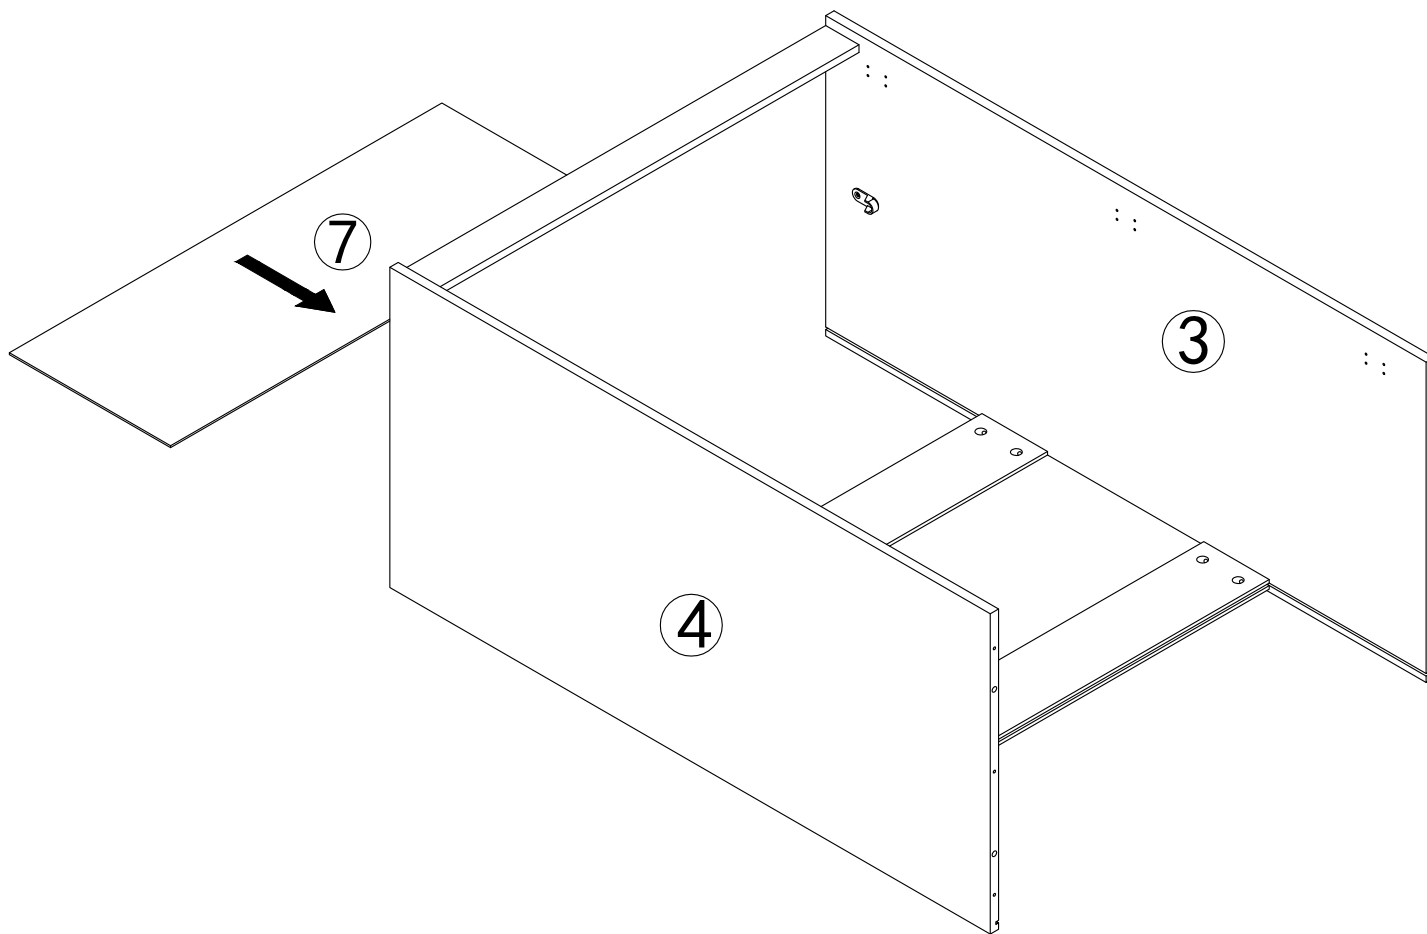

6


Flip the board over to the other side to screw A.

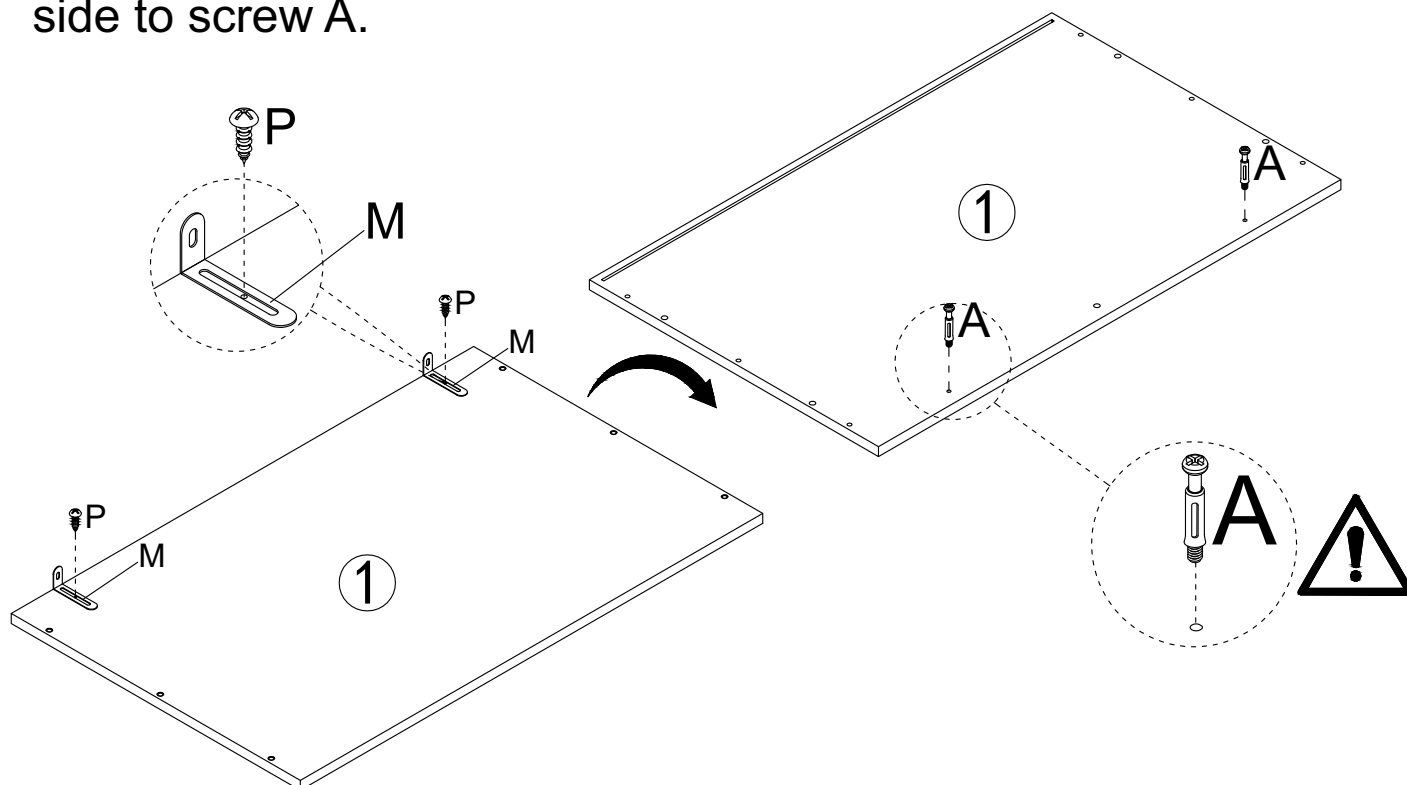


A	x2	M	x2	P	x2
					
M6x35mm				M4x12mm	

7

Insert wooden falcons G to board 3 and board 4 first, then lock board 1 to board 3 and board 4 with screw F.

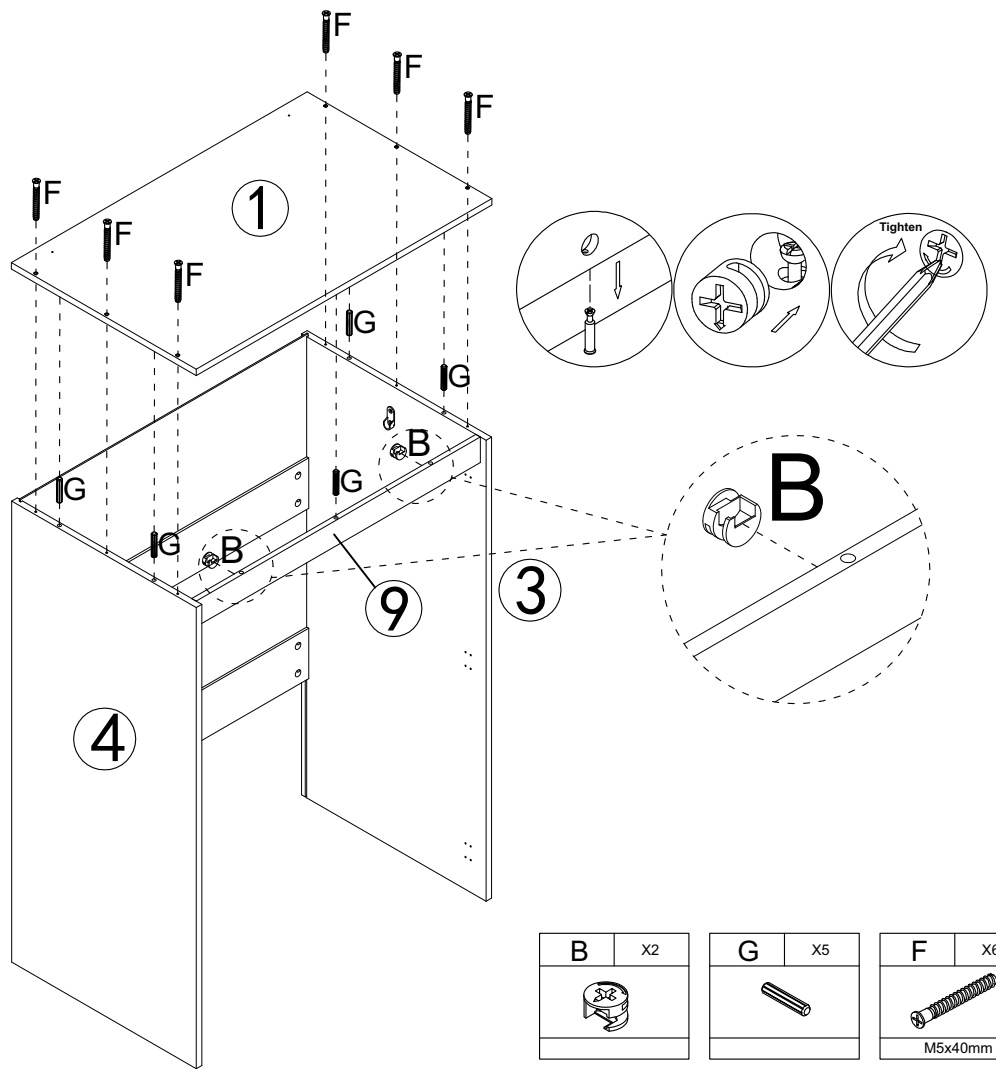


8

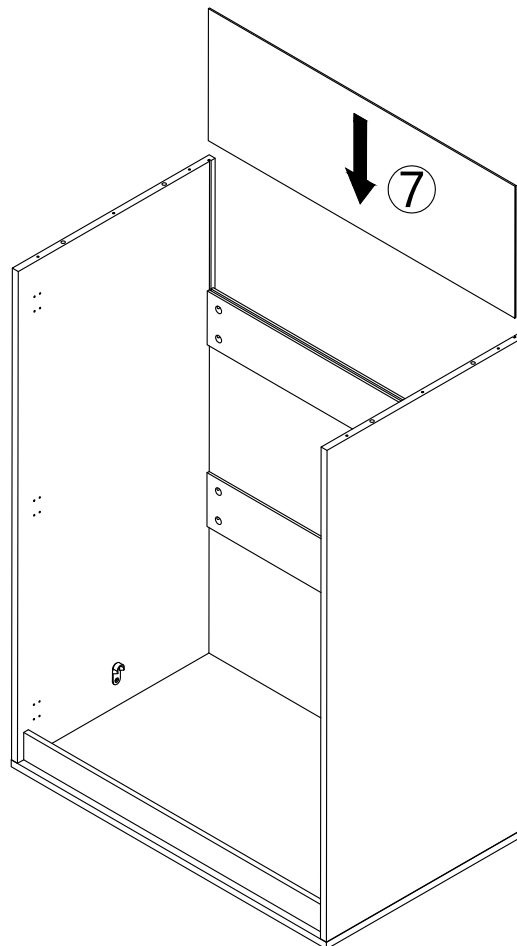


9

Once lock sparepart Q, flip the board 2 over to the other side for screw A.

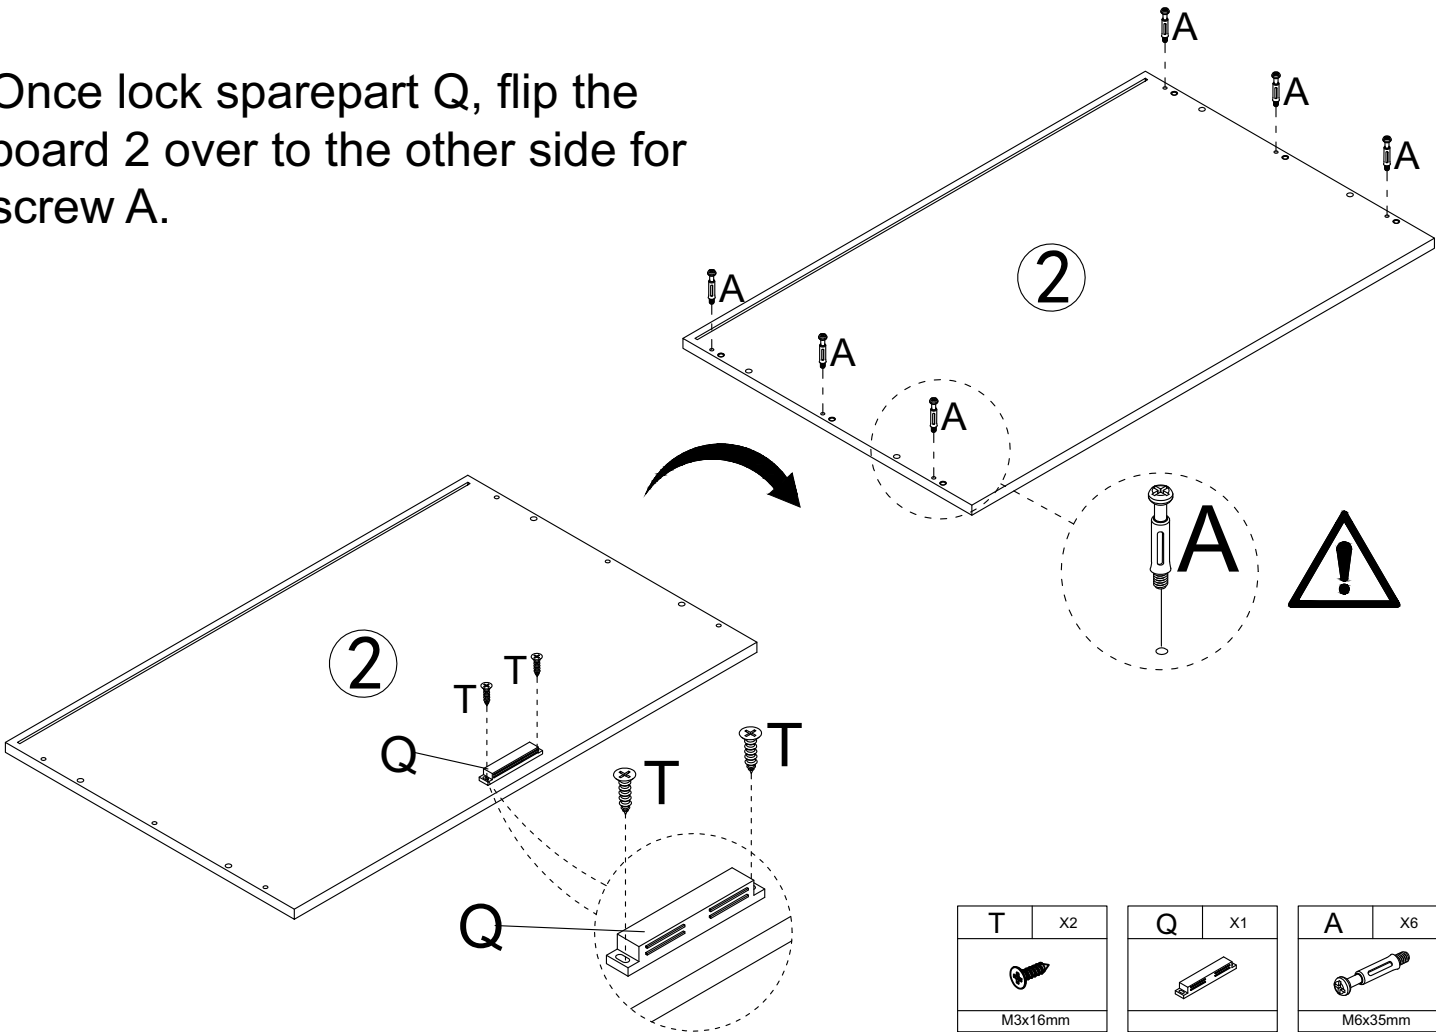


10

Insert wooden falcons G to board 3 and board 4 first, then lock board 2 to board 3 and board 4 with screw F.

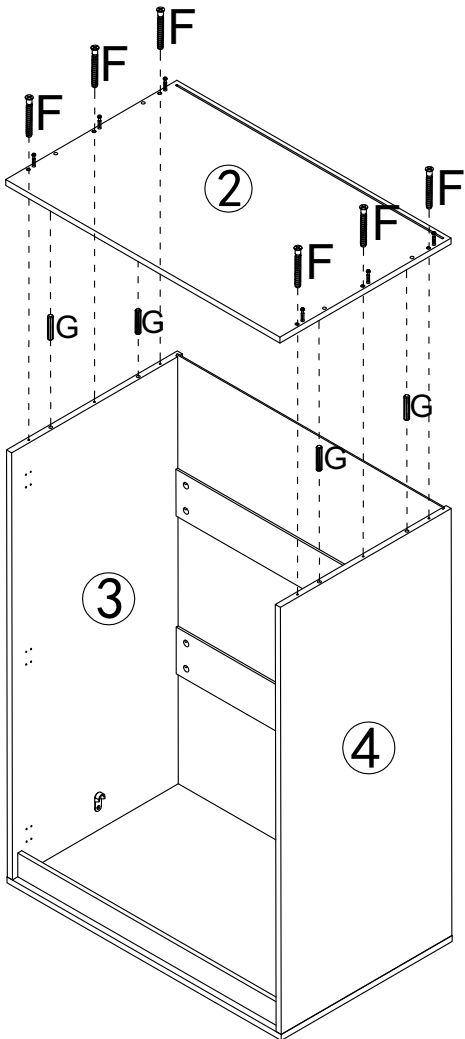


G	X4	F	X6
			
		M5x40mm	


11

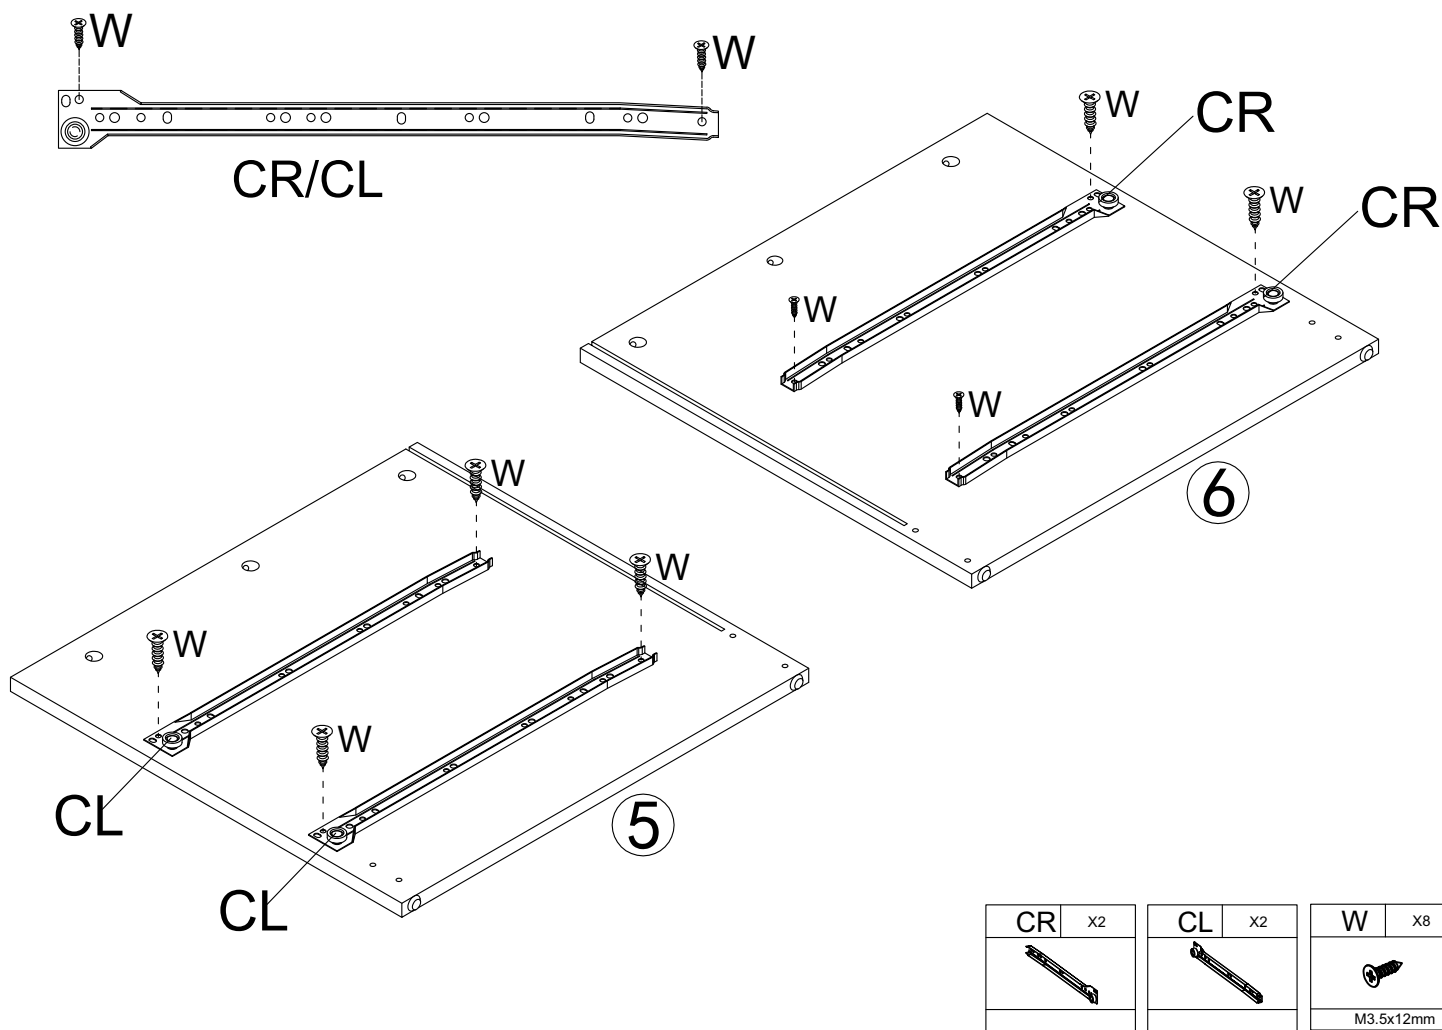

12

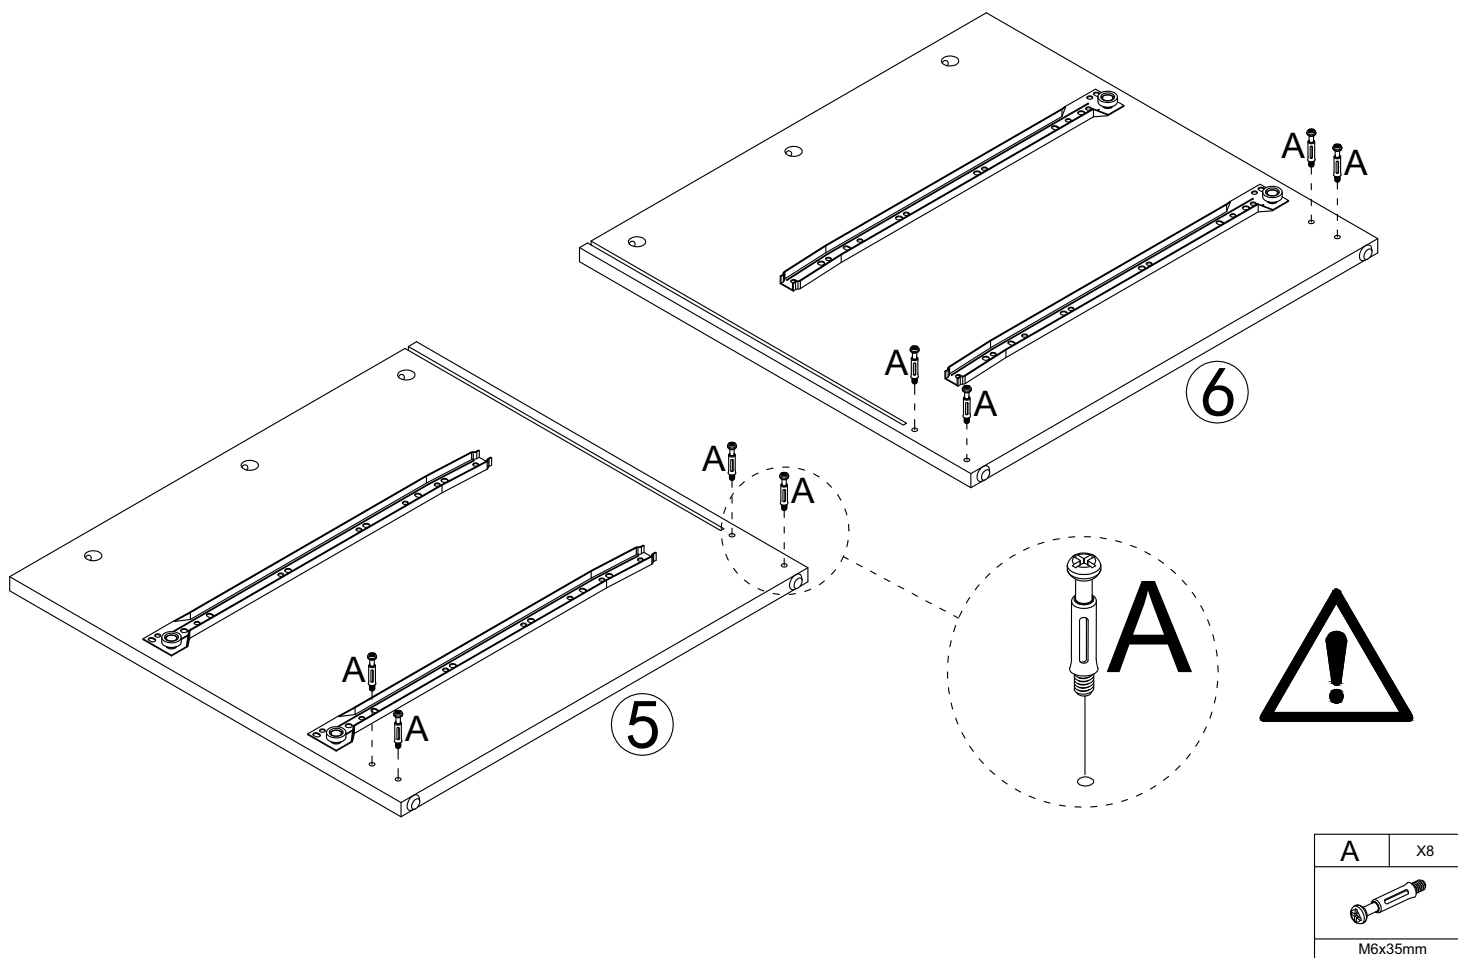


13

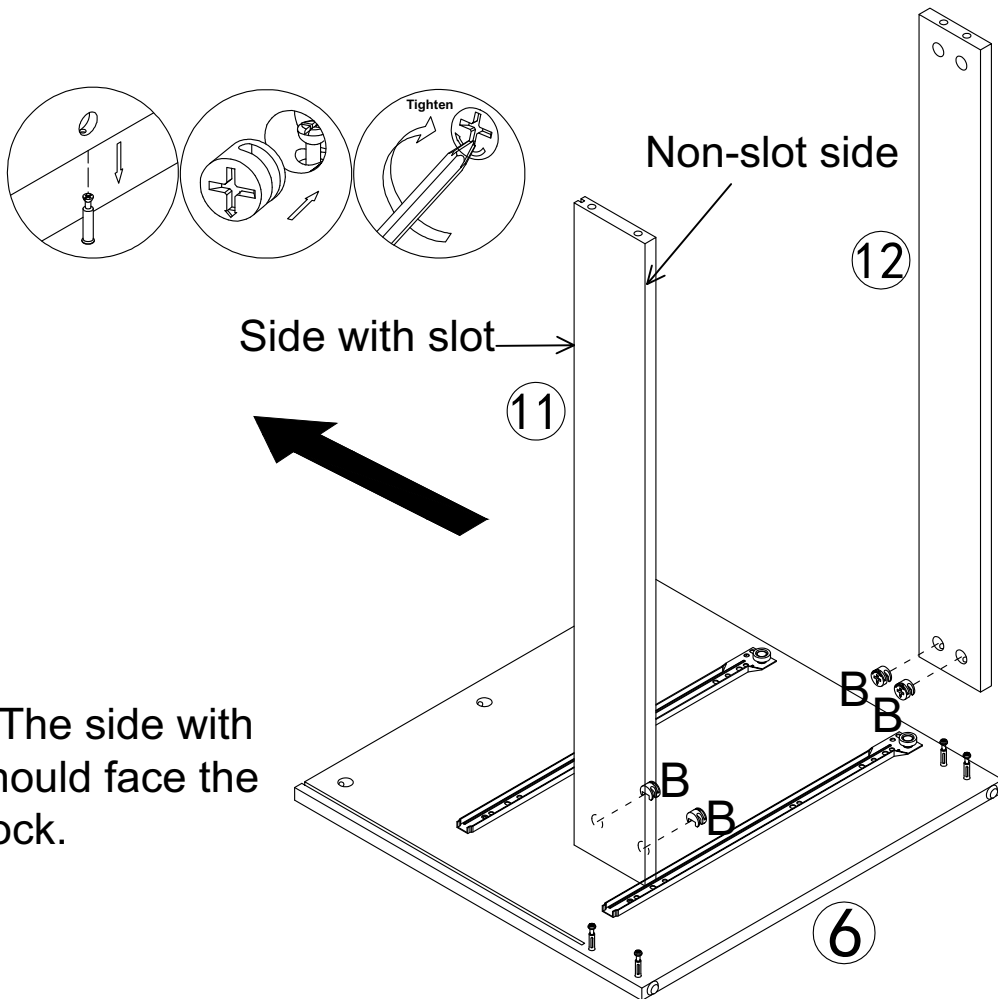

Note: The side with slot should face the cam lock.


B	X4

14

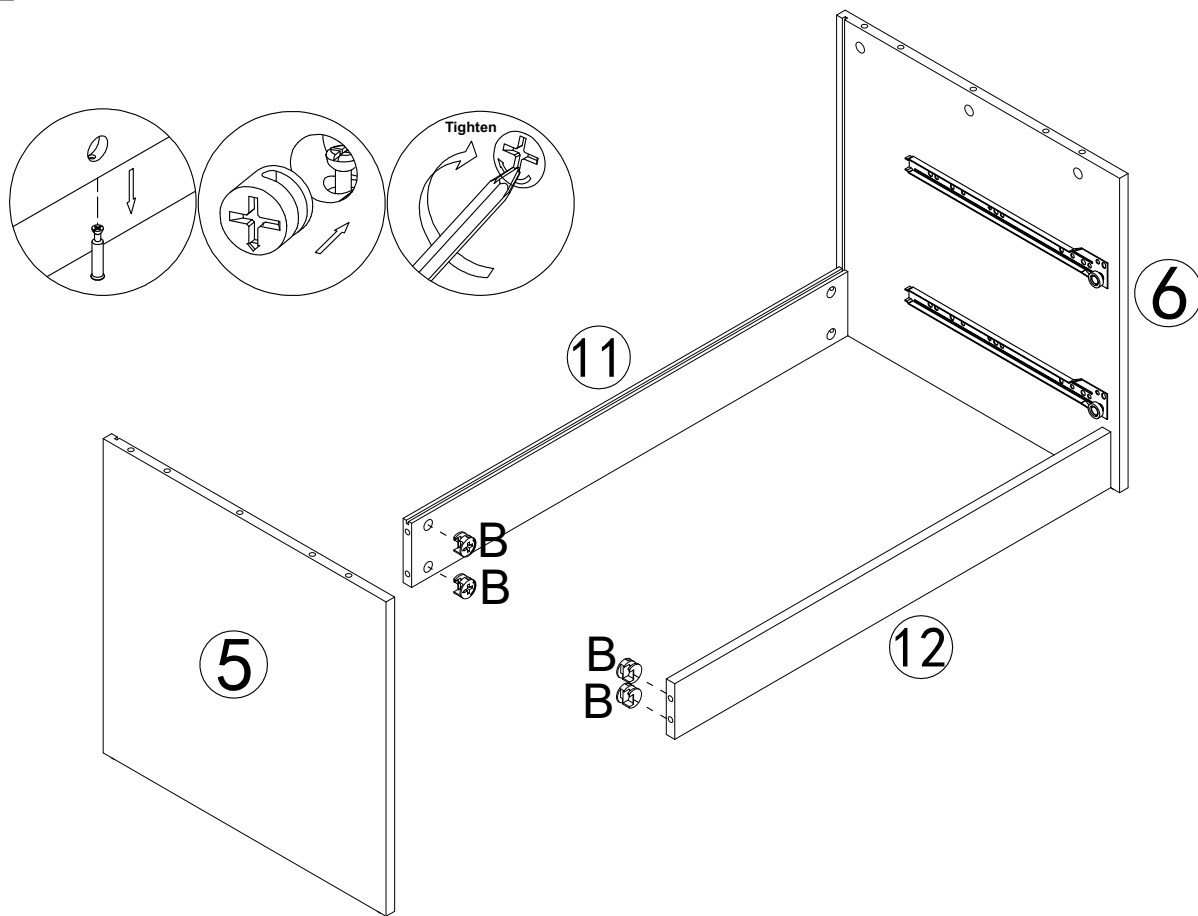


B	X4

15

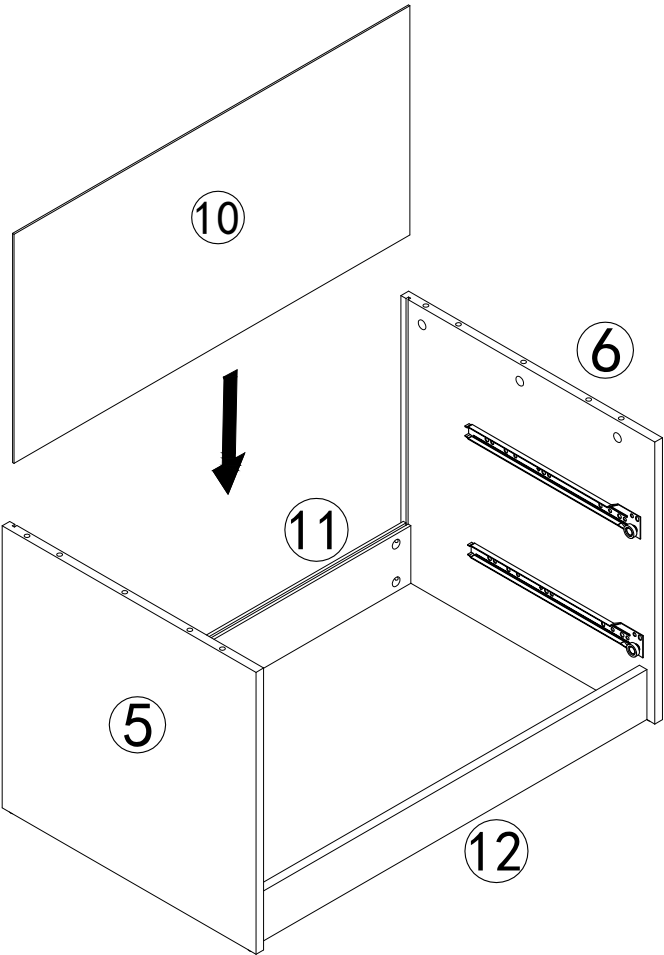


16


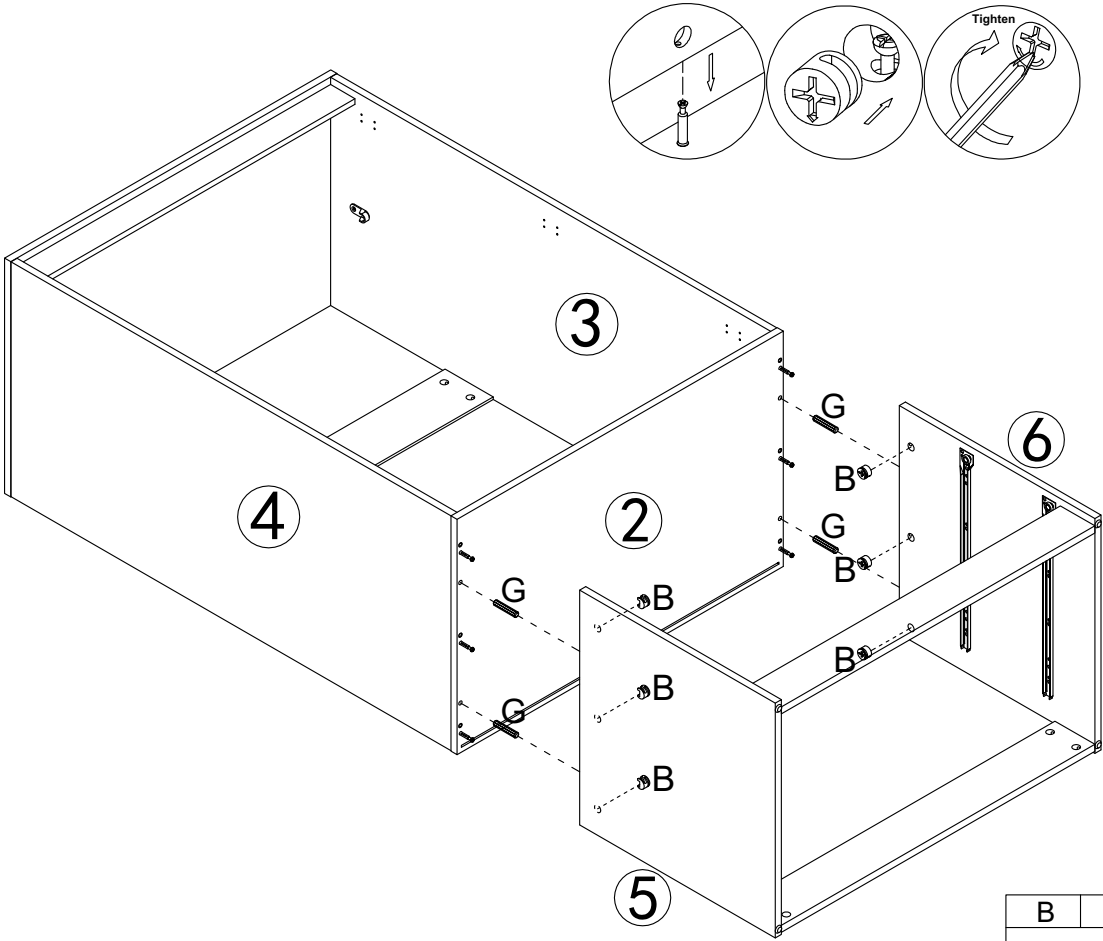


B	X6
	



G	X4
	

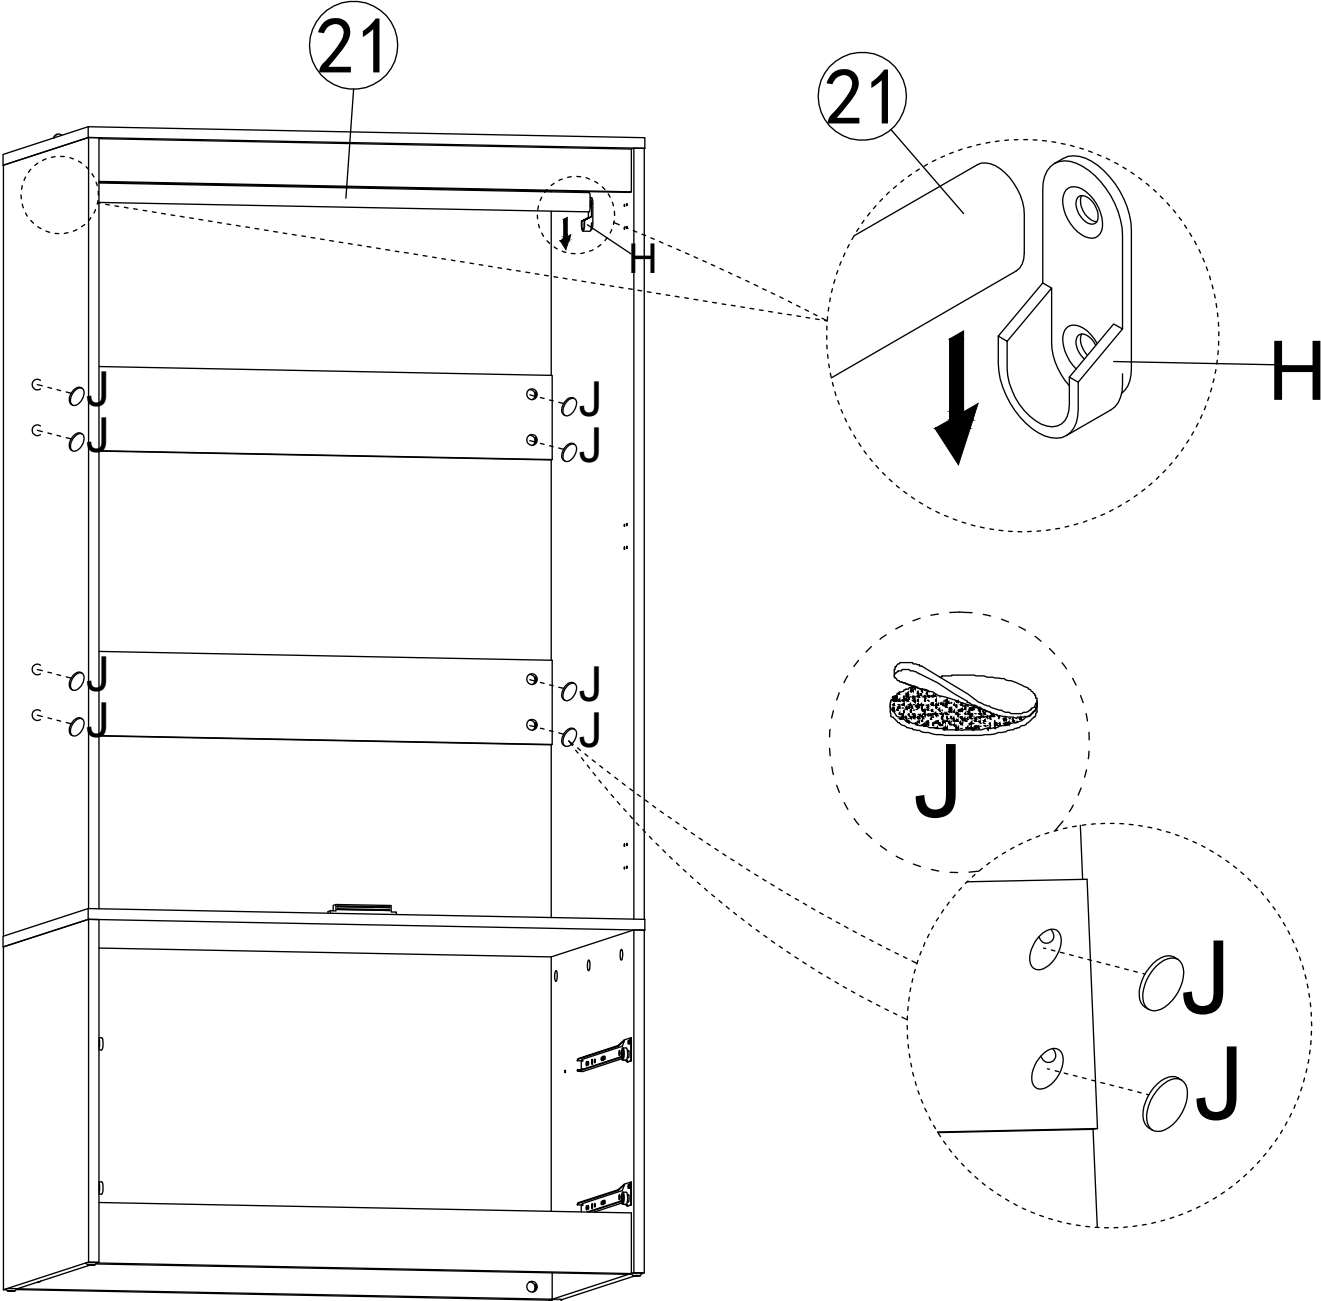



J	X8

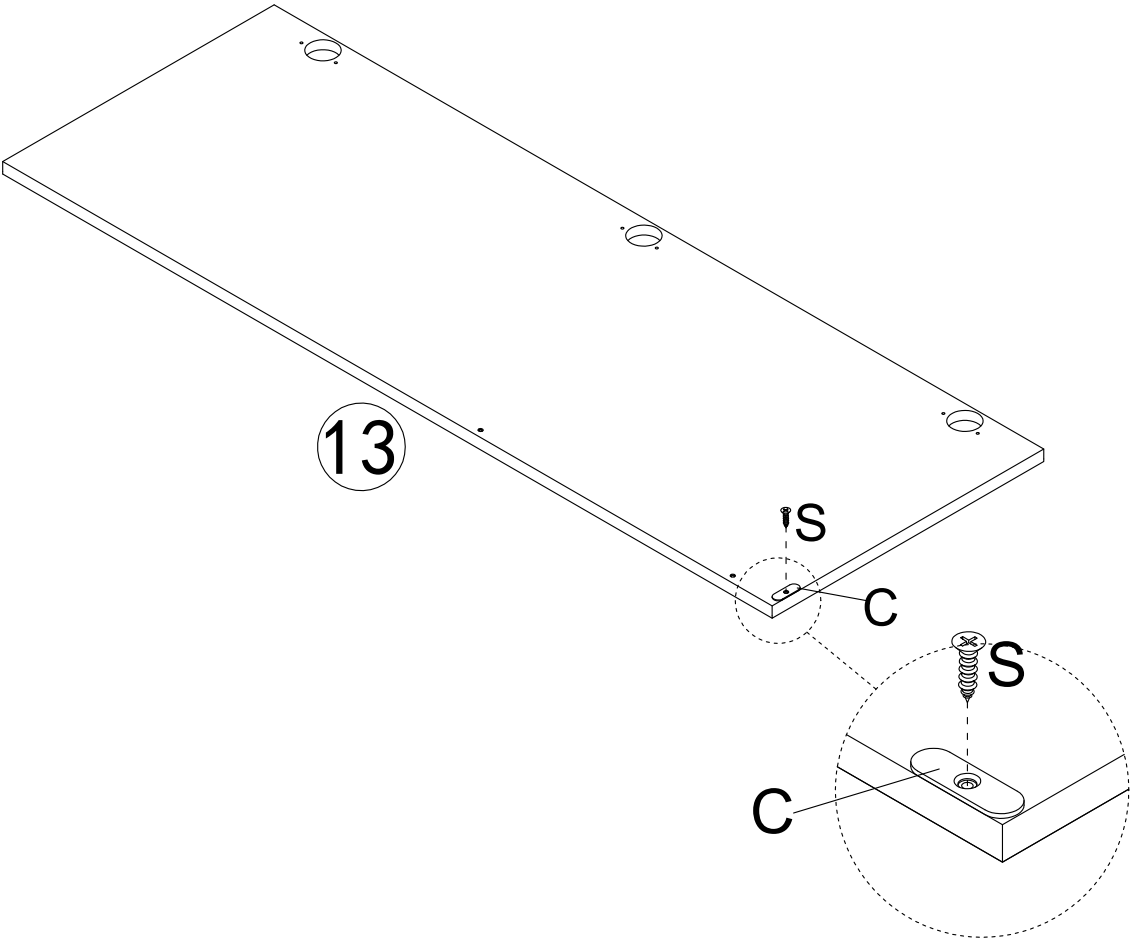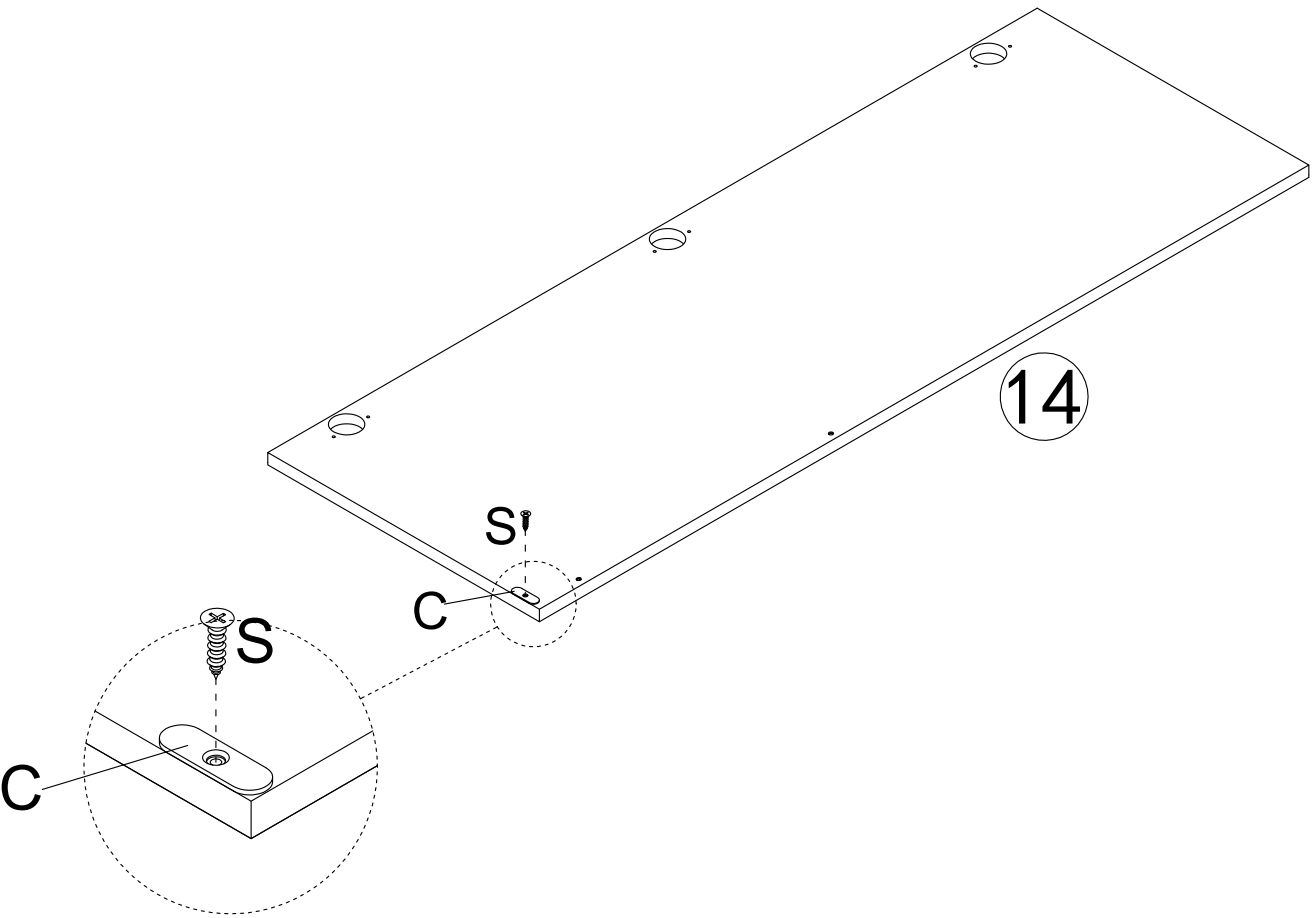

C	x2	S	x2
			
		M3x12mm	

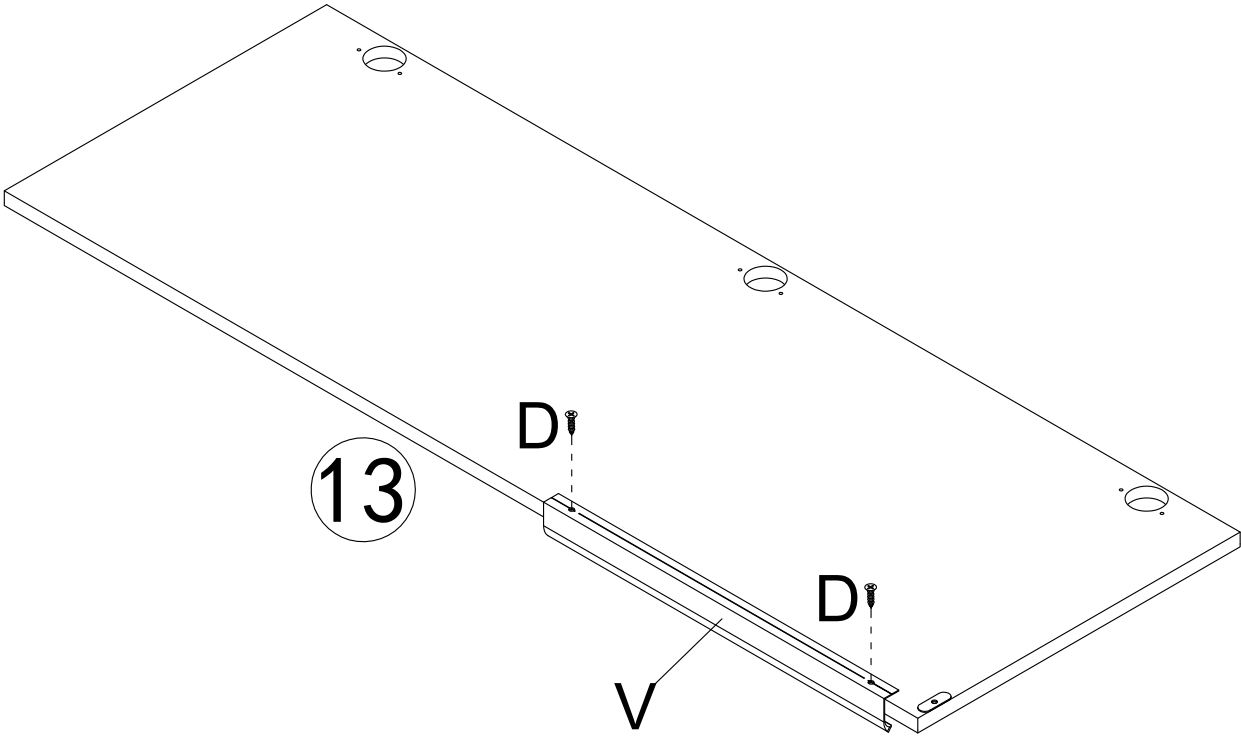
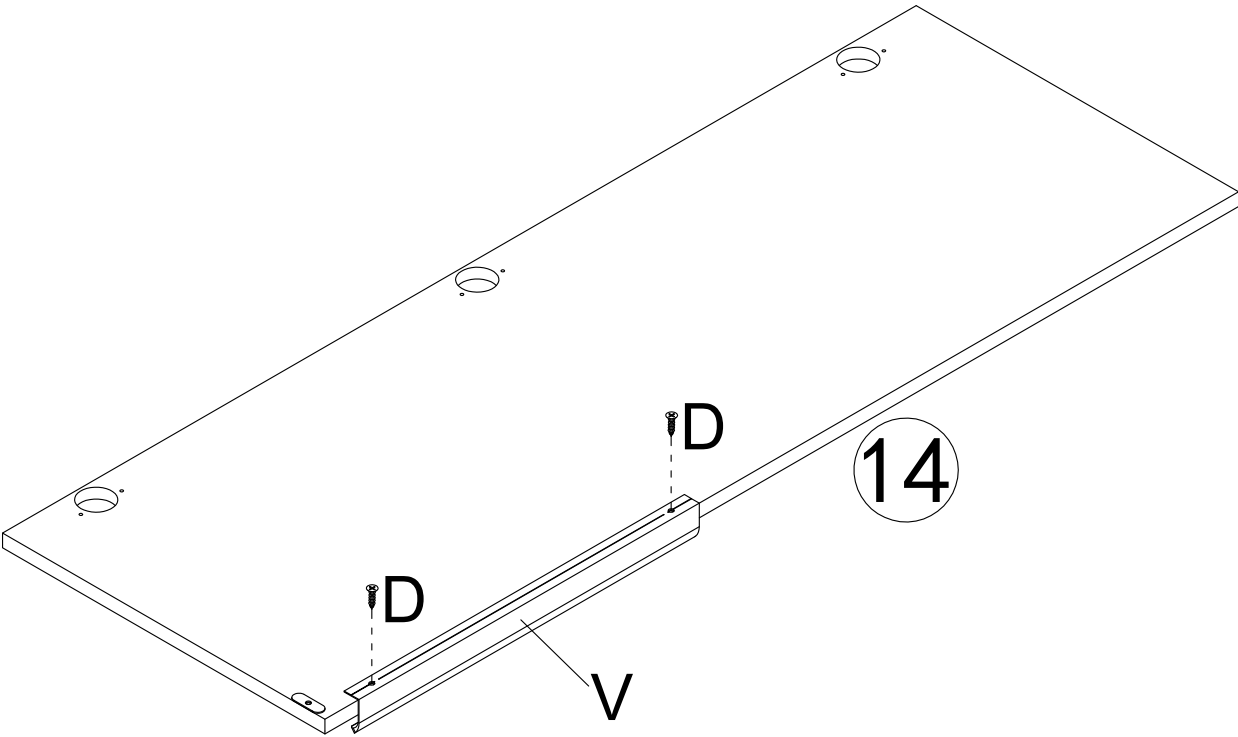


D	x4	V	x2
			
M3.5x14mm			

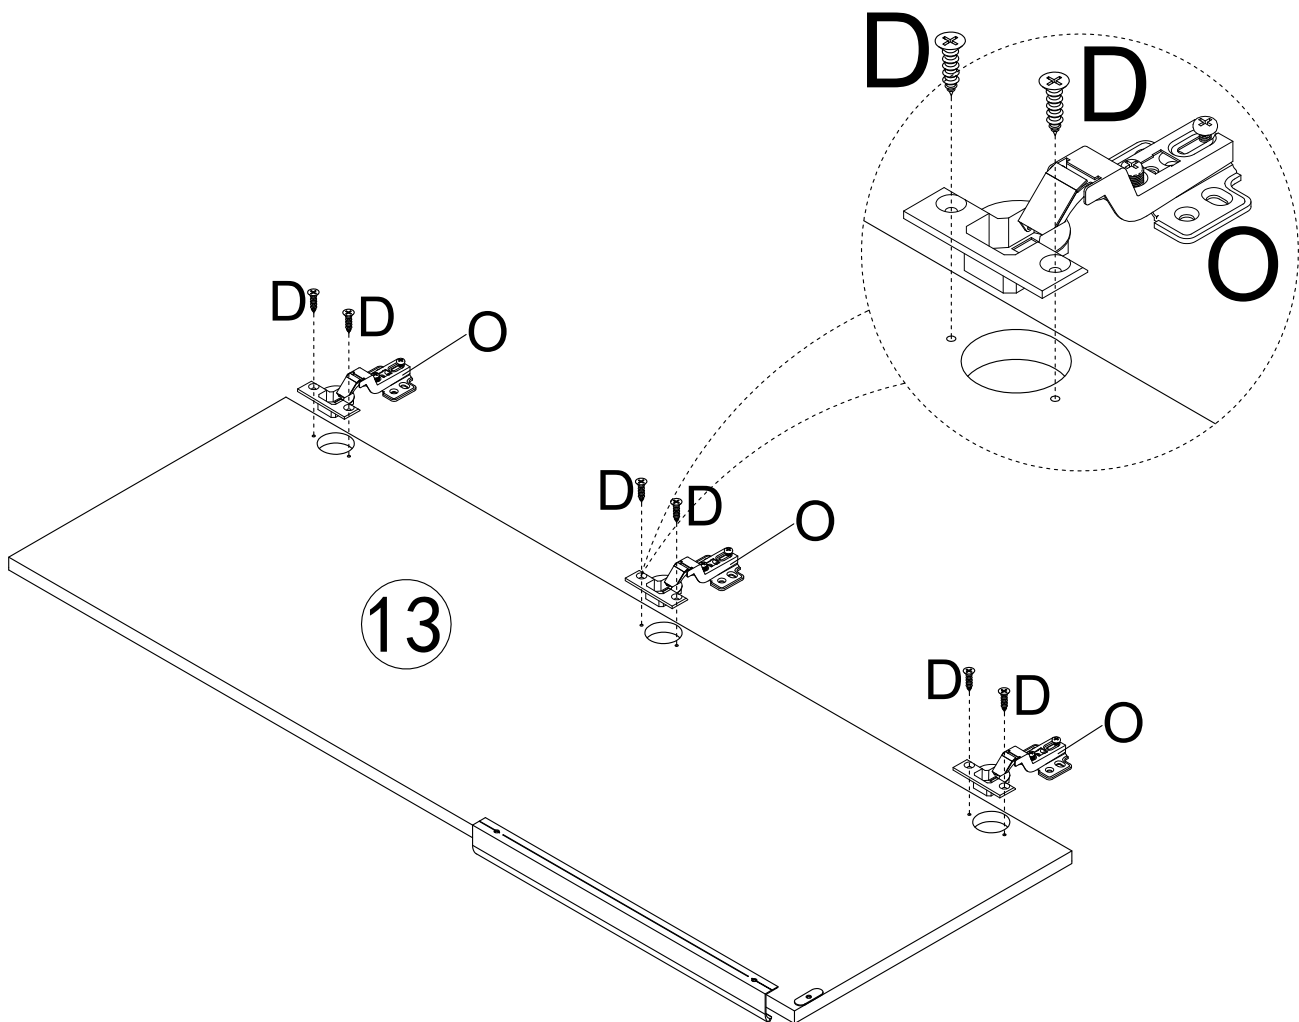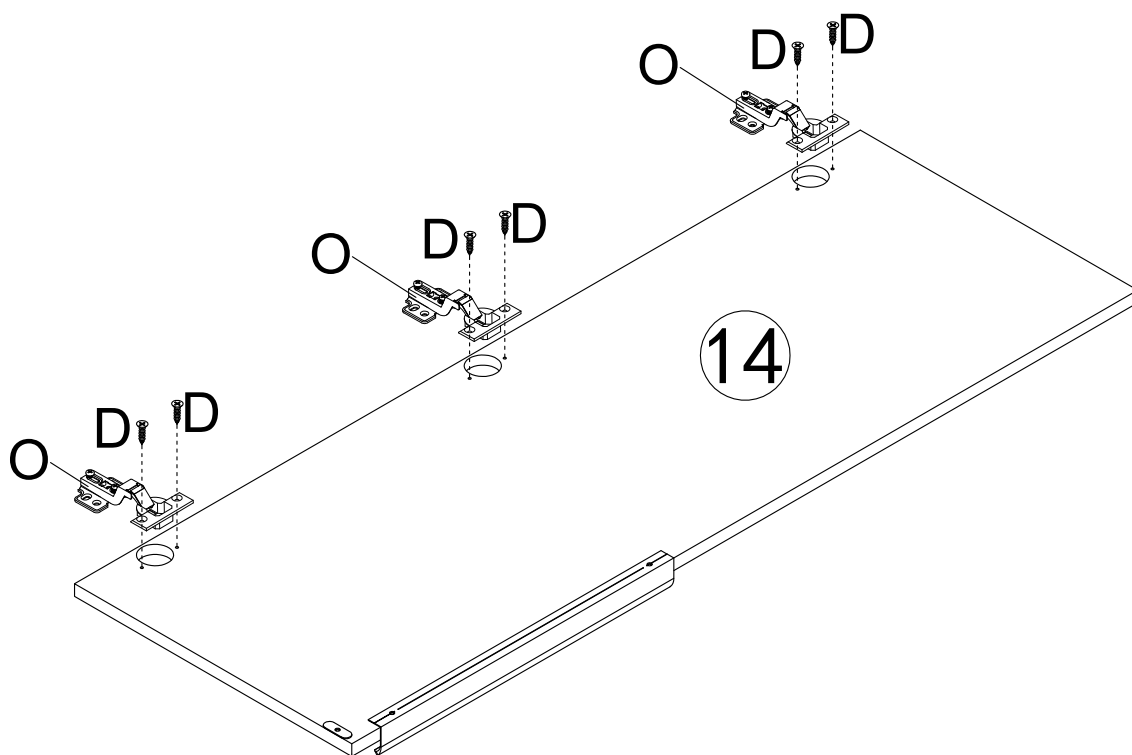


D	X12	O	X6
			
M3.5x14mm			


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

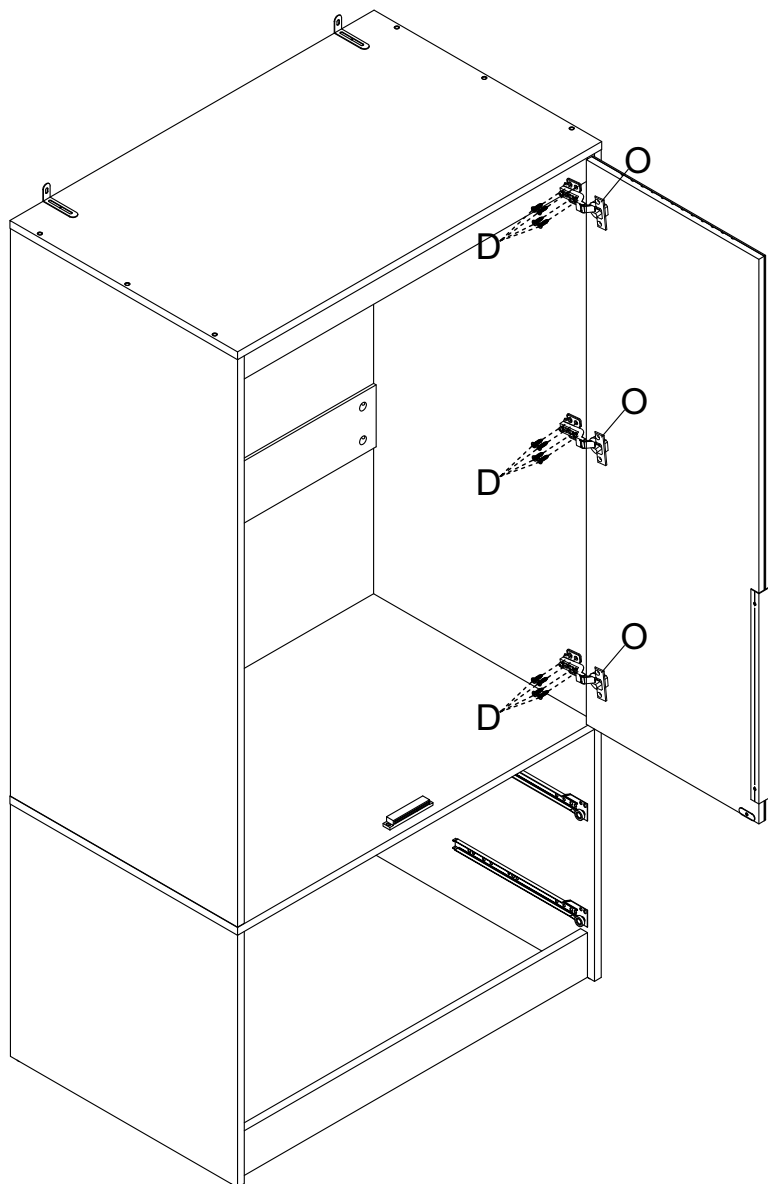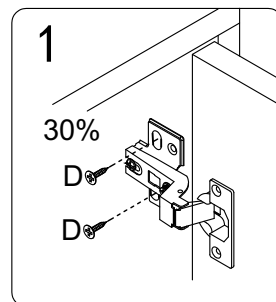


Tighten the screws only 30% as long as the door can be secured.

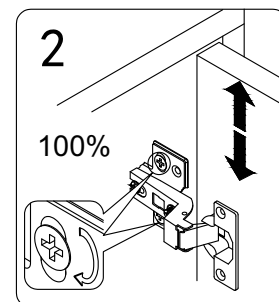


Move the door up and down until it is centred, then tighten the screw 100%.

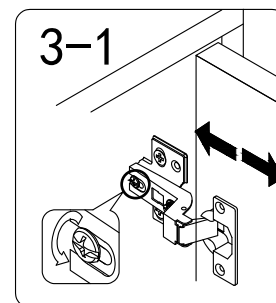


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

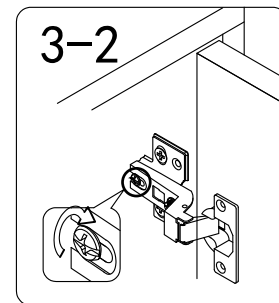


Tighten the screw **clockwise** once the door is **aligned**.

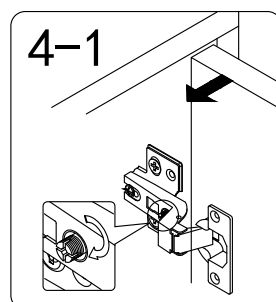

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

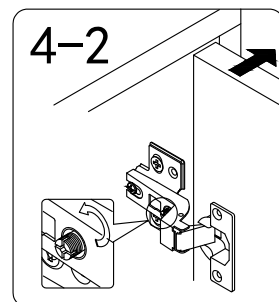



To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

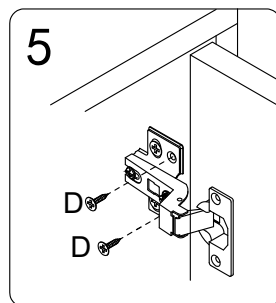


After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X12
M3,5x14mm	


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

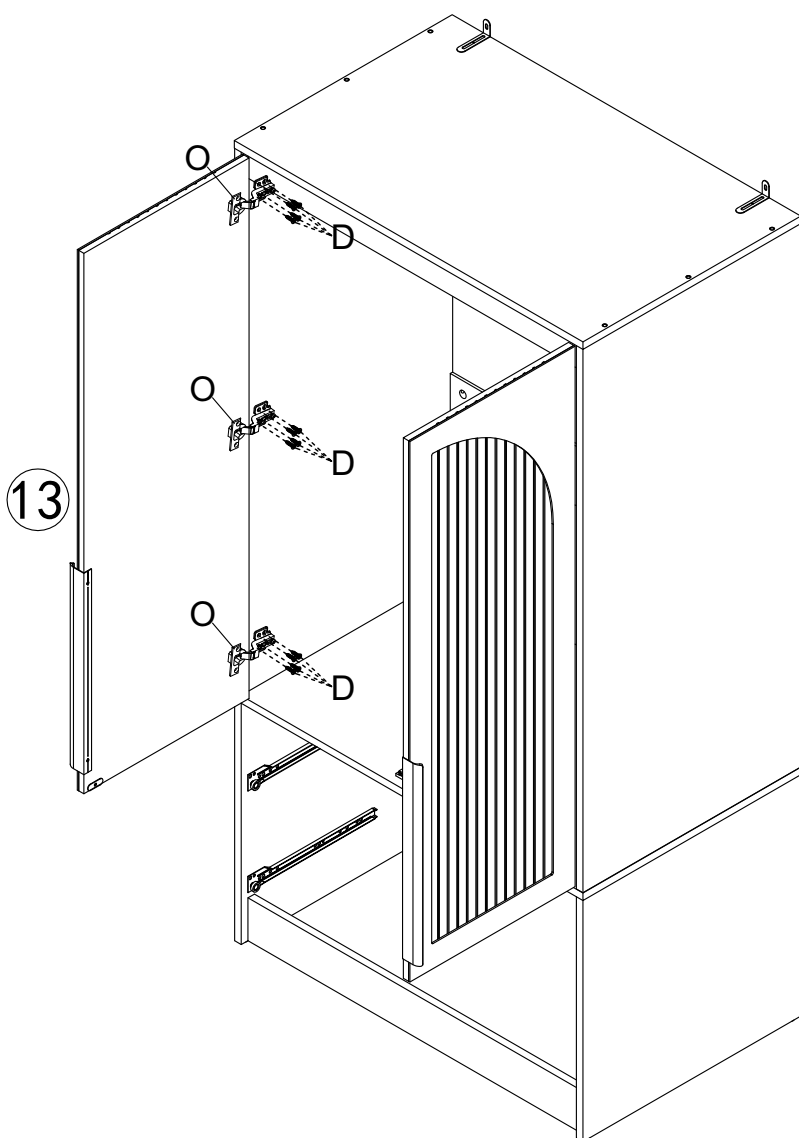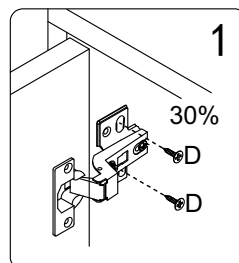


Tighten the screws only 30% as long as the door can be secured.

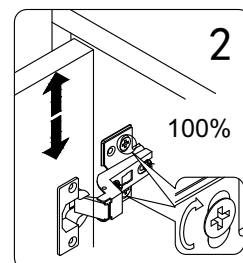


Move the door up and down until it is centred, then tighten the screw 100%.

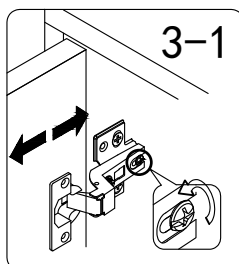


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

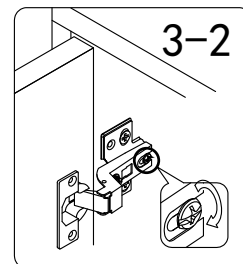


Tighten the screw **clockwise** once the door is **aligned**.

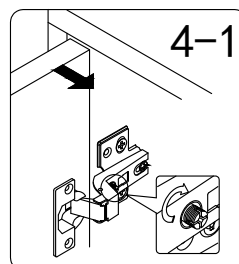

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

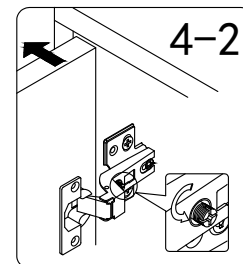


To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

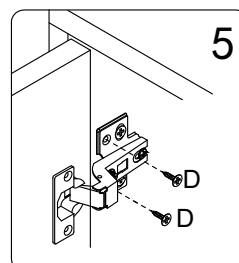

After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X12
M3.5x14mm	


23

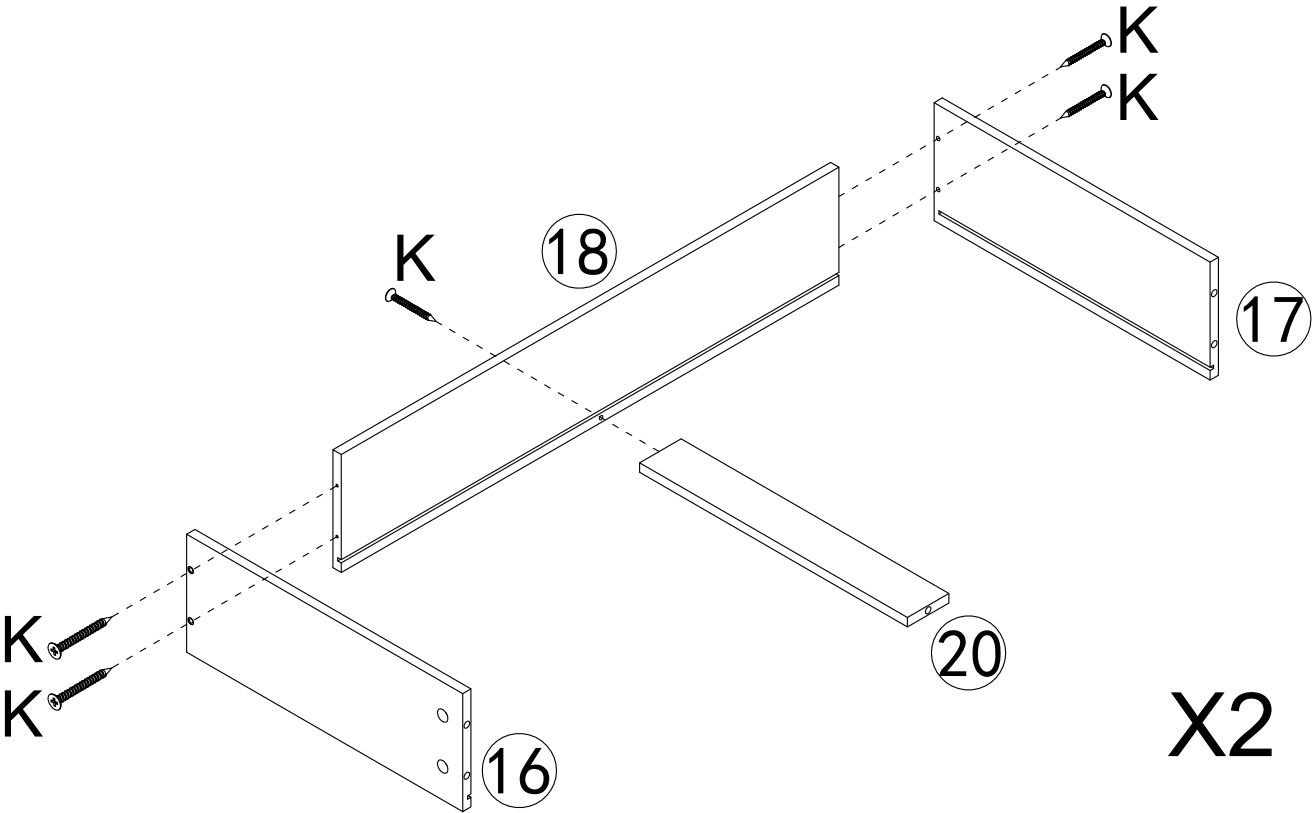

X2


K	X10
	
M4x35mm	

24

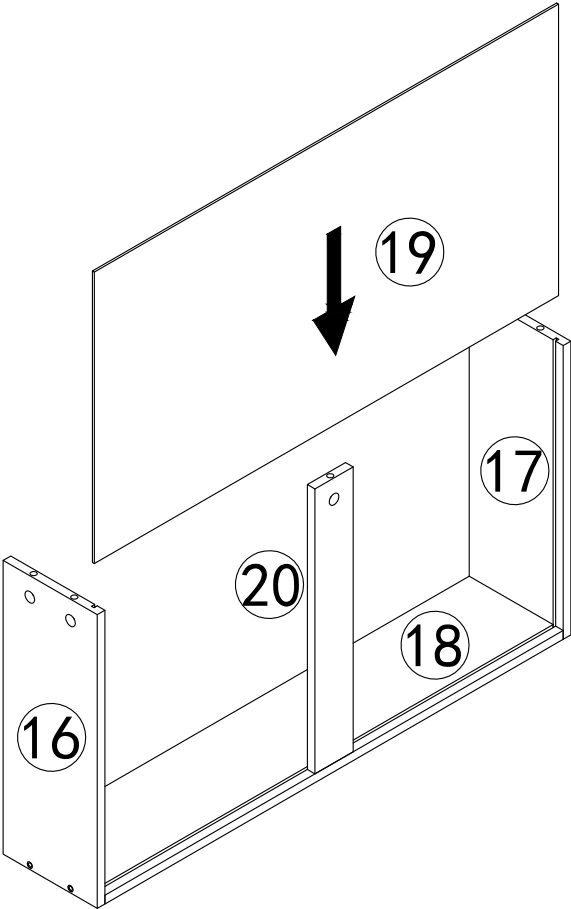


X2


25

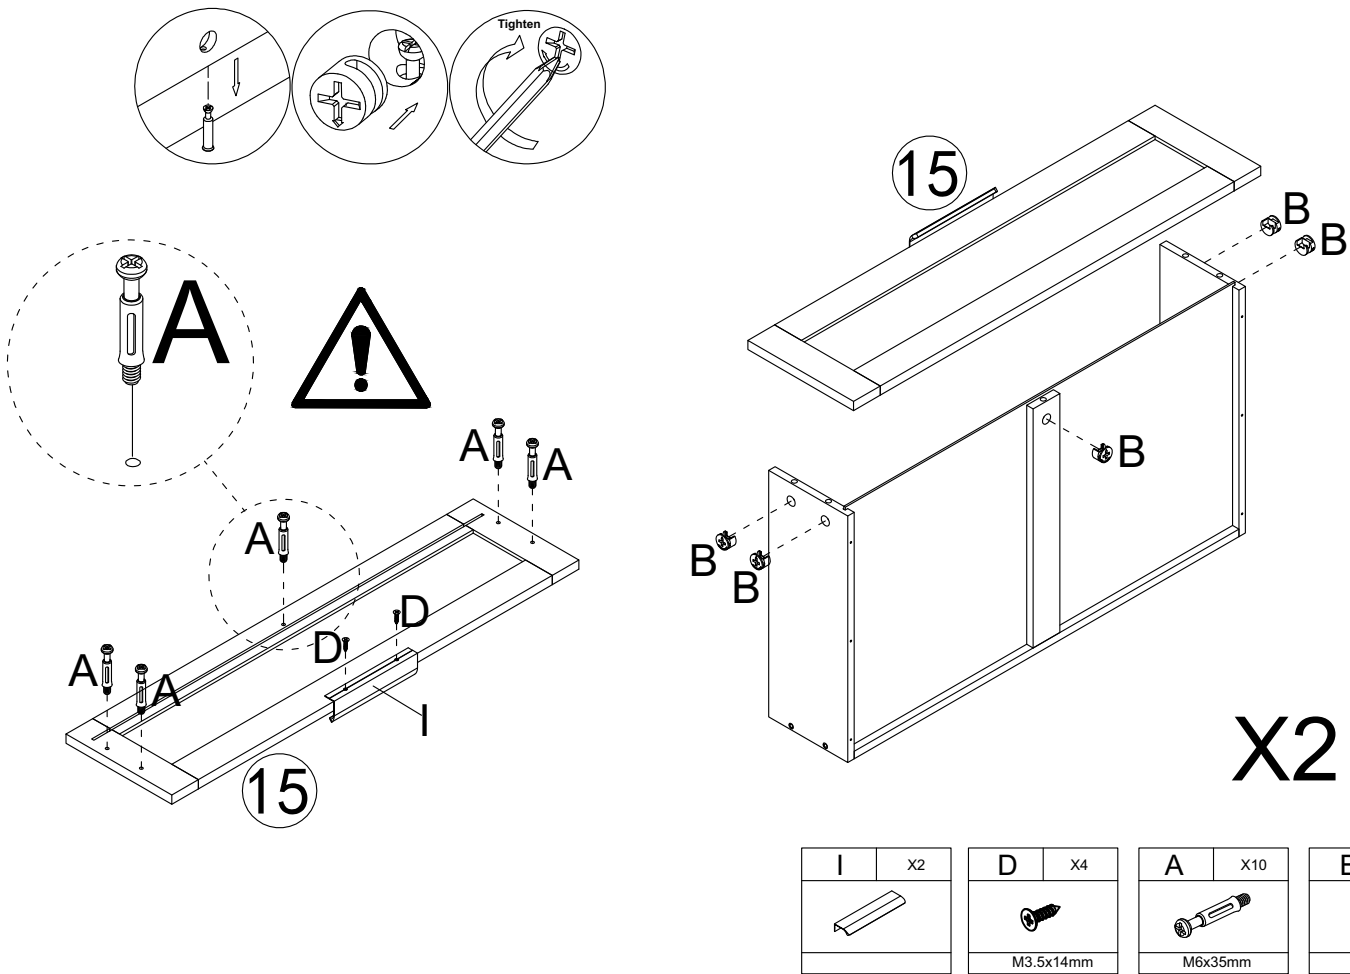


26

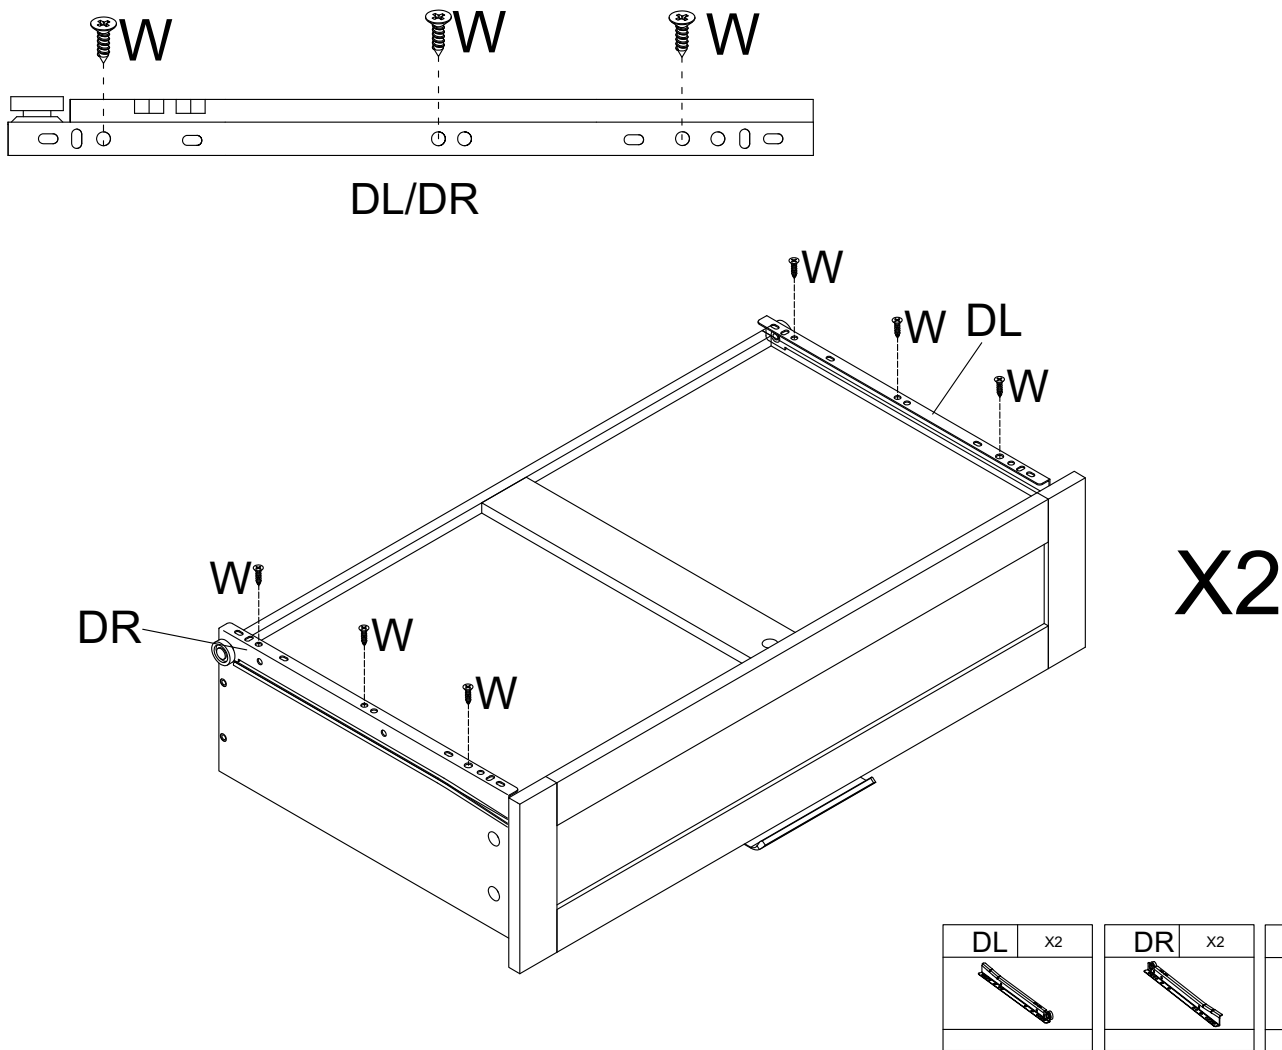

27

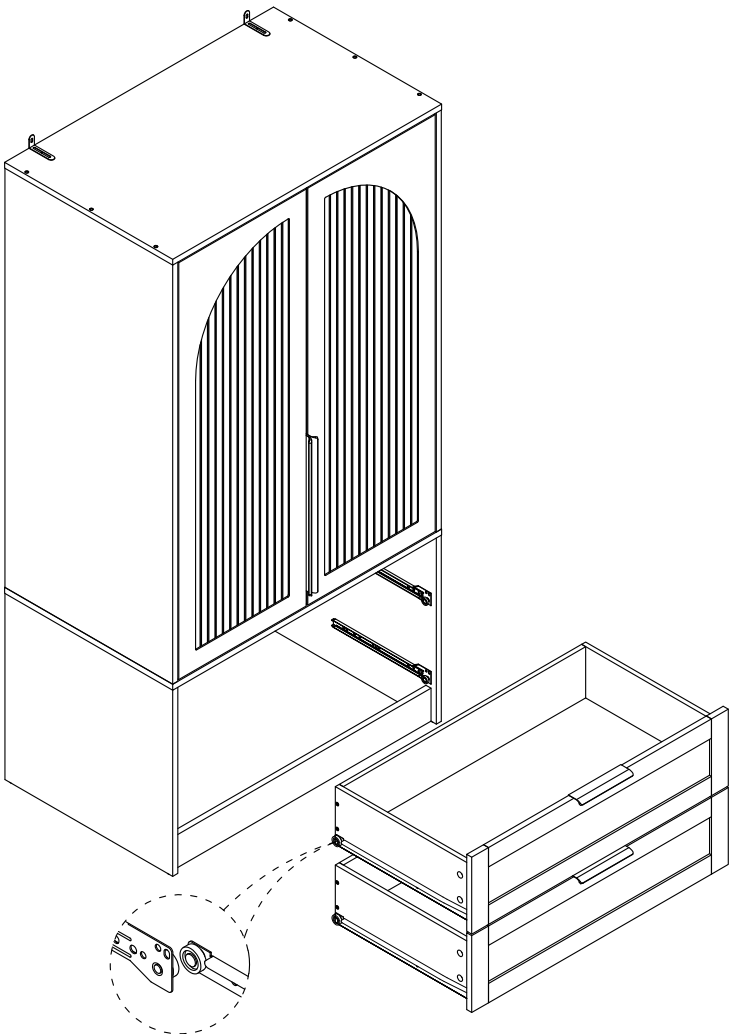


28

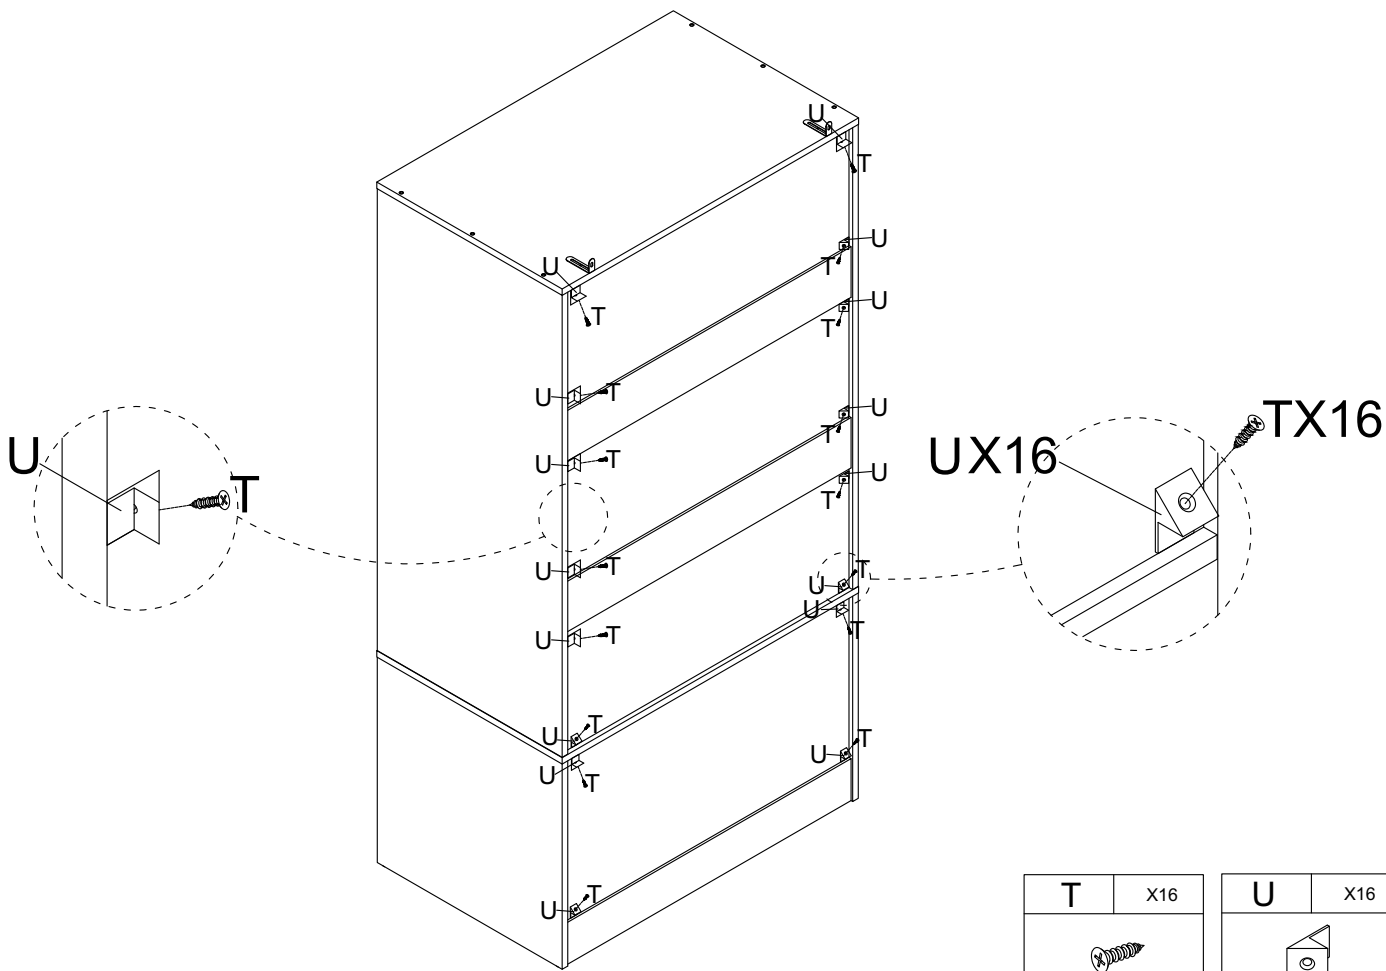

T	X16	U	X16
			
M3x16mm			

29

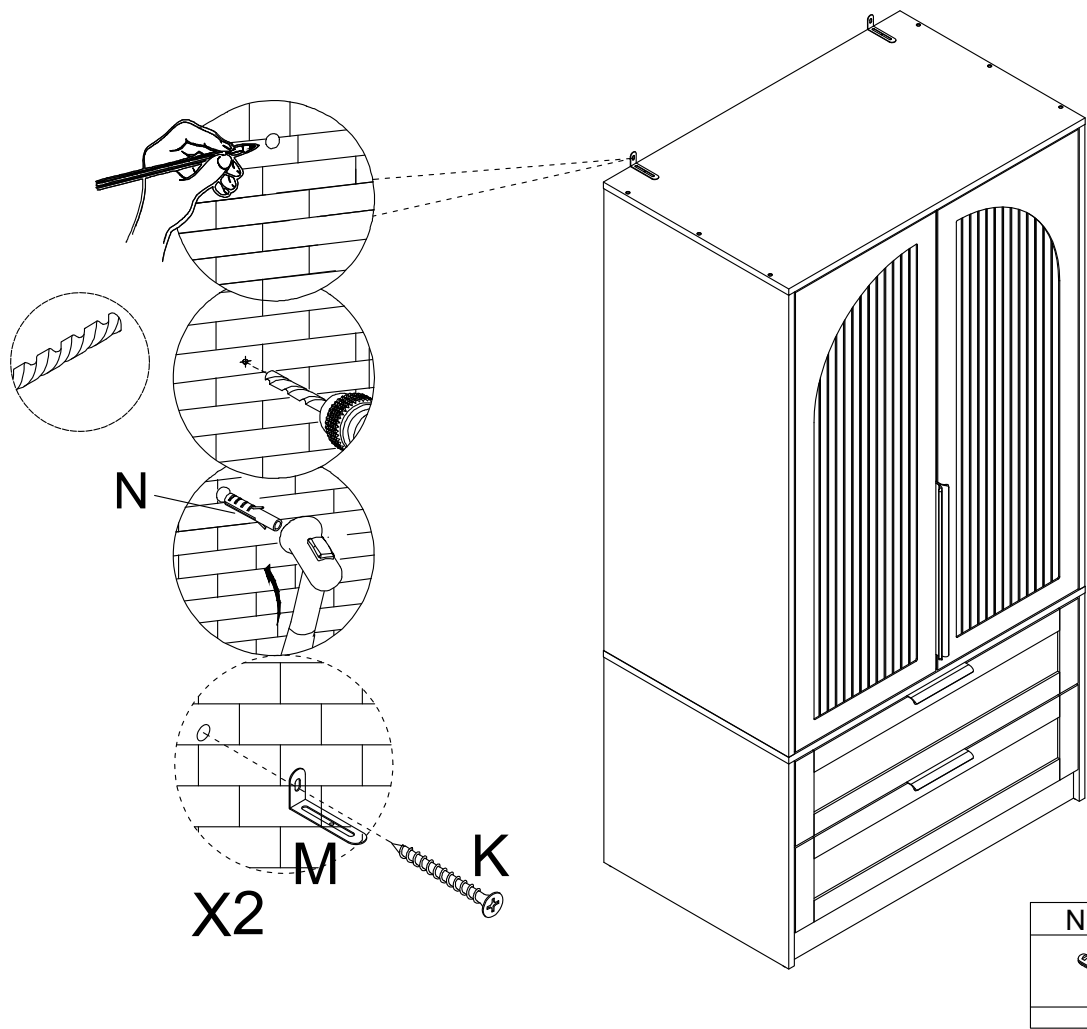

30

