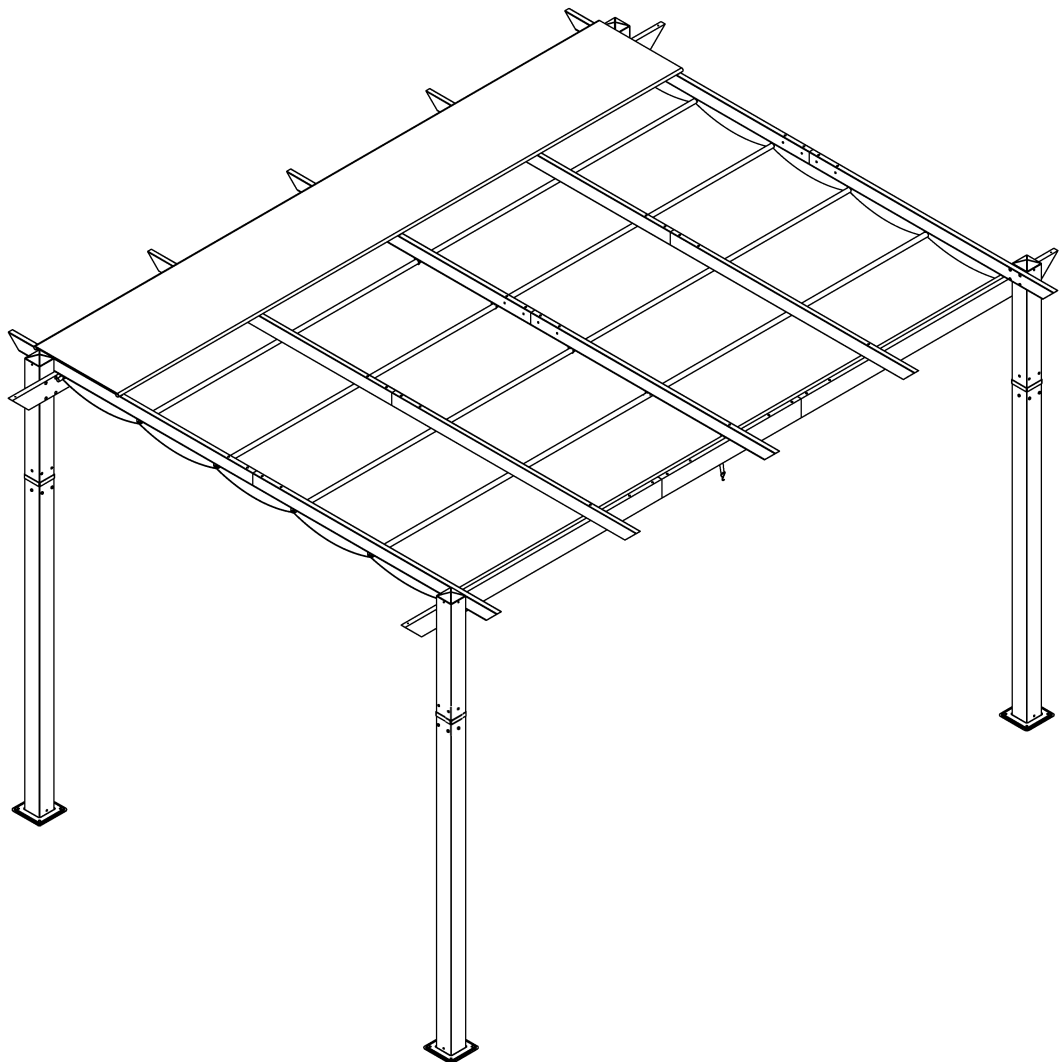




# 10'x13' ALUMINUM RETRACTABLE PERGOLA - WOOD LOOKING FINISH

## Assembly Instructions



## Pre-assembly



1. Two or more people are required for assembly.




2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.


## Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


# Part List



A 4x



A1 2x



A2 2x




C 1x




C1 1x




C2 1x



C3 1x



D 1x



D1 1x



D2 1x




E 1x



E1 1x



E2 1x



F 2x







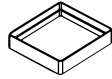

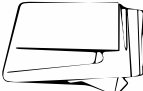









F1 2x



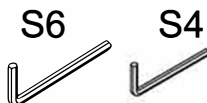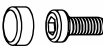G 1x


# Part list

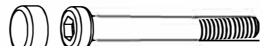 <p><b>G1</b> 1x</p>		 <p><b>H</b> 5x</p>	
 <p><b>H1</b> 5x</p>		 <p><b>J</b> 3x</p>	
 <p><b>J1</b> 3x</p>		 <p><b>B</b> 4x</p>	 <p><b>B1</b> 4x</p>
 <p><b>K</b> 1x</p>	 <p><b>L</b> 1x</p>	 <p><b>M</b> 1x</p>	 <p><b>P</b> 8x</p>
 <p><b>S6</b> <b>S4</b></p> <p><b>Q</b> 1x</p>	 <p><b>M6x16</b></p> <p><b>1</b> 78x</p>	 <p><b>M6x15</b></p> <p><b>2</b> 32x</p>	 <p><b>M6x28</b></p> <p><b>3</b> 9x</p>
 <p><b>M6x85</b></p> <p><b>4</b> 6x</p>			








<b>A</b> 4x
<b>A1</b> 2x
<b>A2</b> 2x
<b>B</b> 4x
<b>B1</b> 4x
<b>Q</b> 1x
<b>S4</b> 1x
<b>1</b> 32x
<b>1</b> 32x
<b>4</b>

## Step 1:

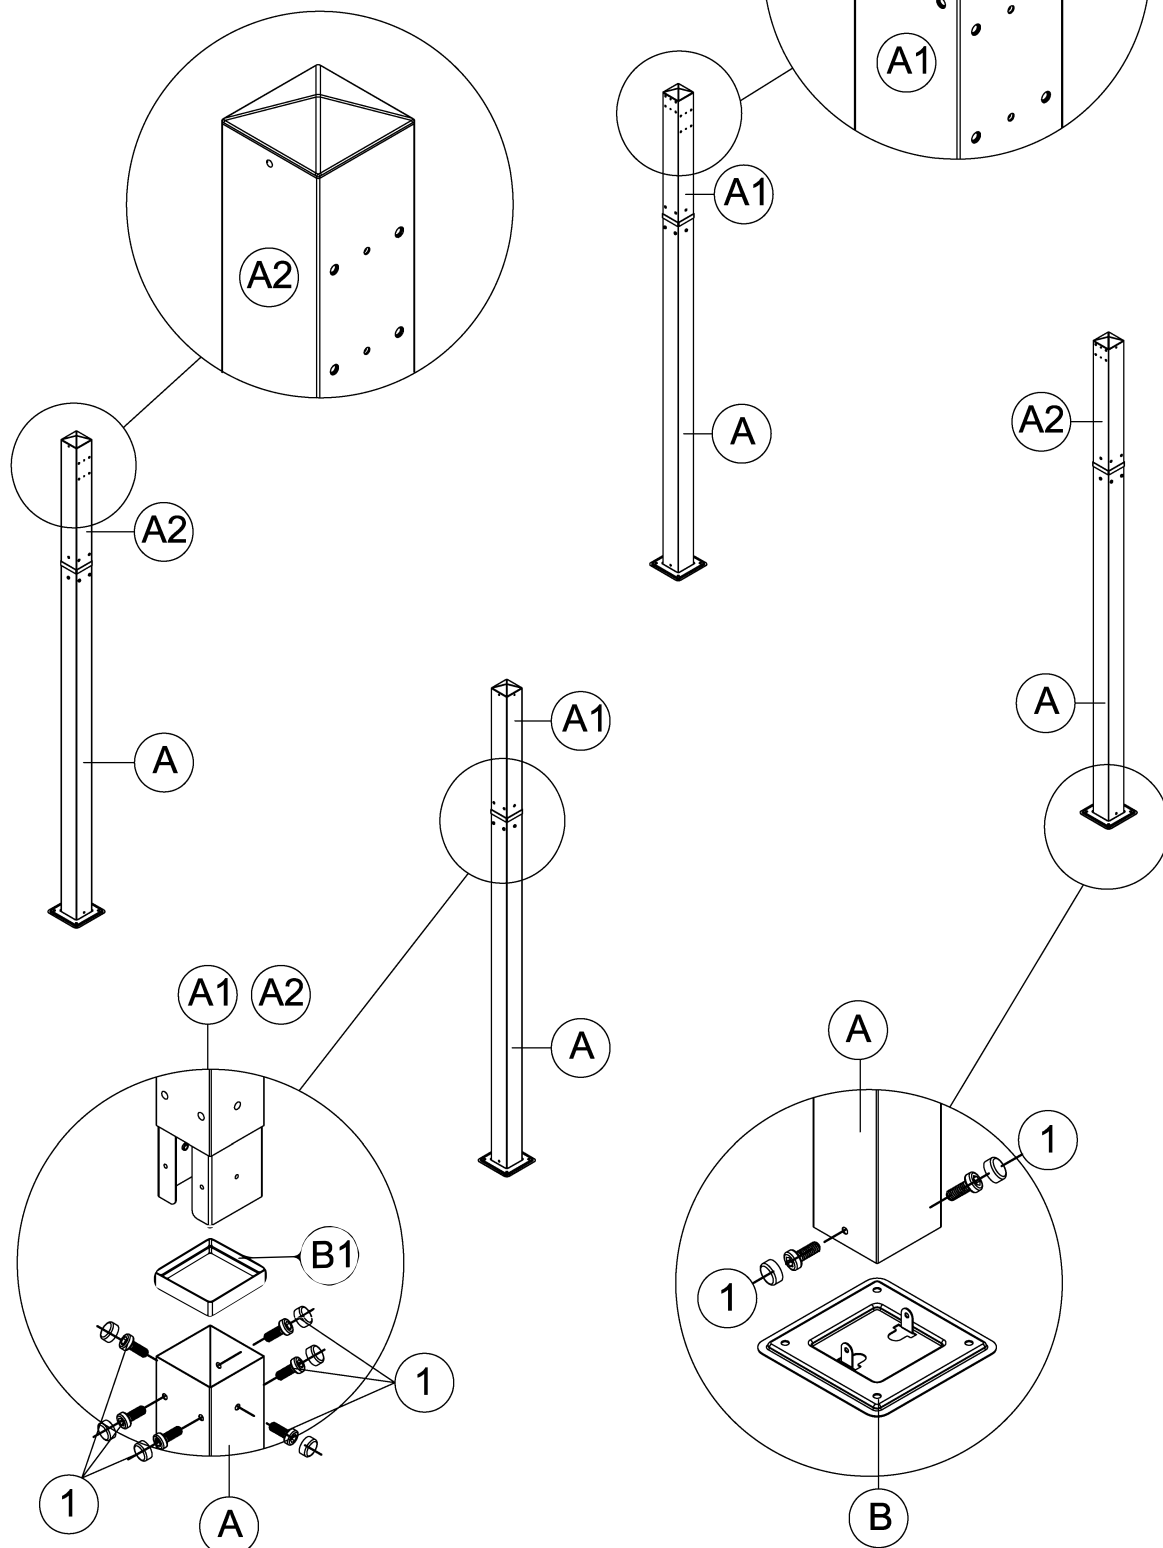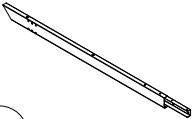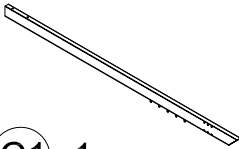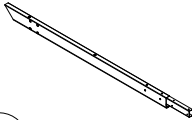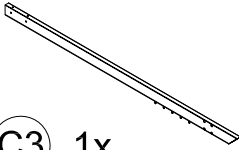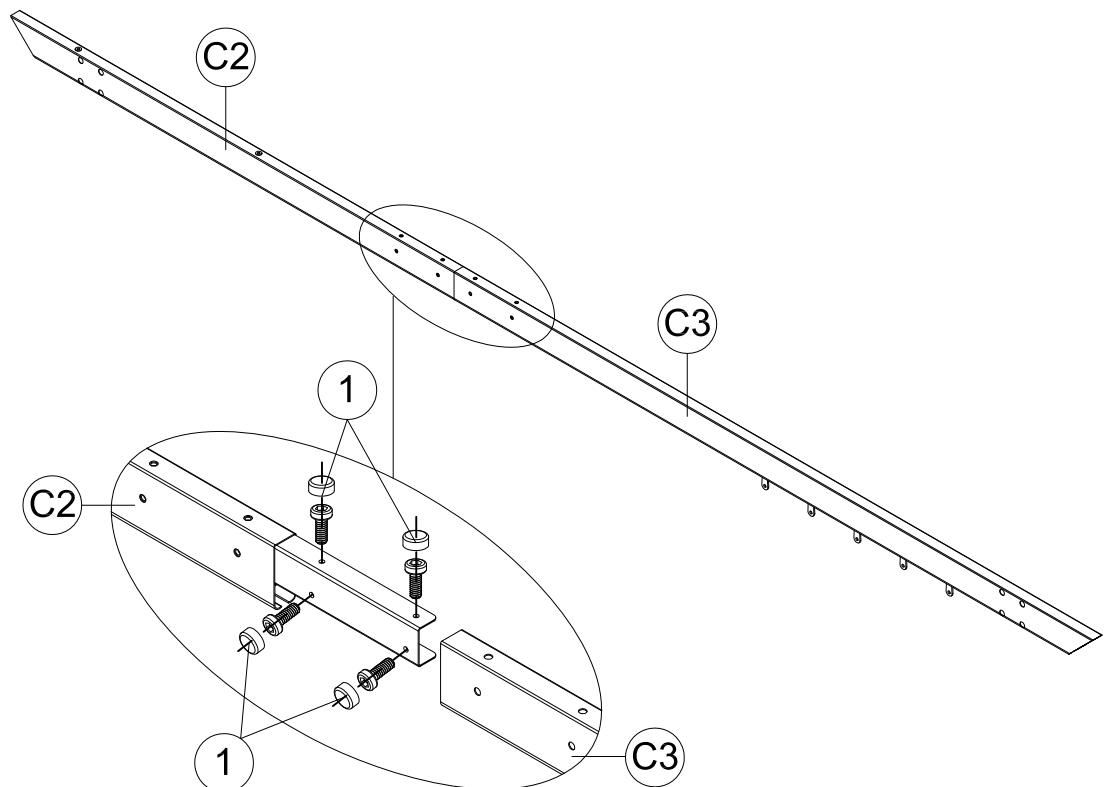
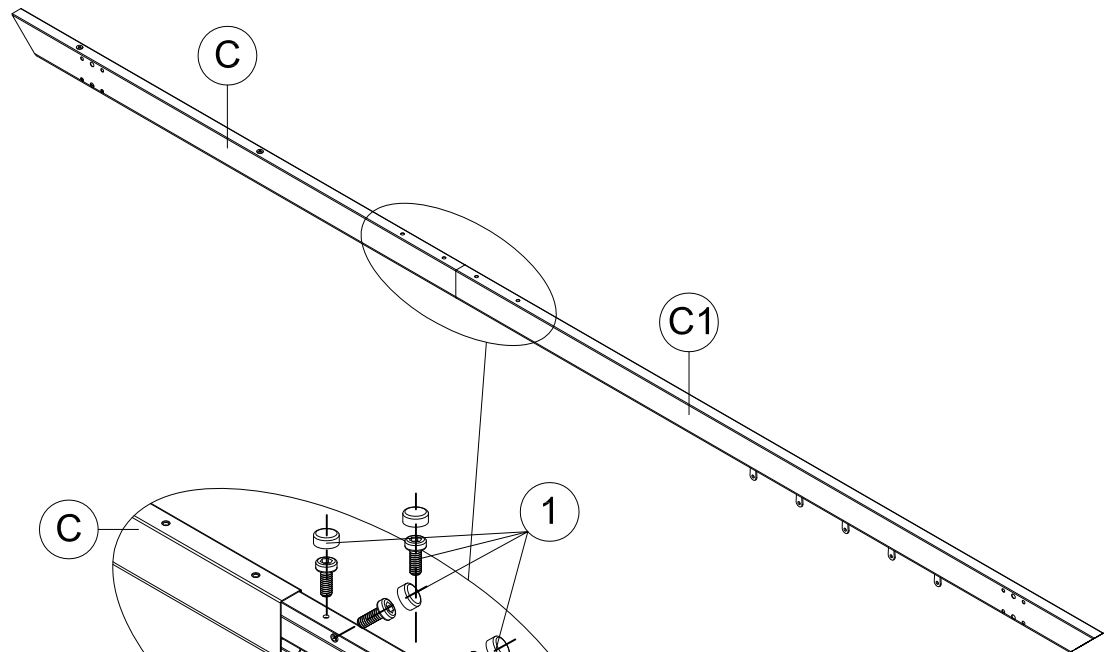
Connect part A1 and part A using part B1 and screws 1# as shown in diagram, then connect part A2 and part A in the same way.

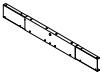
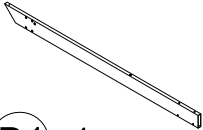
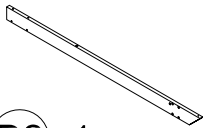
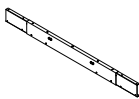
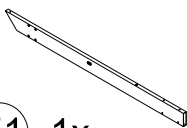
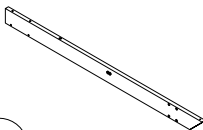




**Step 2:** Set up poles (part A) with stand plates (part B) using screws 1# as shown in diagram.


<b>C</b> 1x

<b>C1</b> 1x

<b>C2</b> 1x

<b>C3</b> 1x

<b>S4</b>

<b>Q</b> 1x

<b>1</b> 8x M6x16
<b>5</b>

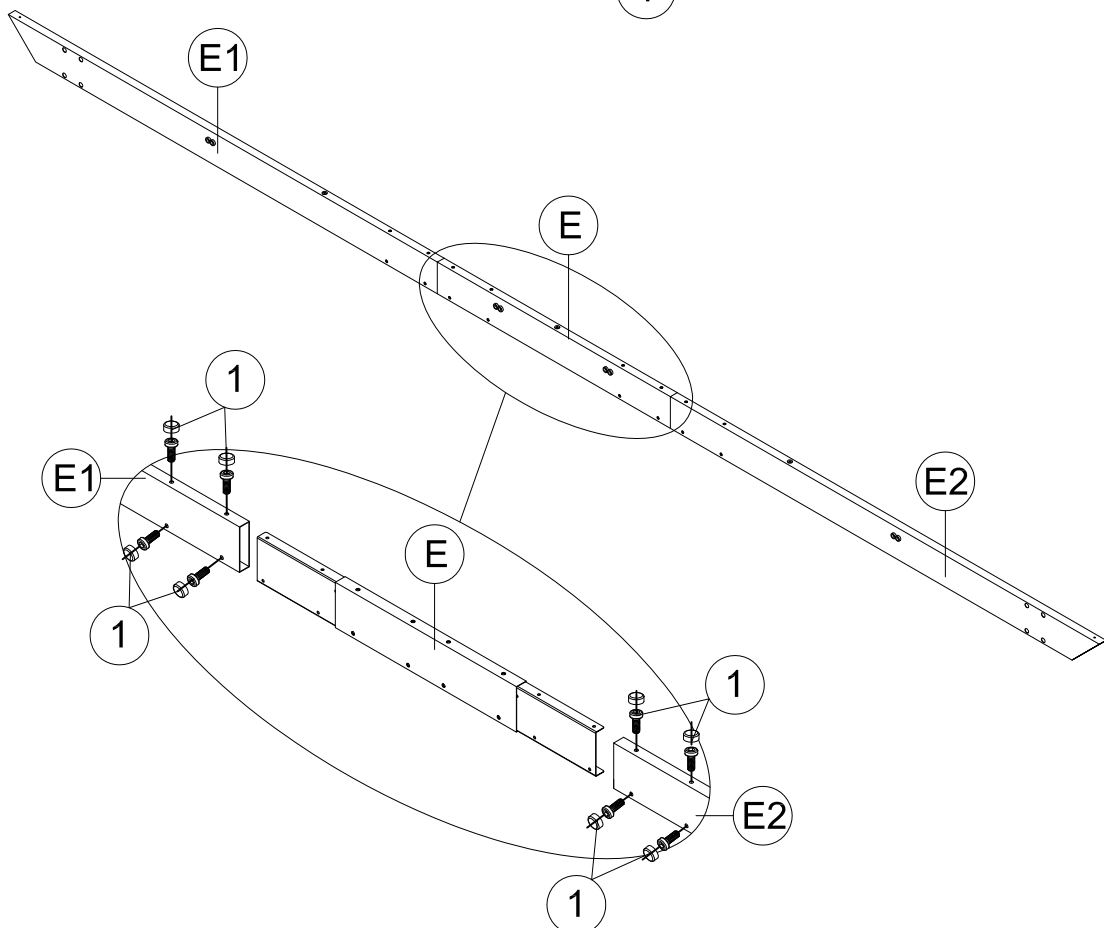
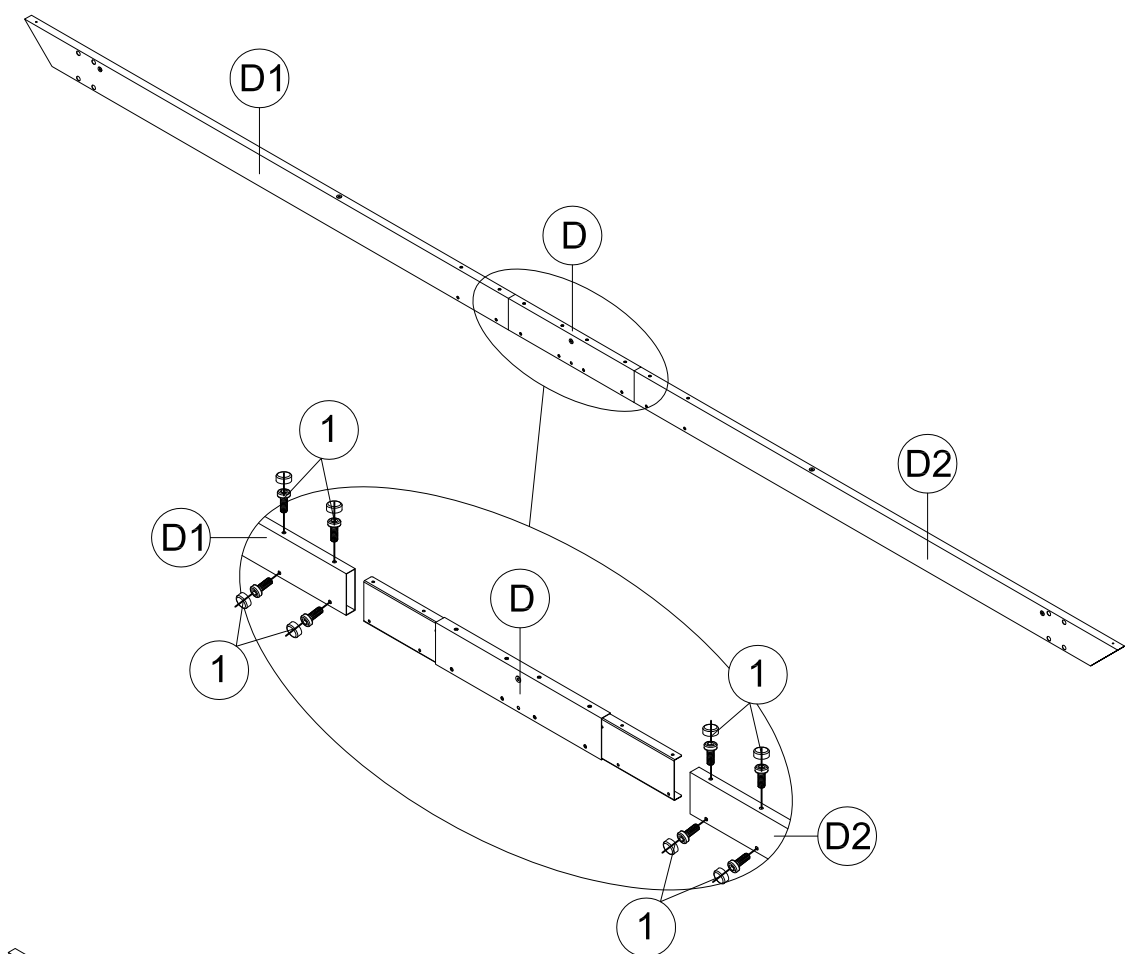
**Step 3:** As shown in the figure, use screws 1# to connect part C and C1, and also connect part C2 and C3 together.











<b>D</b> 1x

<b>D1</b> 1x

<b>D2</b> 1x
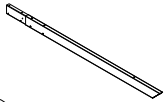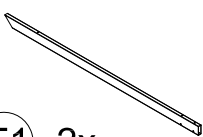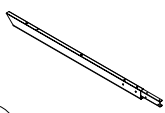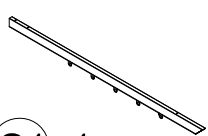
<b>E</b> 1x

<b>E1</b> 1x

<b>E2</b> 1x
 <b>S4</b>
<b>Q</b> 1x

<b>1</b> 16x <b>M6x16</b>
<b>6</b>

# Step 4:

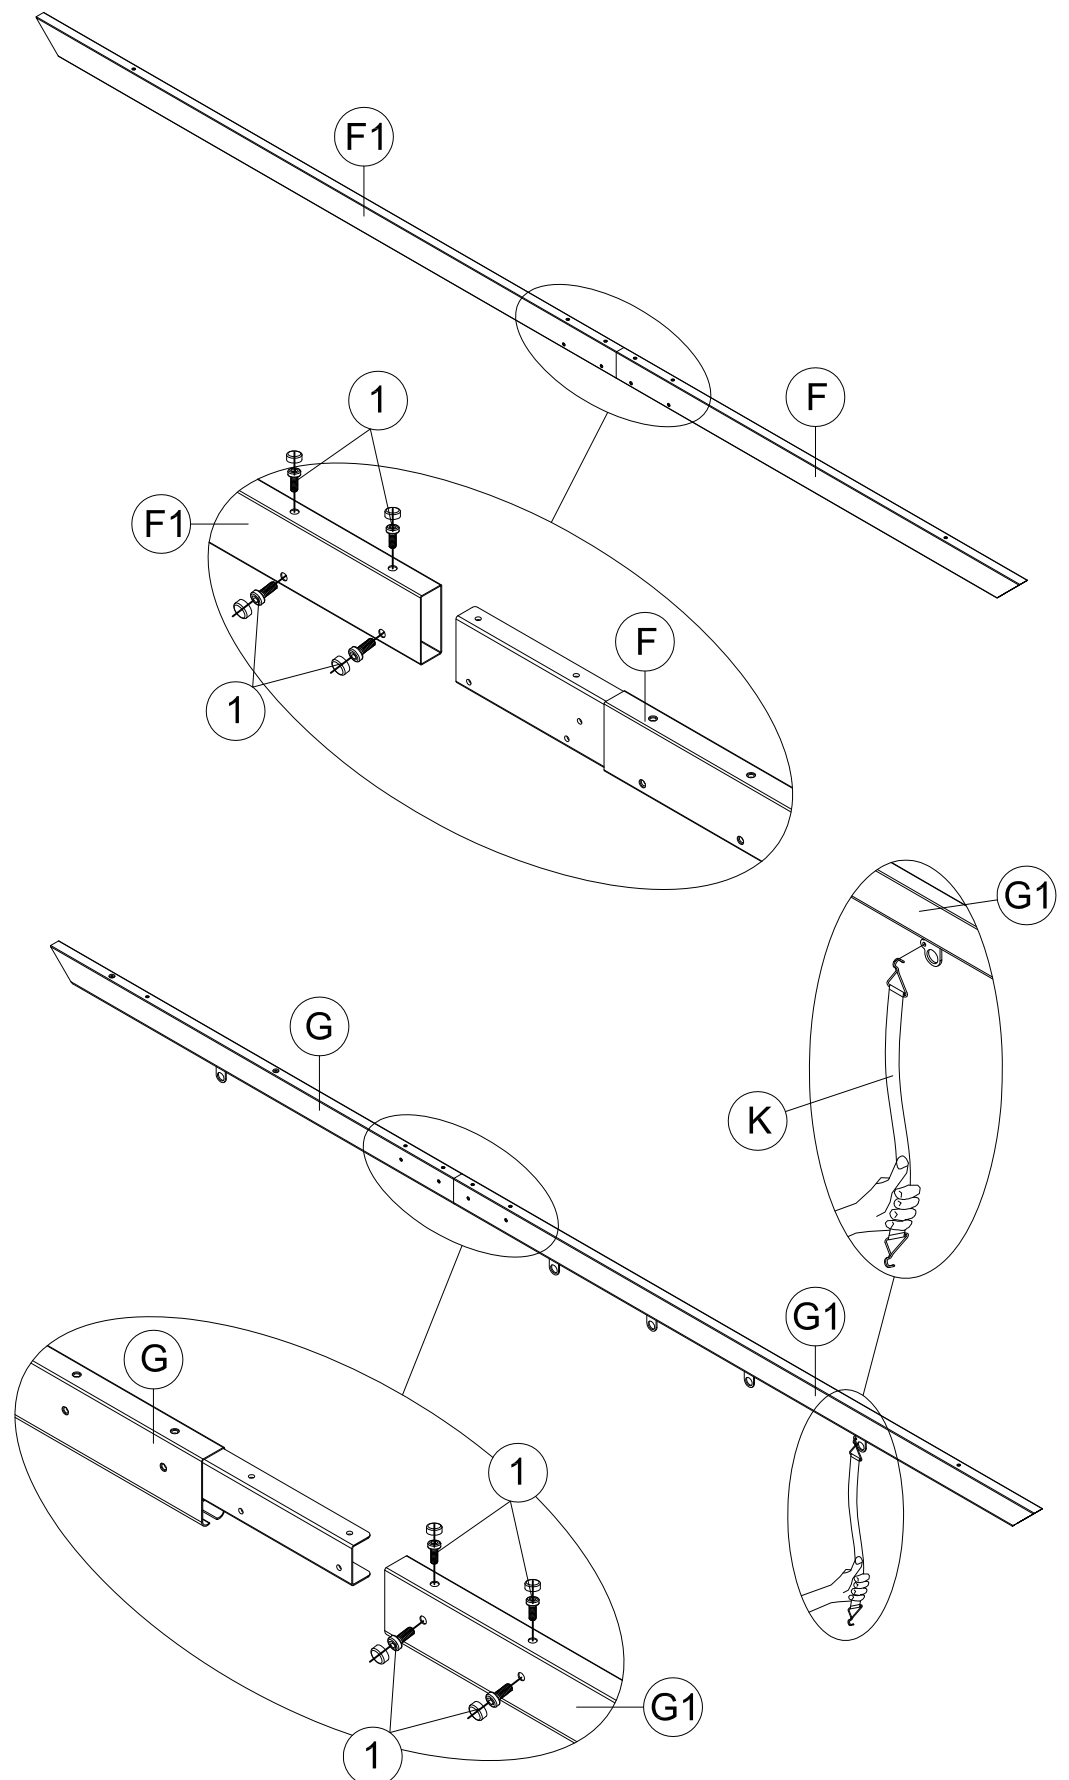
Link part D, D1 and D2 using screws 1# as shown in diagram.



Link part E, E1 and E2 using screws 1# as shown in diagram.


<b>F</b> 2x

<b>F1</b> 2x

<b>G</b> 1x

<b>G1</b> 1x

<b>K</b> 1x

<b>Q</b> 1x

<b>1</b> 12x M6x16
<b>7</b>

**Step 5:** Link part F and F1 using screws 1# as shown in diagram.



Link part G and G1 using screws 1# as shown in diagram. Then hang part K on the outside hook of part G1 as shown in diagram.





M6x15


2 16x

S6



Q 1x

## Step 6:

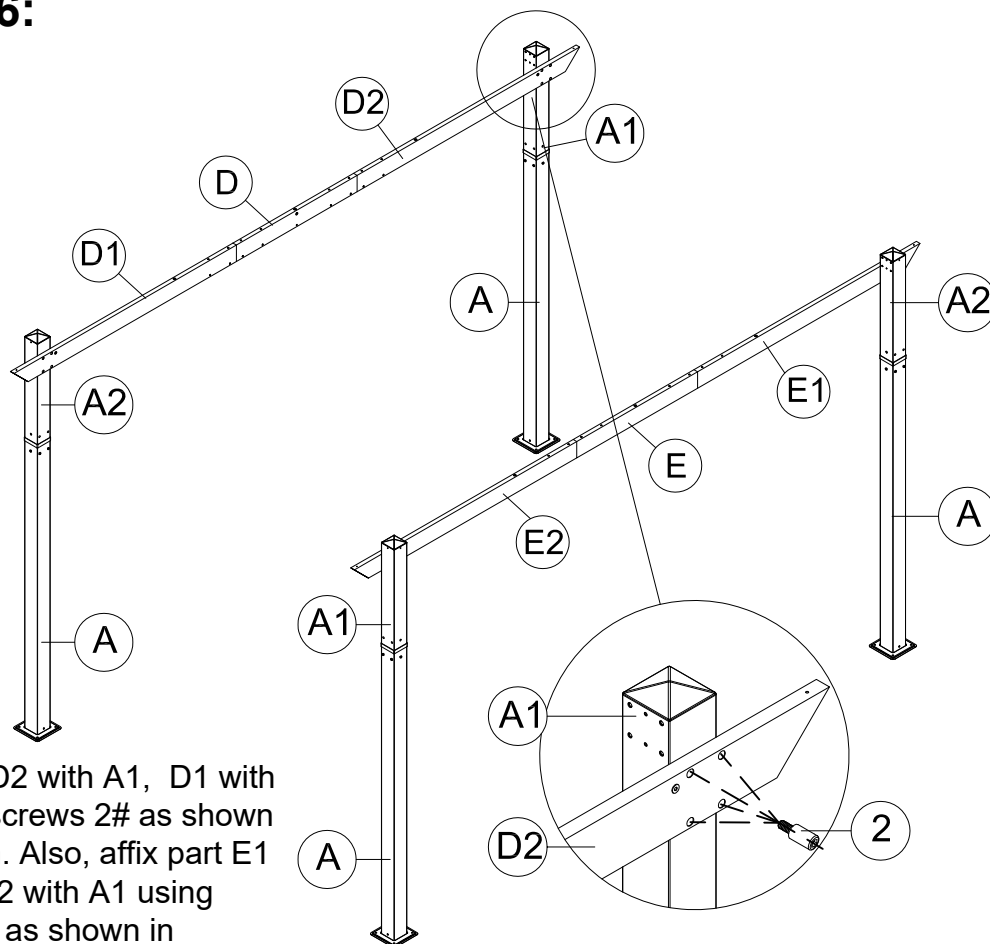

Affix part D2 with A1, D1 with A2 using screws 2# as shown in diagram. Also, affix part E1 with A2, E2 with A1 using screws 2# as shown in diagram.



M6x15


2 16x

S6




Q 1x

## Step 7:

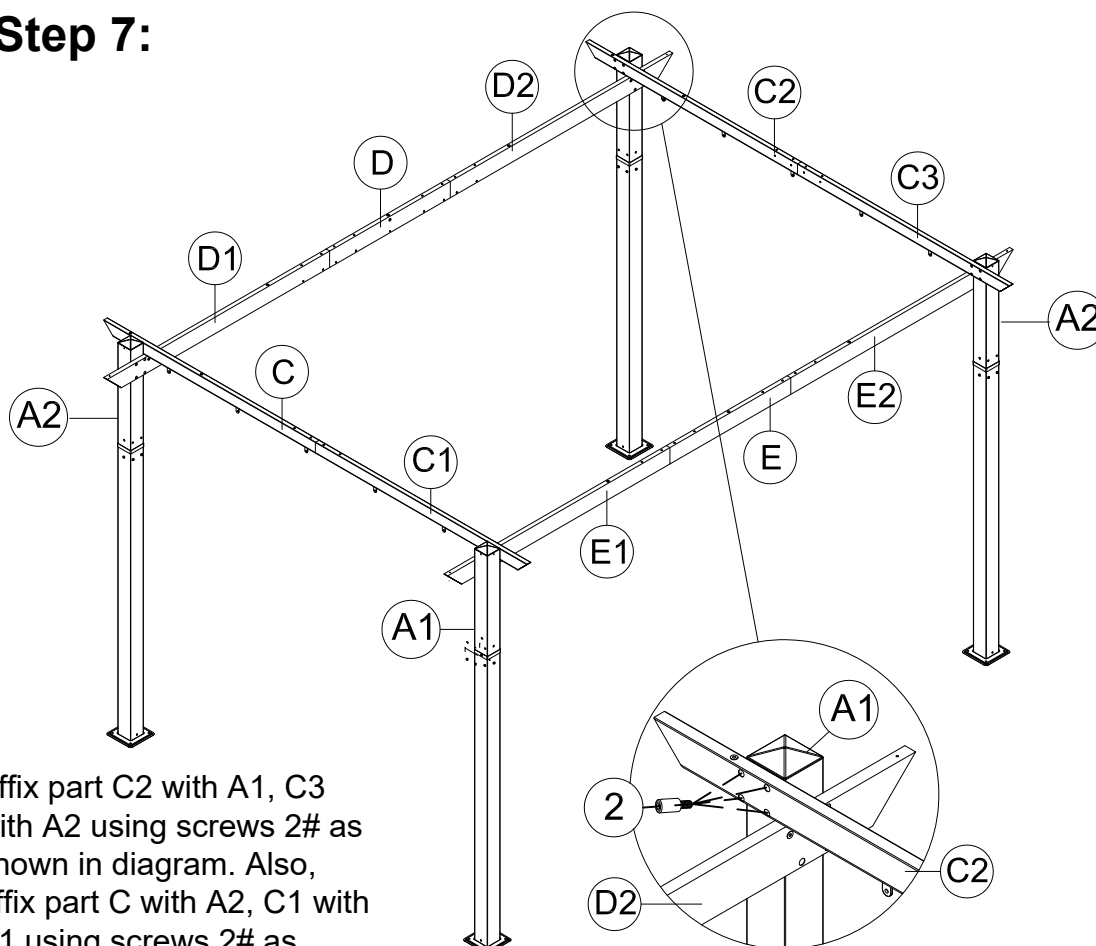

Affix part C2 with A1, C3 with A2 using screws 2# as shown in diagram. Also, affix part C with A2, C1 with A1 using screws 2# as shown in diagram.



M6x85

4

6x





S4

Q

1x


## Step 8:

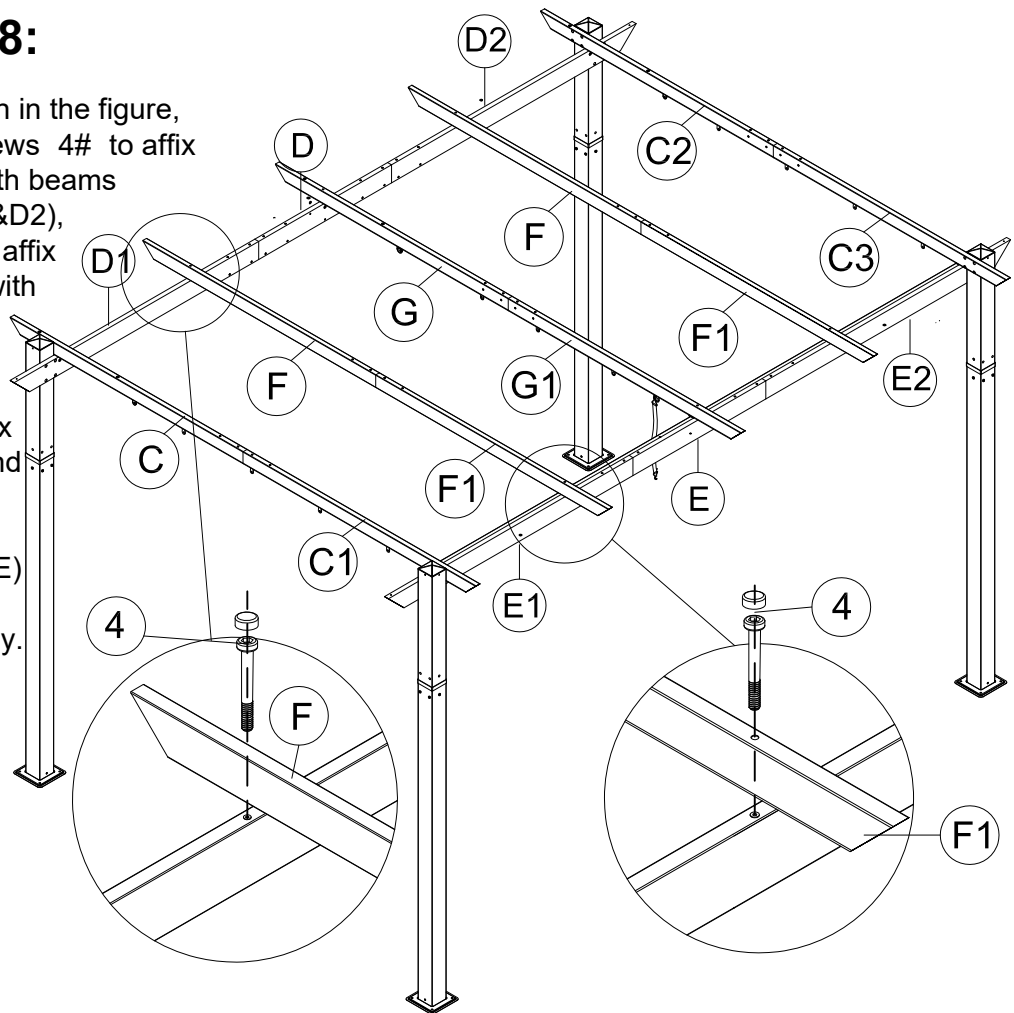As shown in the figure, use screws 4# to affix part F with beams (part D1&D2), and also affix part F1 with beams (part E1&E2). Then affix part G and G1 with beams (part D&E) in the same way.




H

5x




H1

5x



J

1x



J1

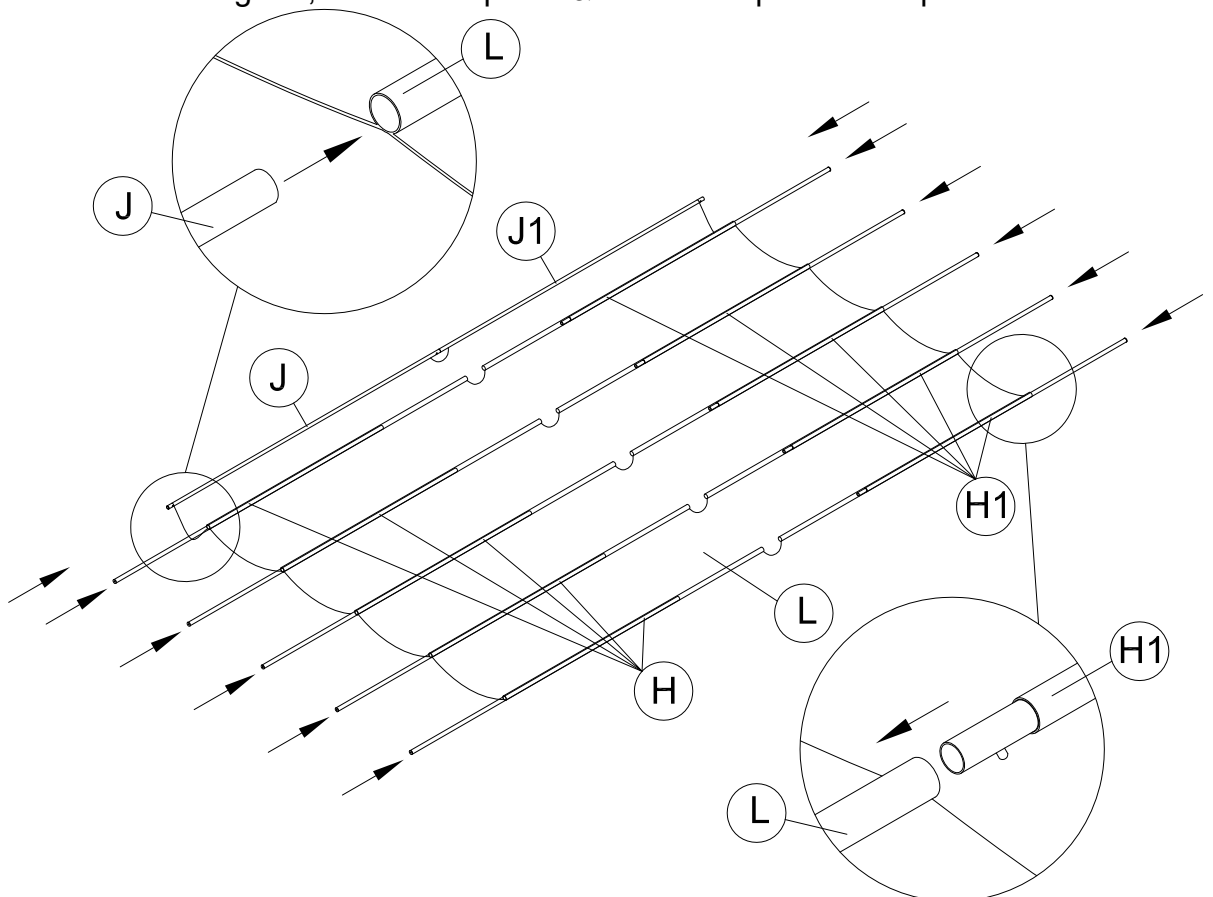
1x






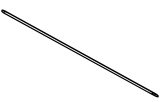
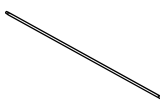

L

1x

**Step 9:** Insert part J&J1 into the pocket of top roof (part L) as shown in diagram, then insert part H&H1 into the pocket of top roof in turn.




9

 <p><b>1</b> 10x M6x16</p>	 <p><b>3</b> 3x M6x28</p>	 <p><b>Q</b> 1x S4</p>	
 <p><b>J</b> 2x</p>	 <p><b>J1</b> 2x</p>	 <p><b>M</b> 1x</p>	<p>10</p>

# Step 10:

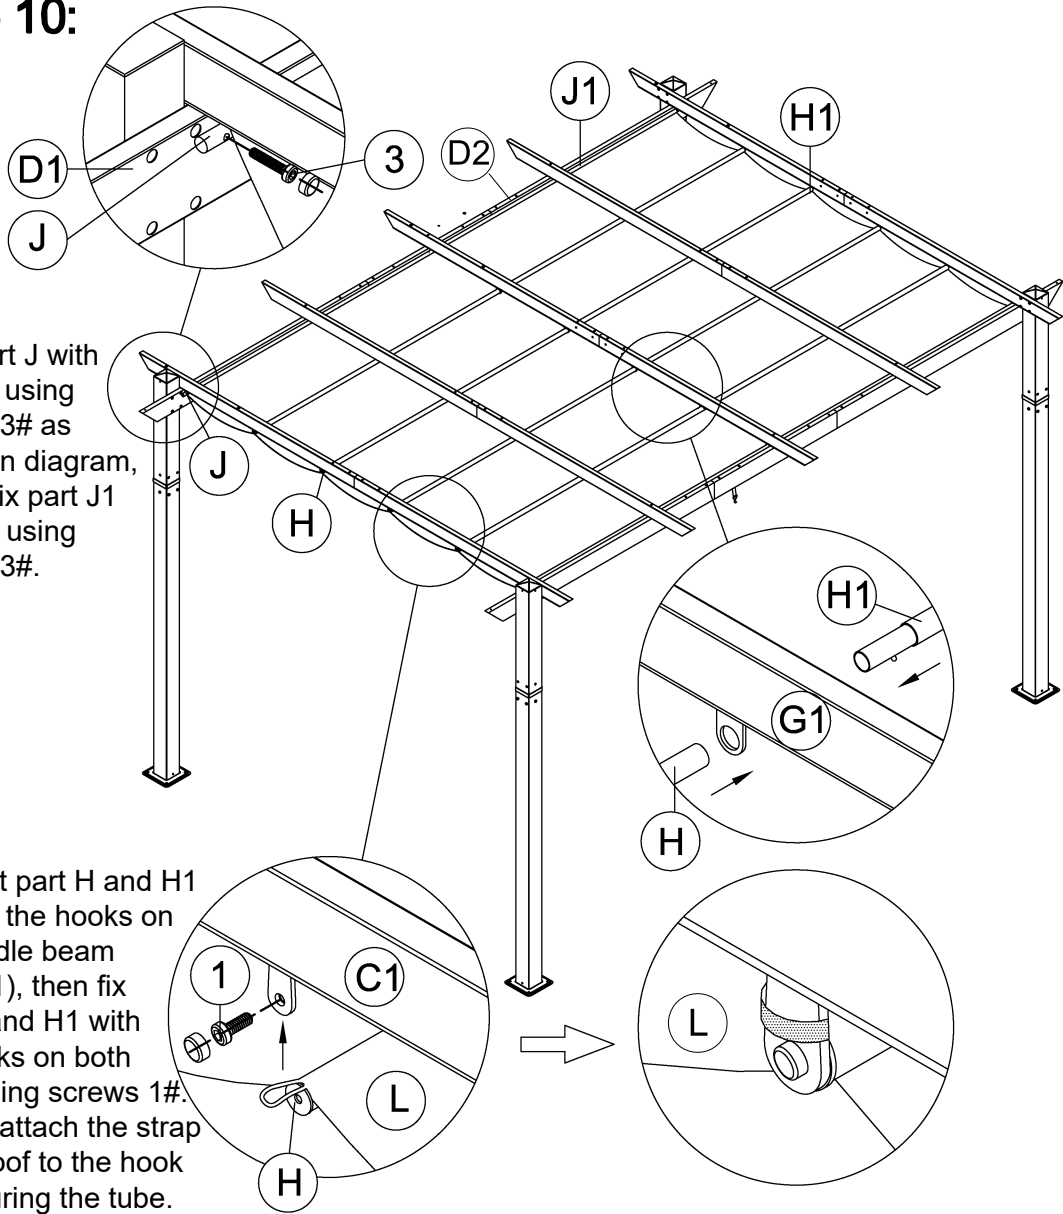
Affix part J with part D1 using screws 3# as shown in diagram, then affix part J1 with D2 using screws 3#.

Connect part H and H1 through the hooks on the middle beam (part G1), then fix part H and H1 with the hooks on both ends using screws 1#. Finally, attach the strap of top roof to the hook for securing the tube.



# Step 11:

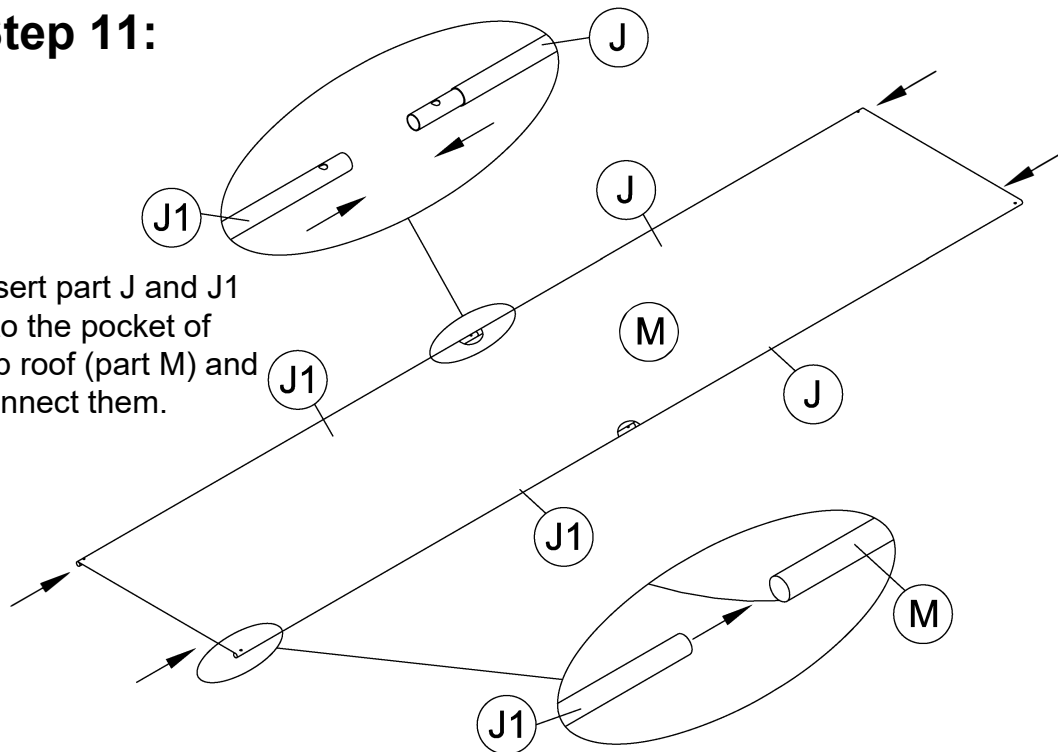Insert part J and J1 into the pocket of top roof (part M) and connect them.





3 6x

M6x28




S4

Q 1x


## Step 12:

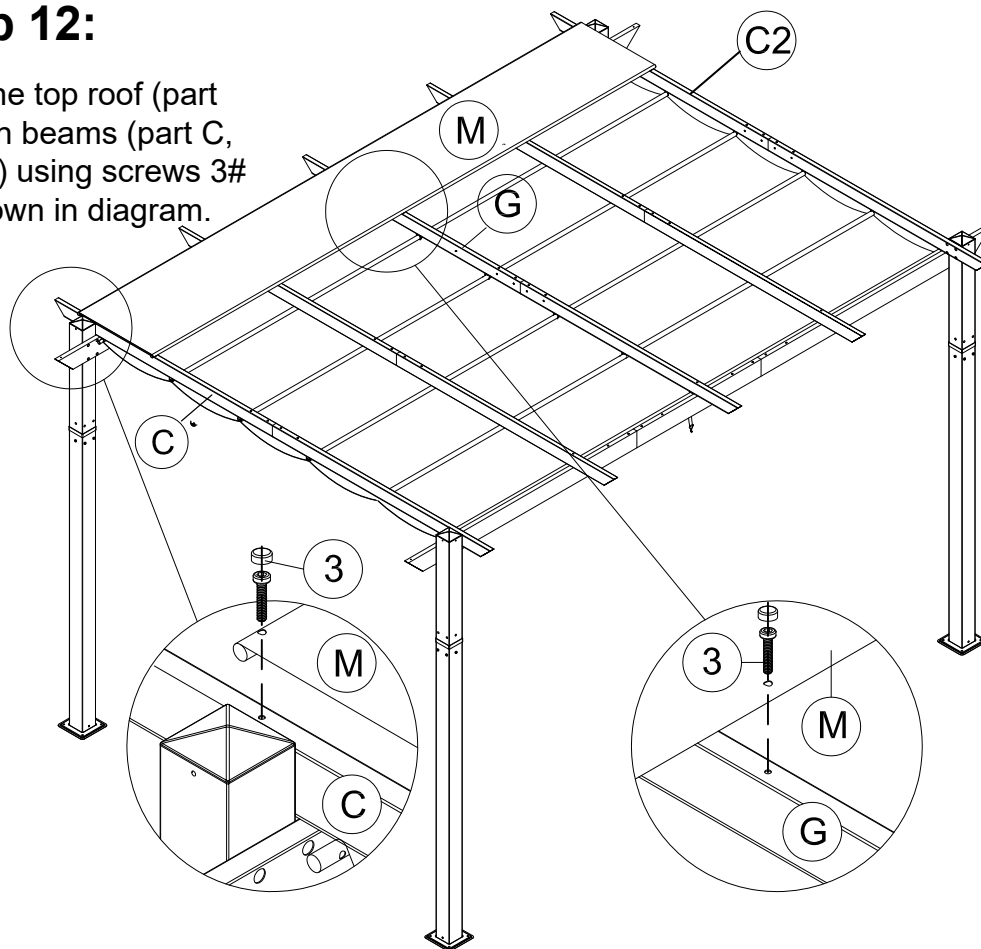Affix the top roof (part M) with beams (part C, G&C2) using screws 3# as shown in diagram.



## Step 13:

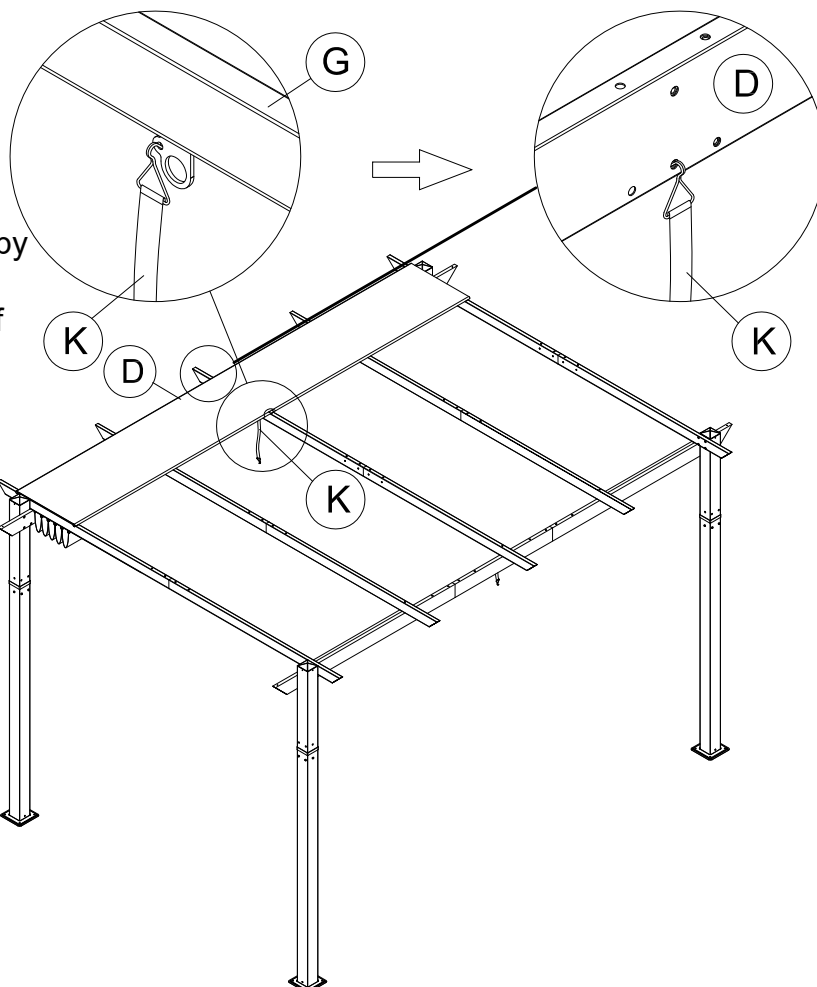When the canopy is folded, hang the other end of string (part K) into the hole on the inside of beam (part D) to secure the top roof.






1

(P) 8x

## Step 14:

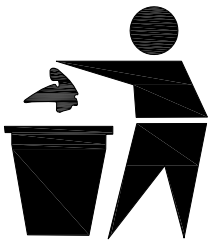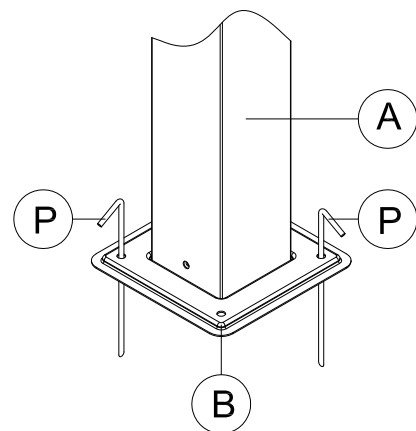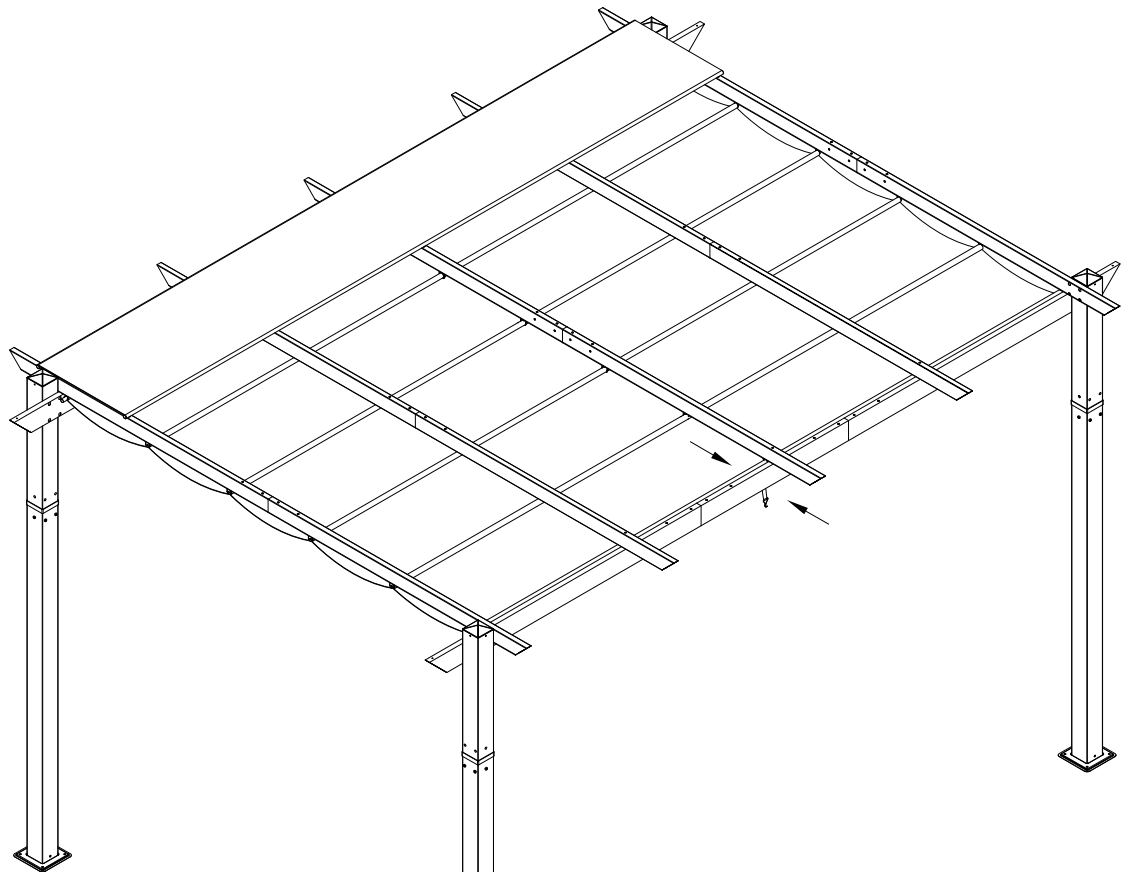Insert stakes (part P) through the hole of stand plate (part B) into the ground, to stabilize the tent.





## RESORT COMFORT IN YOUR OWN BACKYARD

### **Thanks for your purchase.**

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So if you have any questions about our product and assembly, please feel free to contact us. We will be here for you.

### **Support:**



email: [domiservice03@outlook.com](mailto:domiservice03@outlook.com)

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.