


Metal Platform Bed Frame

Instruction Manual

BF-3611V2-TWIN

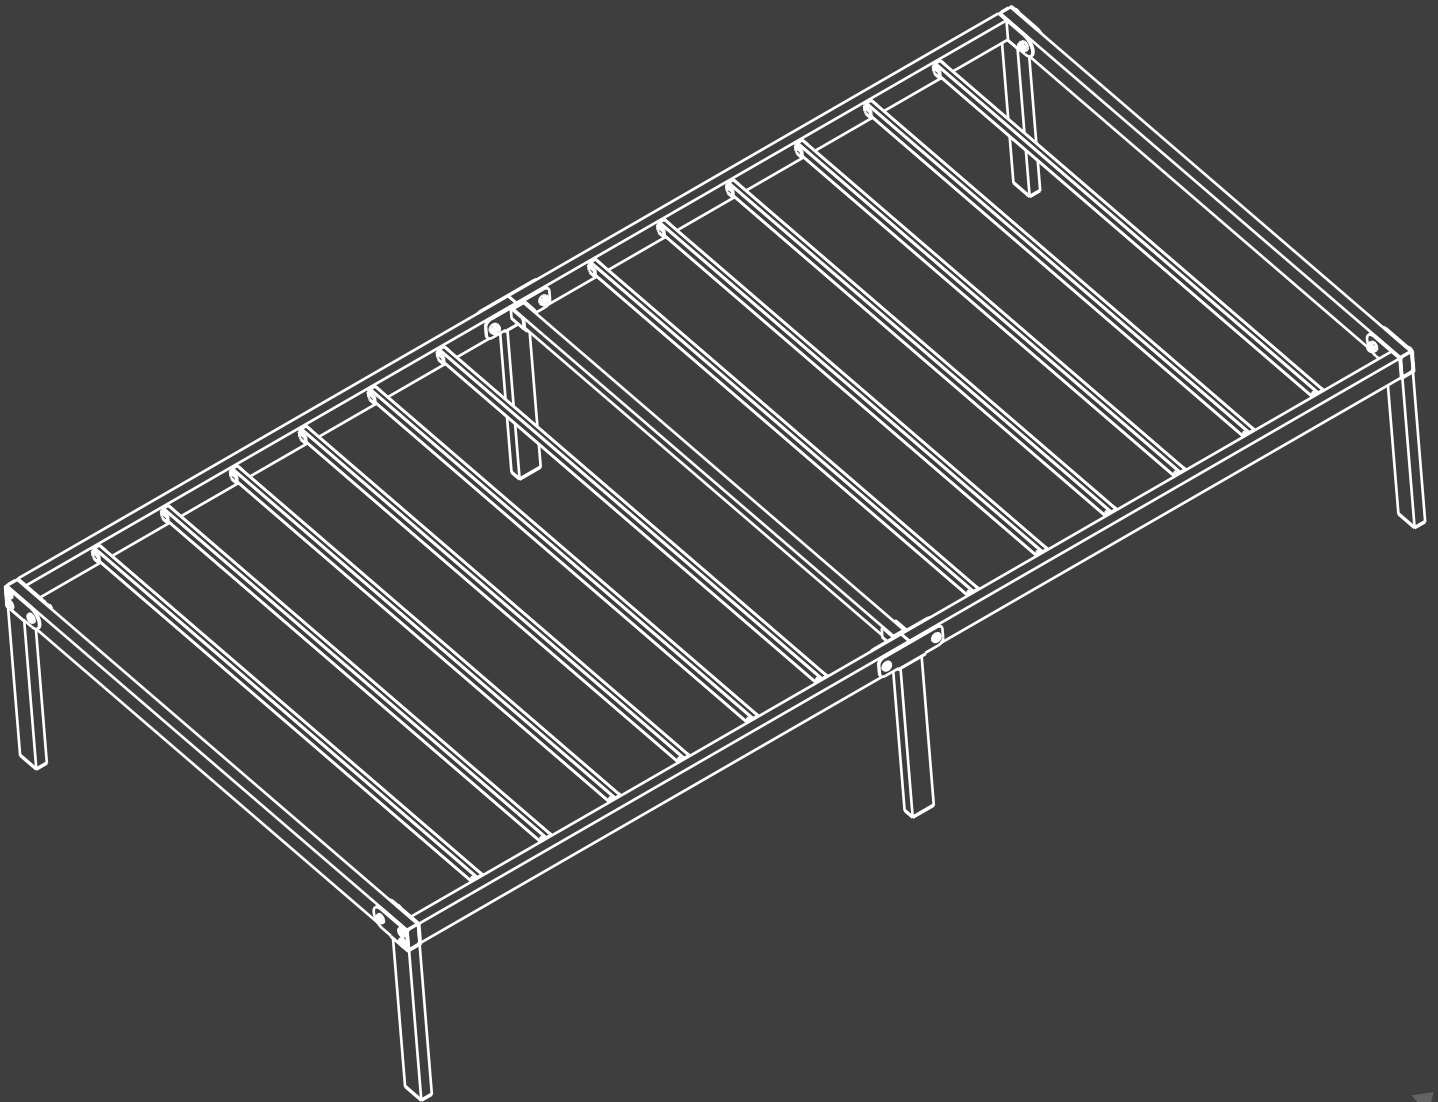


 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com


 (909)637-7665 | (909)637-7593

1 Component List

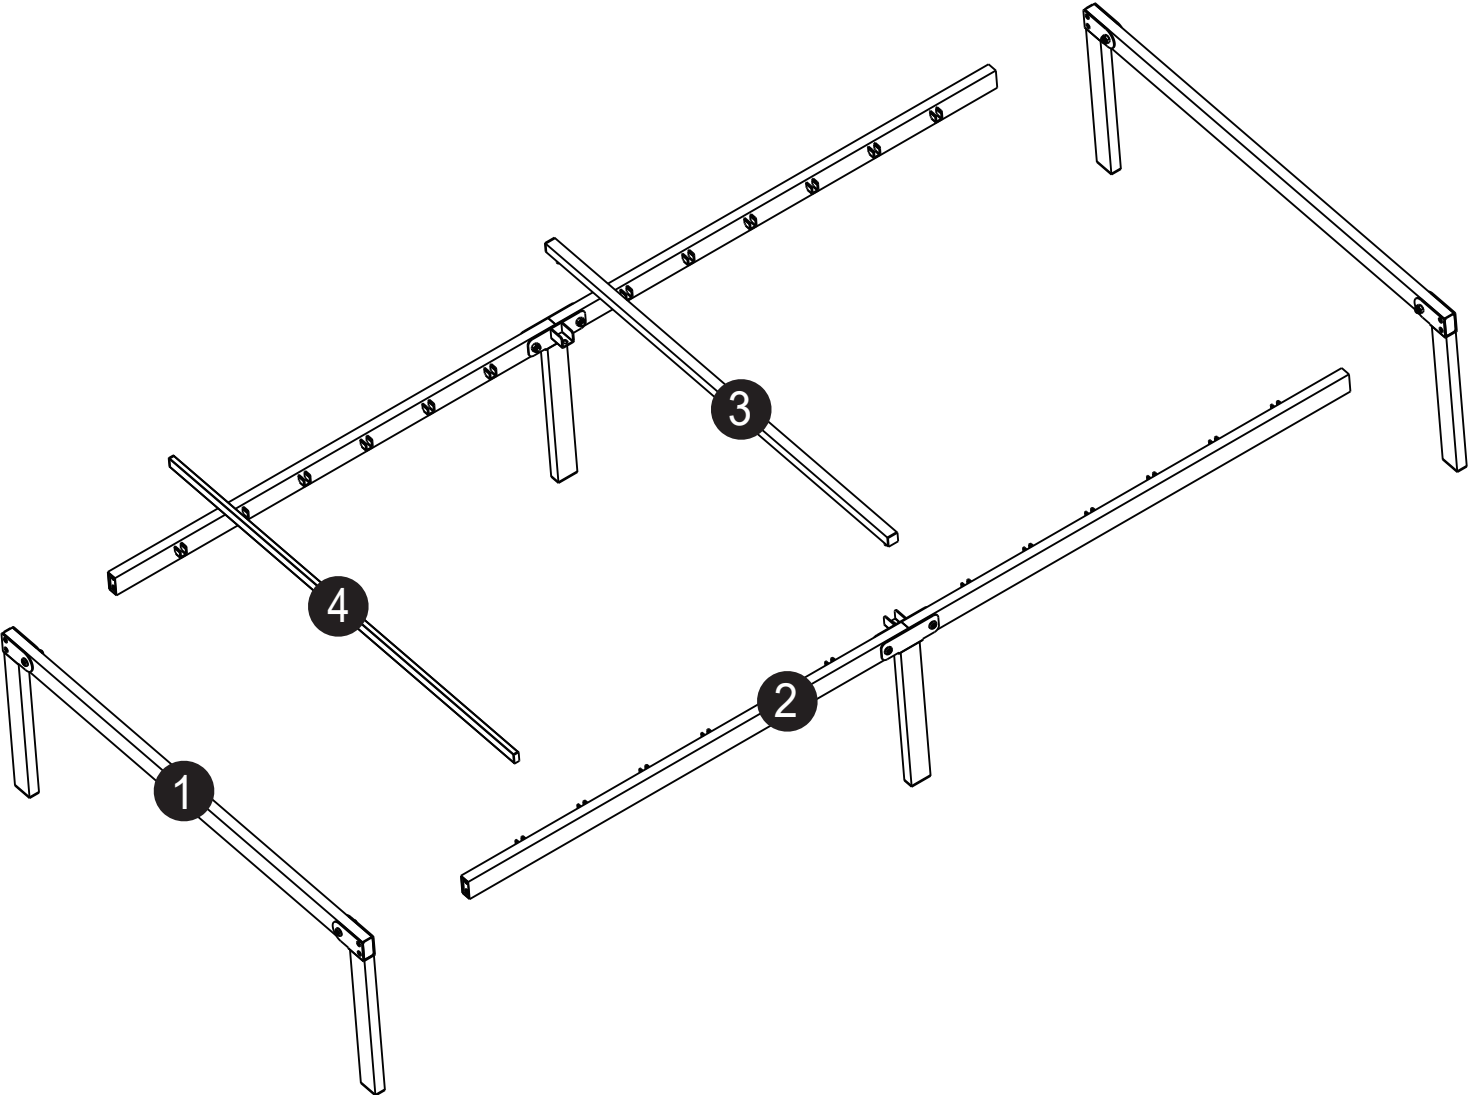


2 Package List

1

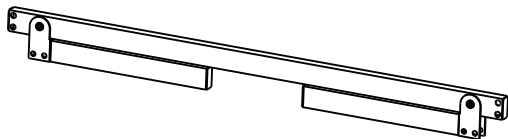


x2
Frame

2

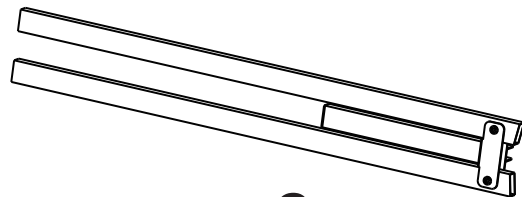

x2
Side Frame

3

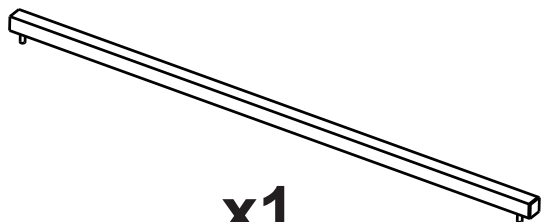


x1
Center Slat

4



x12
Slats

A

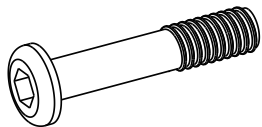


x8
Screws
M8 x 40mm

B



x2
Nut
M8



x1
Wrench

Step 1




ATTENTION

For longer use .


Re-tighten bolts every 3 months by using the enclosed allen-key.

*Using an electric drill can damage the frame.

Please re-tighten bolts manually .

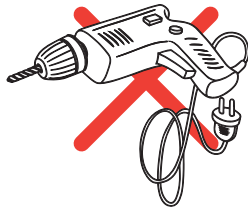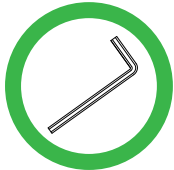

Ax8

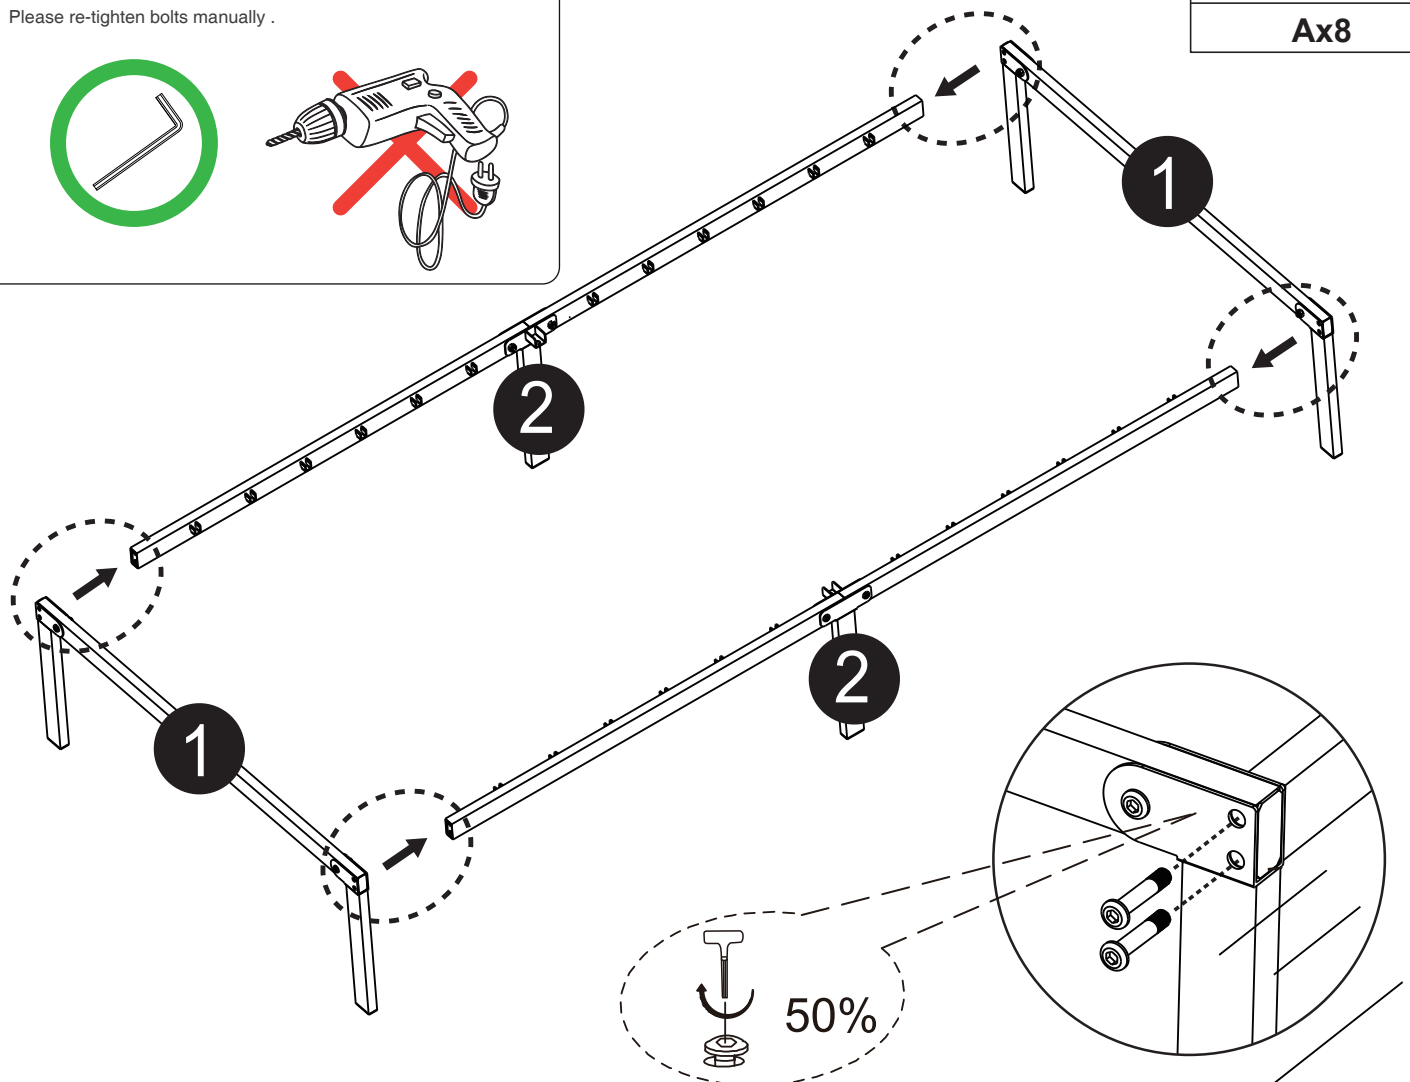


The screws are tightened by 50% first

Attach Side Frame **(2)*2** to the four corners of the Frame **(1)*2** with Screws **(A)*8**.

Note: Fully expand the frame before installing the screws. Otherwise the screw cannot be twisted in.


Step 2

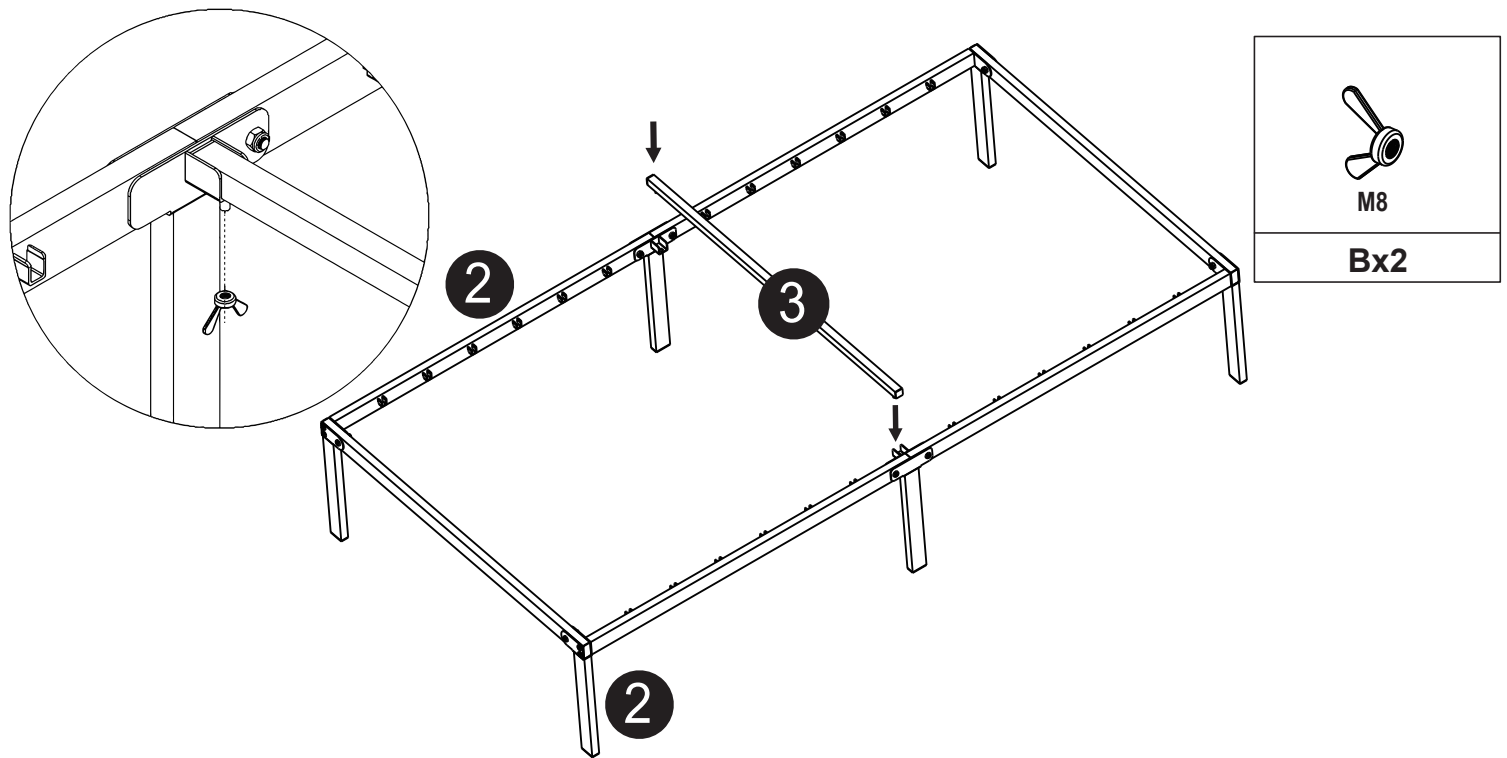


Insert Center Slat **(3)*1** onto the **groove** in the middle of the Side Frame **(2)*2**. Then, fix the two ends of the Central Slat **(3)** with Nut **(B)*2**.

Note: Once installation is complete, tighten all screws 100%.

Step 3

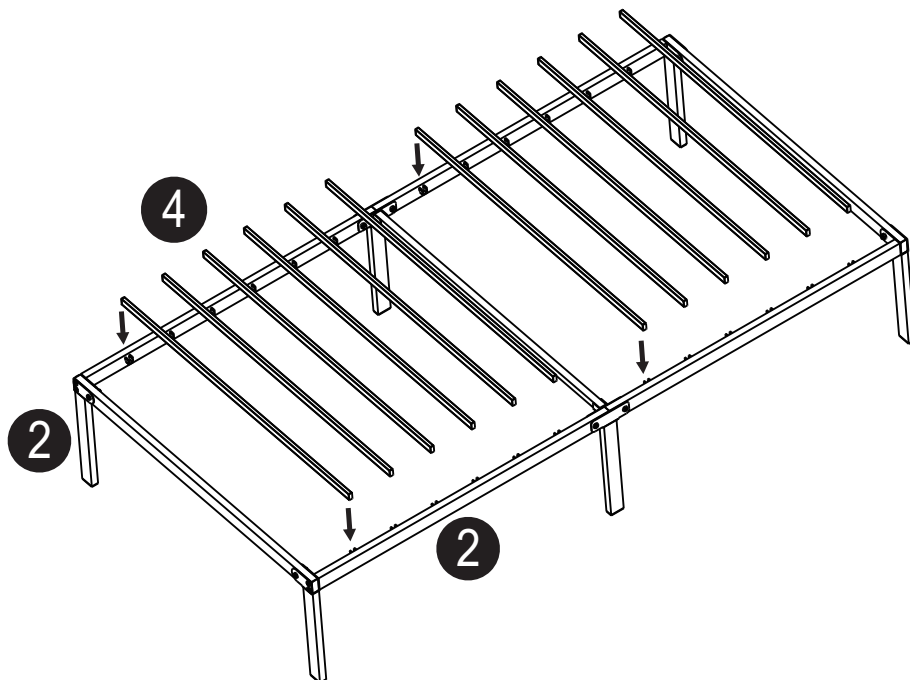

Insert Slats **(4)*12** evenly onto **each groove** of the Side Frame **(2)*2**.

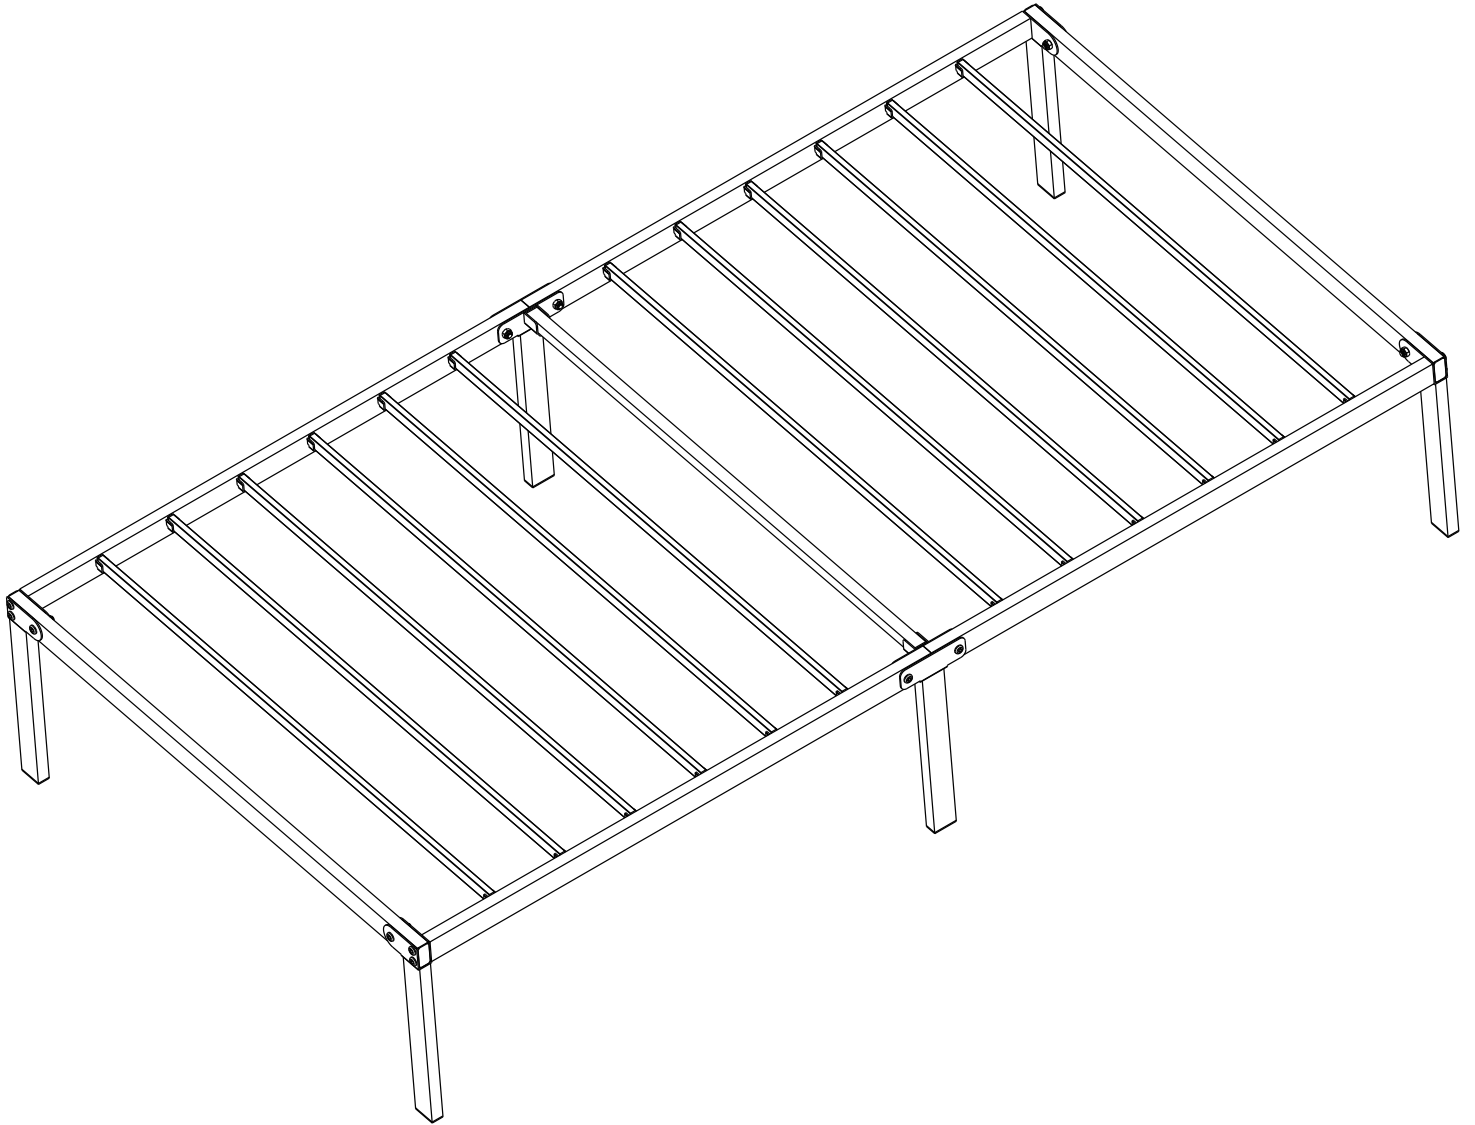

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.