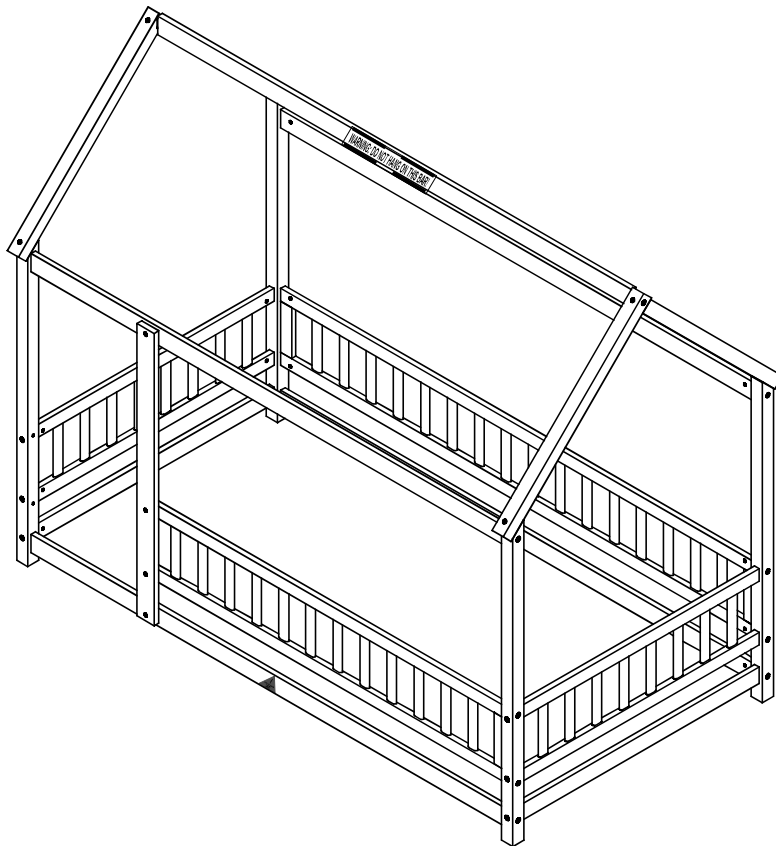



ASSEMBLY INSTRUCTIONS

TWIN HOUSE FLOOR BED WITH FENCE













SD33759

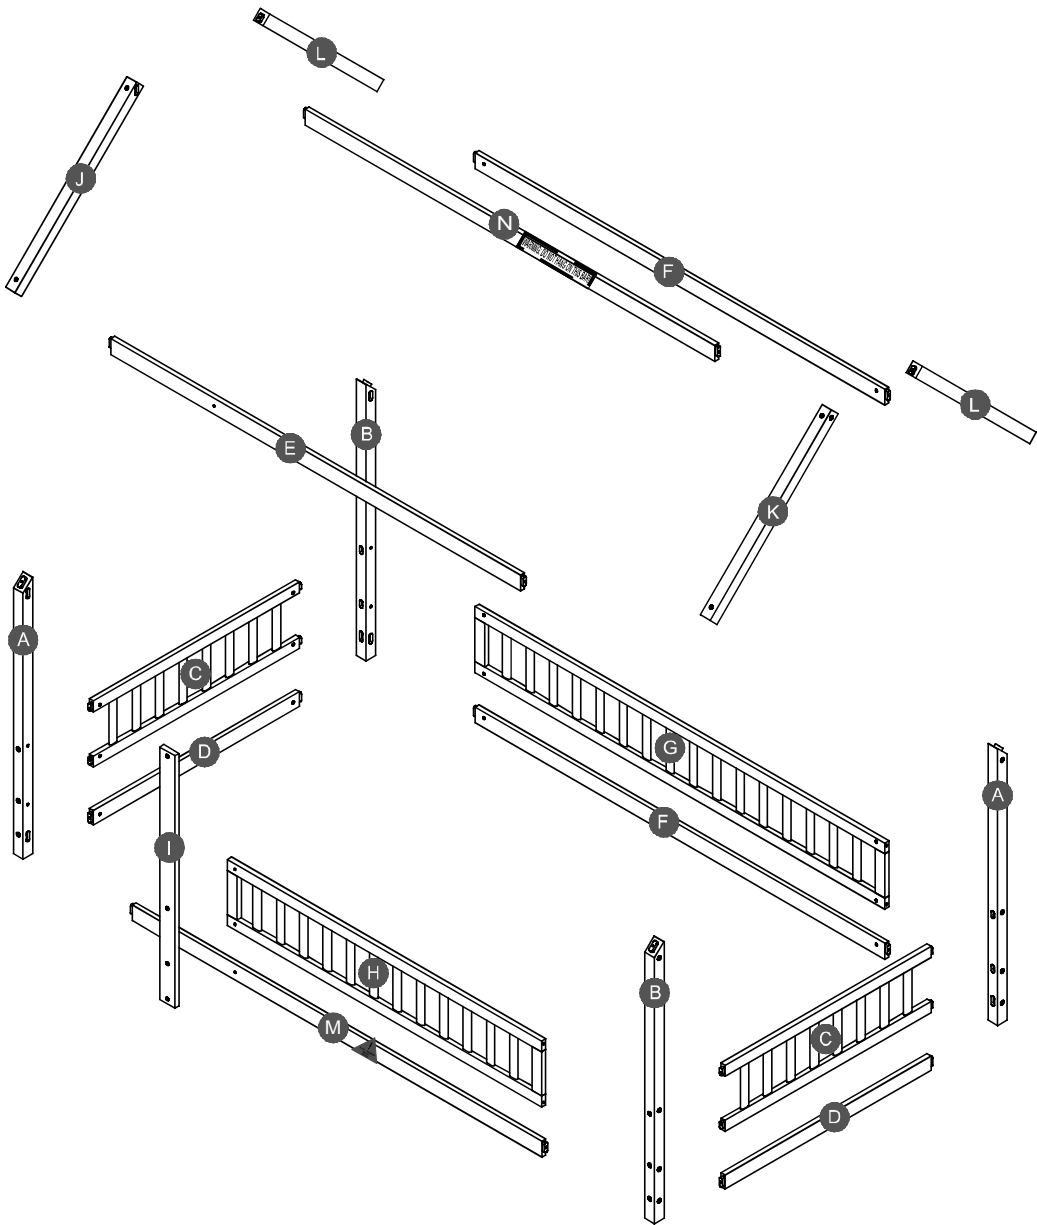
Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Frame HB/FB - 2pcs
D  Lower horizontal bar - 2pcs	E  Horizontal bar (Front) - 1pc	F  Horizontal bar (Back) - 2pcs
G  Long guard rail (Back) - 1pc	H  Short guard rail (Front) - 1pc	I  Vertical guard rail (Front) - 1pc
J  Upper (Left Front) - 1pc	K  Upper (Right Front) - 1pc	L  Upper (Back) - 2pcs
M  Horizontal bar (Front) - 1pc	N  Horizontal bar (Back) - 1pc	

Hardware List


1  (1/4")4.5*58mm Allen key (1pc)	2  (Ø15)1/4"*80mm Hex-Head bolts (28pcs)	3  (Ø15)1/4"*35mm Hex-Head bolts (4pcs)
4  (Ø15)1/4"*65mm Wood screw bolts (6pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts (28pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

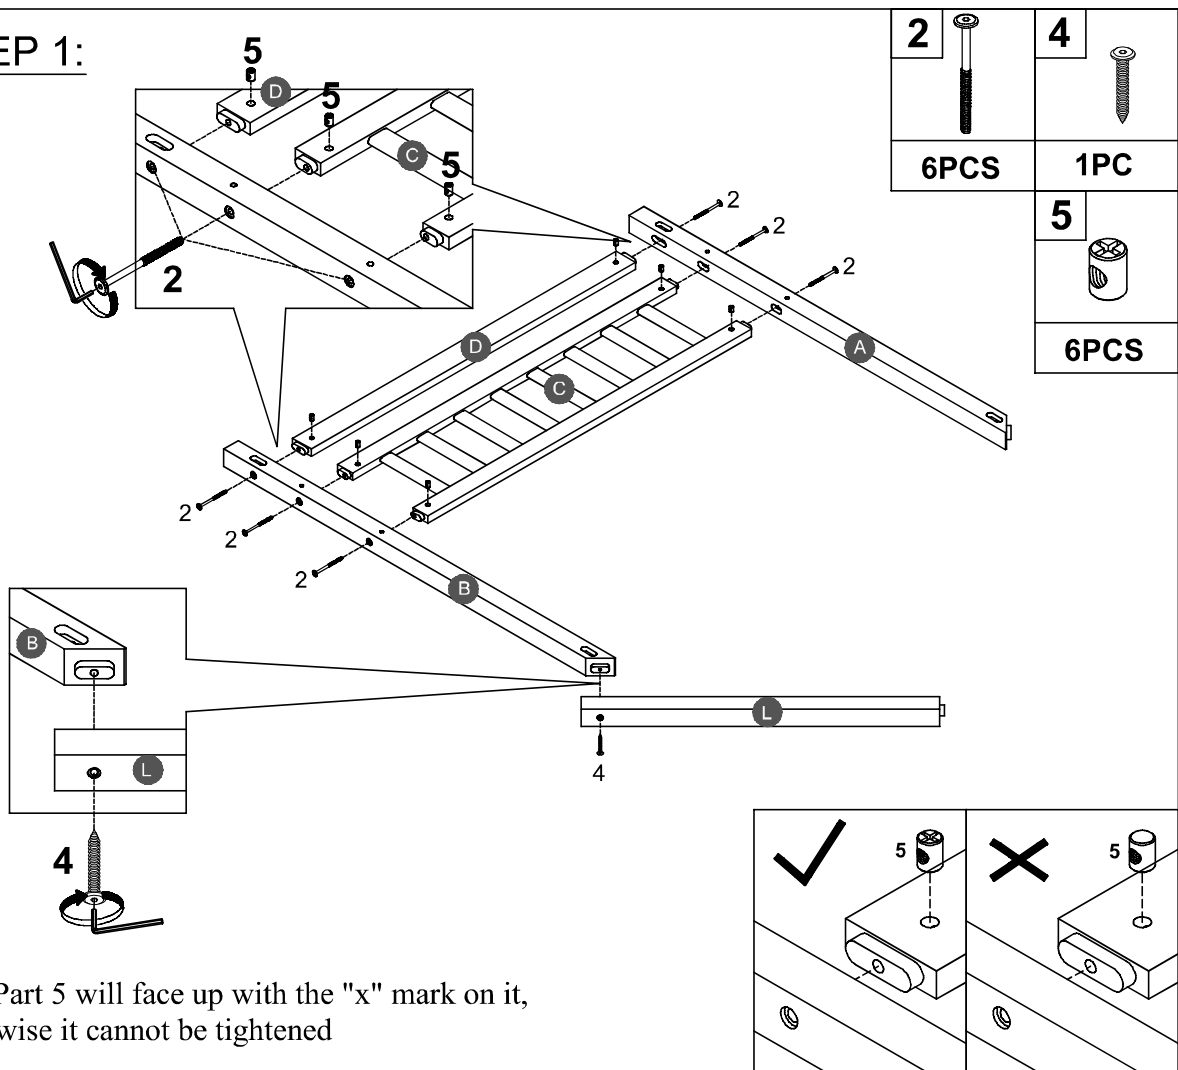
STEP 1:



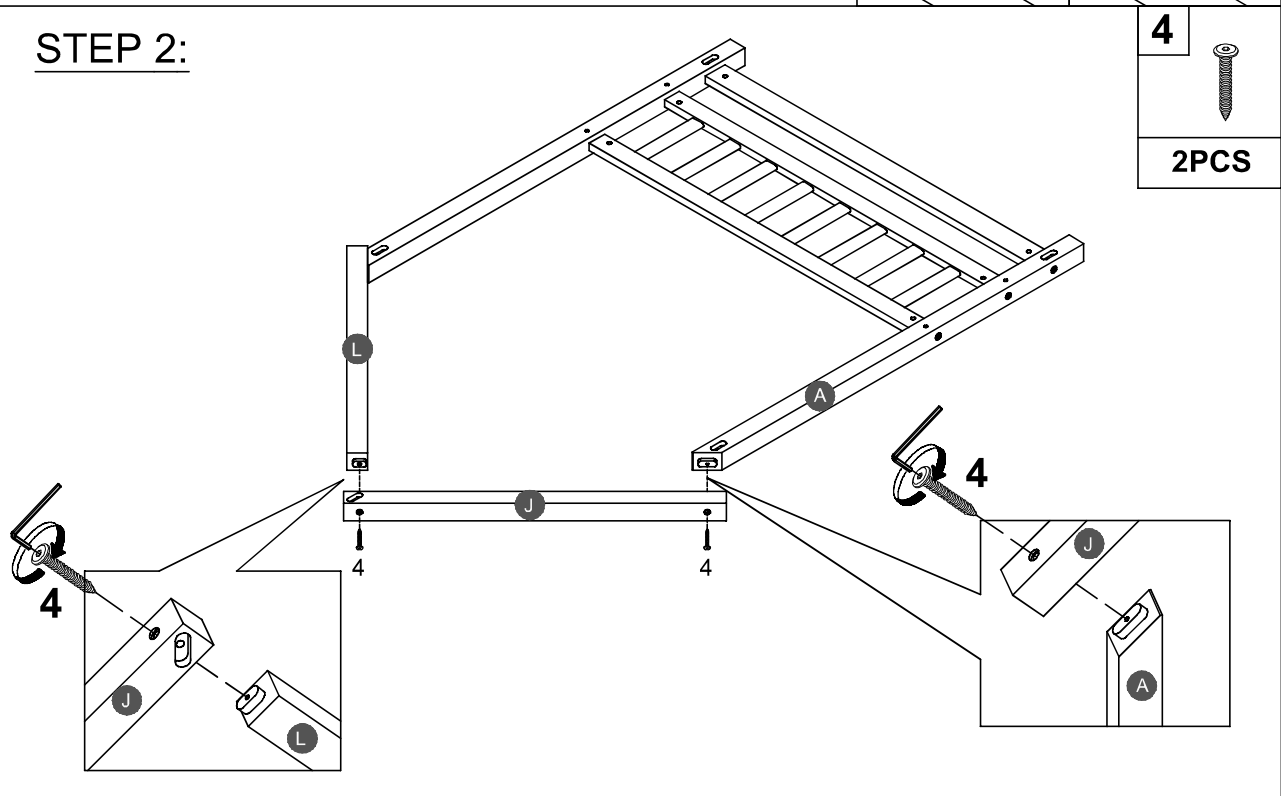
STEP 2:



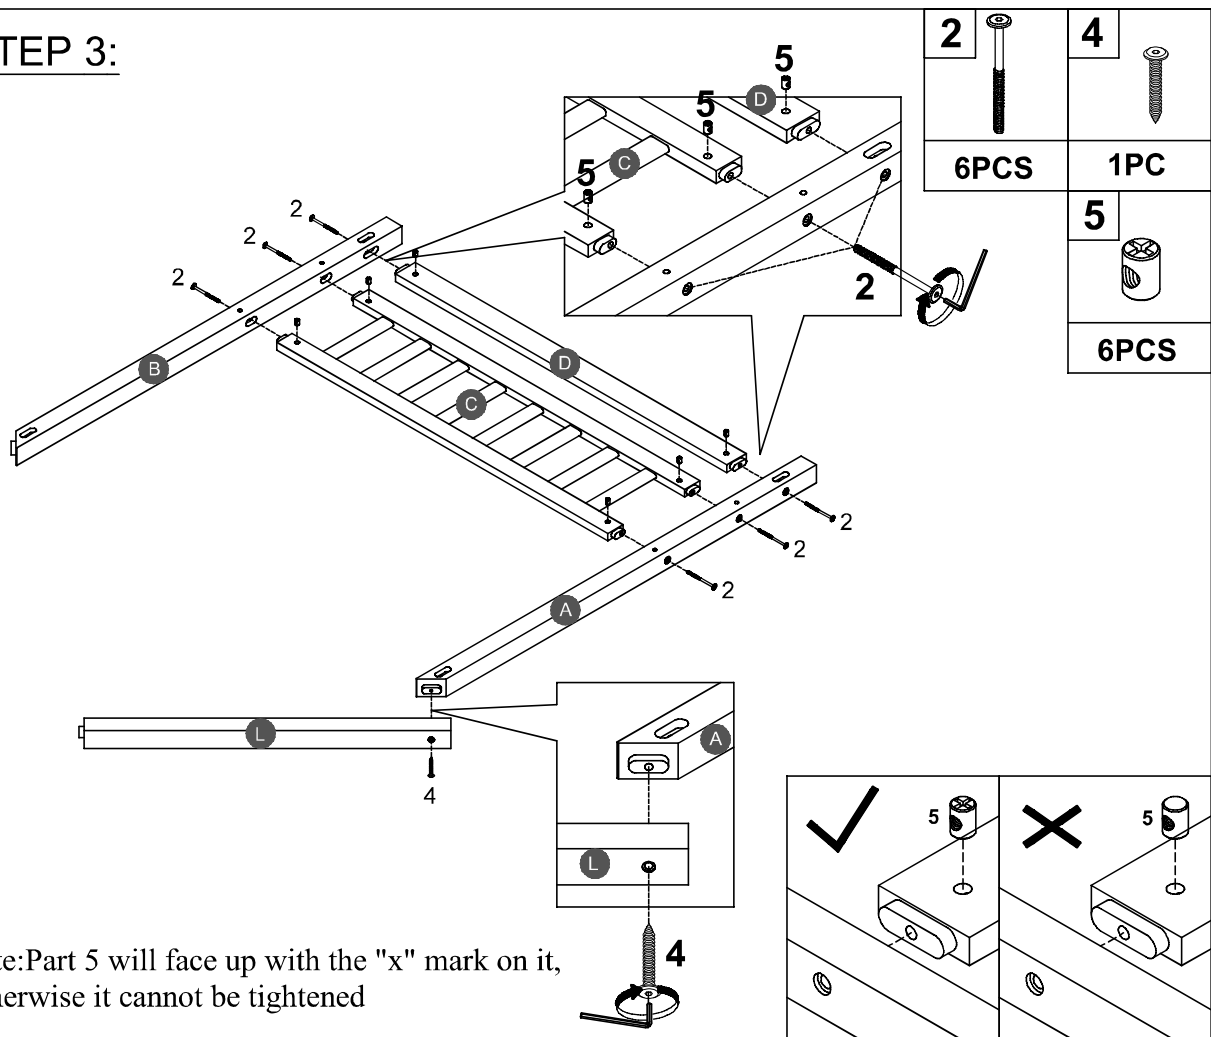STEP 3:




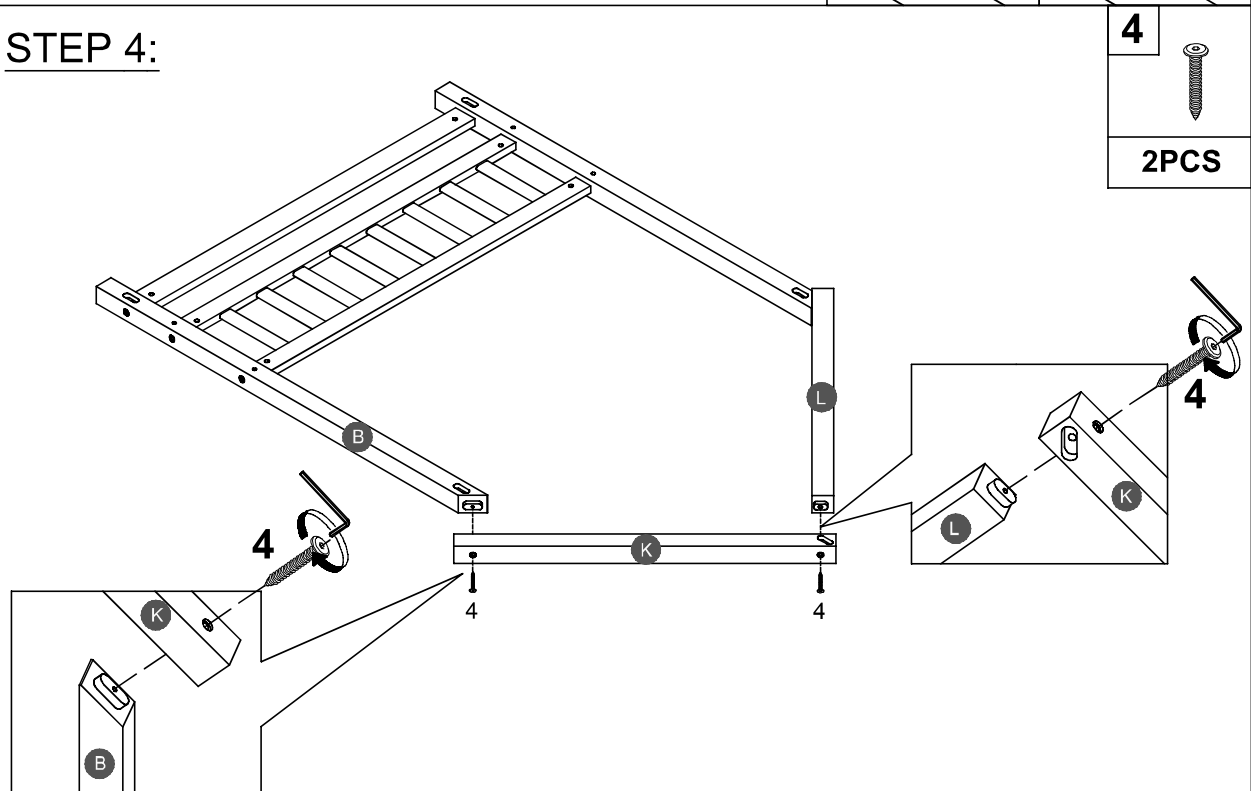STEP 4:



STEP 5:

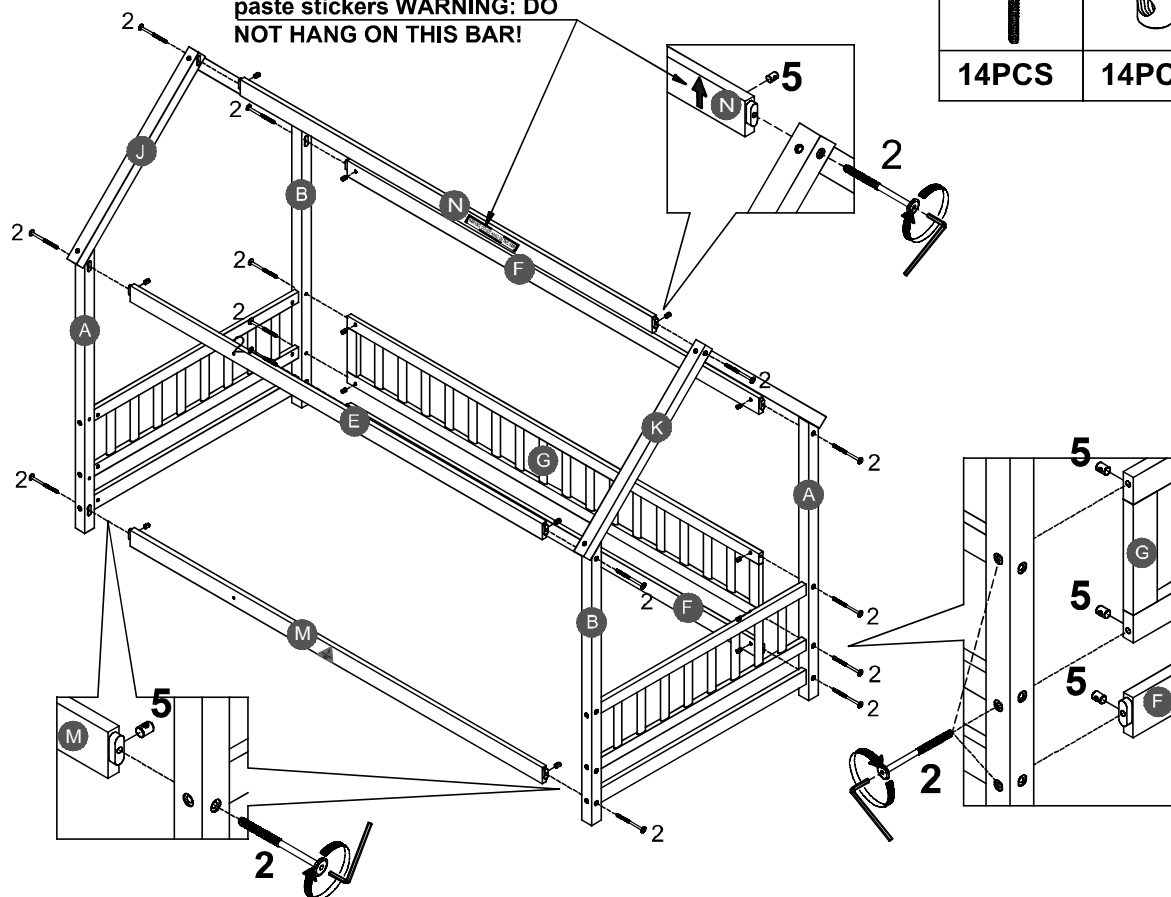Remark: Upper horizontal
paste stickers **WARNING: DO
NOT HANG ON THIS BAR!**



STEP 6:

