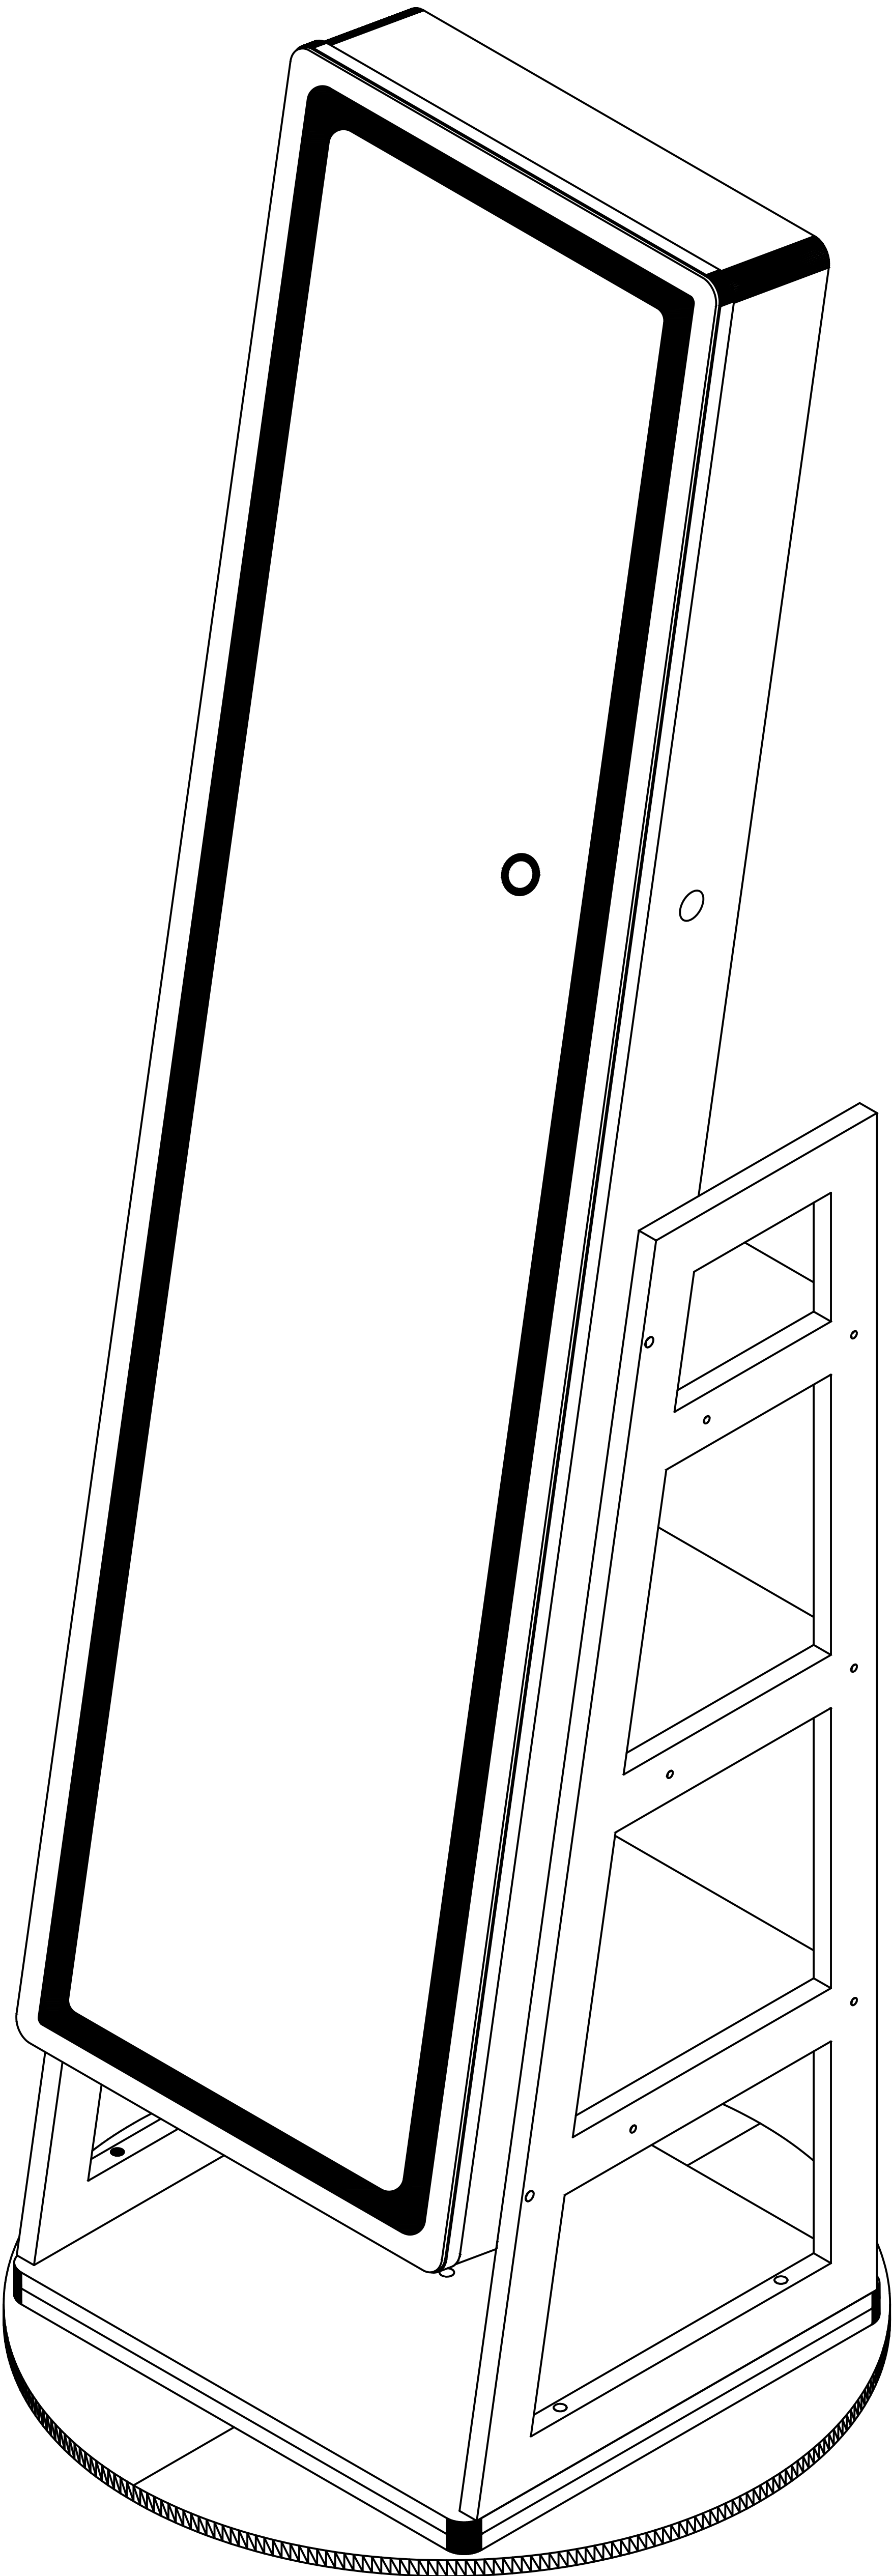
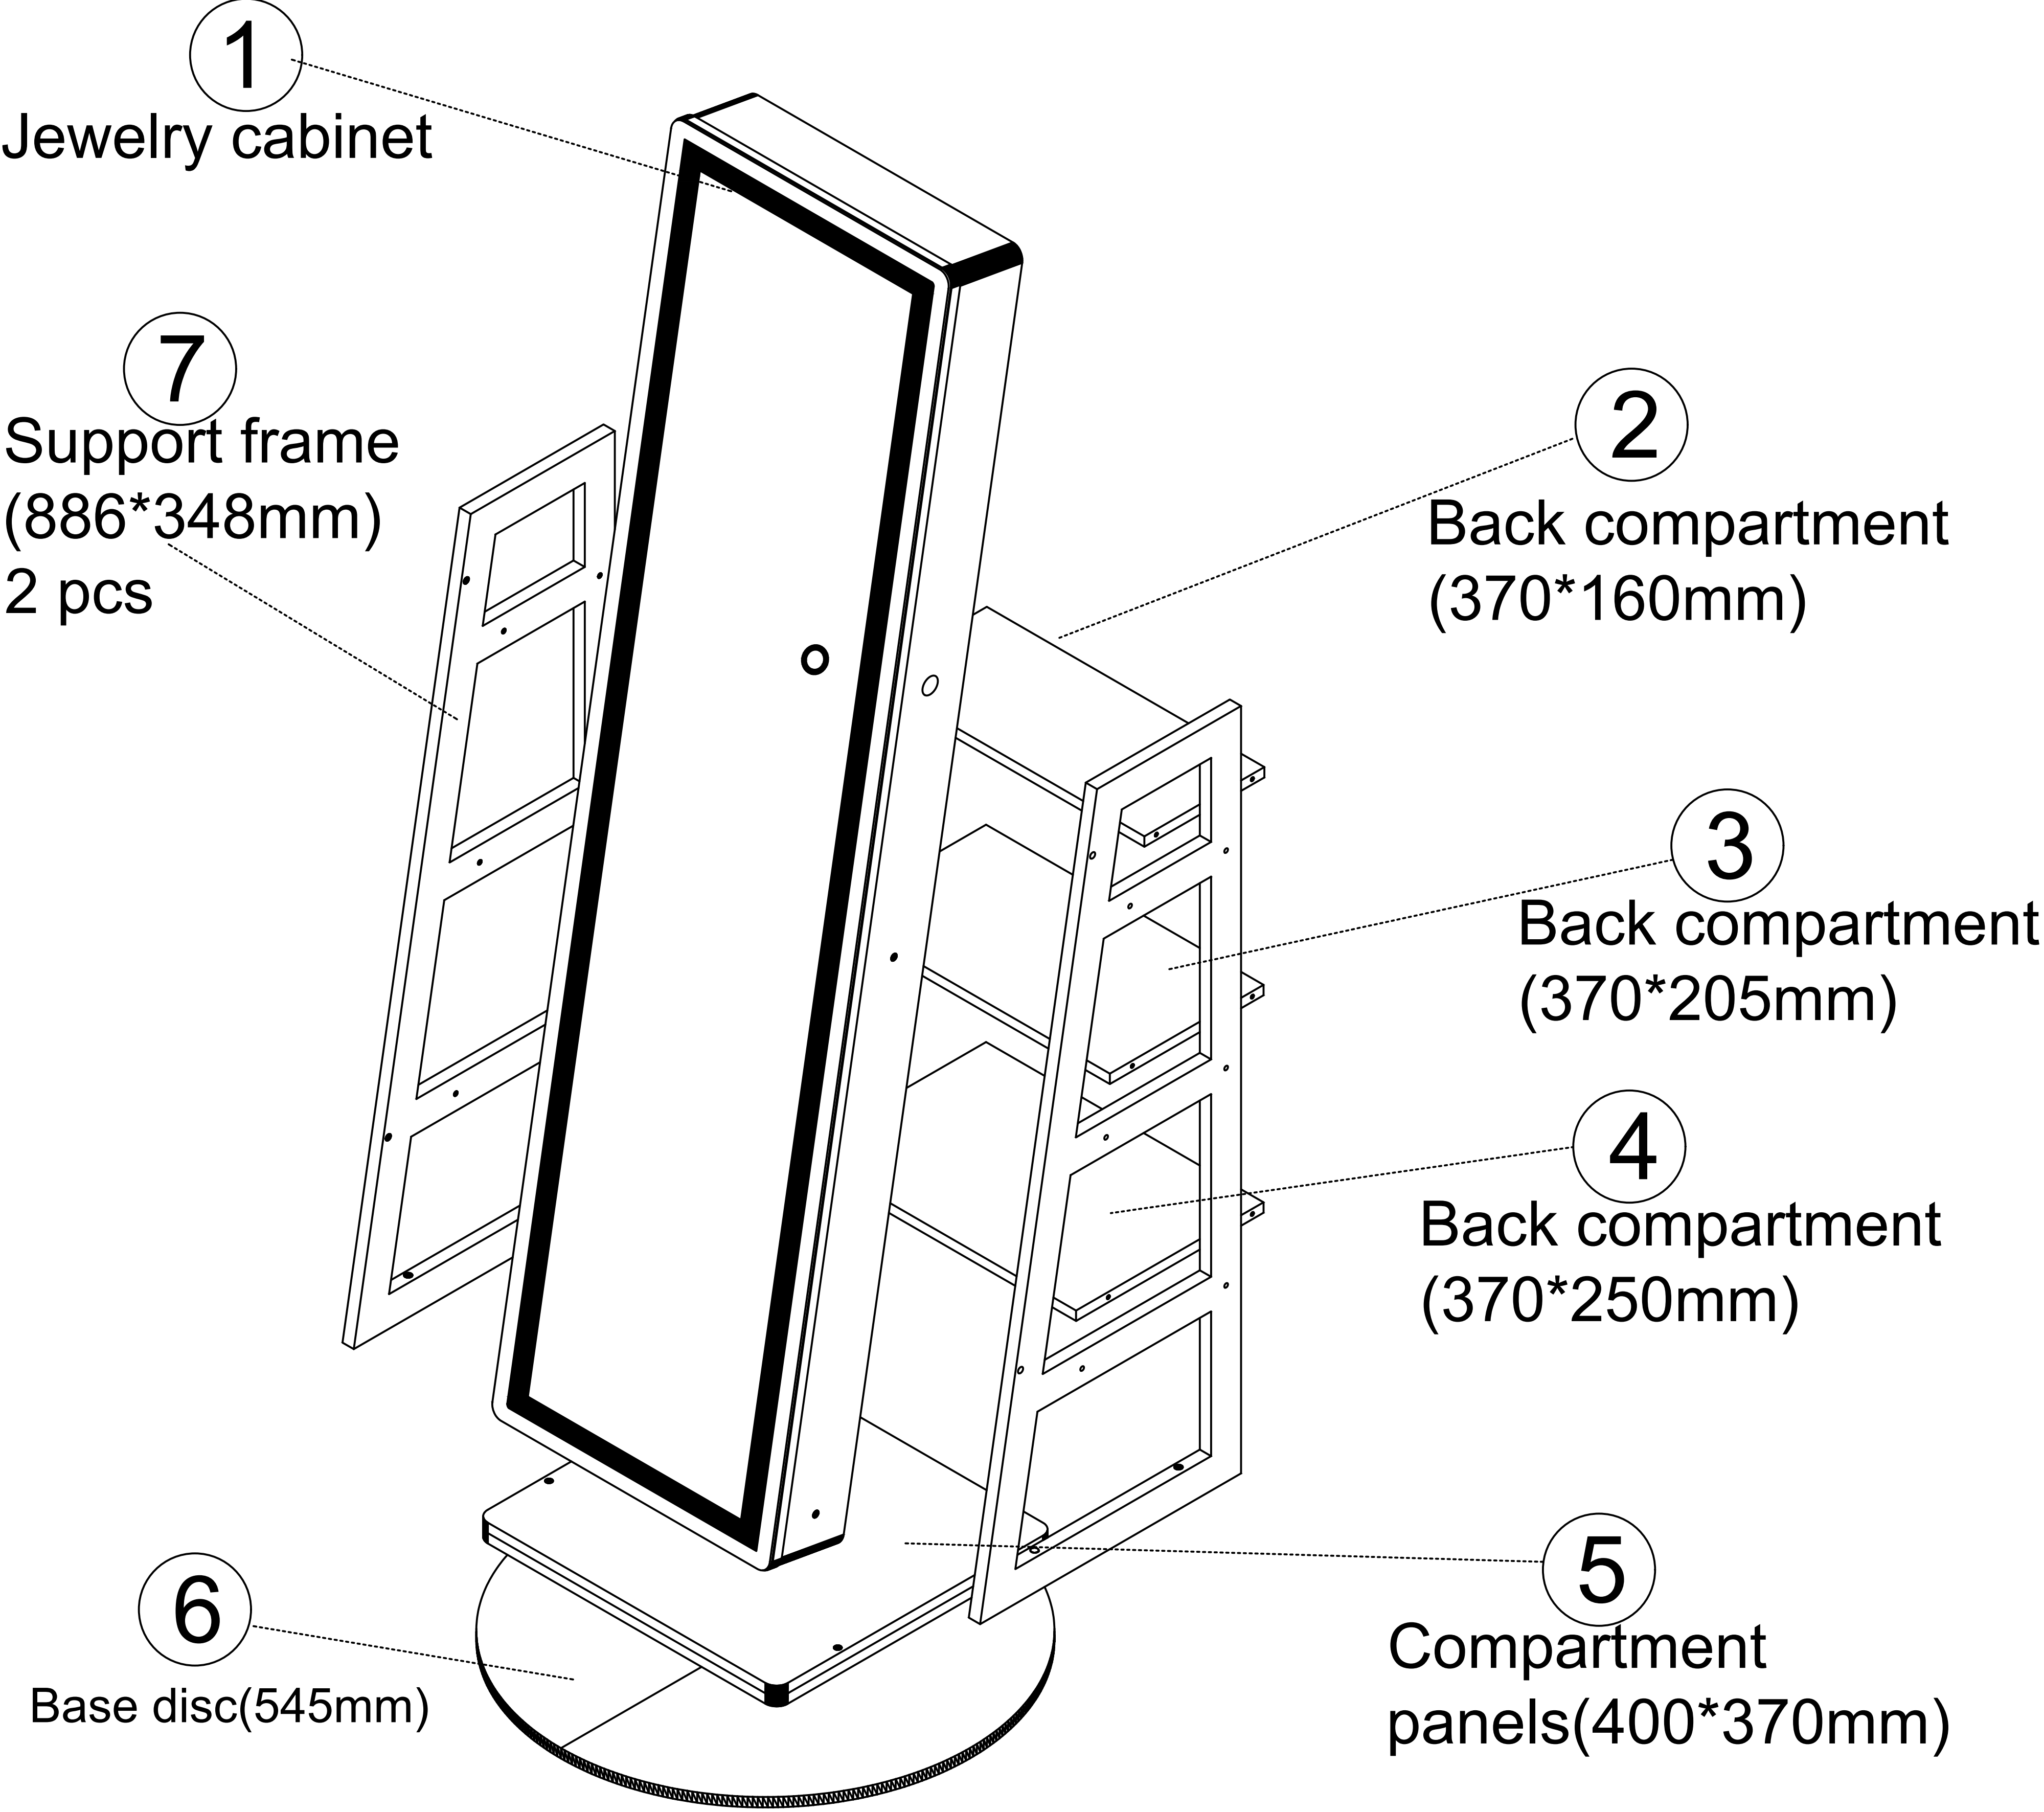













MIRROR JEWELLERY CABINET



Hardware list



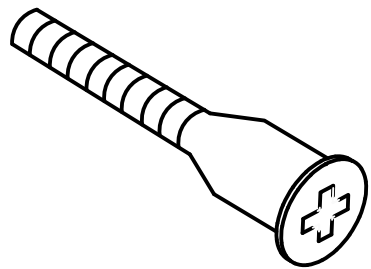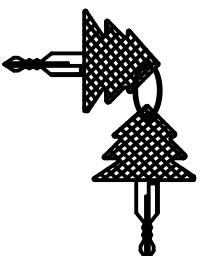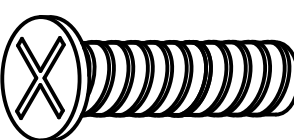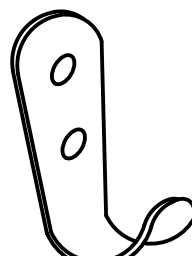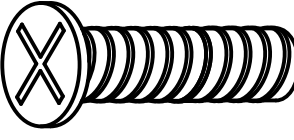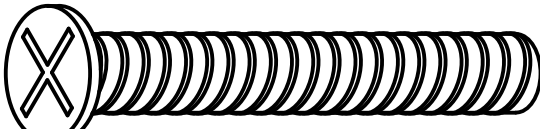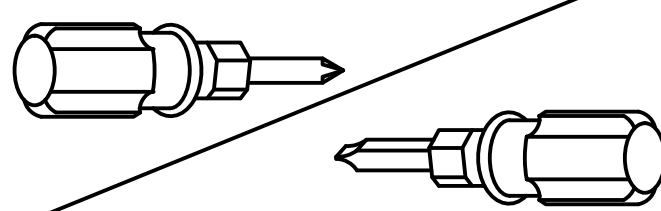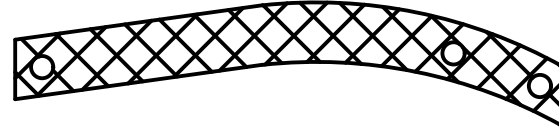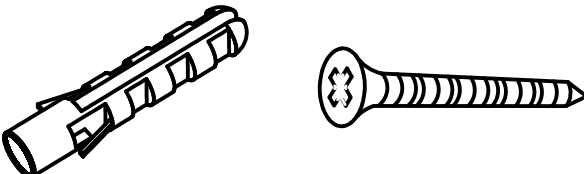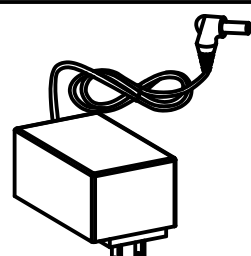
Accessories list

A		Screw (5x40mm)	12 Pcs
B		Key	1 Pcs
C		Cross machine wire (6x22mm)	4 Pcs
D		Self tapping screw(3x10mm)	4 Pcs
E		iron hook	2 Pcs
F		Cross machine wire (6x22mm)	4 Pcs
G		Cross machine wire (6x50mm)	4 Pcs
H		Screwdriver	1 Pcs
I		Anti-rewind (290mm)	1 Pcs
J		Self tapping wire(3x10mm)	1 Pcs
K		Colloidal granules/Self tapping wire(4x45mm)	1 Pcs
		The power adapter(12V 3A)	1 Pcs

C and F hardware are the same


Step 1

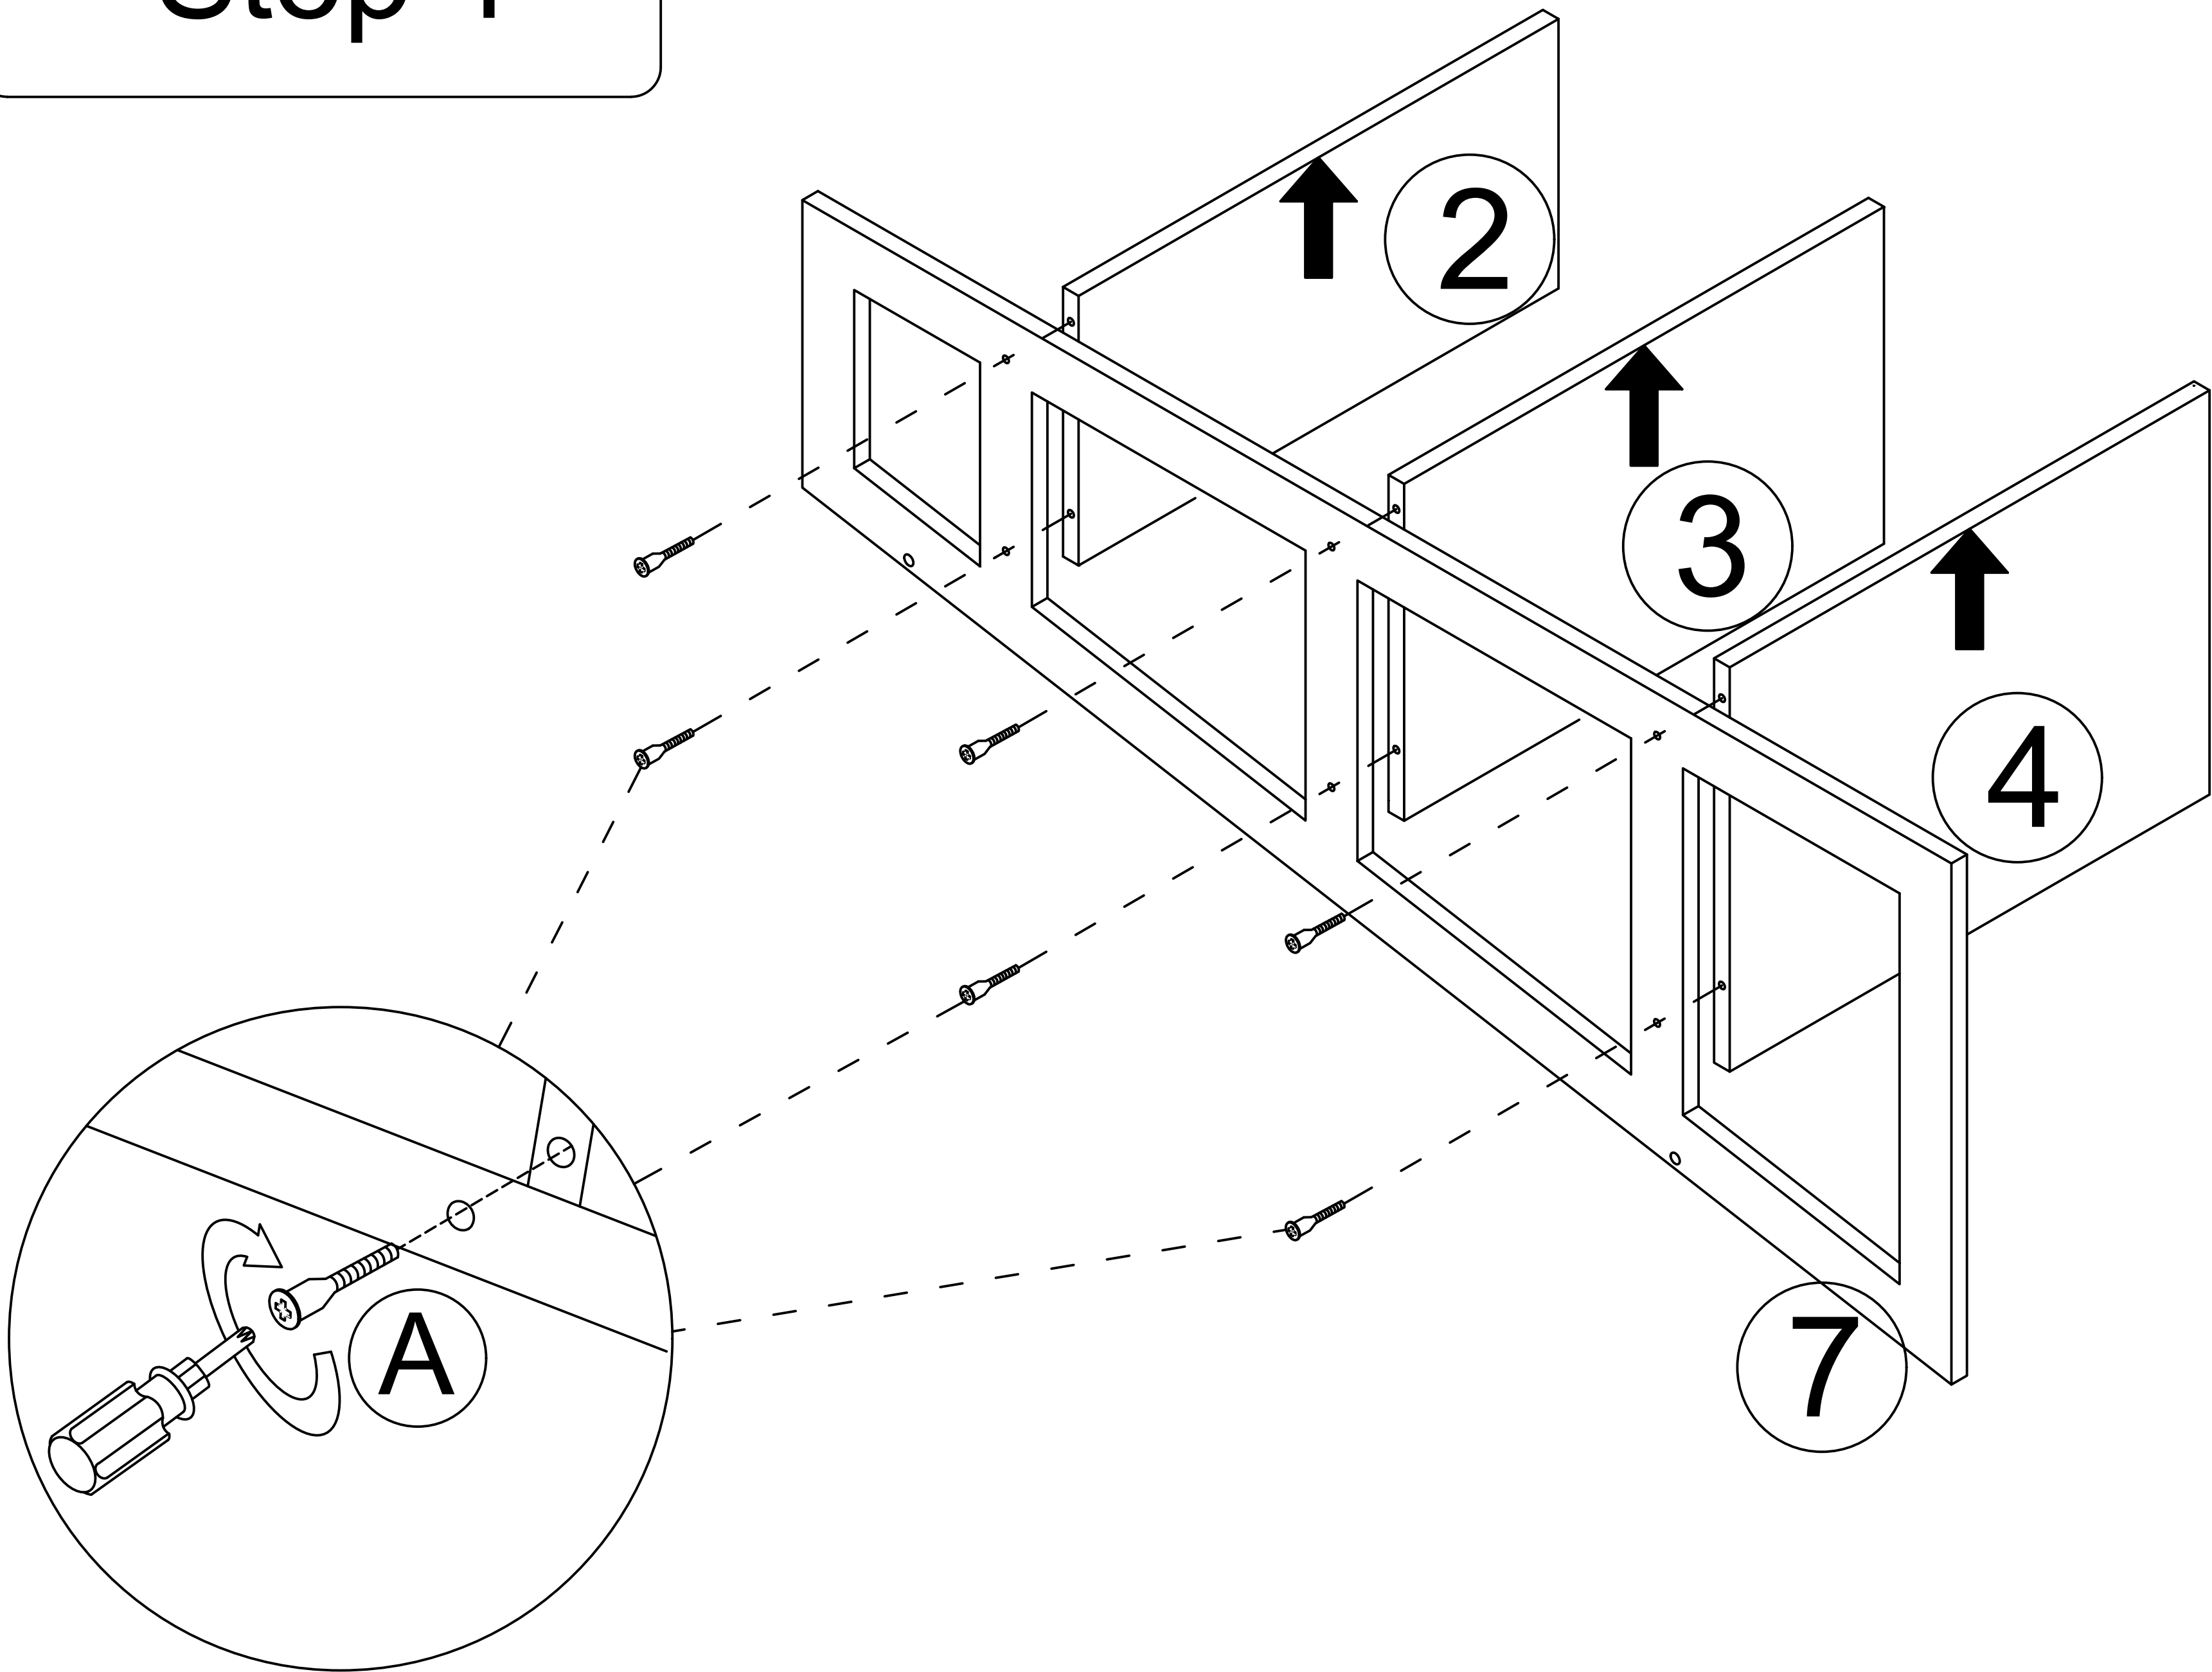A (5*40mm) X 6





Step 2

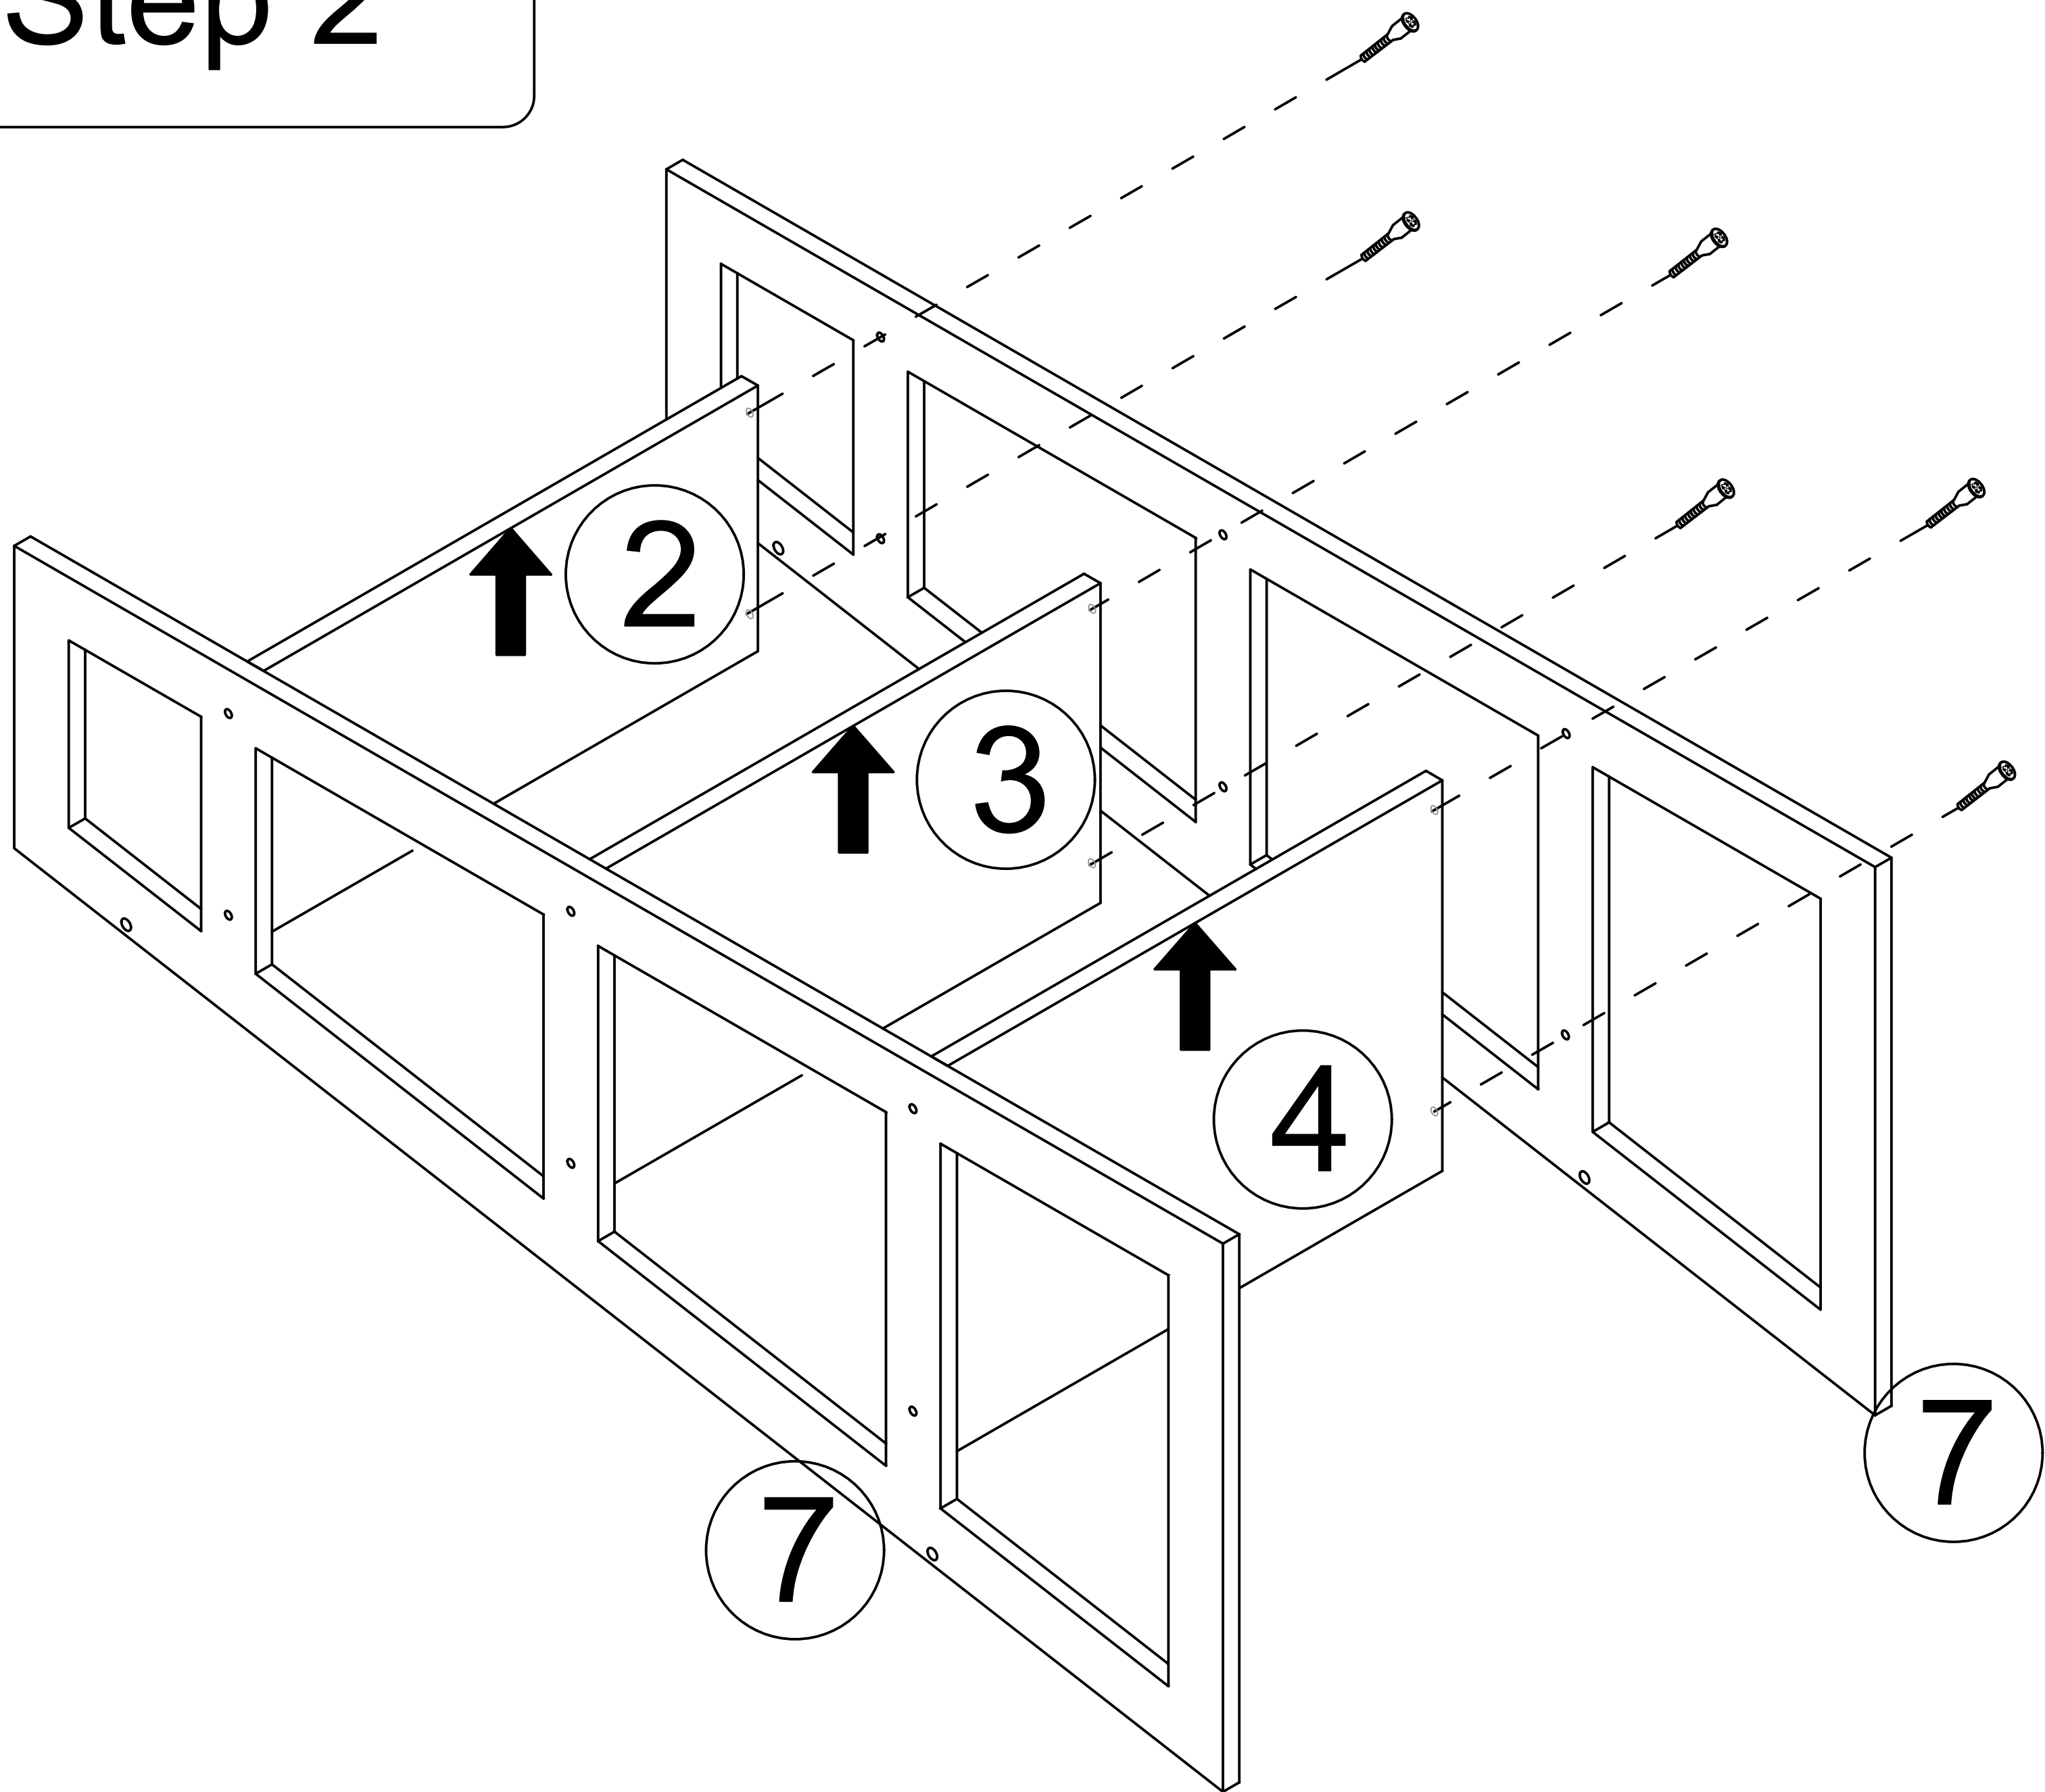A (5*40mm) X 6




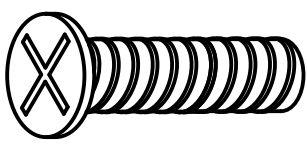Step 3


F  (6*22mm) x 4

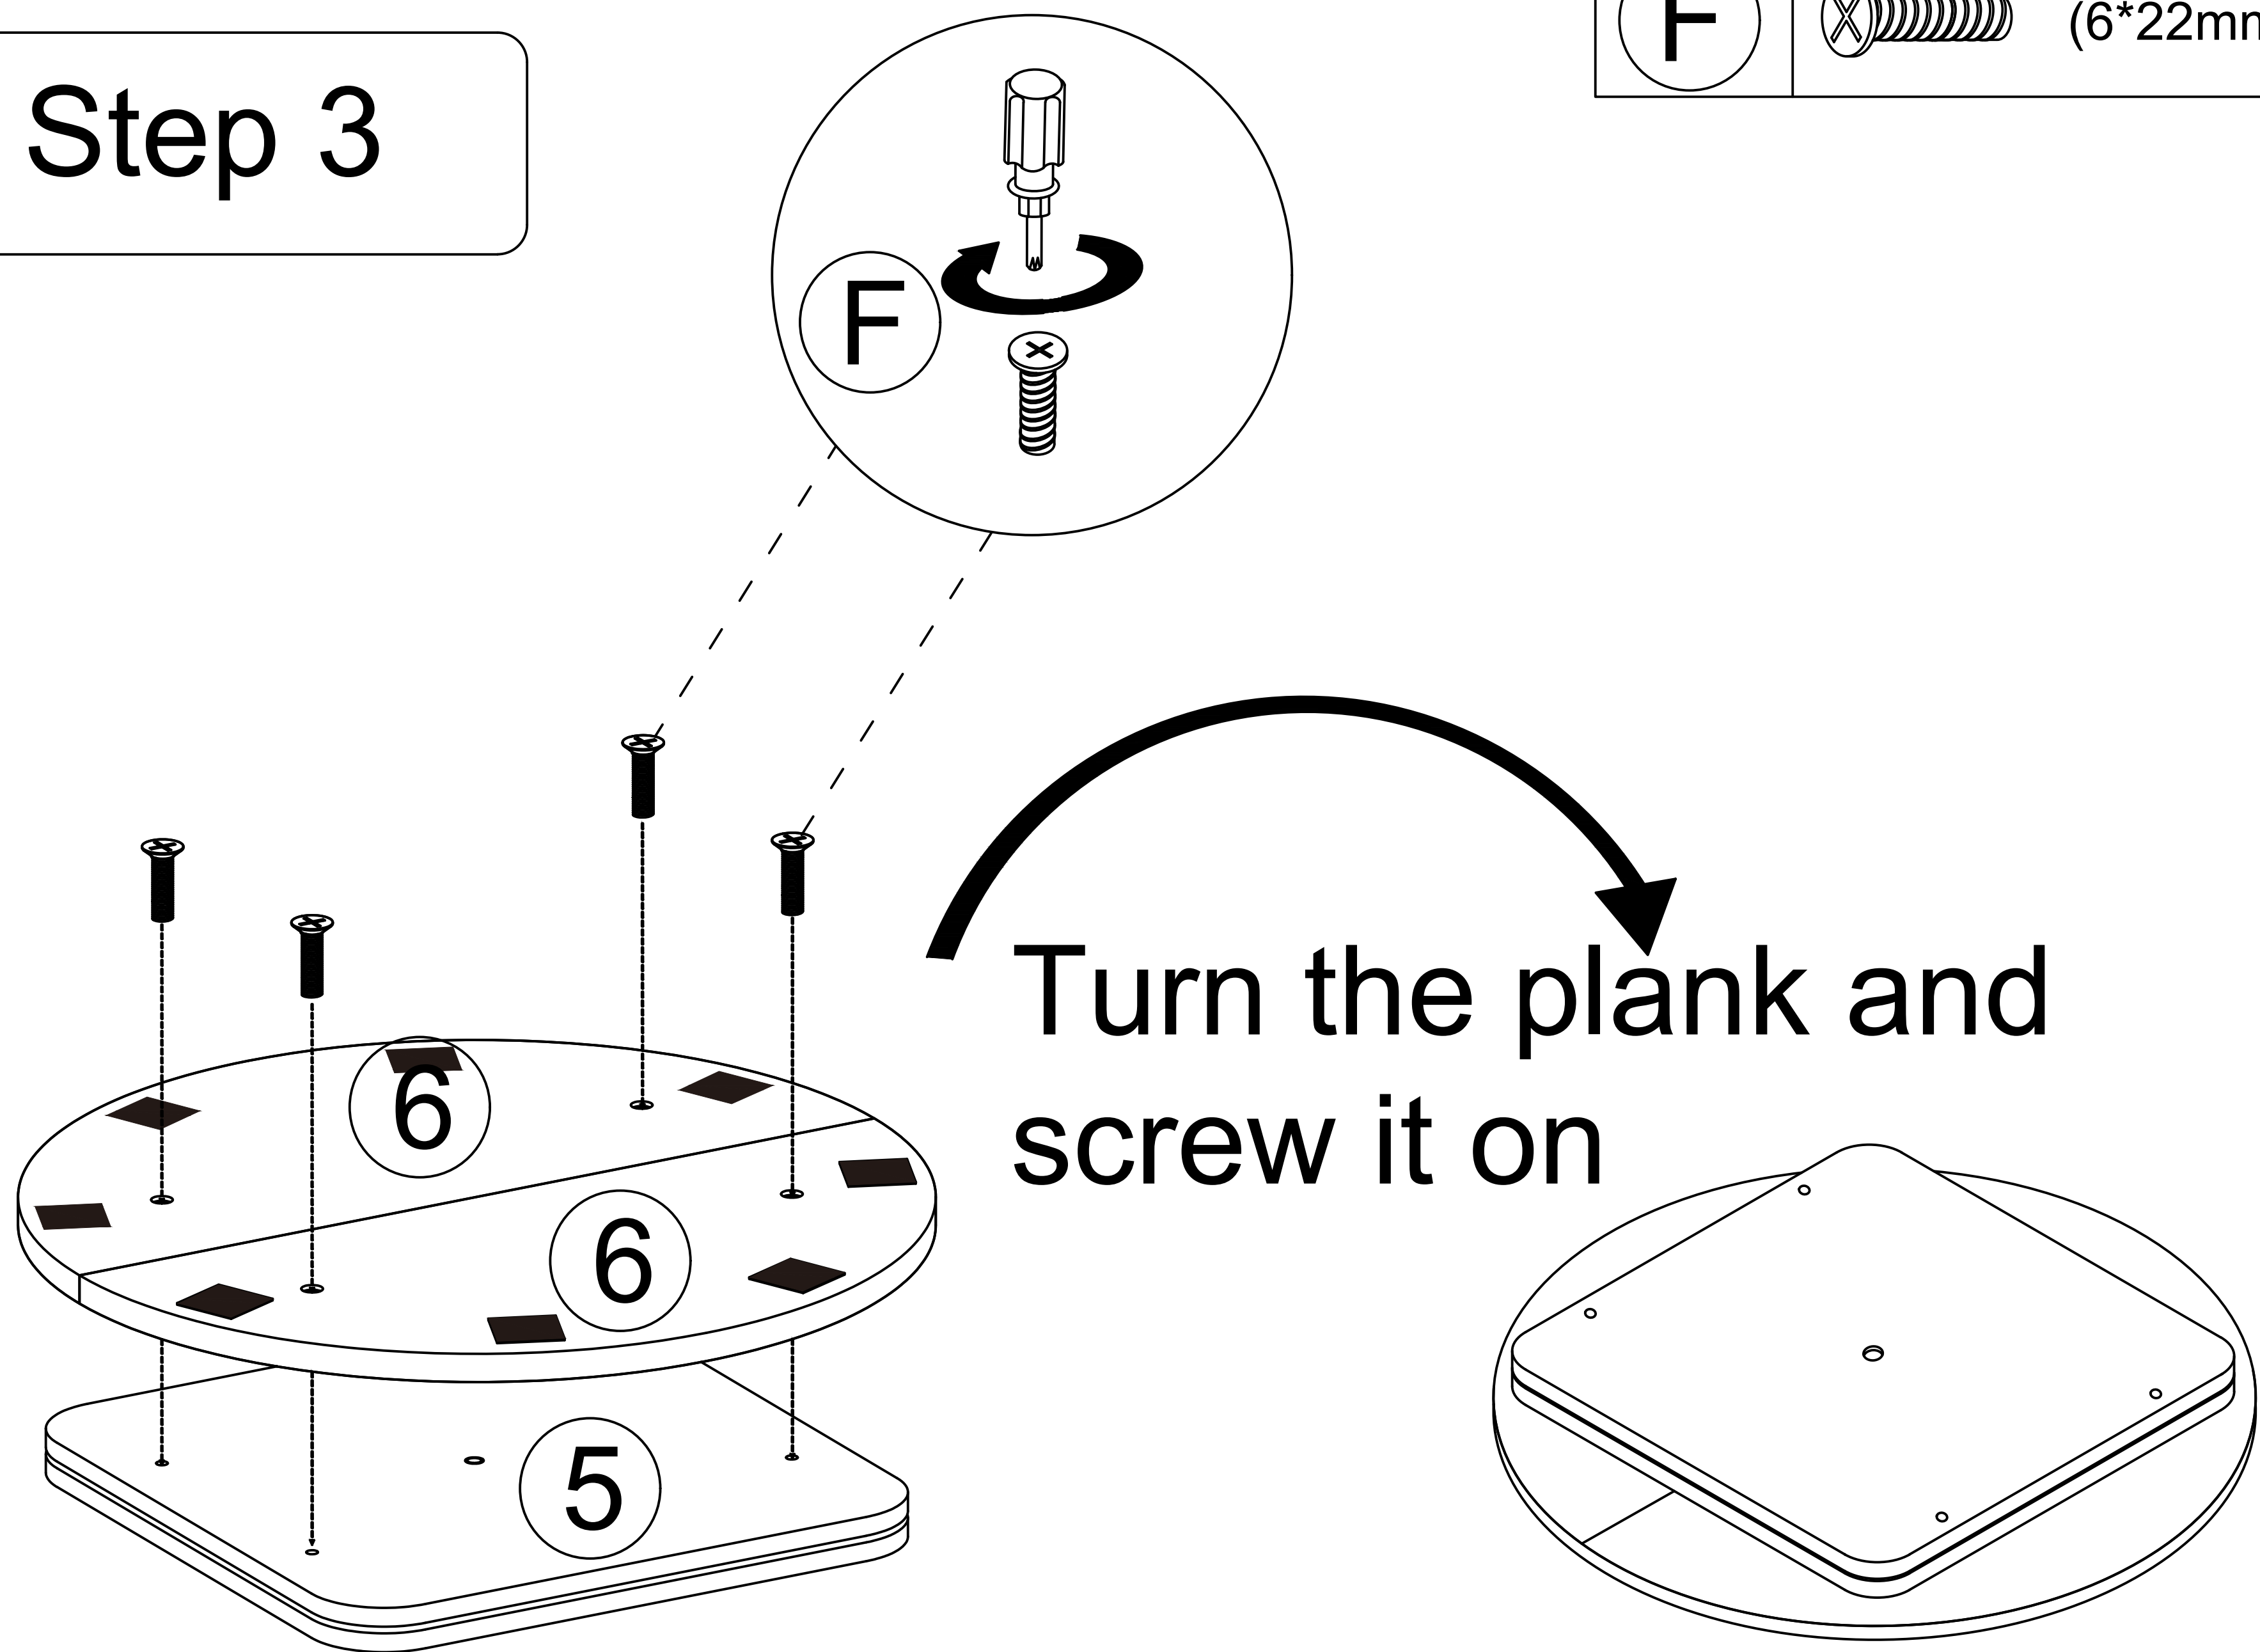

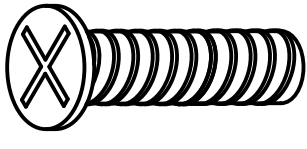Step 4

C  (6*22mm) x 4

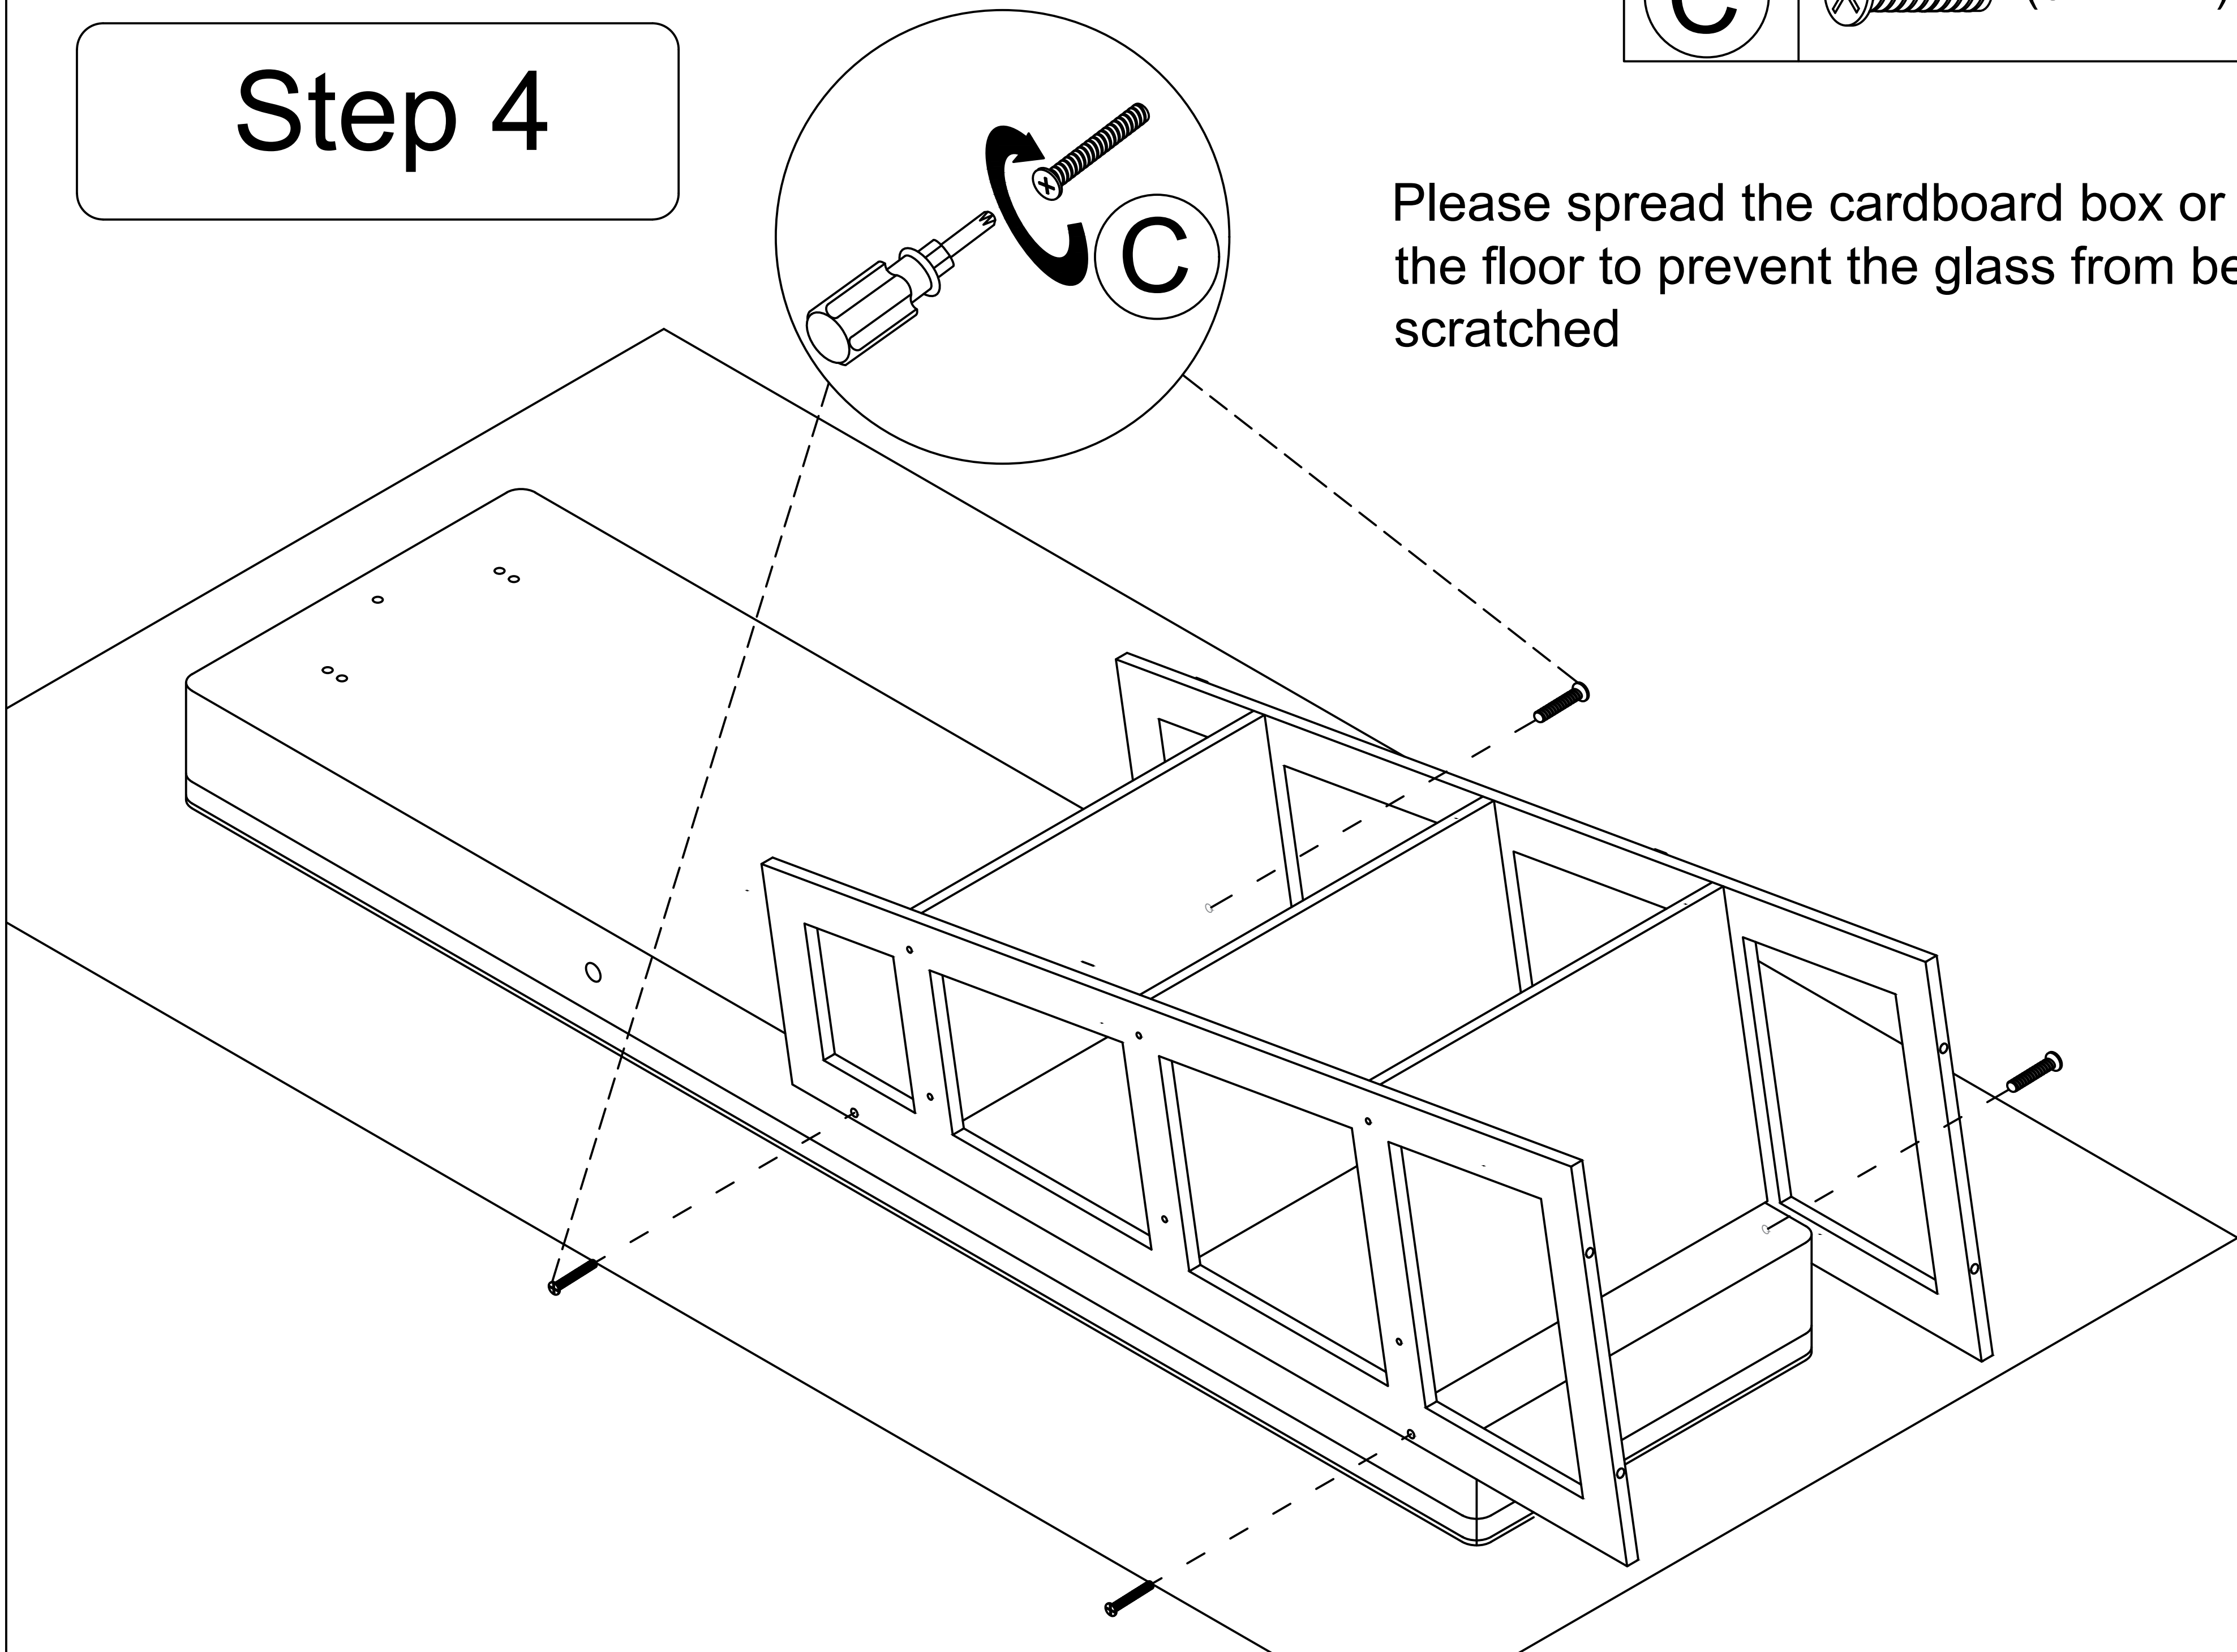
Please spread the cardboard box or foam on the floor to prevent the glass from being scratched




Step 5

G

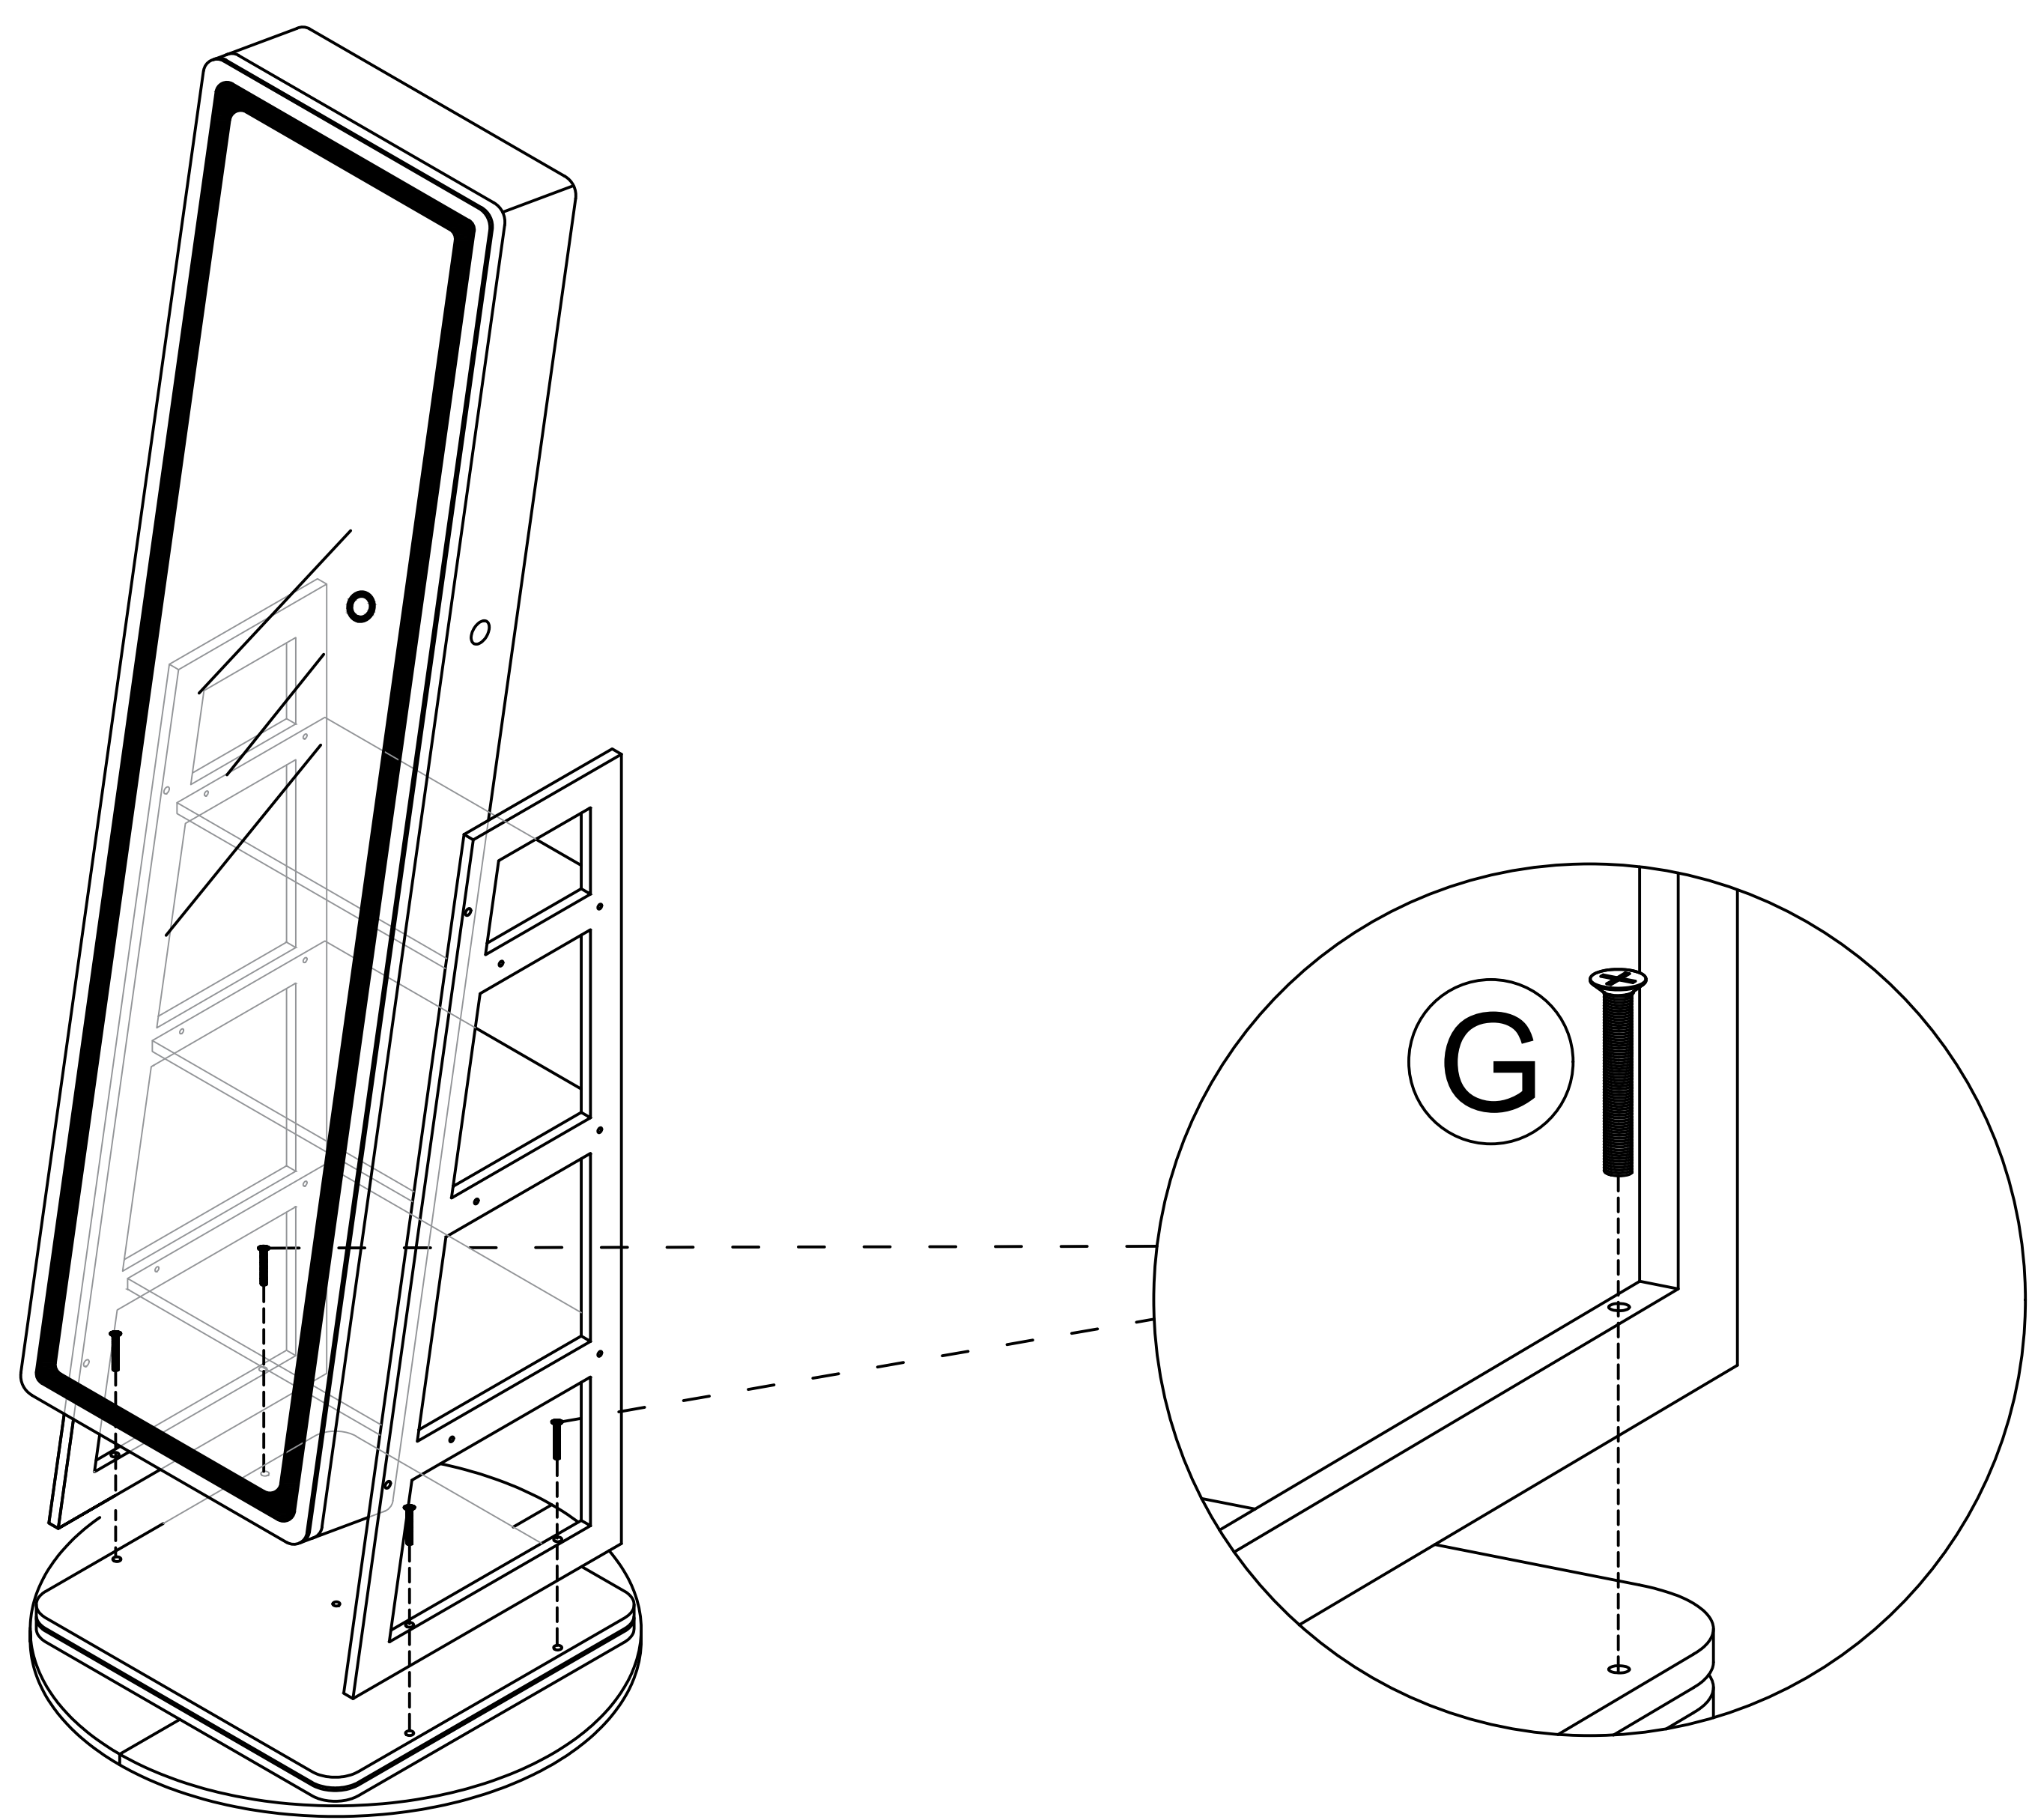
 (6*50mm) X 4






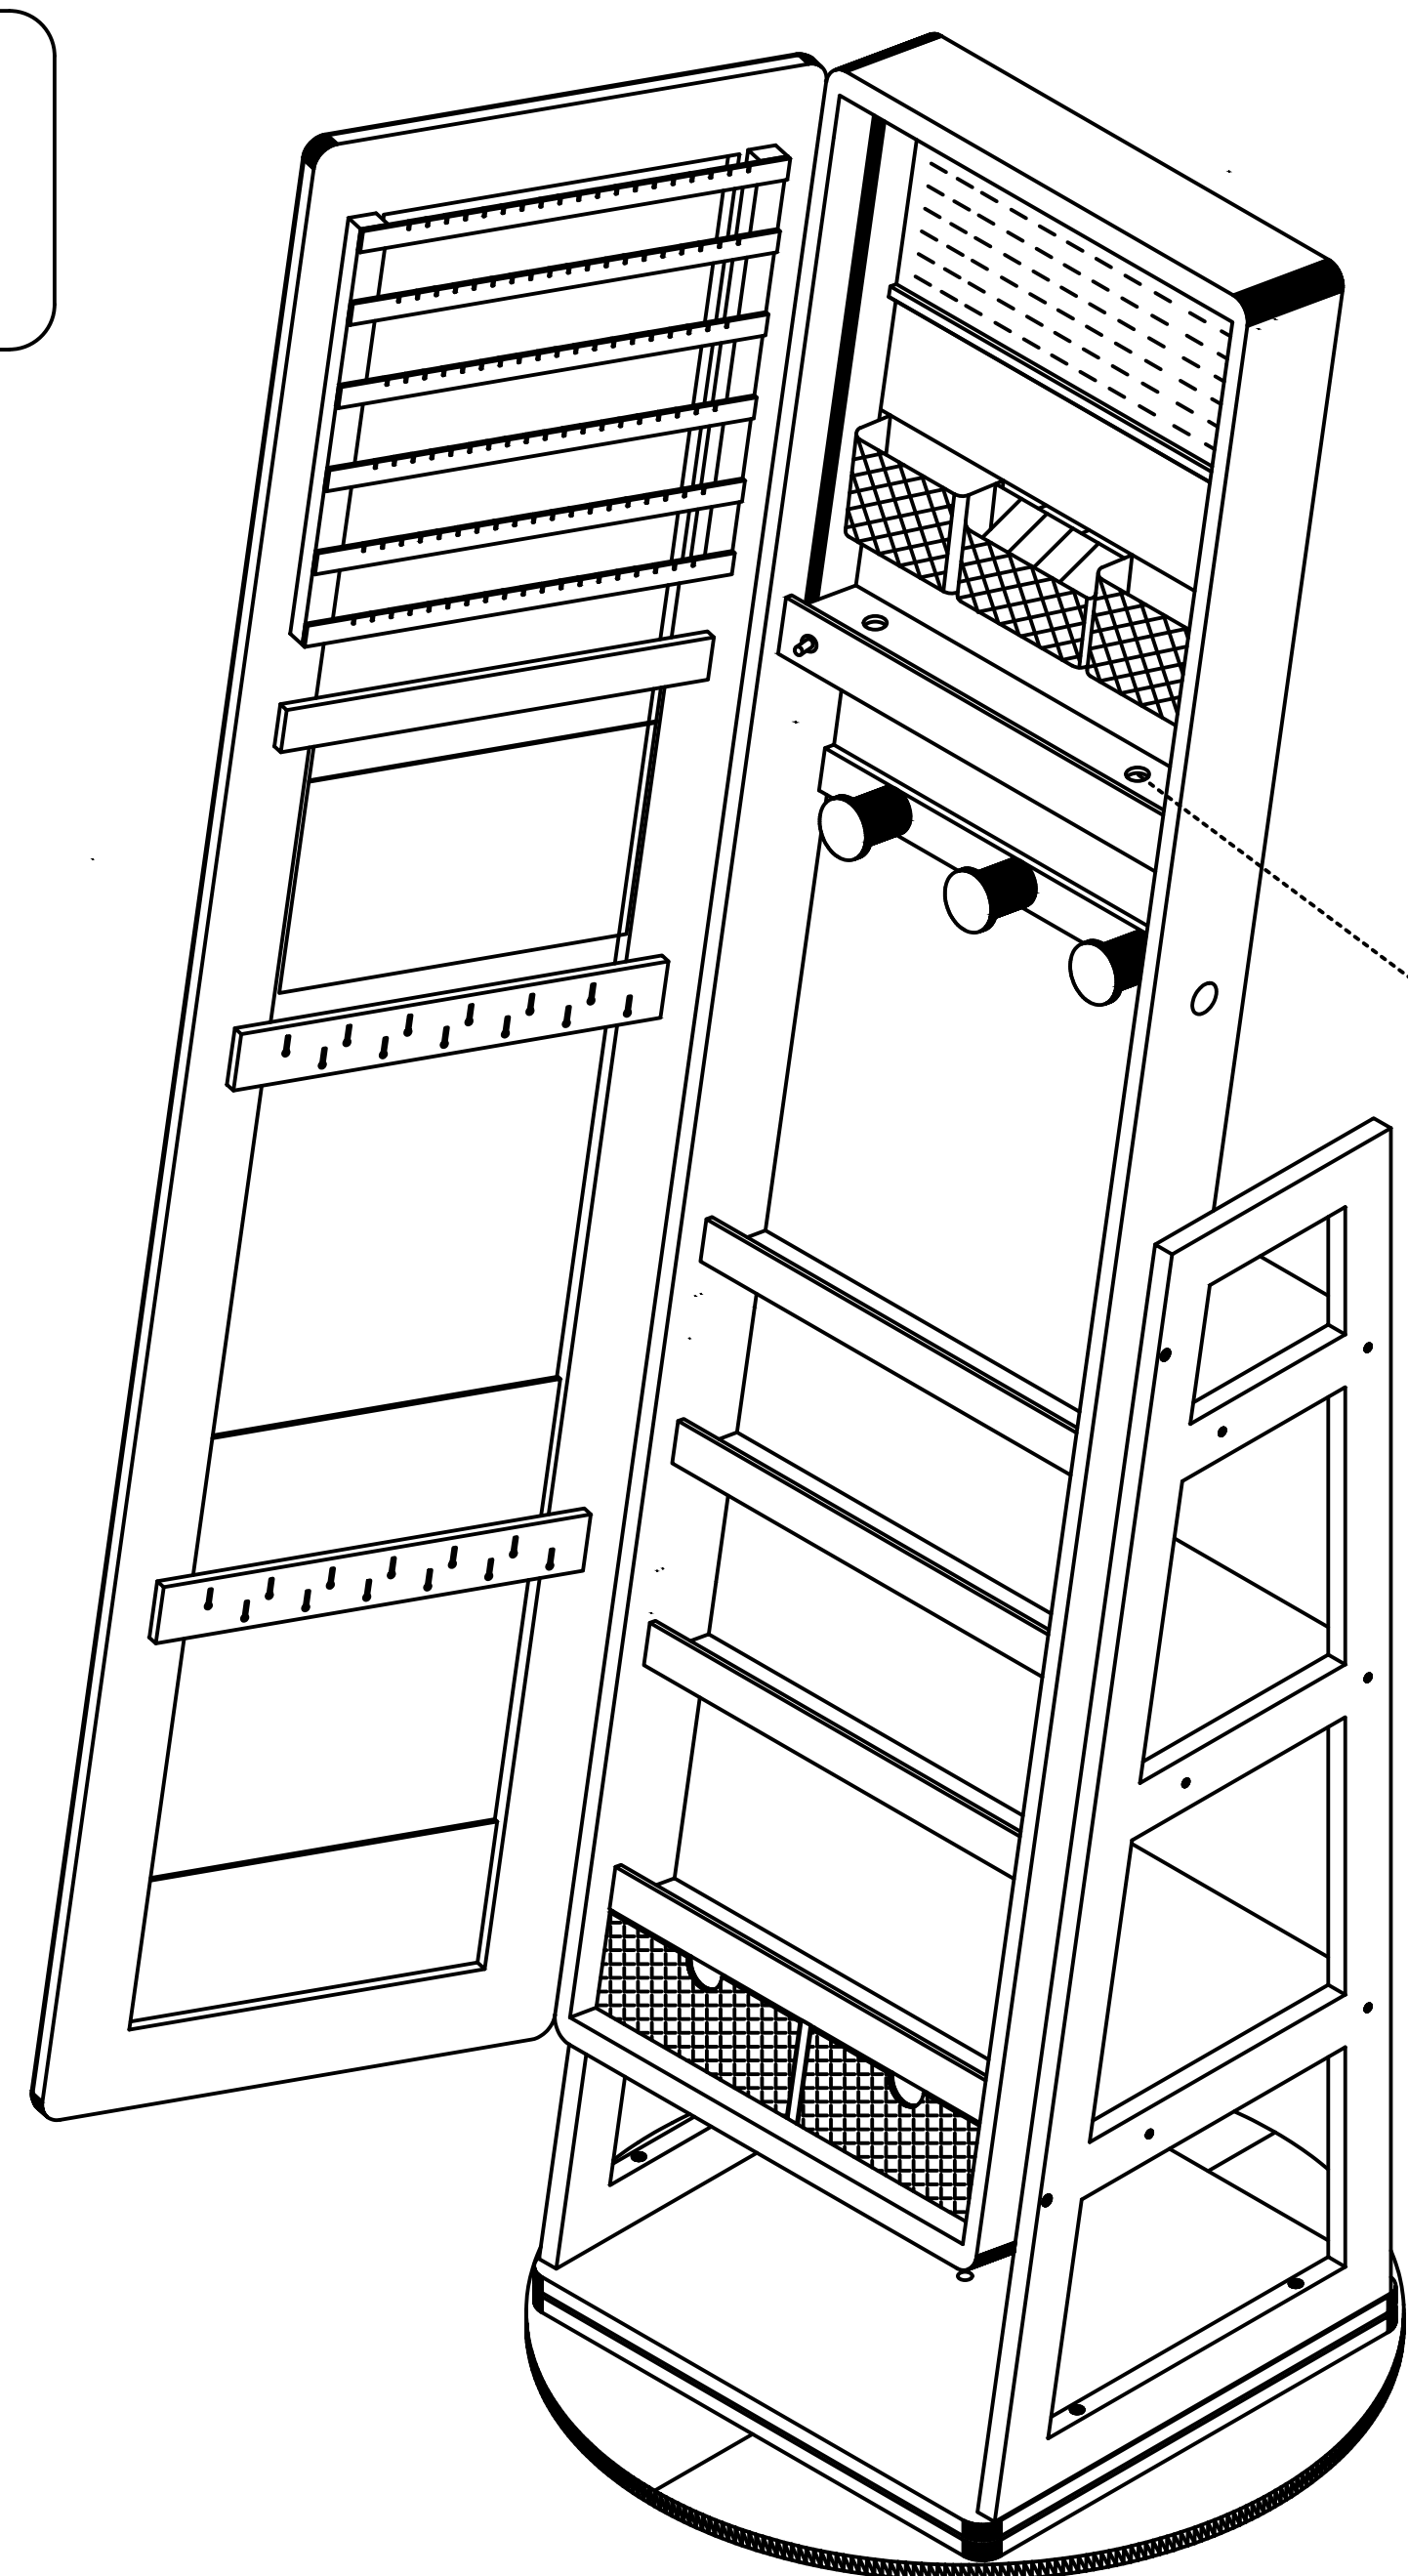
Step 6




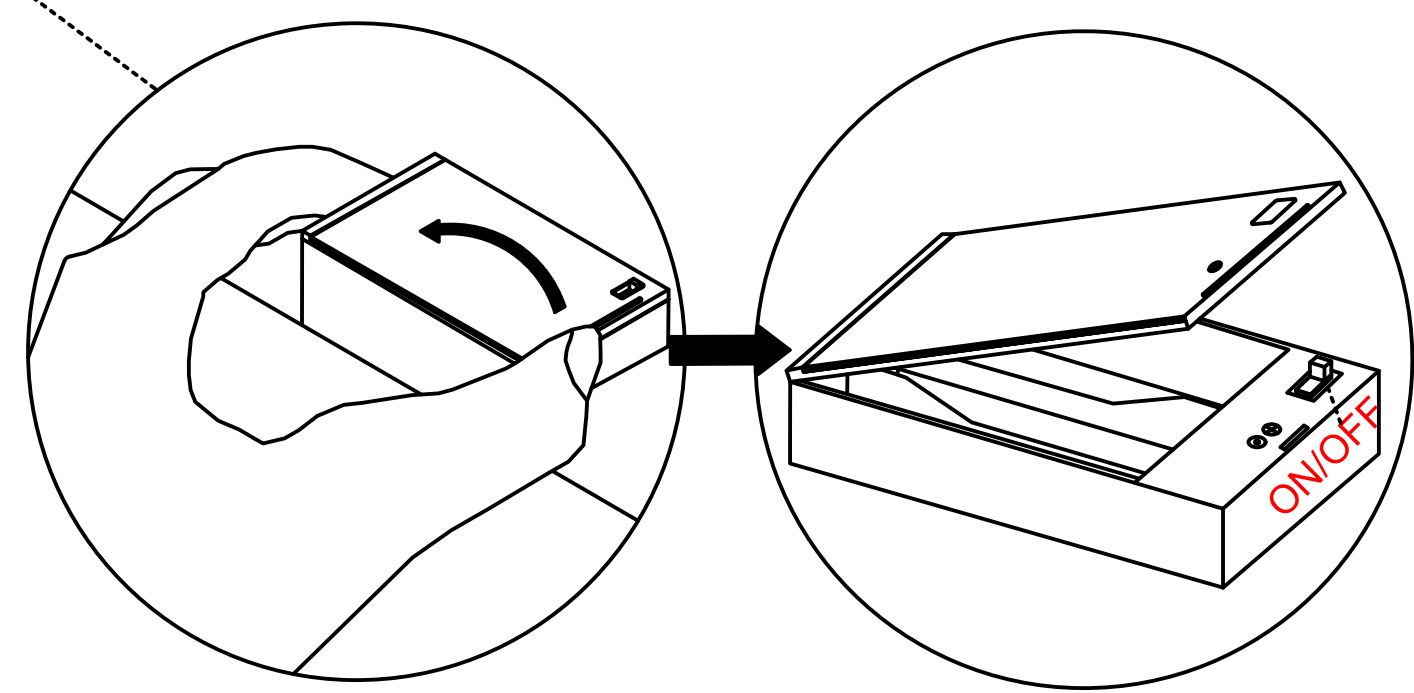Battery installation
(Tip: use 3 AA Batteries)
need to bring your own






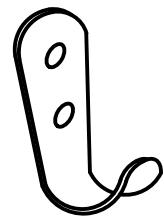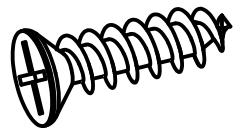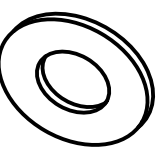Step 7

E		x 2
D	 (3*10mm)	x 4
J	 (3*10mm) 	x 1
I		x 1

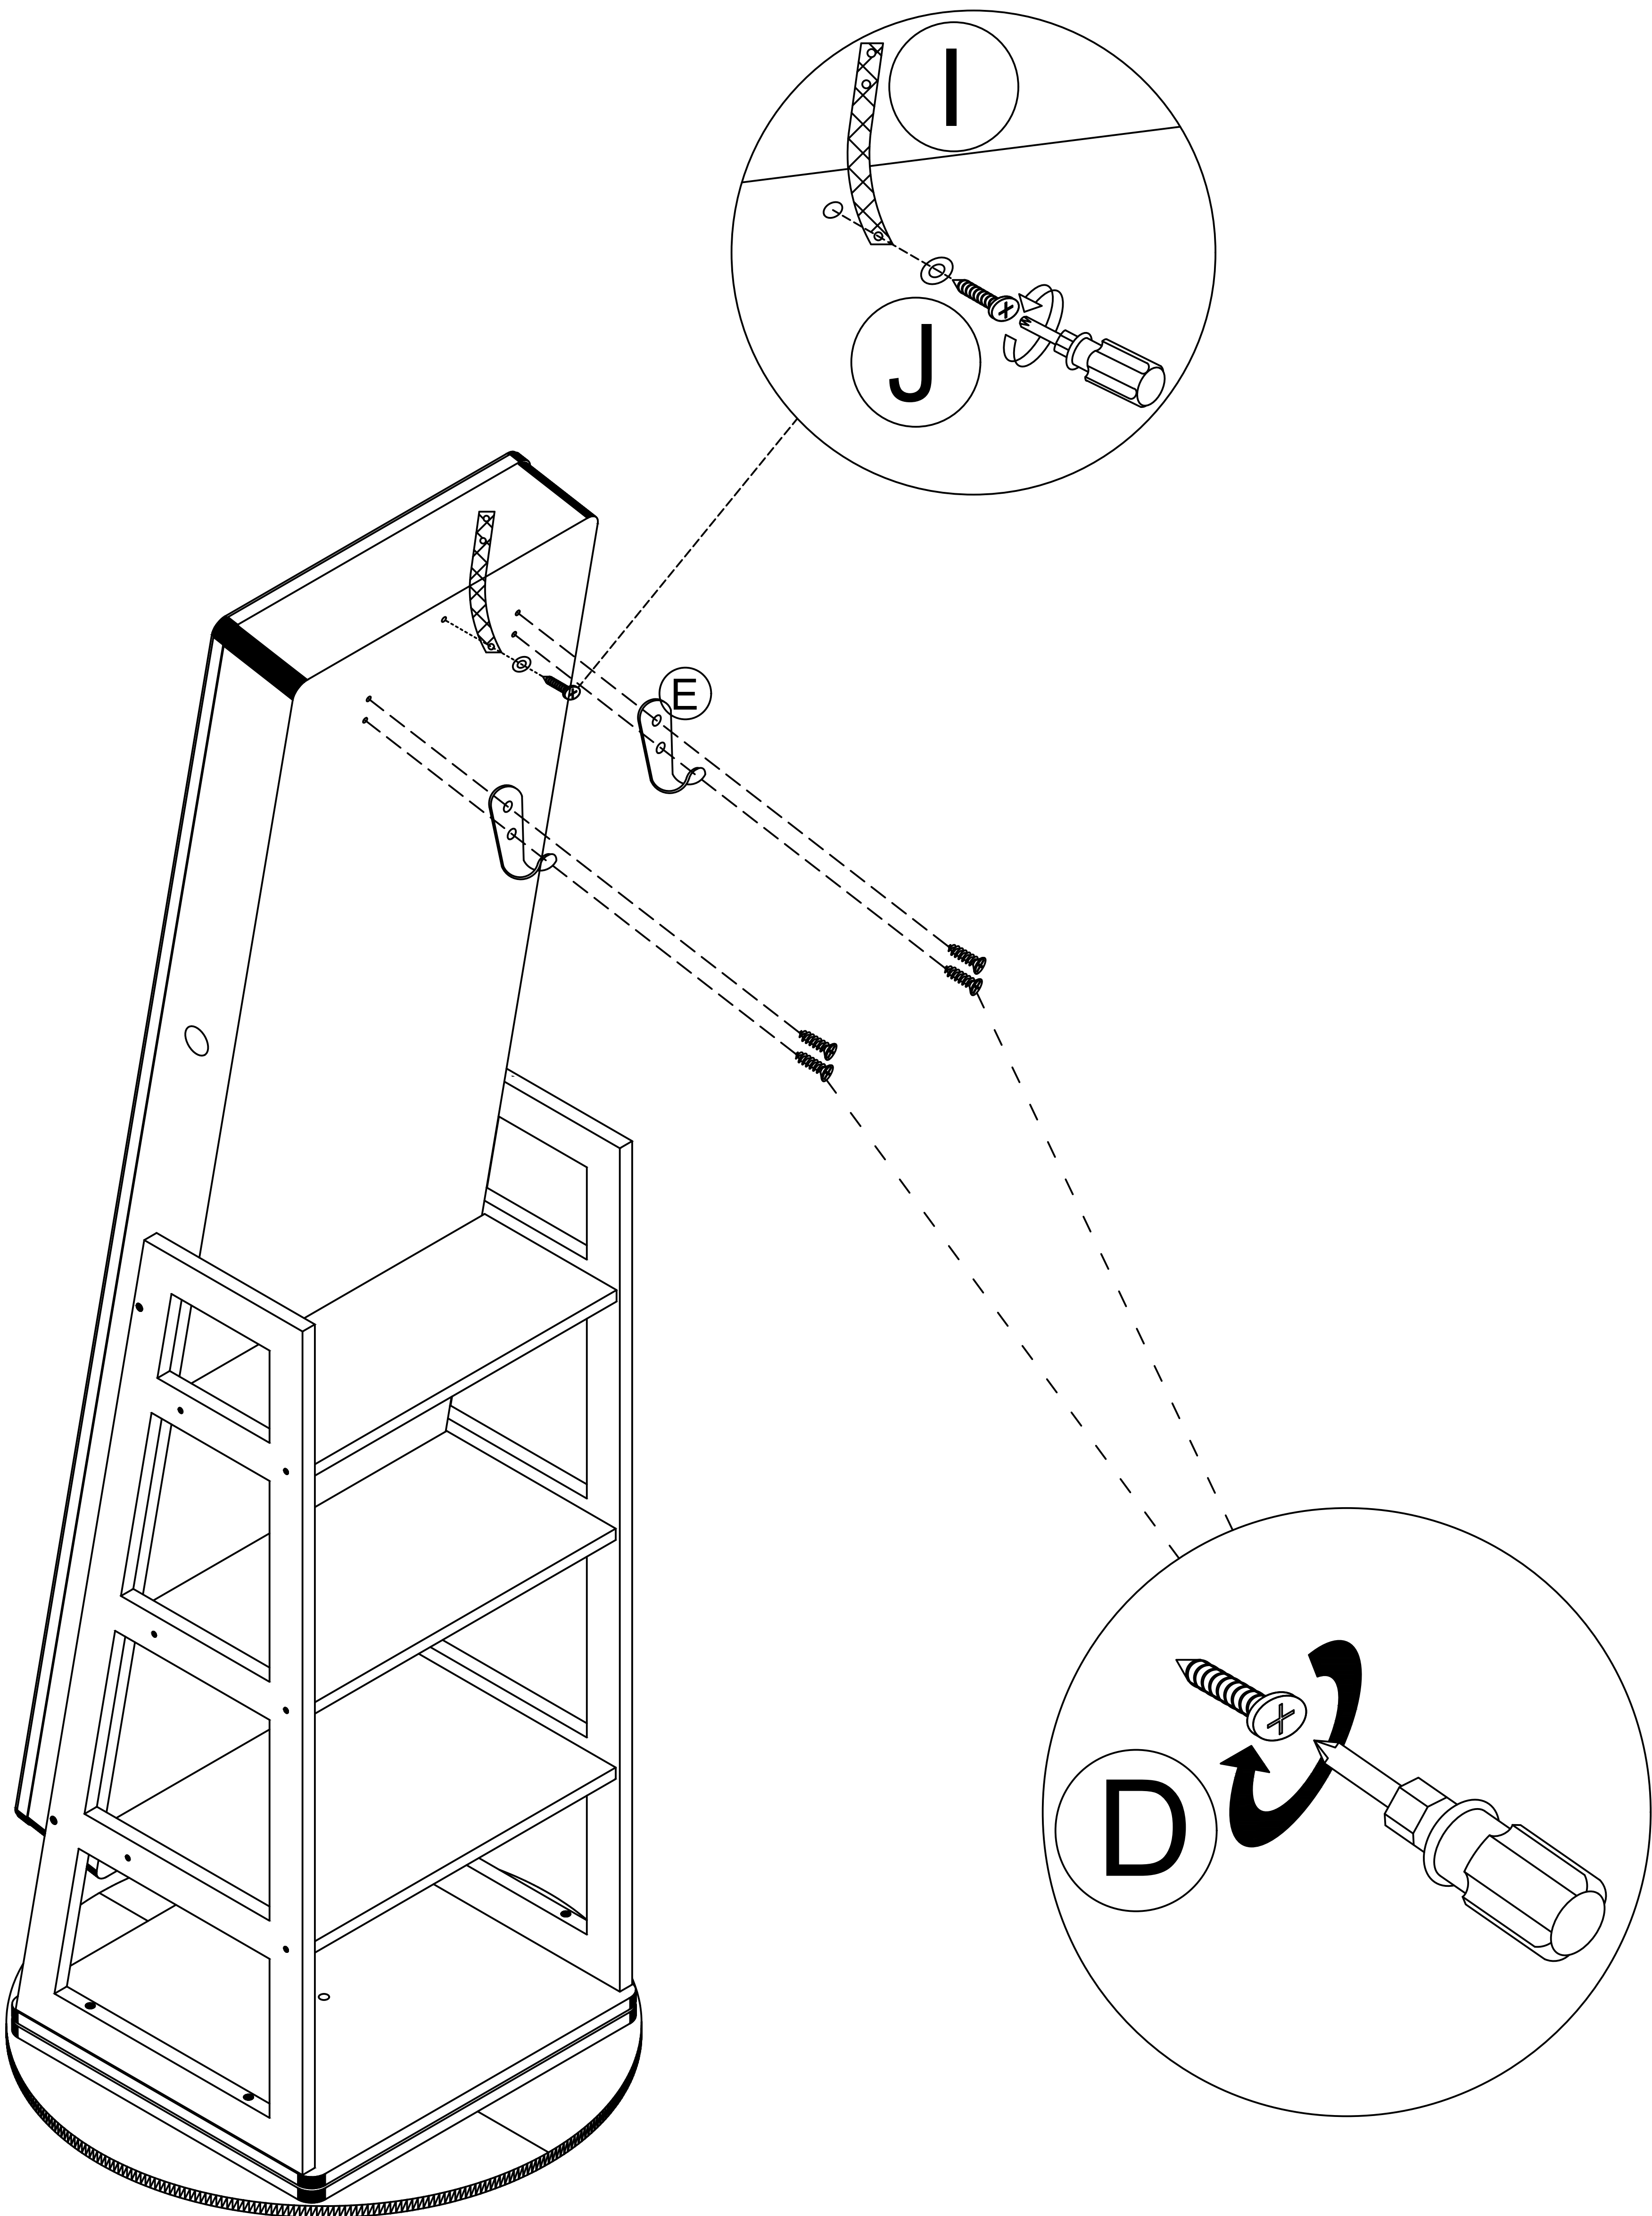

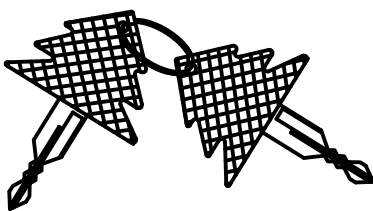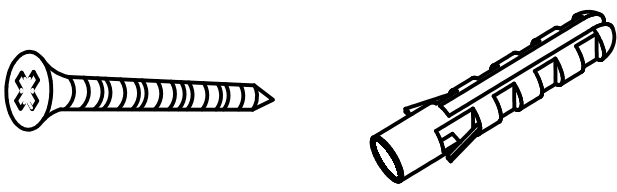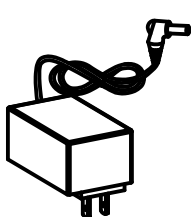Step 8

B		x 1
K		x 1
		x 1

