

ASSEMBLY INSTRUCTIONS



THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

Need Parts or Assistance? Email us at cs@nbrehome.com

IMPORTANT NOTICE

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labelled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture (especially on carpet)




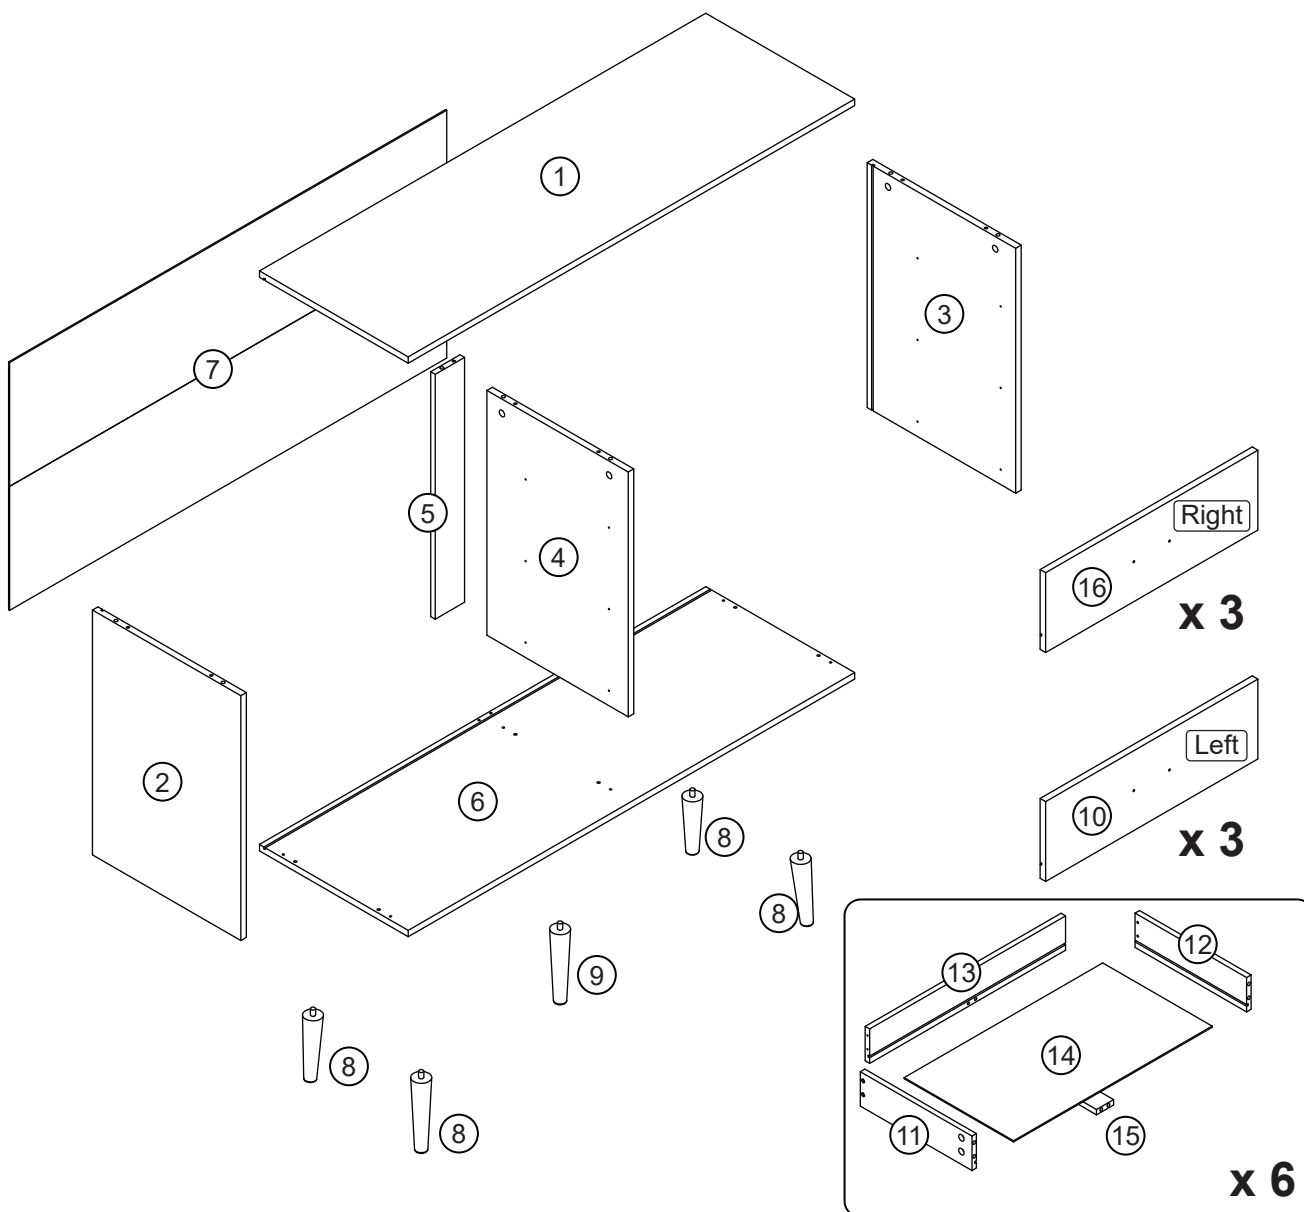
PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY










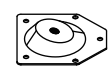

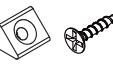
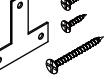



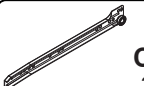

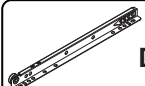
If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us at cs@nbrehome.com

For Prompt, reliable service, please have your assemble instruction ready.



 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	



 A x 37 M6 x 35 mm	 B x 37 φ15 x 9.5 mm	 C x 19 φ6 x 30 mm	 D x 8 φ4 x 40 mm	 E x 12 M4 x 16 mm
 F x 6	 G x 36 φ4 x 30 mm	 I x 48 φ3 x 12 mm	 J x 20 φ4 x 12 mm	 K x 4
 L x 1	 M x 8	 N x 2	 O x 2	 P x 4 φ25 x 2 mm
 CL x 6 300 mm	 CR x 6 300 mm	 DL x 6 300 mm	 DR x 6 300 mm	





Step 1

First lock the screw A to the part 1. The installation position is as shown in the figure below.

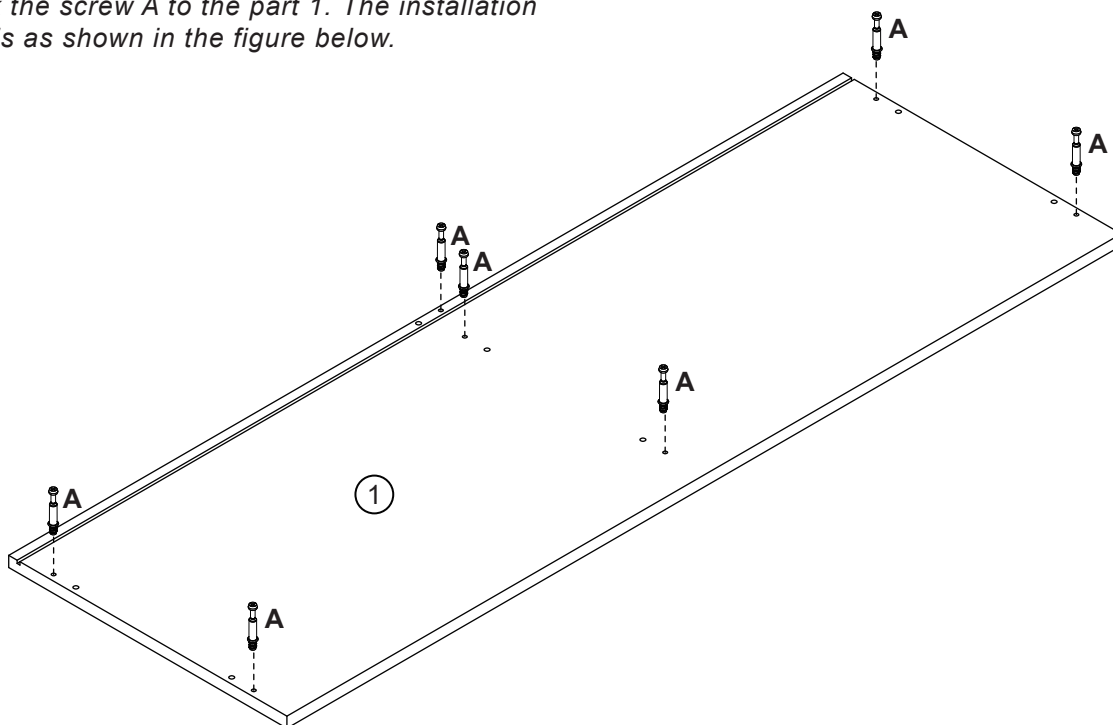


Step 2

First lock the guide rail CL to the right side of the part 4 with the screw I, then turn it 180 degrees and lock the guide rail CR to the left side of the part 4 with the screw I, the installation position is as shown below.

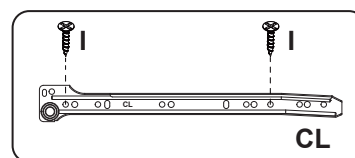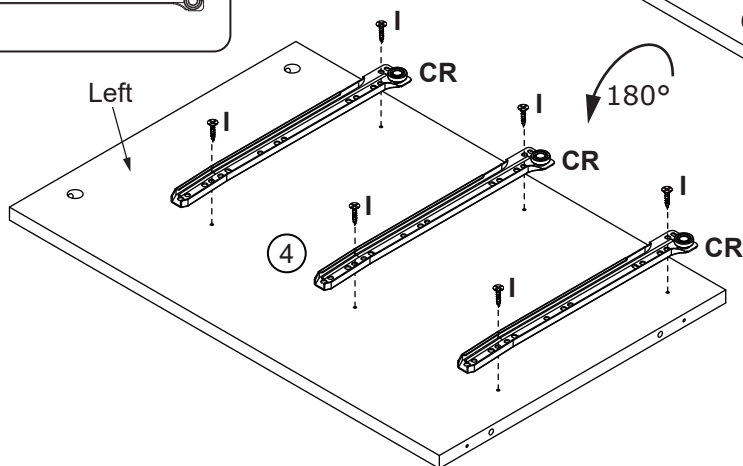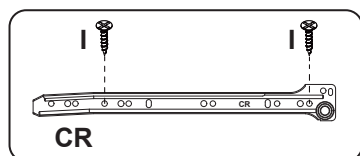


Step 3

First lock the guide rail CL to the part 2 with the screw I, then lock the guide rail CR to the part 3 with the screw I. The installation position is as shown in the figure below.

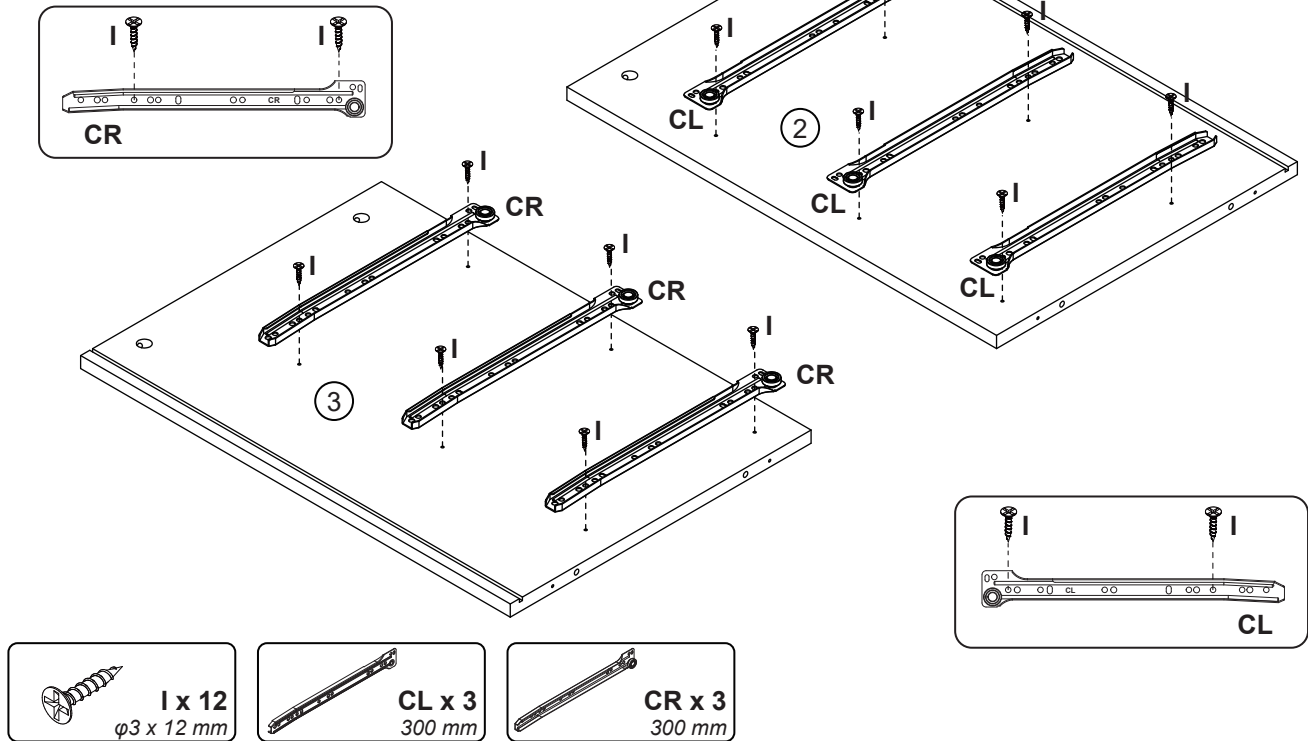


Step 4

Insert the dowel c into part 1 first, then assemble parts 2, 3, 4, 5 and part 1, put the eccentric b into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, the installation position is as shown below.

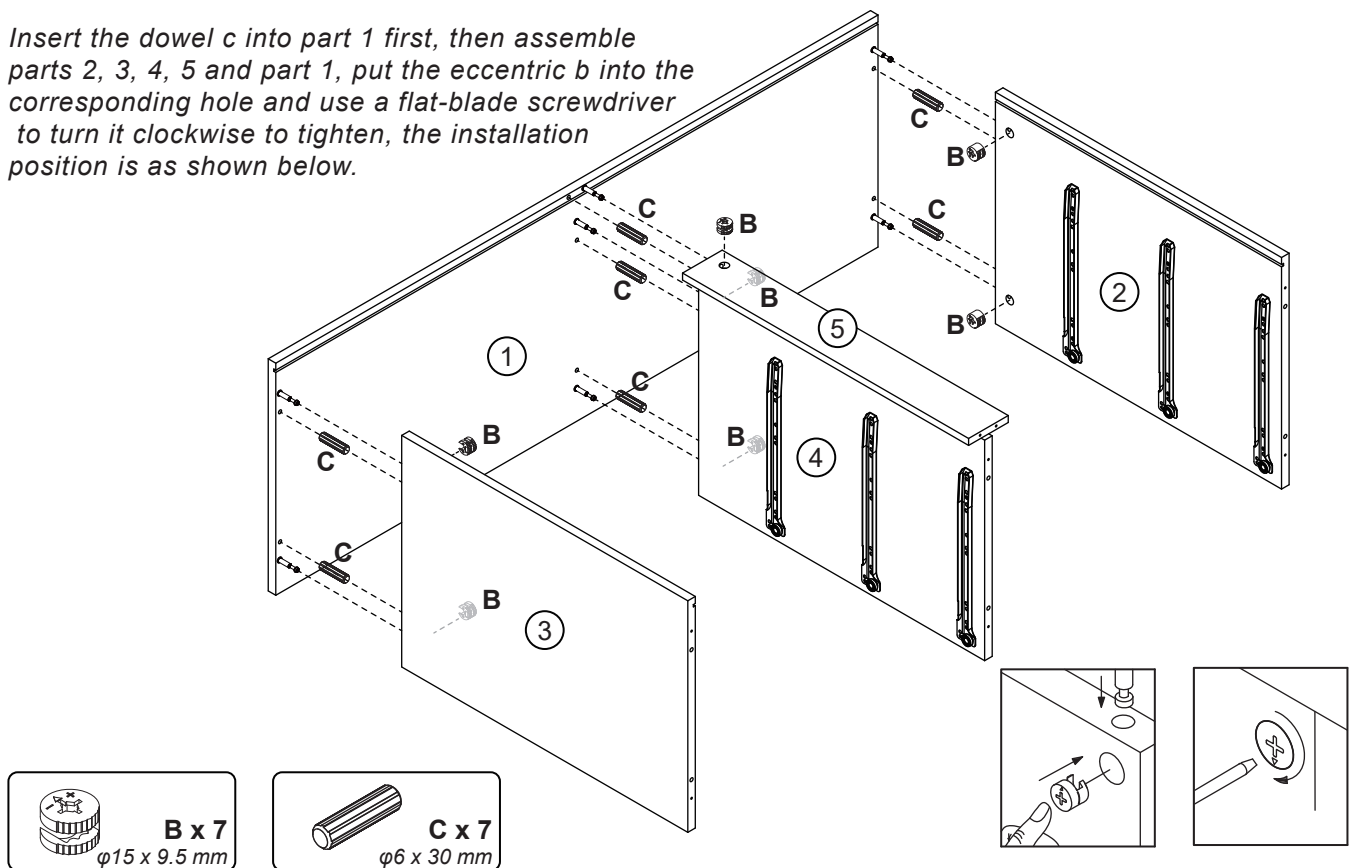



Step 5

Insert part 7 along the slot, the position is as shown below.

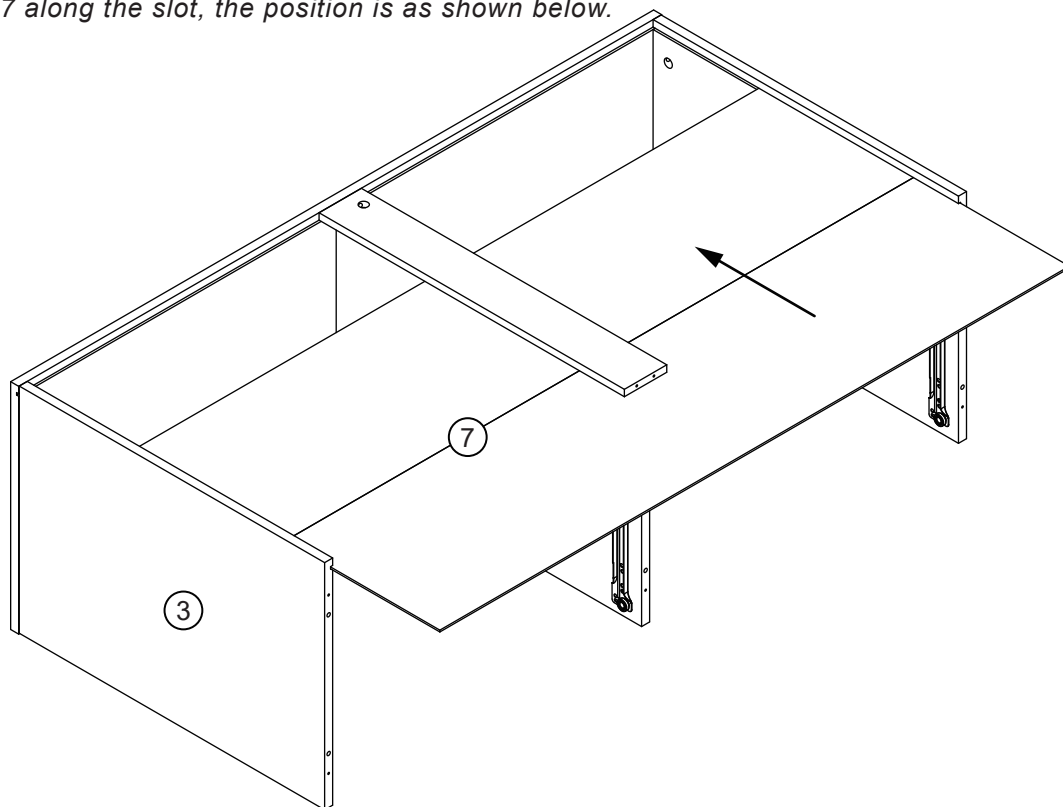




Step 6

Insert the dowel c into part 6 first, then assemble the part 6 and parts 2, 3, 4, 5, and then use the screw D to lock it. The installation position is as shown in the figure below.

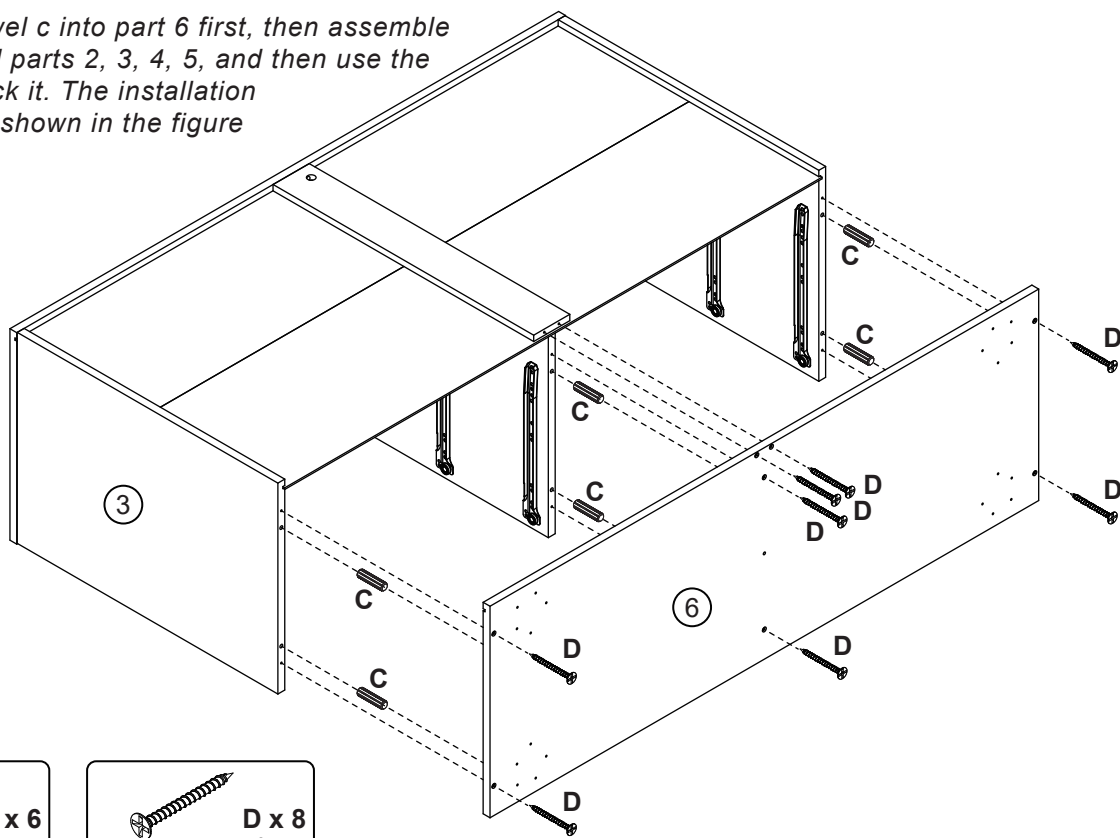





Step 7

Use screw J to lock hardware K to part 6. The installation position is as shown in the figure below.

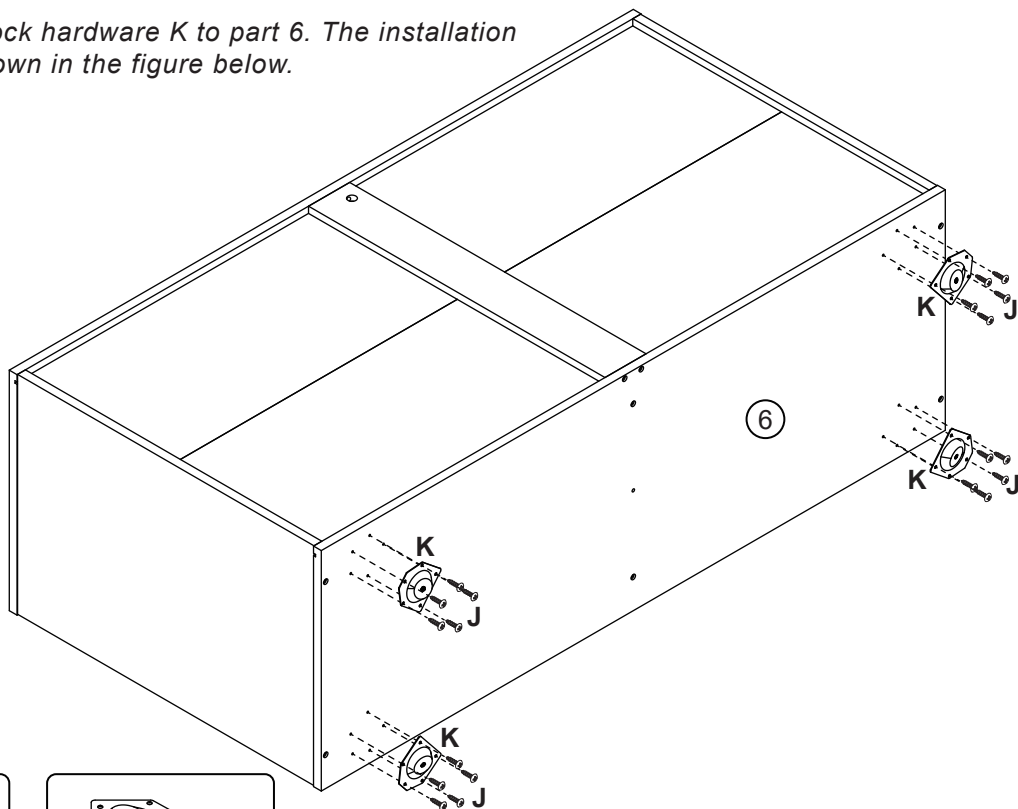




Step 8

First, align the screw ends of the support feet 8 with the hardware K at the four corners and tighten them, and the support feet 9 with the pre-embedded nut holes in the middle. Then tear off the protective film of the foot pad p and stick it on the support foot 8. Finally, install the adjusting foot pad L on the supporting foot 9. The installation position is as shown in the figure below.

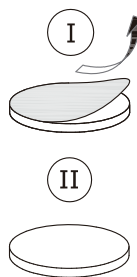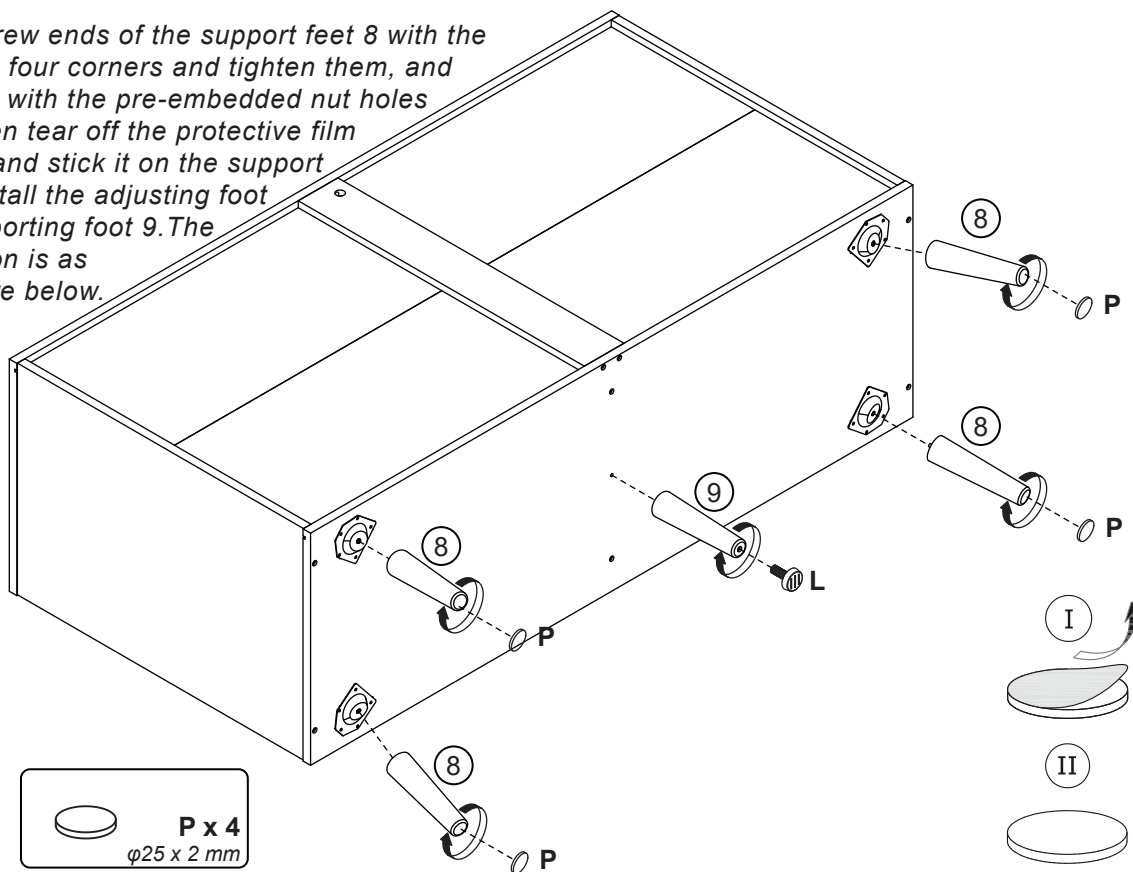



Step 9

Install the screw A on the drawer panels 10, 16 first, and then use the screw E to lock the handle F on the drawer panels 10, 16. A total of 6 draw panels. The installation position is as shown in the figure below.

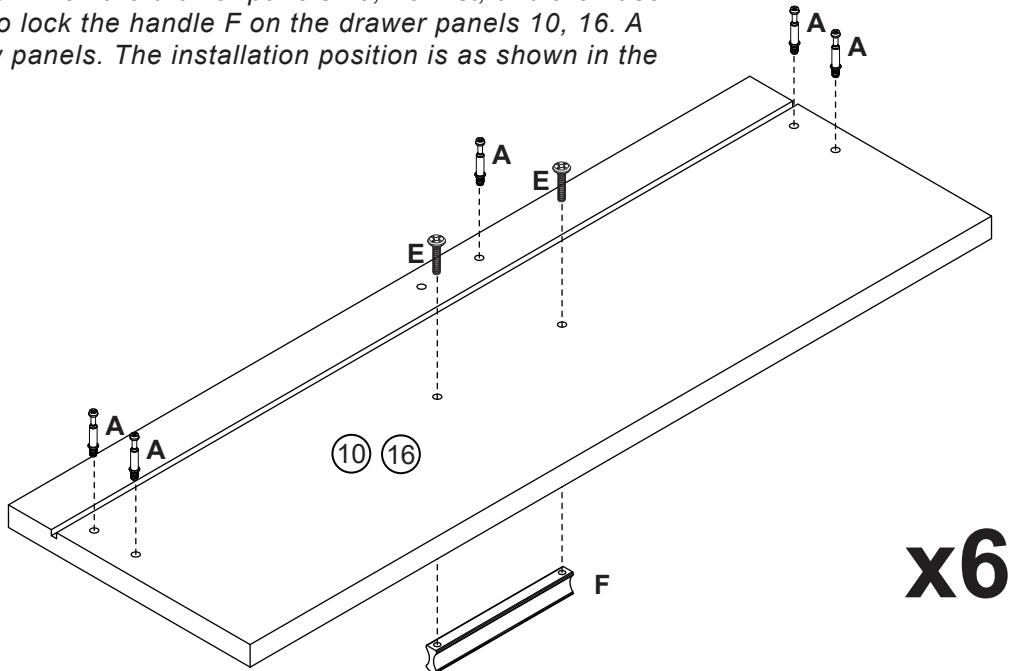


Step 10

Use the screw G to assemble the side panels 11, 12 and the back panel 13, and then use the screw G to assemble the part 15 and the back panel 13. A total of 6 sets are required to be assembled. The installation position is as shown in the figure below.

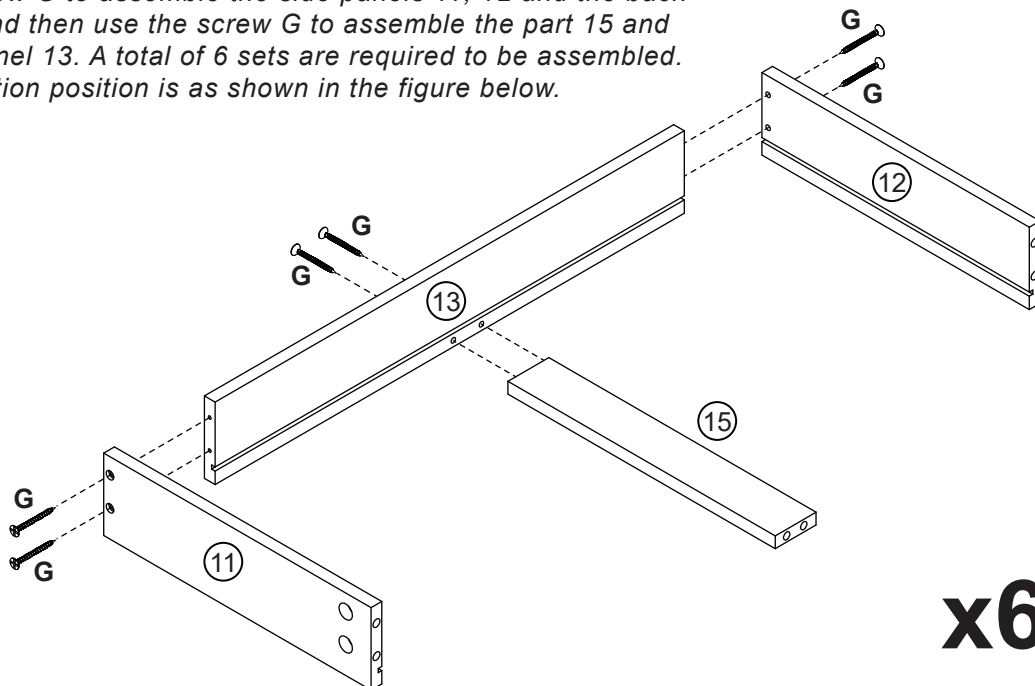



Step 11

Insert the bottom plate 14 according to the card slot of the side plate. A total of 6 sets are required to be assembled. The installation position is as shown in the figure below.

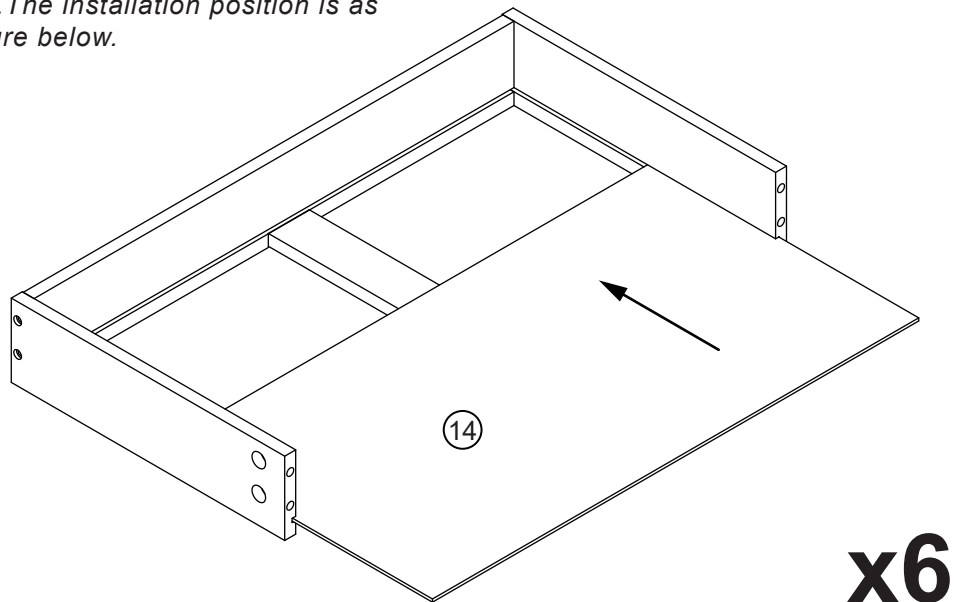


Step 12

Insert the wooden tenon C into the component 15 first, then assemble the drawer panels 10, 16, and the drawer side panels 11, 12, 15, put the eccentric B arrow in the direction of the screw and screw it clockwise. A total of 6 sets are required to be assembled. The installation position is as shown in the figure below.

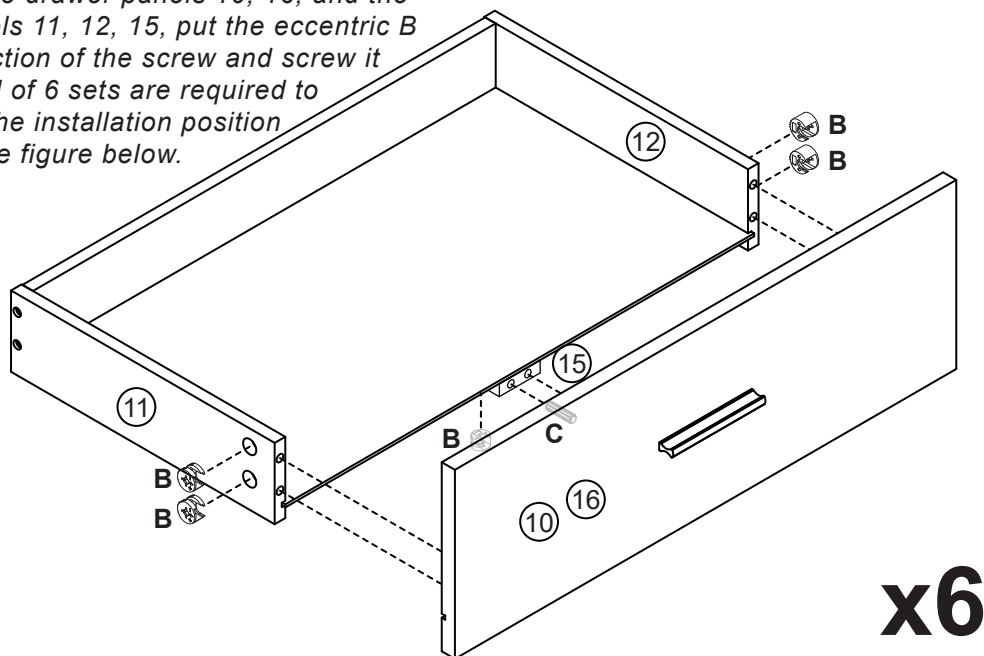


Step 13

Use screws I to install the guide rail DR on the side panel 12, and install the guide rail DL on the side panel 11. A total of 6 sets are required to be assembled. The installation position is as shown in the figure below.

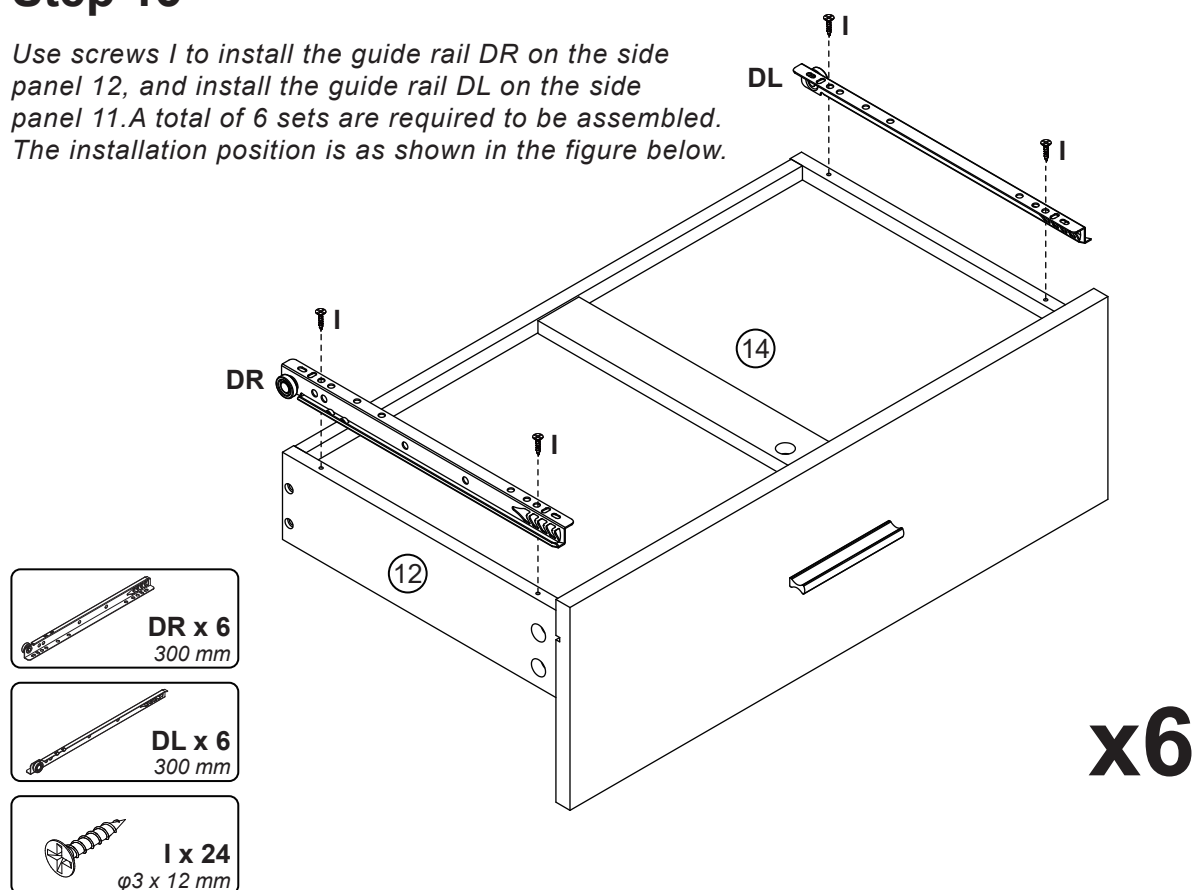


Step 14

Install the No. 10 drawer into the left drawer, and the 16th drawer into the right drawer. The installation position is as shown in the figure below.

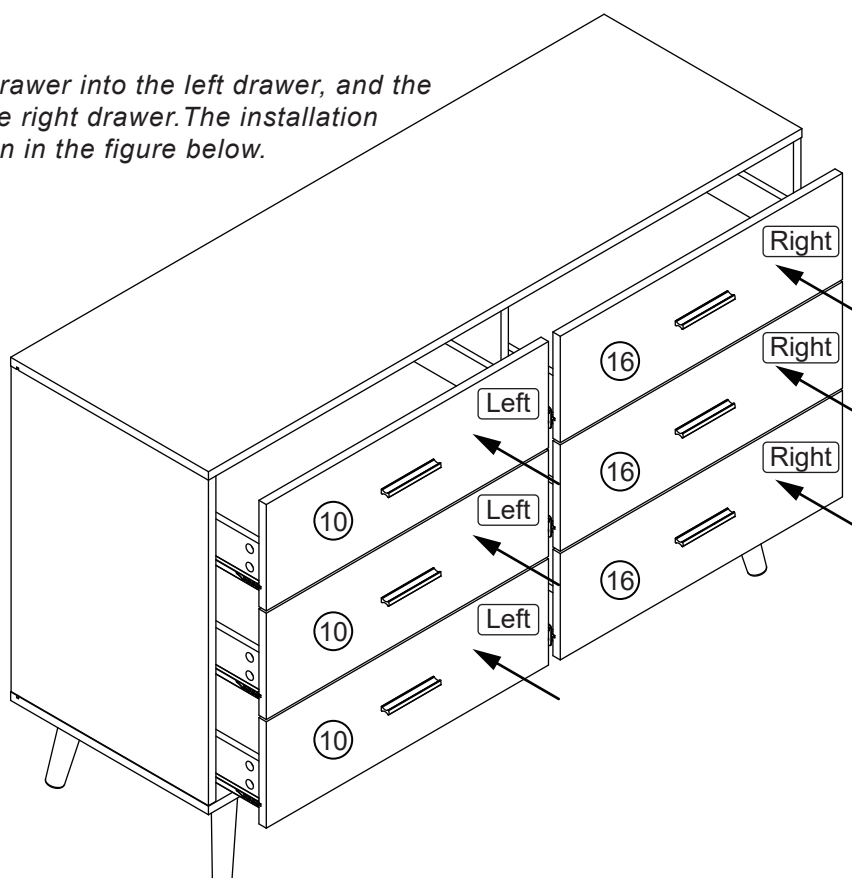

Step 15

Use the screws in component M to fasten the back plate buckle.
The installation position is as shown in the figure below.

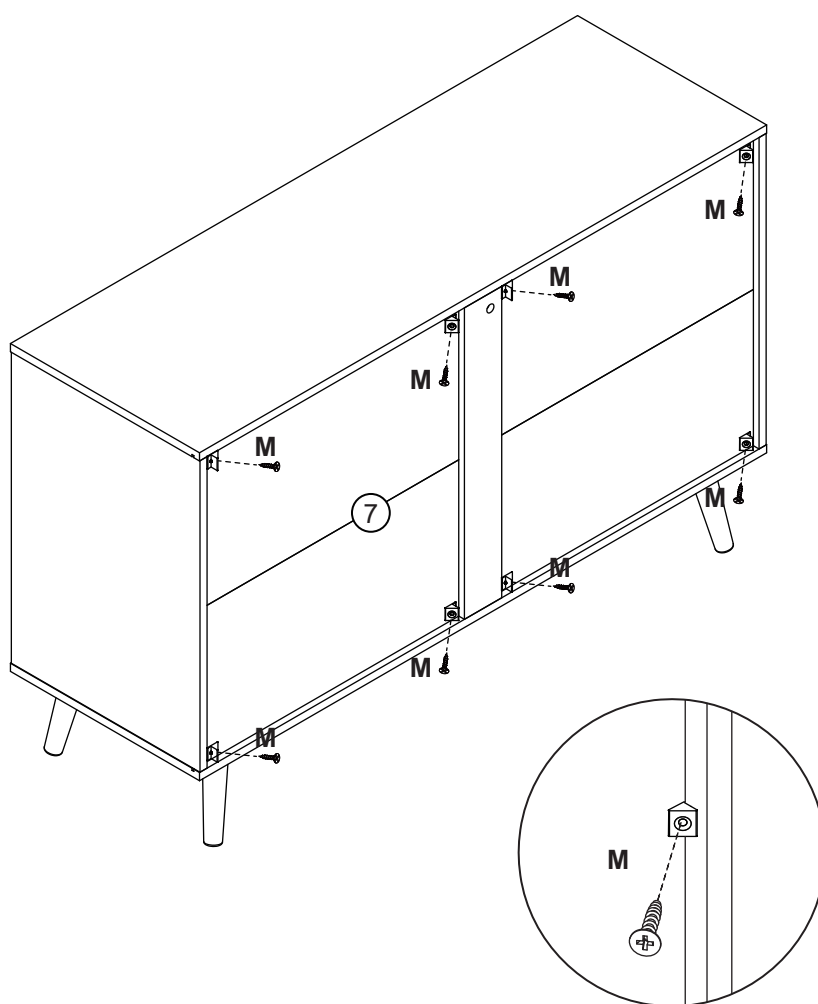

Step 16

First fasten the T-shaped iron piece with the short screw in component N, then put the back of the cabinet against the wall, drill holes on the wall where it is placed, and finally use the long screw and expansion screw O in component N to fix the cabinet. The installation location is as shown in the figure below.

