ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!


ITEM#:223108 263499 263500

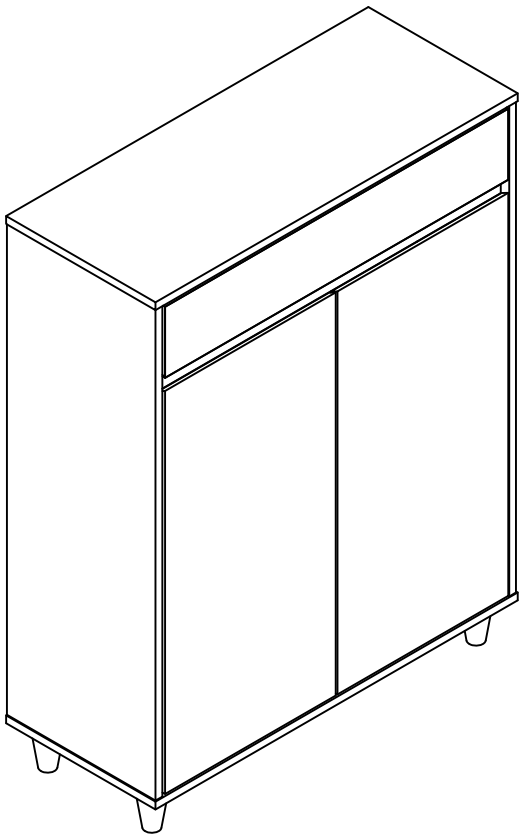

VERSION:20221104

PARTS IDENTIFICATION










ITEM#:223108 263499 263500

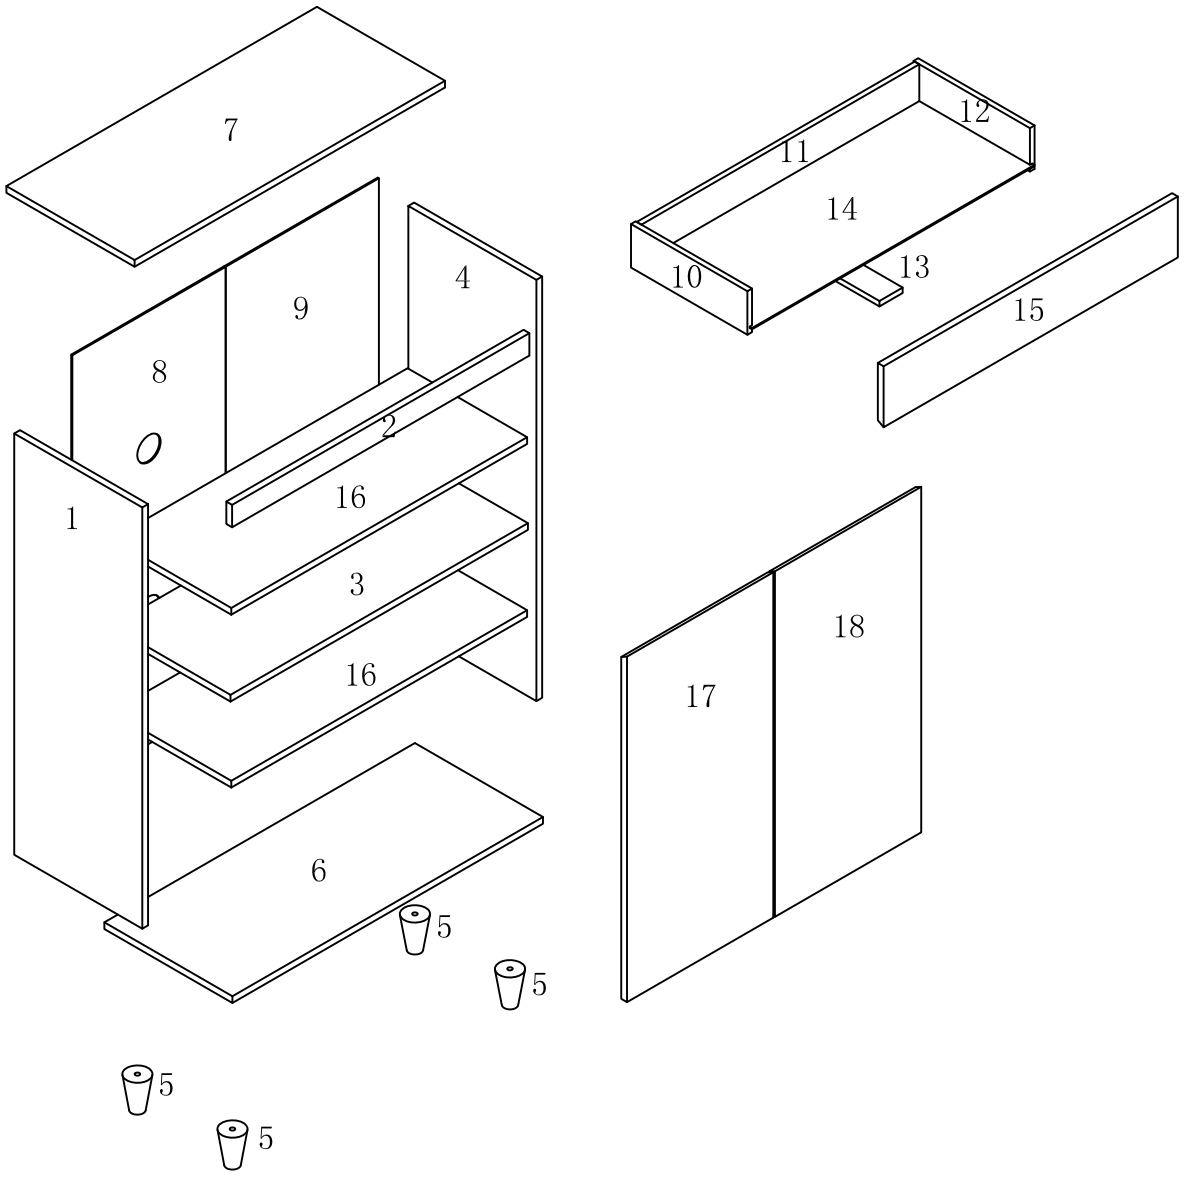

(1) 1pc	(7) 1pc	(13) 1pc
(2) 1pc	(8) 1pc	(14) 1pc
(3) 1pc	(9) 1pc	(15) 1pc
(4) 1pc	(10) 1pc	(16) 2pcs
(5) 1pc	(11) 1pc	(17) 1pc
(6) 1pc	(12) 1pc	(18) 1pc


HARDWARE IDENTIFICATION

ITEM#:223108 263499 263500

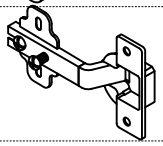A		L29	10pcs
B		φ15	10pcs
C		φ8x25	12pcs
D		φ4x30	10pcs
E		φ8x25	4pcs
F		φ8xφ16x2	4pcs
G		M5	1pc
H		φ22	4pcs
I		φ60	2pcs
J			30pcs
K		Φ5x15	8pcs
L		301C	4pcs
M		φ4x16	16pcs
N		L20	4pcs
O		φ12	4pcs
P		φ6x30	2pcs
Q			4pcs
R		197×5×1	1PC
S		□4×25	1PC
T		□5×40	1PC
U		□8×40	1PC
V		12×12×1	2PCS


ASSEMBLY INSTRUCTION

ITEM#:223108 263499 263500

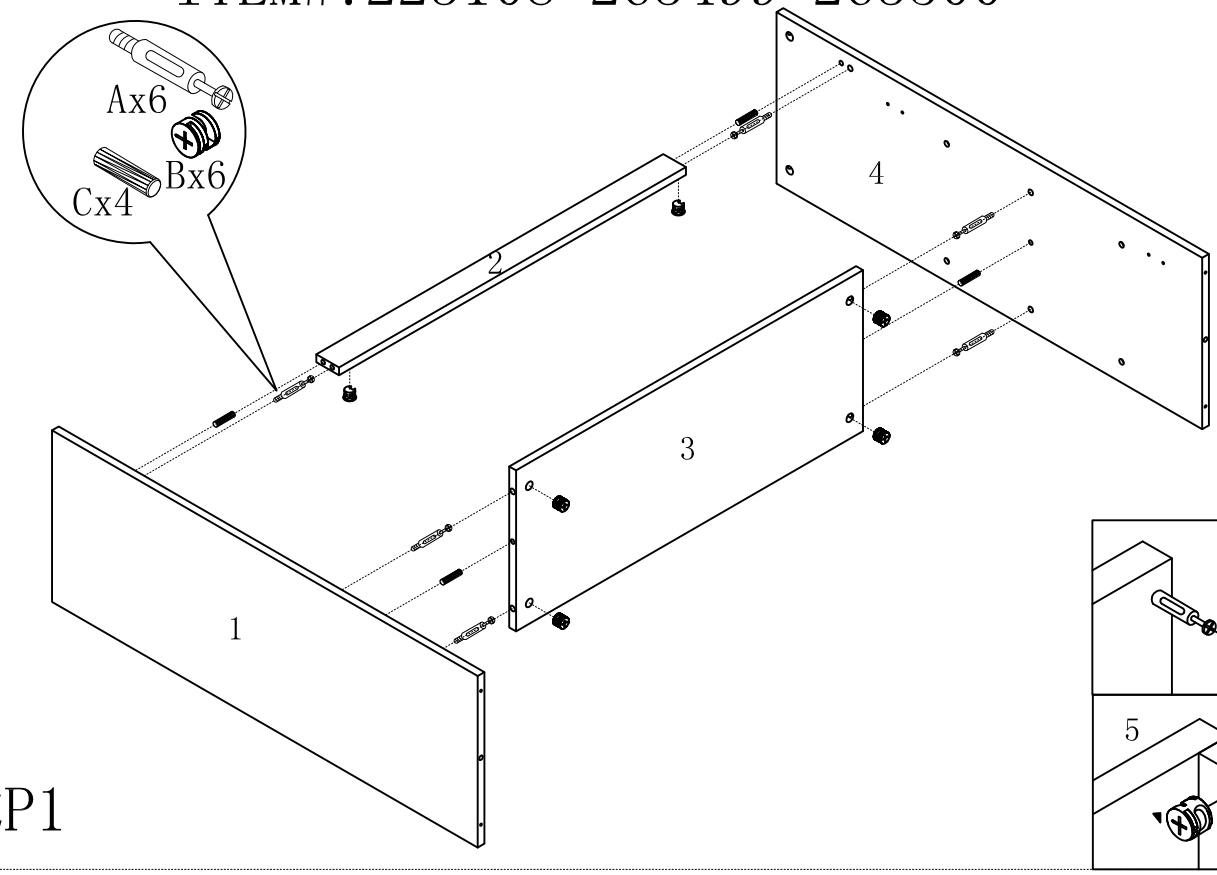


STEP1

STEP2

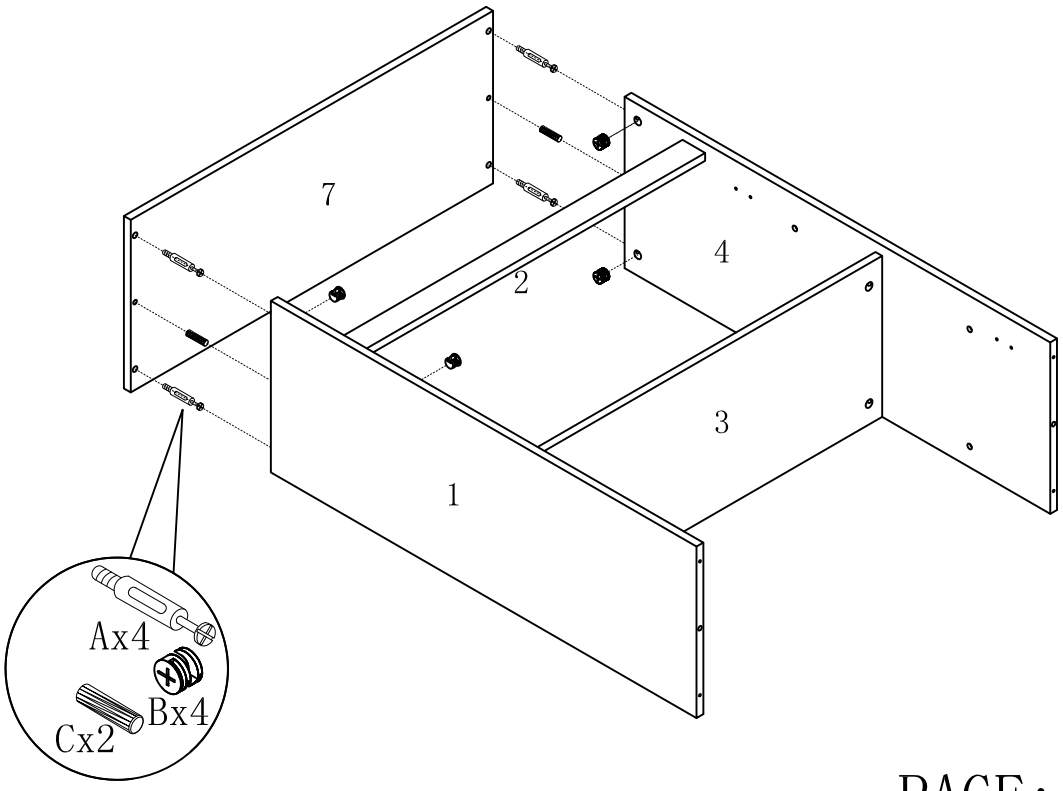


ASSEMBLY INSTRUCTION

ITEM#:223108 263499 263500

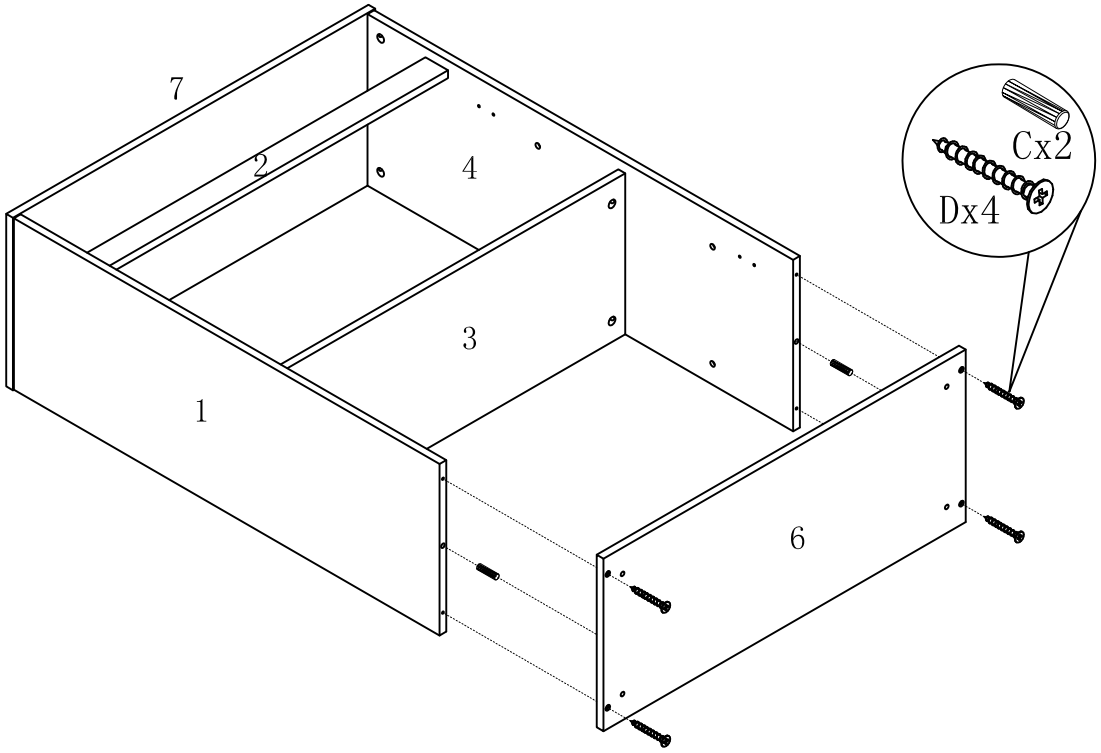


STEP3

STEP4

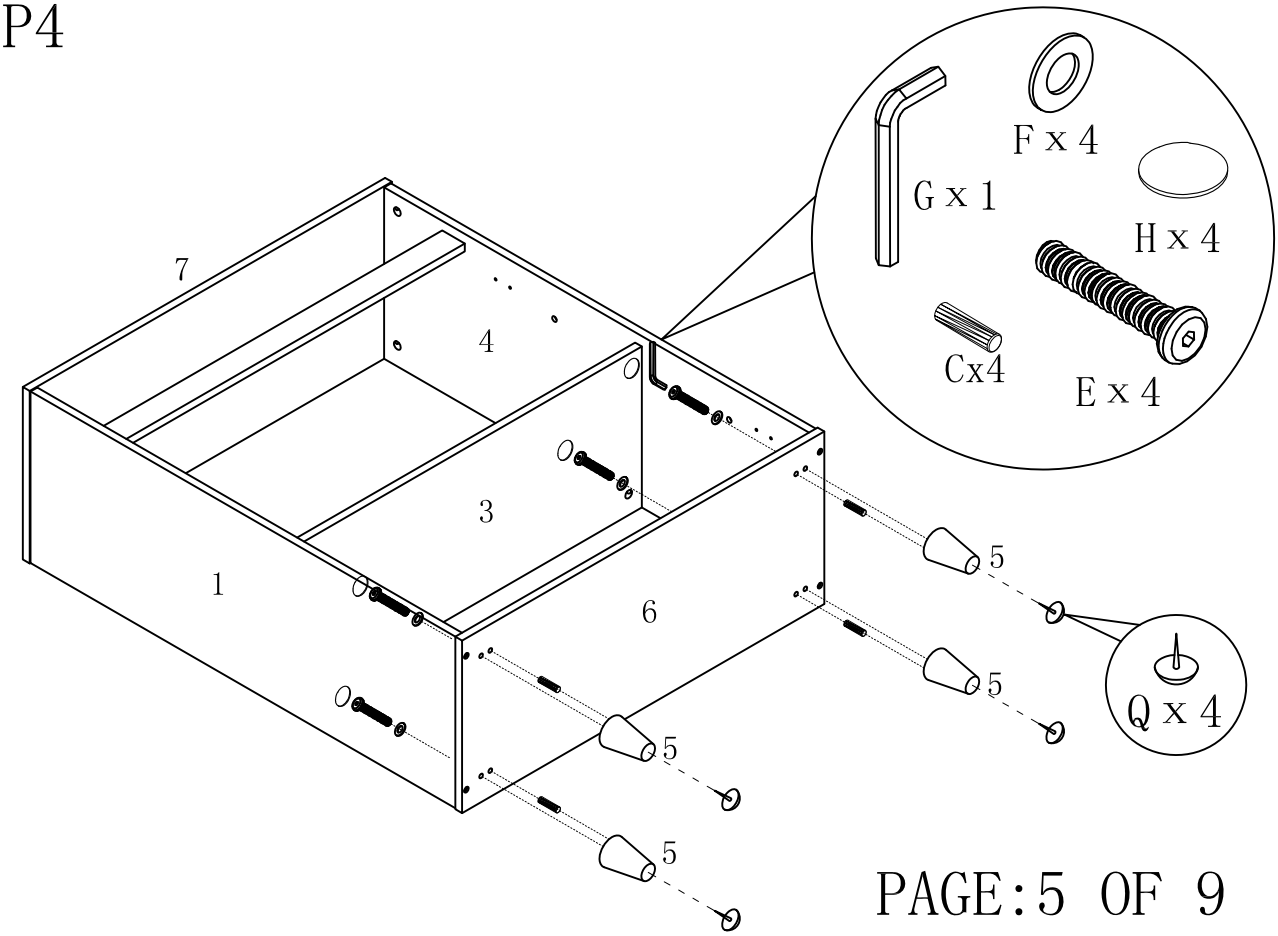


ASSEMBLY INSTRUCTION

ITEM#:223108 263499 263500

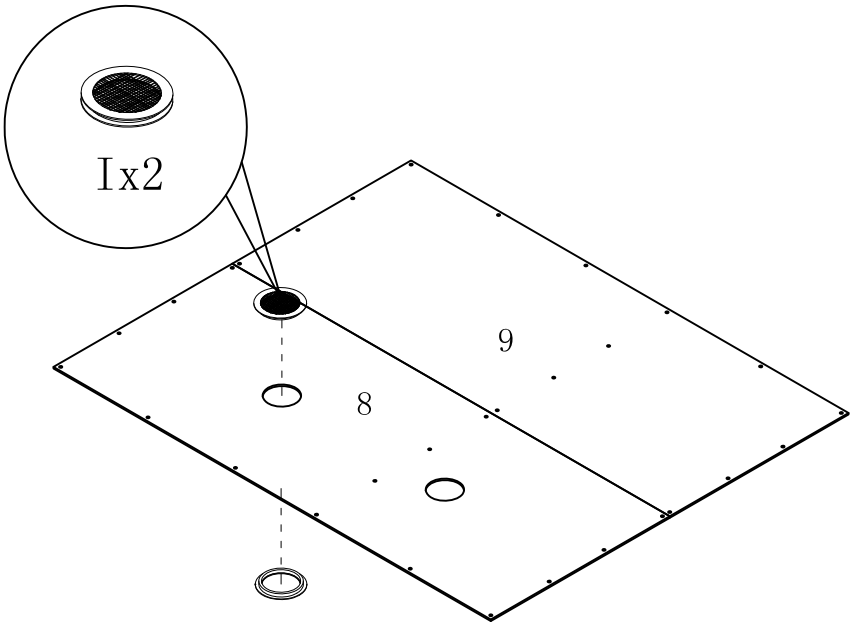


STEP5

STEP6

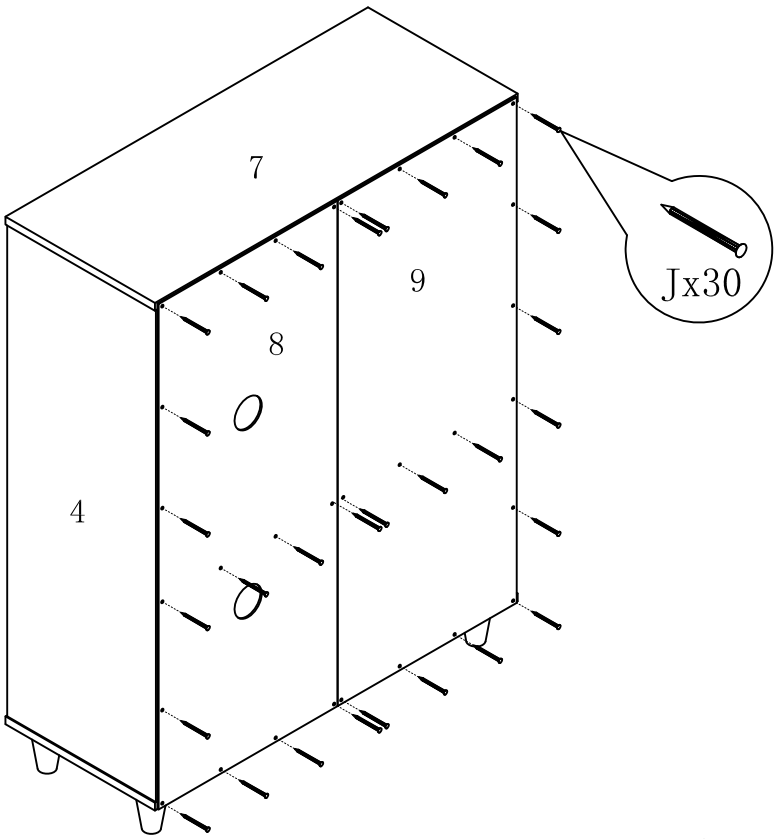


ASSEMBLY INSTRUCTION

ITEM#:223108 263499 263500

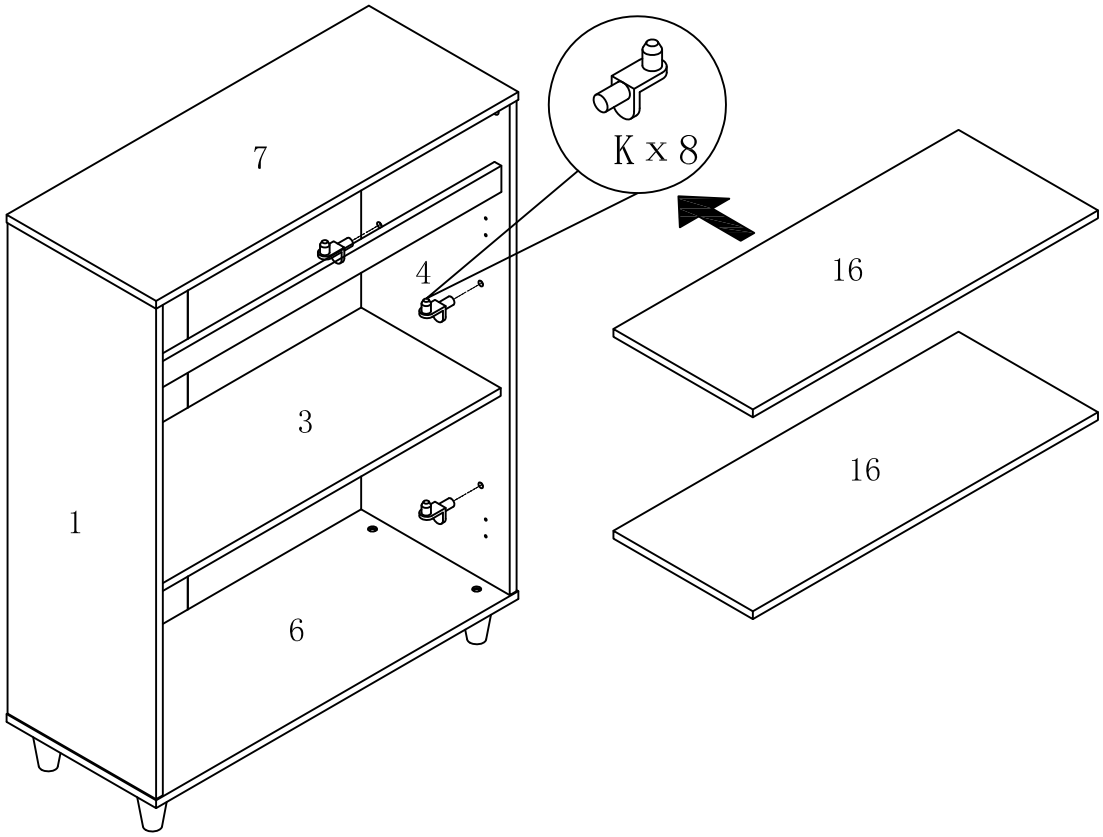


STEP7

STEP8

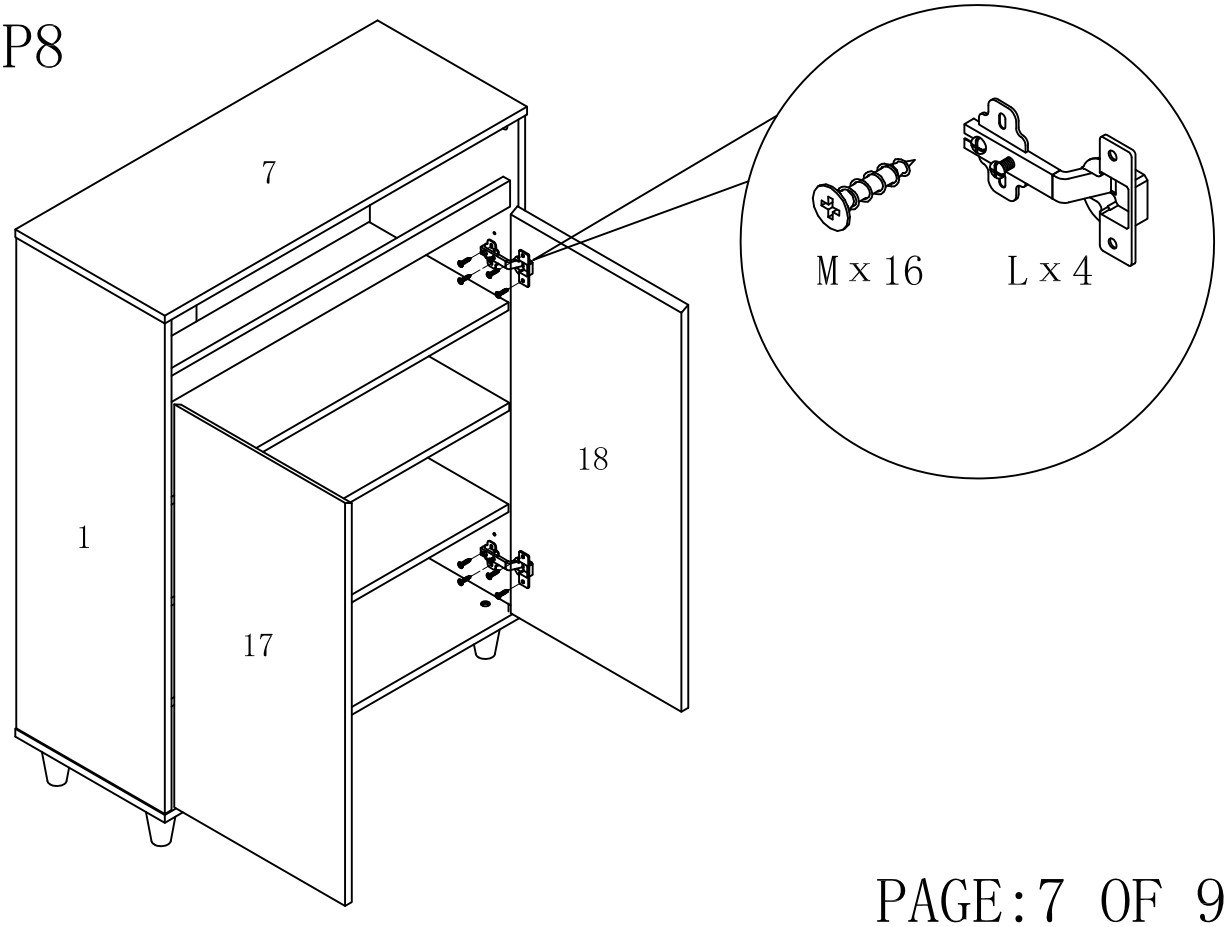


ASSEMBLY INSTRUCTION

ITEM#:223108 263499 263500

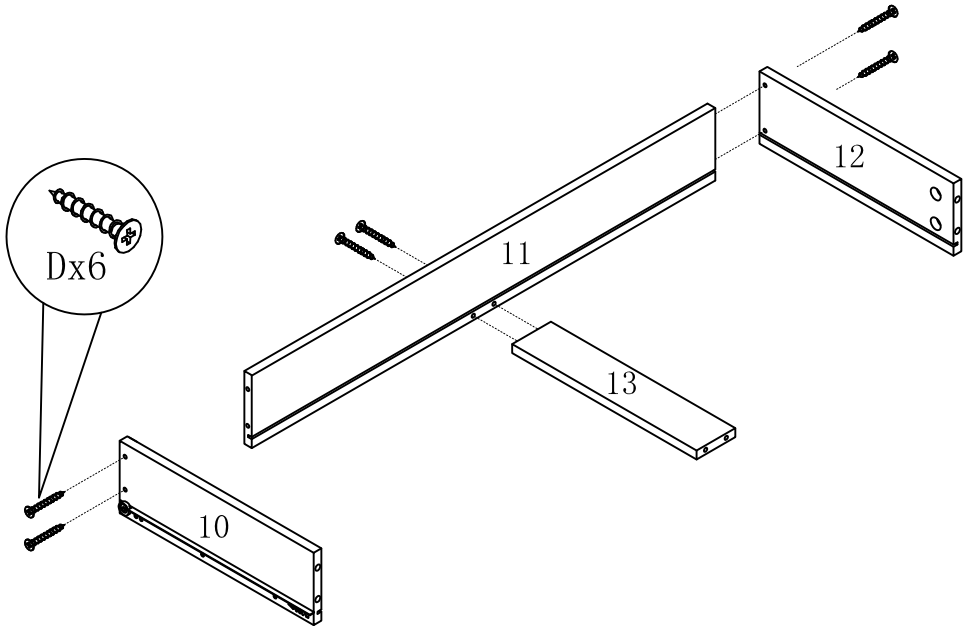


STEP9

STEP10

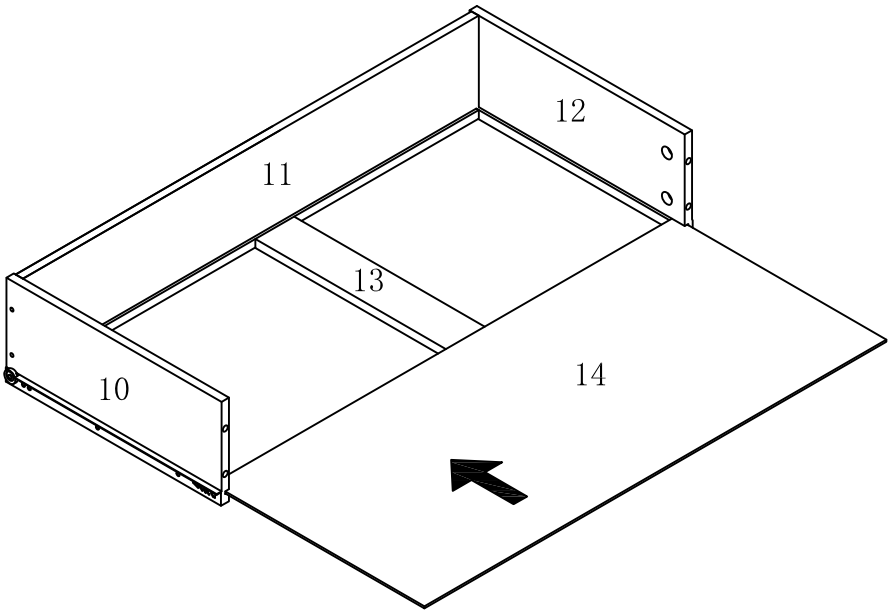


ASSEMBLY INSTRUCTION


ITEM#:223108 263499 263500

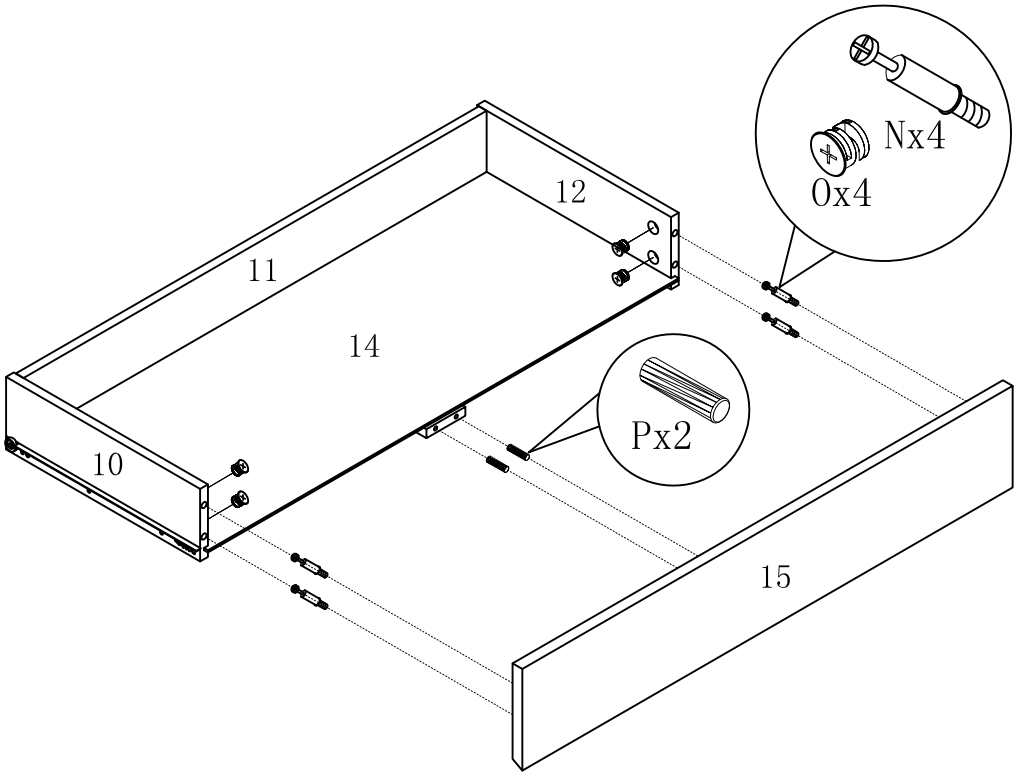

STEP11


STEP12

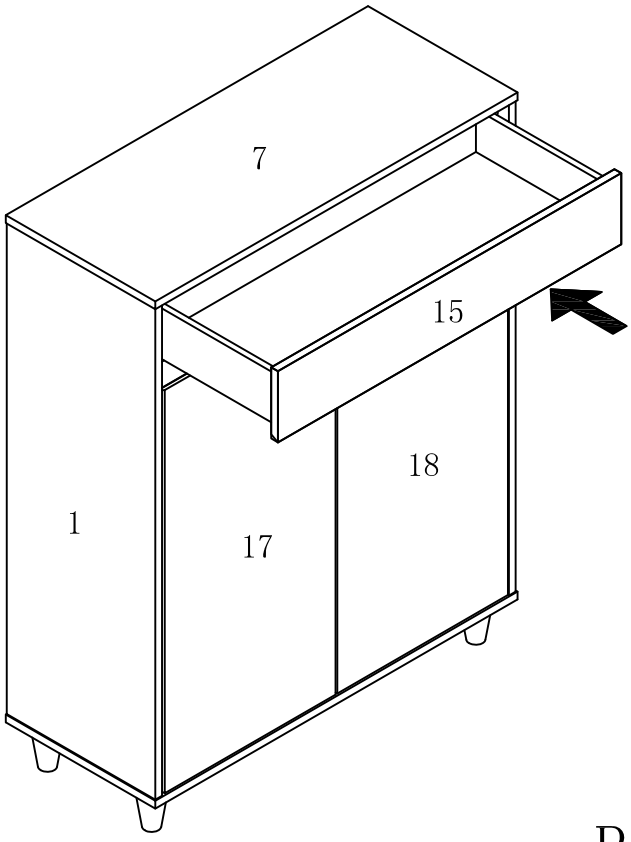


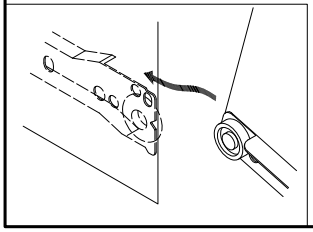


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE(INCLUDED):


DRYWALL ANCHOR ϕ8X40 X 1PC



METAL BRACKETS 12×12×1 X 2PCS



DRYWALL SCREW ϕ5X40 X 1PC


STRAP 197×5×1 X 1PC


FLATHEAD SCREW ϕ4X25 X 1PC


TOOLS NEEDED (NOT INCLUDED):

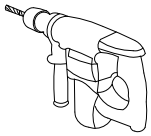
DRILL & DRILL BIT


LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

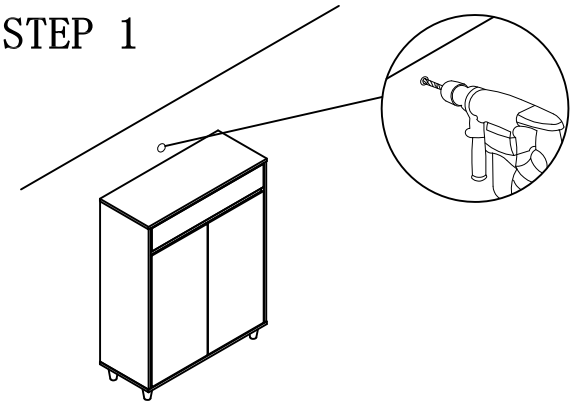


1.Find spot on wall 1″ below top of item.
2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

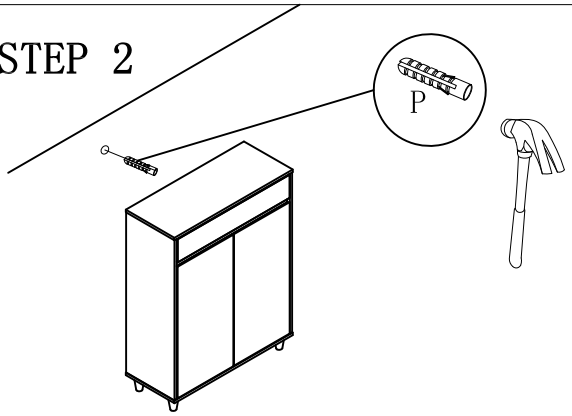


1.Use a light hammer to tap anchor into hole.
2.Anchor should fit snugly.lf hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

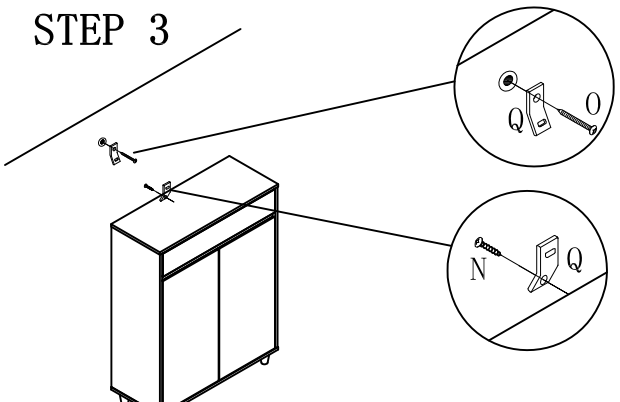

1.Insert drywall screw into metal bracket and into drywall anchor.
2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

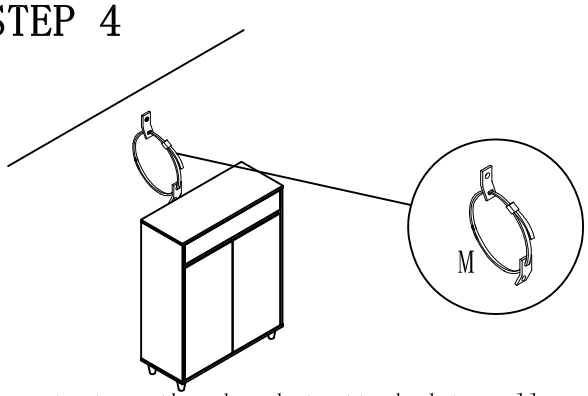

1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2.pull lightly til strap stops.
Assembly is complete.