




Bed Frame Assembly Instruction-TWIN

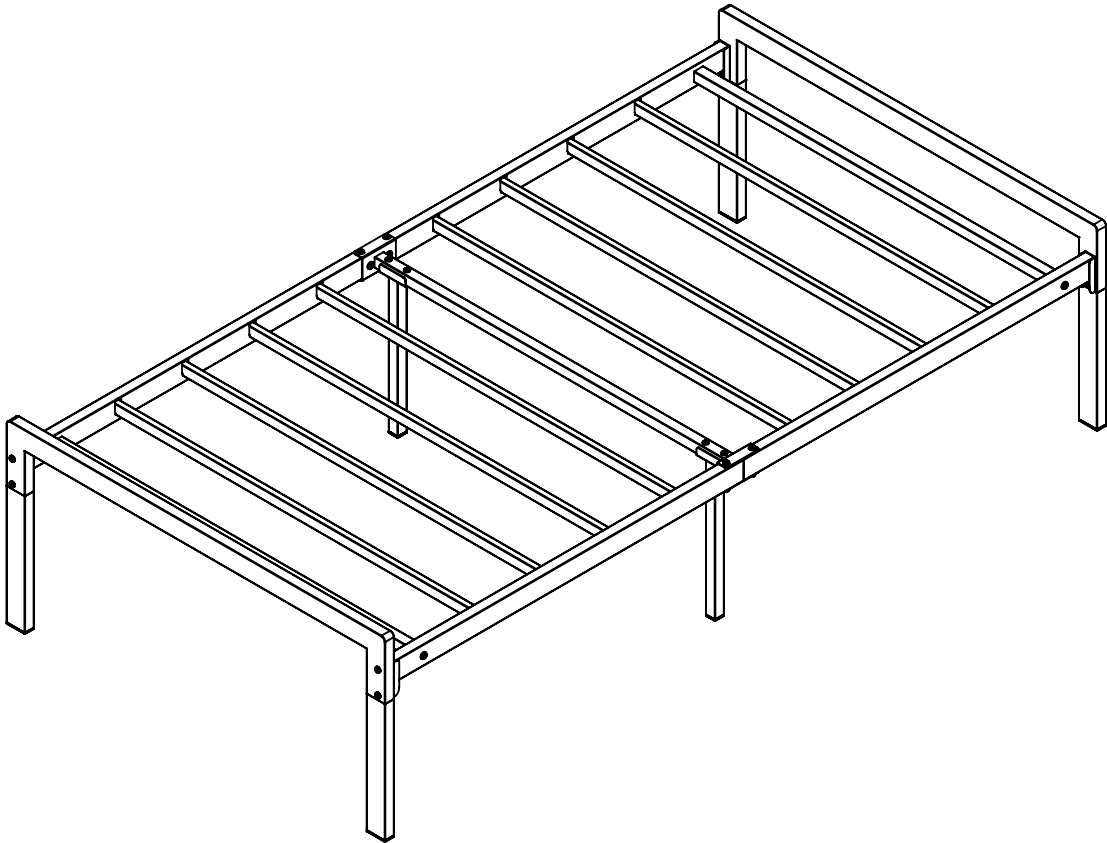


① X4

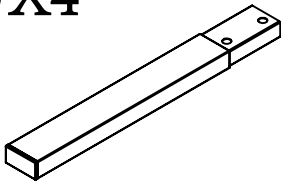


② X2

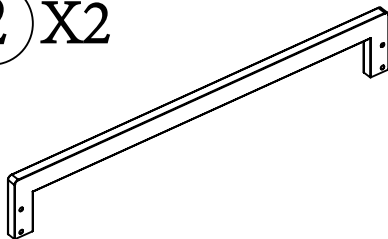


③ X2

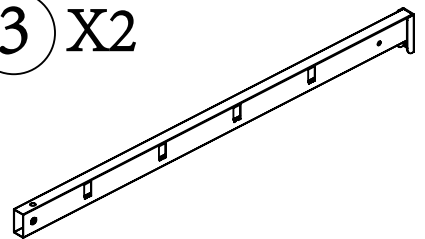


④ X2

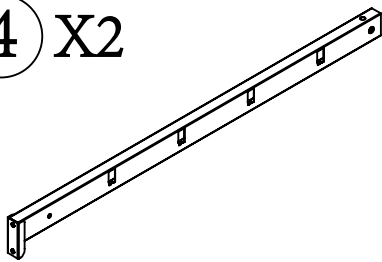


⑤ X1

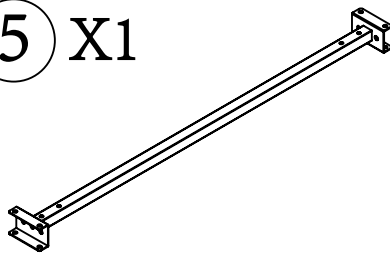


⑥ X2

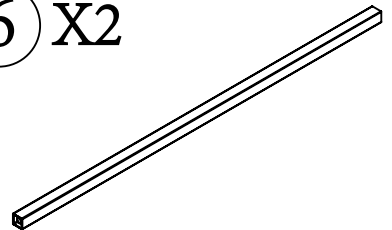

⑦ X8

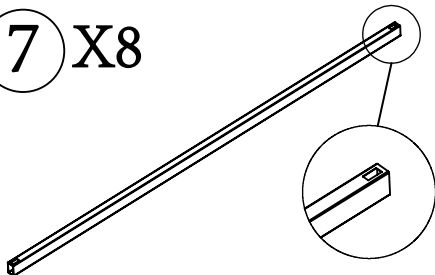

⑧ X2

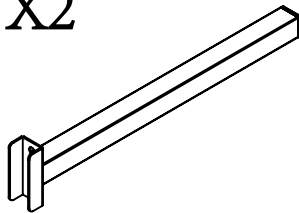

A X4



M8X65

B X8



M8X35

C X4



M8X12

D X4



M6X45

E X4



M6X35

F X4




M8

G X4




M6


L X16

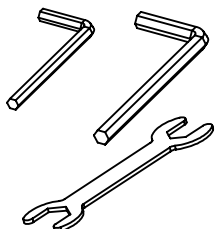


Difference screws display(1:1)

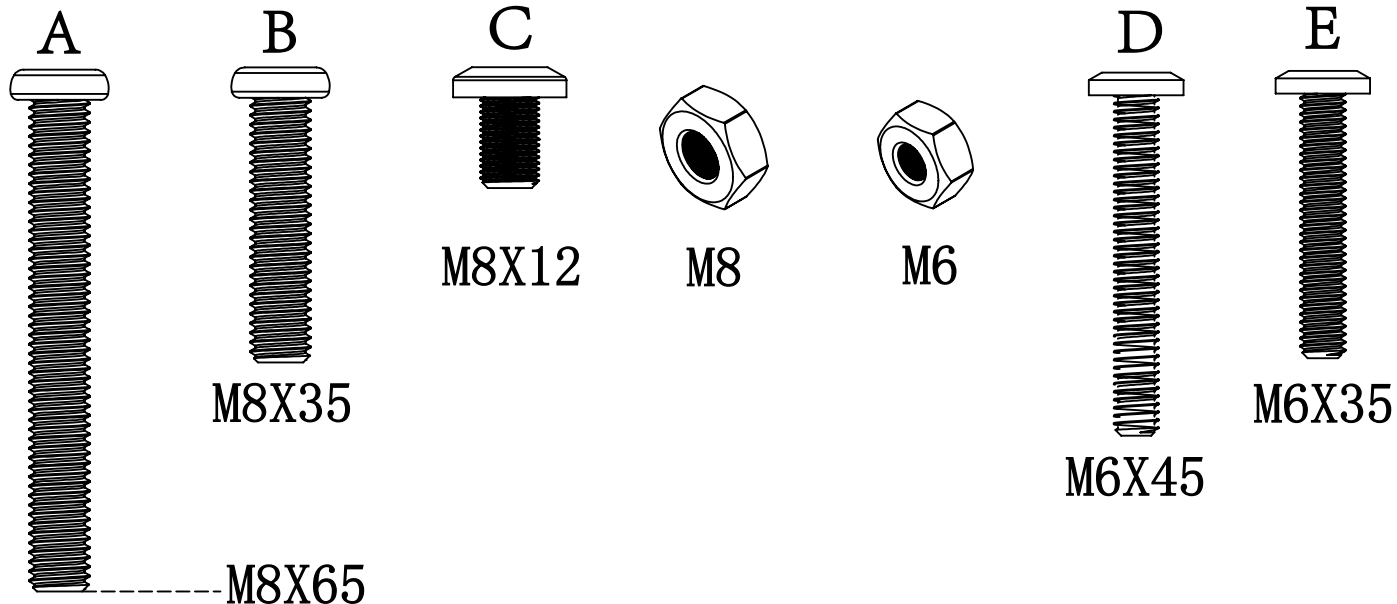


Step 1

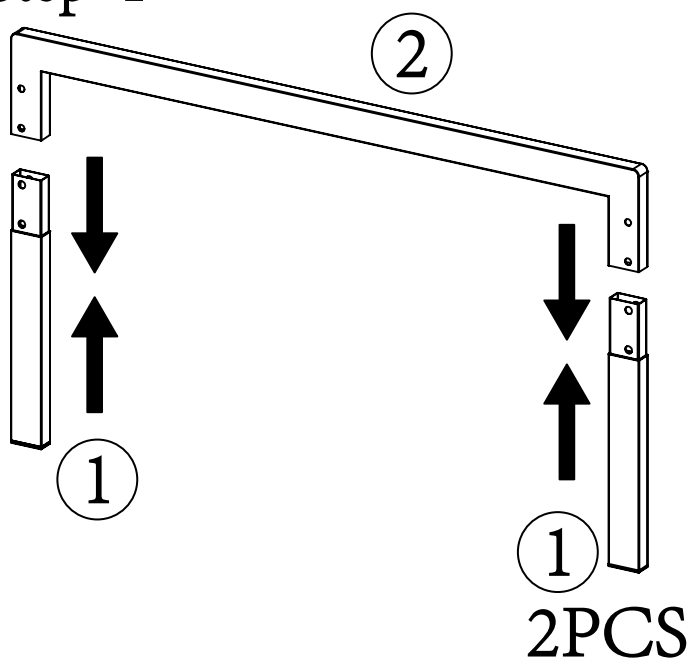


Step 2

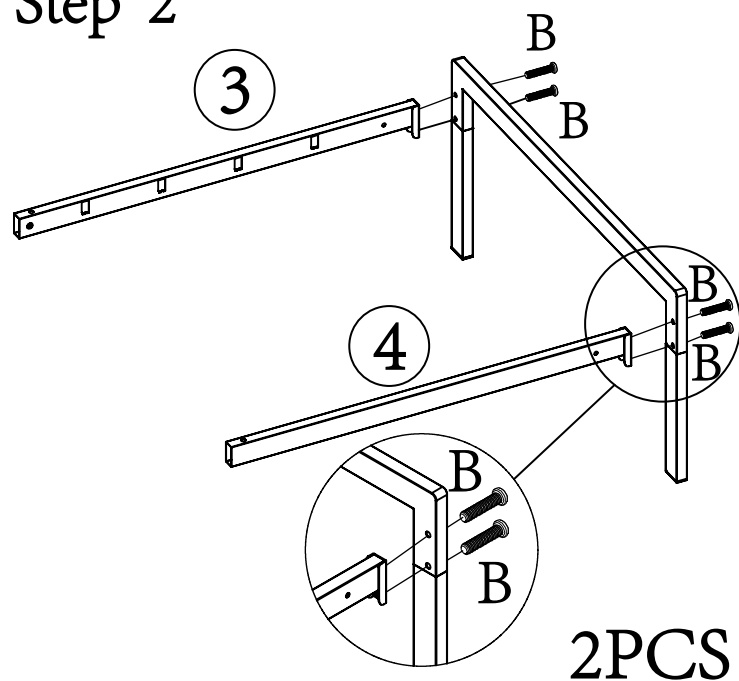

Step 3

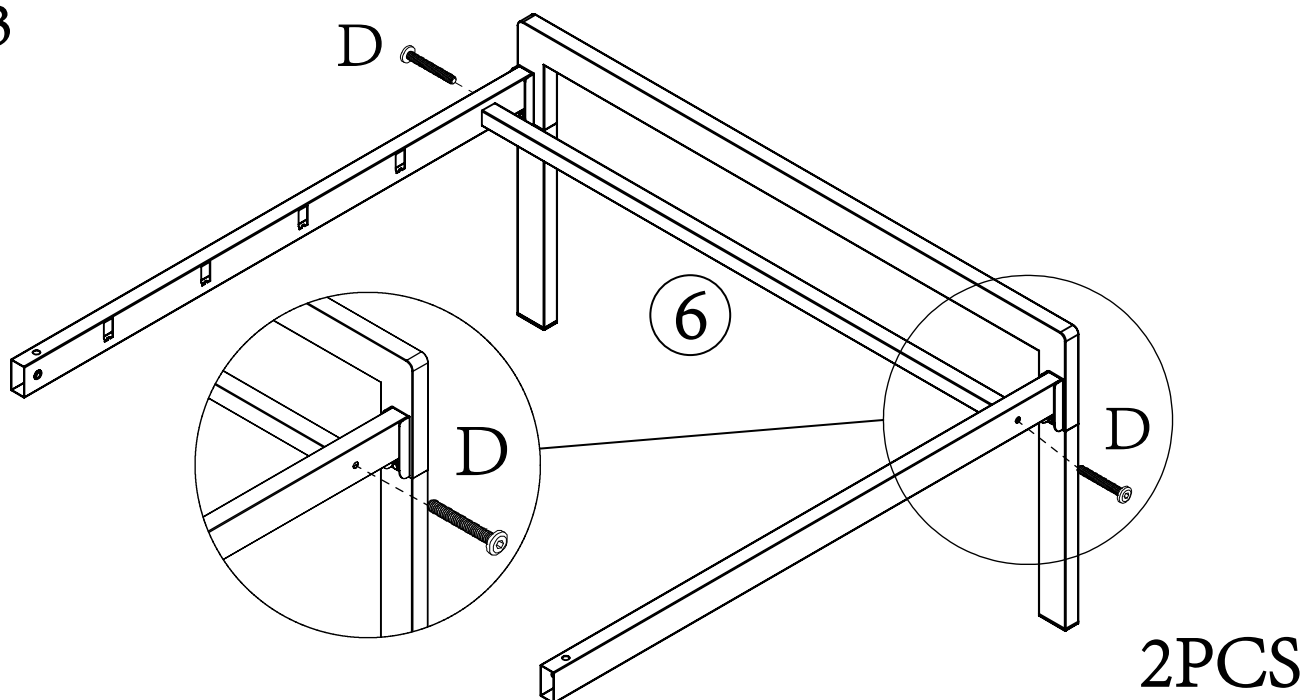


Step 4

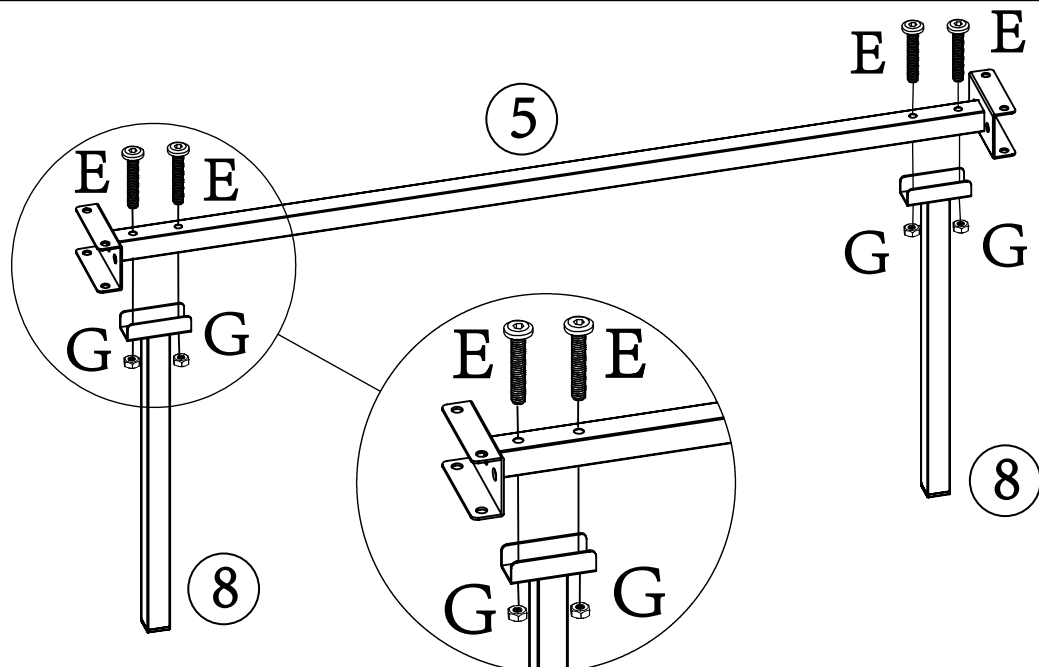


Step 5


When installing, please first connect No.3 and No.4 before installing the C screw

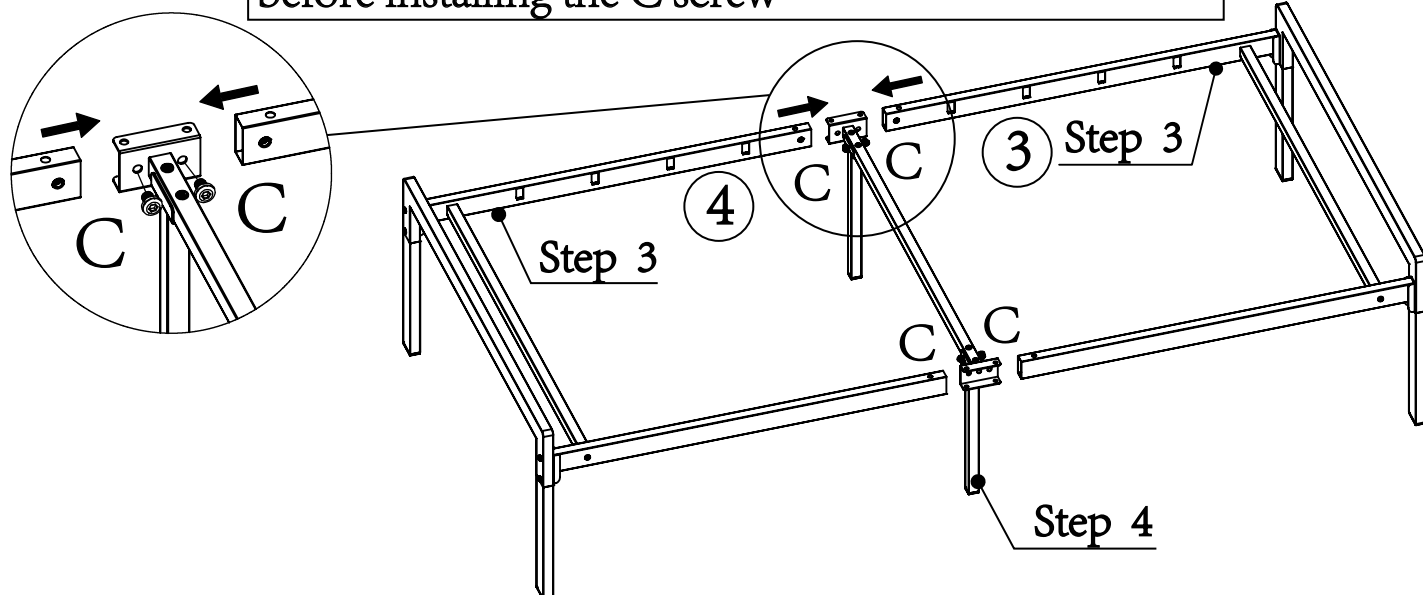


Step 6

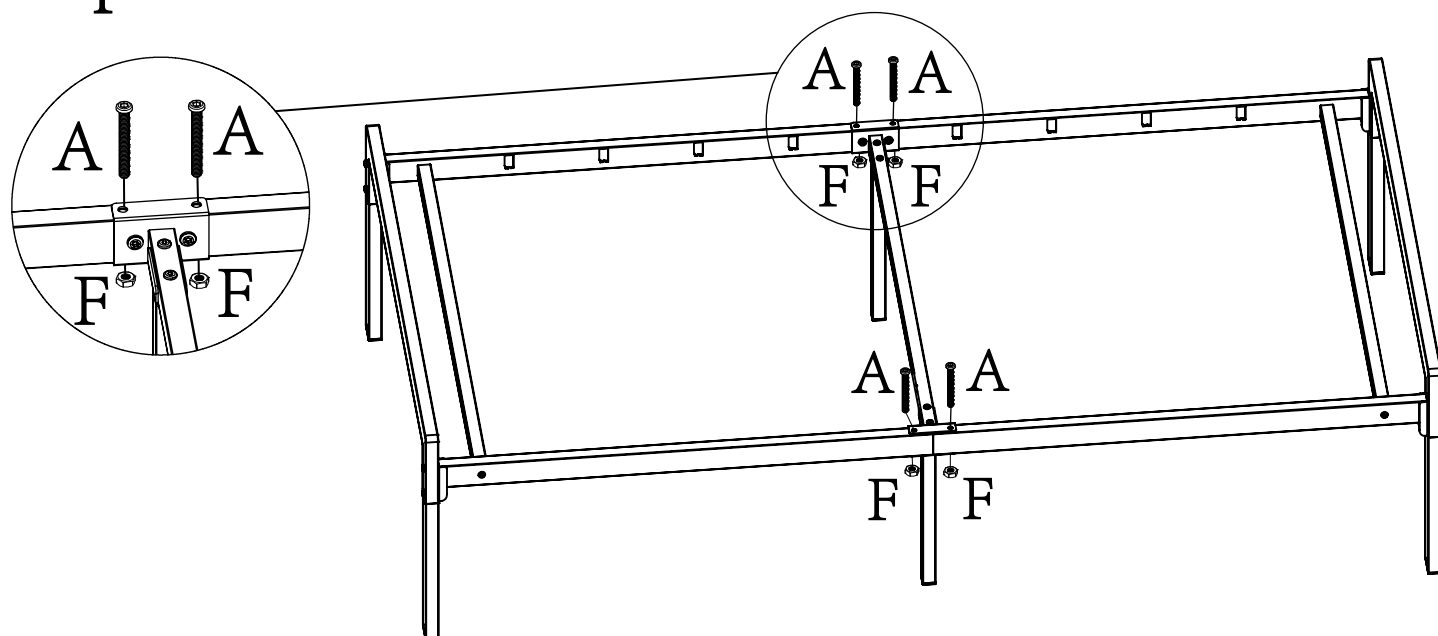

Step 7

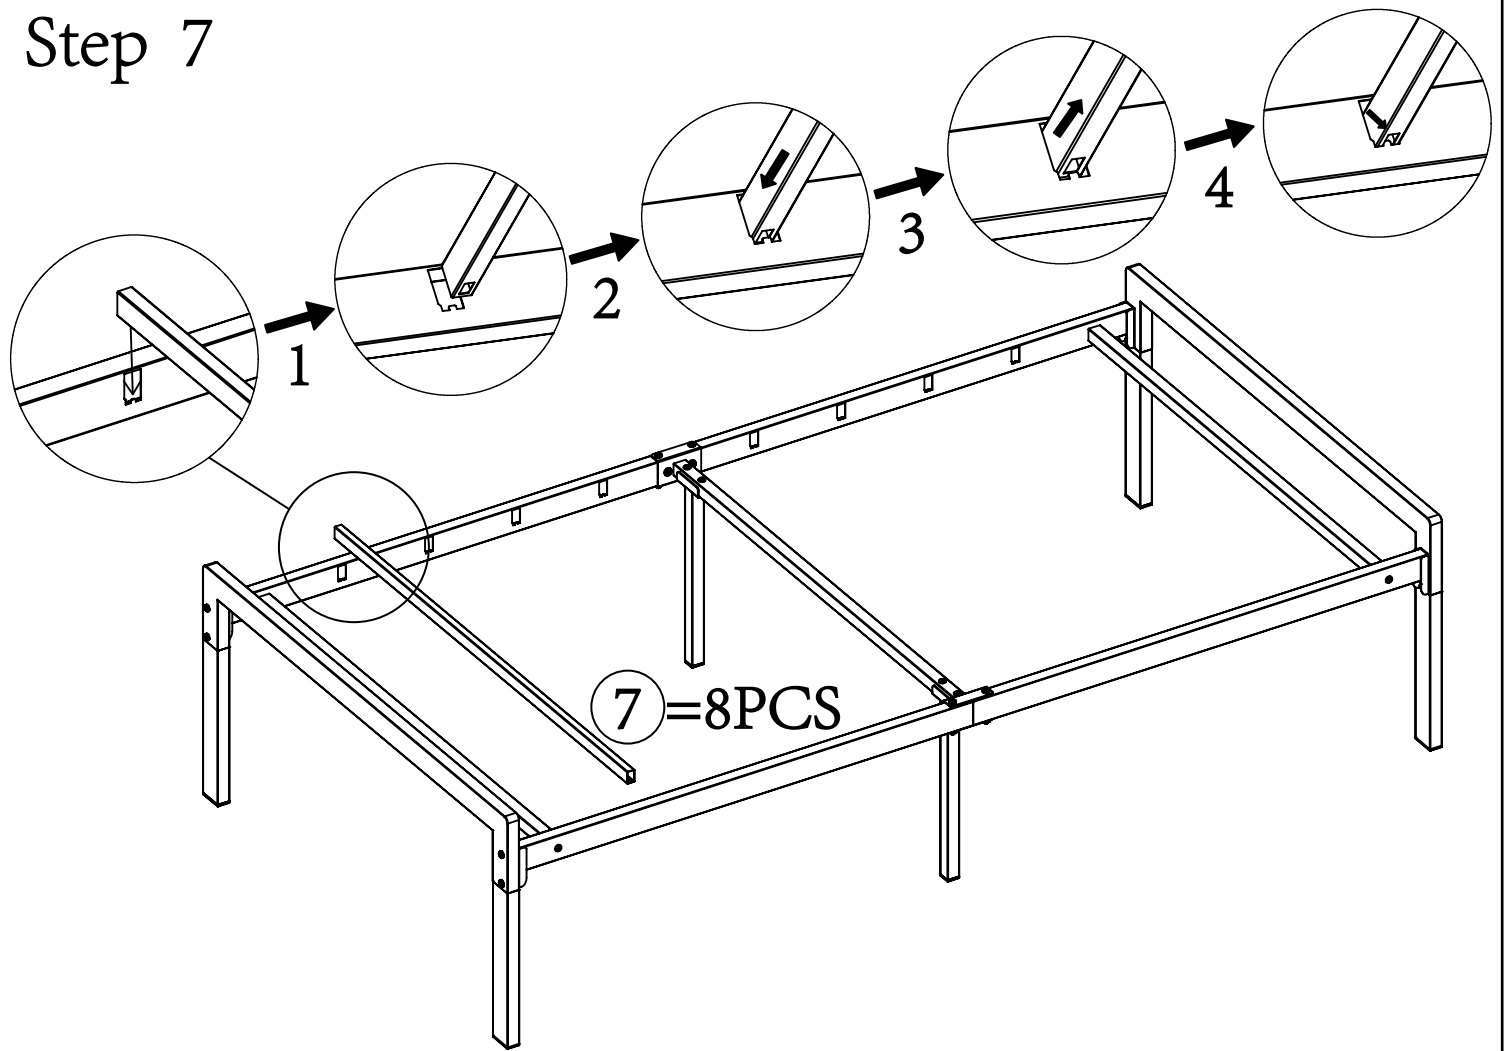

Step 8



L=16PCS

