


SKU:NYX08-180

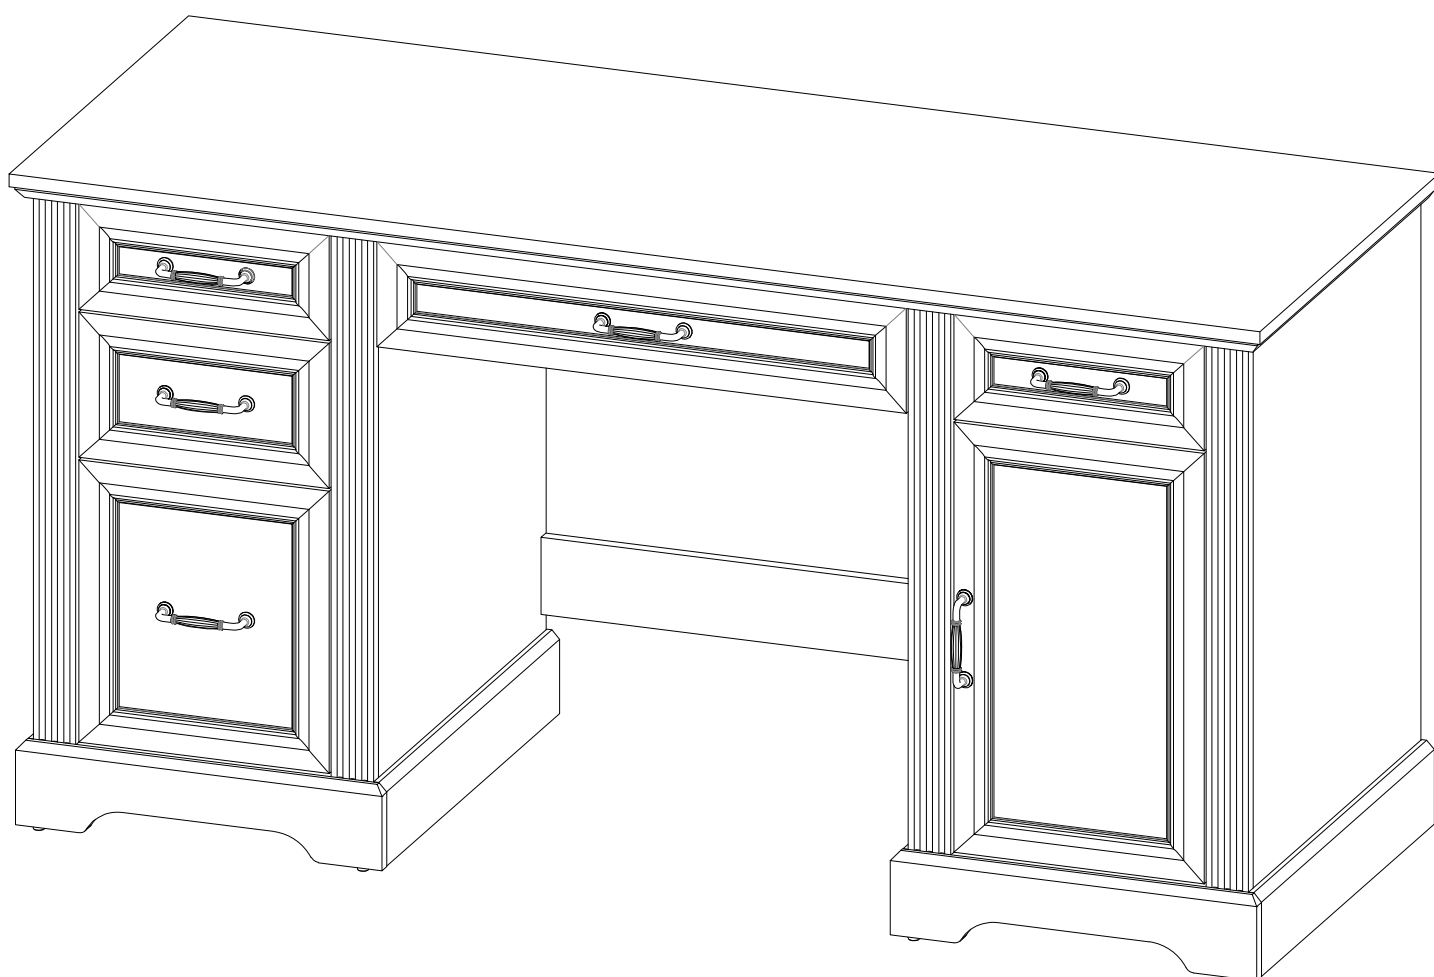

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

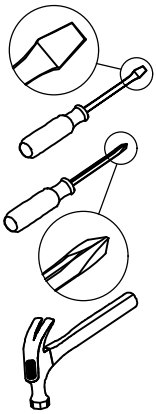

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

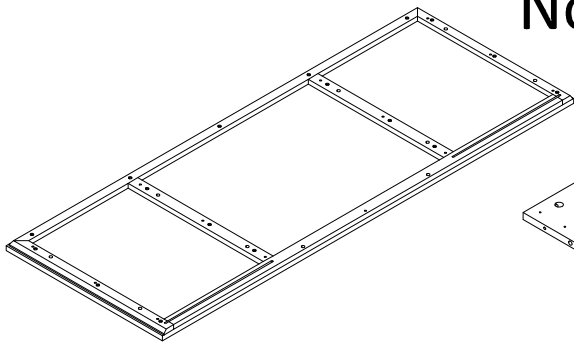


(A)

DESK TOP
Qty:1

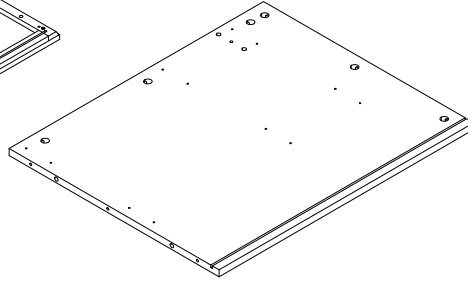


(B)

LEFT PANEL
Qty:1

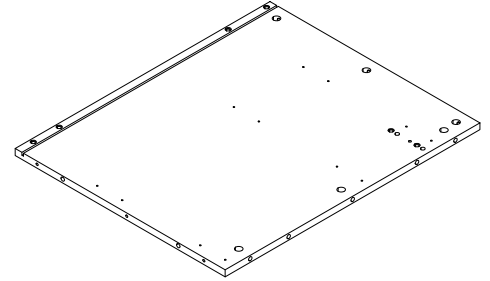


(C)

LEFT PARTITION
Qty:1

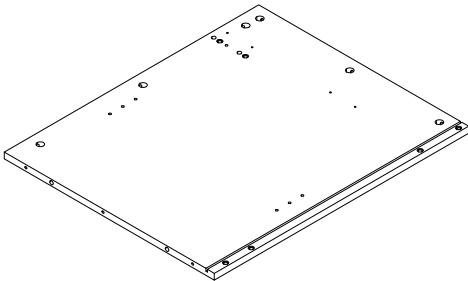


(D)

RIGHT PARTITION
Qty:1

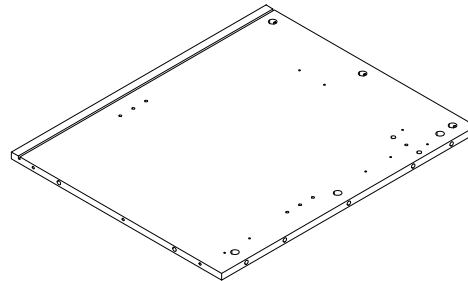


(E)

RIGHT PANEL
Qty:1

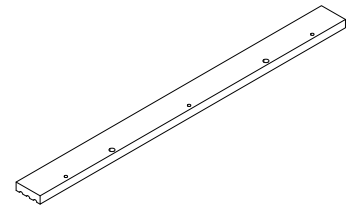


(F)

RAIL
Qty:4

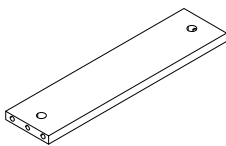


(G)

RAIL
Qty:2

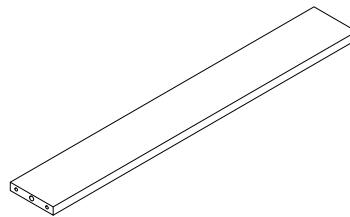


(H)

RAIL
Qty:2

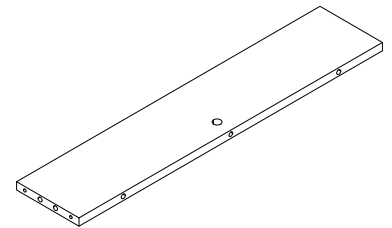


(I)

BACK RAIL
Qty:1

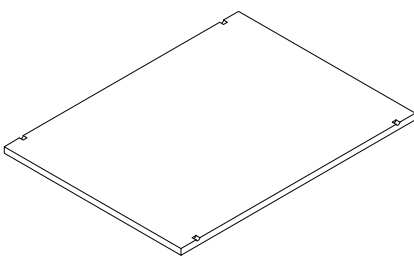


(J)

ADJUSTABLE SHELF
Qty:1

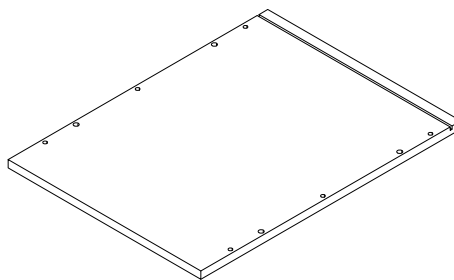

(K)

BOTTOM
Qty:2

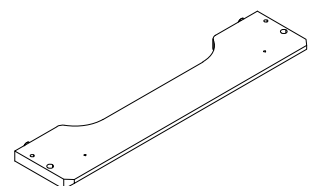


(L)

BOTTOM FRONT APRON
Qty:2


Board Identification

Not actual size

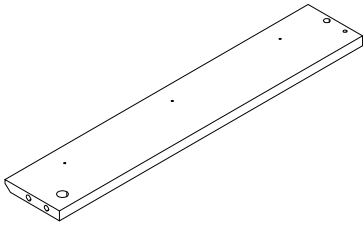


(M)

BOTTOM SIDE APRON, LEFT
Qty:2

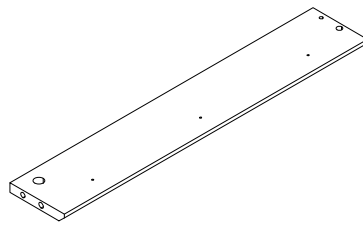


(N)

BOTTOM SIDE APRON, RIGHT
Qty:2

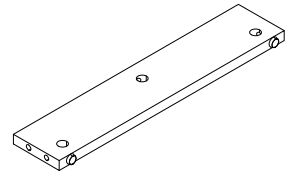


(O)

BOTTOM BACK APRON
Qty:2

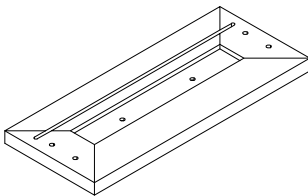


(P)

DRAWER FRONT
Qty:2

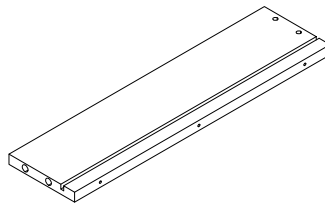


(Q)

LEFT DRAWER SIDE
Qty:3

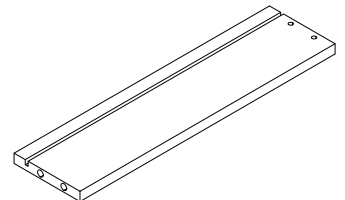


(R)

RIGHT DRAWER SIDE
Qty:3

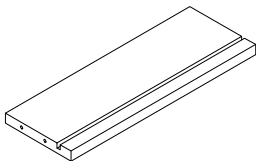


(S)

DRAWER BACK
Qty:2

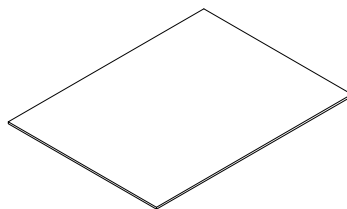


(T)

DRAWER BOTTOM
Qty:4

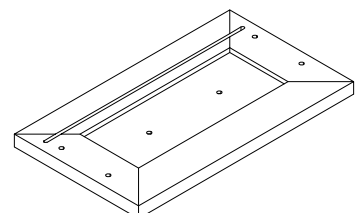


(U)

DRAWER FRONT
Qty:1

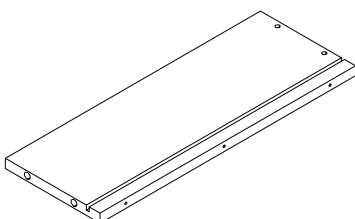


(V)

LEFT DRAWER SIDE
Qty:1

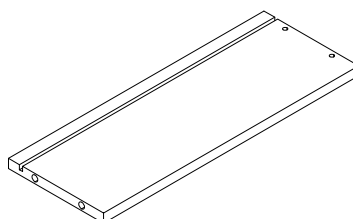

(W)

RIGHT DRAWER SIDE
Qty:1

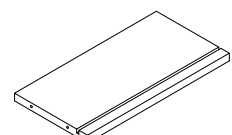


(X)

DRAWER BACK
Qty:1


Board Identification

Not actual size

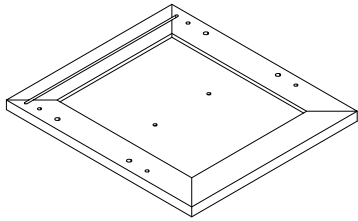


Y

DRAWER FRONT
Qty:1

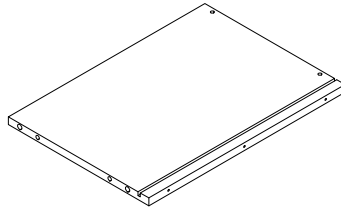


Z

LEFT DRAWER SIDE
Qty:1

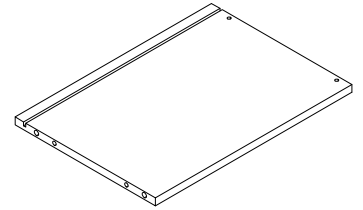


AA

RIGHT DRAWER SIDE
Qty:1

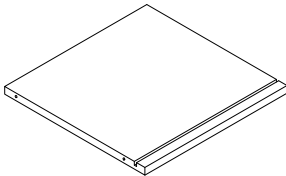


BB

DRAWER BACK
Qty:1

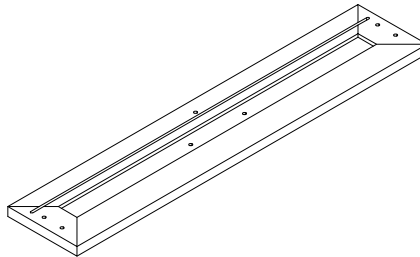


CC

DRAWER FRONT
Qty:1

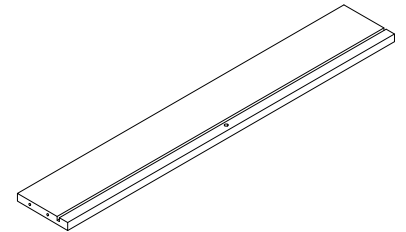


DD

DRAWER BACK
Qty:1

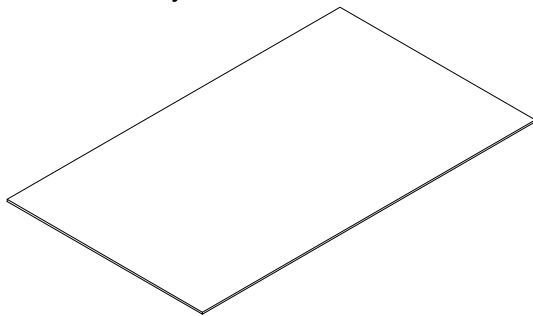


EE

DRAWER BOTTOM
Qty:1

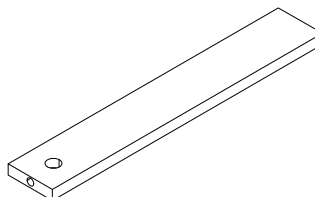


FF

DRAWER SUPPORT
Qty:1

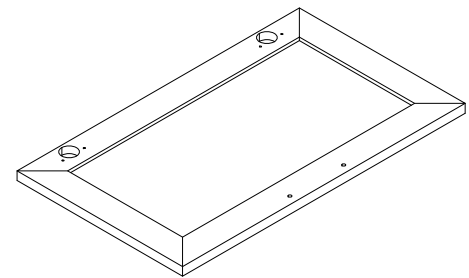

GG


DOOR
Qty:1

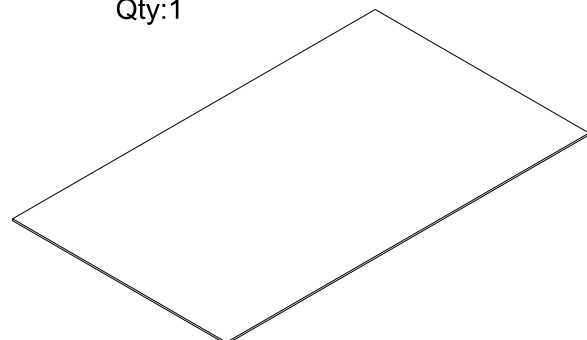


HH

BACK PANEL
Qty:2


Part List

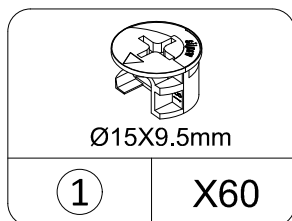


CAM LOCK
spare:2

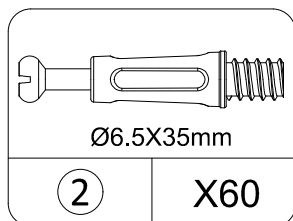


CAM BOLT
spare:2

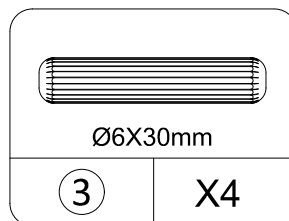


WOODEN DOWEL
spare:1

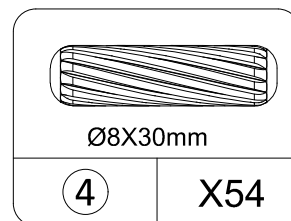


WOODEN DOWEL
spare:1

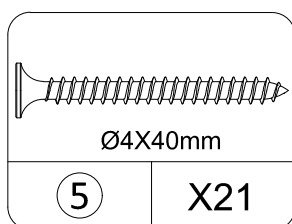


SCREW
spare:1

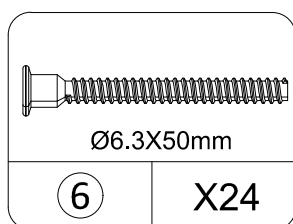


SCREW
spare:1

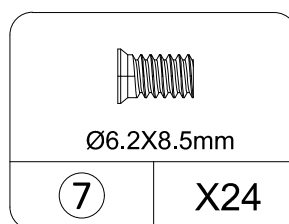


SCREW
spare:1

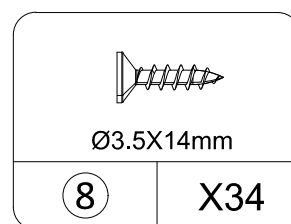


SCREW
spare:2

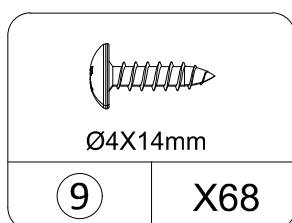


SCREW
spare:2

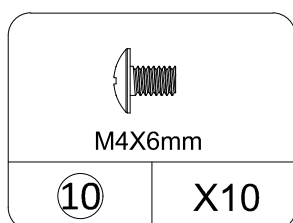


BOLT

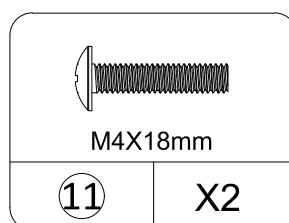


BOLT

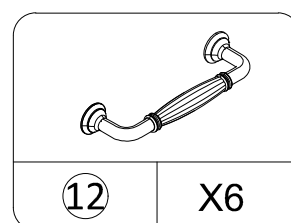


HANDLE

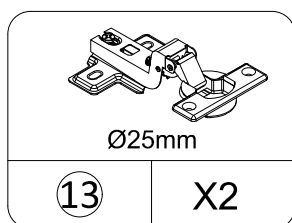


HINGE

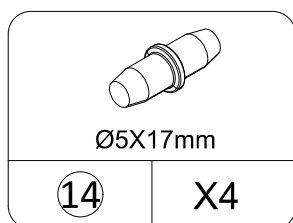


SHELF SUPPORT
spare:1

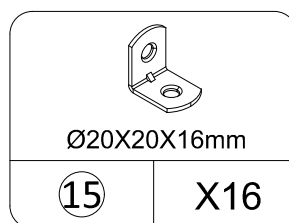


L-SHAPED IRON

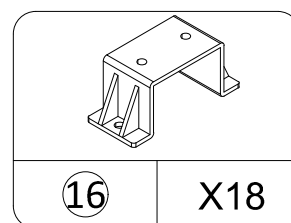


U-BRACKET

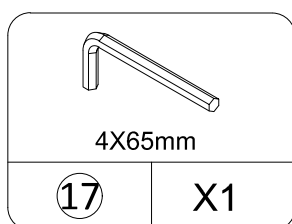


HEXAGON WRENCH

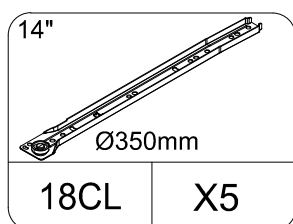

LEFT CABINET MEMBER

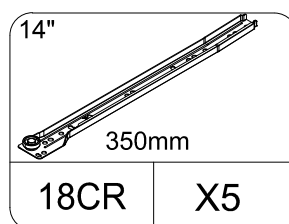


RIGHT CABINET MEMBER

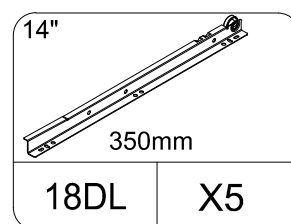

LEFT DRAWER RUNNER

Part List

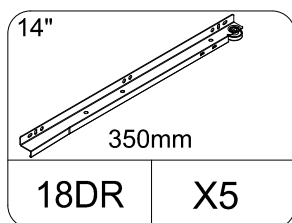


RIGHT DRAWER RUNNER


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

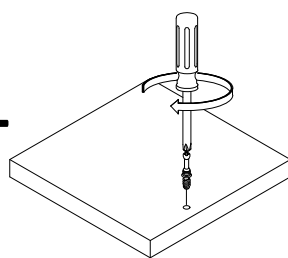

2

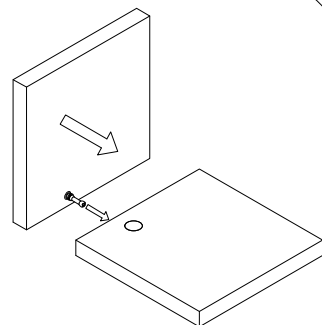


3

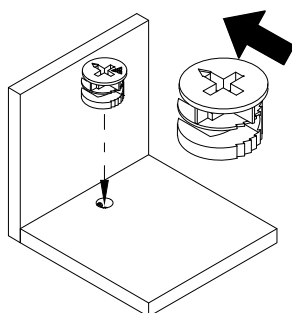


The opening must point toward the edge of the board

4




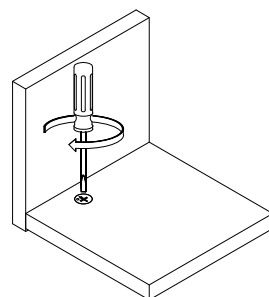


Board Identification

Not actual size




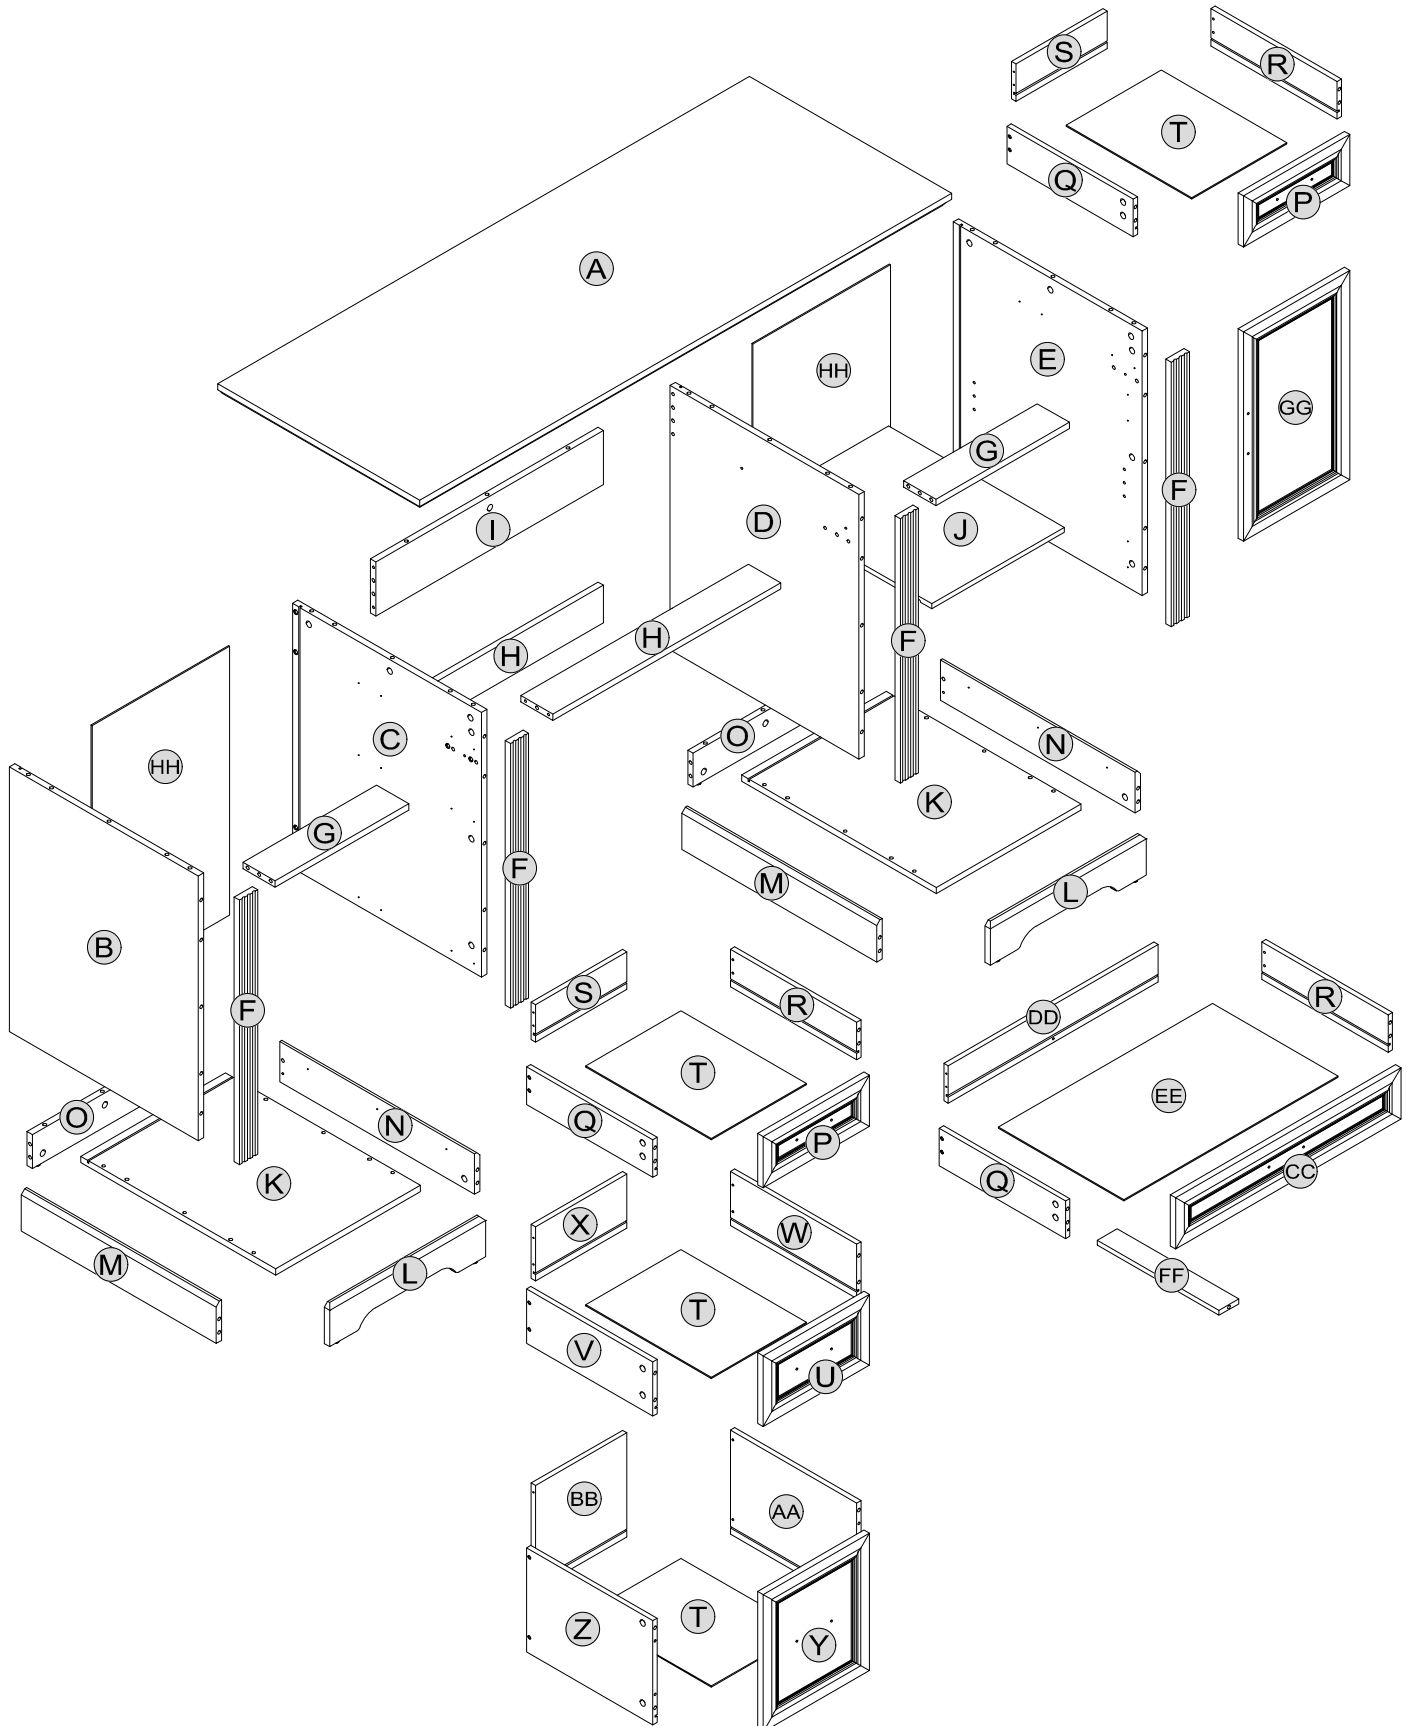


STEP1


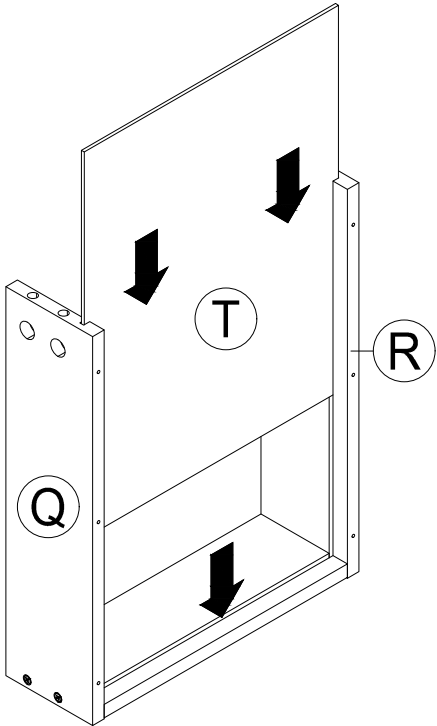
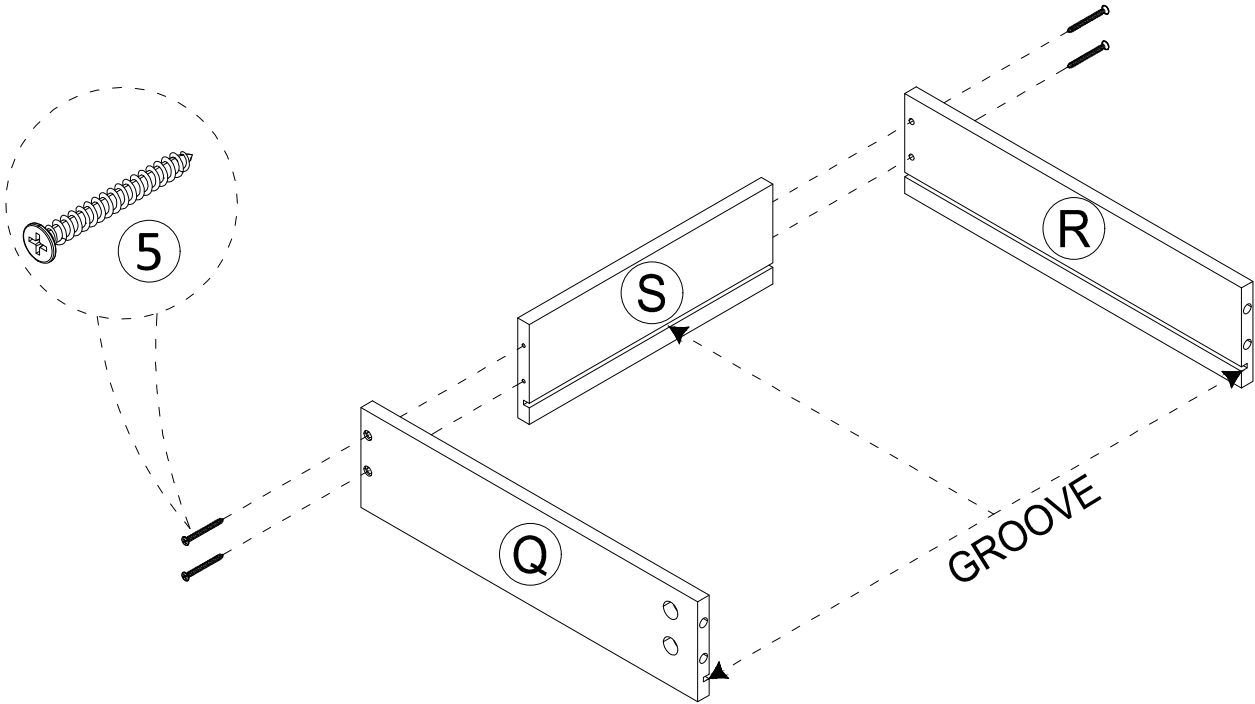
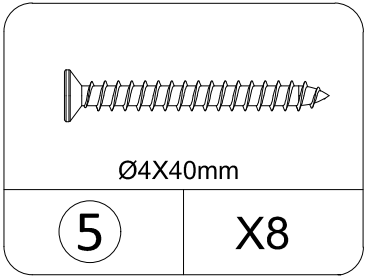
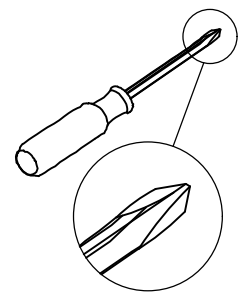


x 2










STEP2

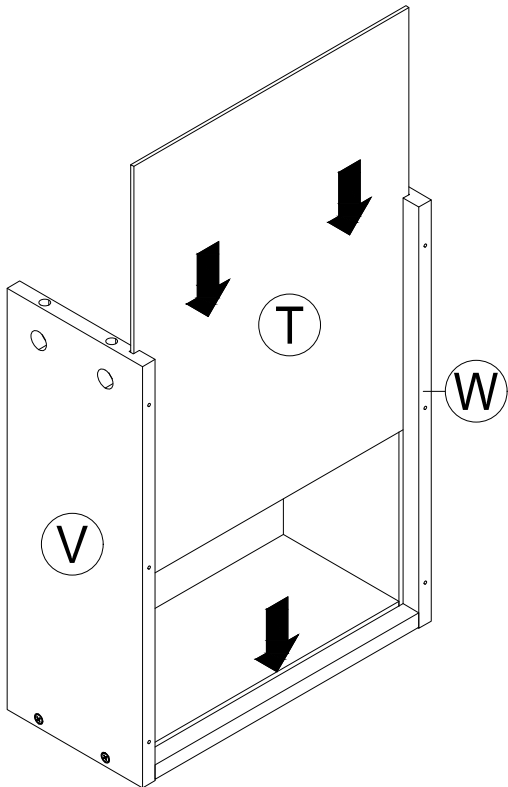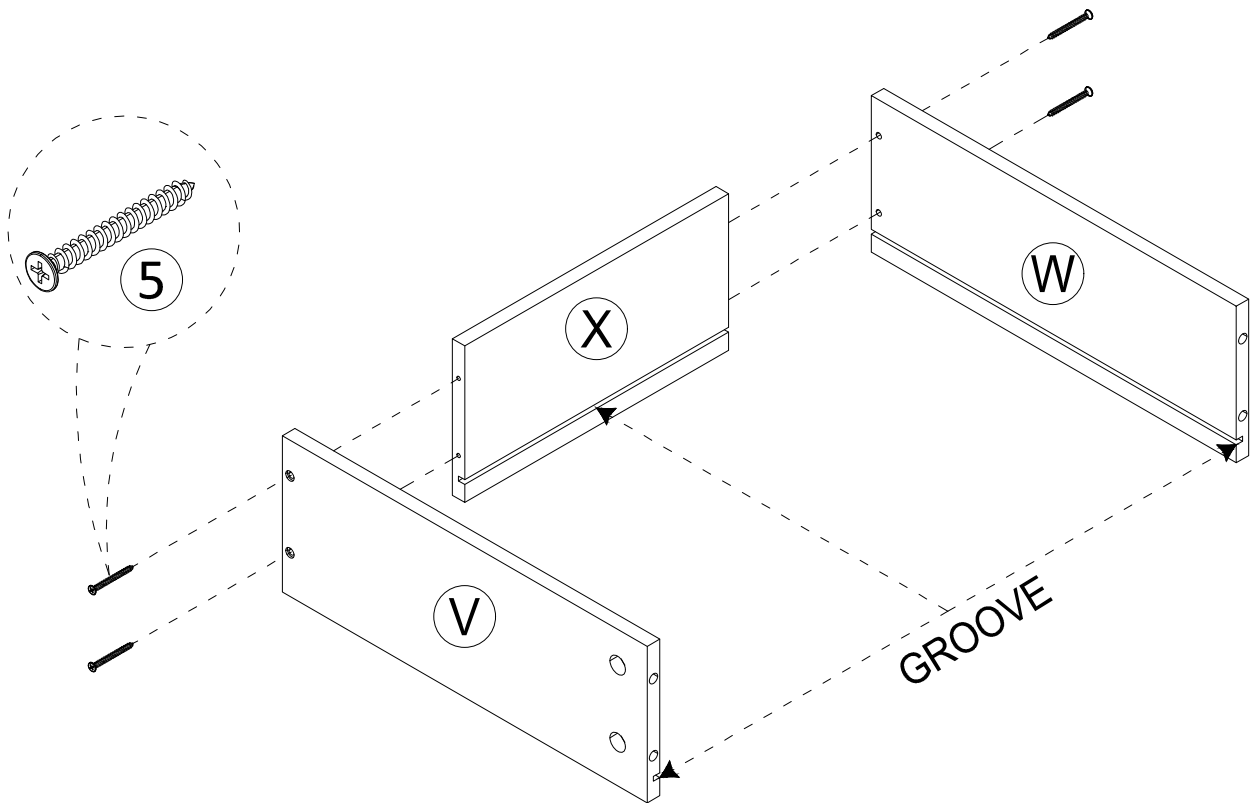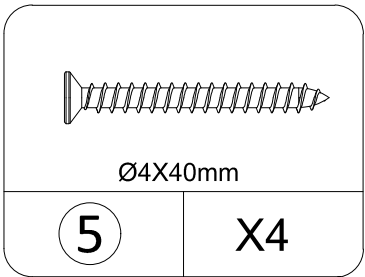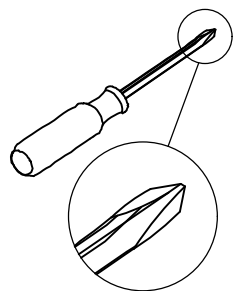








STEP3

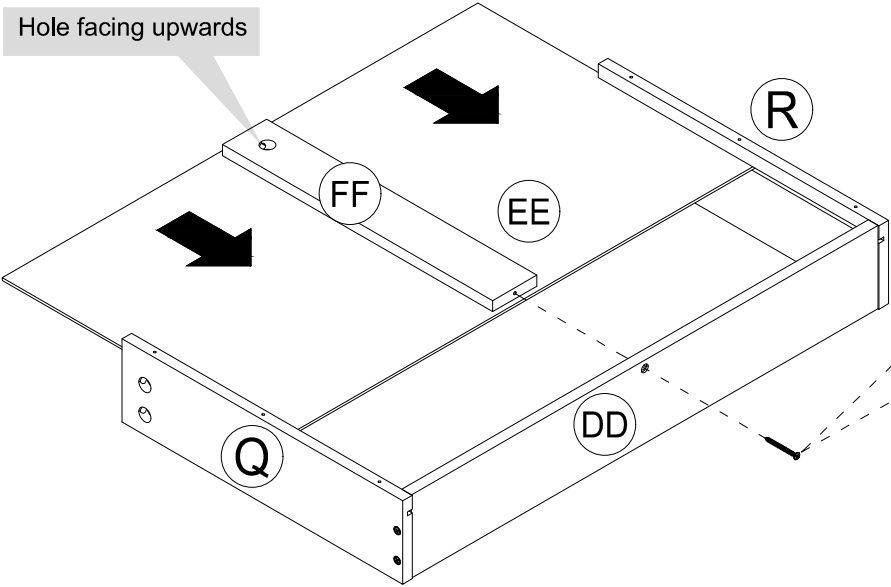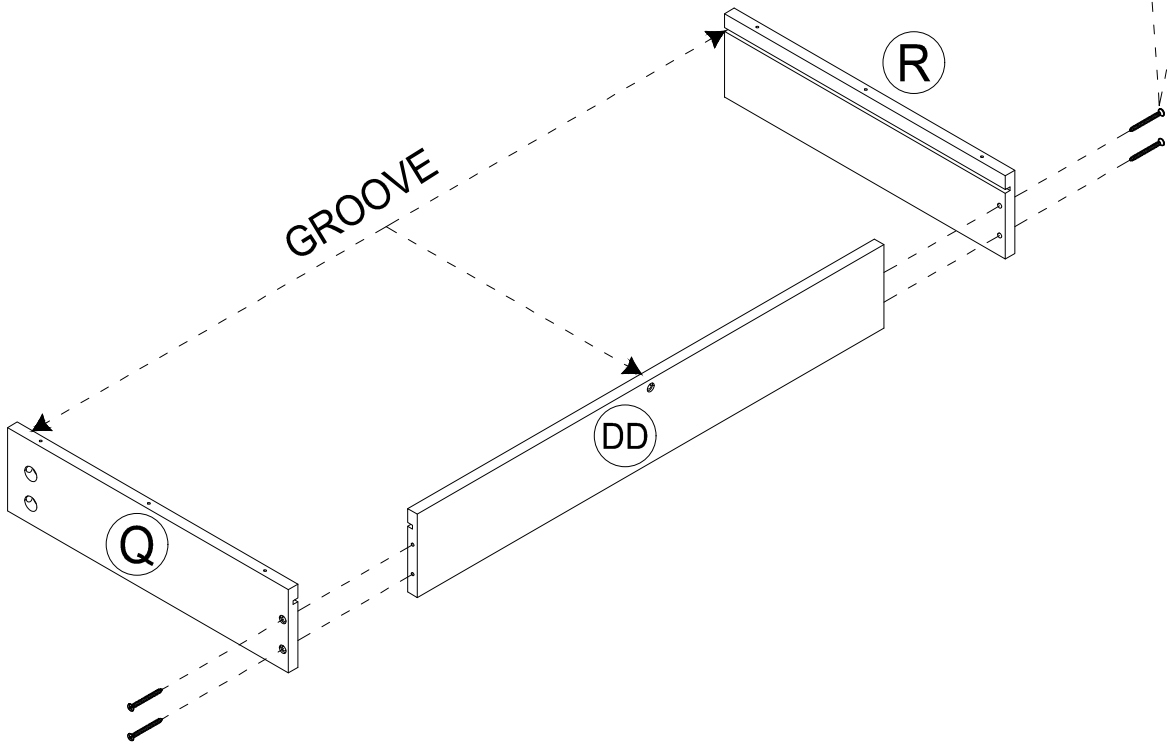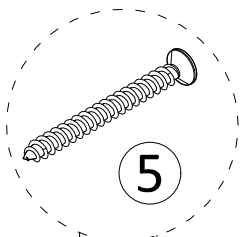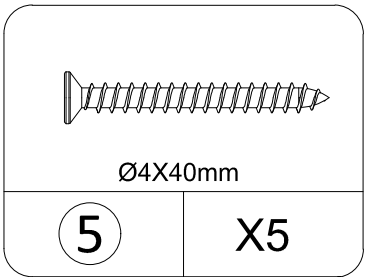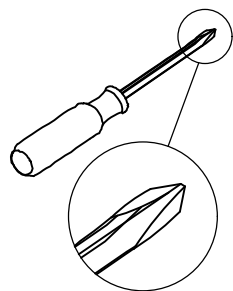



STEP4

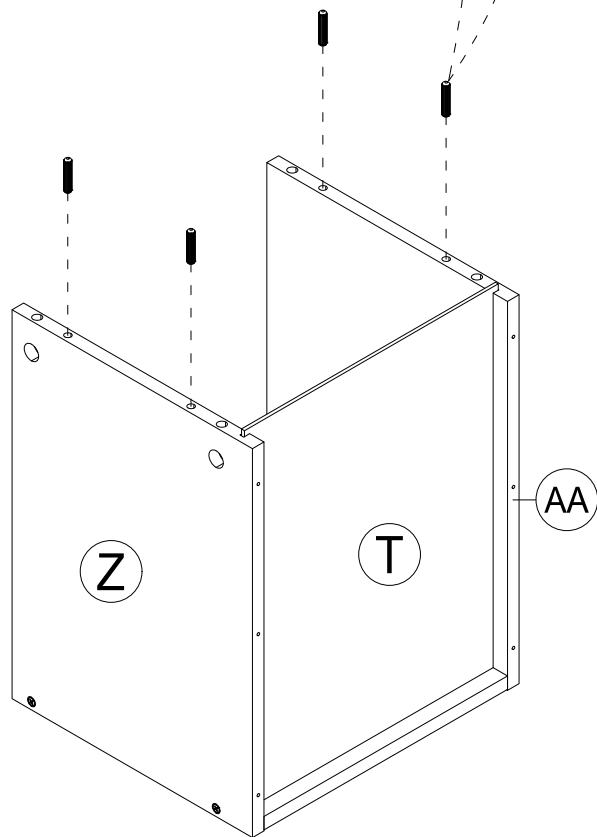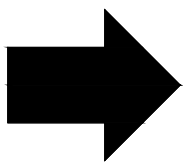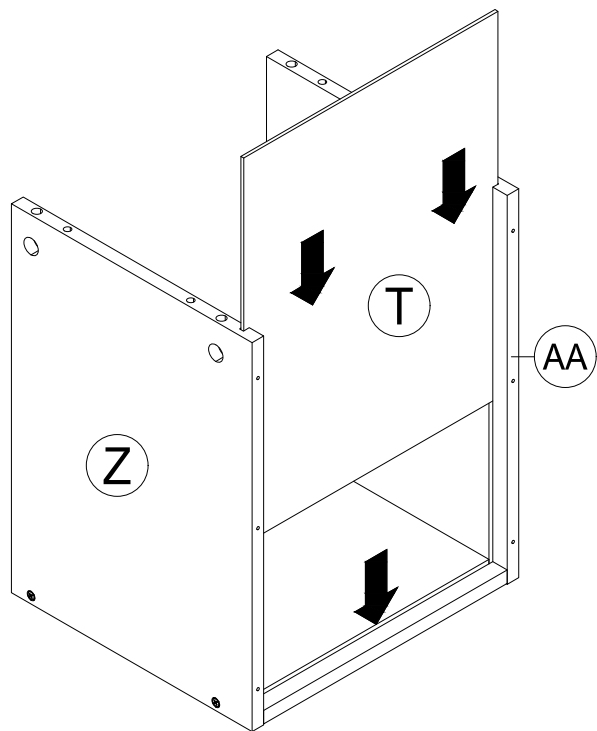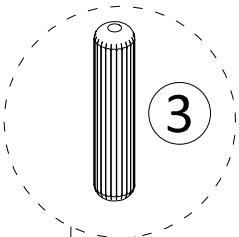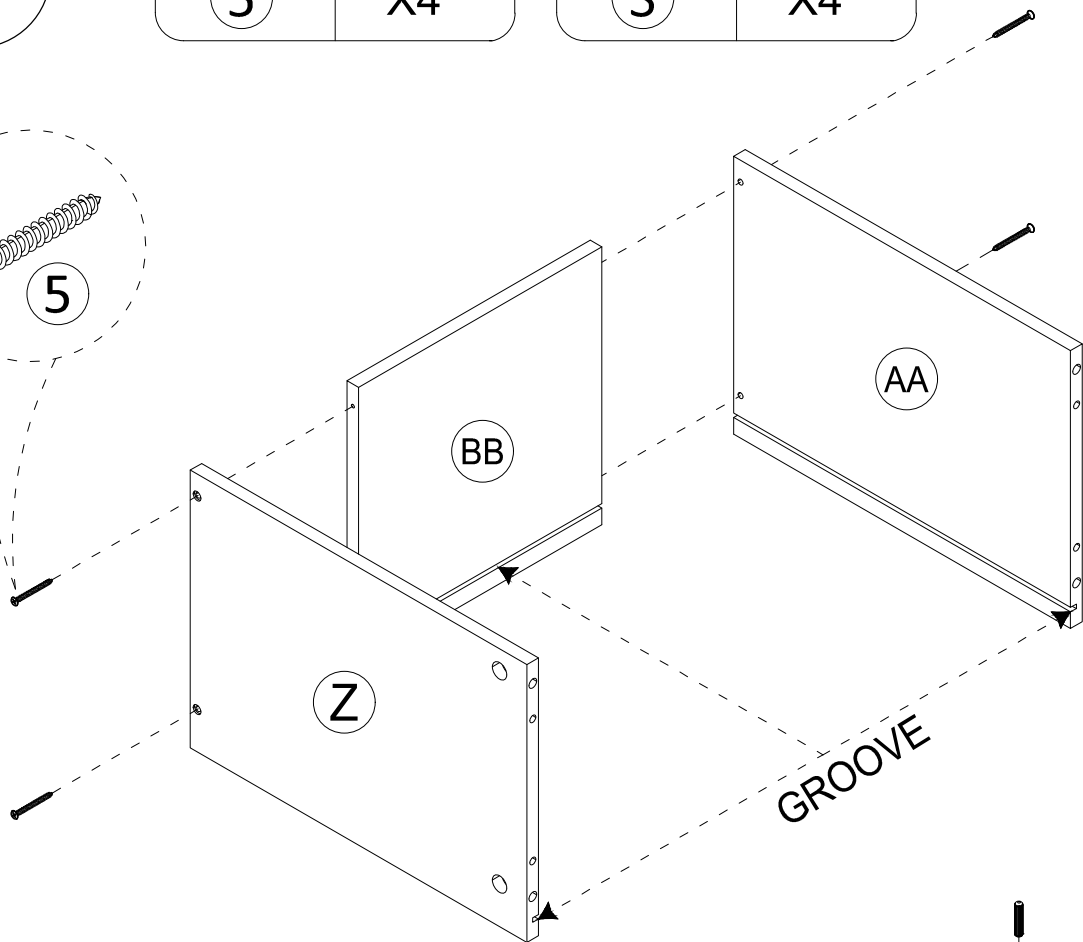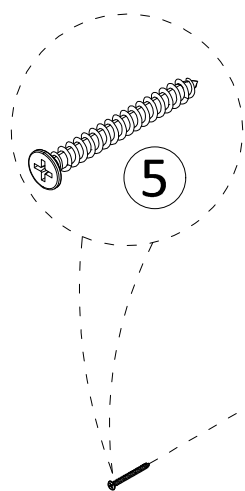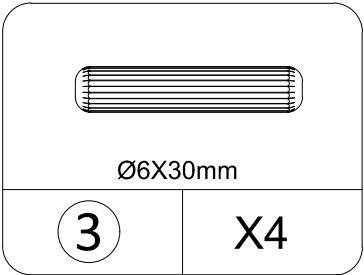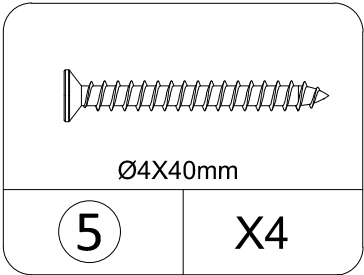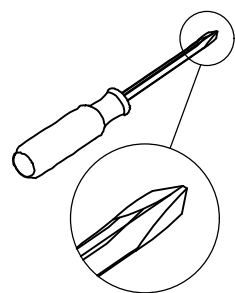

STEP5



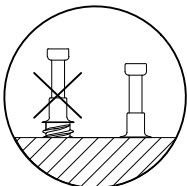
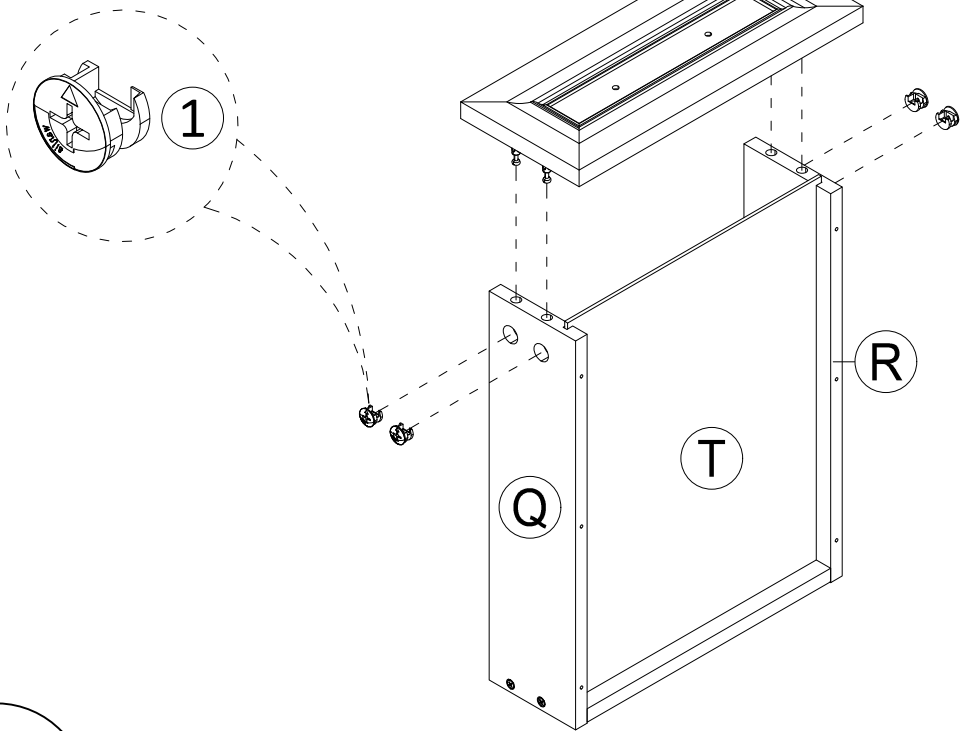
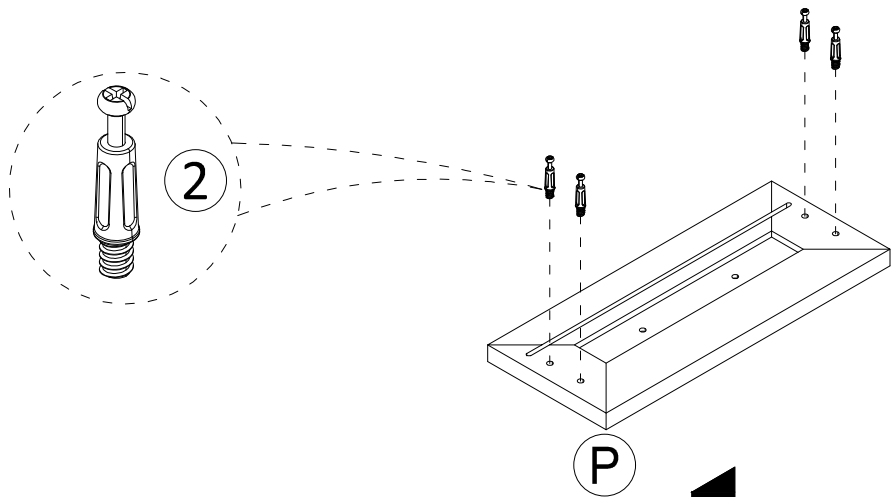
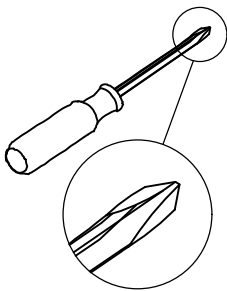
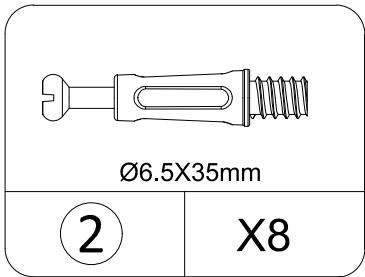
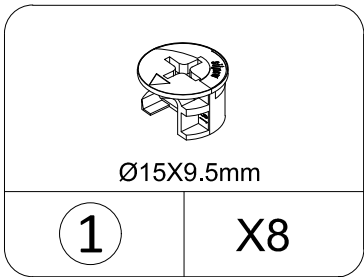
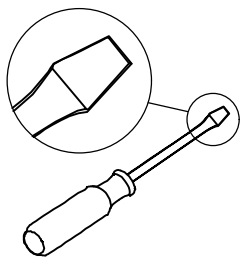


x 2

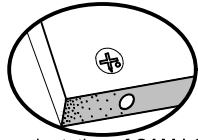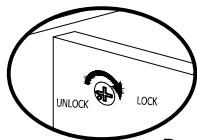









Proper orientation of CAM LOCK

STEP6

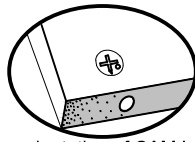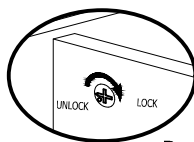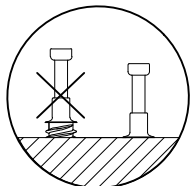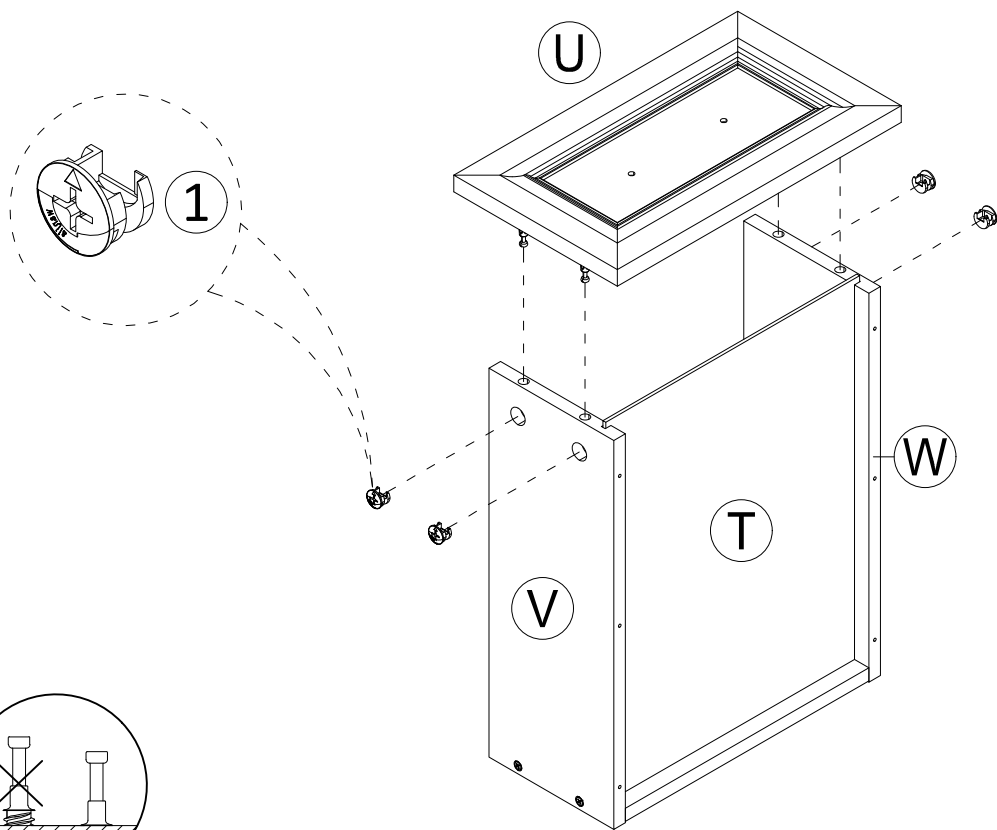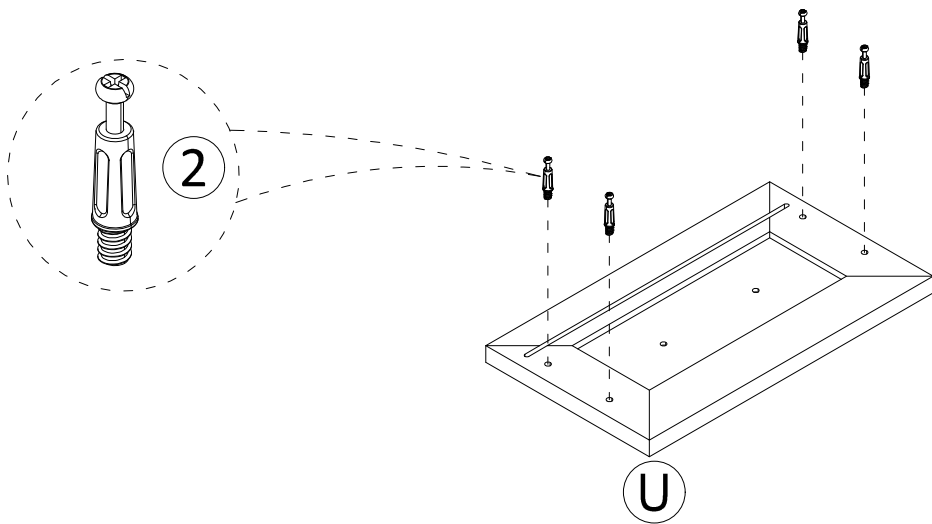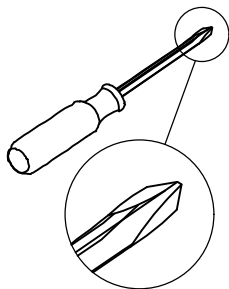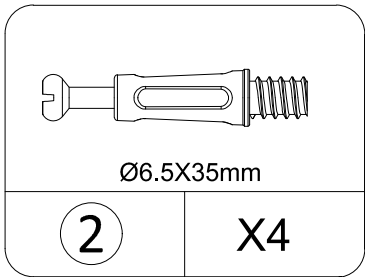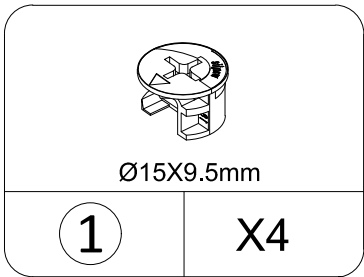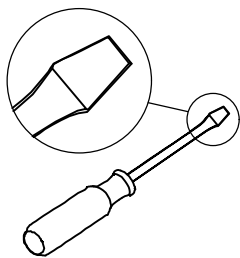


Proper orientation of CAM LOCK

STEP 7

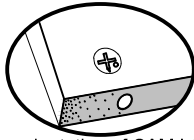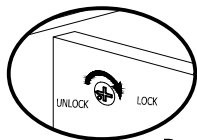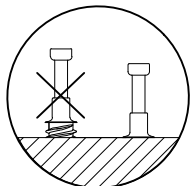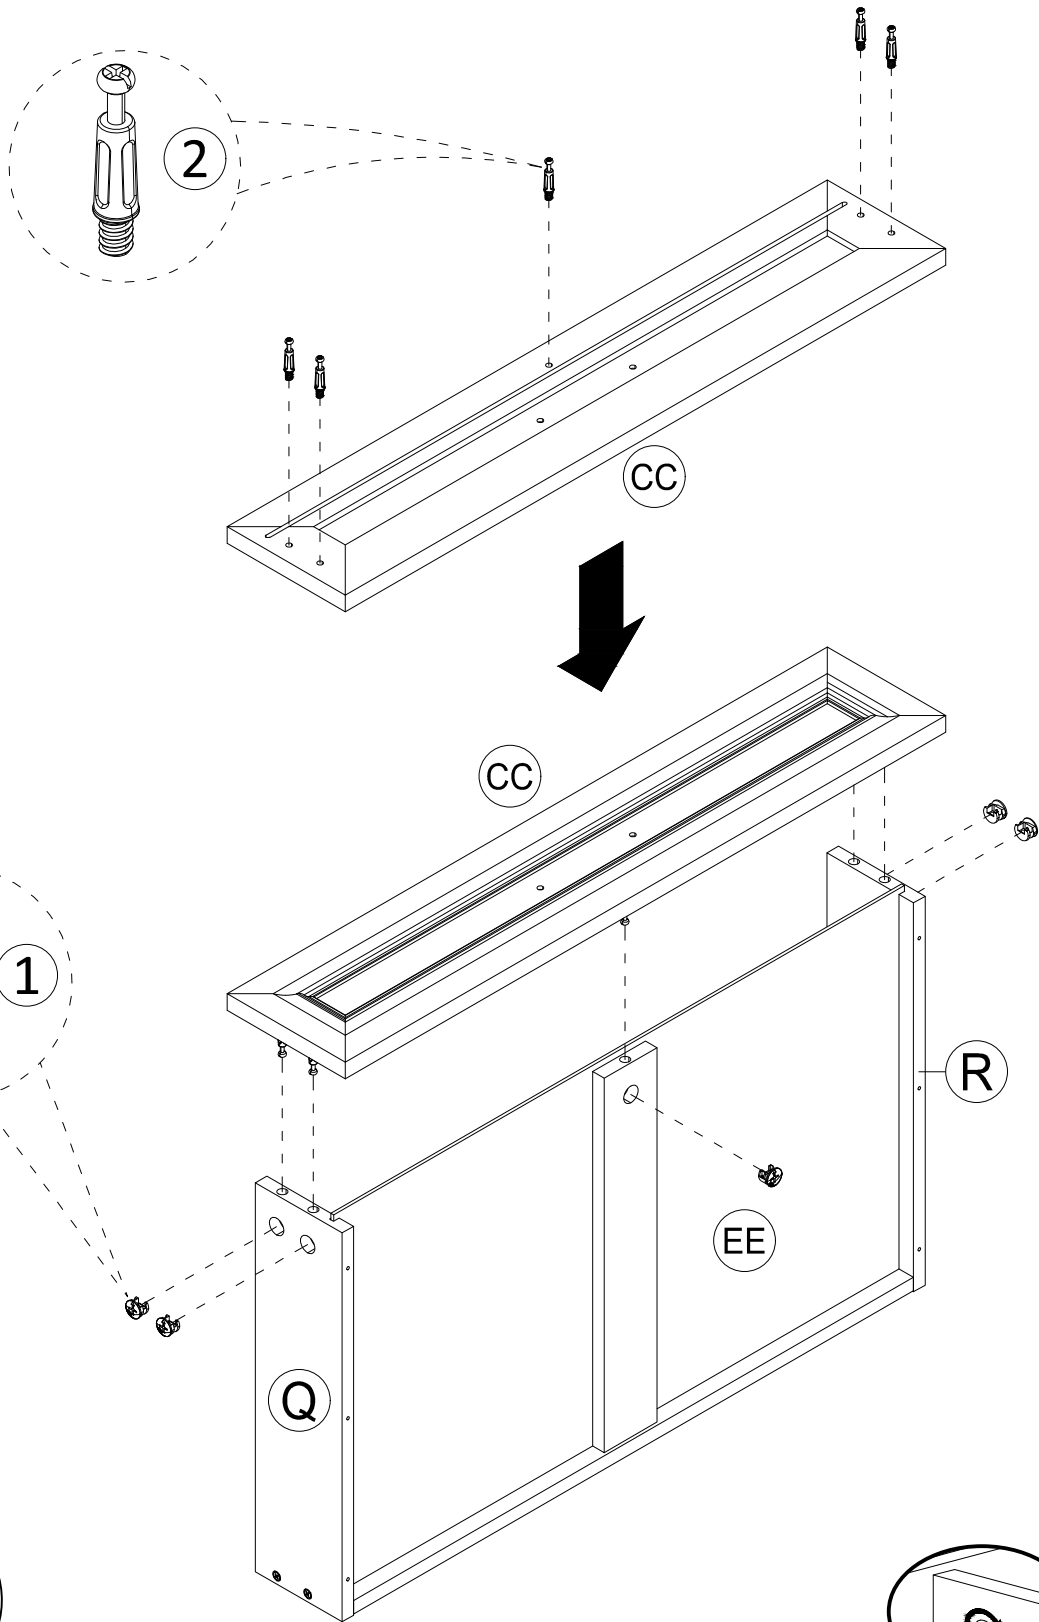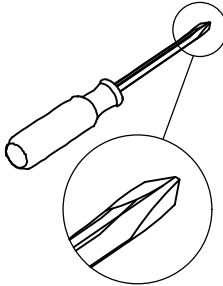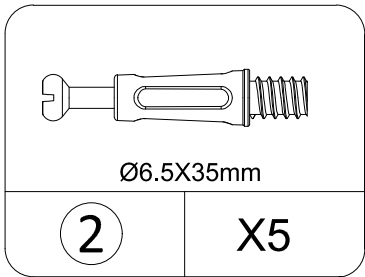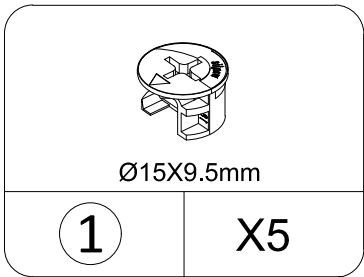
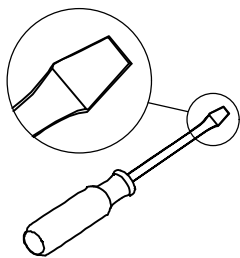


Proper orientation of CAM LOCK


STEP8

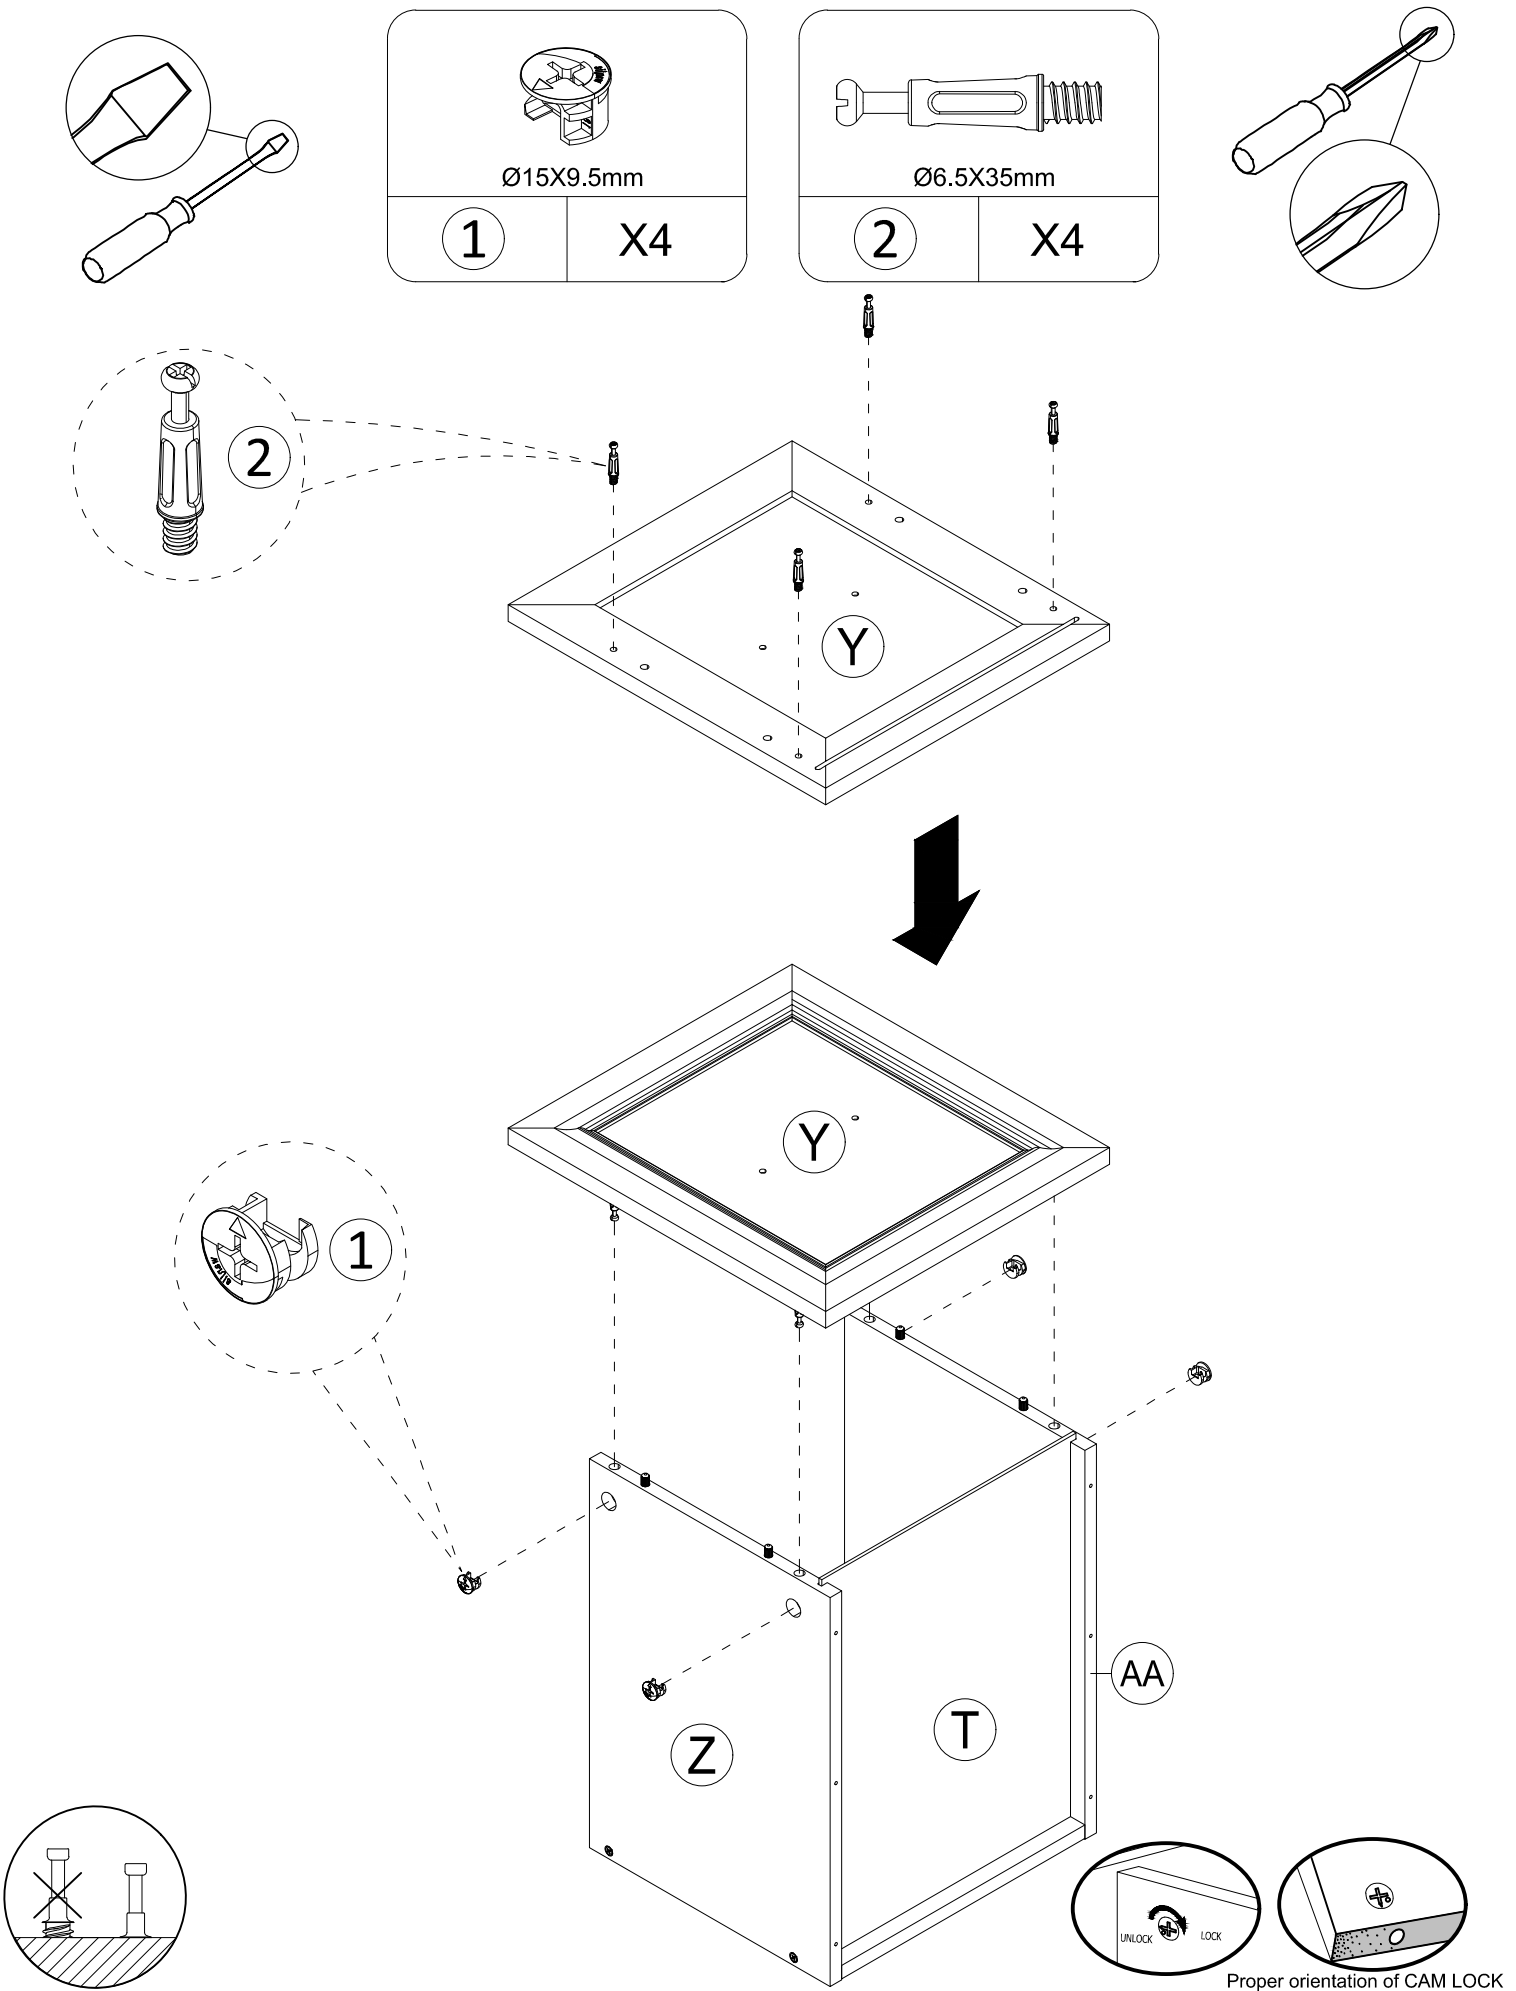

STEP9







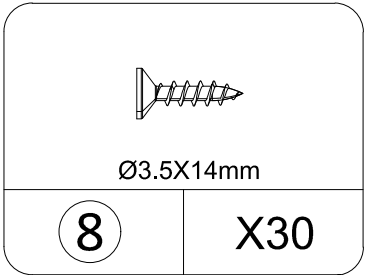
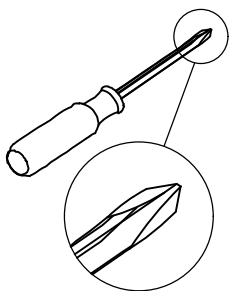


The installation steps for the drawer guide rail are the same









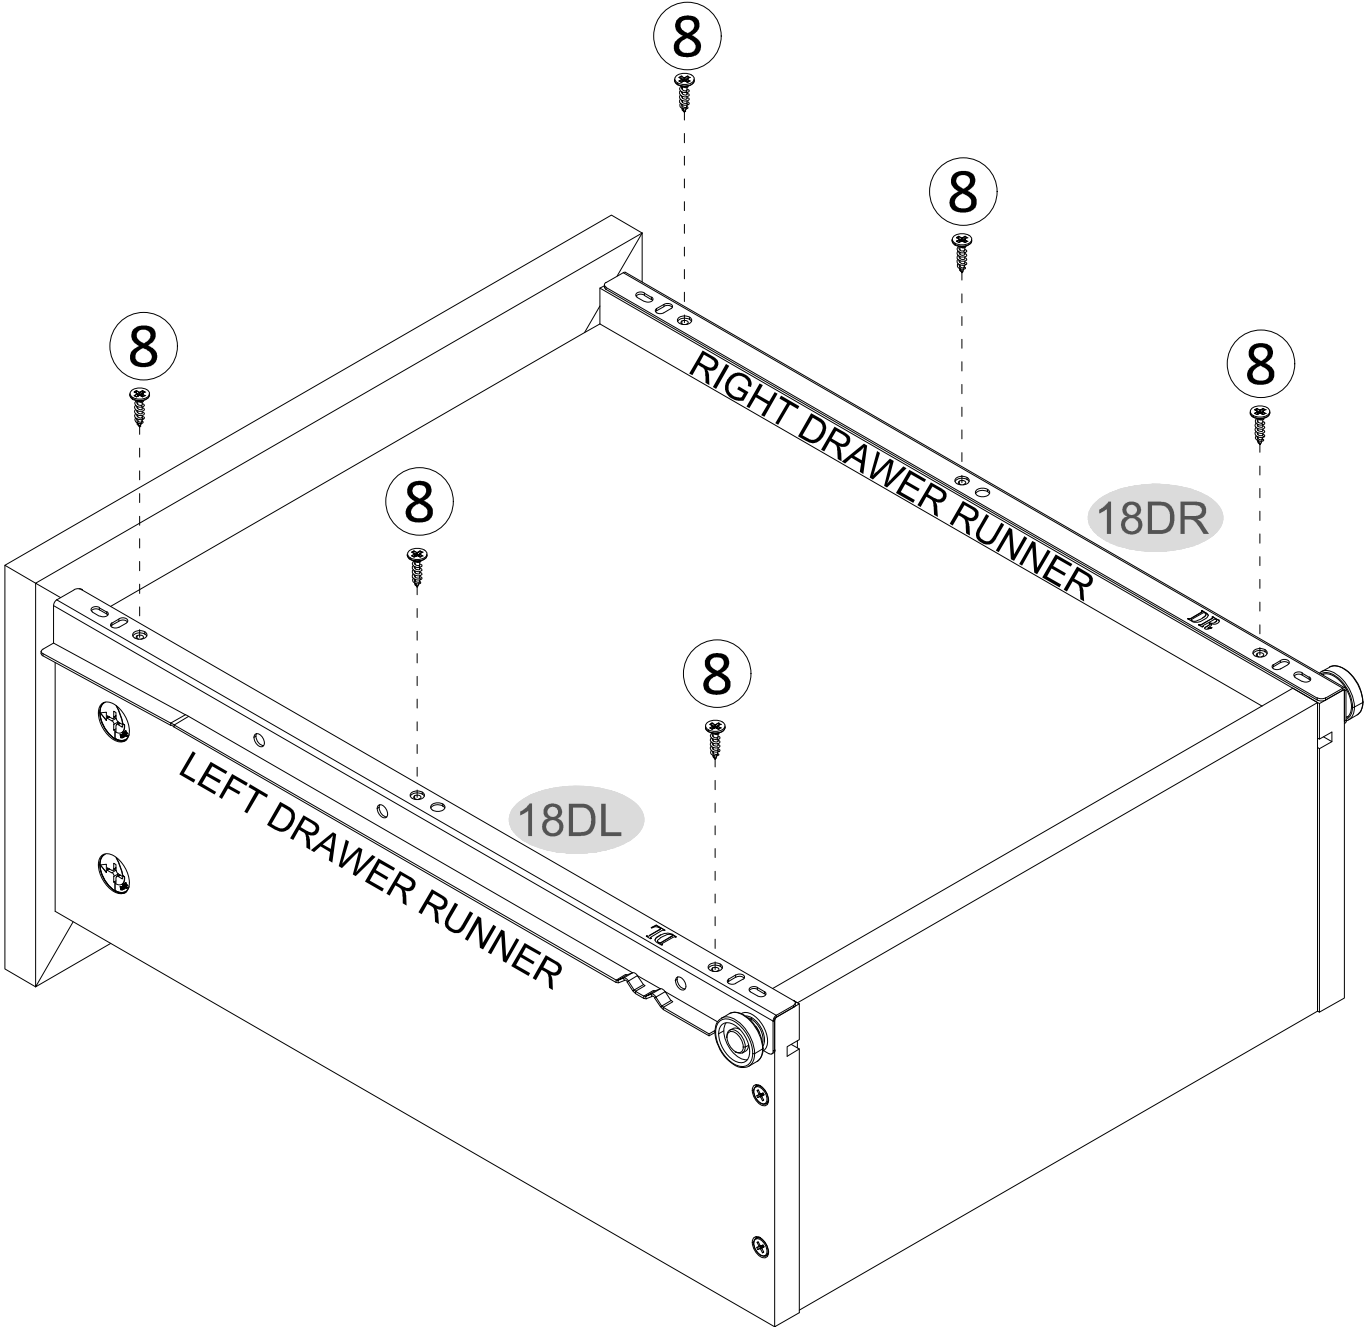


P & U & Y & CC






STEP10

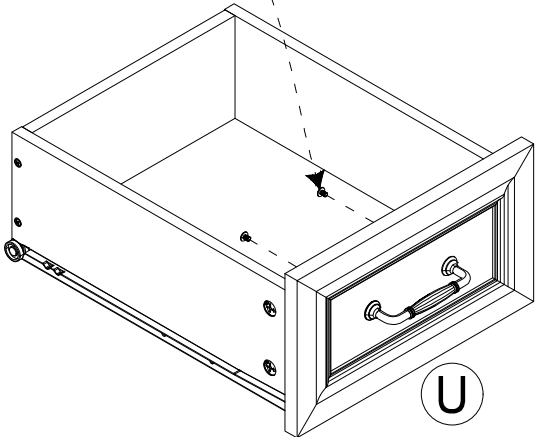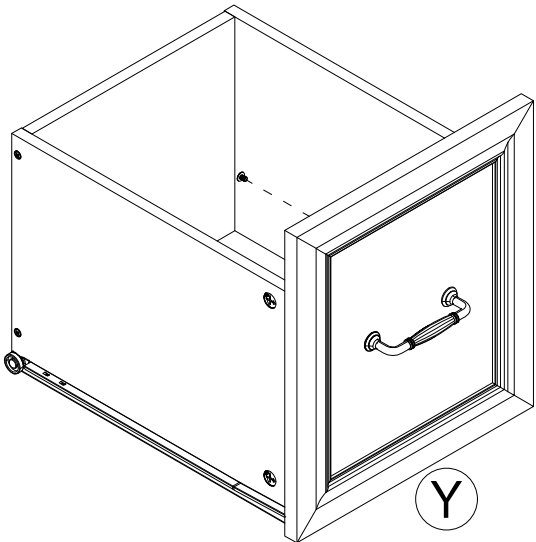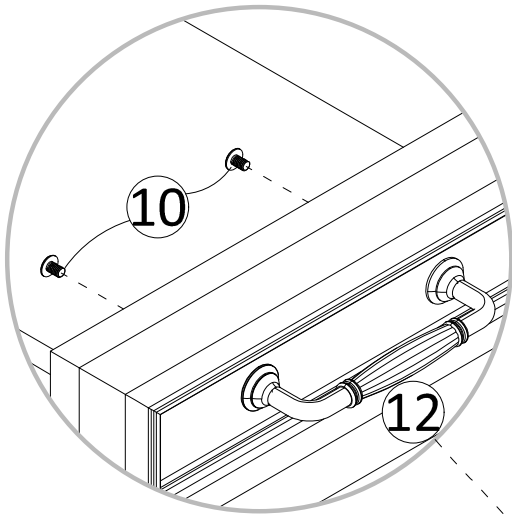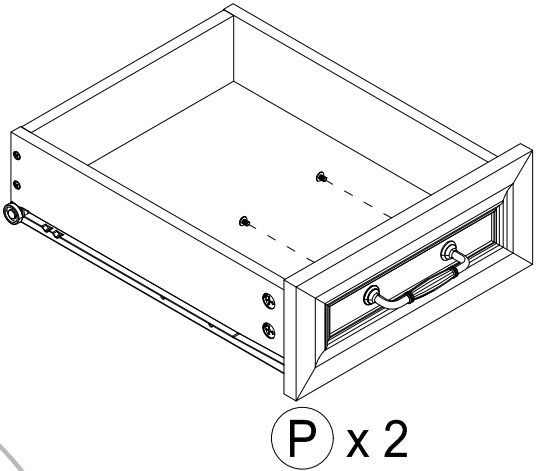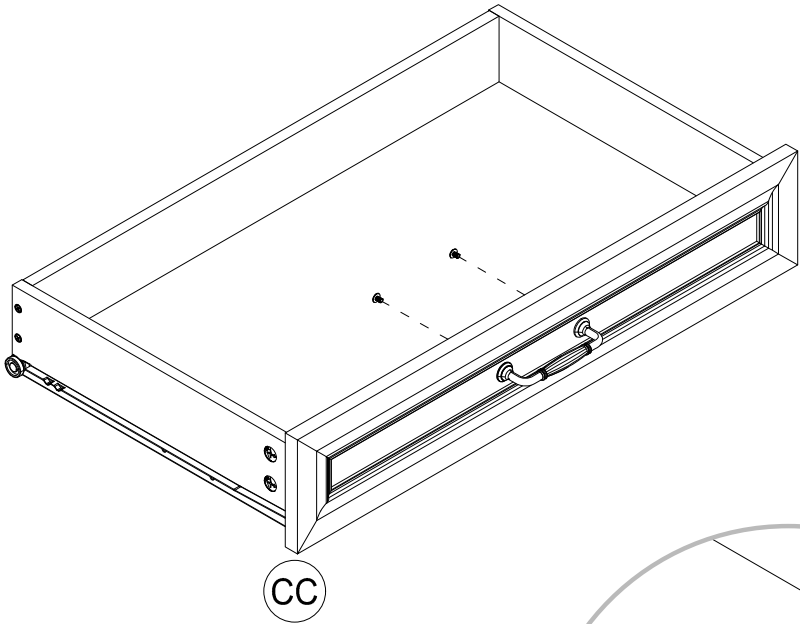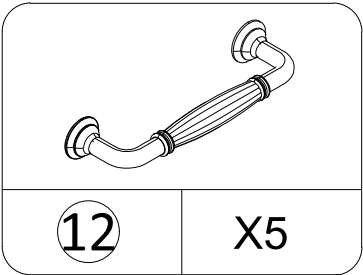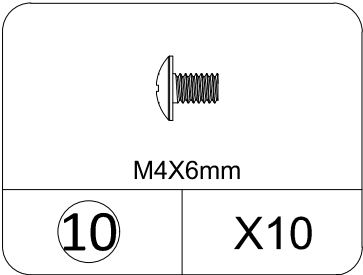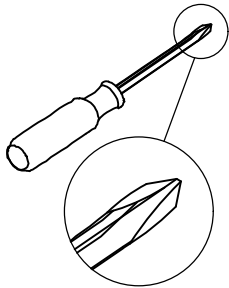






STEP11

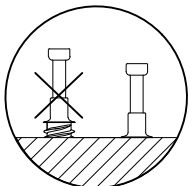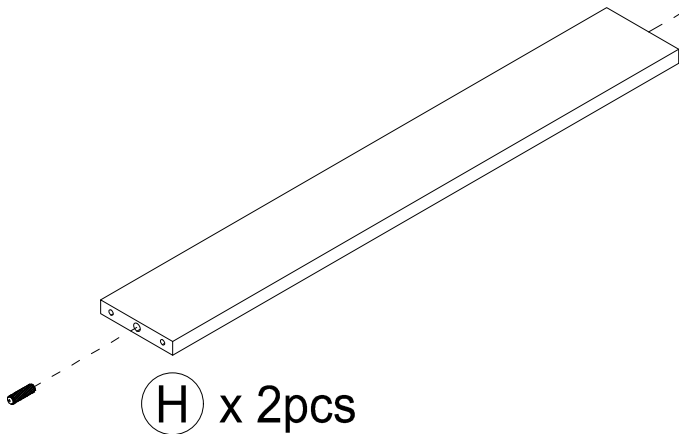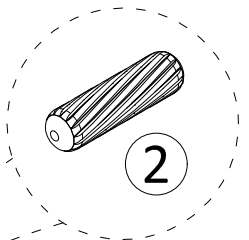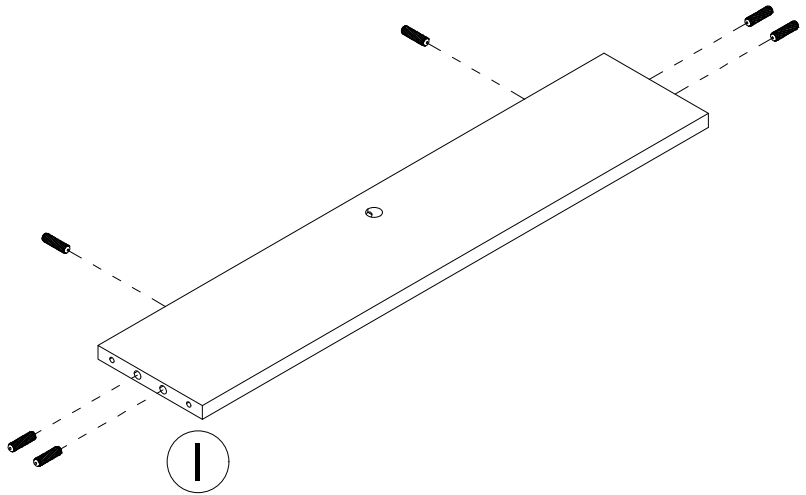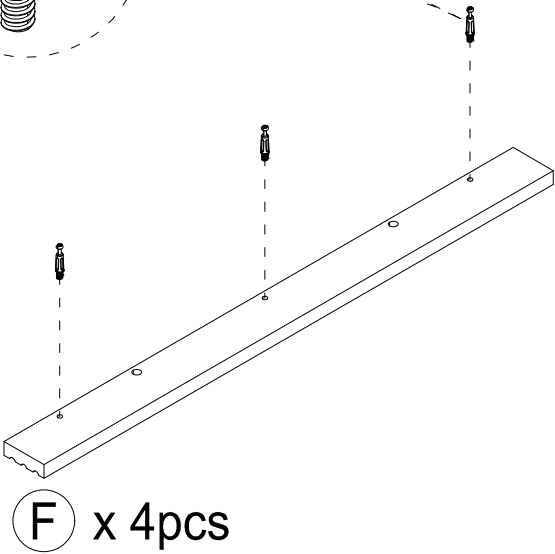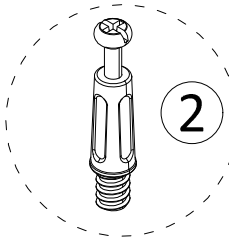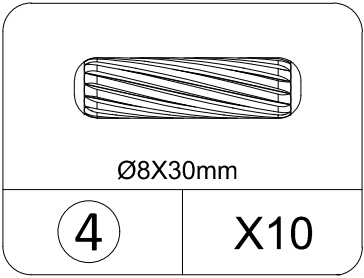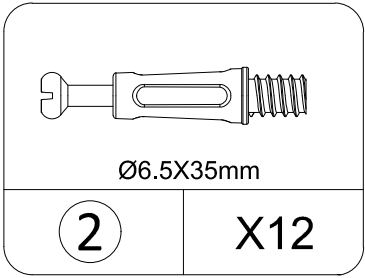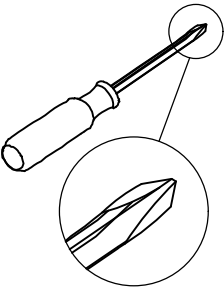






STEP12

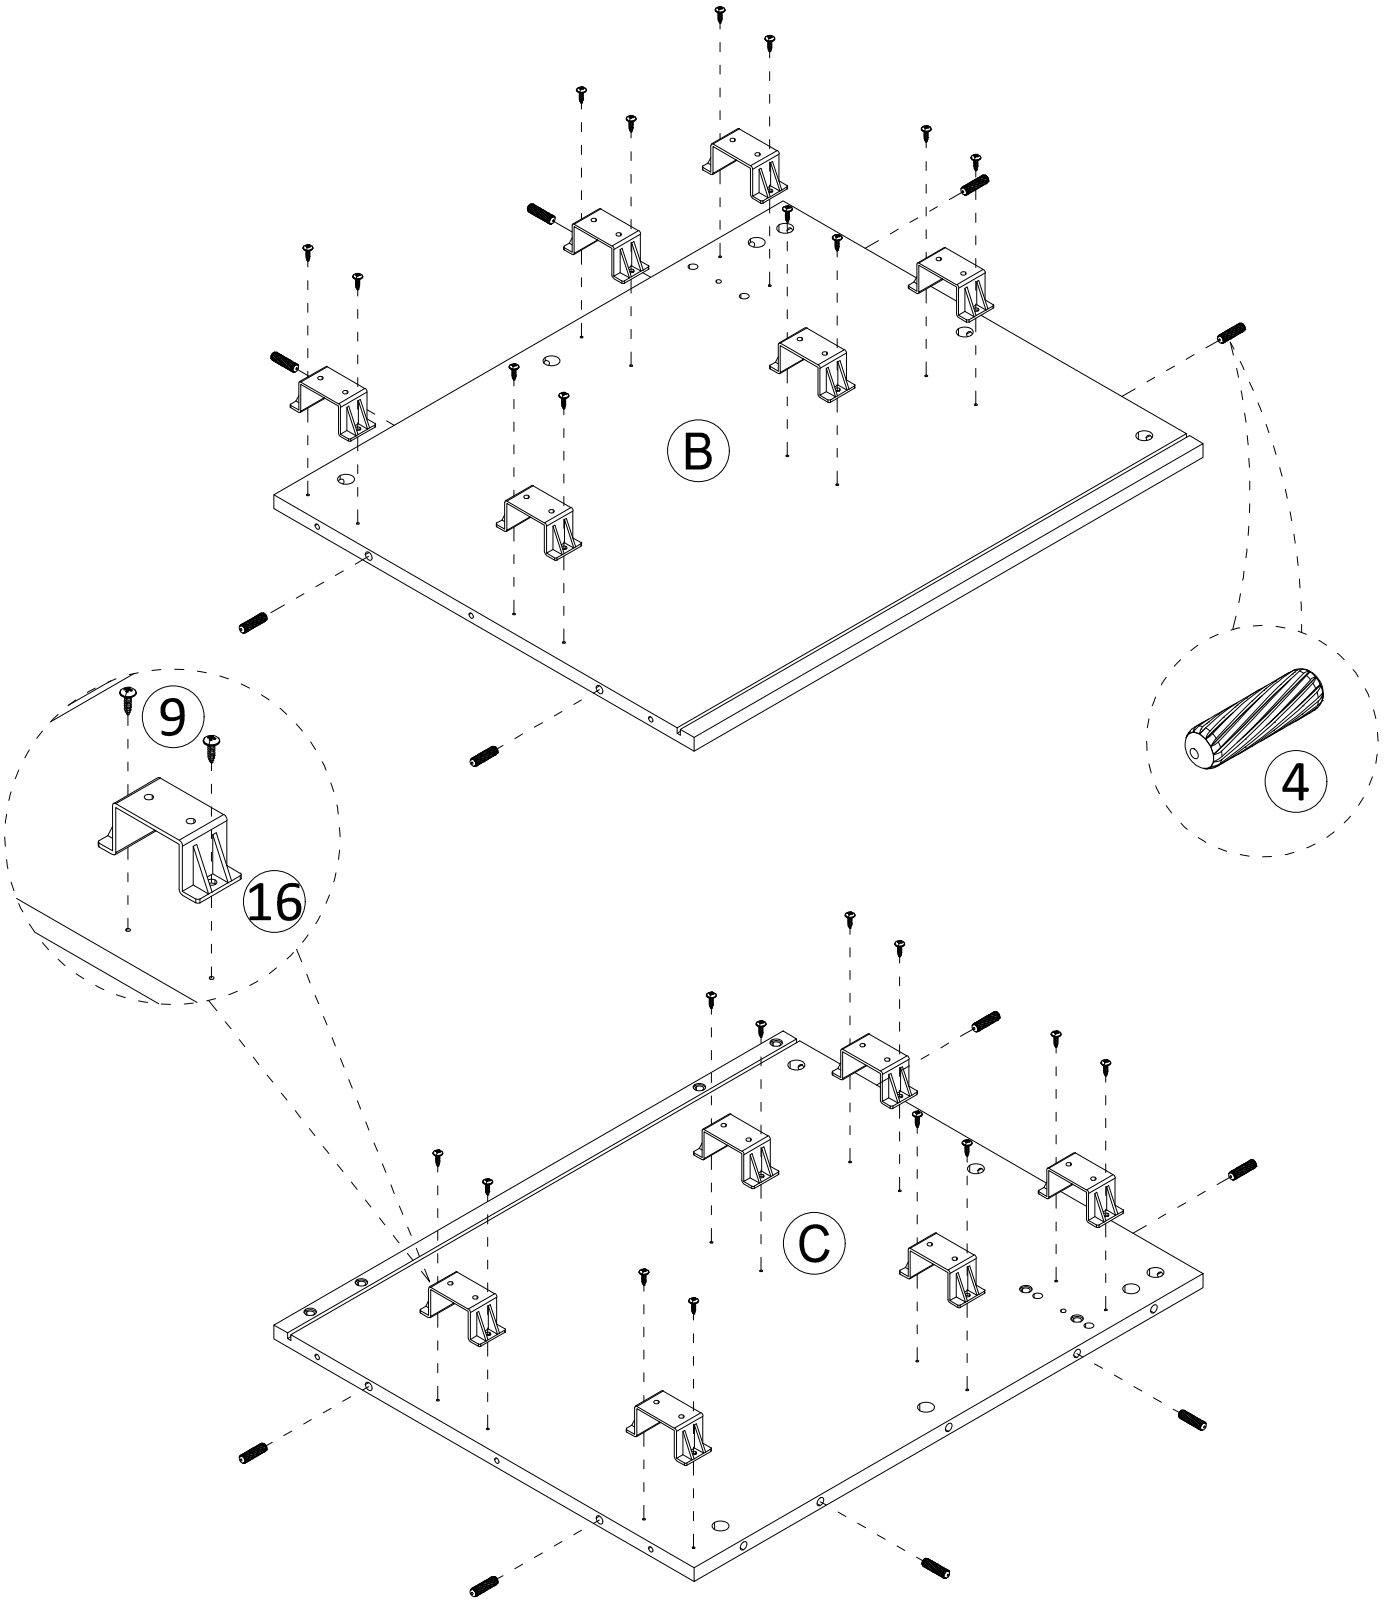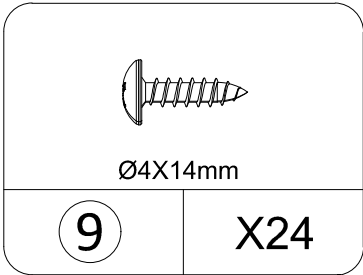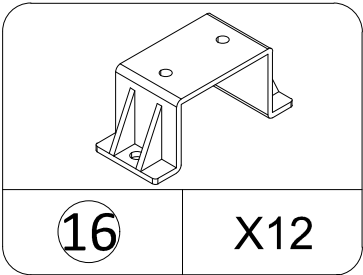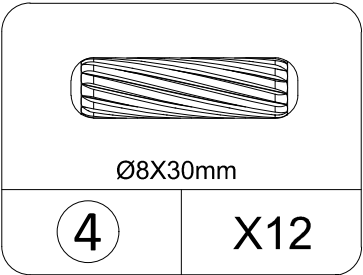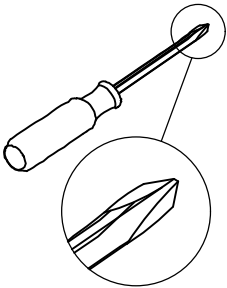


STEP13

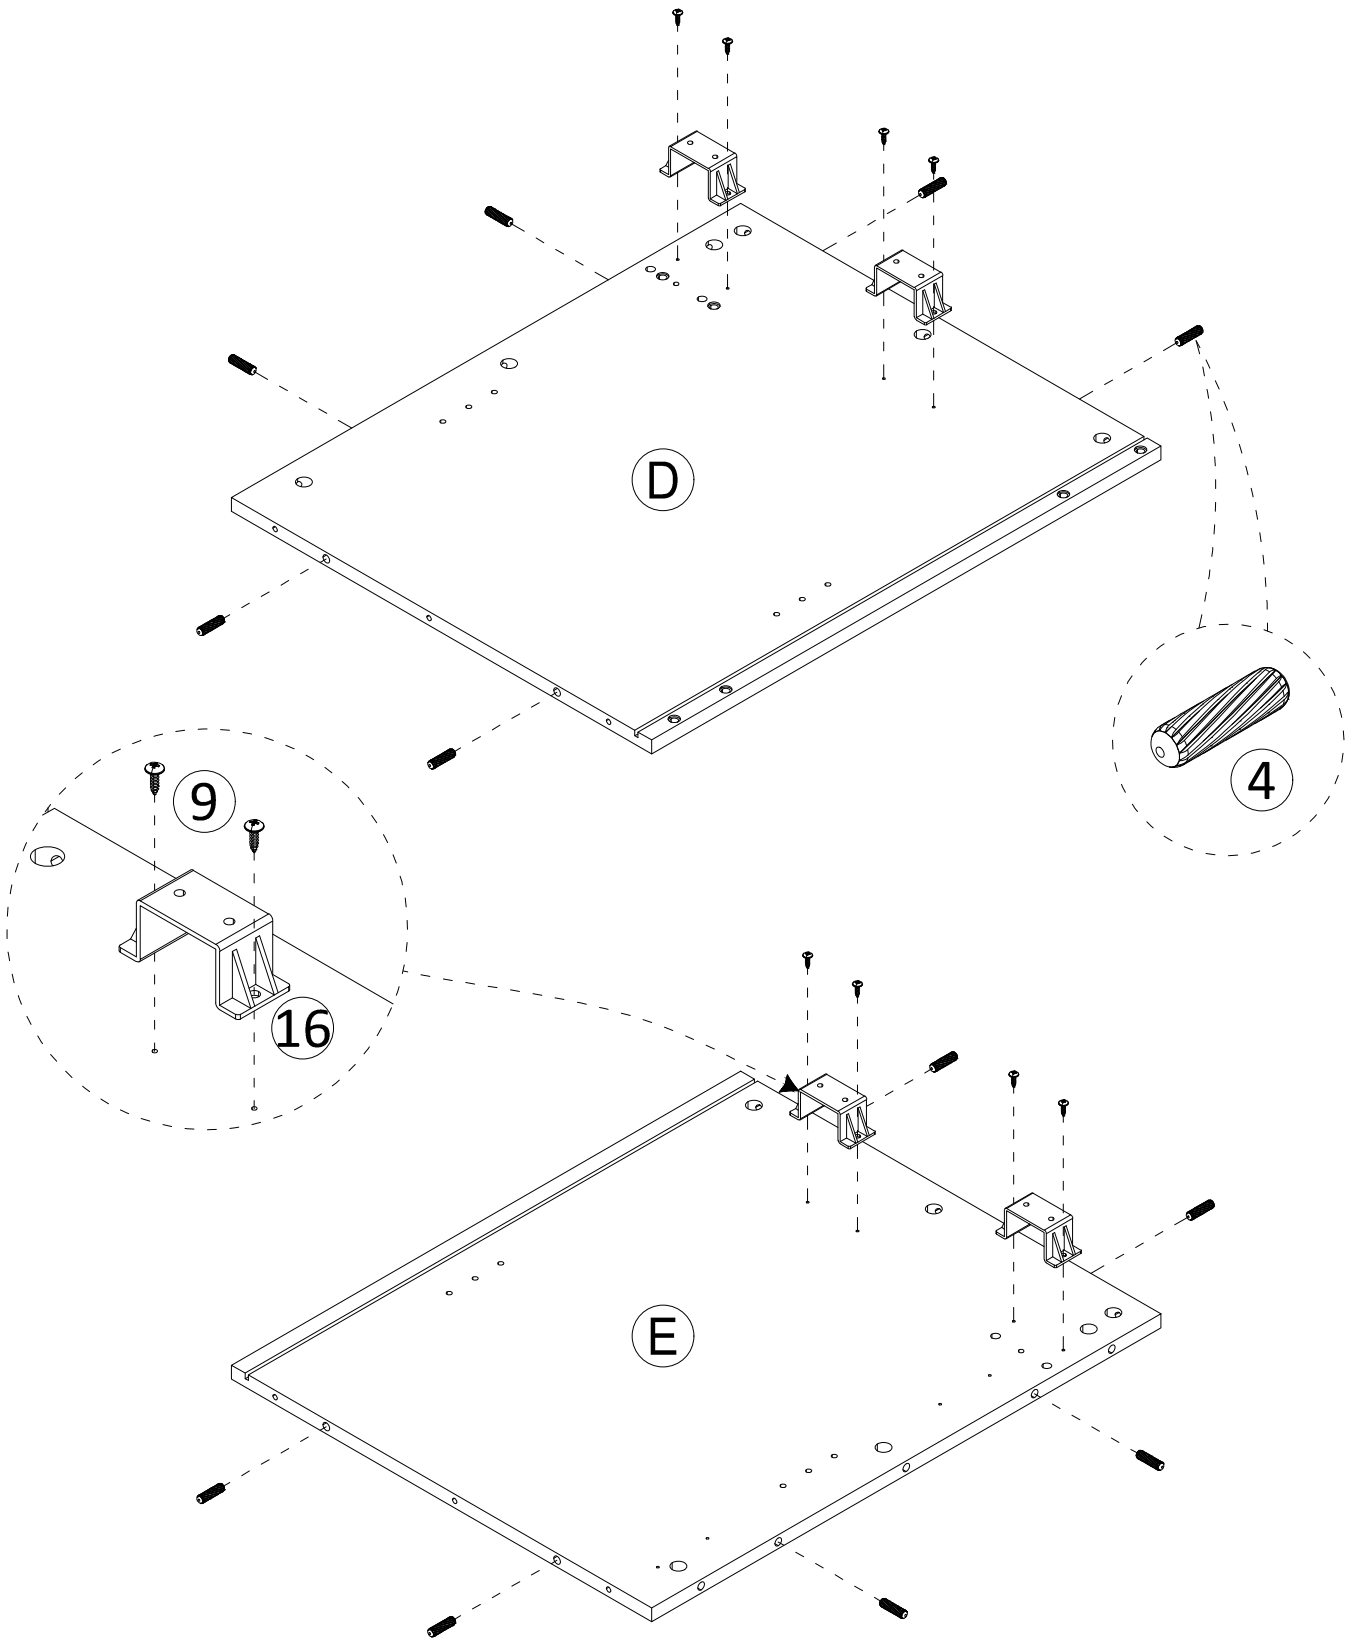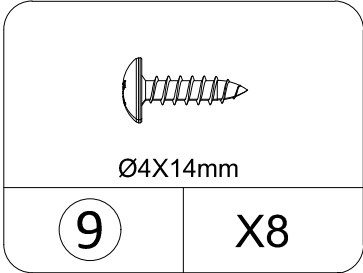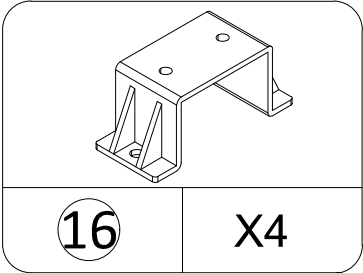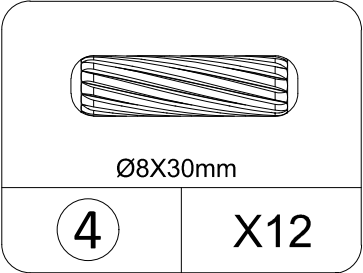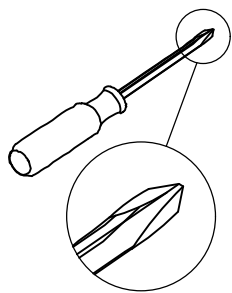



STEP14

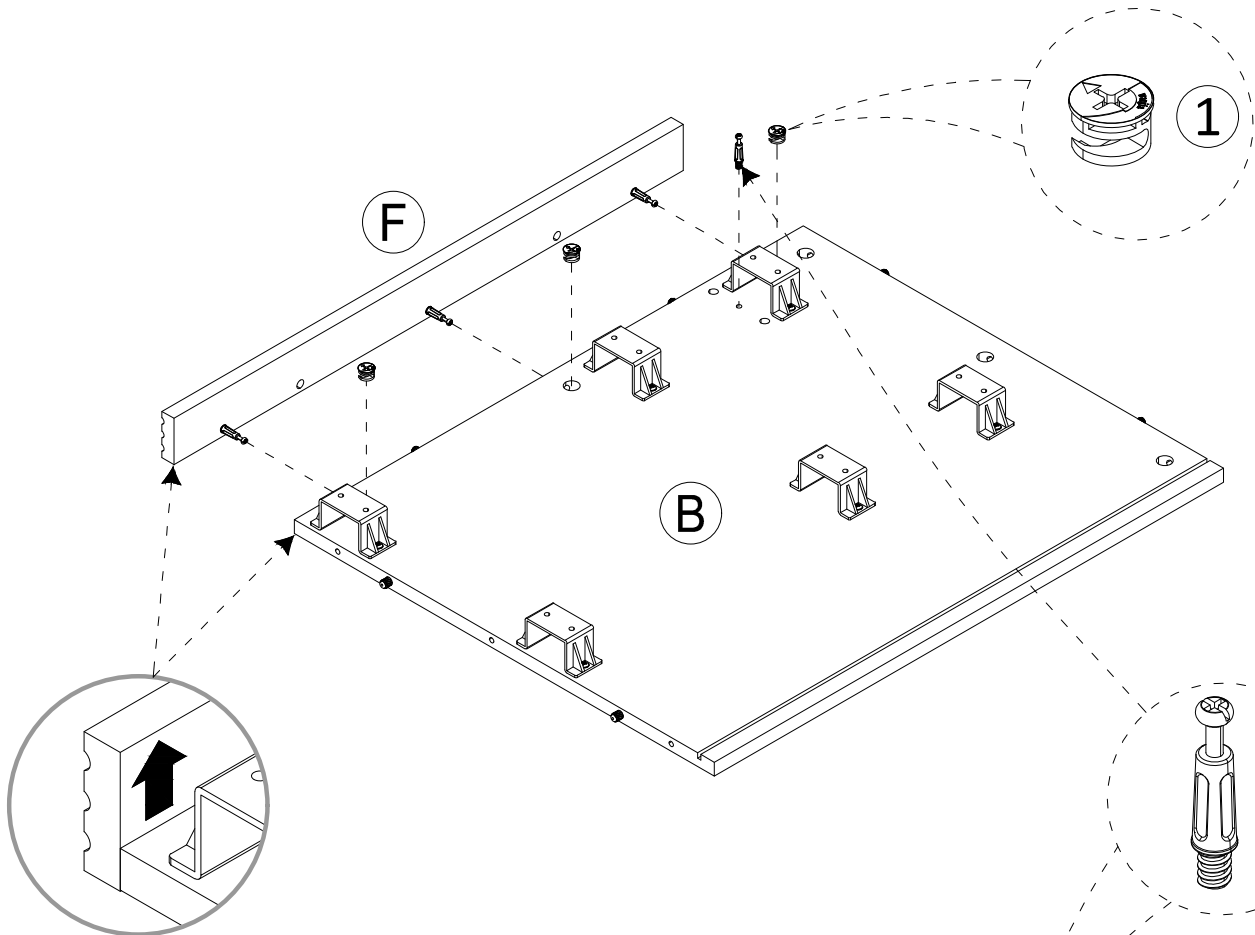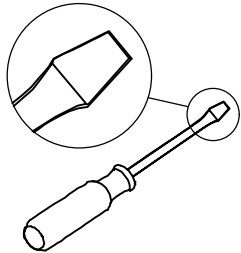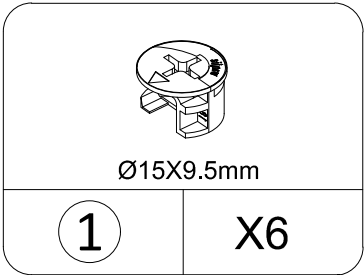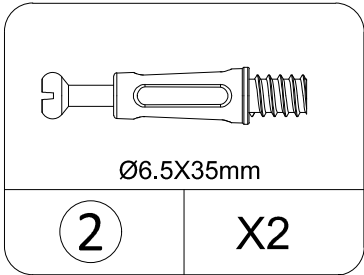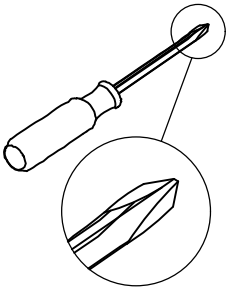

After assembly effect





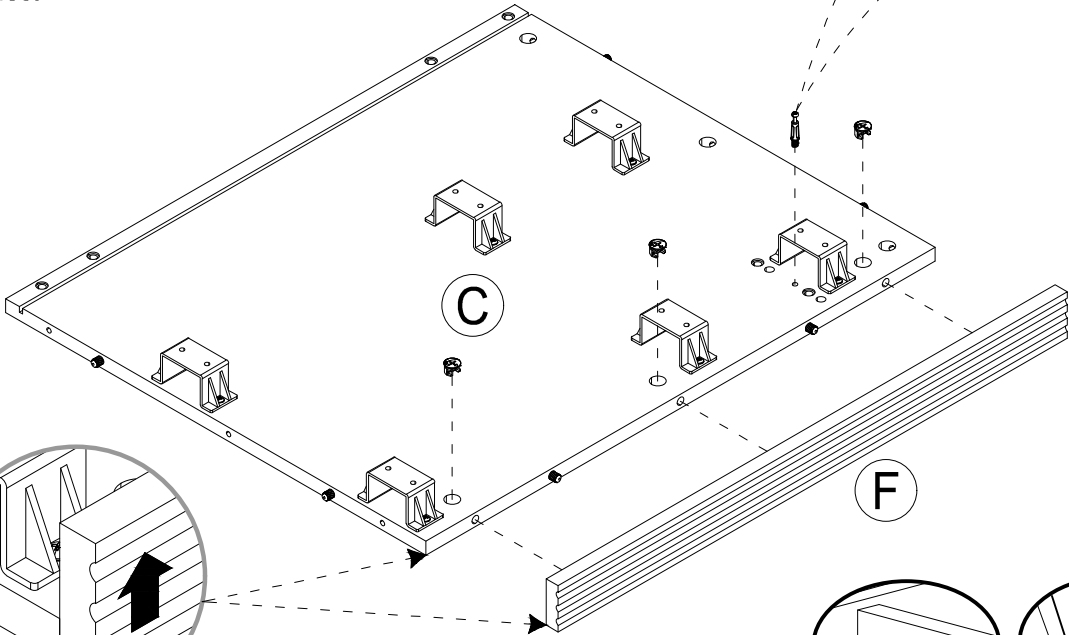


After assembly effect

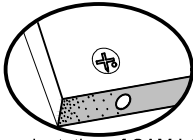
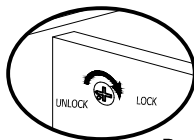


Proper orientation of CAM LOCK




STEP15

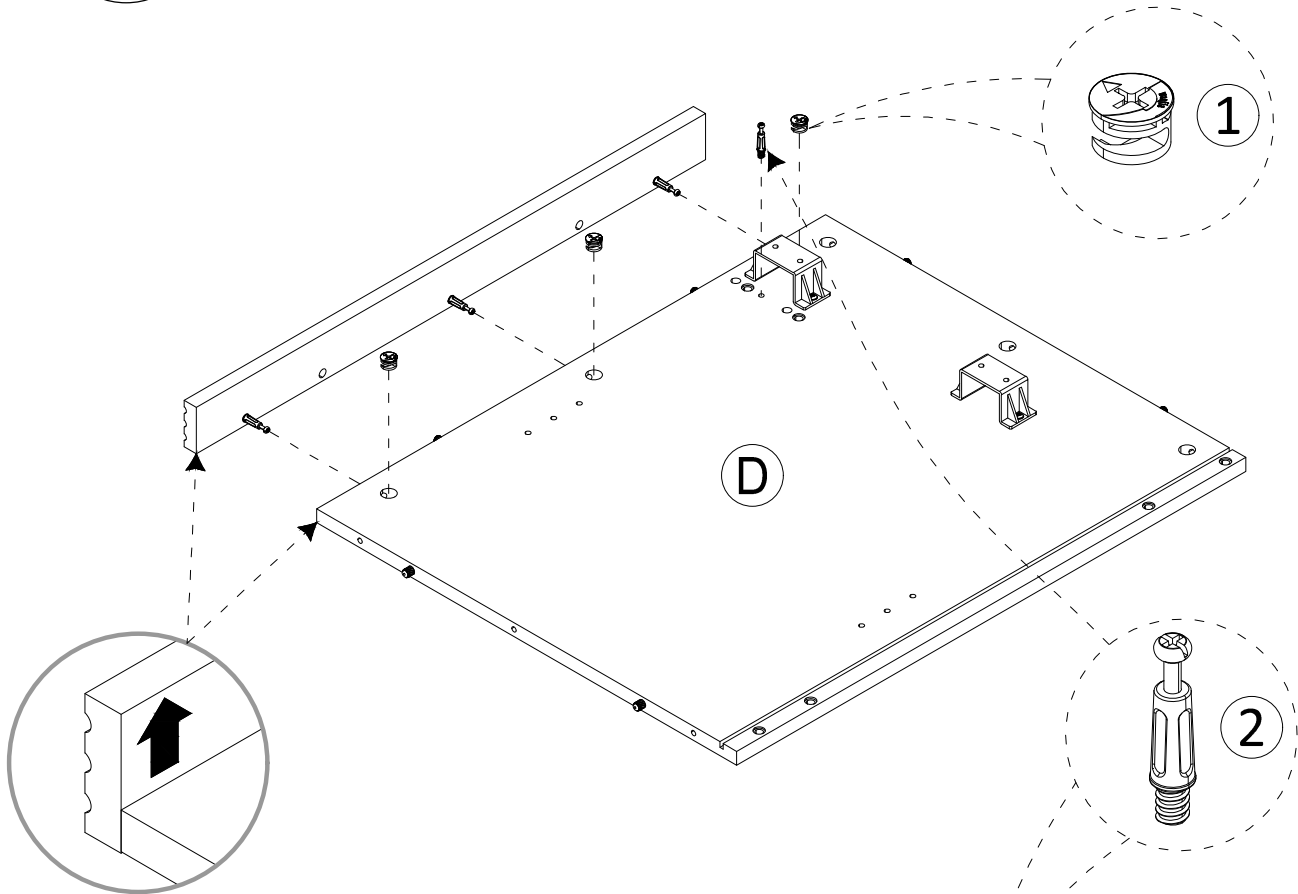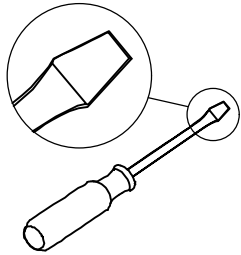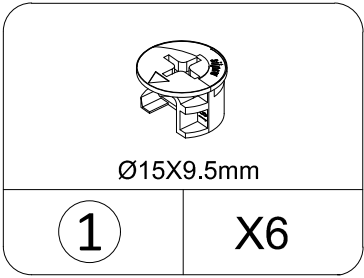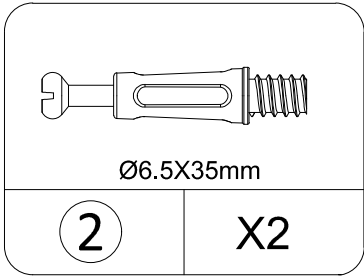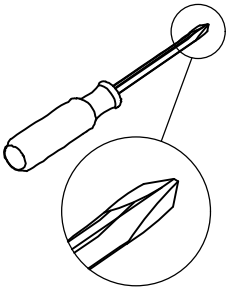

After assembly effect

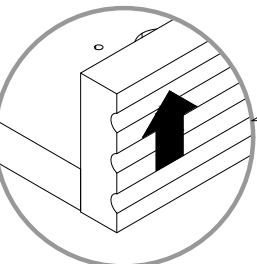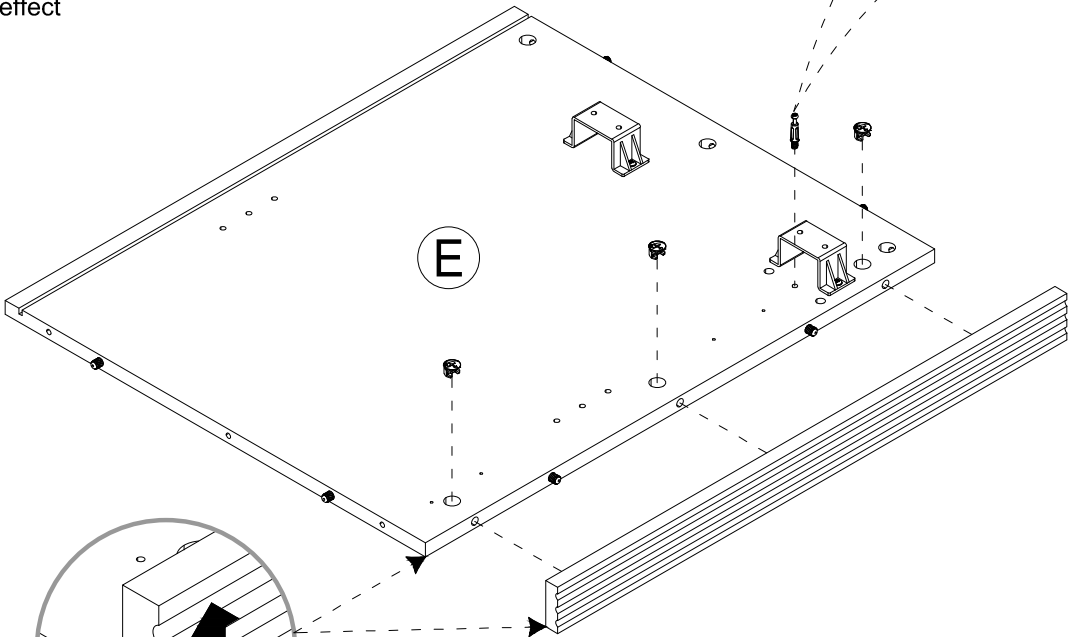


After assembly effect

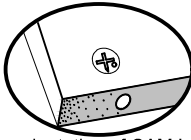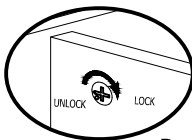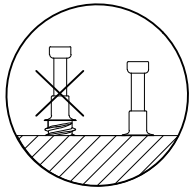

Proper orientation of CAM LOCK

STEP16

14"

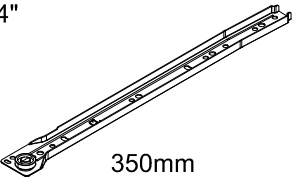350mm

18CL


X3



Ø6.2X8.5mm


7

X6

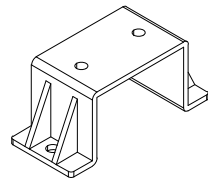

16

X2




Ø4X14mm





9

X4


Lock the corresponding holes according to the diagram

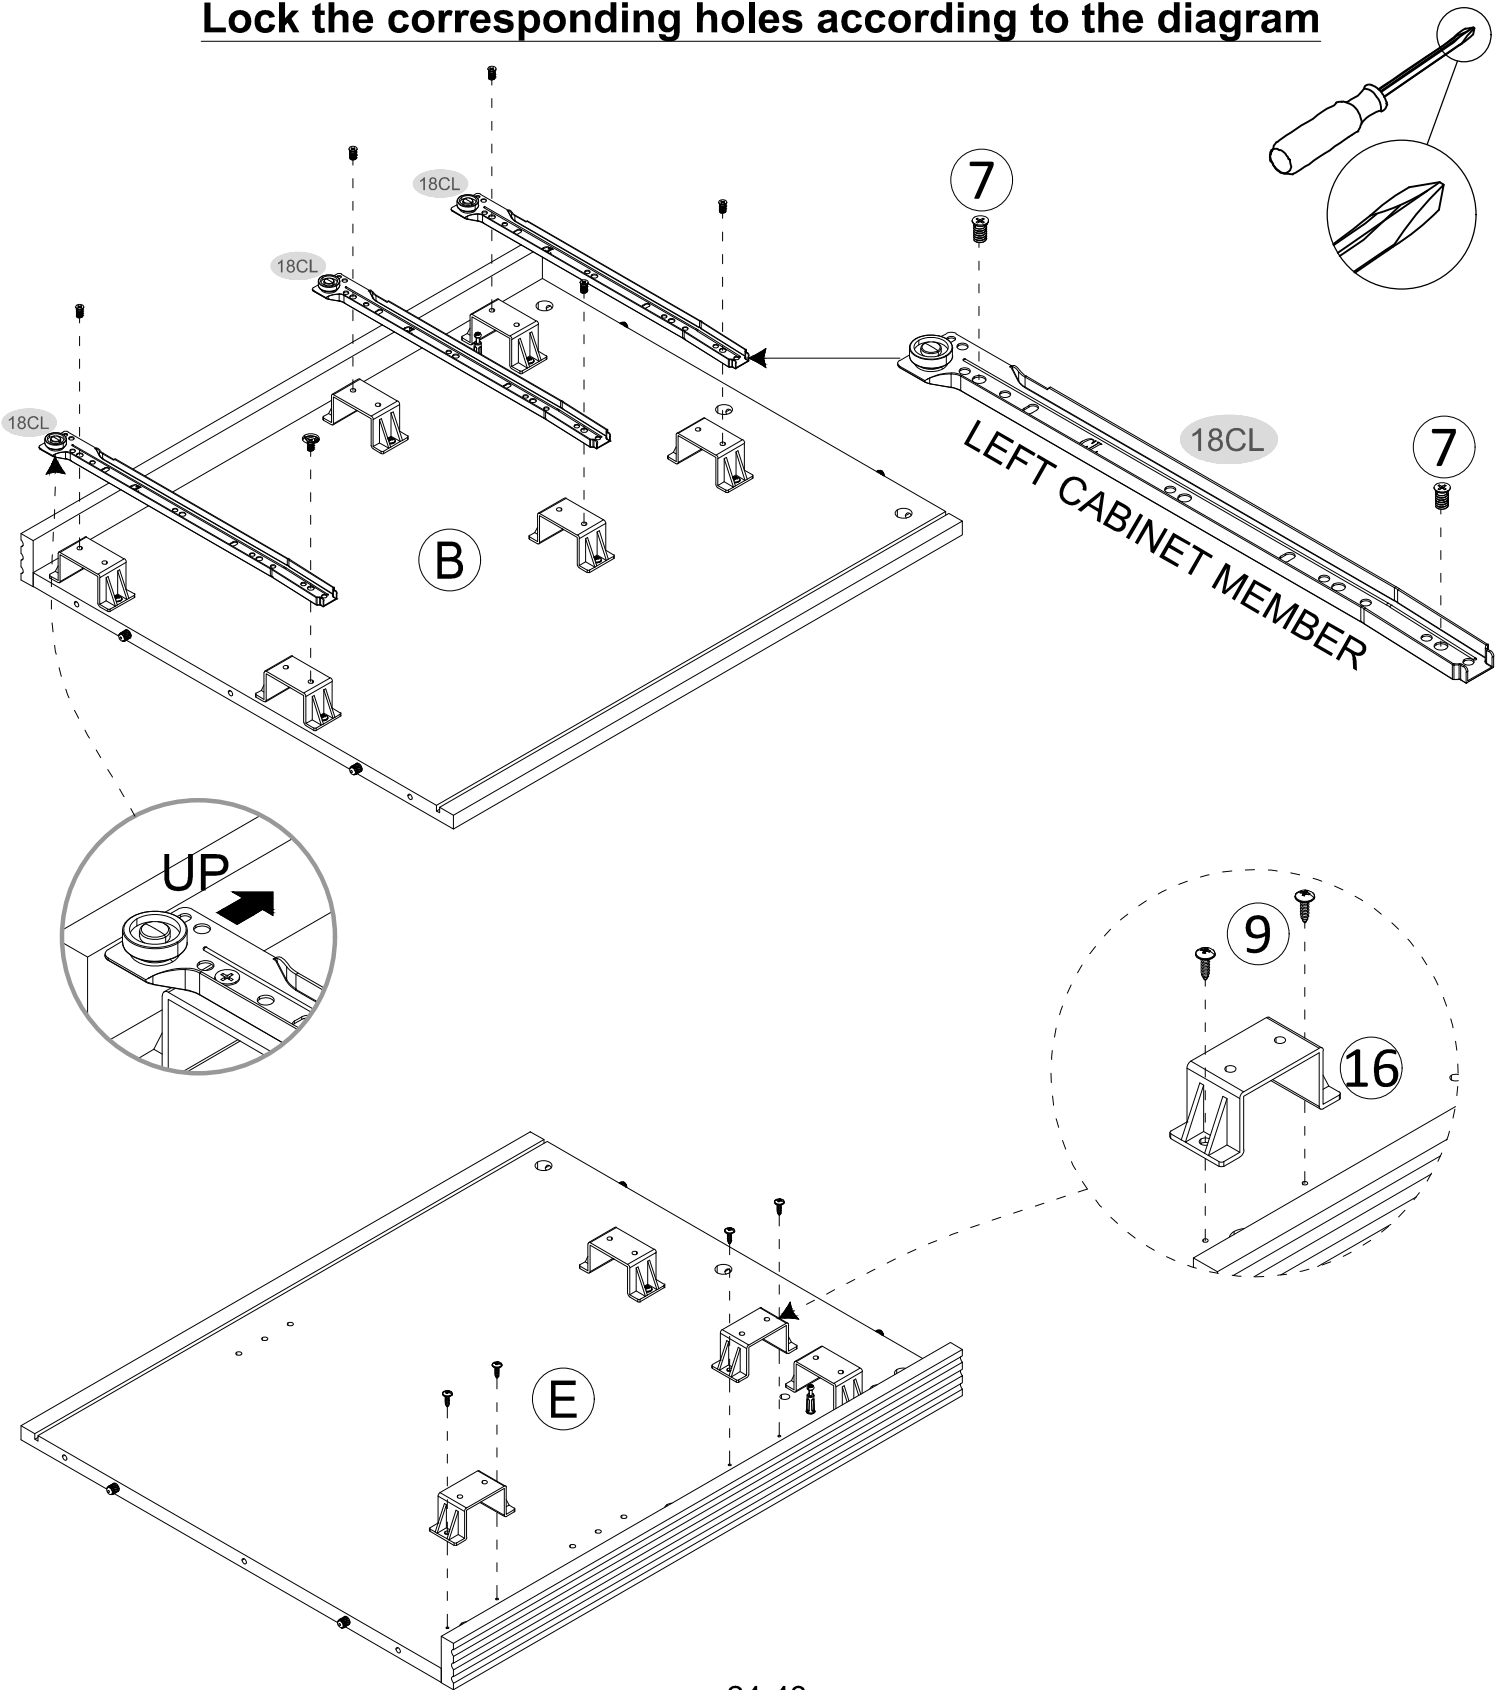





STEP17

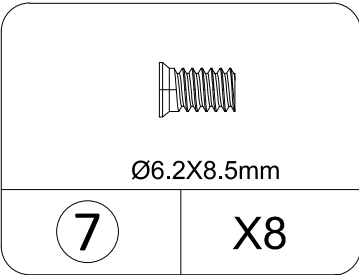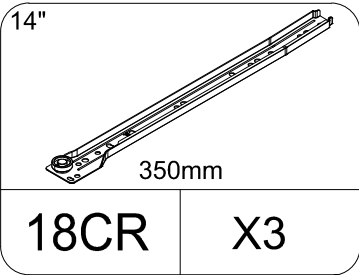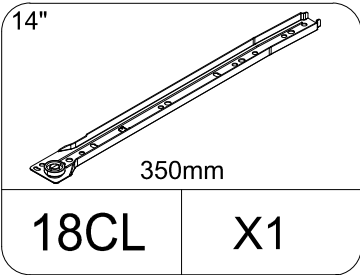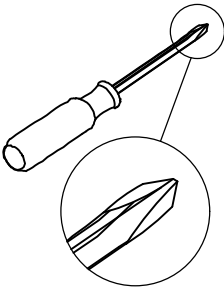


Lock the corresponding holes according to the diagram

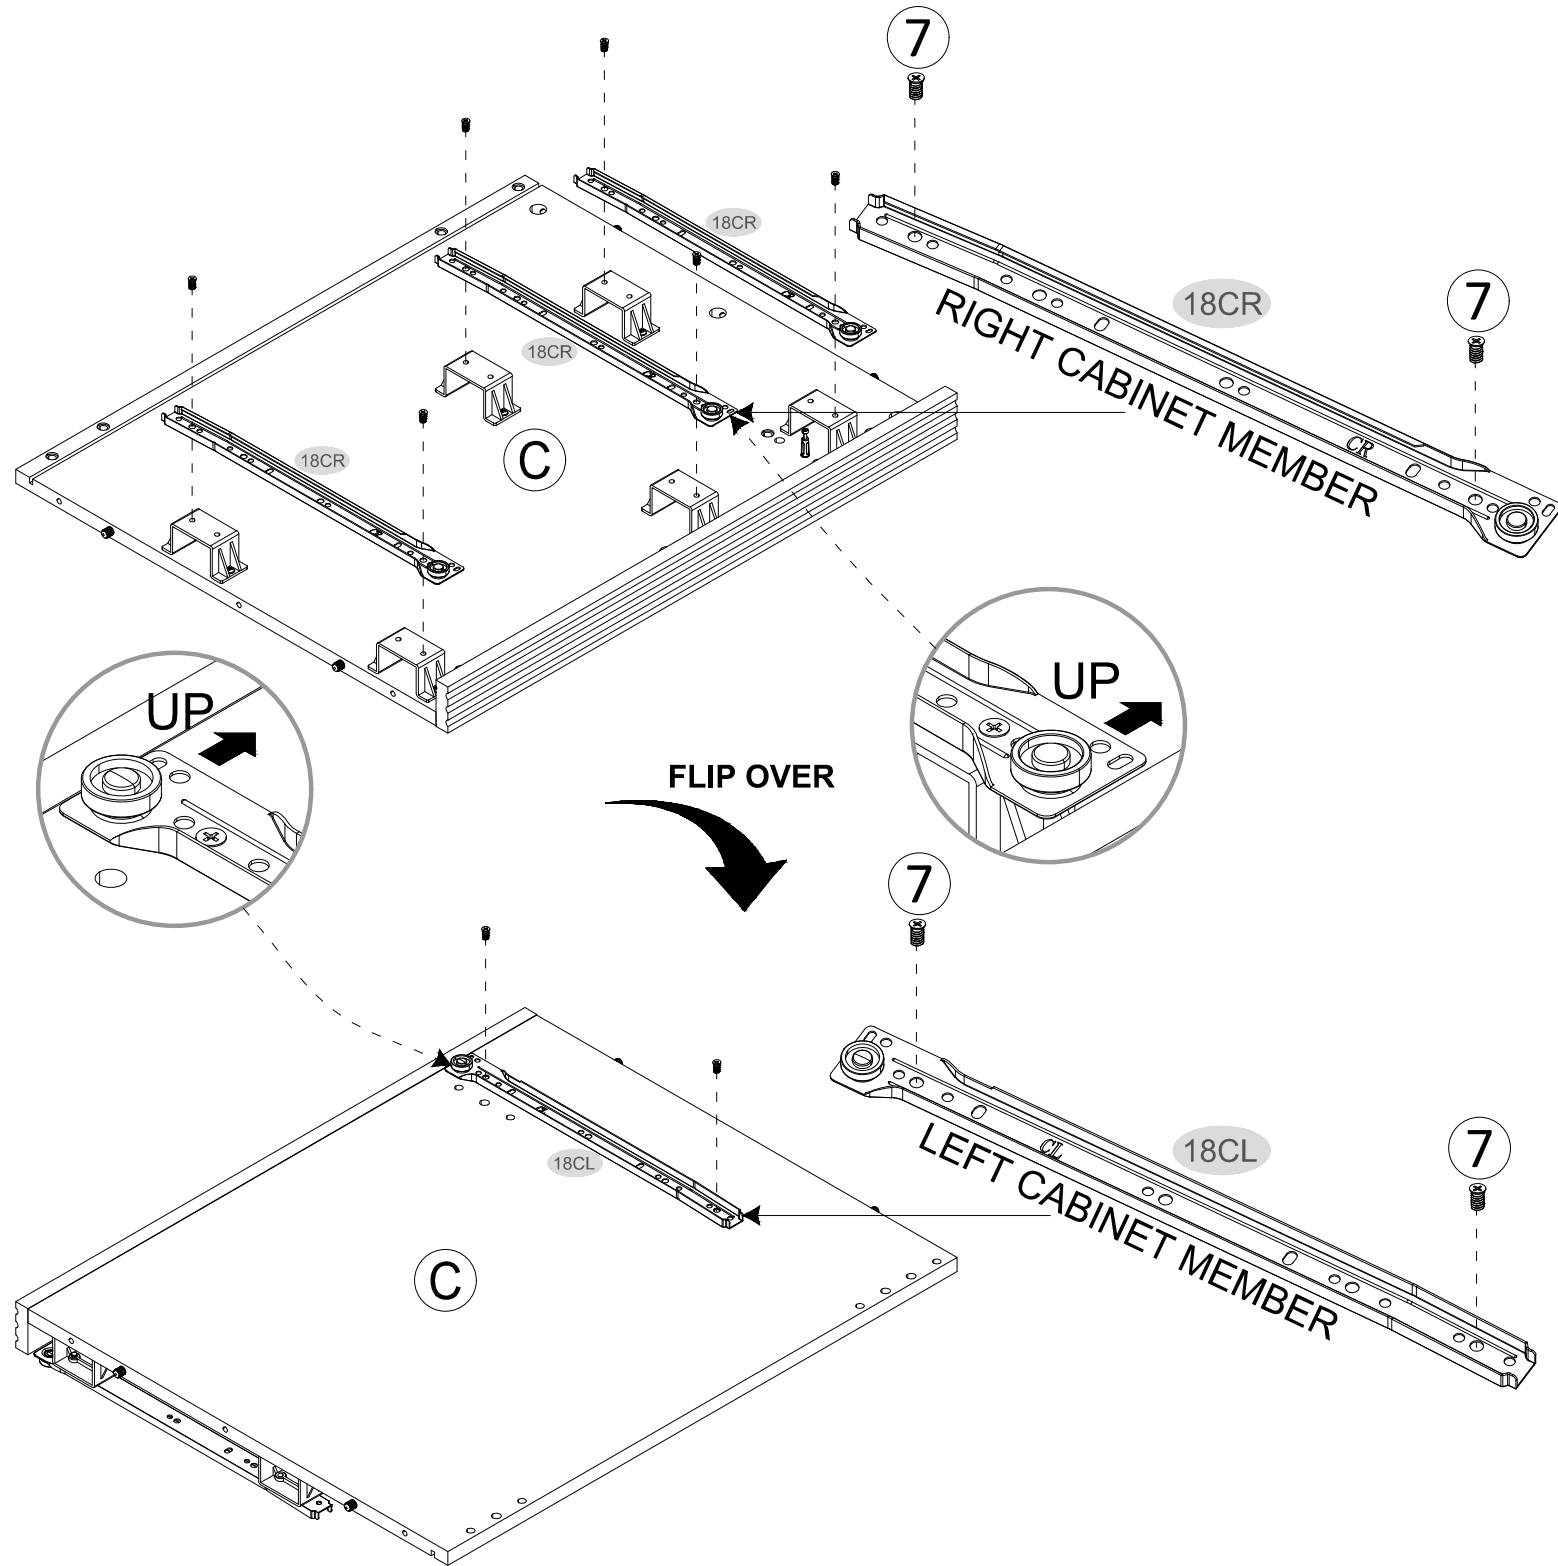





STEP18

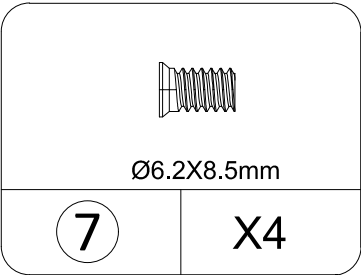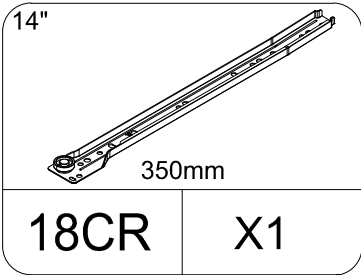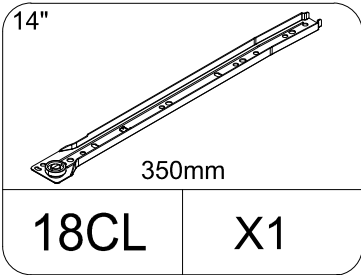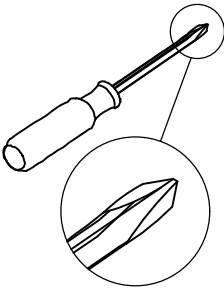


Lock the corresponding holes according to the diagram

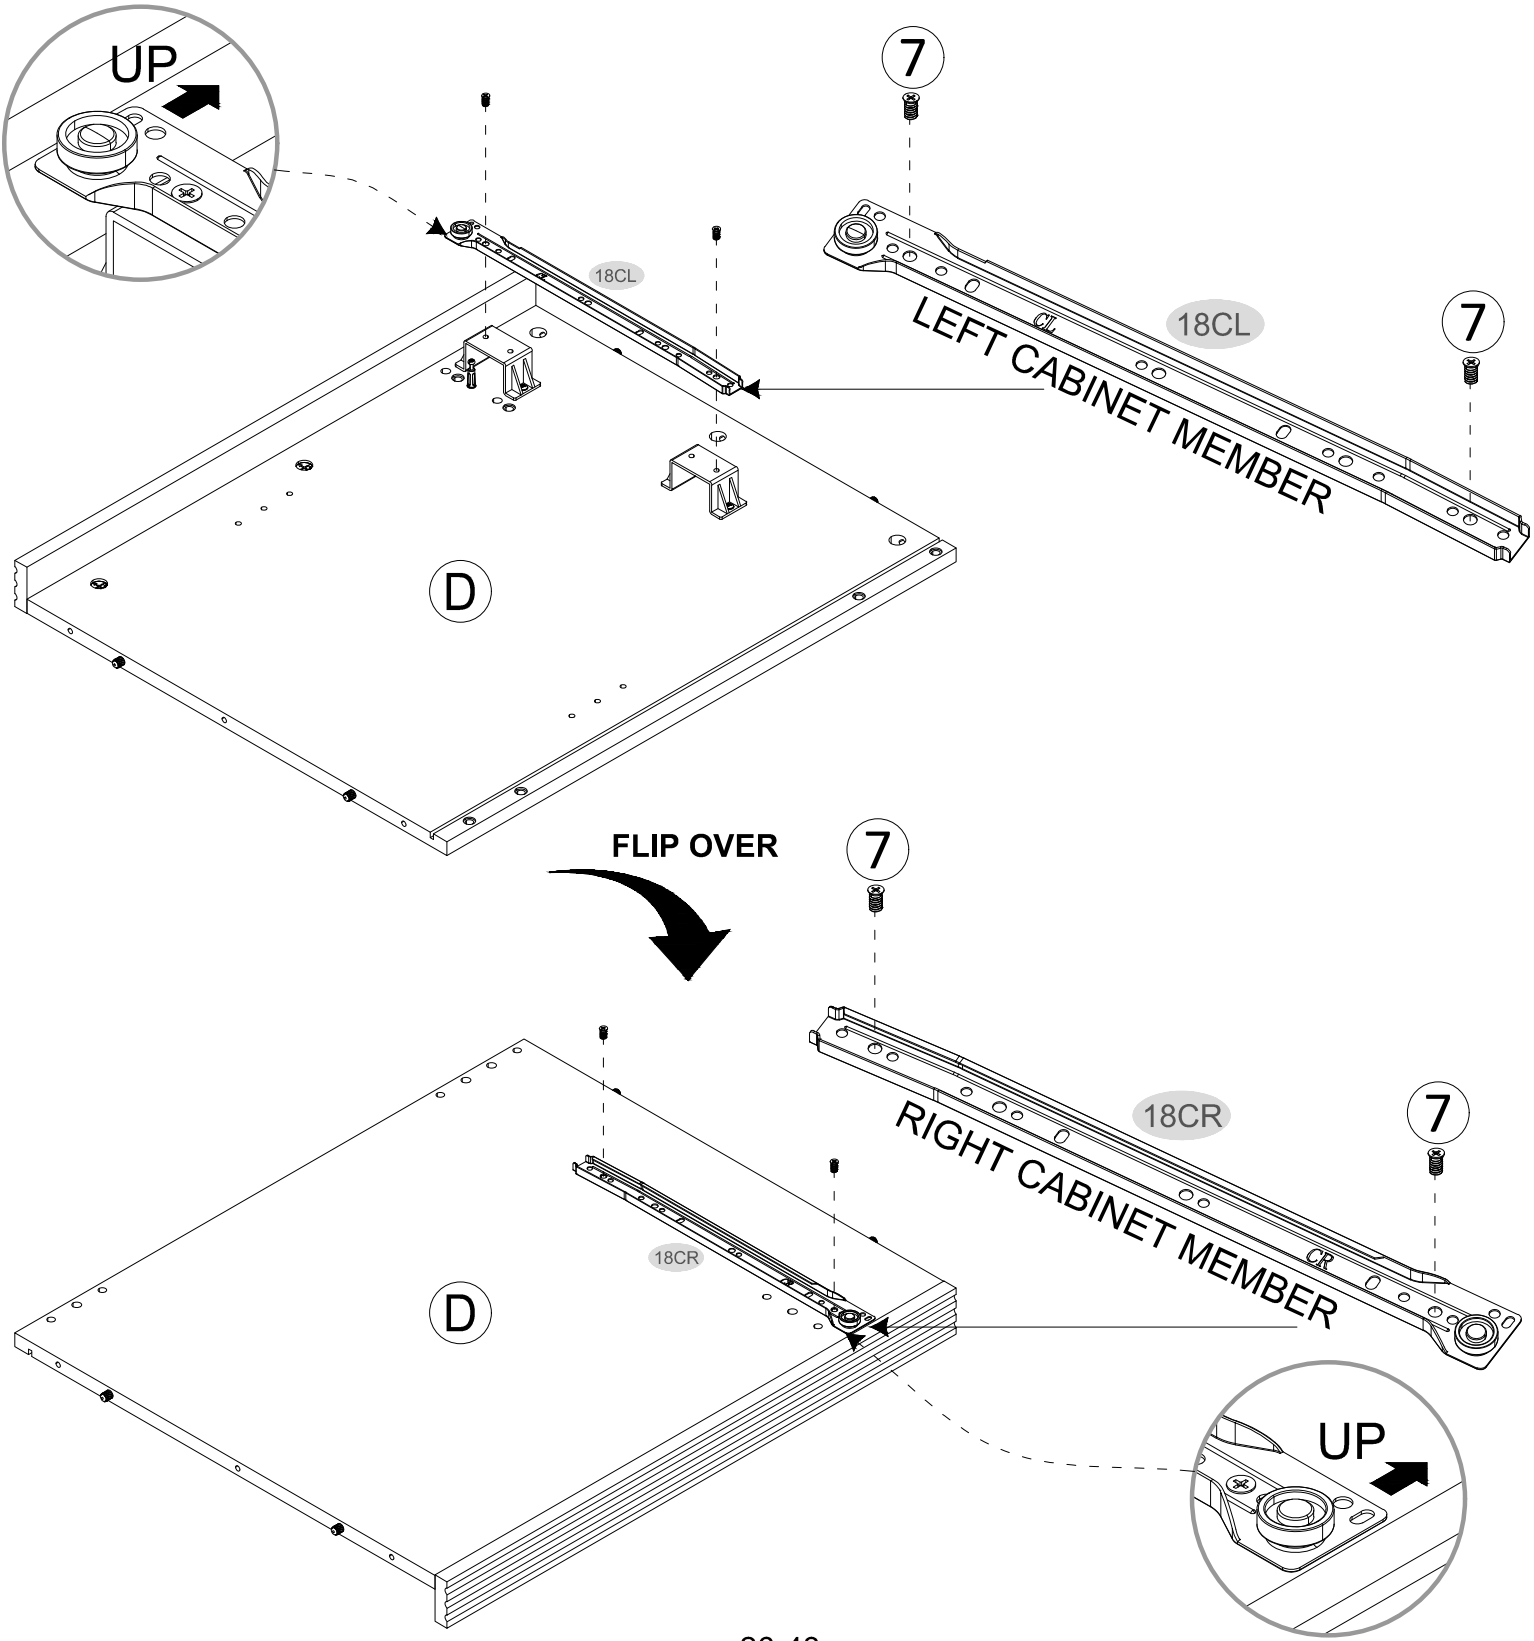





STEP19

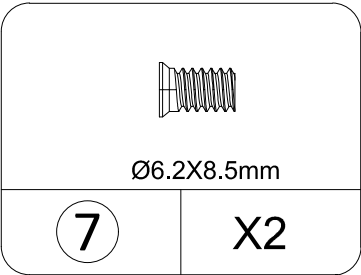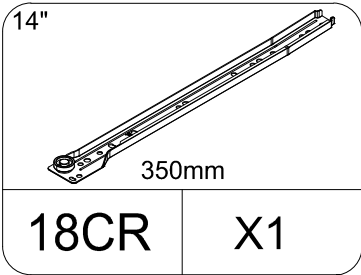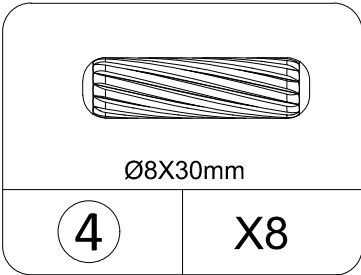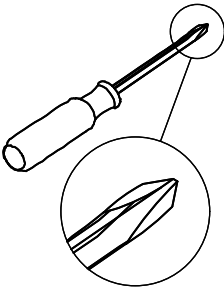





Lock the corresponding holes according to the diagram

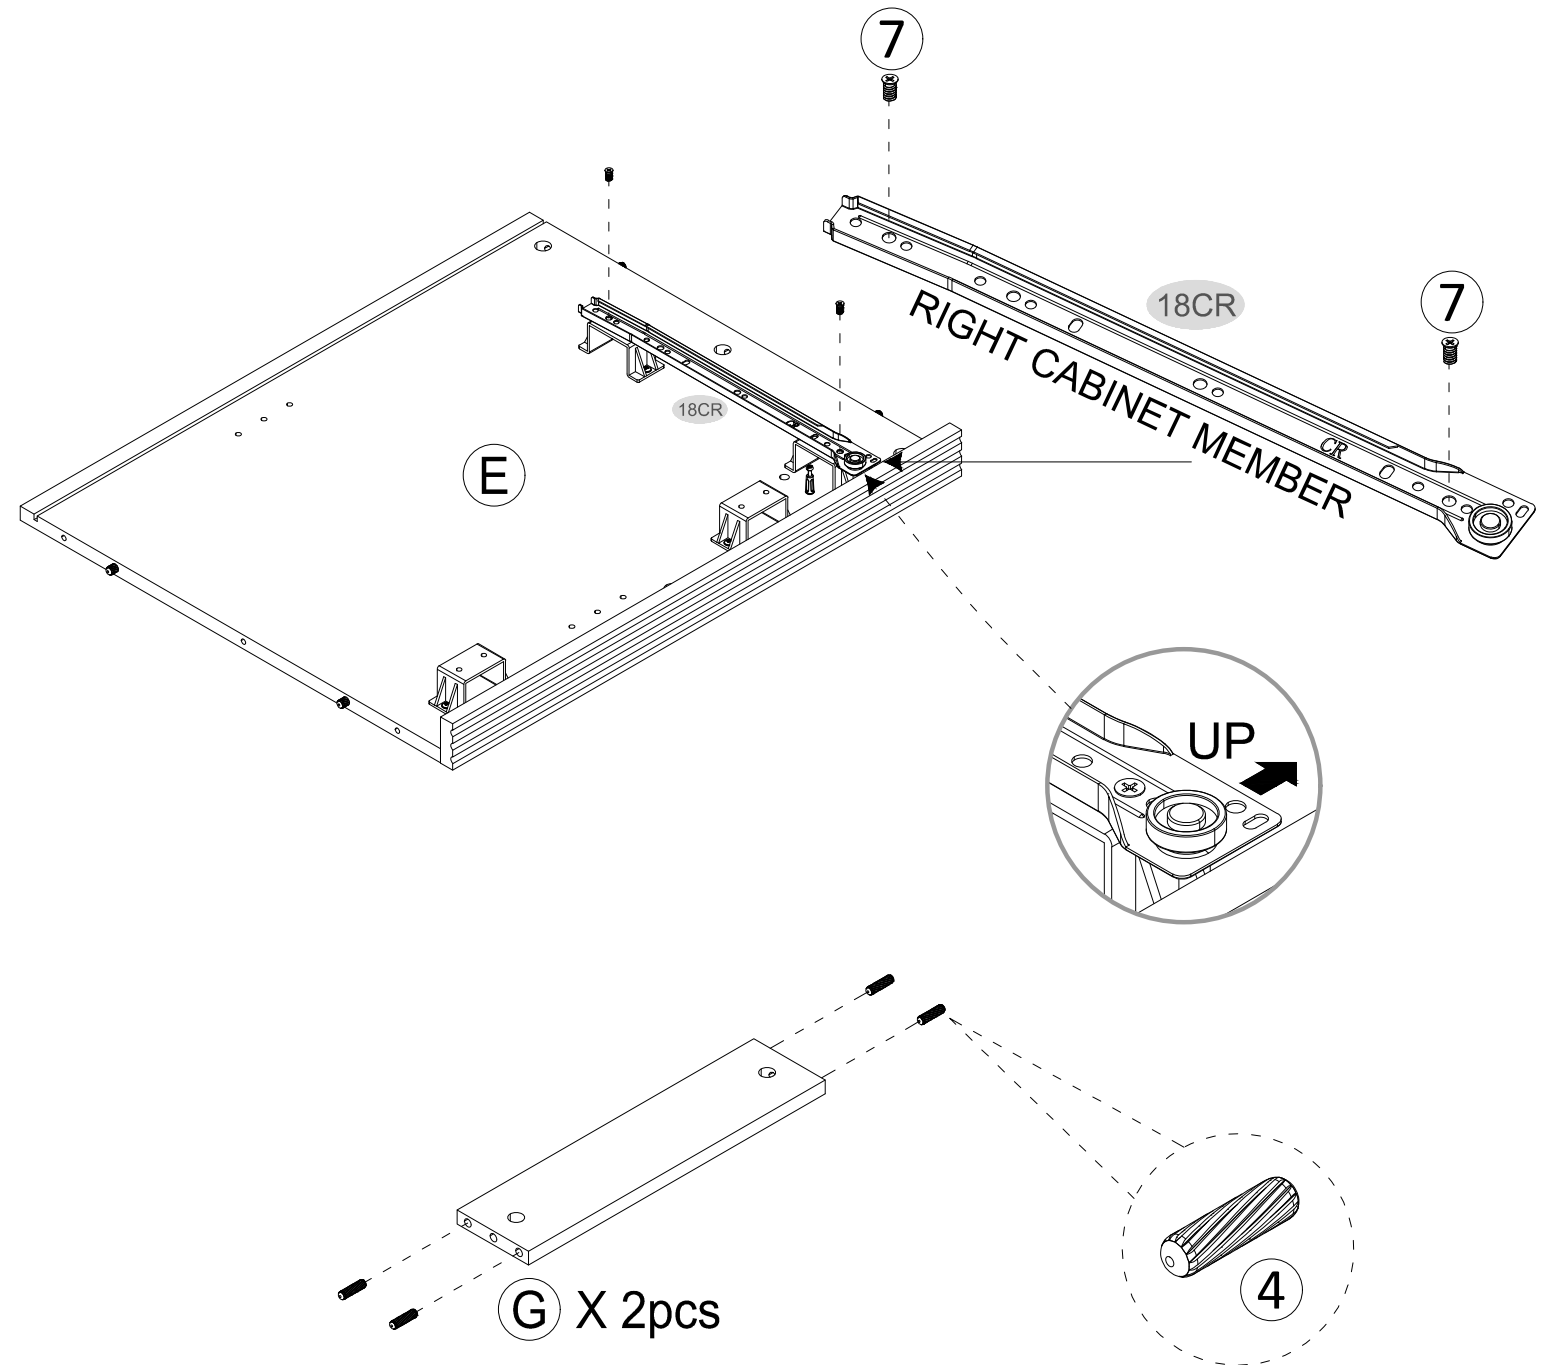

STEP20

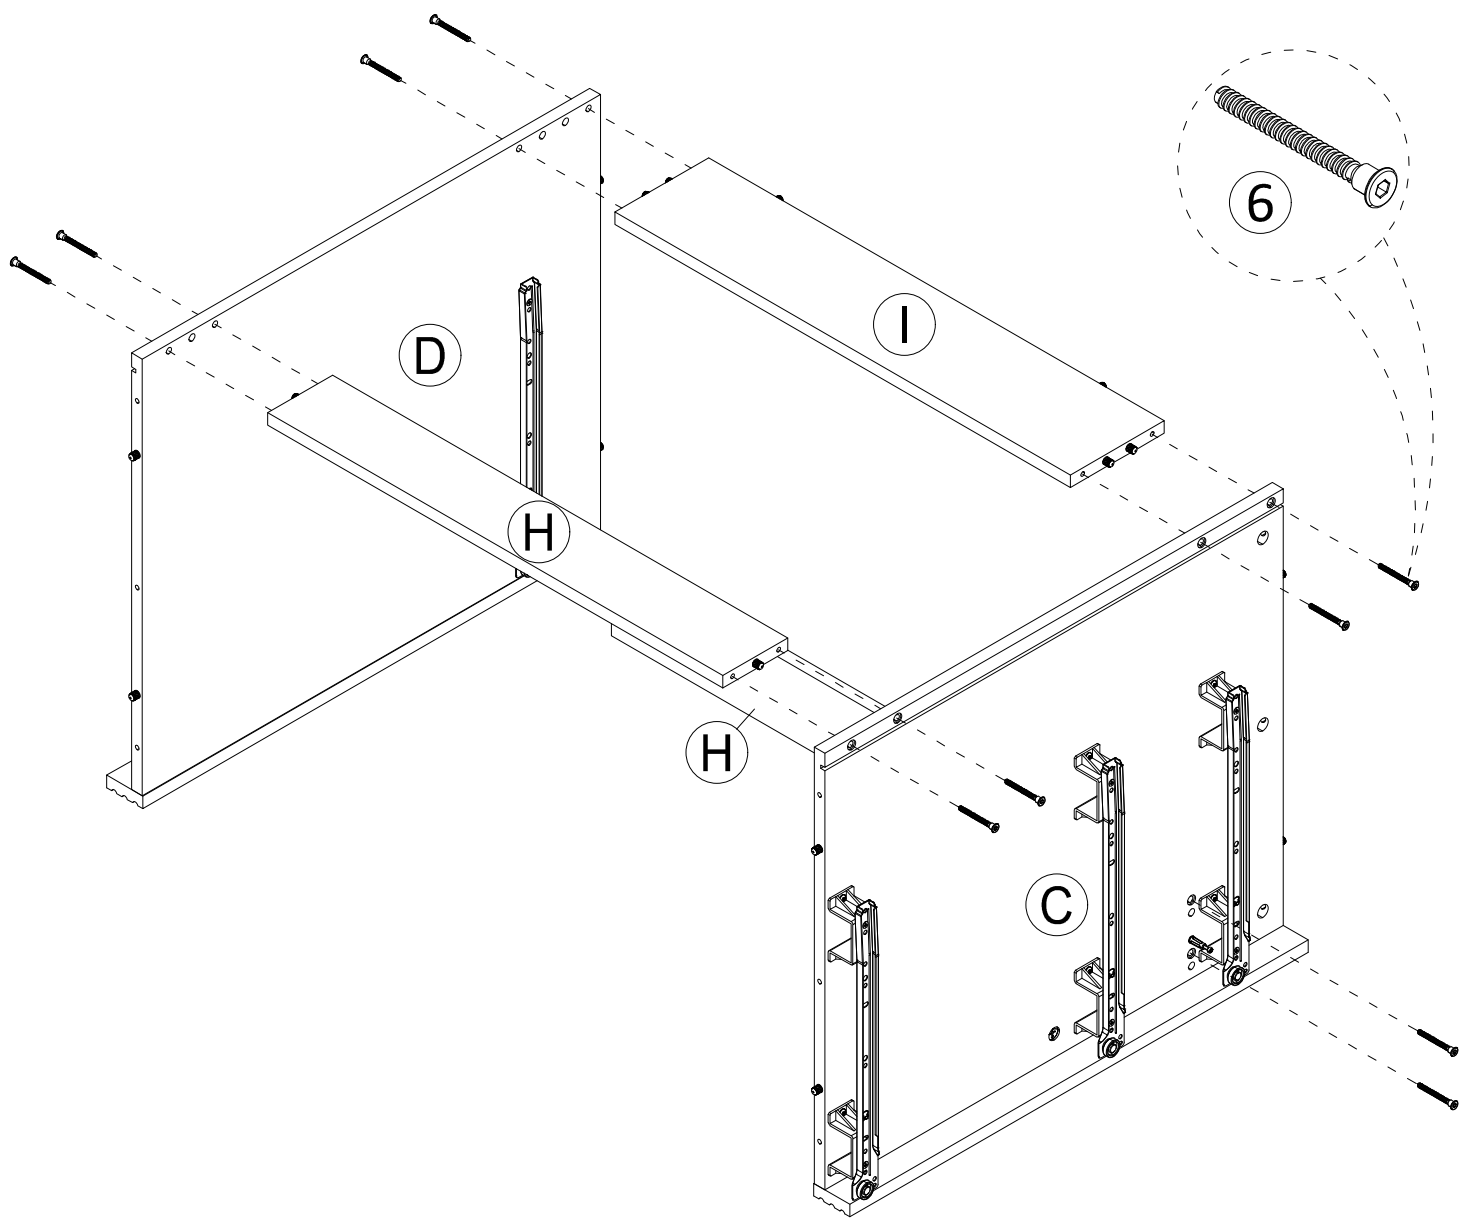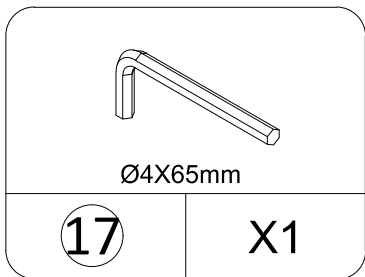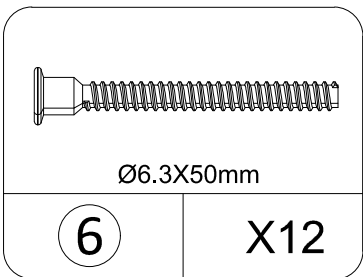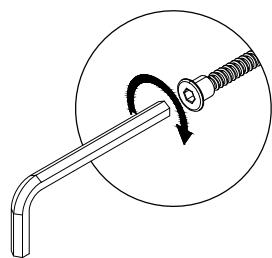



STEP21

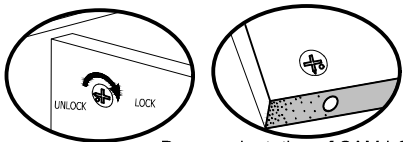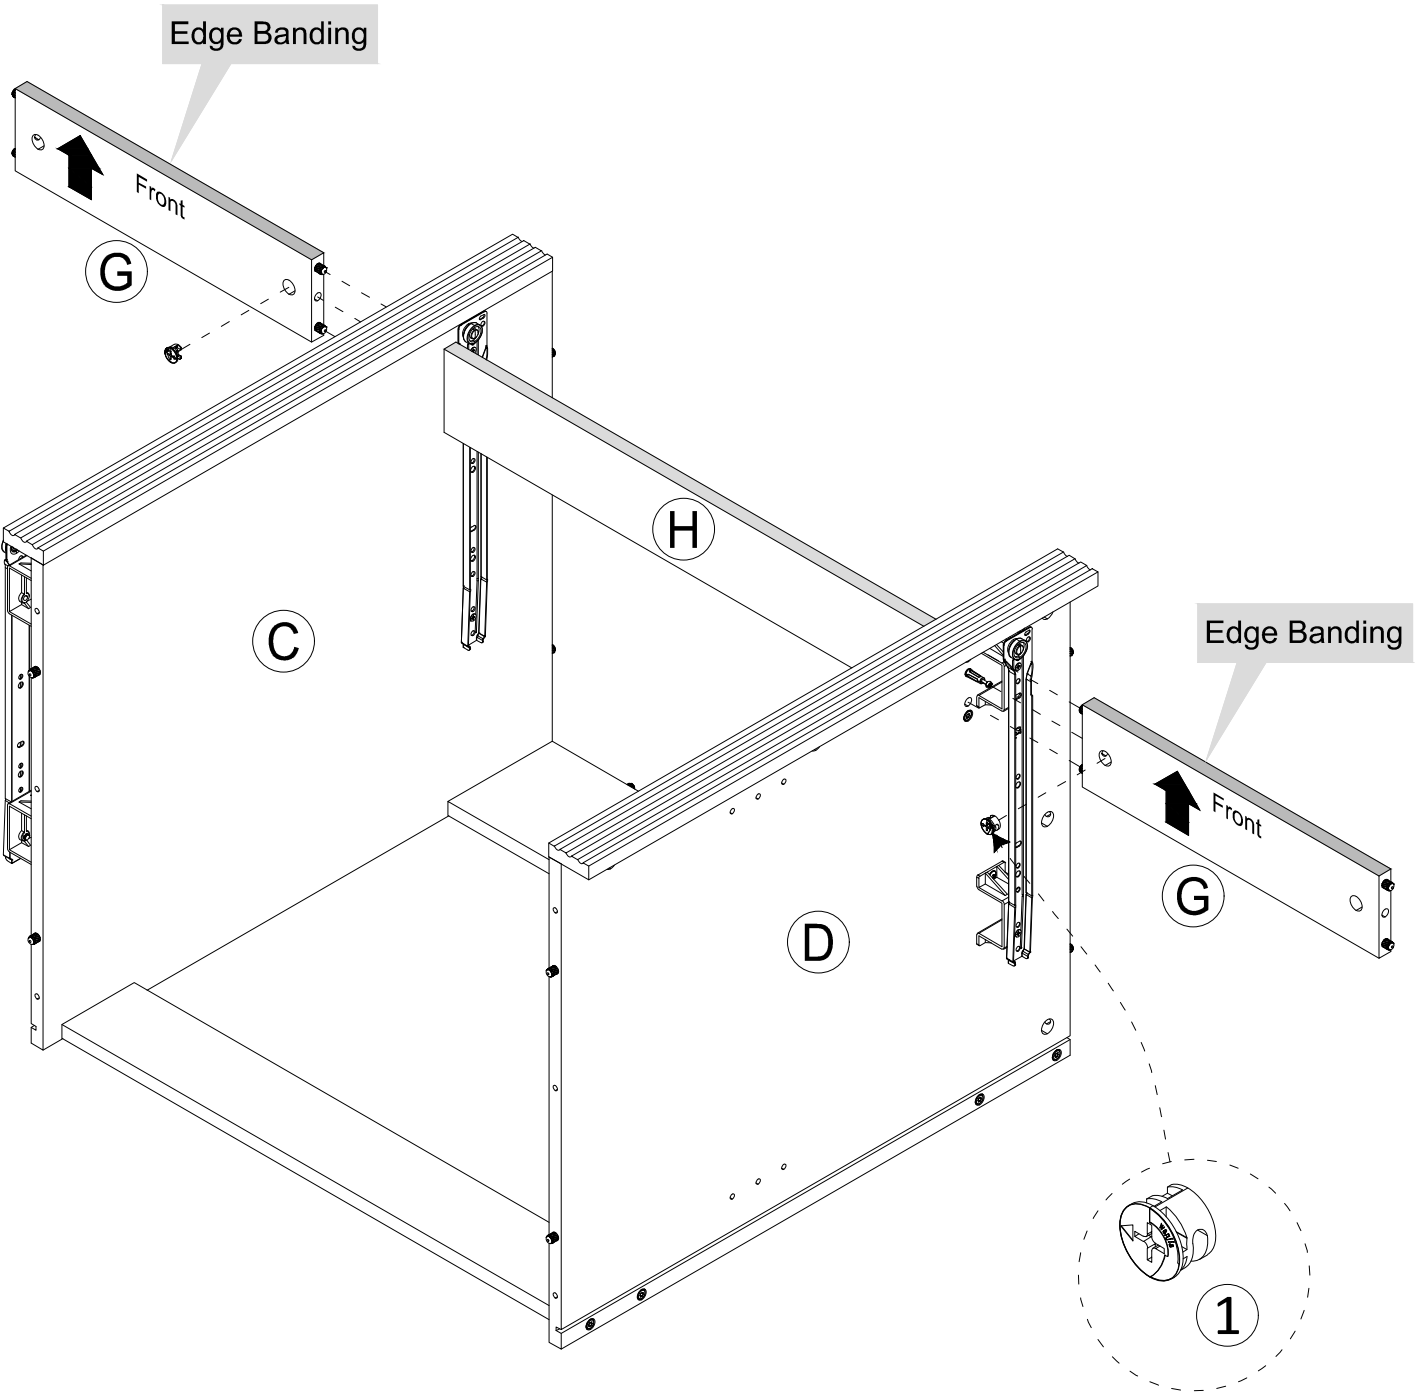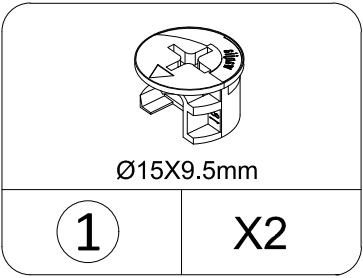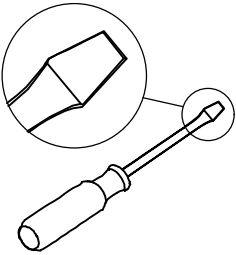

Proper orientation of CAM LOCK



STEP22

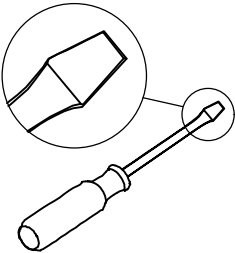







Ø15X9.5mm

1	X2
---	----

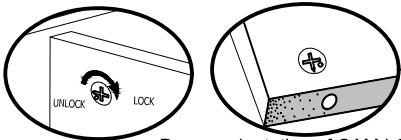
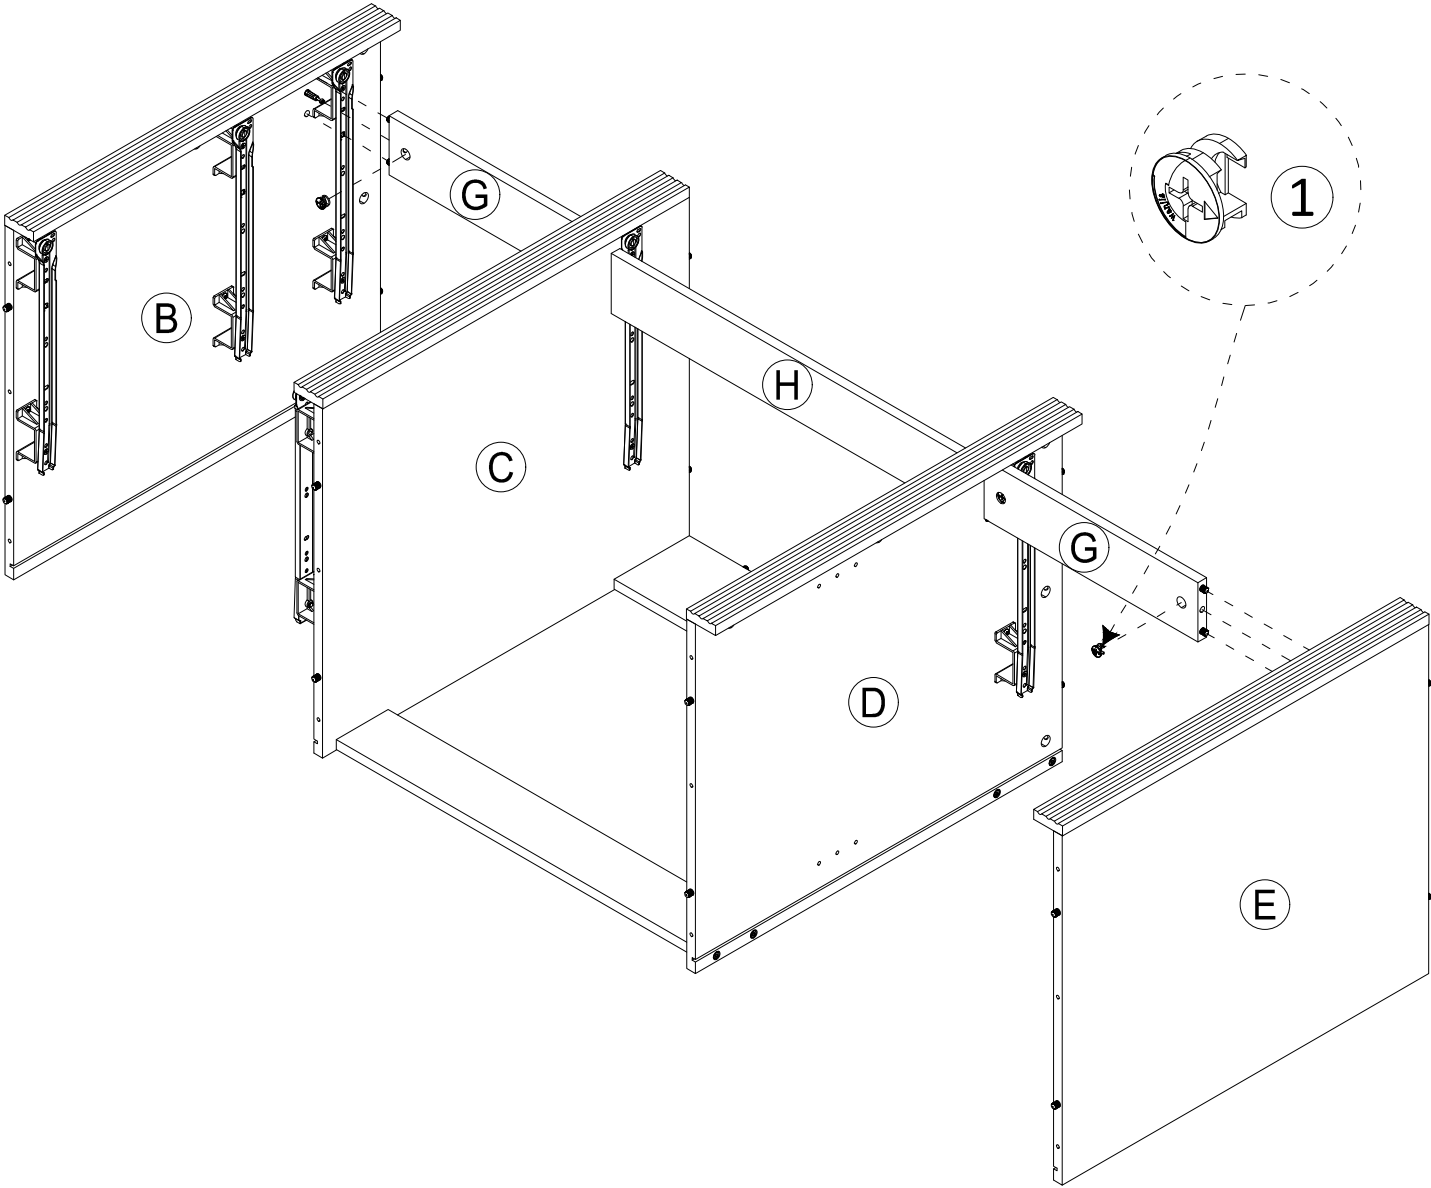


Proper orientation of CAM LOCK



STEP23

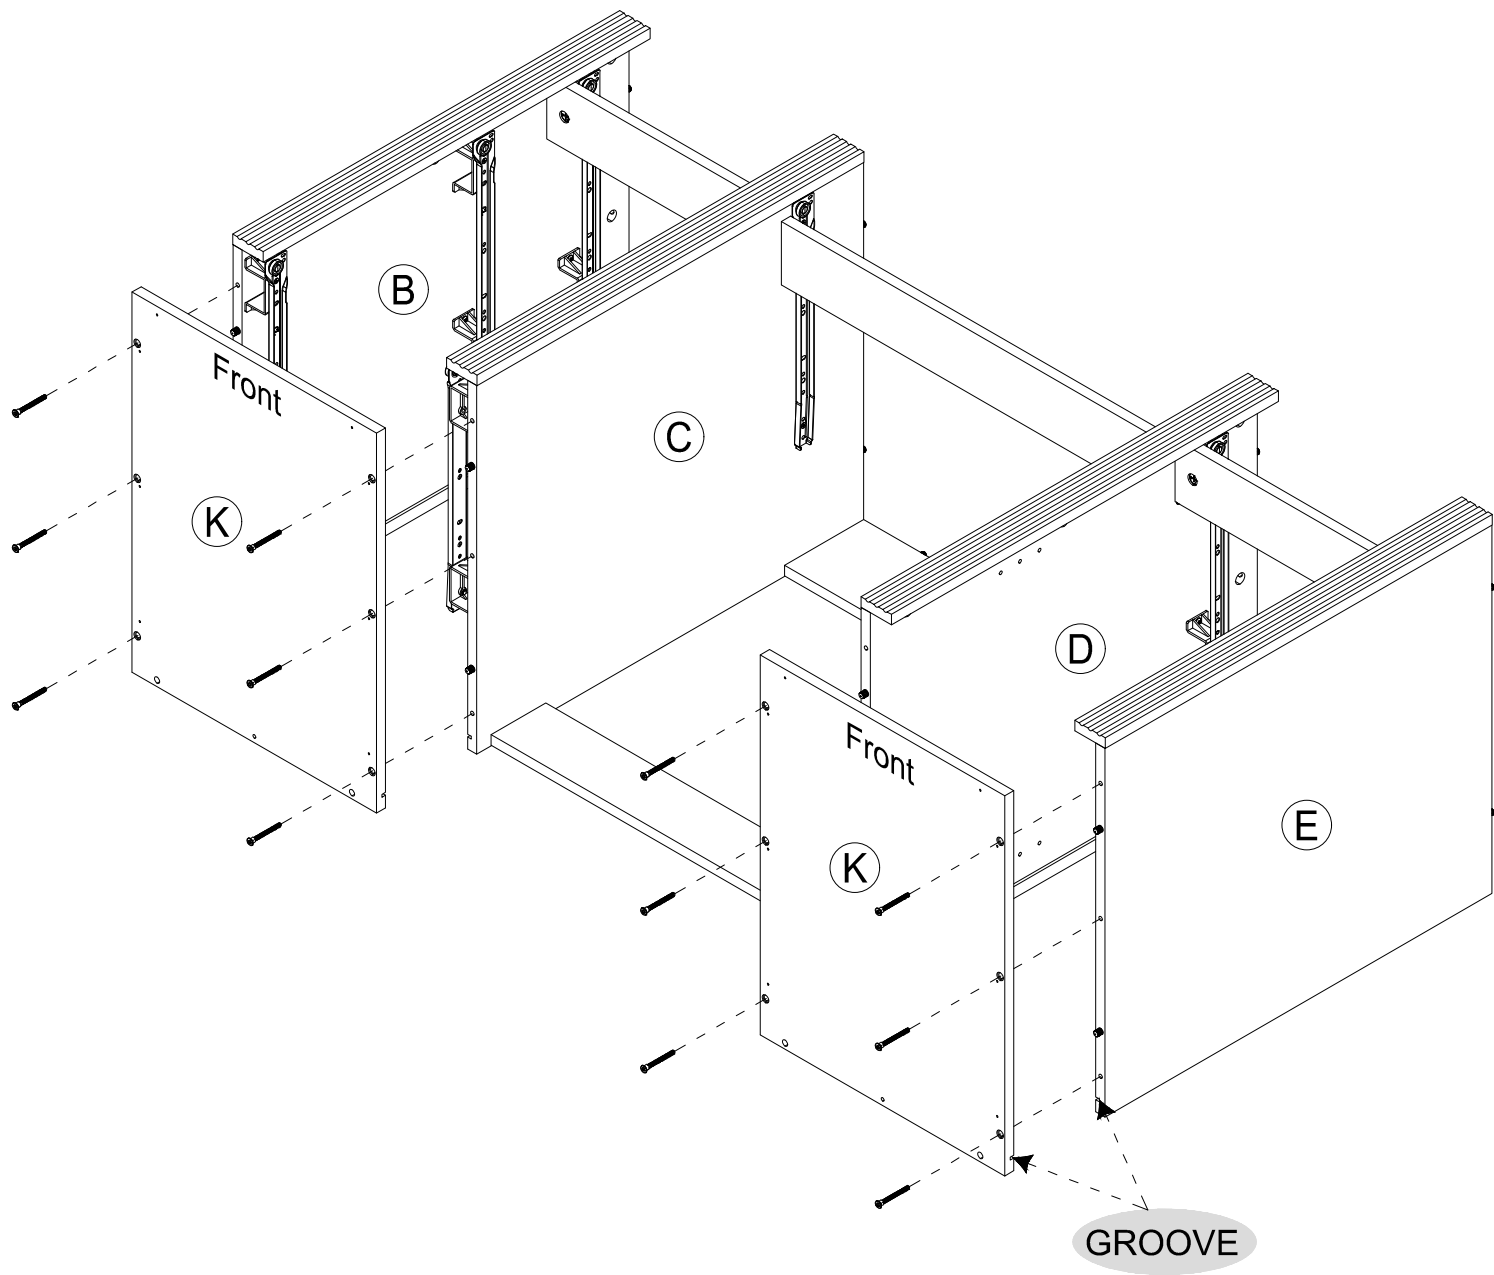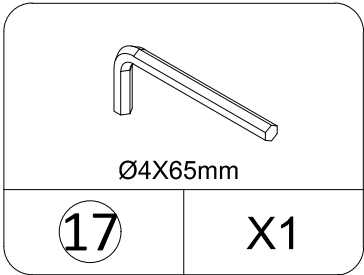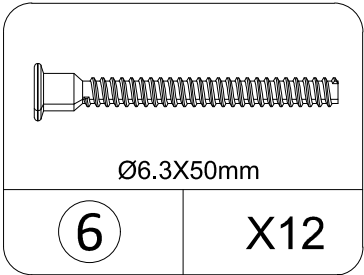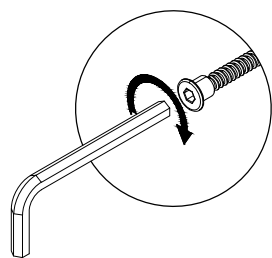


STEP24

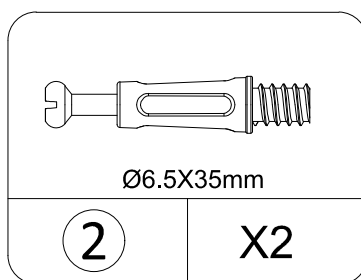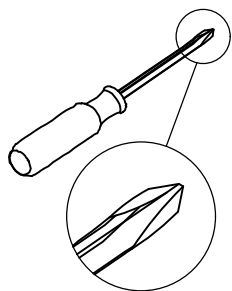

This step requires two people to stand the cabinet up and install it.

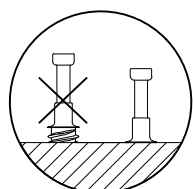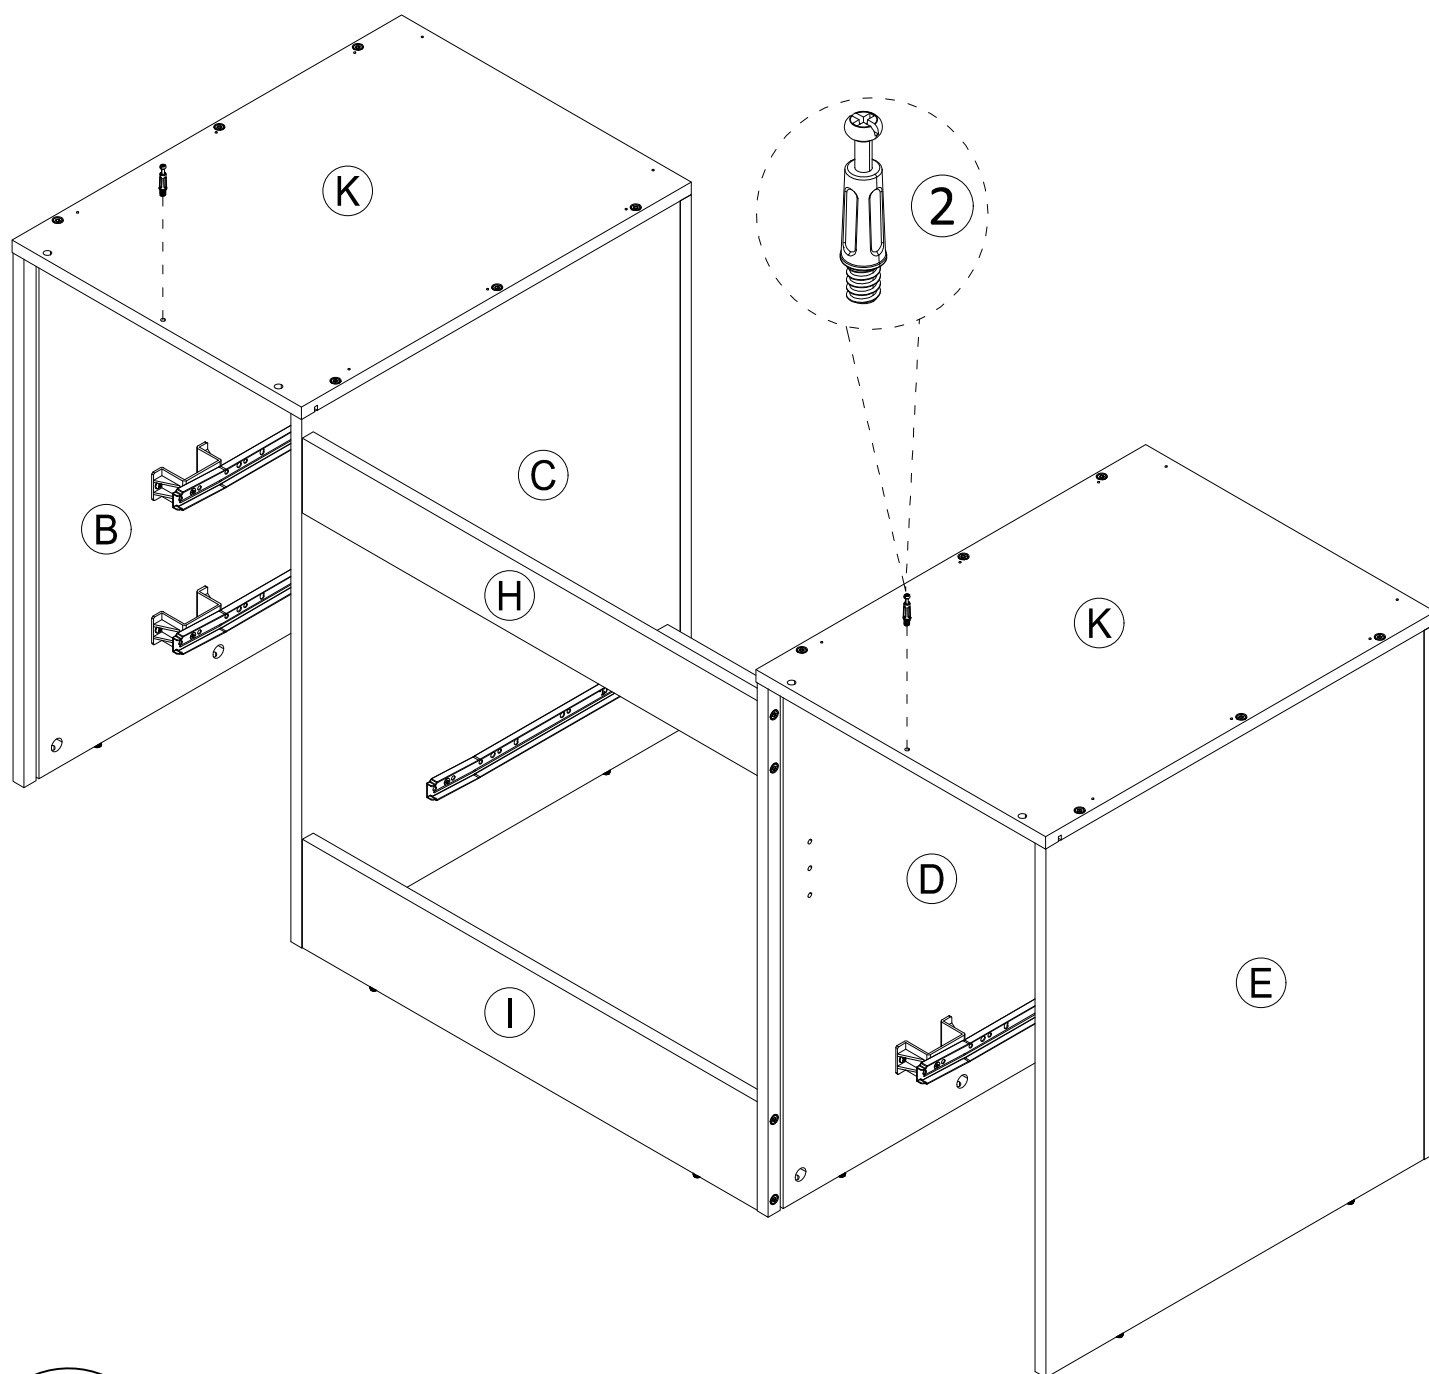

STEP25



Ø6.5X35mm

2


X8



Ø8X30mm

4


X12



Ø4X14mm

9


X16




20X20X16mm


15

X16

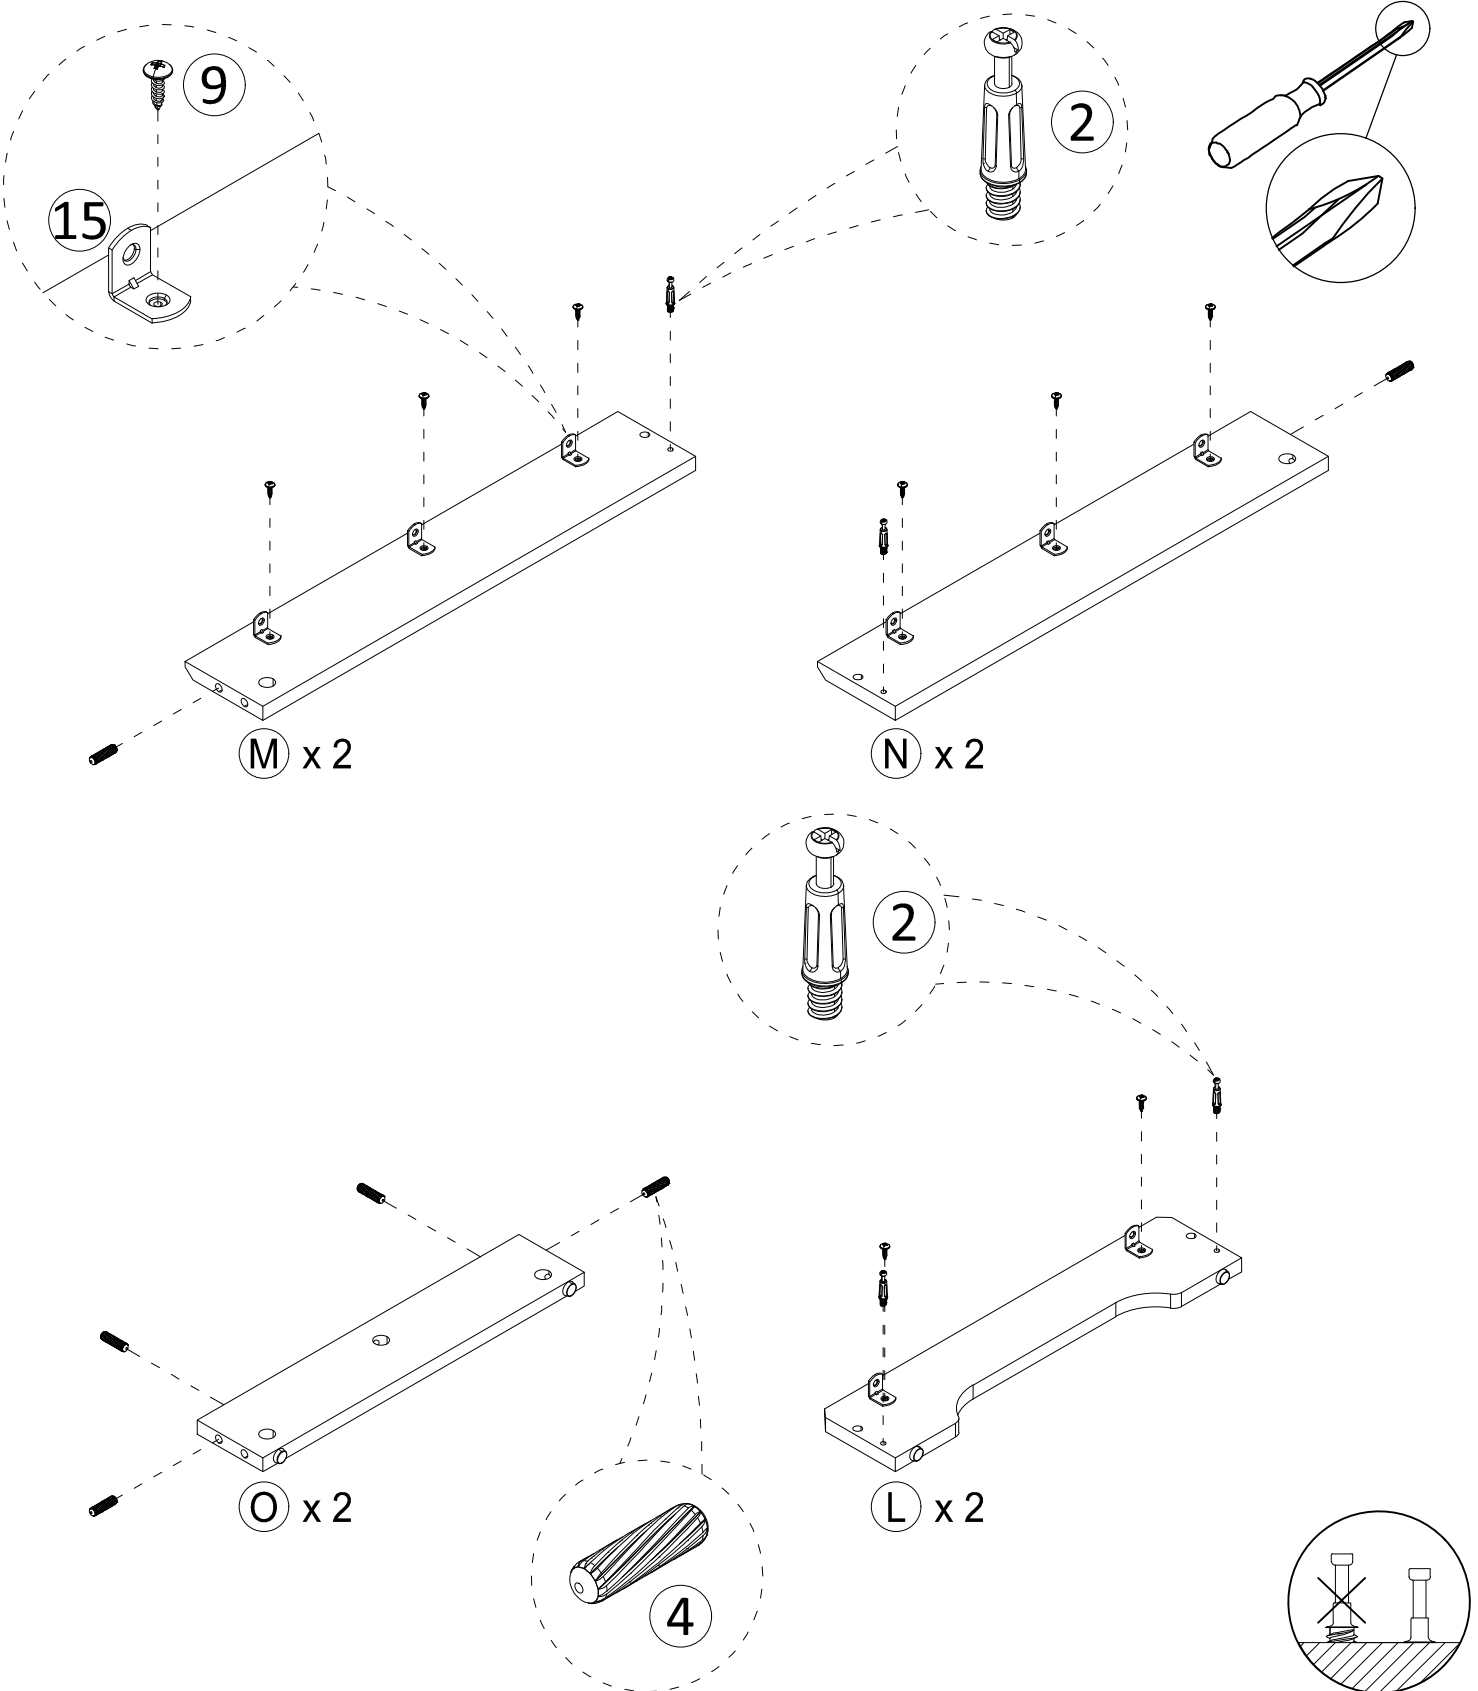




STEP26

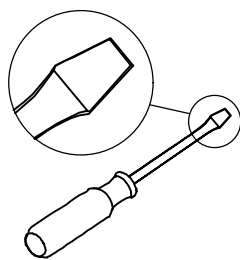



Ø15X9.5mm







1	X8
---	----

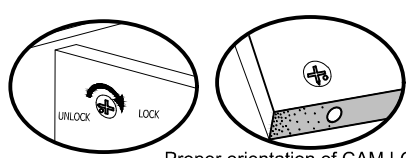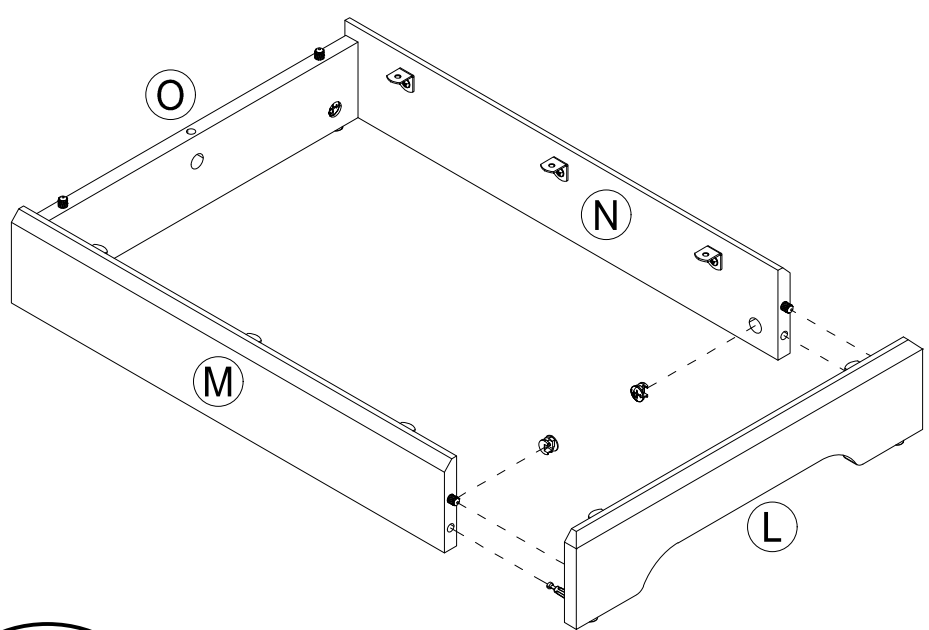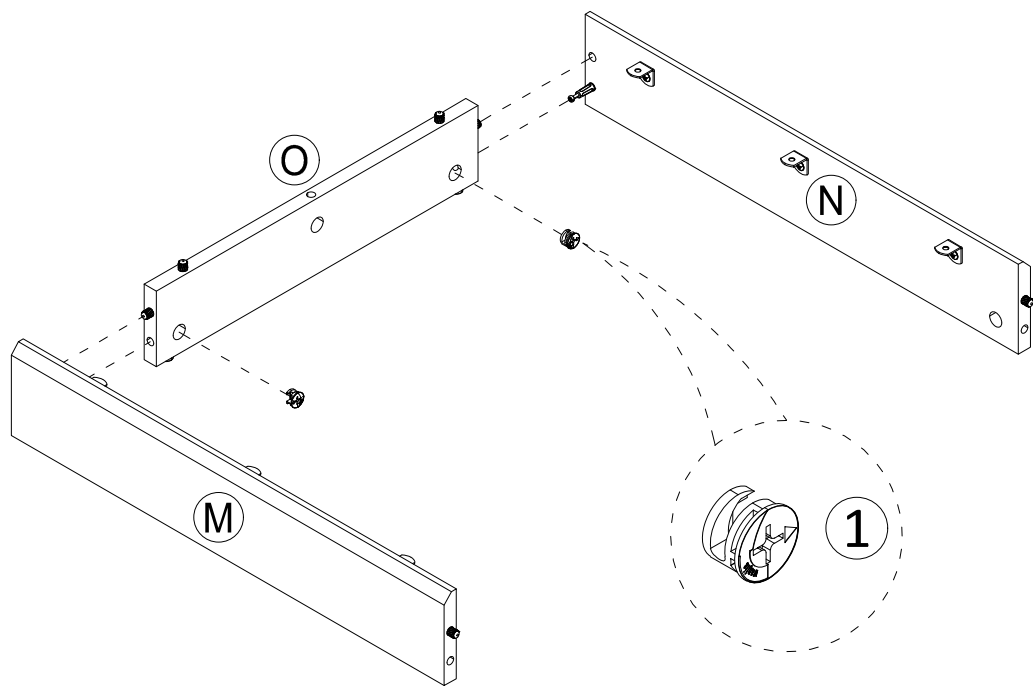

Proper orientation of CAM LOCK


x 2

STEP27

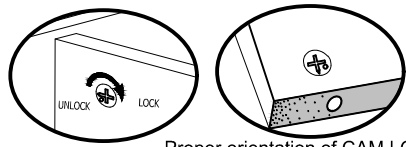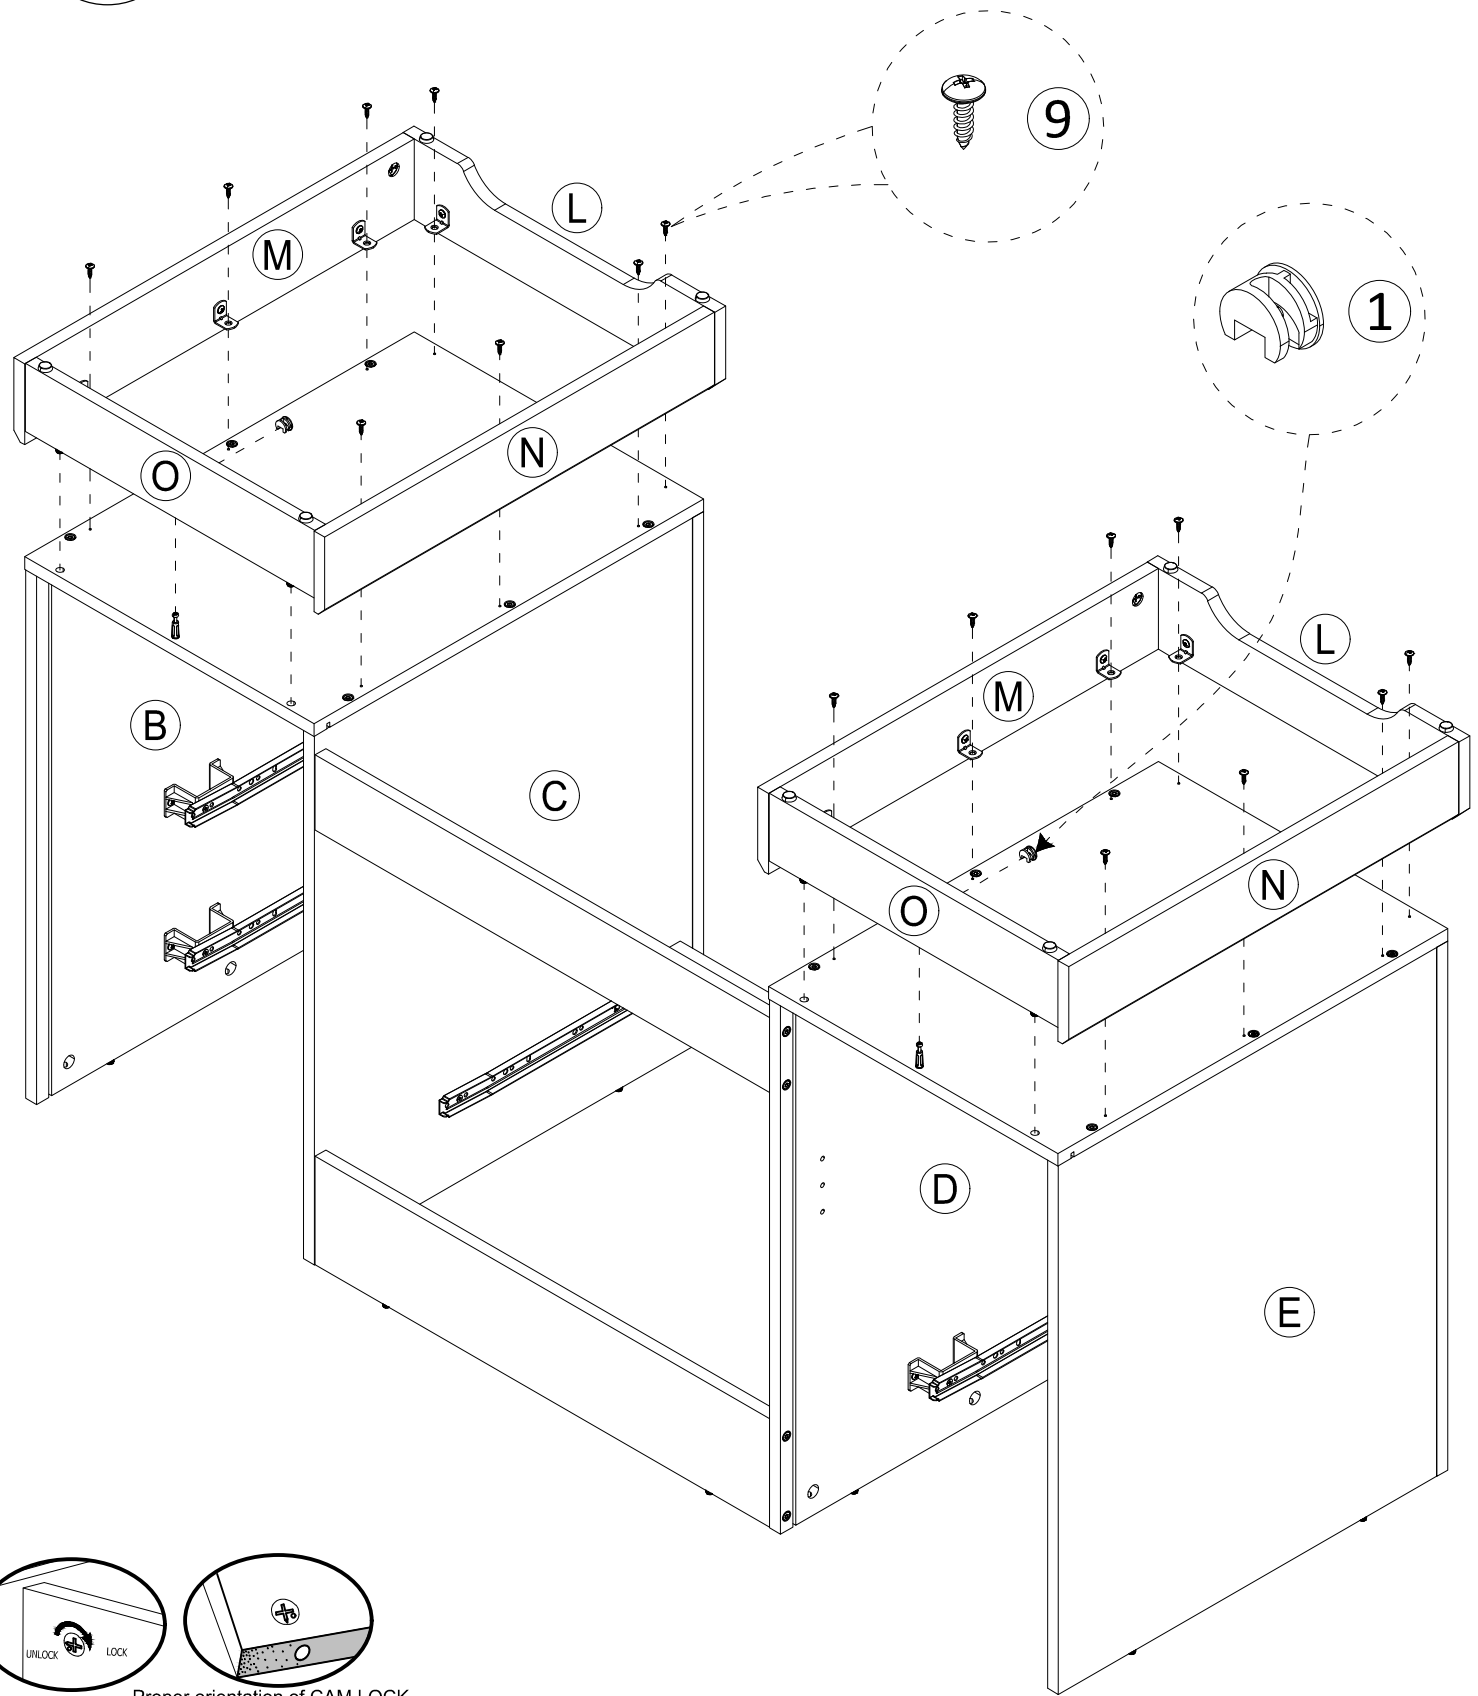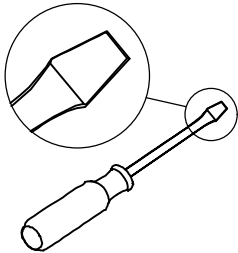
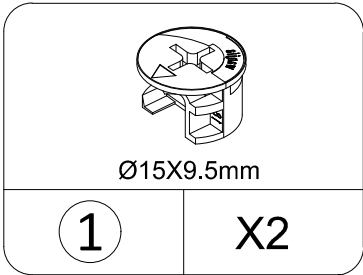
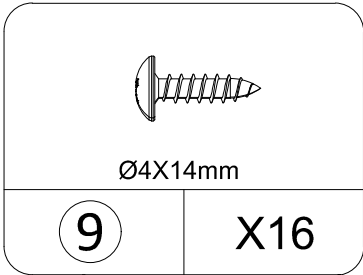
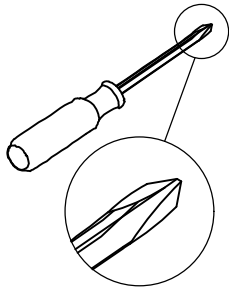


Proper orientation of CAM LOCK



STEP28

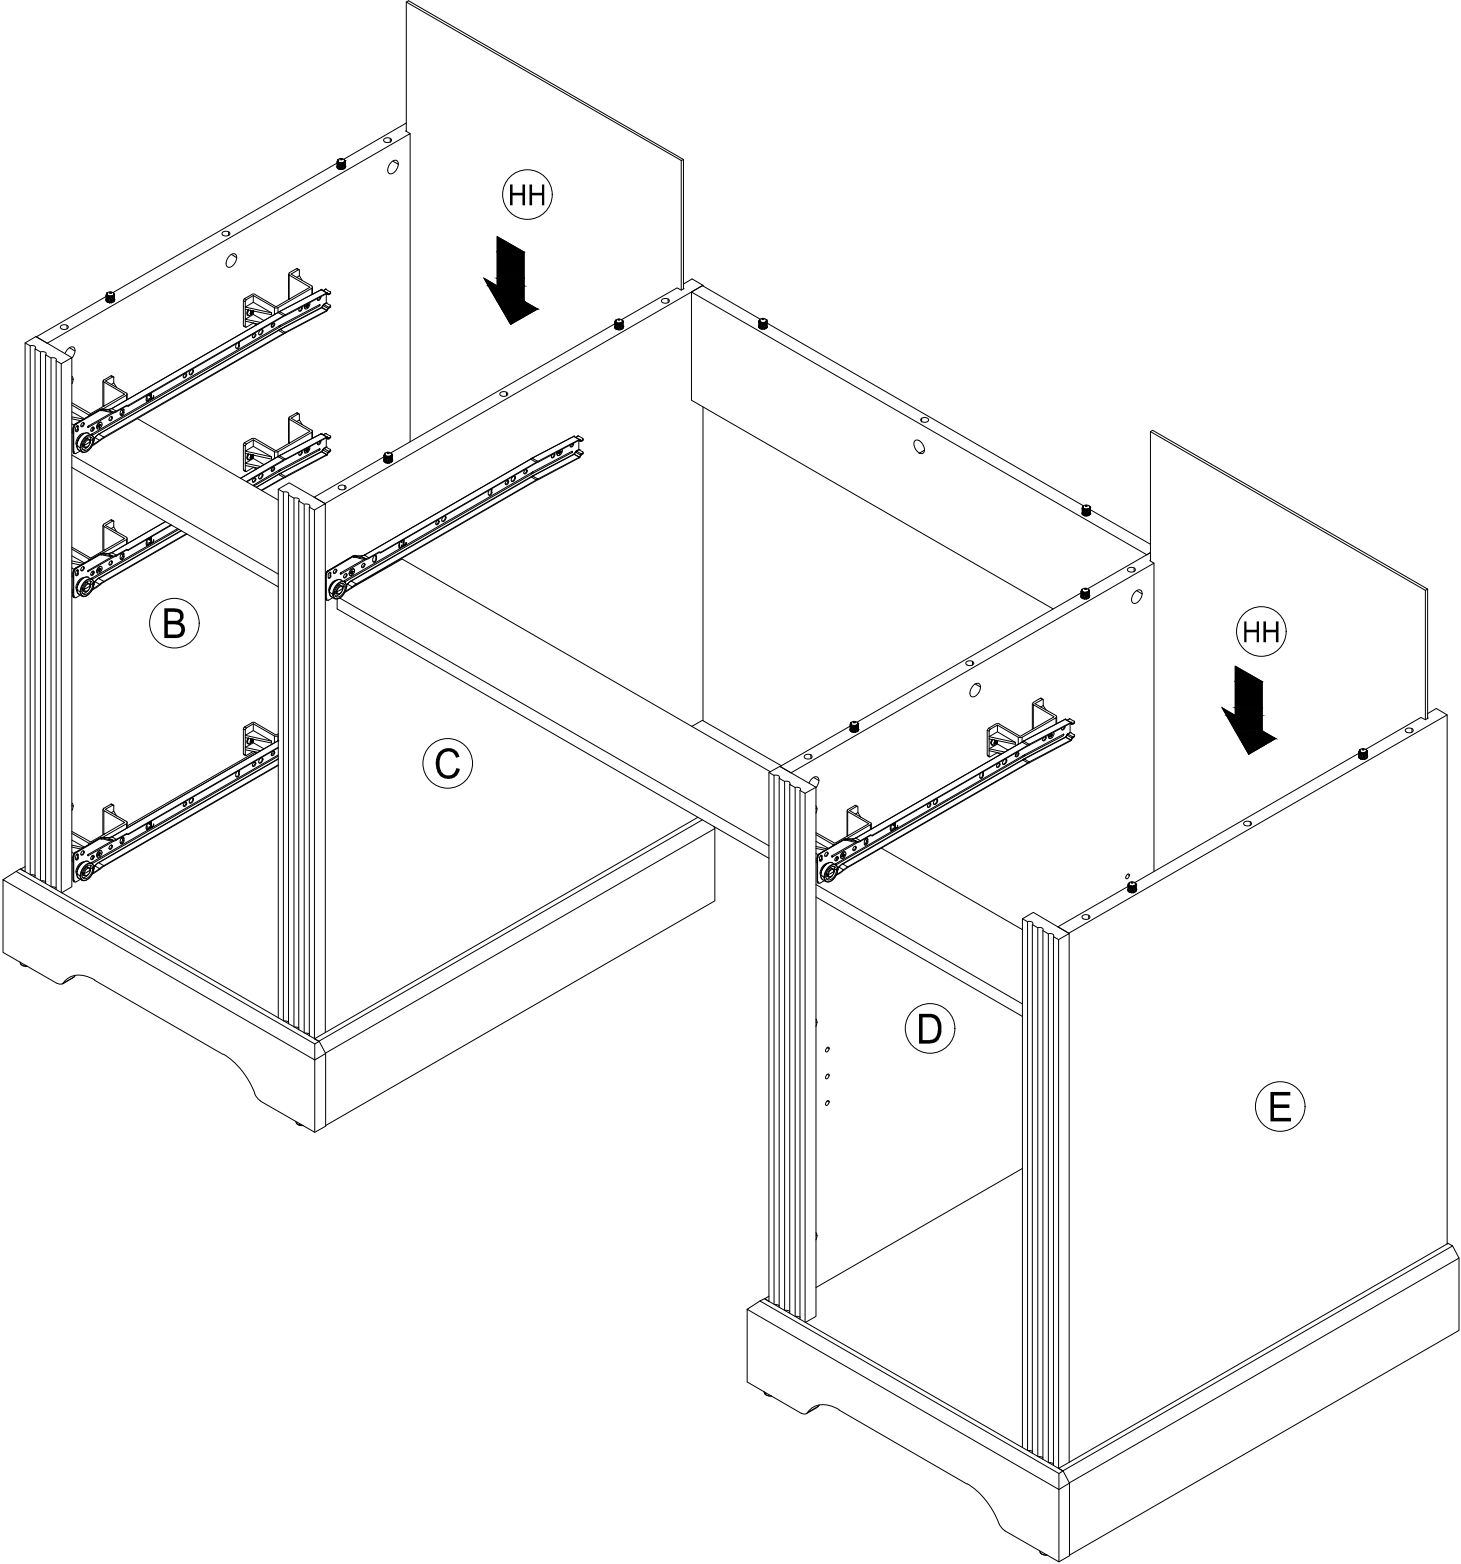


STEP29

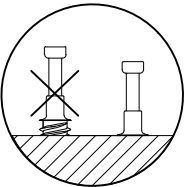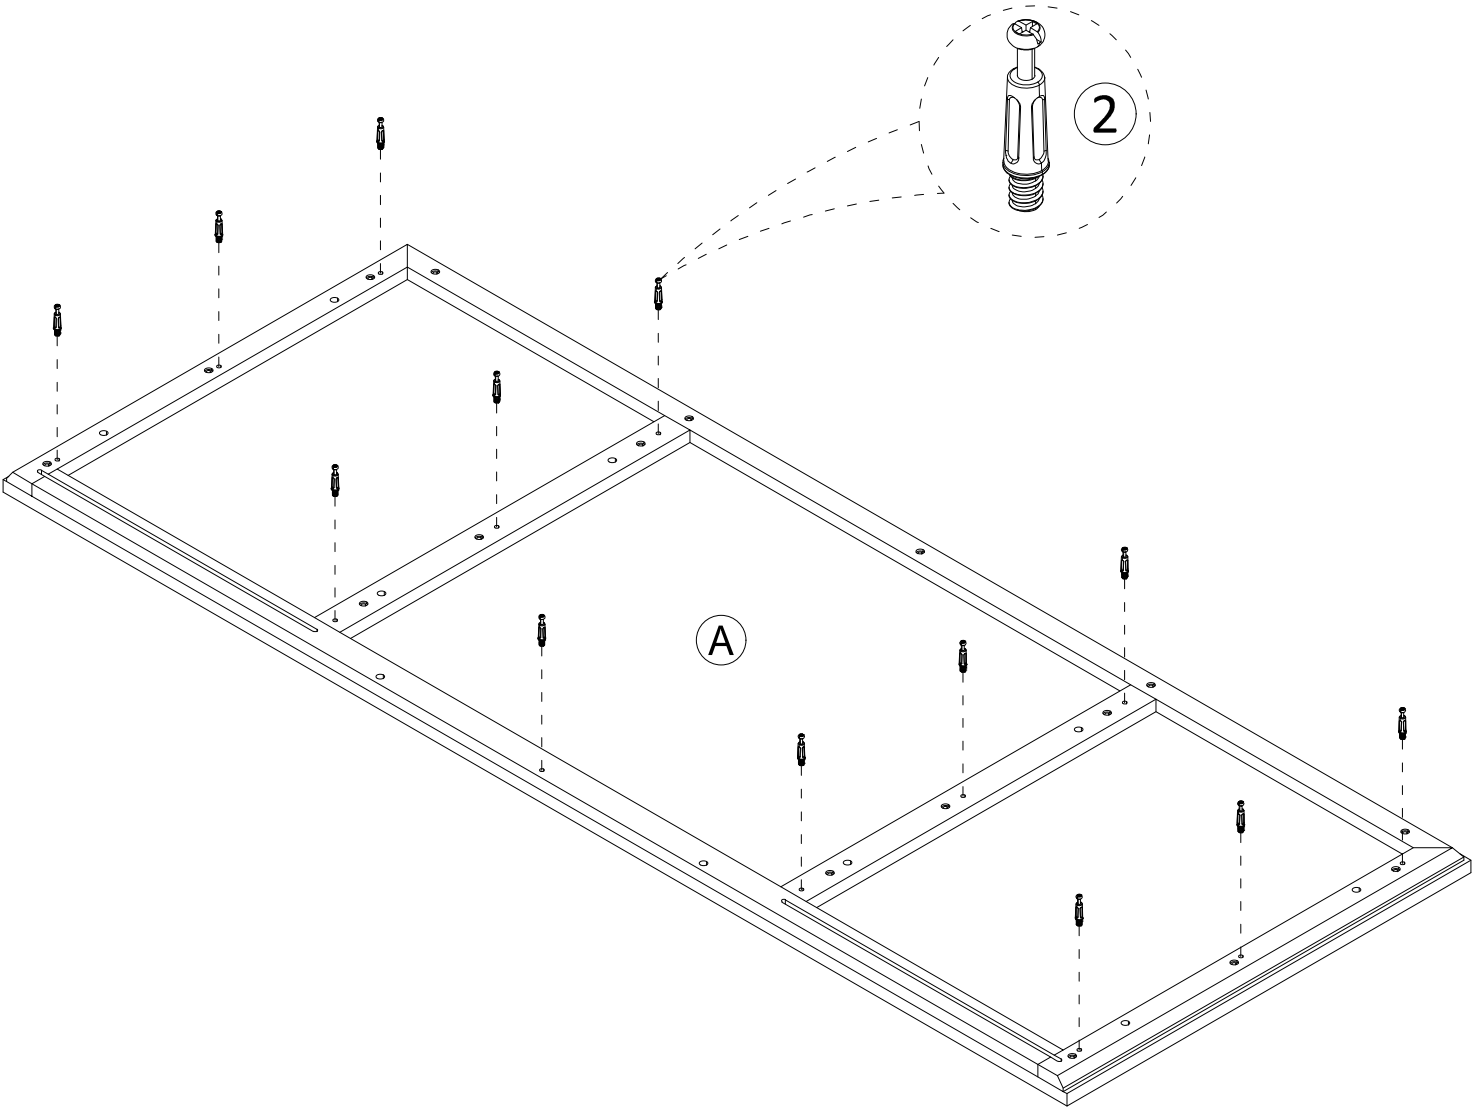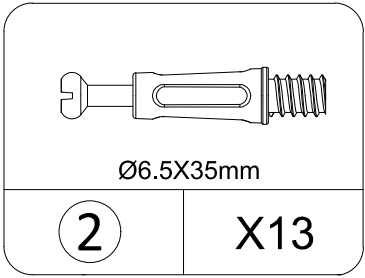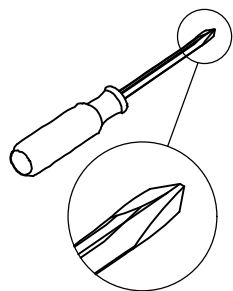

STEP30



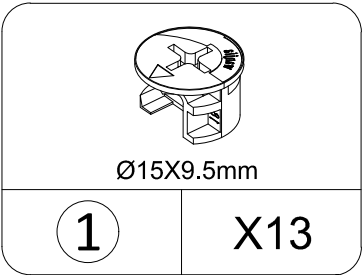
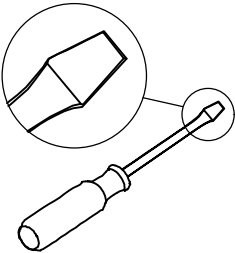


THIS STEP REQUIRES 2 PEOPLE




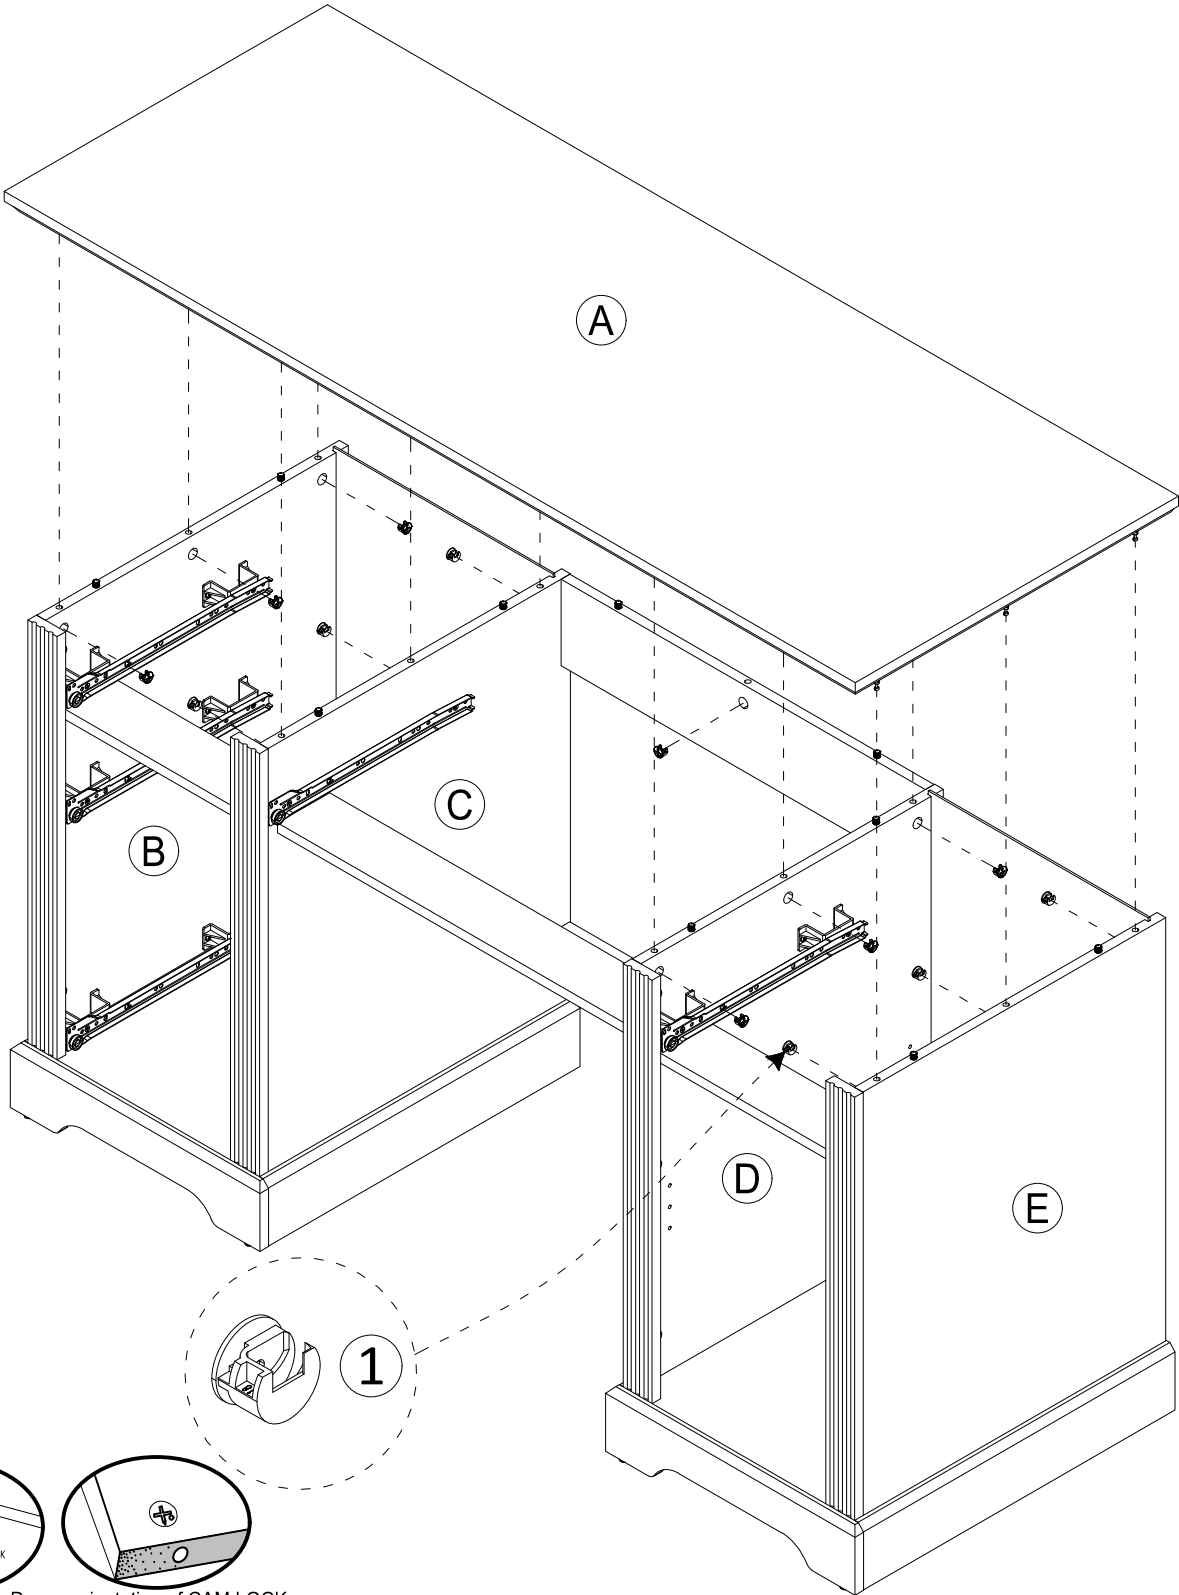


Proper orientation of CAM LOCK






STEP31

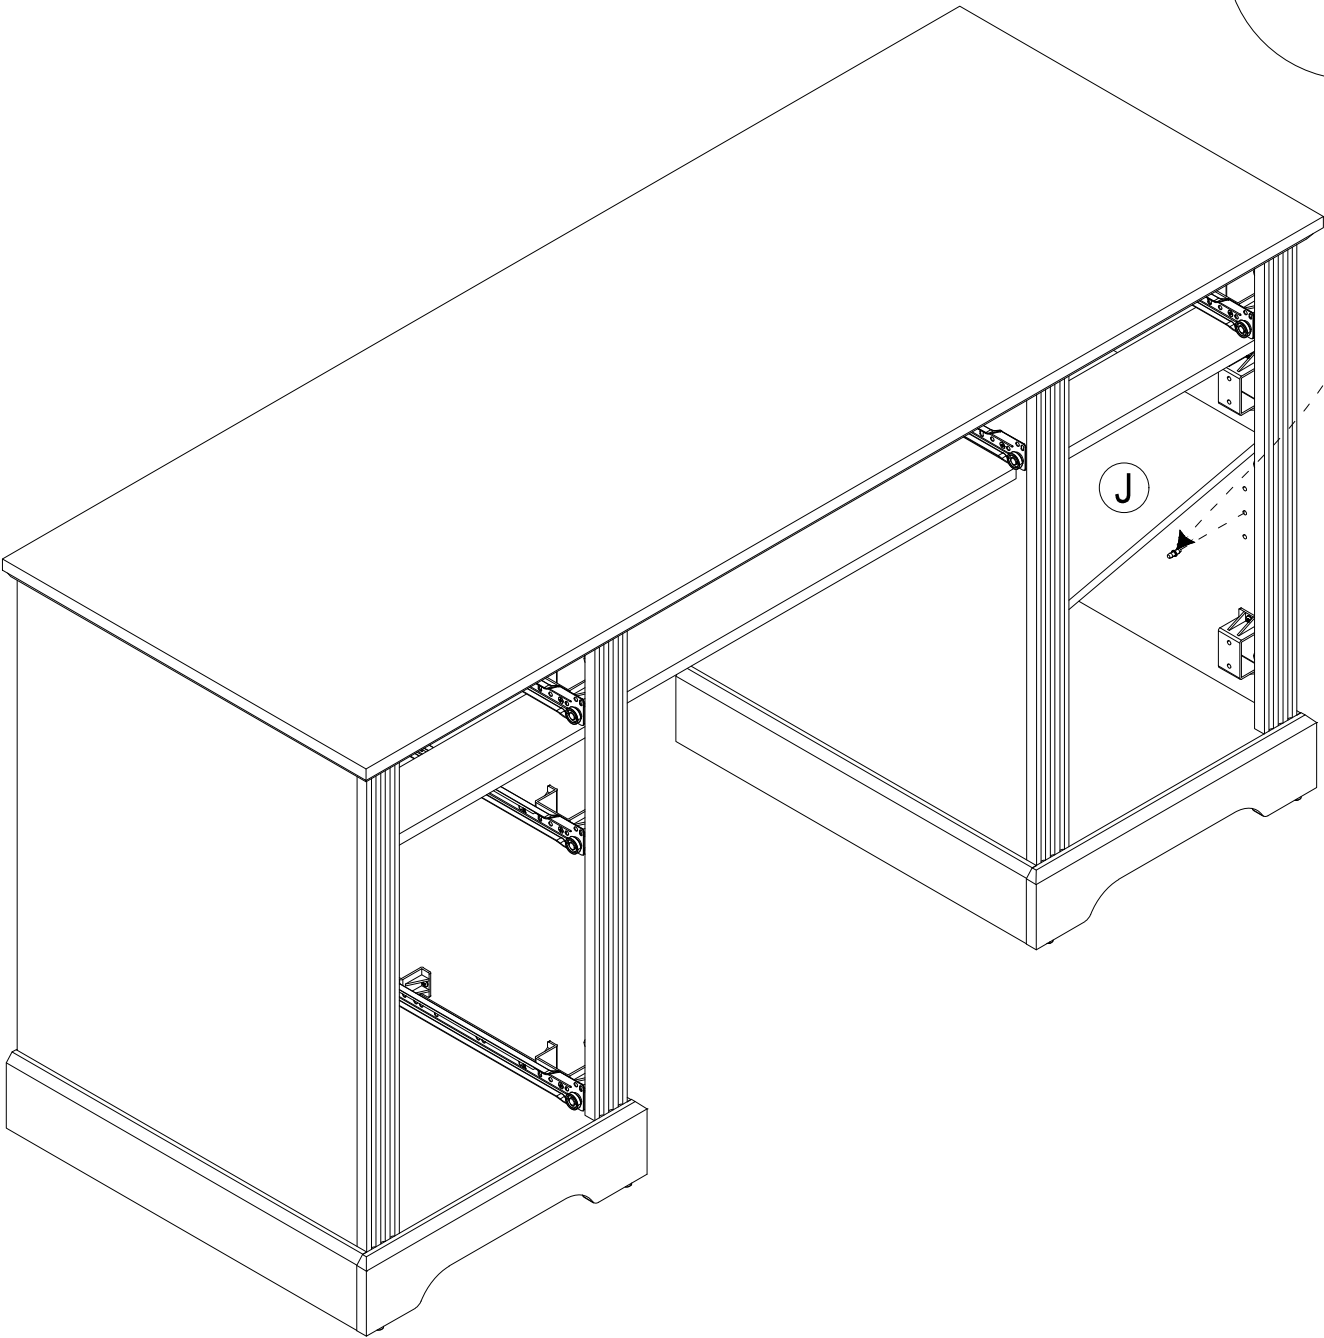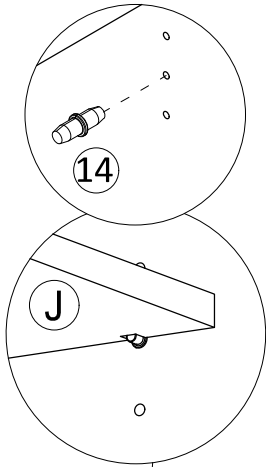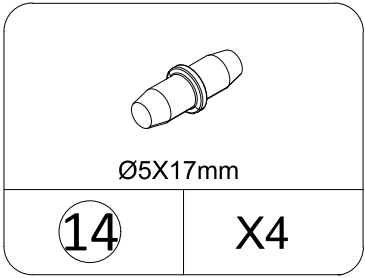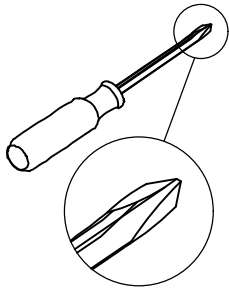

STEP32

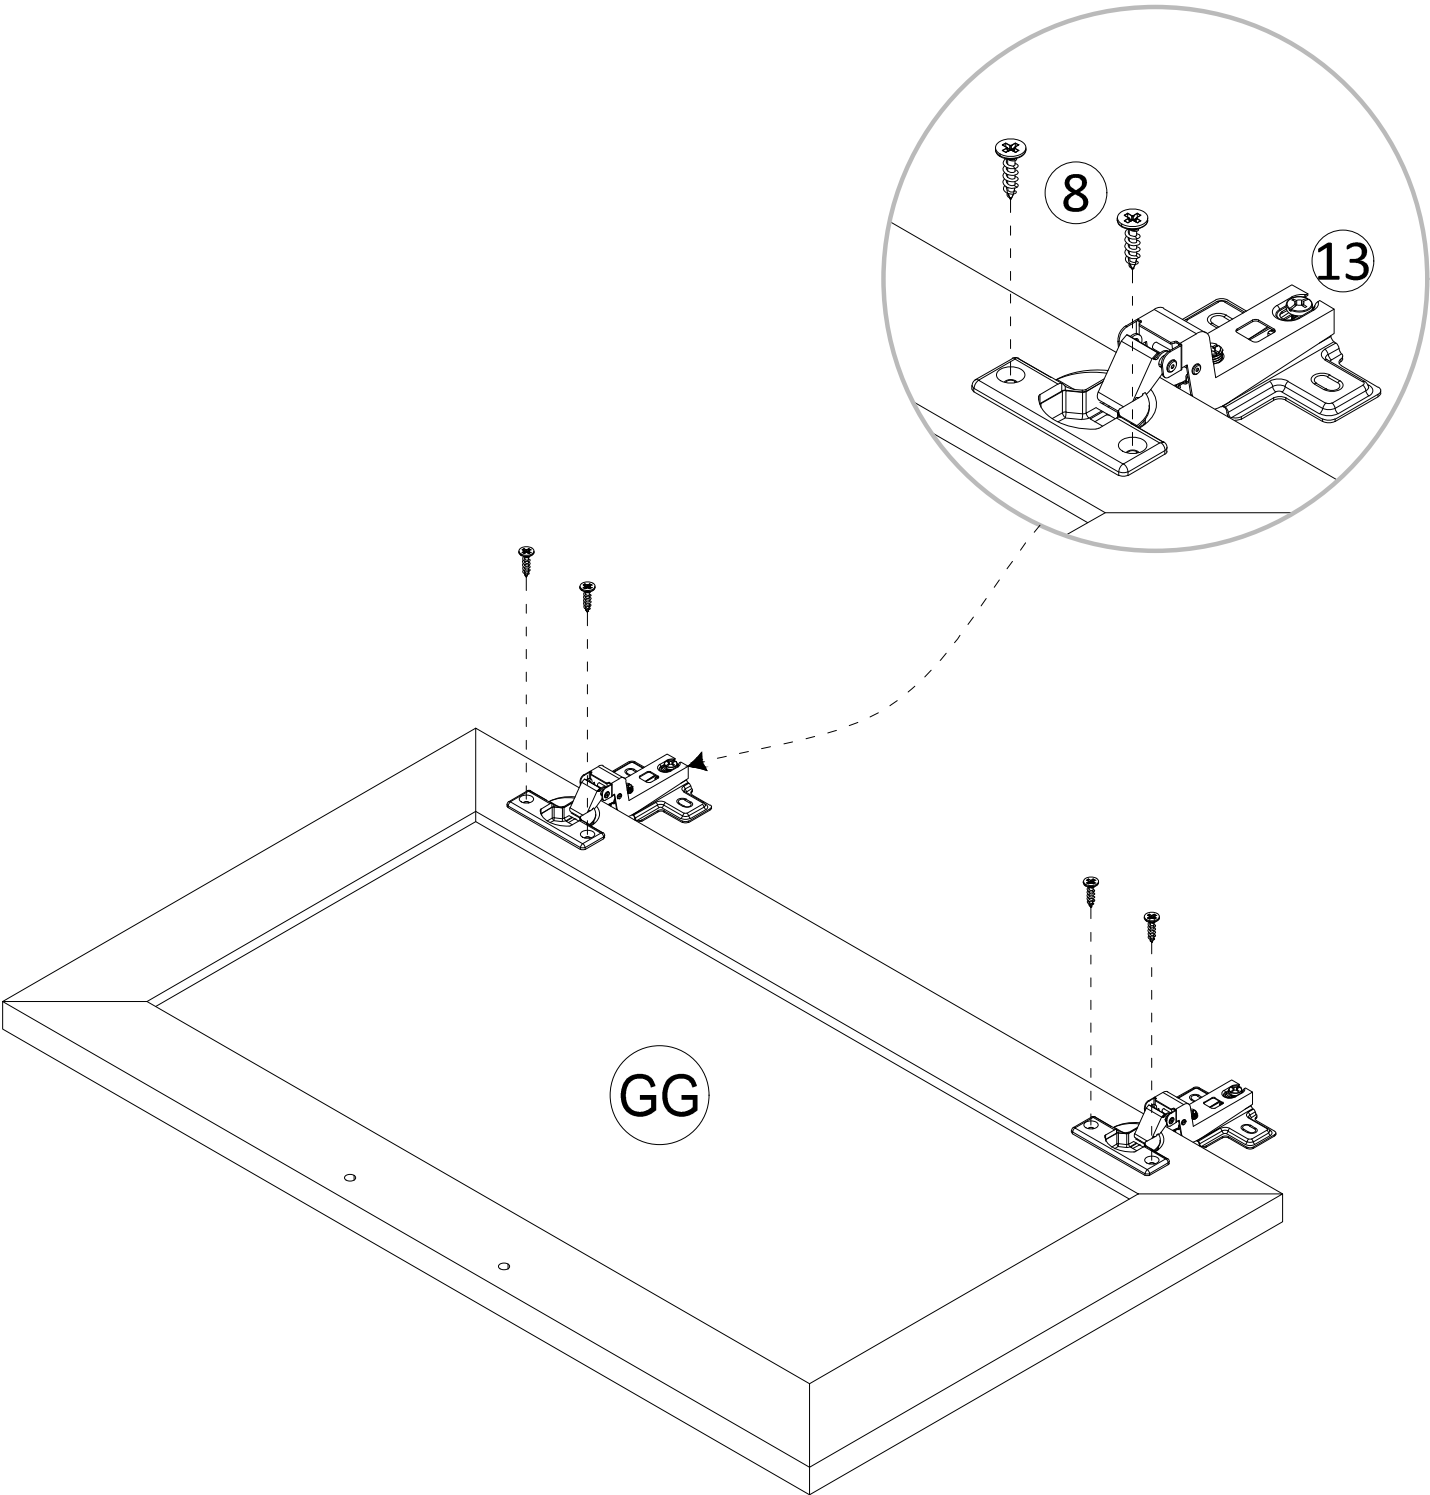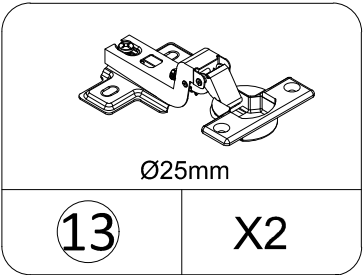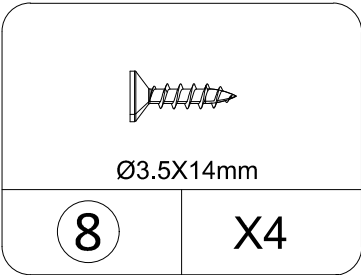
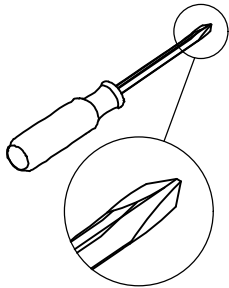


STEP33

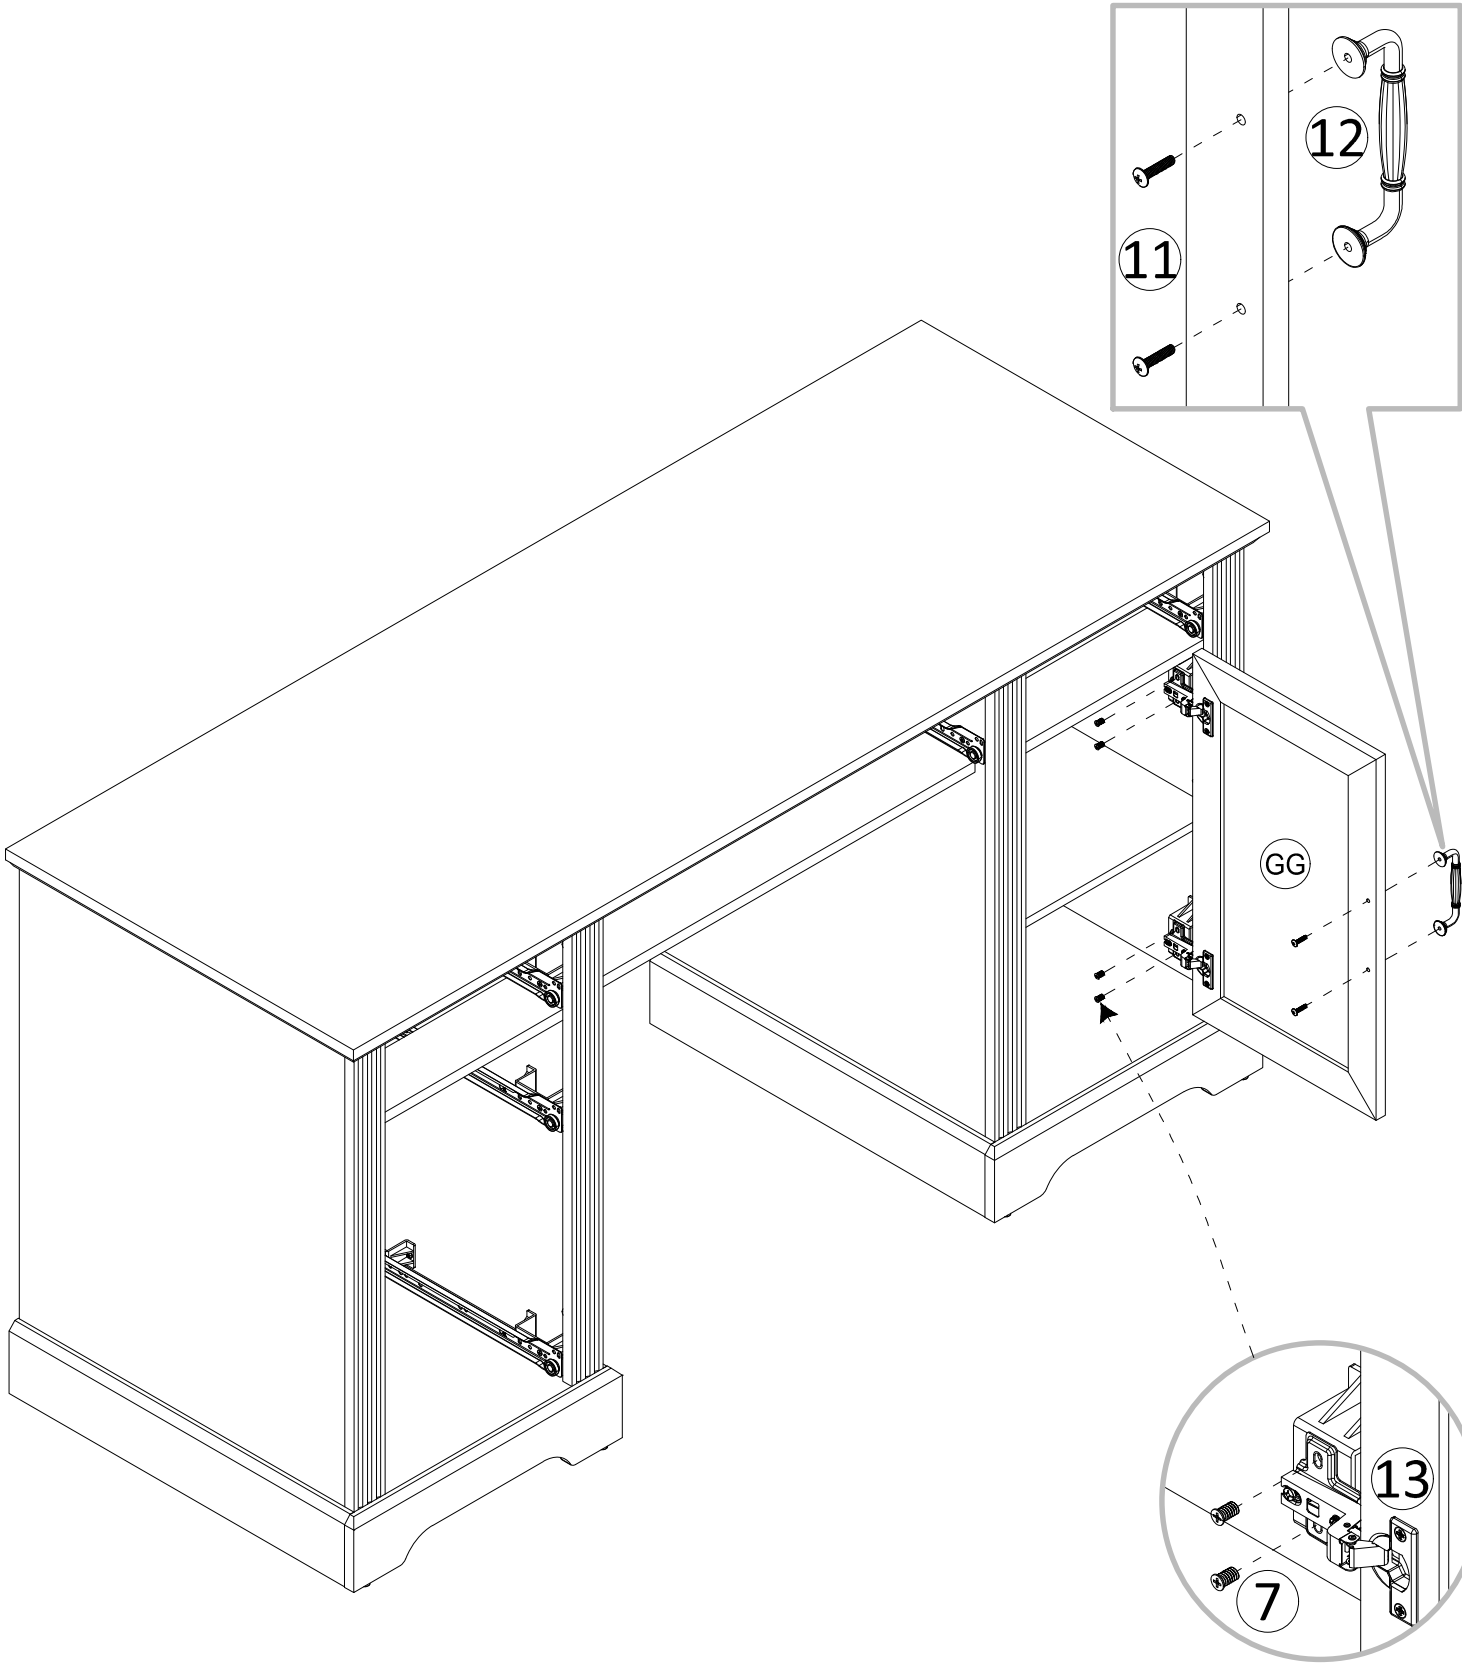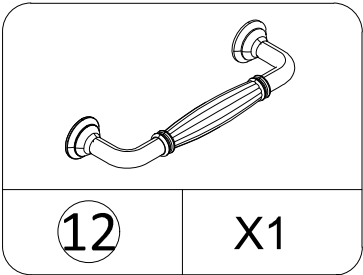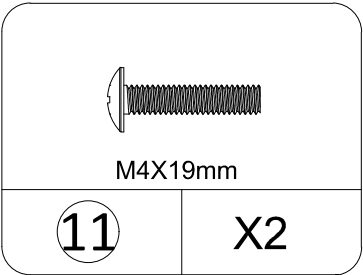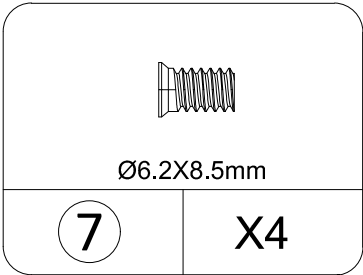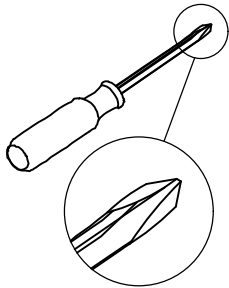


STEP34

SCHEMATIC DIAGRAM OF HINGE ADJUSTMENT DOOR PANEL GAP

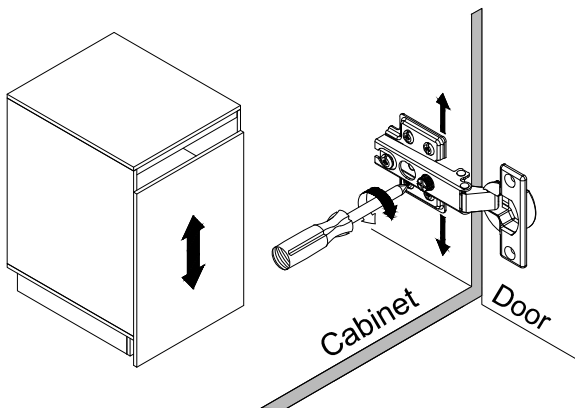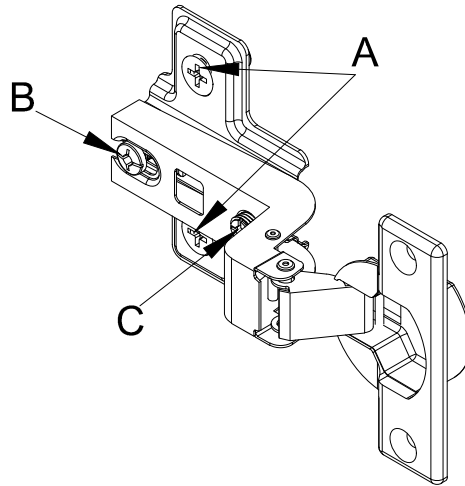


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

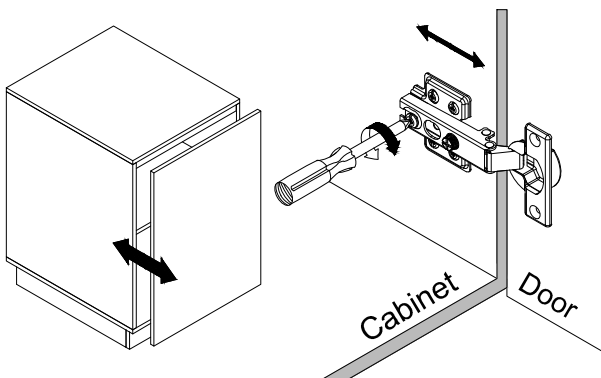

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

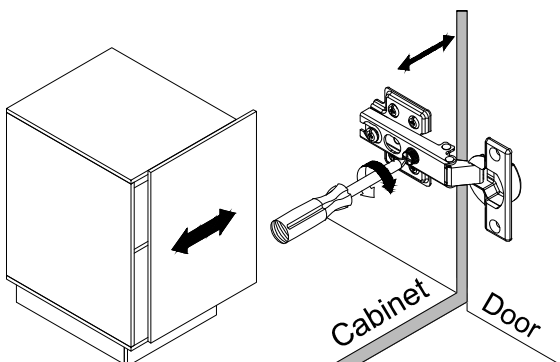

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

STEP35

