









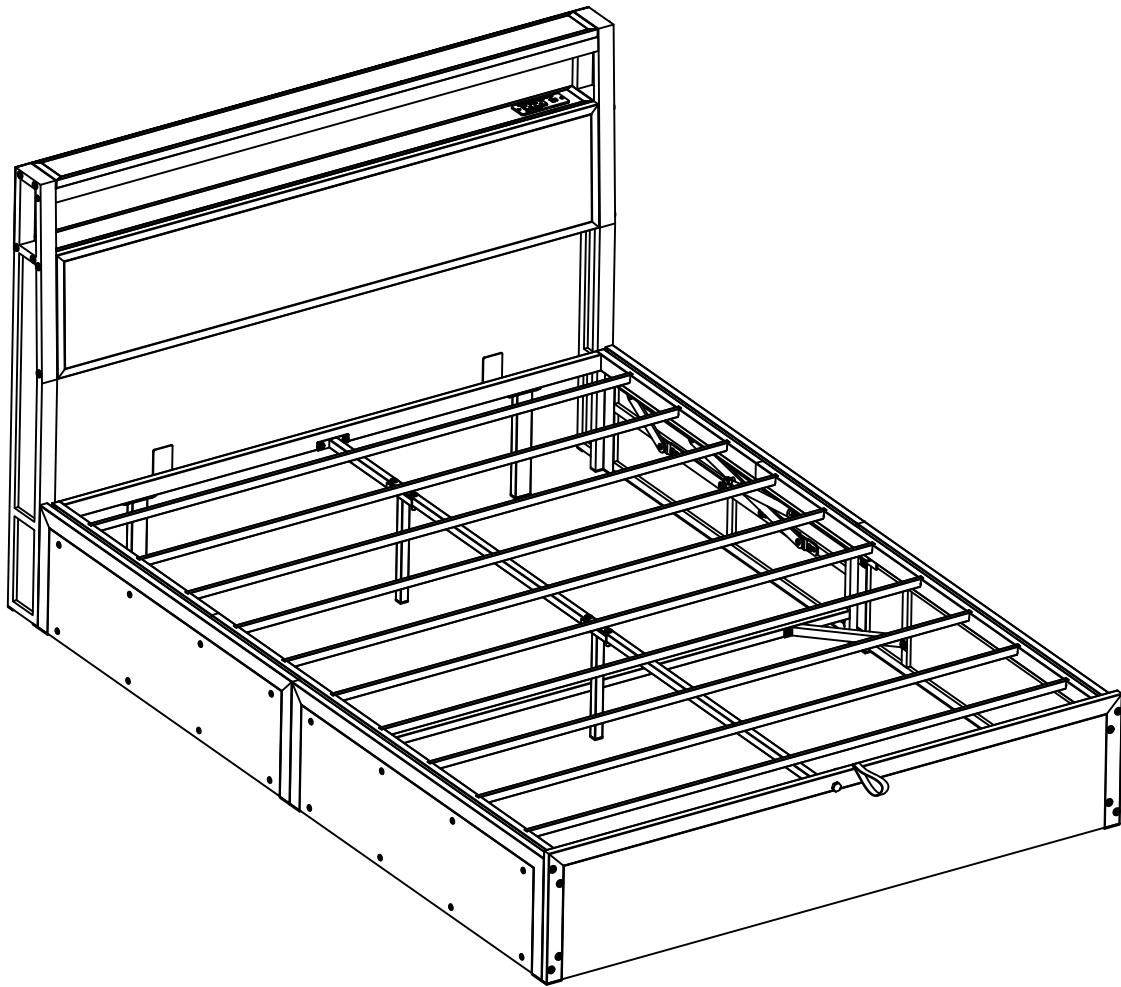









Model:T3963P437369








PRODUCT GUIDE AND INSTALLATION MANUAL



Parts List:

A1  1pcs	A2  1pcs	B1  1pcs
B2  1pcs	C  1pcs	D  1pcs
E1  1pcs	E2  1pcs	F  2pcs
G  2pcs	H1  10pcs	J  2pcs
K  1pcs	L  1pcs	

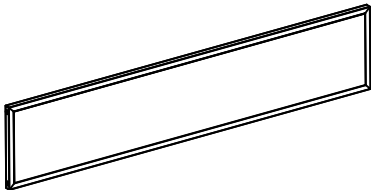M1	1pcs	M2	2pcs	M3	2pcs
					
N	2pcs	O1	1pcs	O2	1pcs
					
O3	1pcs	O4	1pcs	T	1pcs
					
P1	1pcs	Q1	1pcs	Q2	1pcs
					
R1	1pcs	R2	1pcs	R3	1pcs
					

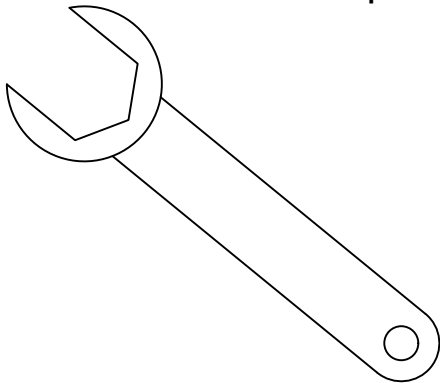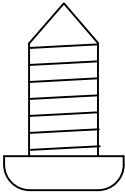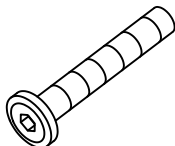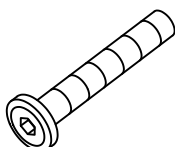
 1pcs			
X10  1pcs	Y  1pcs		
U1  1pcs	U2  M4x10mm 5pcs	V  1pcs	W3  1pcs
X1  M4x30mm 2pcs	X2  M8*1.25mm 4pcs	X3  M8*15mm 37pcs	X4  M8*35mm 24pcs
X5  M8*50mm 12pcs	X6  M8*10mm 4pcs	X7  M6*15mm 4pcs	X8  M6*35mm 2pcs
X9  M6*50mm 2pcs	Some boards have been already attached to the frames		

ASSEMBLY


1


M8x15mm

(X3) x4

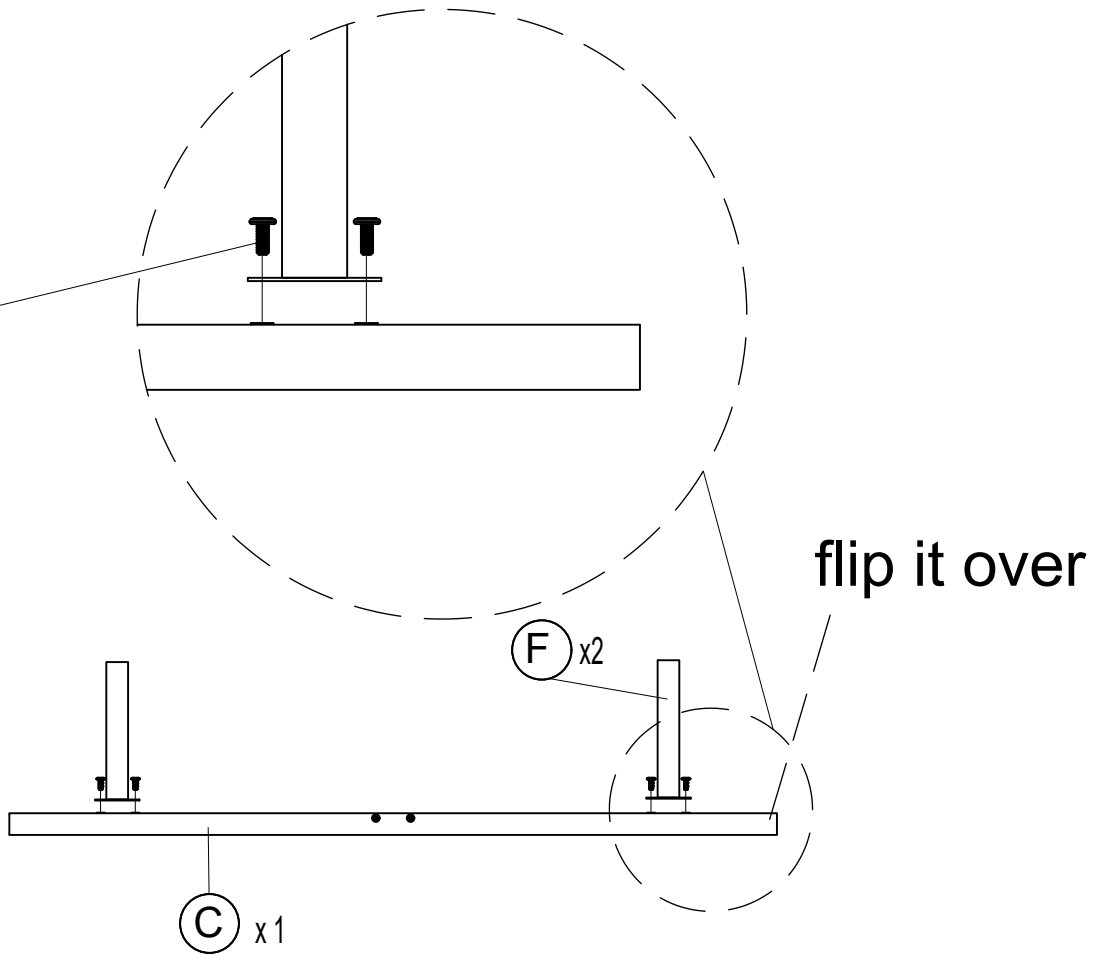

2

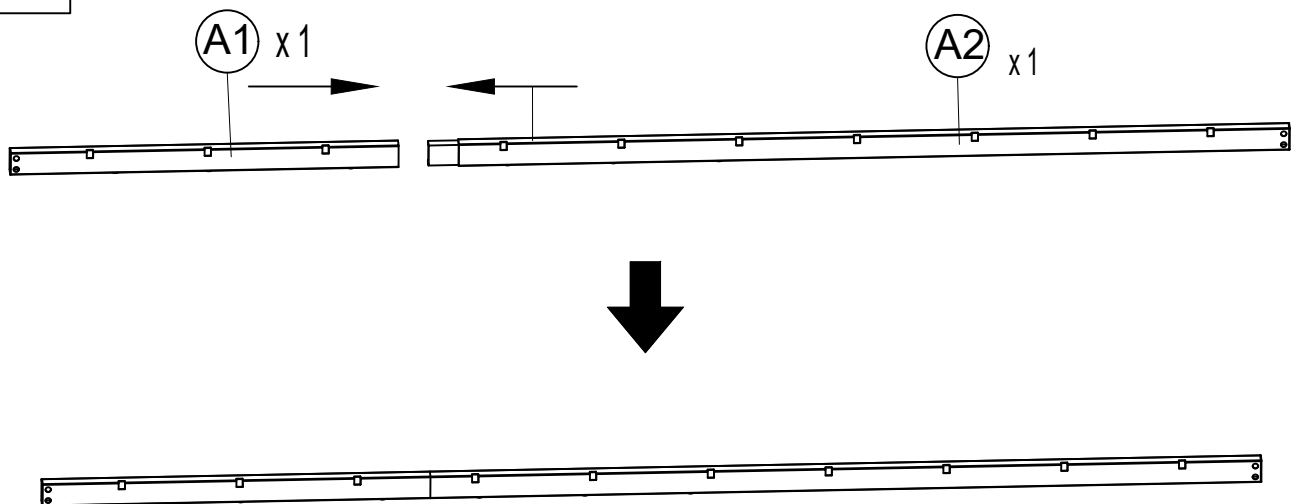

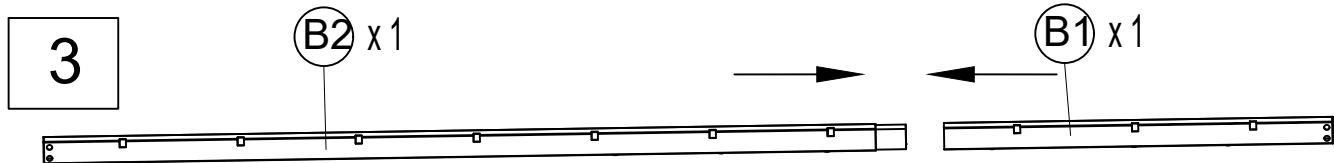

M8x35mm

M8x35mm

4.a

X4 x2

X4 x1

4.b

M8x35mm

E1 x1

G x2

X4 x1


E1 x1

E2 x1

G x2


6

5

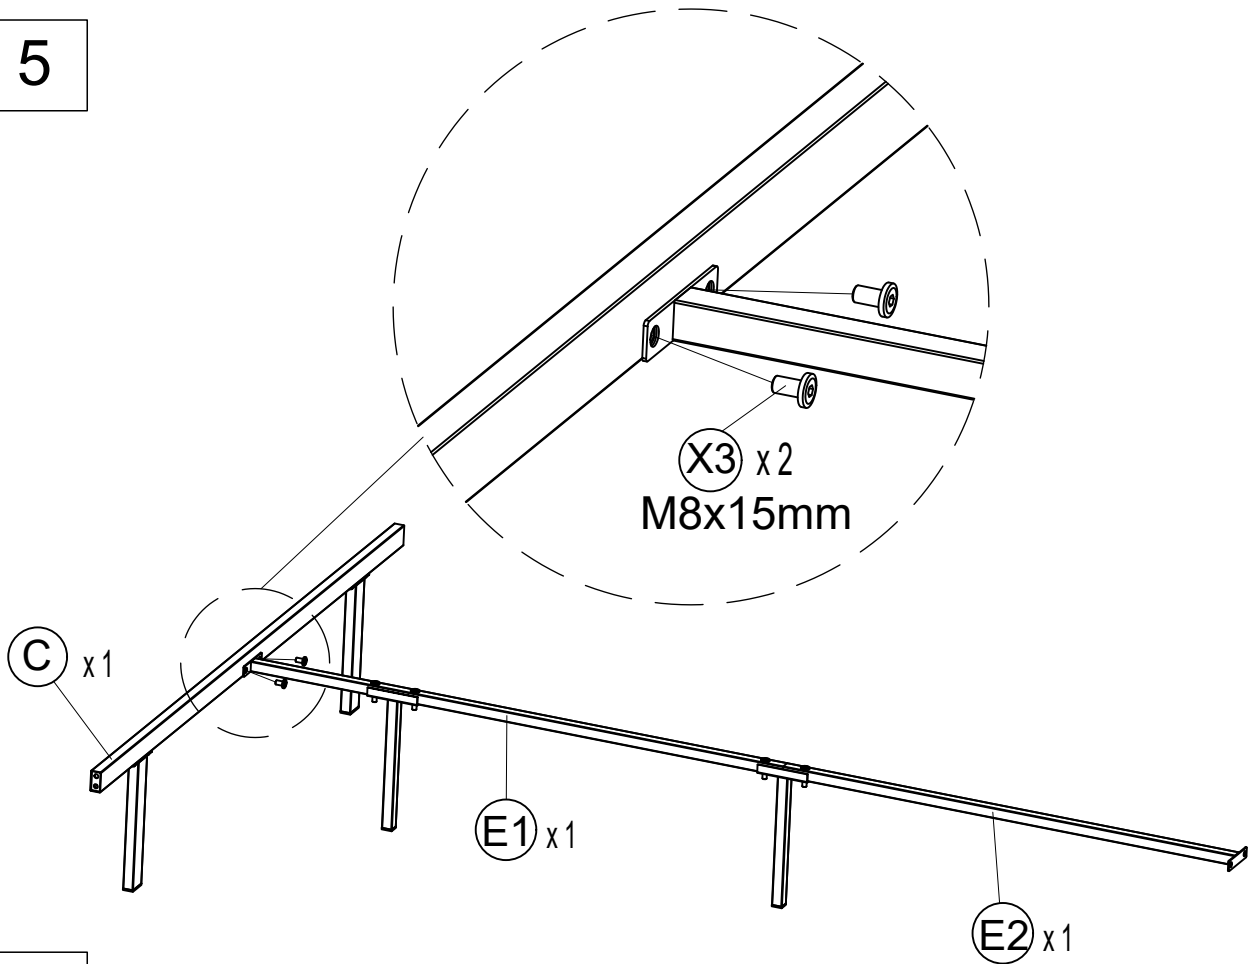



6

flip it over

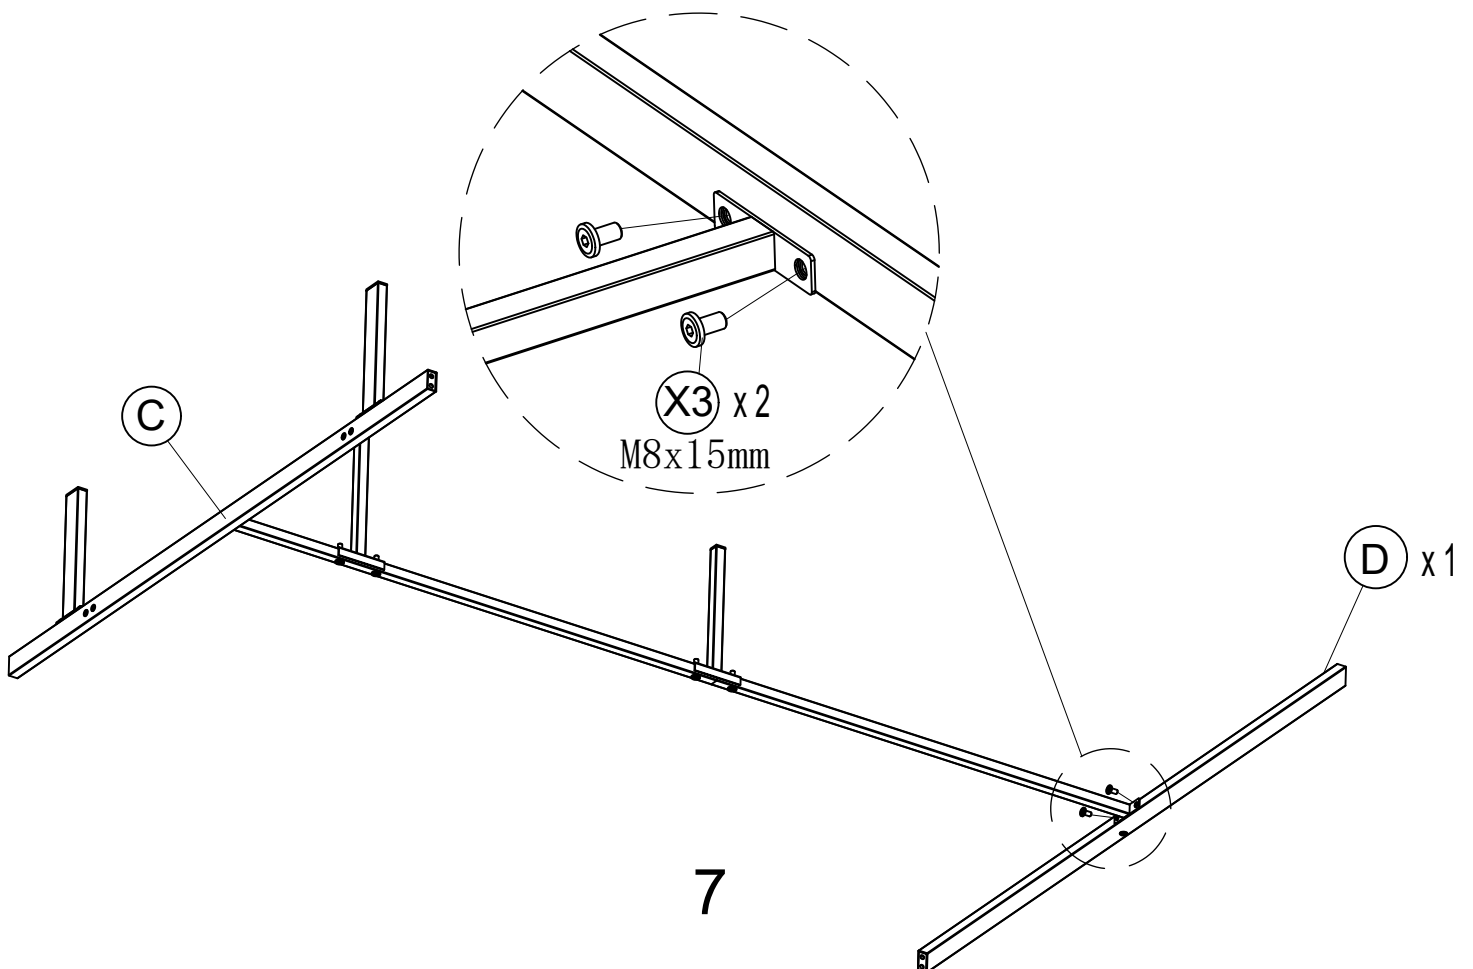


7


Note: the direction of the bed legs is up

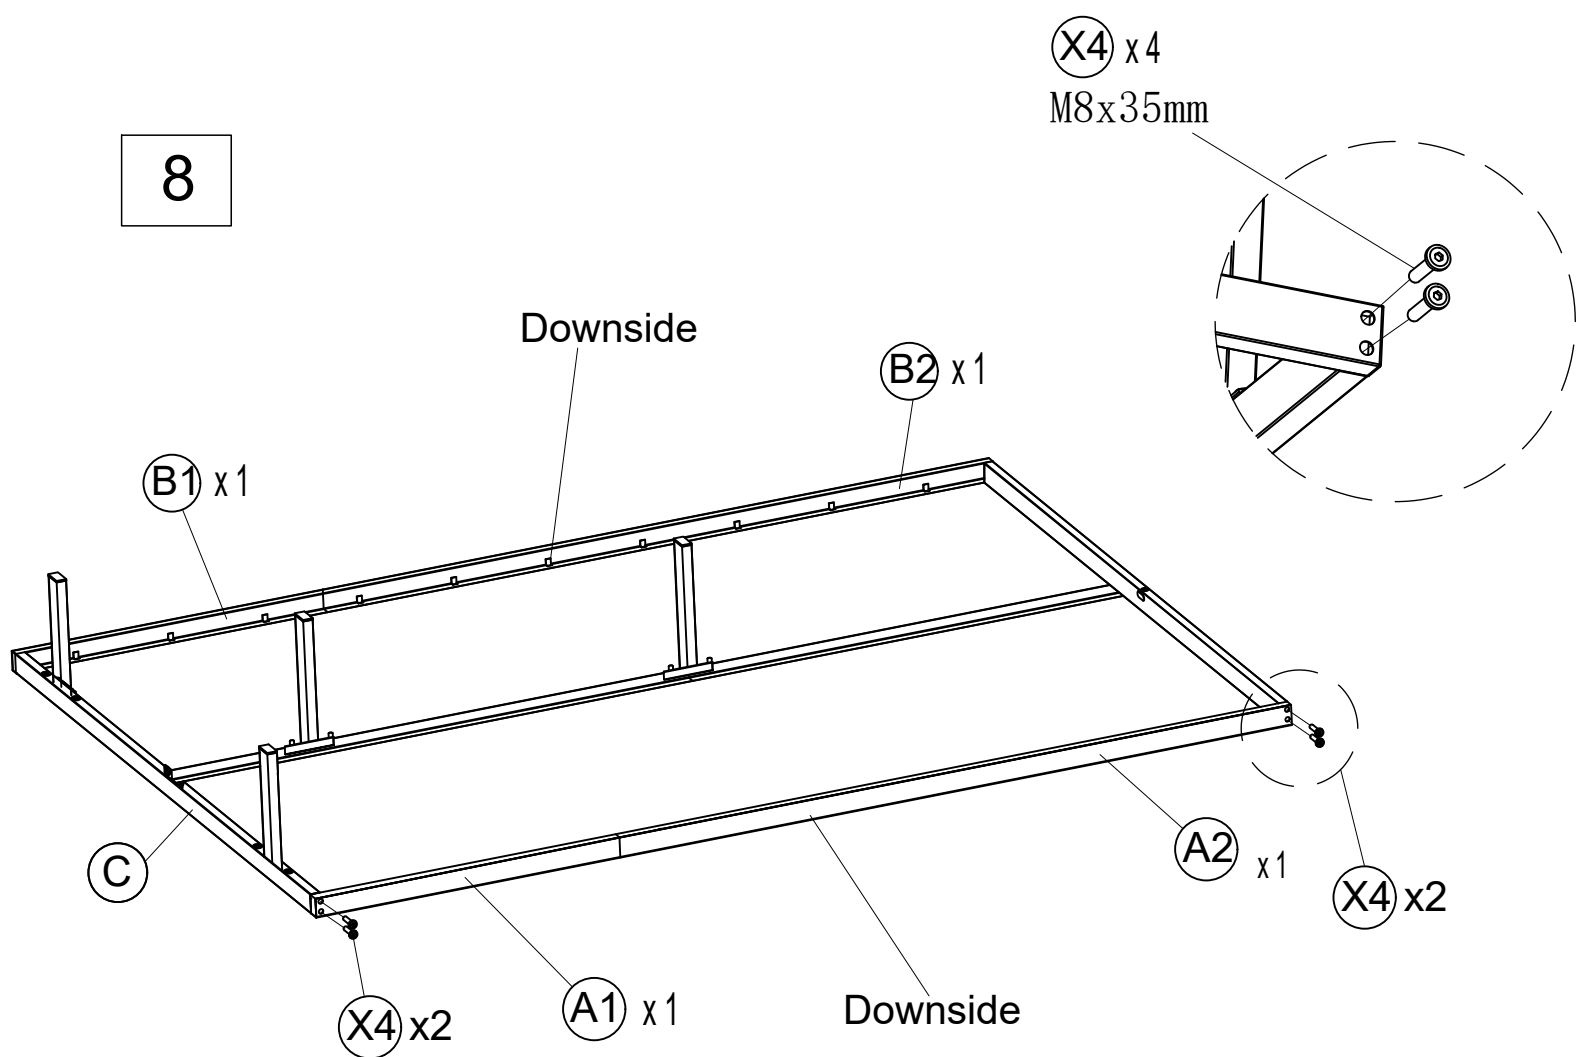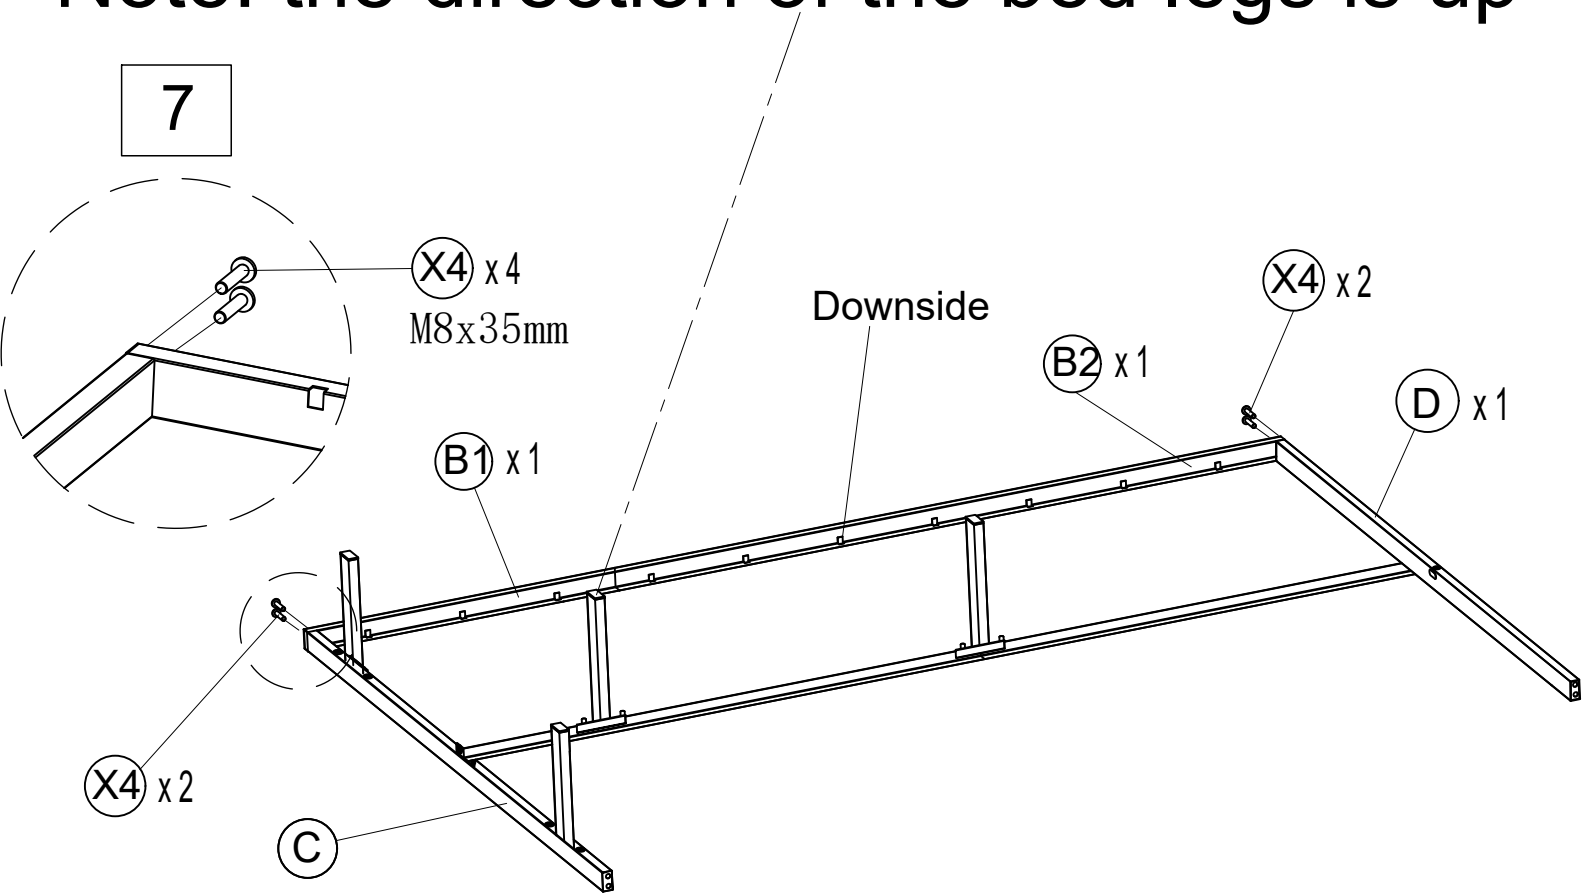

9

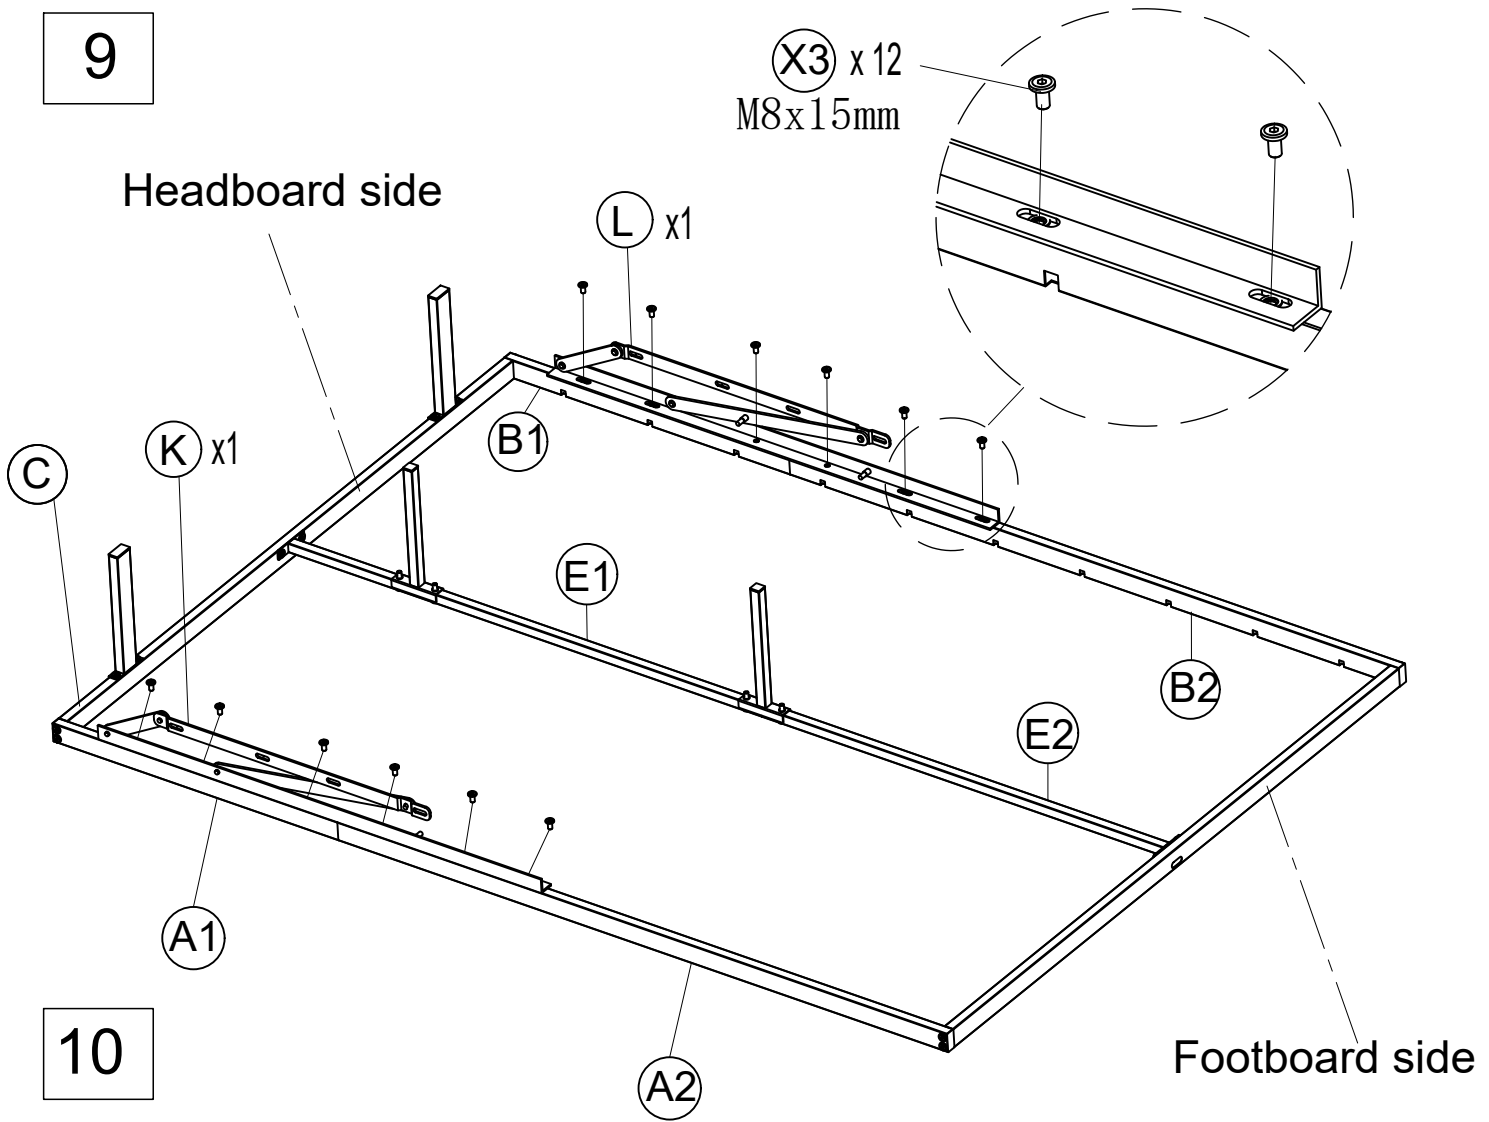


10

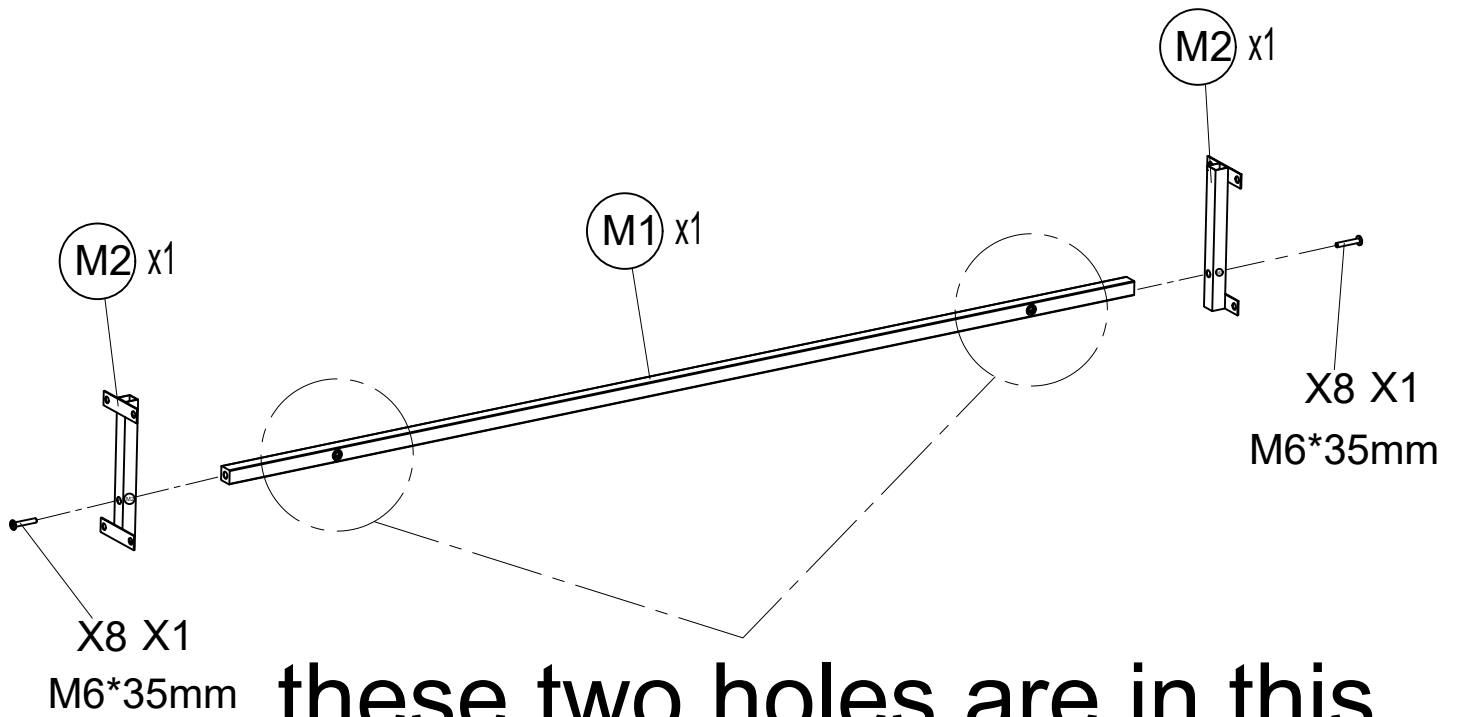


these two holes are in this
direction 9


11

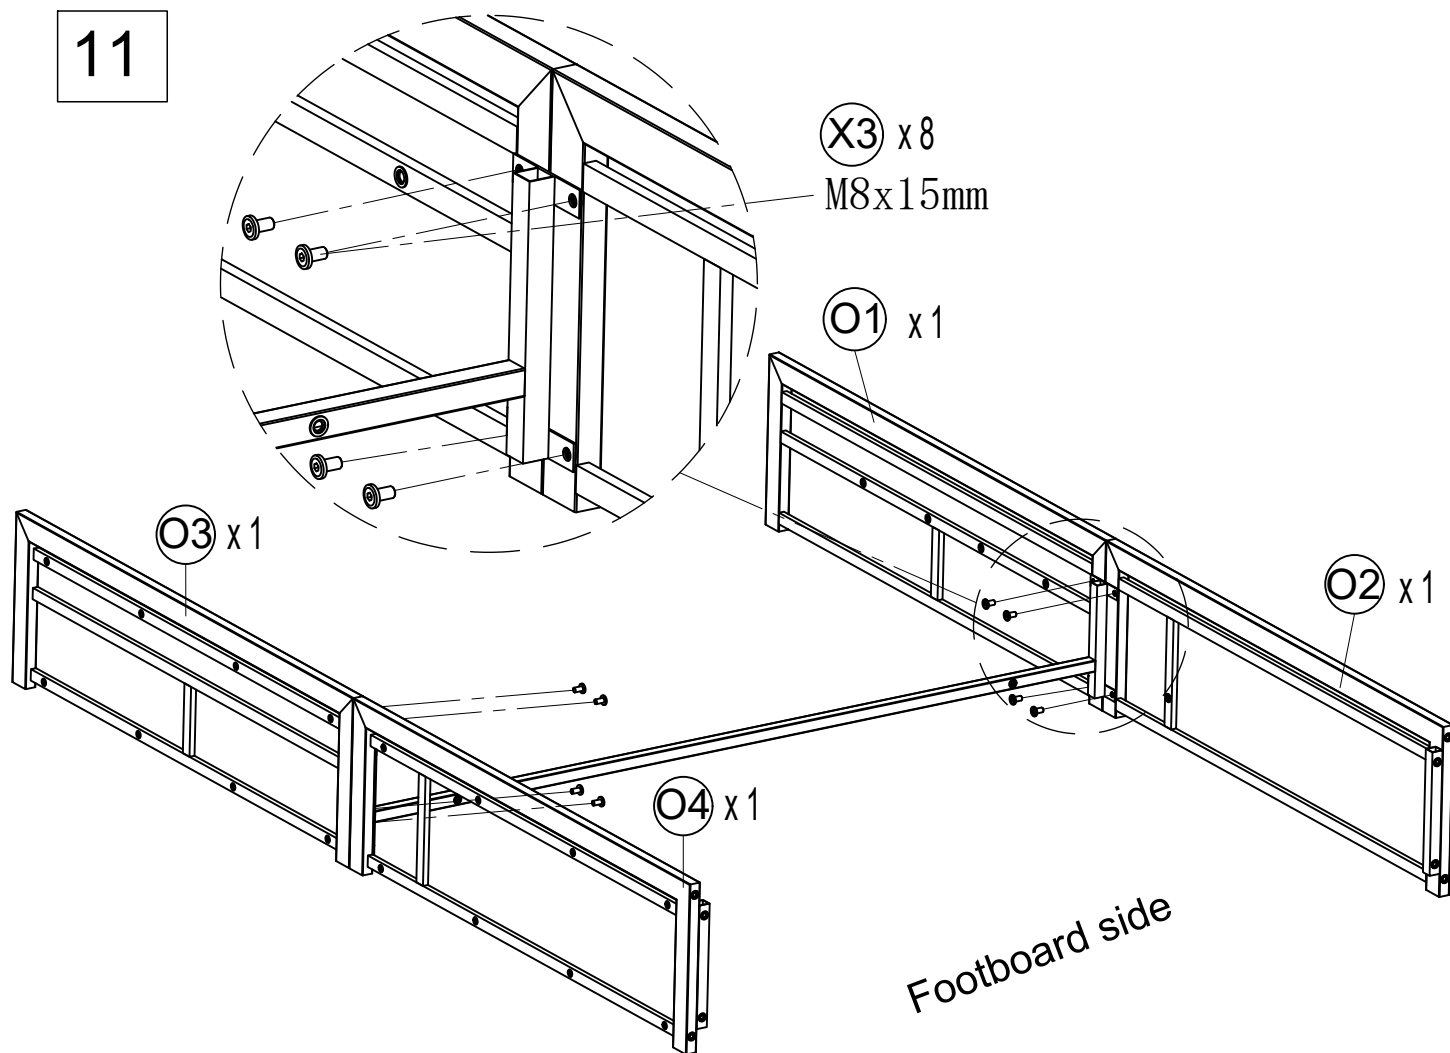


12

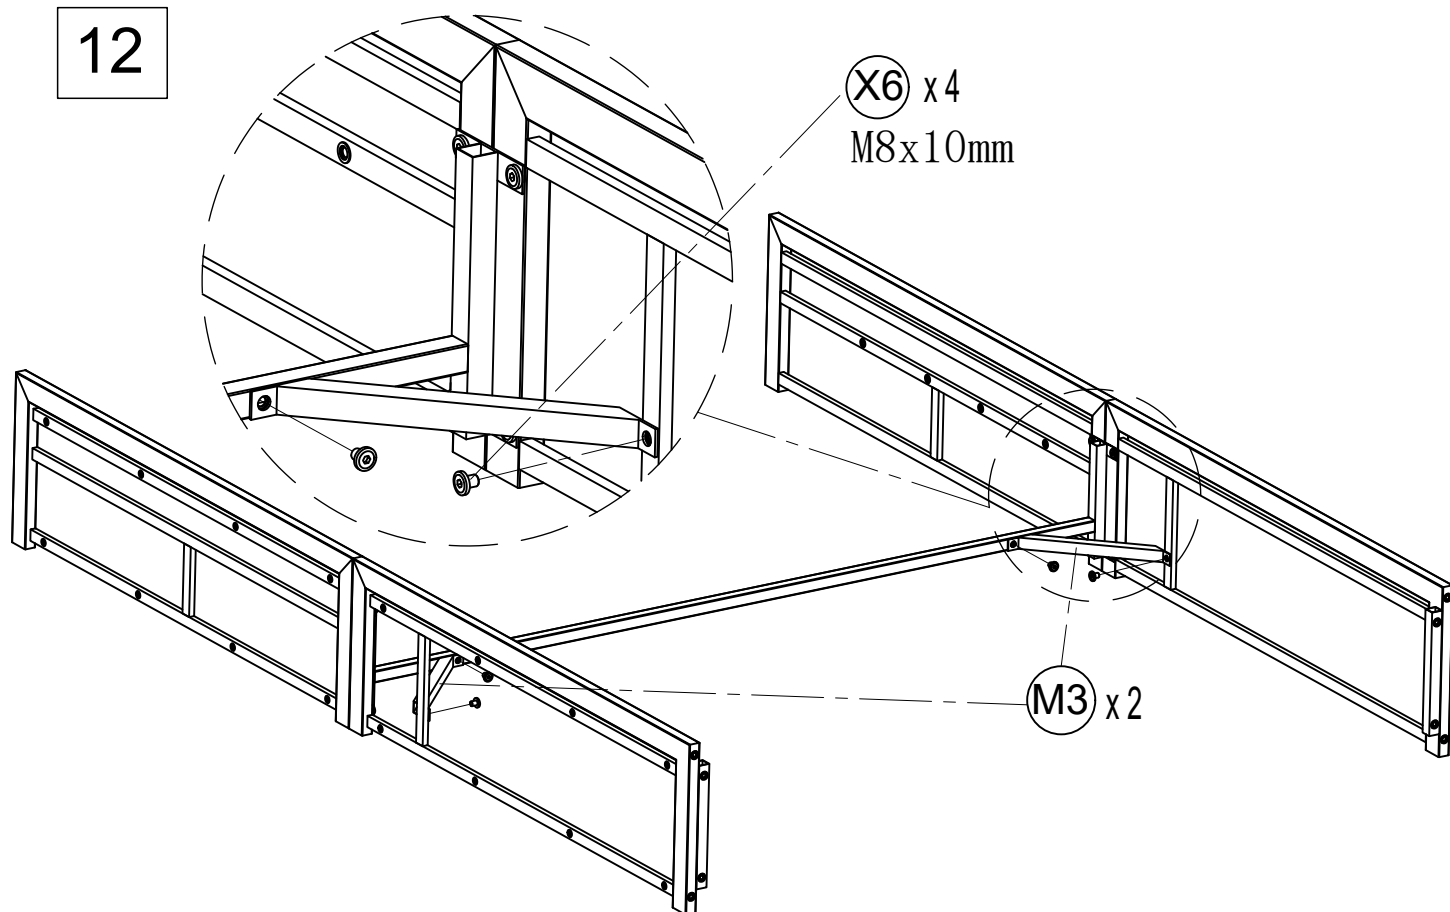


13

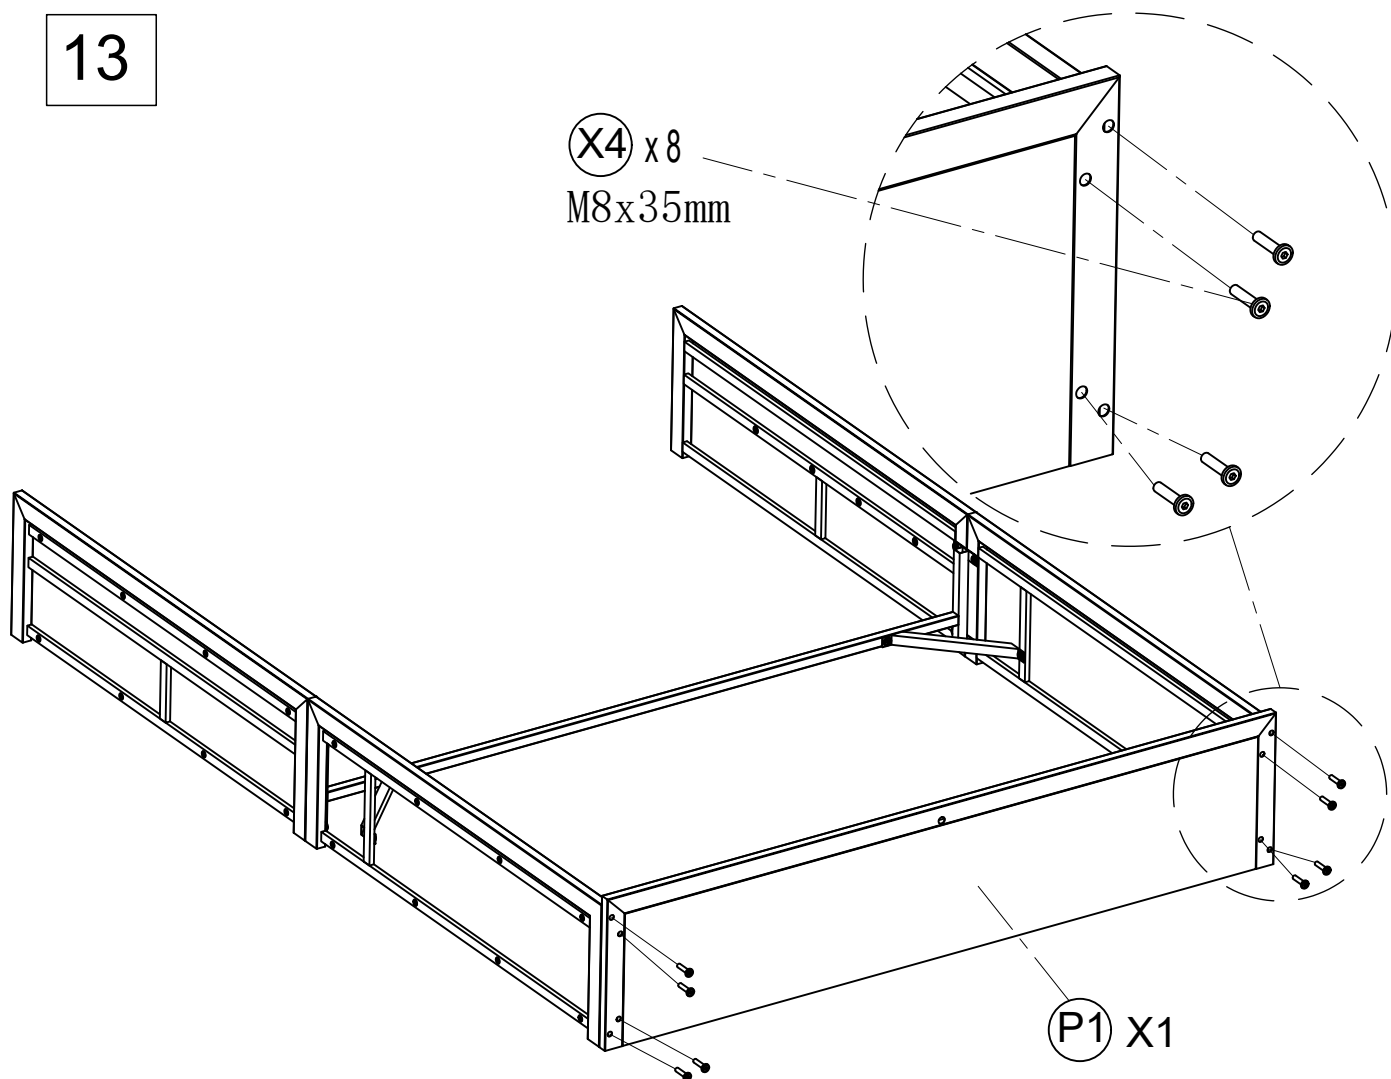

14

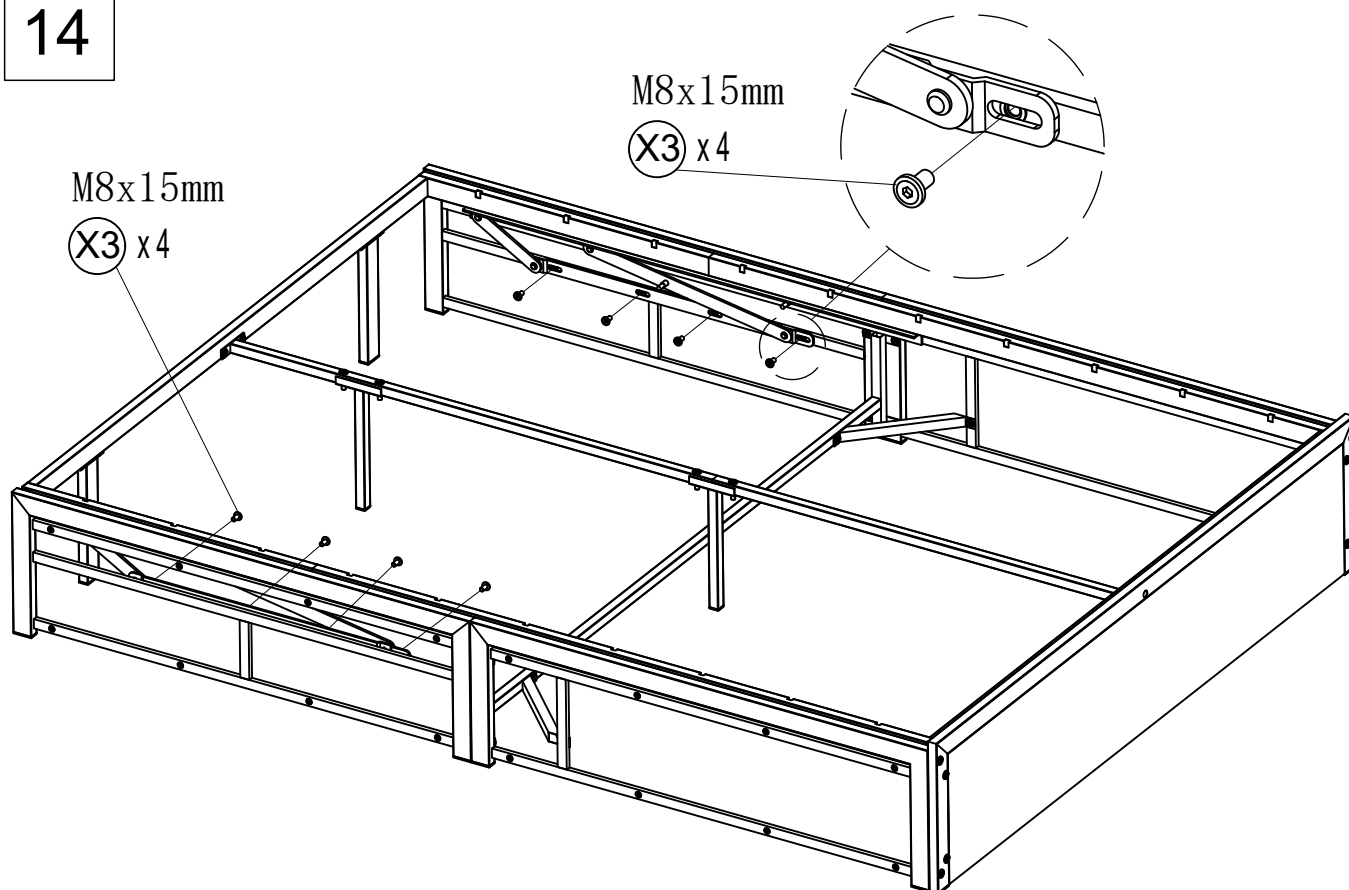


15

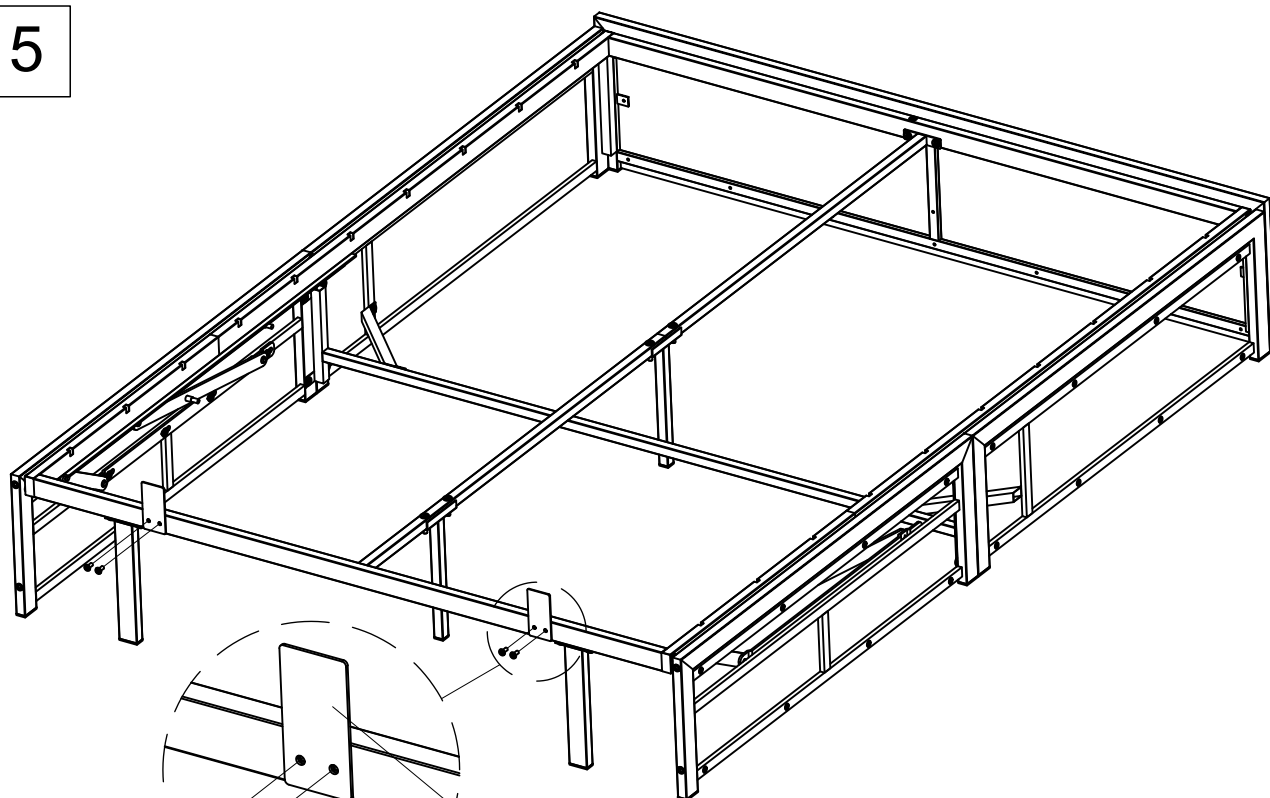

(X7) X4
M6*15mm

(N) x2

16

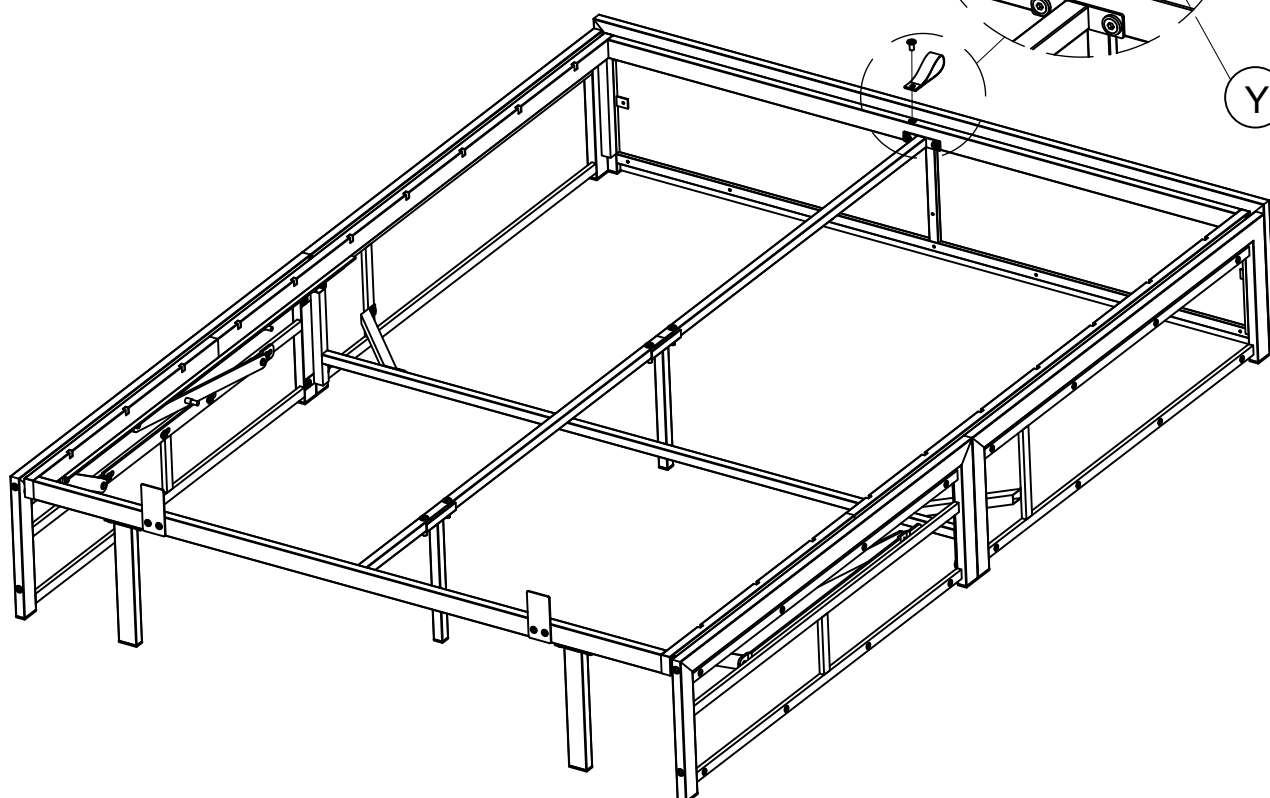


(X3) x1
M8x15mm


(Y) x1

12

17

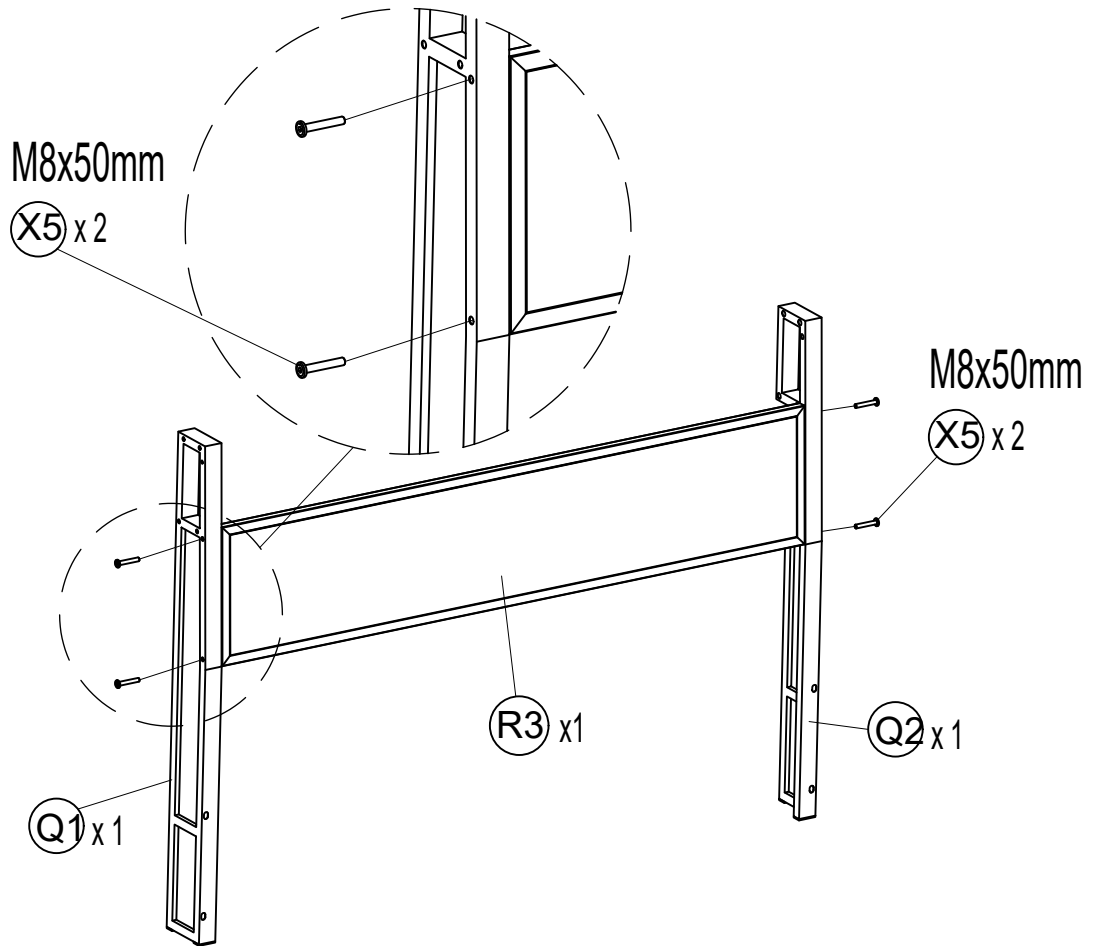


18

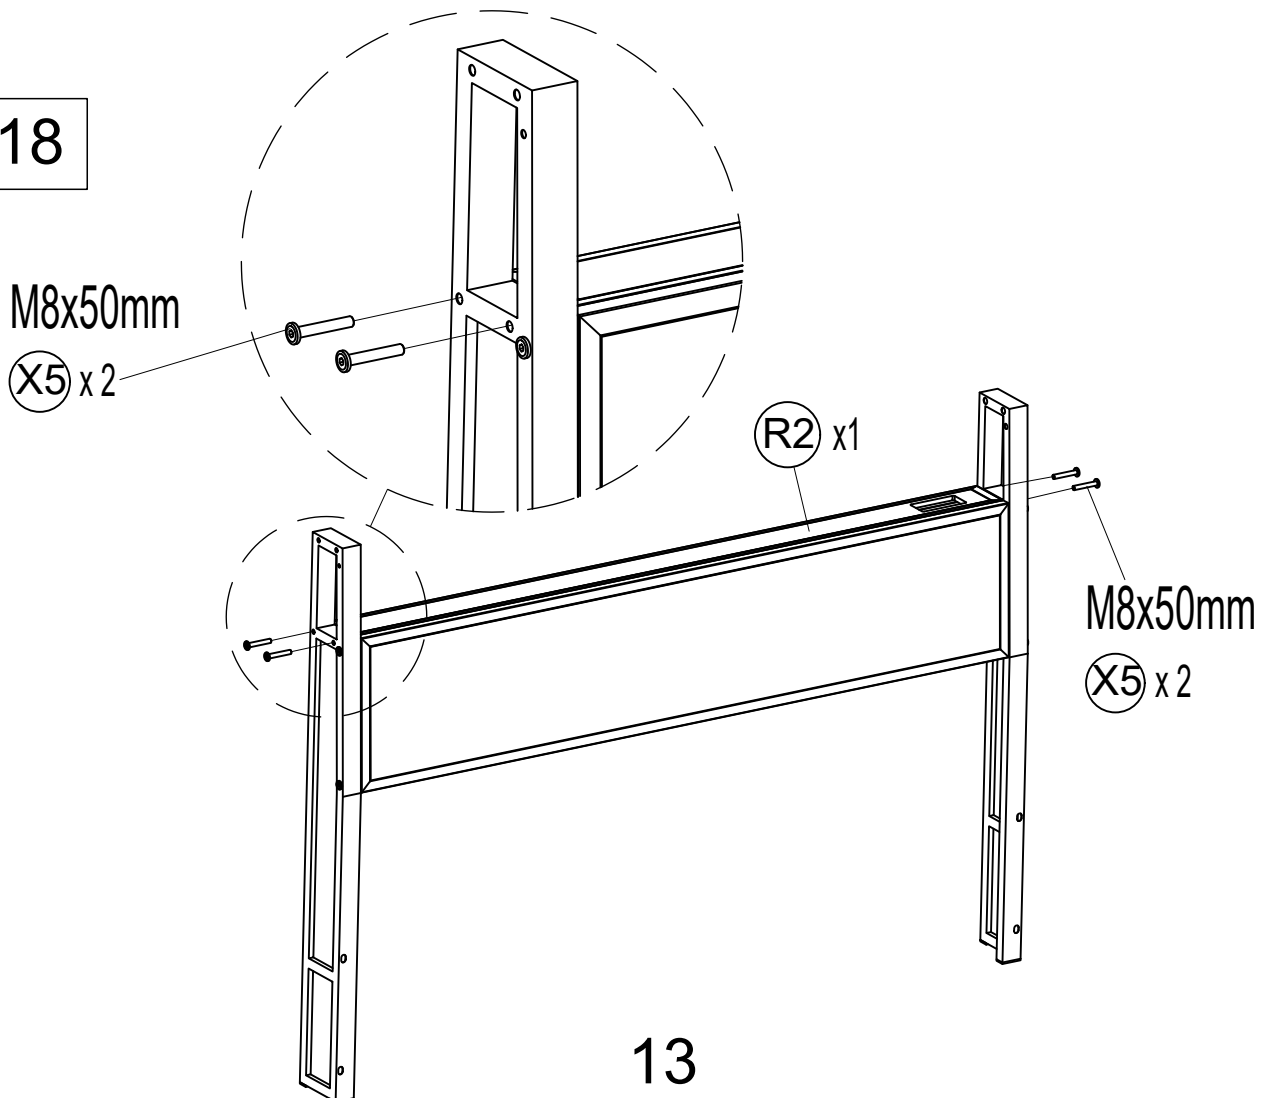


We suggest using drill machine to install U2 screws

19

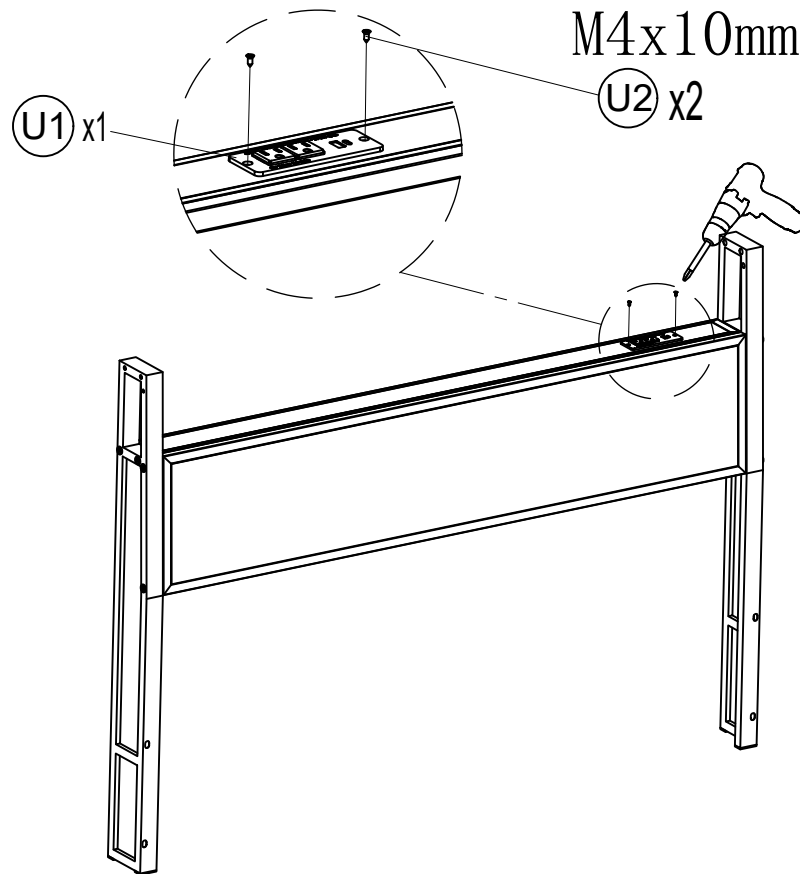


20

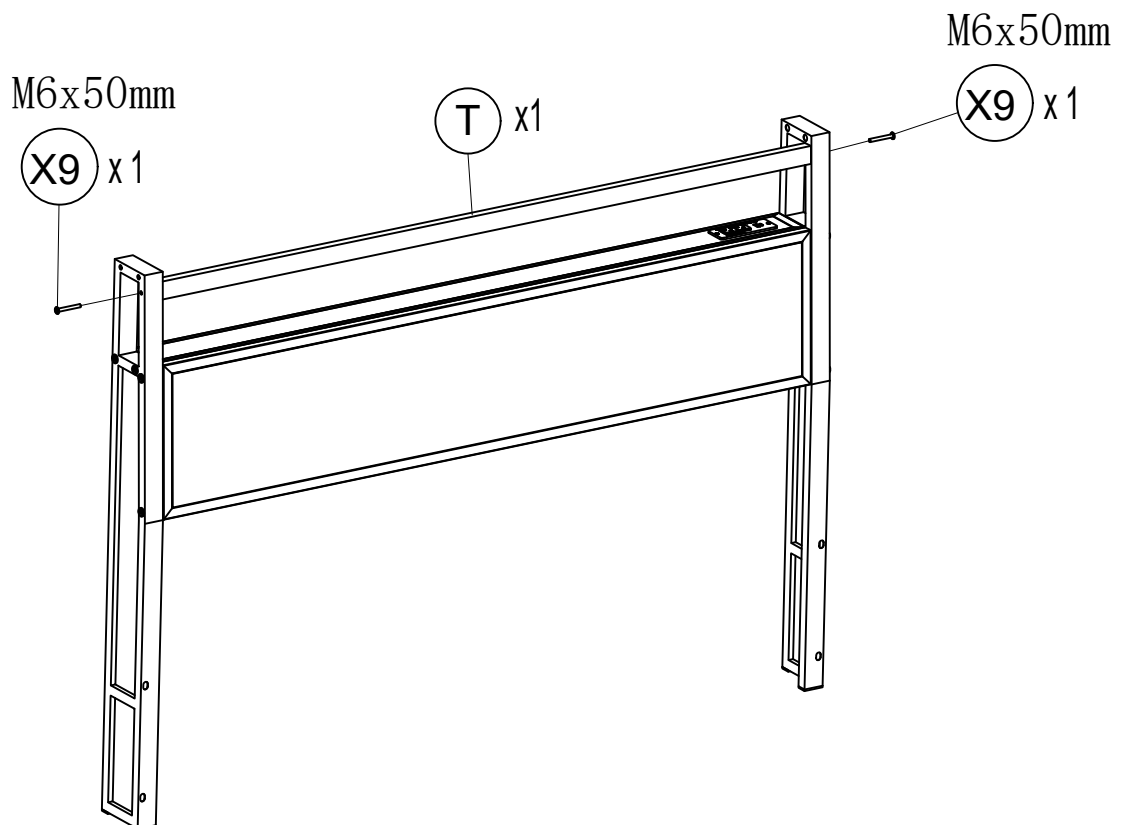


Tear off the double-sided adhesive tape on **W3**


21

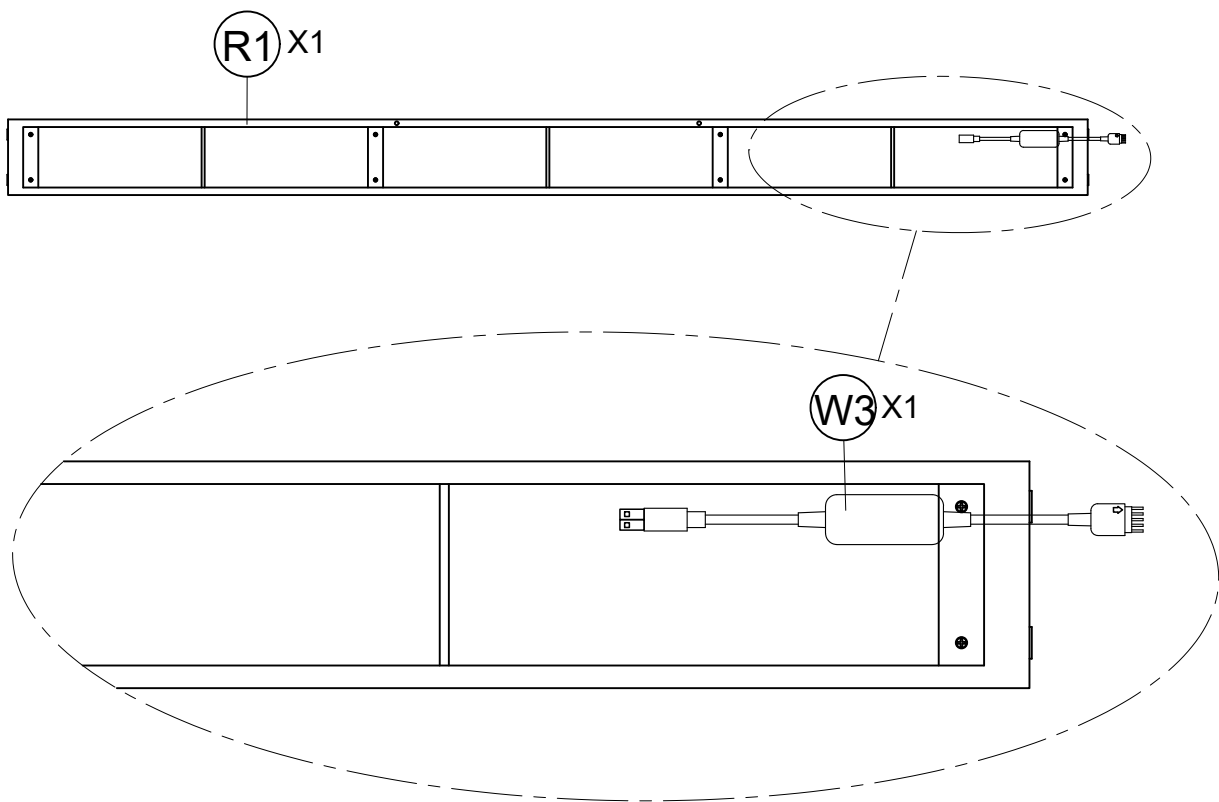

22

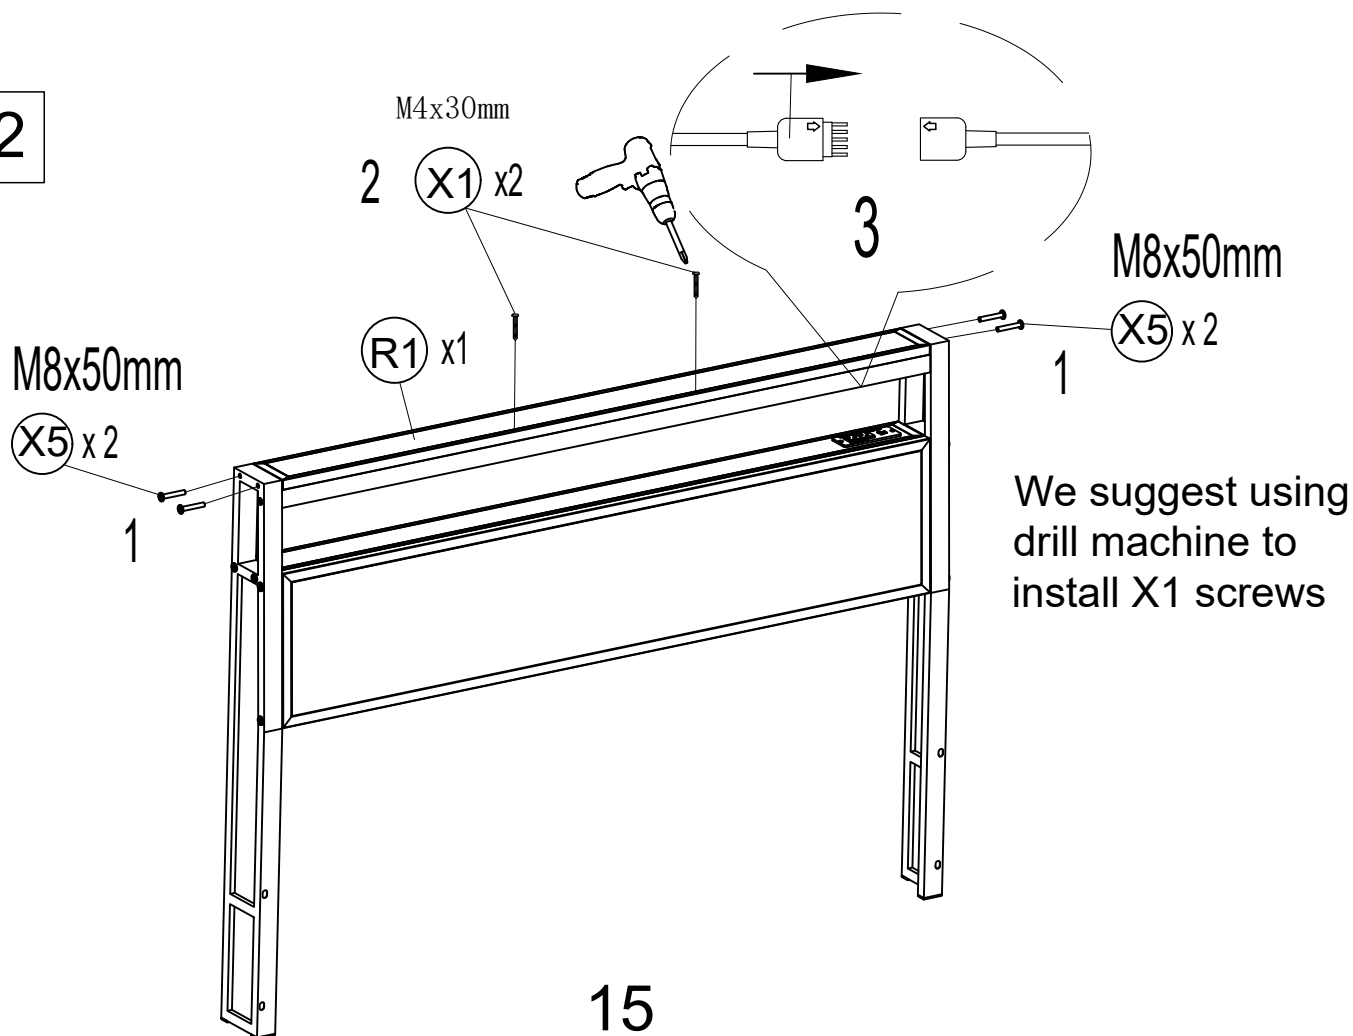

23

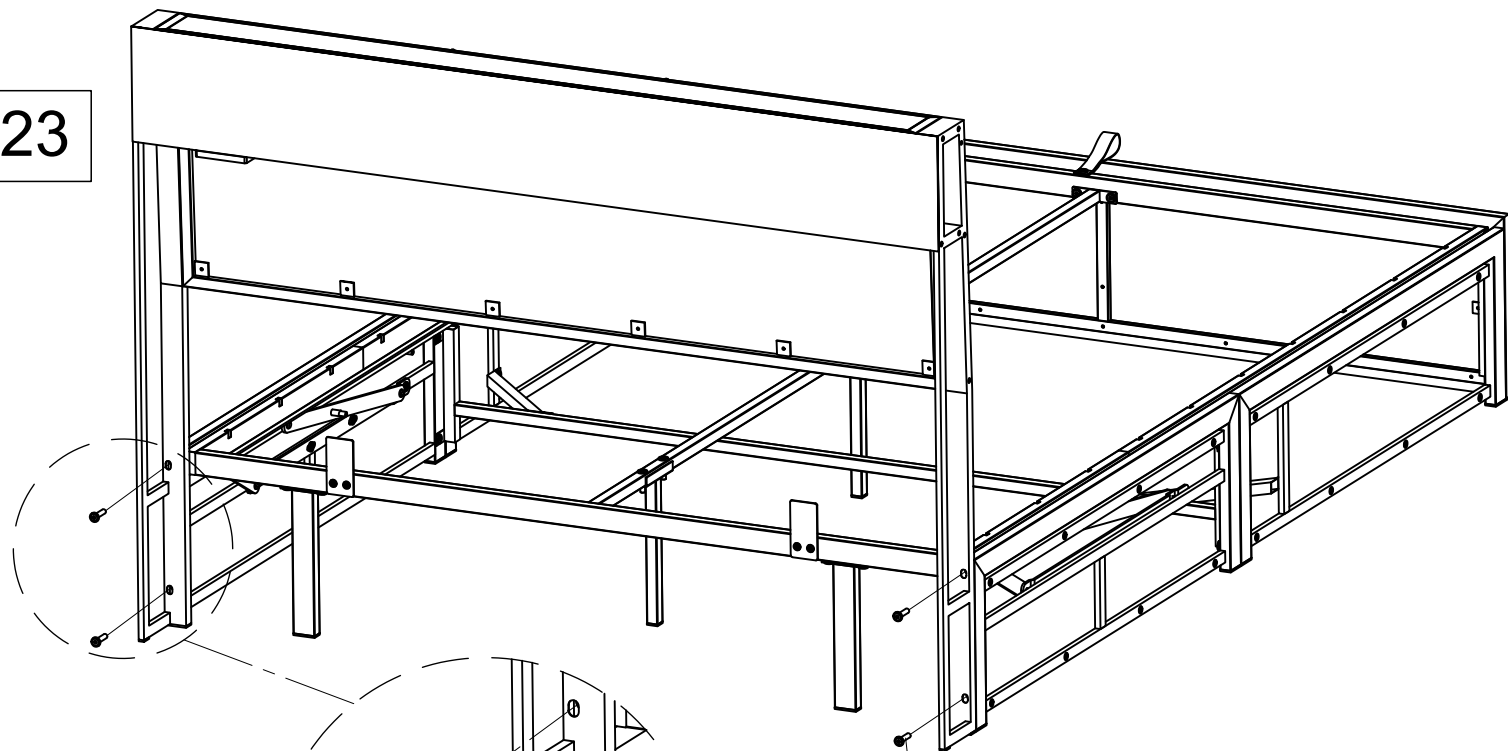


X4 x2
M8x35mm

X4 x2
M8x35mm

X2 x2
M8*1.25mm

24

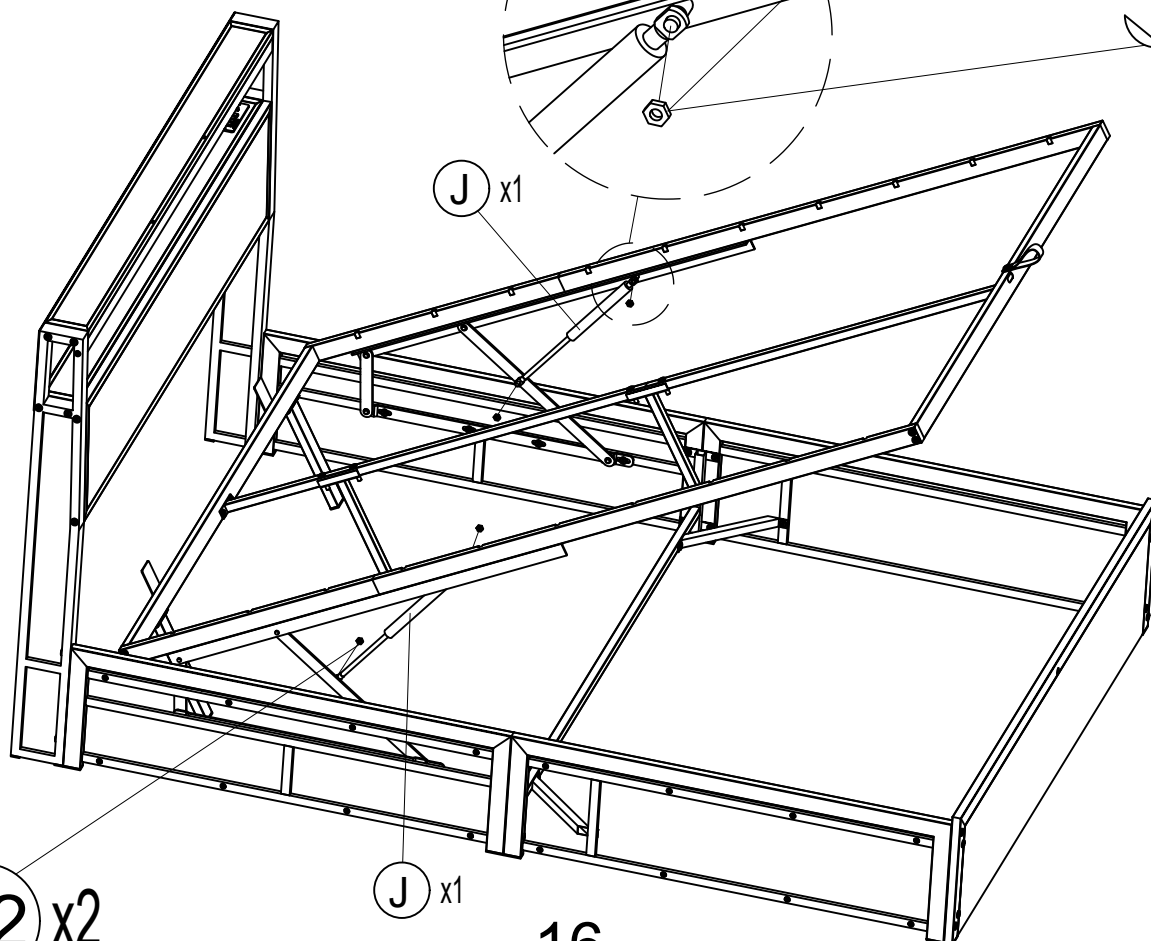


X2 x2


M8*1.25mm

J x1

16

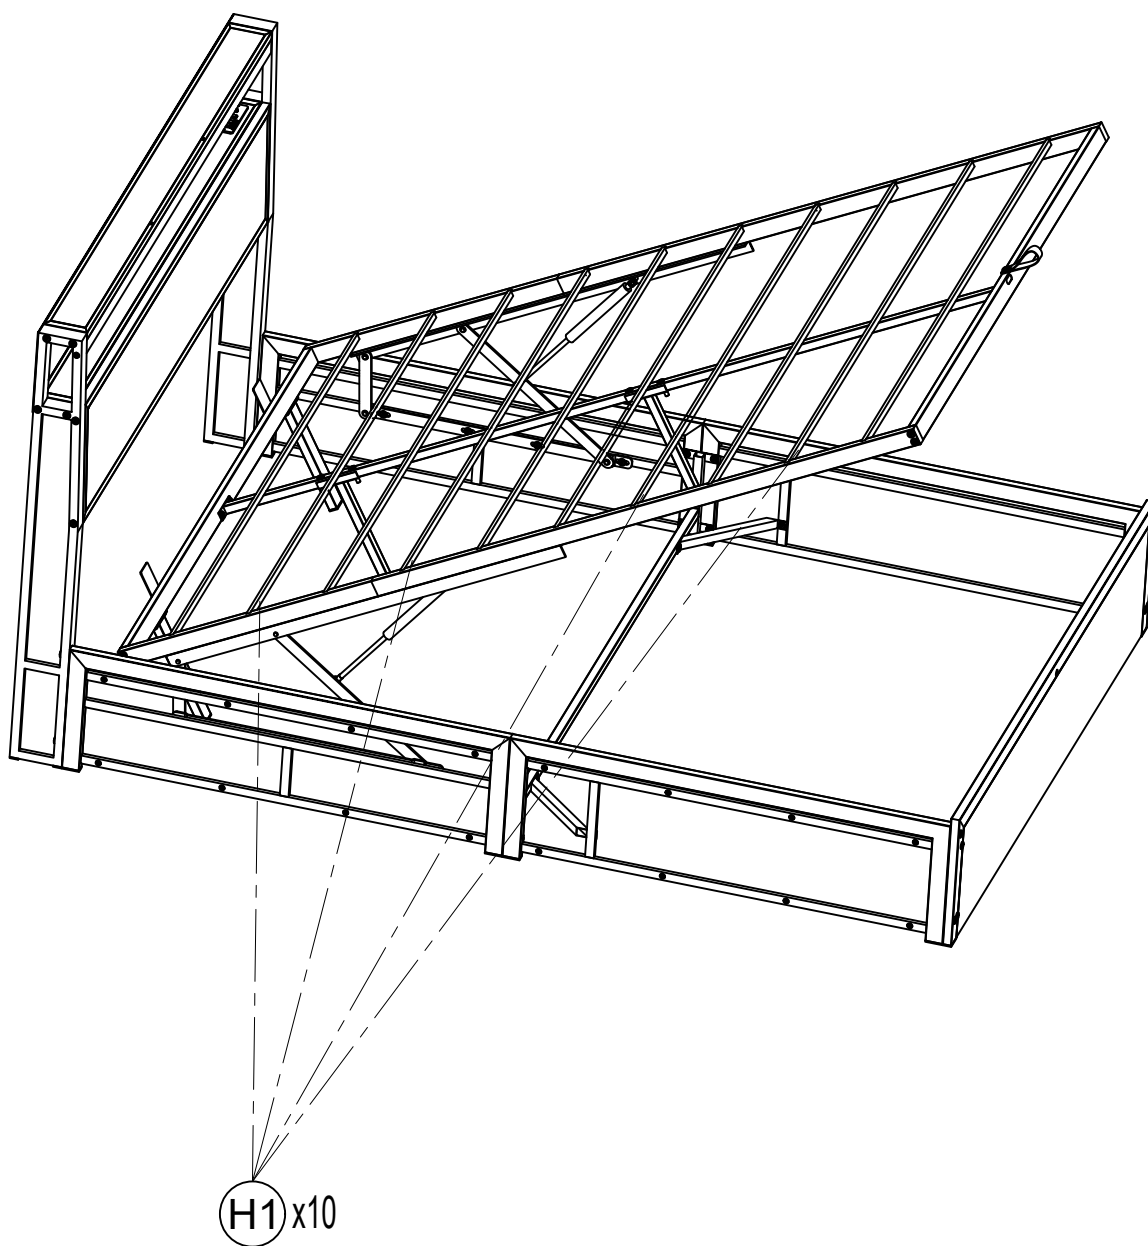

We recommend placing the mattress on the bed frame first so that you can close the frame more smoothly

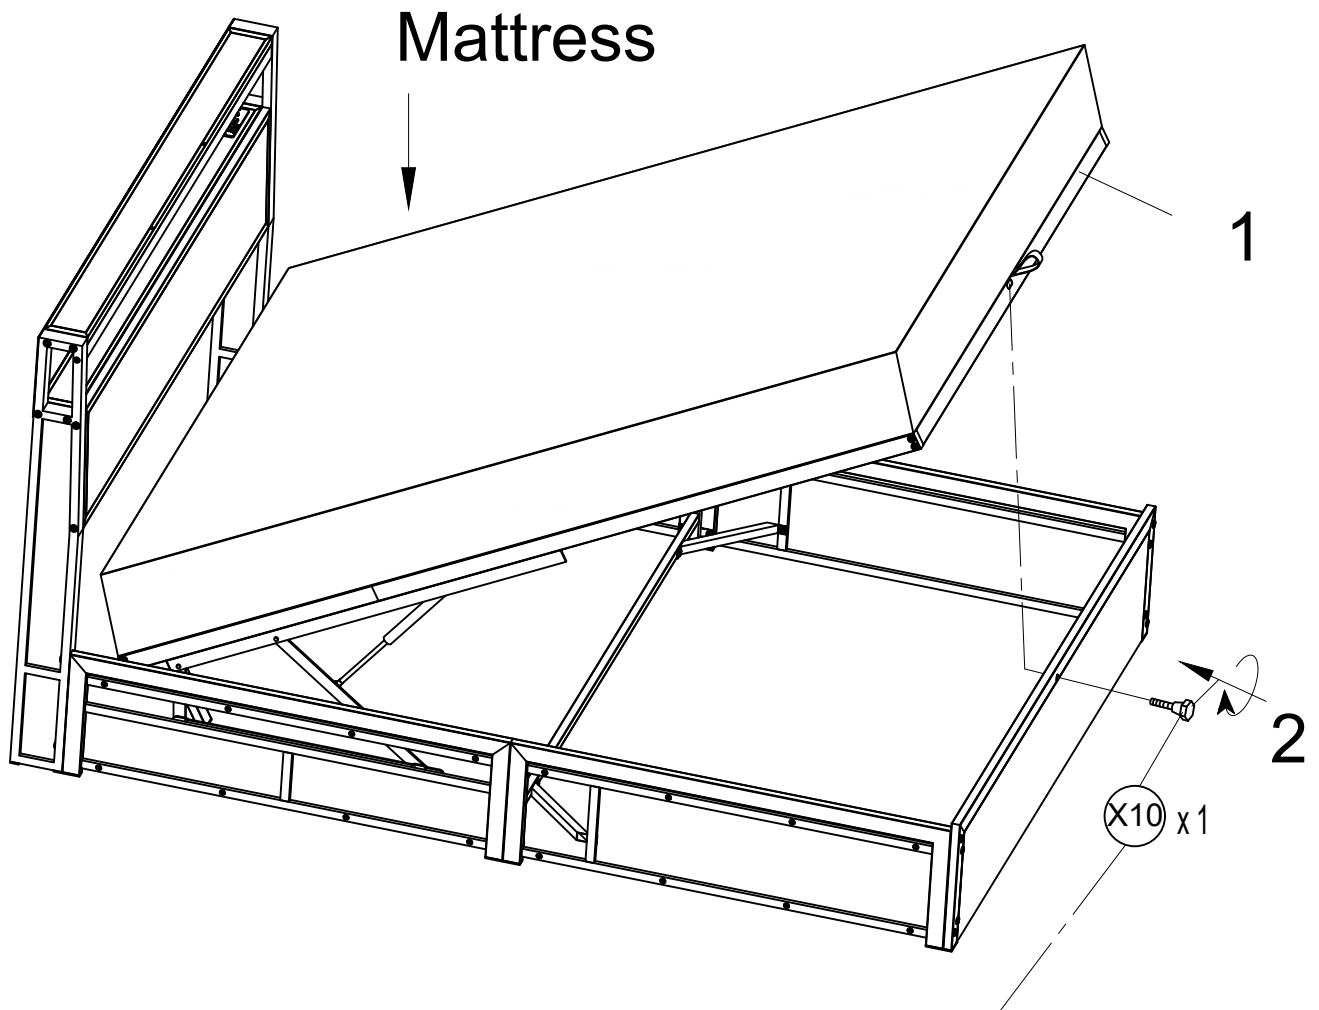

X10 prevents the bed frame from turning up suddenly.

RGB(W) CONTROLLER

