


Installation Instructions

Method 2: Drilling Installation

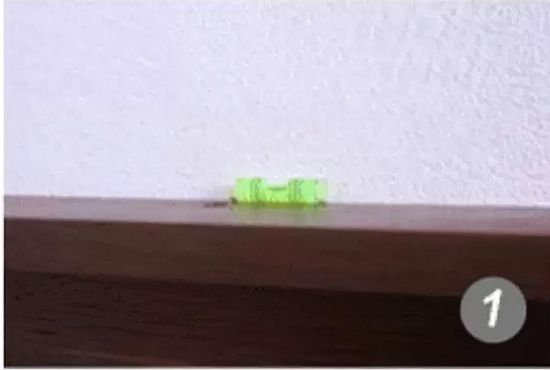

1. Place the product on the wall and ensure it is level.



2. Mark the positions of the two mounting brackets on the wall with a pen.



3. Use a 6mm drill bit to drill holes at the marked positions, with a depth of approximately 5cm.



4. Insert the expansion anchor tubes into the holes.



5. Screw the screws into the expansion tubes.



6. Attach the wooden shelf onto the expansion screws.