

# INSTALLATION OF NON-WOVEN PAPER BACK WALLCOVERING MATERIAL

PANEL SIZE: WIDTH:104CM(41”) / LENGTH: UNLIMITED    WEIGHT: 300 GR / M<sup>2</sup>    SURFACE: VNYL COATED


## 1. CHECKING THE PRODUCT

Check the panel number and pattern before applying the wallpaper adhesive. First, lay panels down on a flat surface and ensure the panel patterns match with each other. Then, apply the adhesive at the back side of wallpaper.




## 2. APPLYING THE PRODUCT

After you apply the first panel, match the pattern with second panel (Repeat steps for remaining panels)

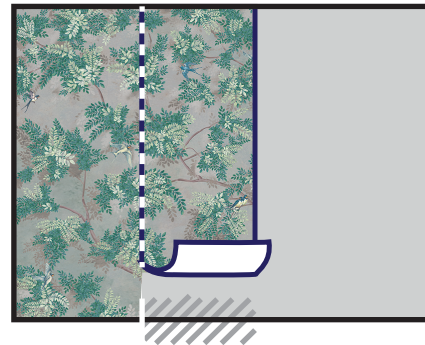


## 3. REMOVE THE EXCESS

Apply the remaining panels and cut off the excess material with a craft knife.

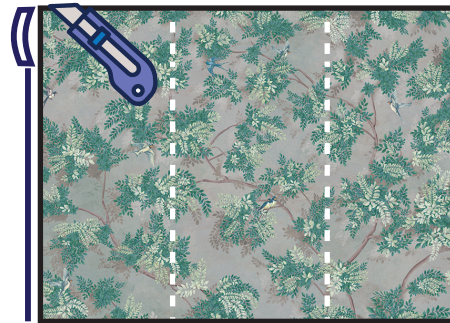

## 4. COMPLETING THE INTALLATION

Apply the panel onto the wall using a soft dry cloth or a rubber squeegee. Work from top to the bottom taking extra care not to overwork each panel.

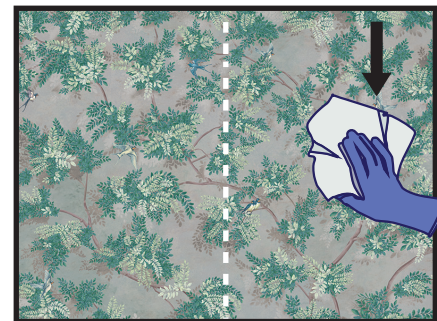

## USEFULL TIPS FOR THE INSTALLATION

Make sure the wall surface is clean and smooth.

During the installation, the adhesive must be evenly applied between the wall and the product by using a spud or a brush. After wallpaper adhesive, installation of the product must be finished in 10-20 min.

Since the placement of the first panel determines the overall look for the finished mural, take extra time and care to place in accurately. Use a level and a plumb line.

First make sure the pattern matches on the joint line without overlapping. Then hand the remaining panel same way. Take extra care to make sure not to get adhesive on the patterned side whilst joining the edges. Hard objects like spuds and rollers can harm the surface of the product. They must be used with extra care.

## RECOMMENDED TOOLS

 Bucket     Cutter     Ladder     Roller and tray  
 Paintbrush     Smoothing tool

