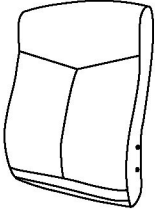
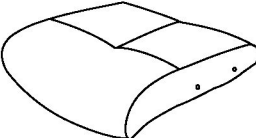

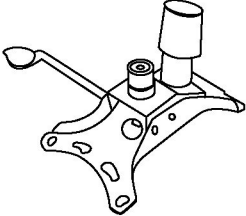
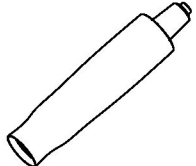

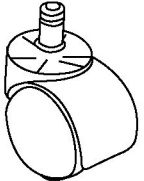



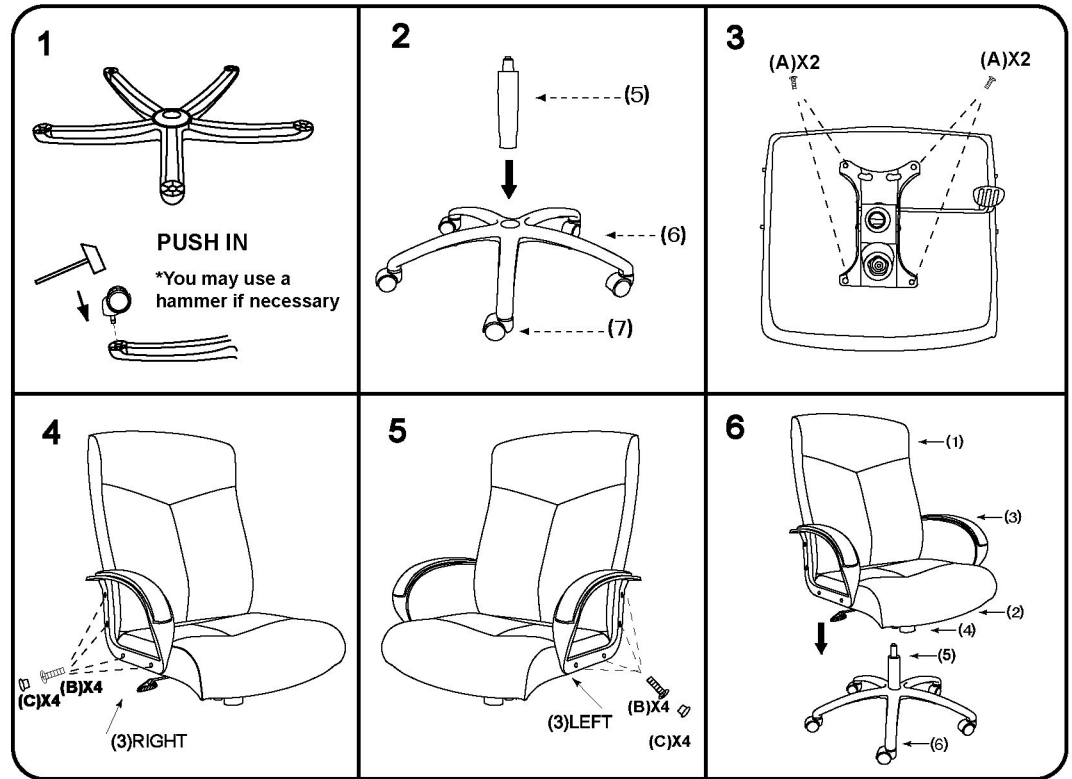


(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
(4)x1	(5)x1	(6)x1
		
(7)x5		
		

Please unscrew all screws from cushion before assembly.

- | | | |
|-------|---|---------|
| (A)x4 |  | M8*22 |
| (B)x8 |  | M6*25 |
| (C)x8 |  | ARM CAP |



PUSH IN
*You may use a hammer if necessary

It is important to assemble all parts so that the directional "Arrows" point in the same direction. Make certain that all screws are FULLY tightened before using the chair. Each month, check all screws and tighten any that may have loosened.

62 BEACONSFIELD STREET BEDFORD MK41 7SD TEL: 01234 328804 FAX: 01234 342446

Sales@teknikoffice.CO.UK

