
ASSEMBLY INSTRUCTION

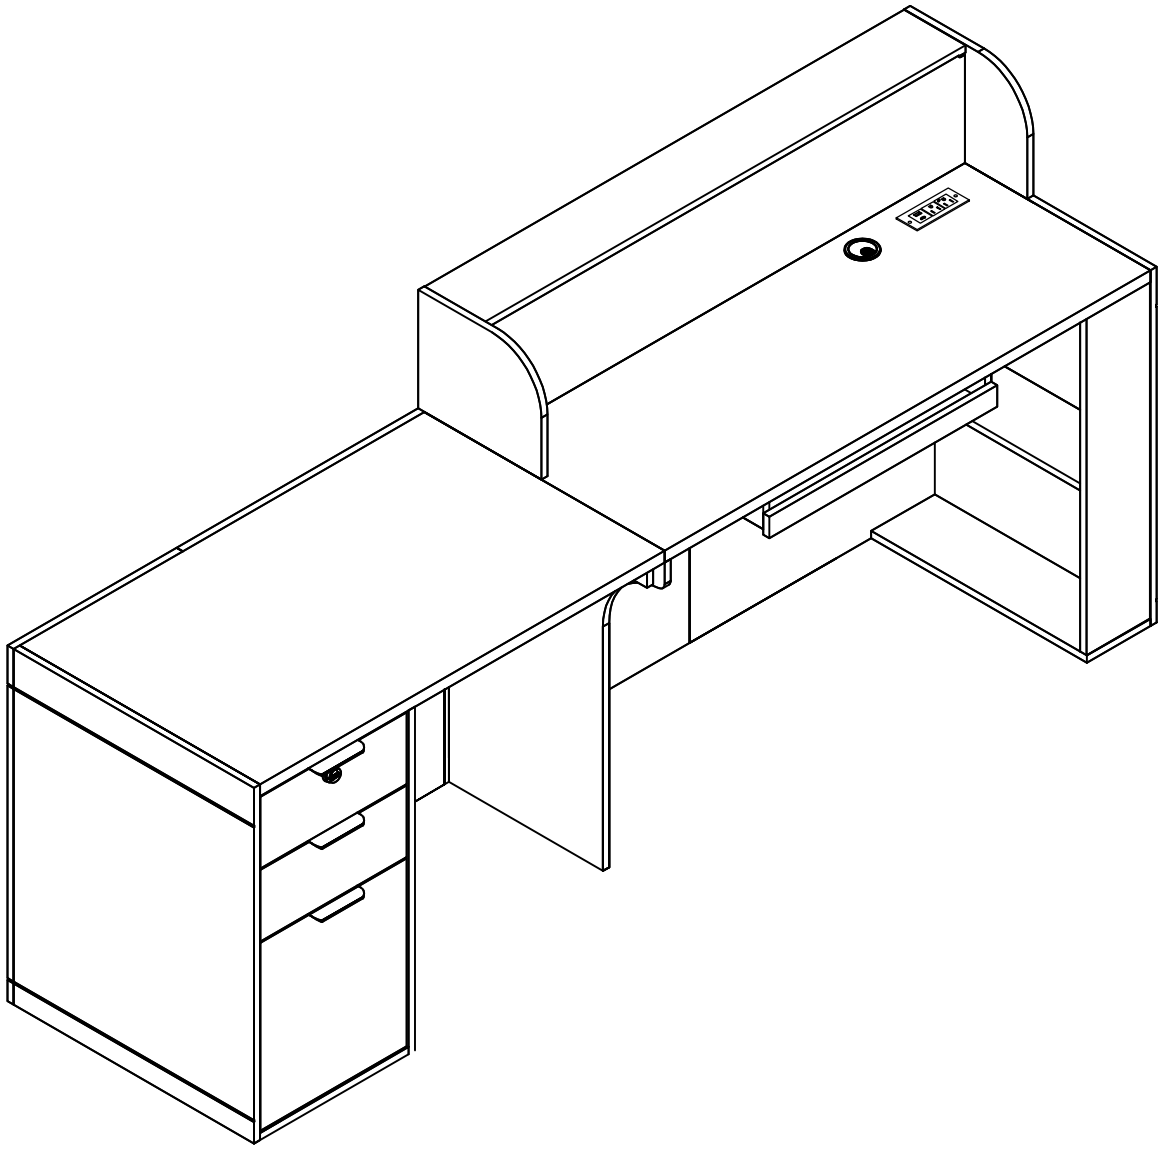

Send email with your question, pic and order NO. to
support@supporthub365.com

Product Installation Video

After-sales official website: https://supporthub365.com

Scan the QR code with your phone to watch the installation video.

Please carefully review the following precautions before proceeding with the installation:

1、The installation process for this product is complex, and it is highly recommended to have at least two individuals working together during the installation.


2、Prior to each step, please refer to the screw hole positions to ensure that the board is aligned correctly according to the images provided in the instruction manual. This will help prevent any errors.


3、In case power tools are used for installation, it is important to tighten the screws intermittently rather than applying excessive force continuously. This precaution will help avoid potential cracks around the screw holes.

4、If you encounter any difficulties or issues during the assembly process, please don't hesitate to reach out to us via email or Amazon message. We assure you that we will address your concerns and provide a solution within 24 hours.

Thank you for your attention to these important instructions.


























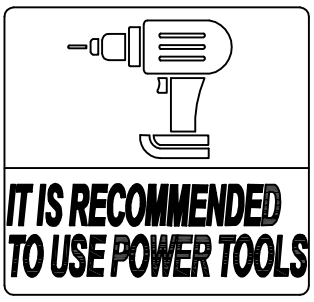





















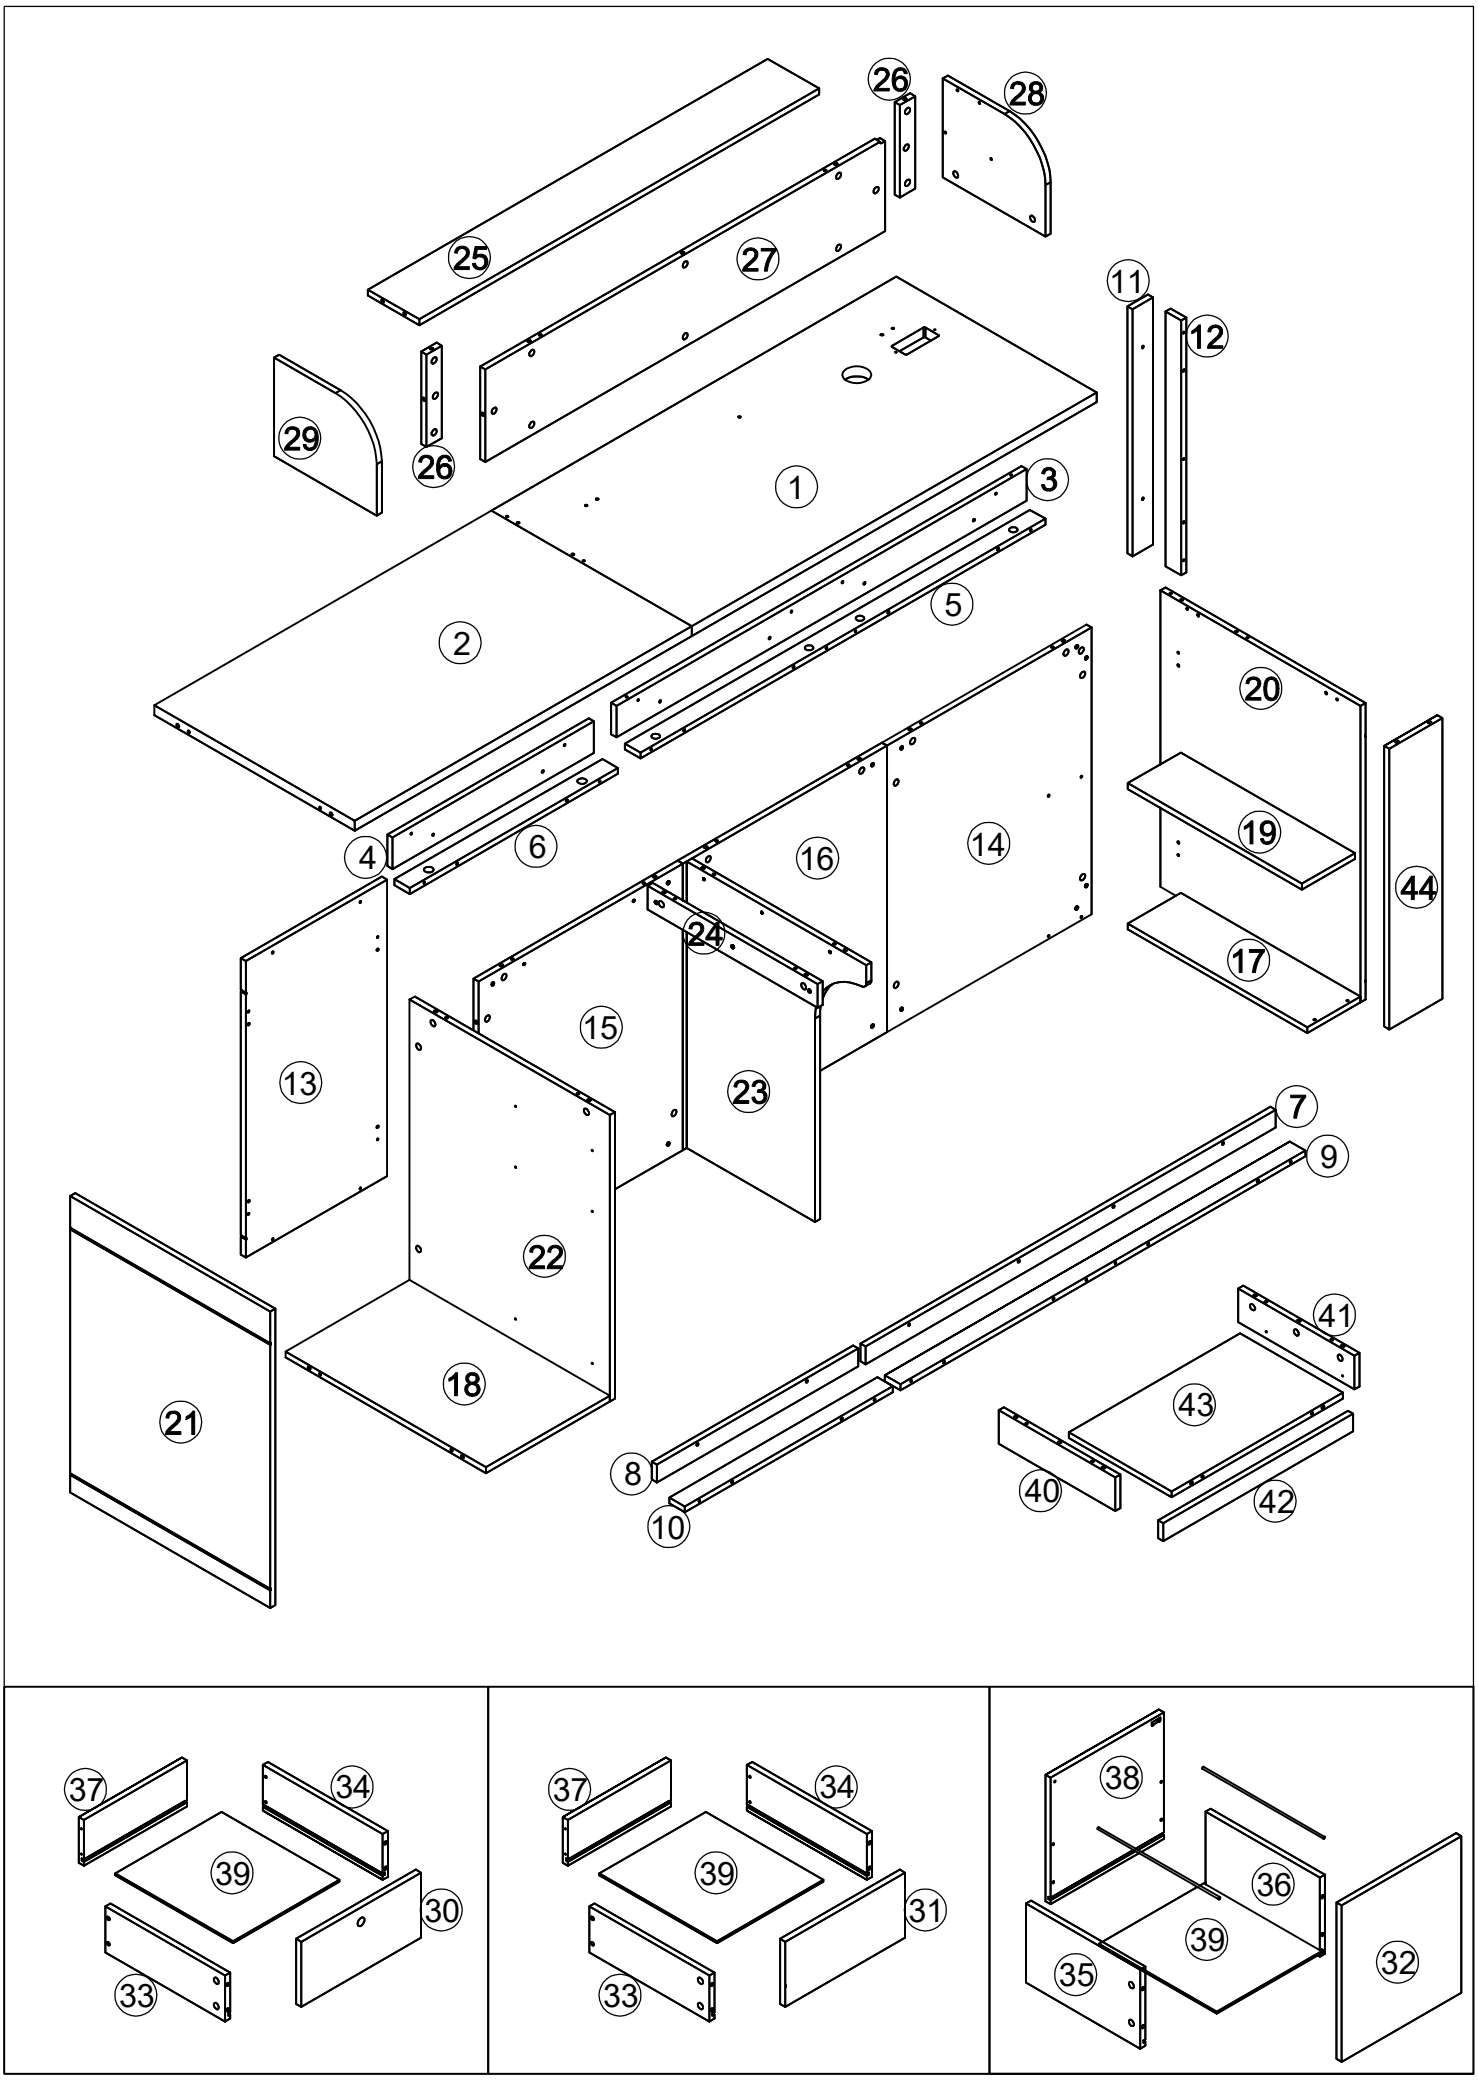

26
28
25
27
11
12
29
26
1
3
5
2
20
4
6
16
14
19
44
24
17
15
13
23
7
9
22
21
18
41
43
8
40
42
10

37
34
39
30
33


37
34
39
31
33

38
36
39
32
35

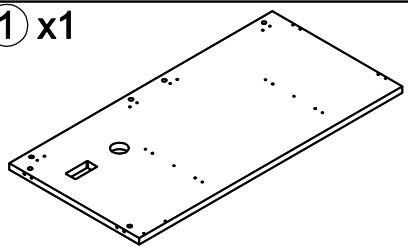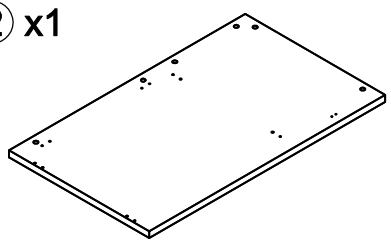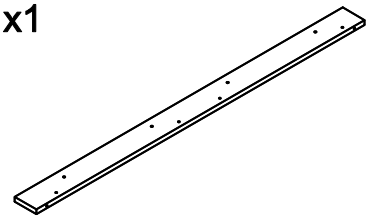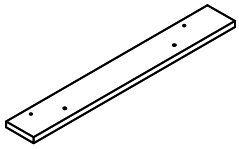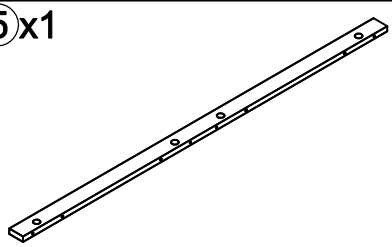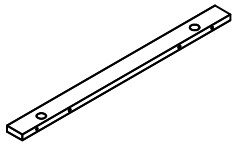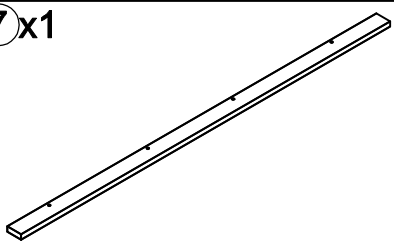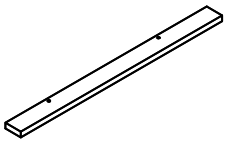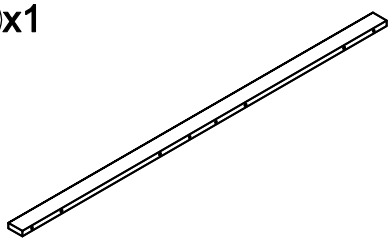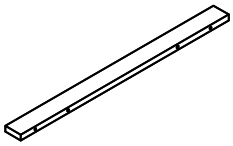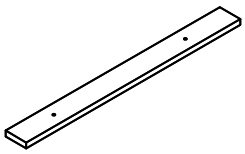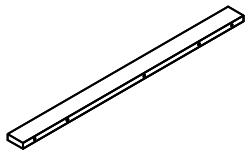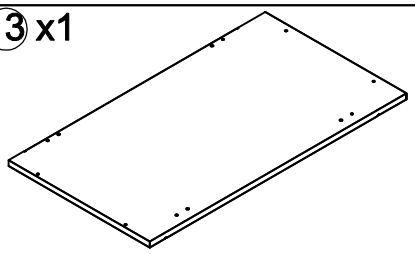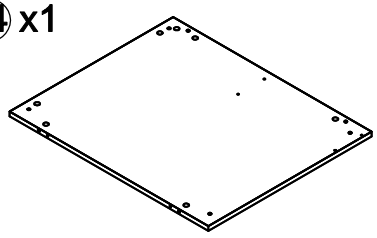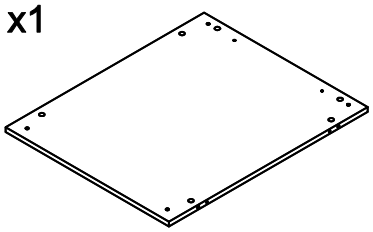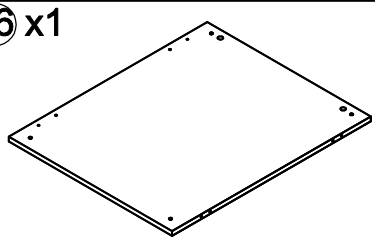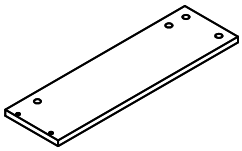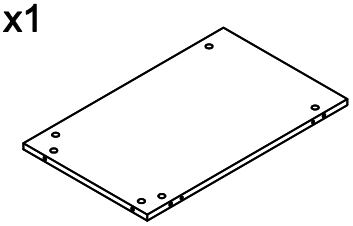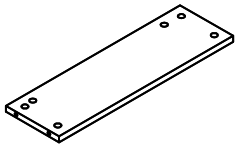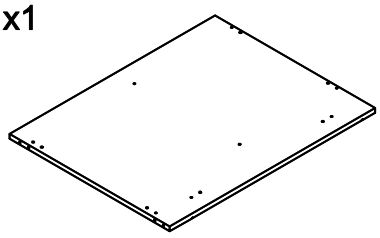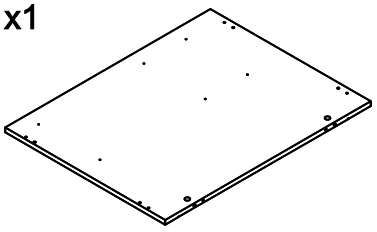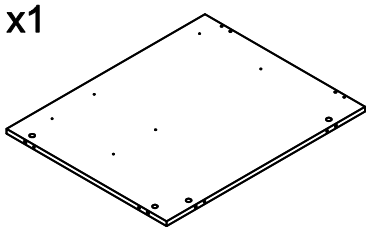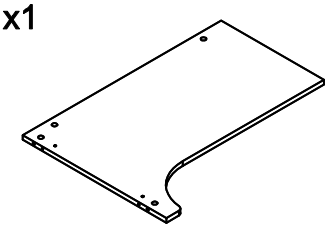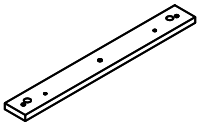① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 
㉒ x1 	㉓ x1 	㉔ x1 

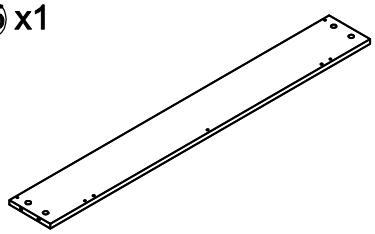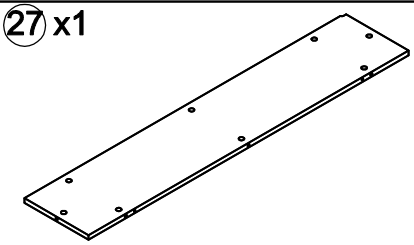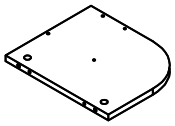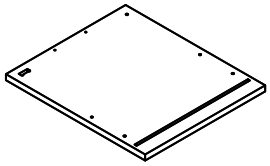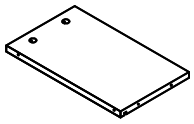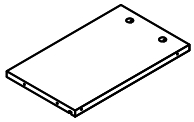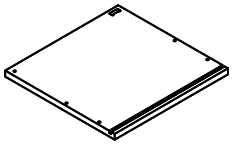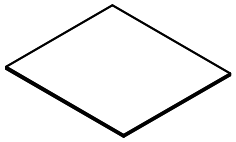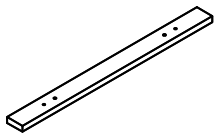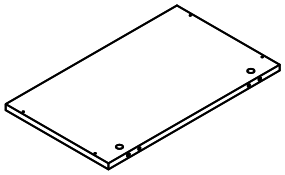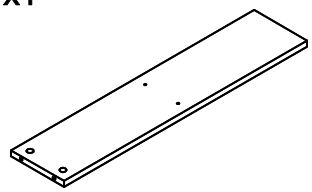
25 x1 	26 x2 	27 x1 
28 x1 	29 x1 	30 x1 
31 x1 	32 x1 	33 x2 
34 x2 	35 x1 	36 x1 
37 x2 	38 x1 	39 x3 
40 x1 	41 x1 	42 x1 
43x1 	44 x1 	

How the knock down assembly system works

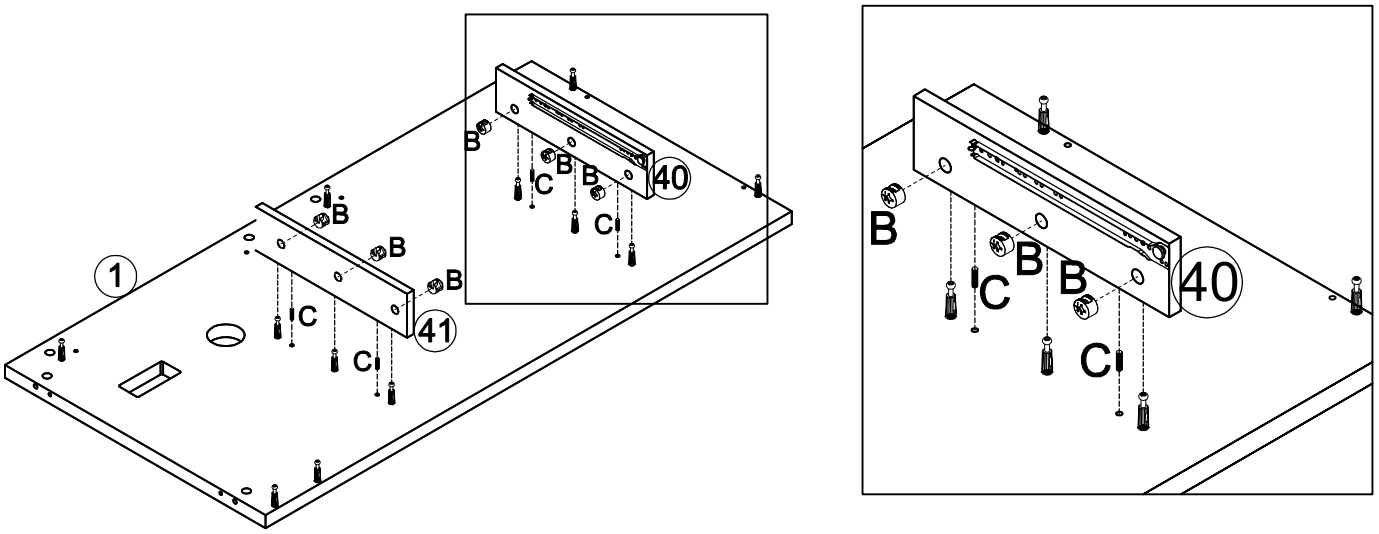


How to Install Wood Dowel


Insert the wood dowel [C] at least half wat by tapping lightly with a rubber mallet,IF NECESSARY.

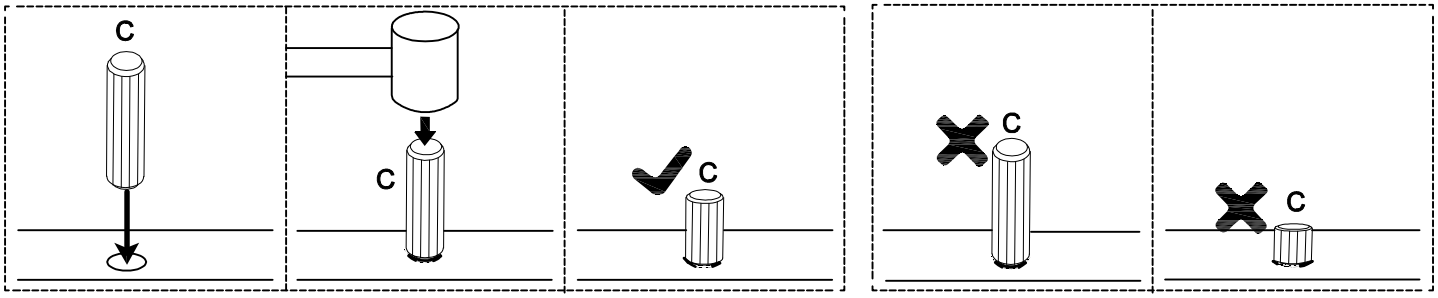


CAM LOCK SYSTEM OPERATION

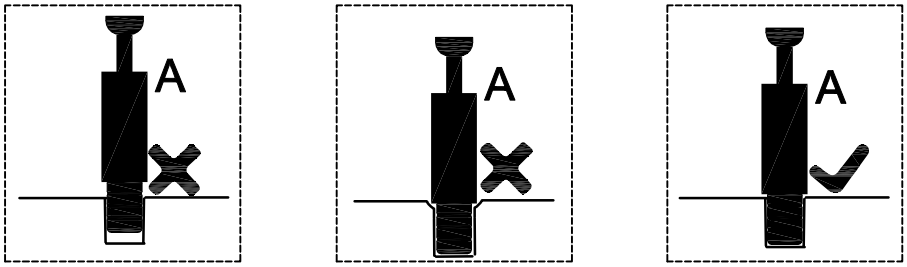


1.Screw the cam bolt [A] into the threaded insert on the panel.
2.Connect both panels together making sure cam bolt[A] goes into the pre-drilled large gole on the end of panel for cam lock[B].
3.Insert the cam lock[B] into the pro-drilled large hole on the panel.Make sure the cross slot of cam lock [B] faces out(The arrow should point towards Screw No. A).
4.Rotate the cam lock [B] clockwise with a self-supplied phillips screwdriver to lock the cam bolt [A] in place(Rotate 100-180 degrees until tight).

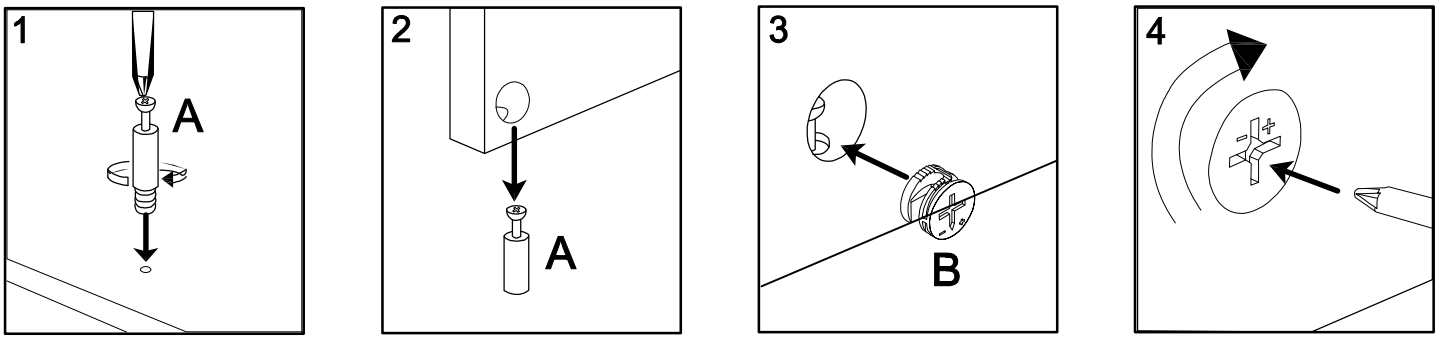

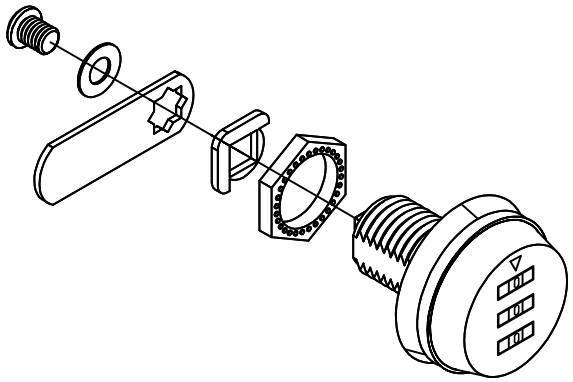


Easy Installation:
-Can rotate the combination dial clockwise or counterclockwise

Set Your Own Password
-The password can be changed instantly
-No special tools required

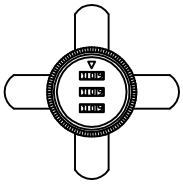

1000 Combination Options
Change the password simply by pressing the button and setting the code in just a few seconds

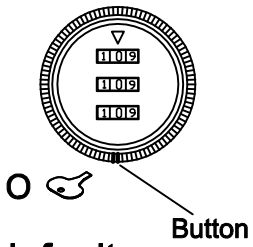

Important Notes:
Password Setting
1、Password must be set when the lock is unlocked (default password is 0-0-0)
2、The reset position is located at the small hole on the lower edge of the outer ring; rotate the head until the internal button becomes visible
(Can be used with accessory O)
3、Insert a small cylindrical rod into the button, press it down, and rotate the combination dial to align your desired numbers in the center
4、Release the button to complete the password setting

Locking & Unlocking
Rotate to lock the device
After locking, randomly turn one or all combination dials to secure the lock
To unlock, rotate the dials to match the preset password

Hardware

A	x98 +4(spare)	B	x98 +4(spare)	C	x50 +5(spare)	D	x40 +4(spare)	E	x3	F	x14 +1(spare)
Ø6x32mm				Ø6x30mm		Ø3.5x12mm		Ø4x25mm		Ø4x35mm	


G	x1	H1	x1	I	x23	J	x1	K	x1	L	x3
		H2	x1								


N	x1	M	x2	O	x1	P	x1	Q	x15 +2(spare)	R	x50
								Ø4x70mm			


S	x2	T	x30 +4(spare)	CL	x3	CR	x3	DL	x3	DR	x3
Ø5x352mm		Ø6x20mm		L350mm		L350mm		L350mm		L350mm	


CL	x1	CR	x1	DL	x1	DR	x1
L300mm		L300mm		L300mm		L300mm	


STEP1

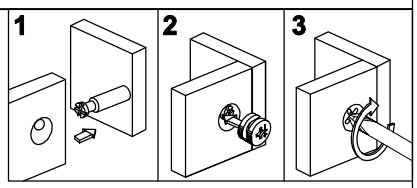

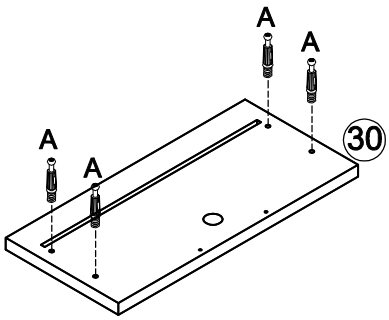

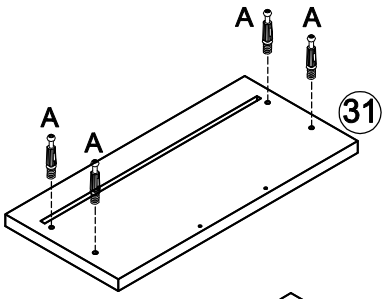

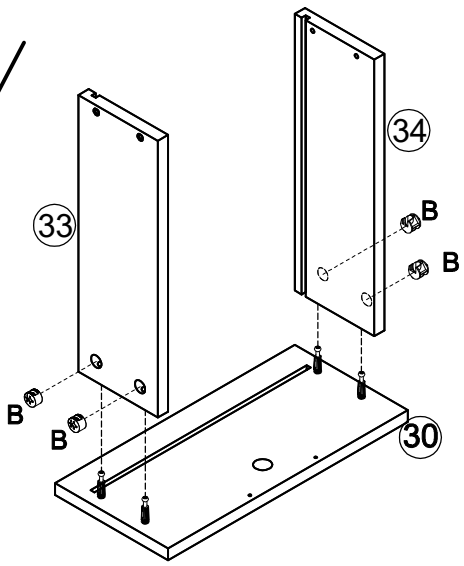


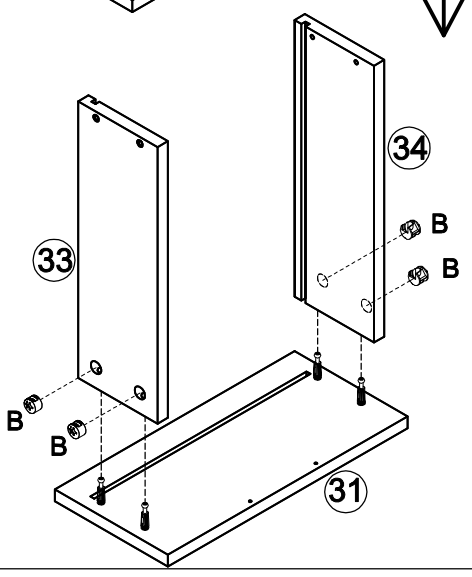

A	x8
Ø6x32mm	


B	x8

STEP2

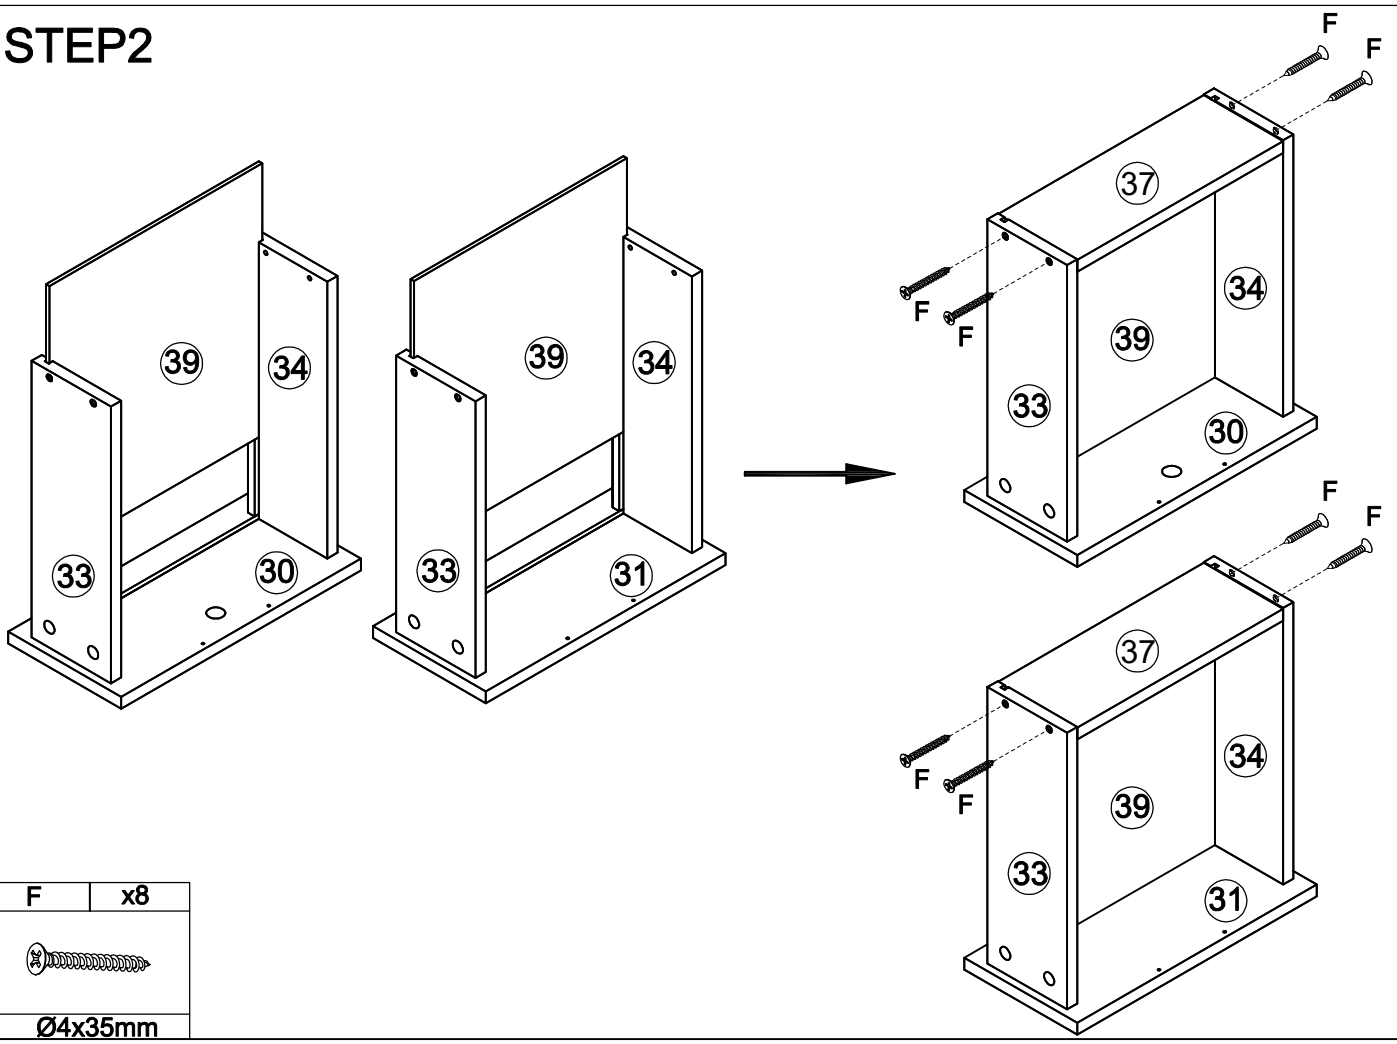


F	x8
Ø4x35mm	

STEP3

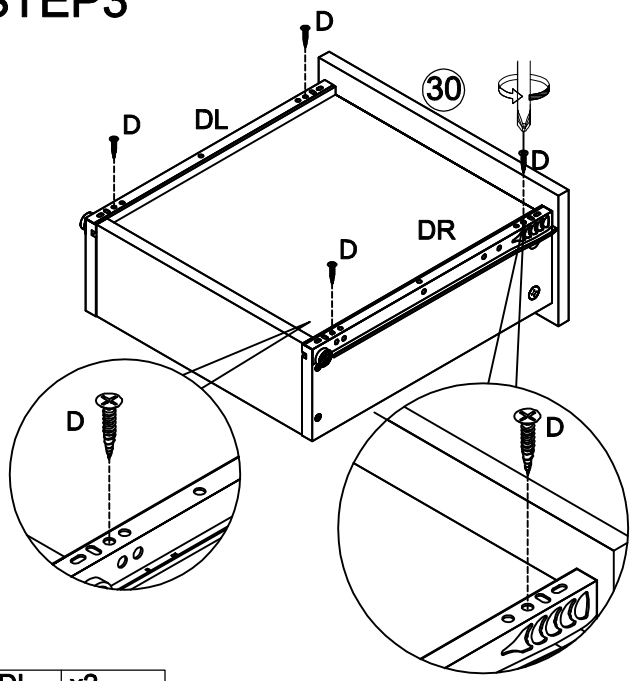

DL=350mm
DR=350mm

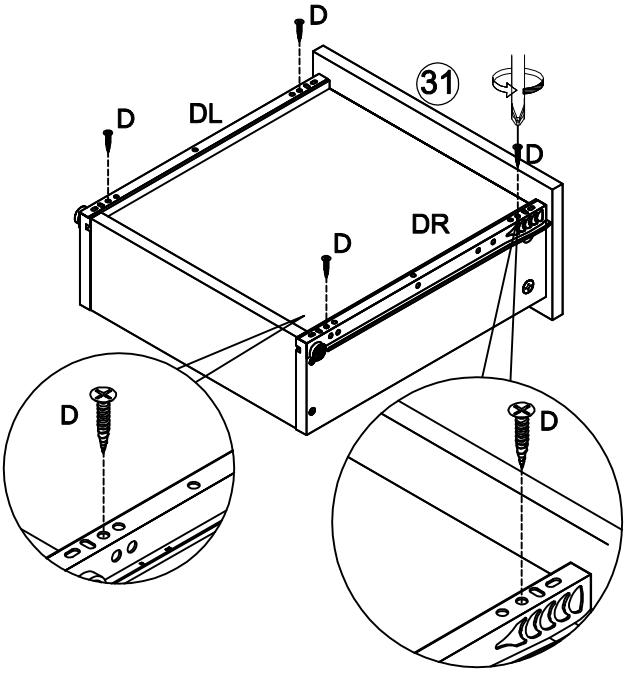


DL	x2
L350mm	

DR	x2
L350mm	

D	x8
Ø3.5x12mm	

STEP4

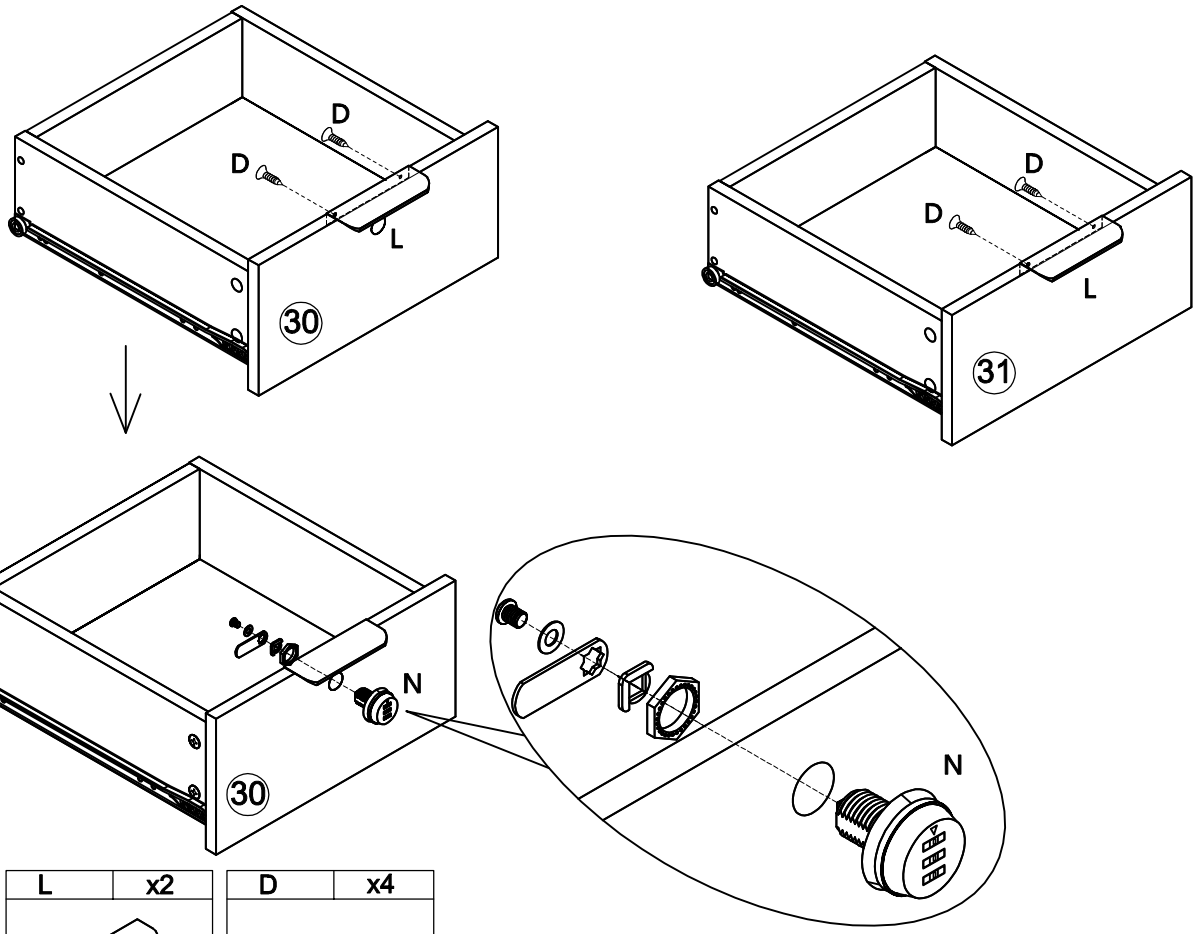



N	x1
	

L	x2
	

D	x4
	Ø3.5x12mm

STEP5

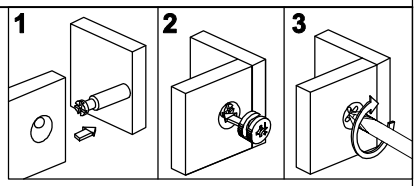

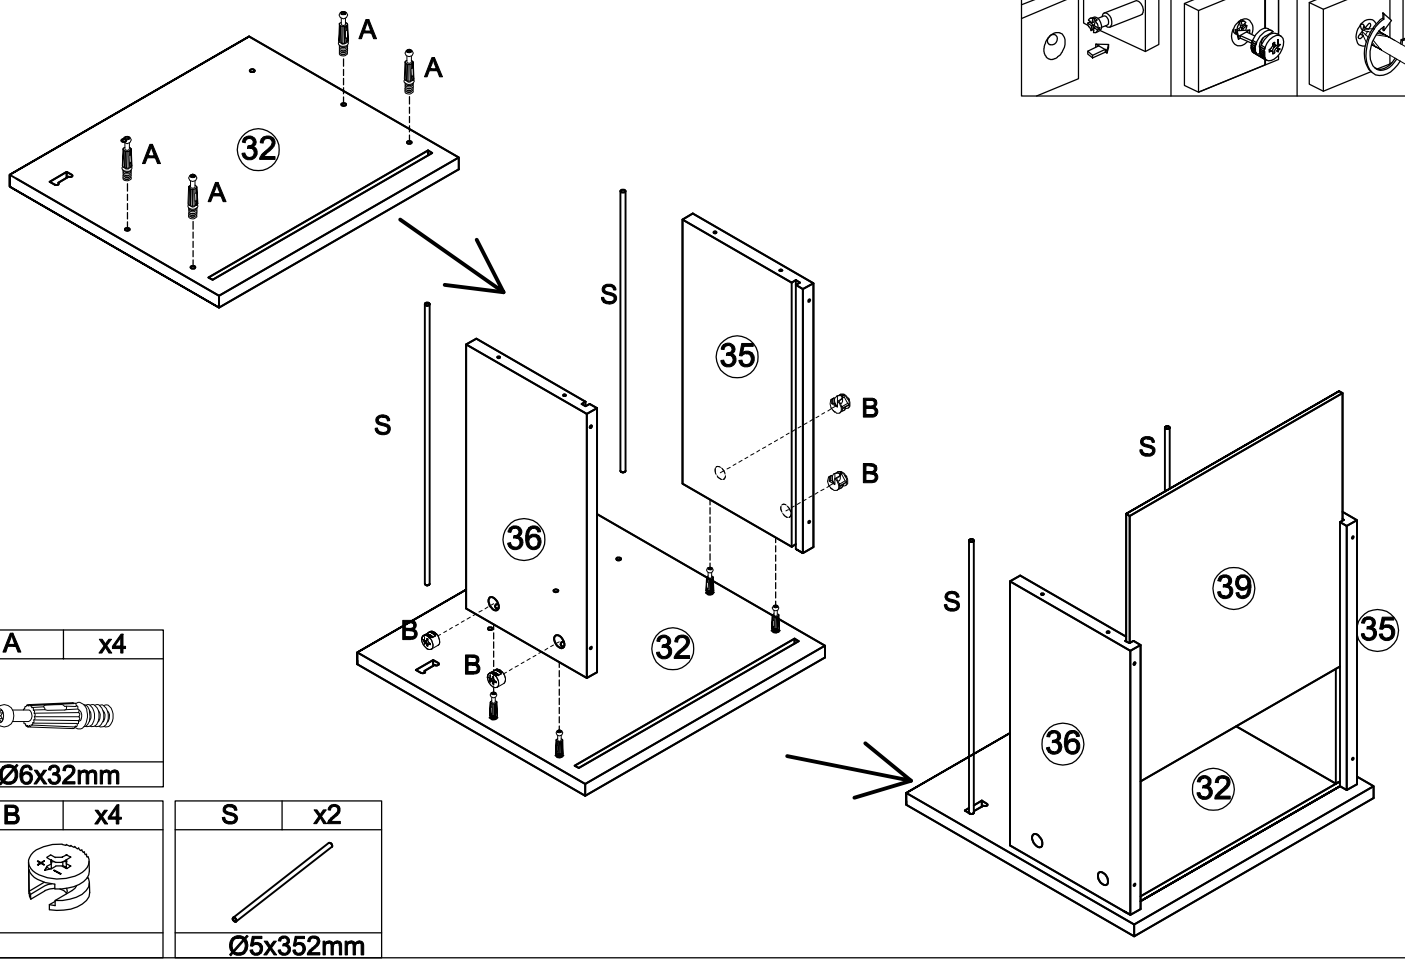


A	x4
	Ø6x32mm

B	x4

S	x2
	Ø5x352mm

STEP6

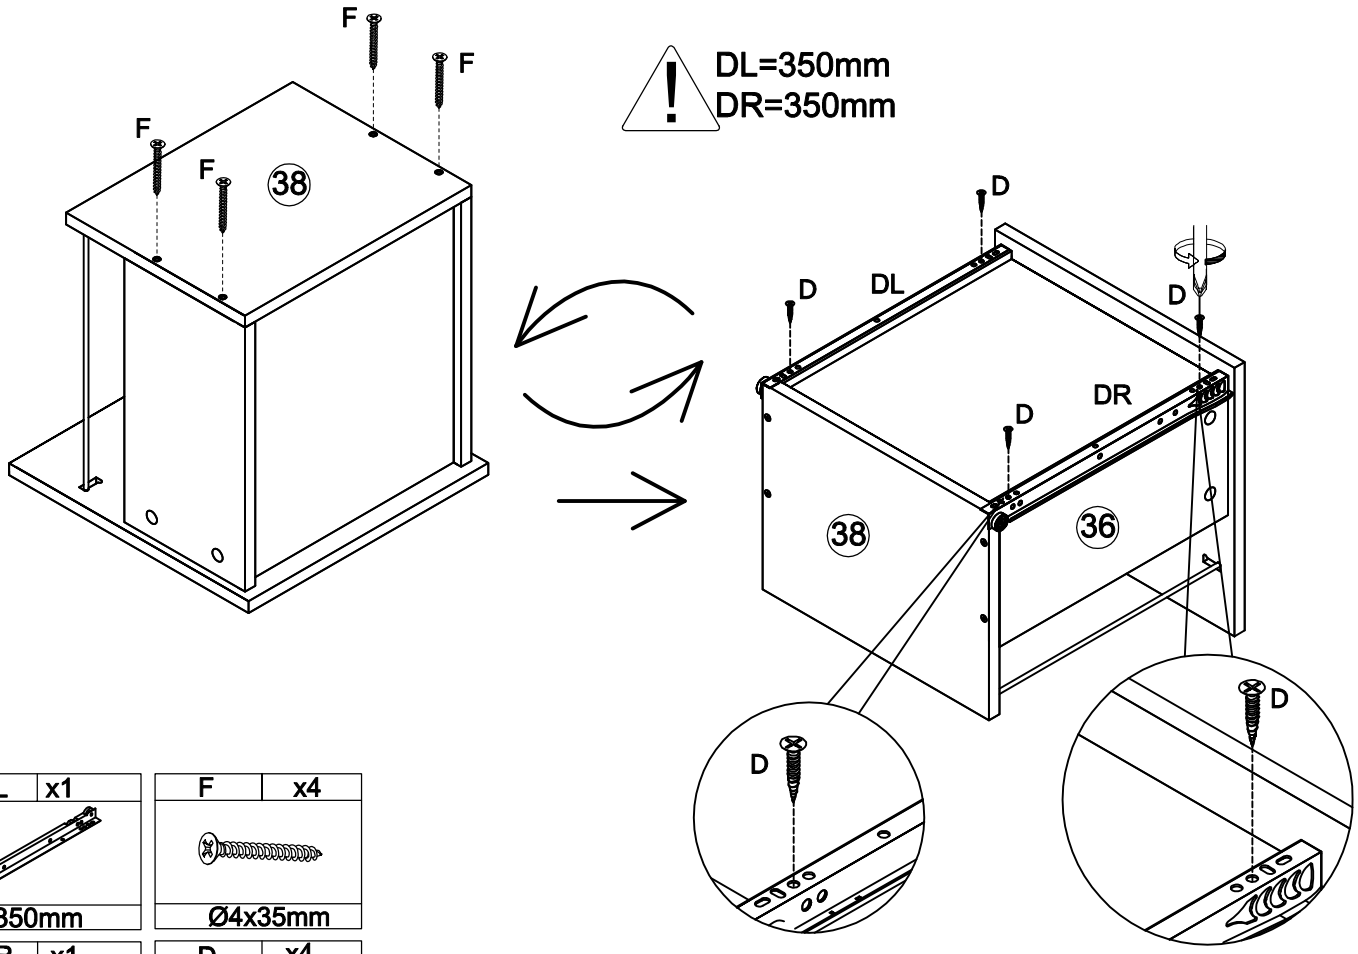


DL	x1
L350mm	

F	x4
Ø4x35mm	

DR	x1
L350mm	

D	x4
Ø3.5x12mm	


STEP7

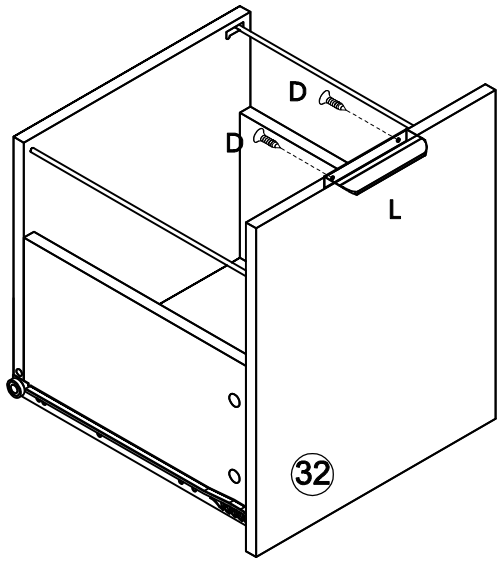

L	x1

D	x2
Ø3.5x12mm	

STEP8

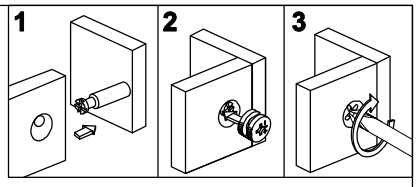

A	x2
Ø6x32mm	

C	x2
Ø6x30mm	


B	x2

D	x4
Ø3.5x12mm	

DL	x1
L300mm	

DR	x1
L300mm	

STEP9

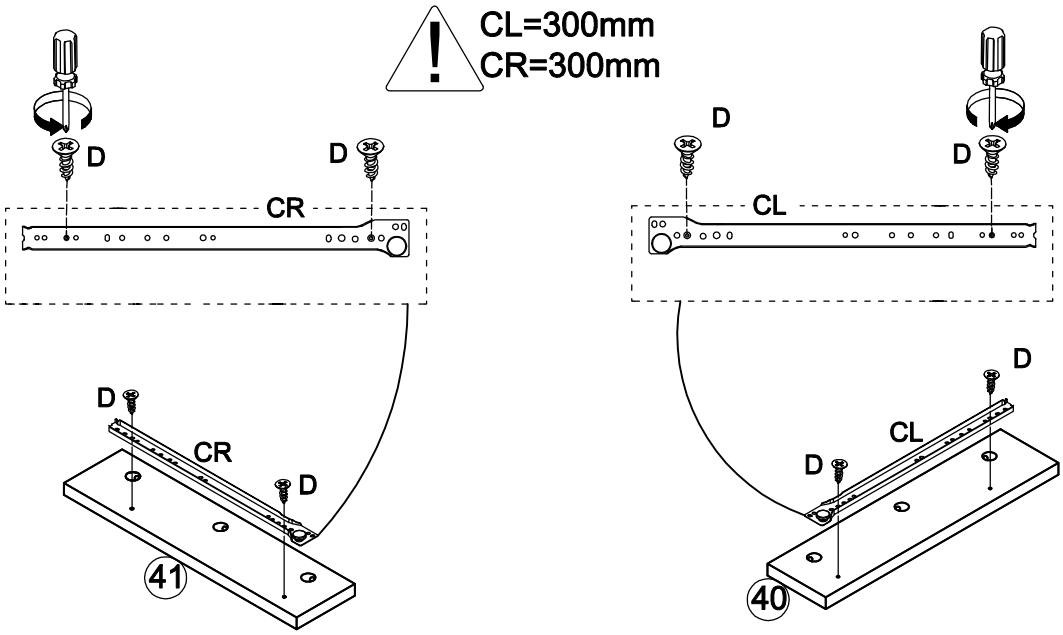



D	x4
Ø3.5x12mm	

CL	x1
L300mm	


CR	x1
L300mm	

STEP10

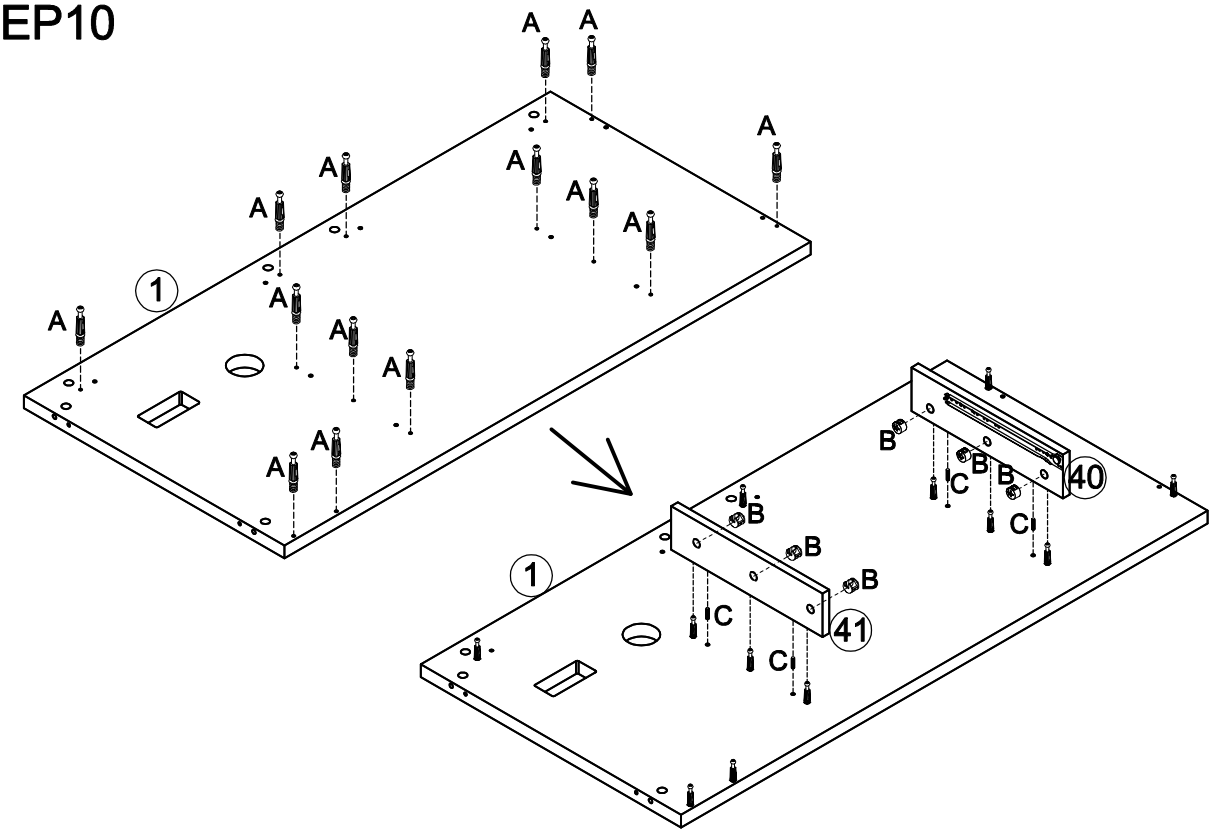


A	x14	B	x6	C	x4
					
Ø6x32mm				Ø6x30mm	


STEP11

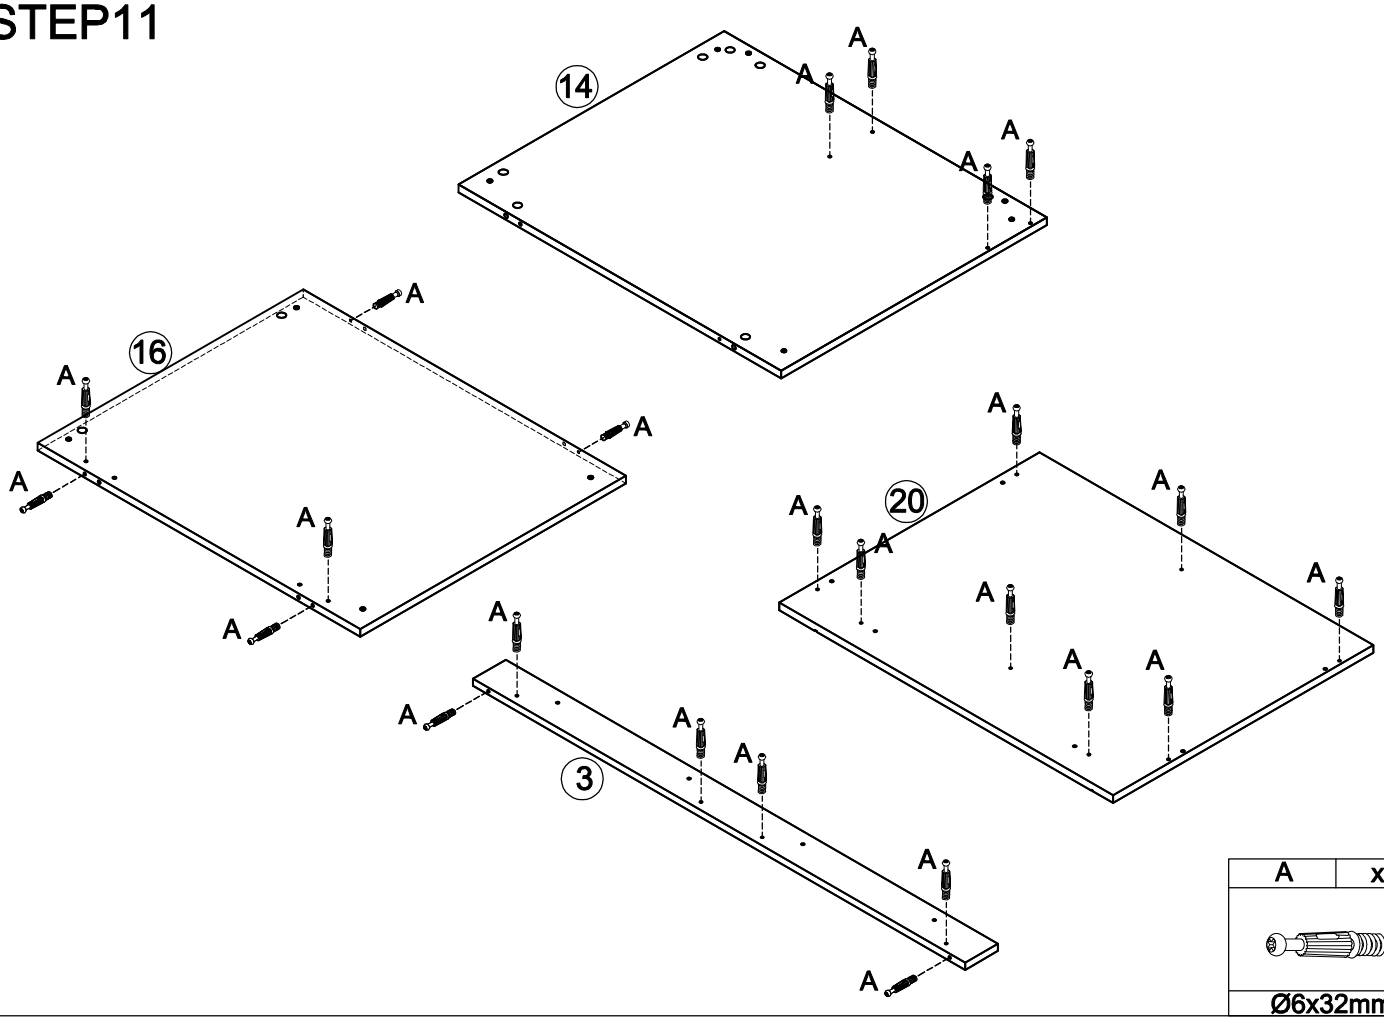

A	x24
Ø6x32mm	


STEP12

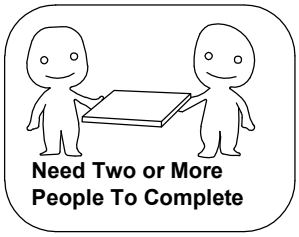

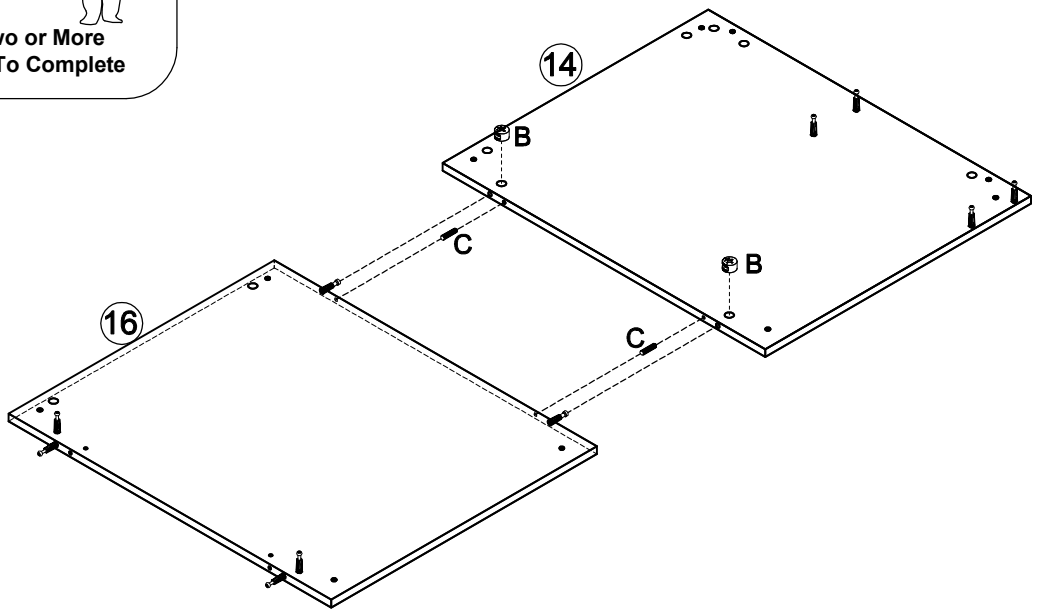


B	x2	C	x2
			
			Ø6x30mm


STEP13

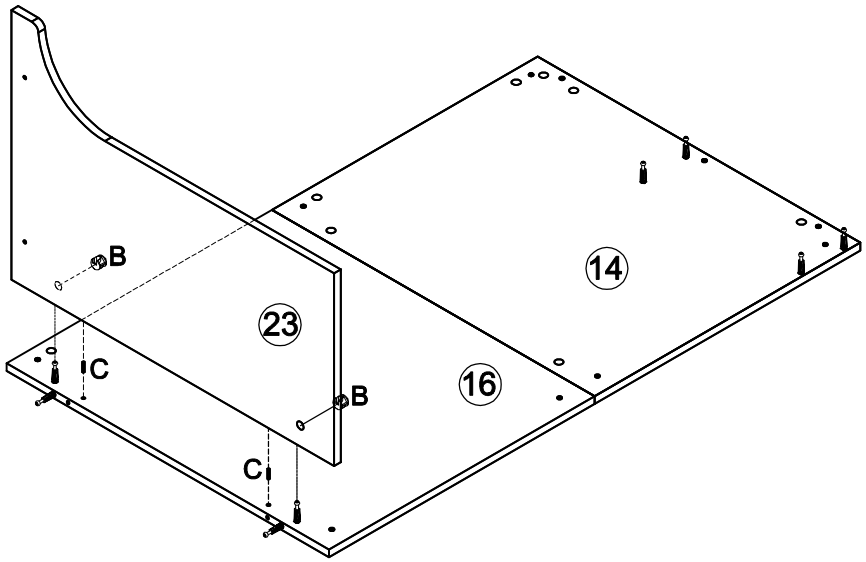

B	x2	C	x2
			
			Ø6x30mm

STEP14

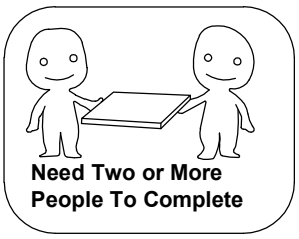

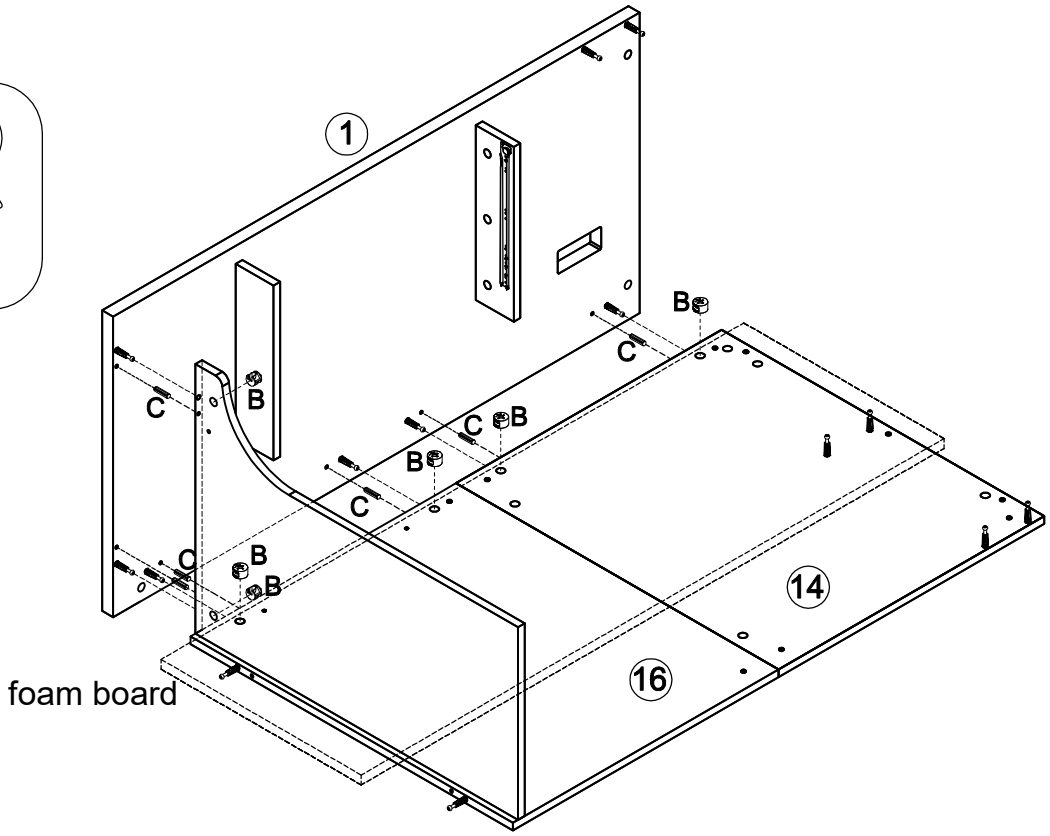


Note: When installing panels 14 and 16 onto panel 1, you can use the large foam piece from the packaging box underneath them to make the installation easier.

B	x6
	

C	x6
	Ø6x30mm


STEP15

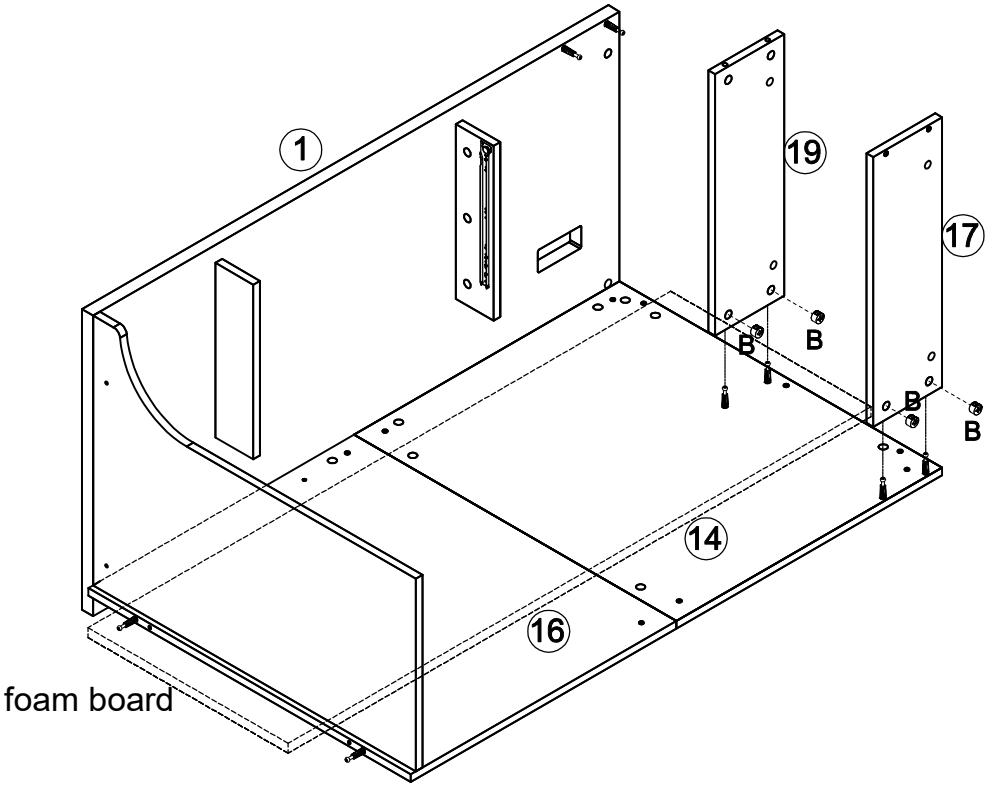


B	x4
	


STEP16

1、Flip Board 44 over (180°).
2、Tilt it slightly and insert it into the fitting on Board 1.
3、Align the screws on Board 44 with the holes on Board 19, and lower the board into place.

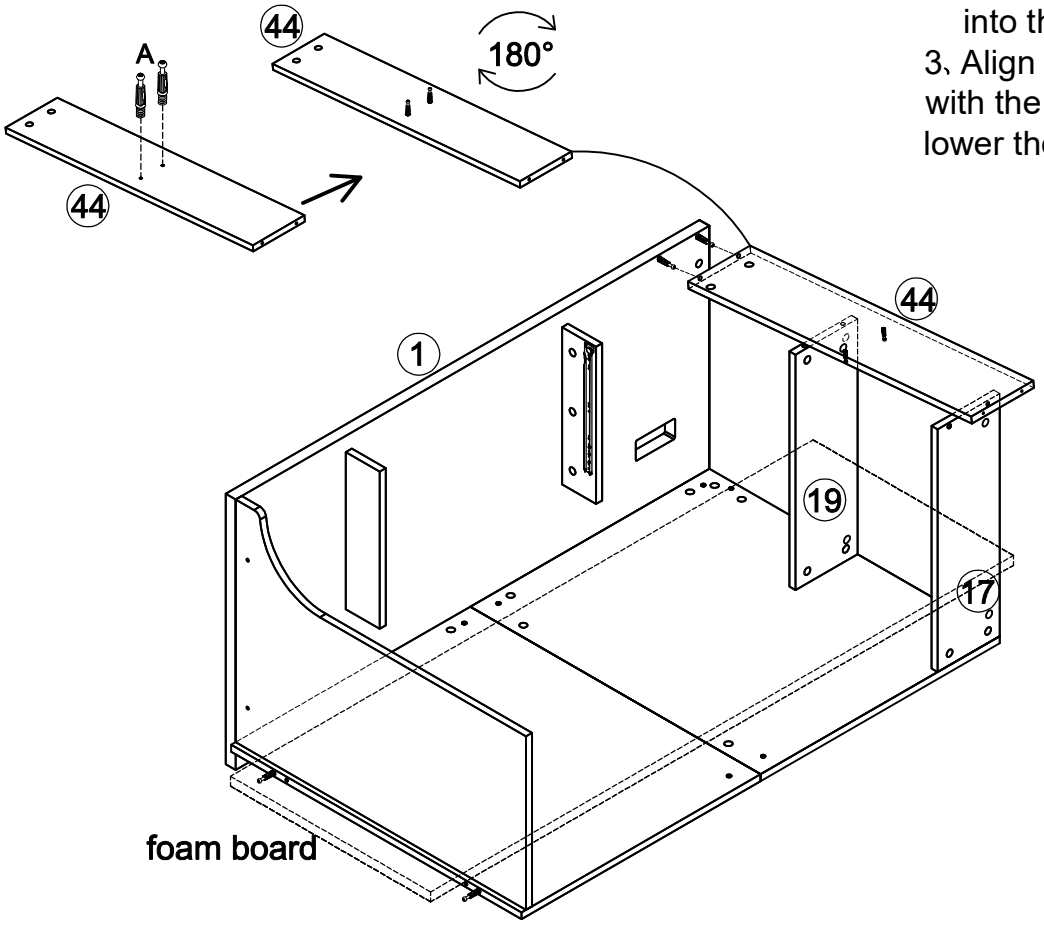

A	x2
	
Ø6x32mm	

STEP17

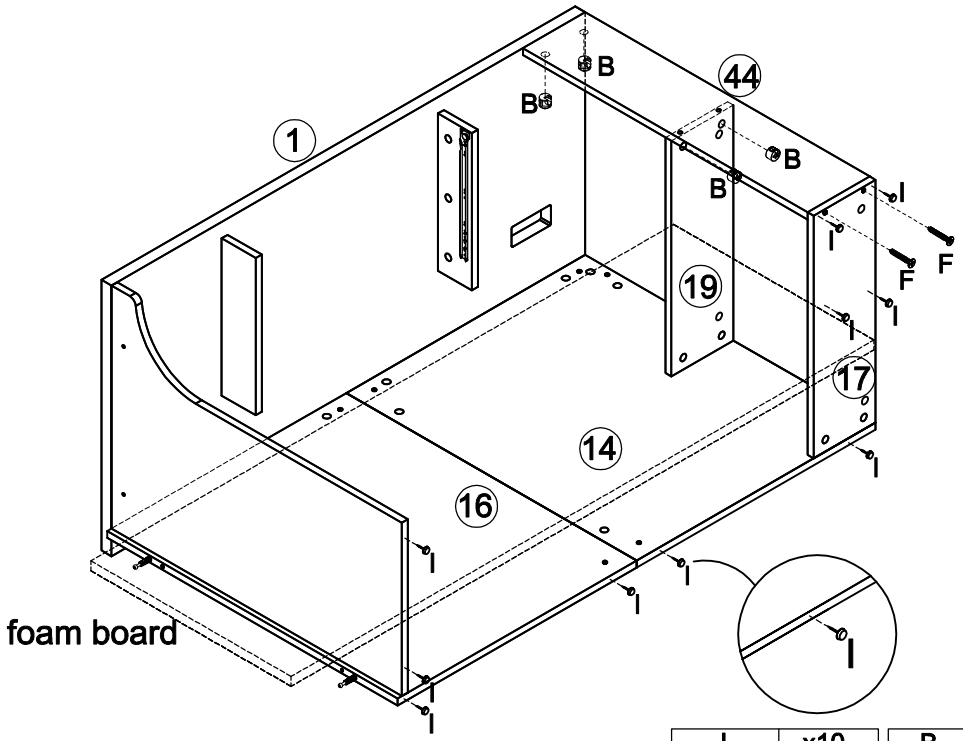



I	x10
	

B	x4
	

F	x2
	
Ø4x35mm	


STEP18

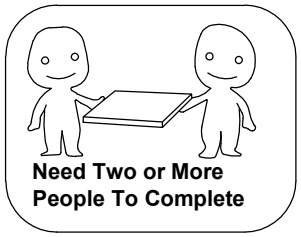

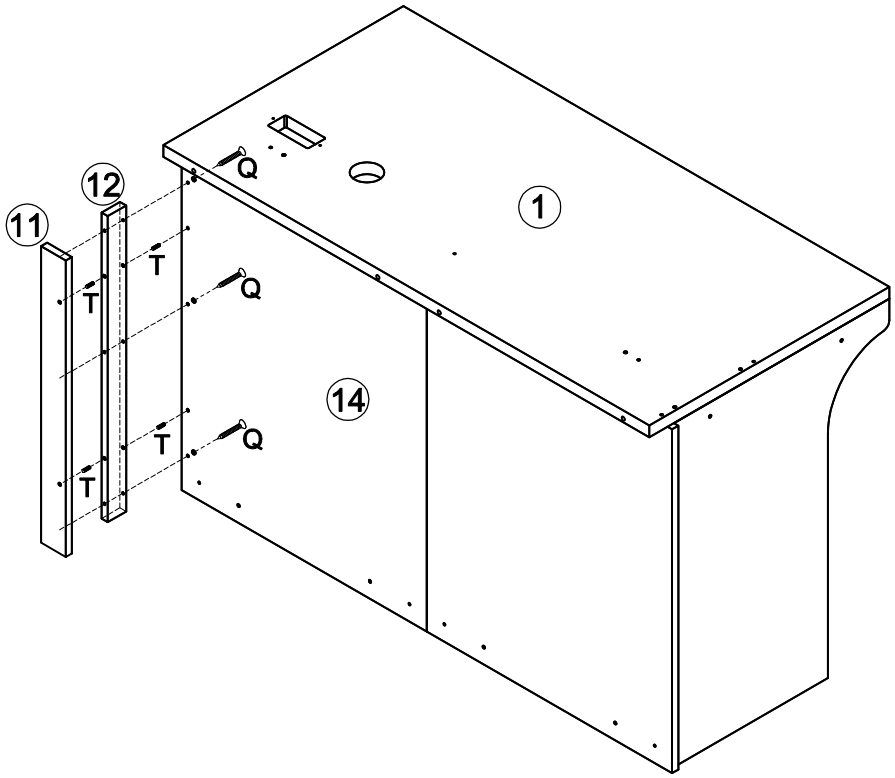


T	x4	Q	x3
Ø6x20mm		Ø4x70mm	

STEP19

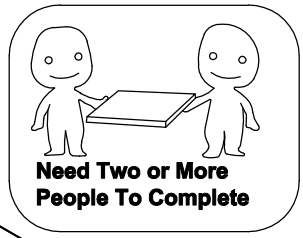


T	x16	Q	x8
Ø6x20mm		Ø4x70mm	

STEP20

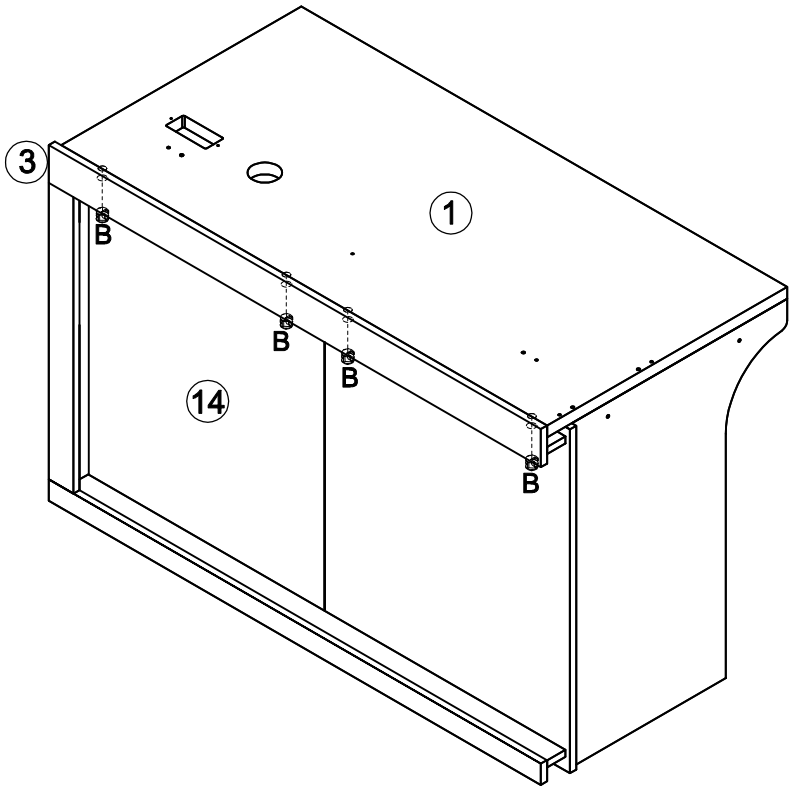

B	x4
	

STEP21

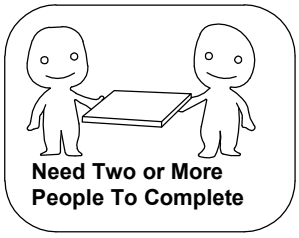


I	x5

B	x8

C	x6
	
Ø6x30mm	

STEP22

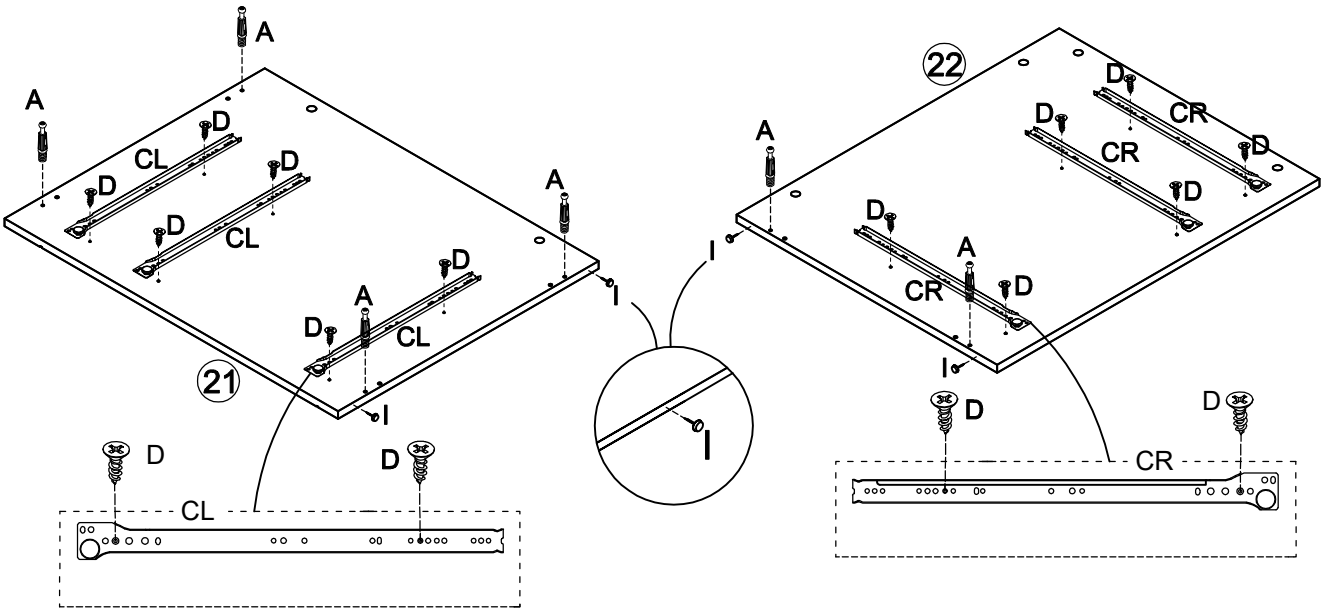

CL=350mm
CR=350mm

I	x4


CR	x3
L350mm	

CL	x3
L350mm	

A	x6
Ø6x32mm	

D	x12
Ø3.5x12mm	

STEP23

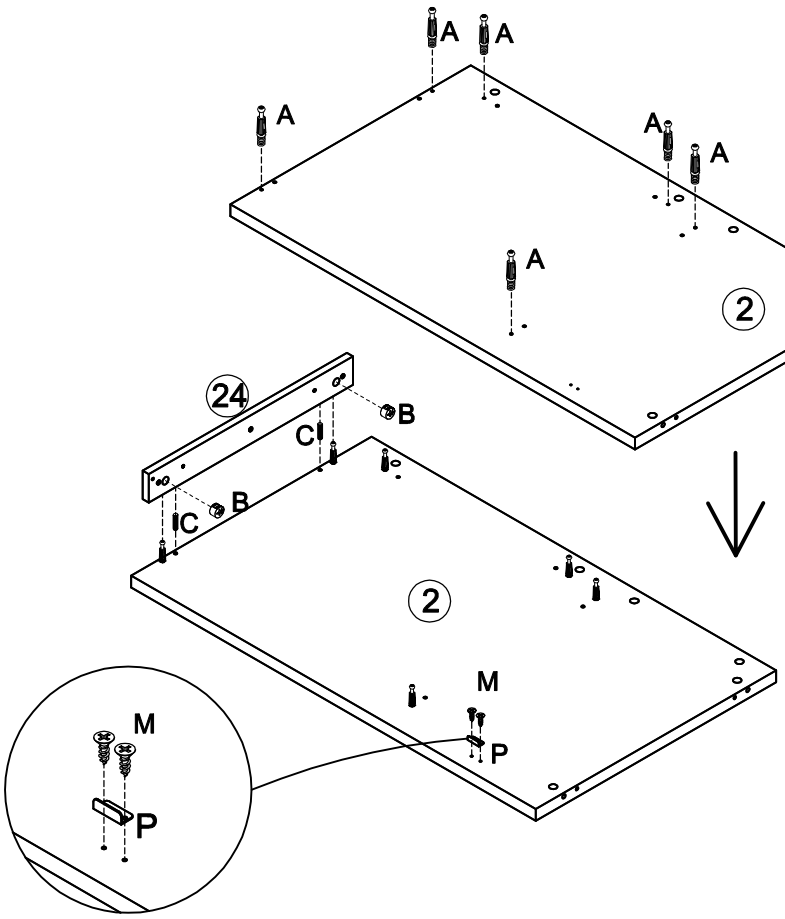

A	x6
Ø6x32mm	


B	x2


C	x2
Ø6x30mm	

M	x2

P	x1

STEP24

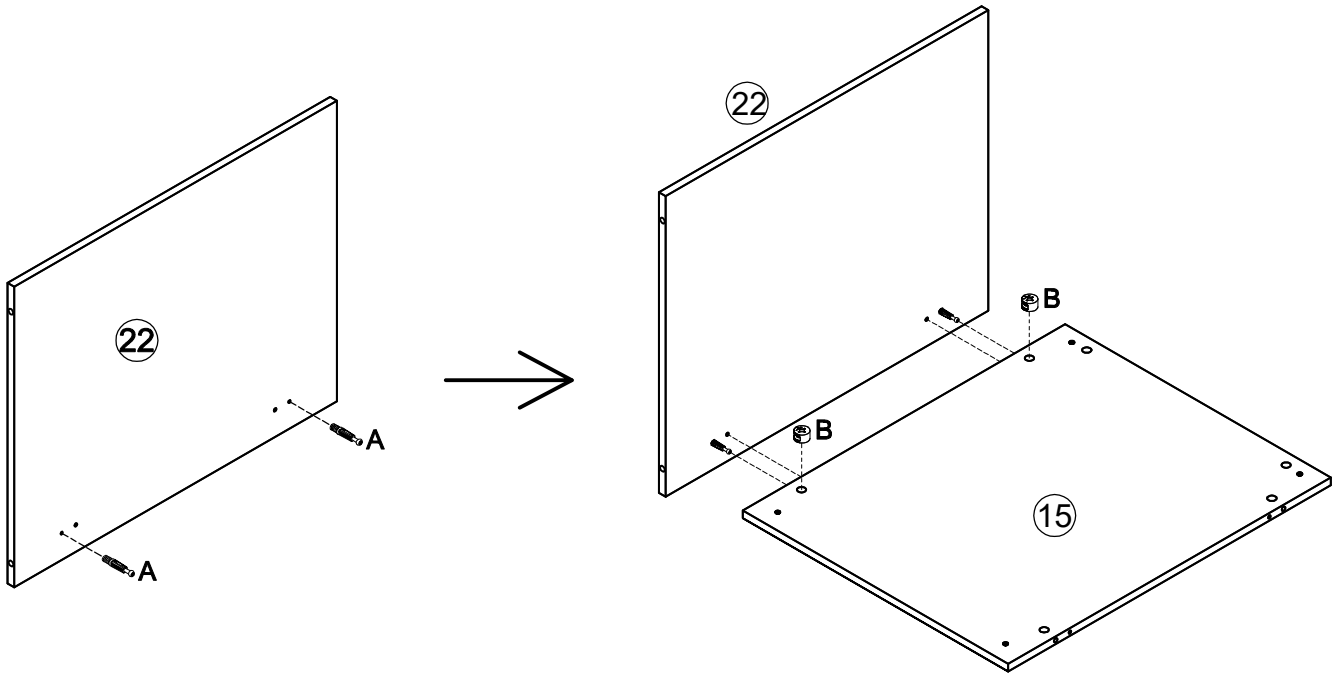

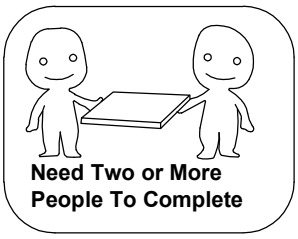



A	x2
	
Ø6x32mm	

B	x2
	

C	x2
	
Ø6x30mm	

STEP25

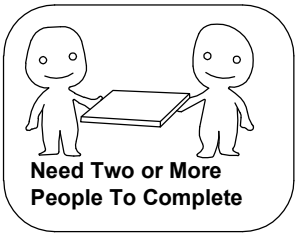


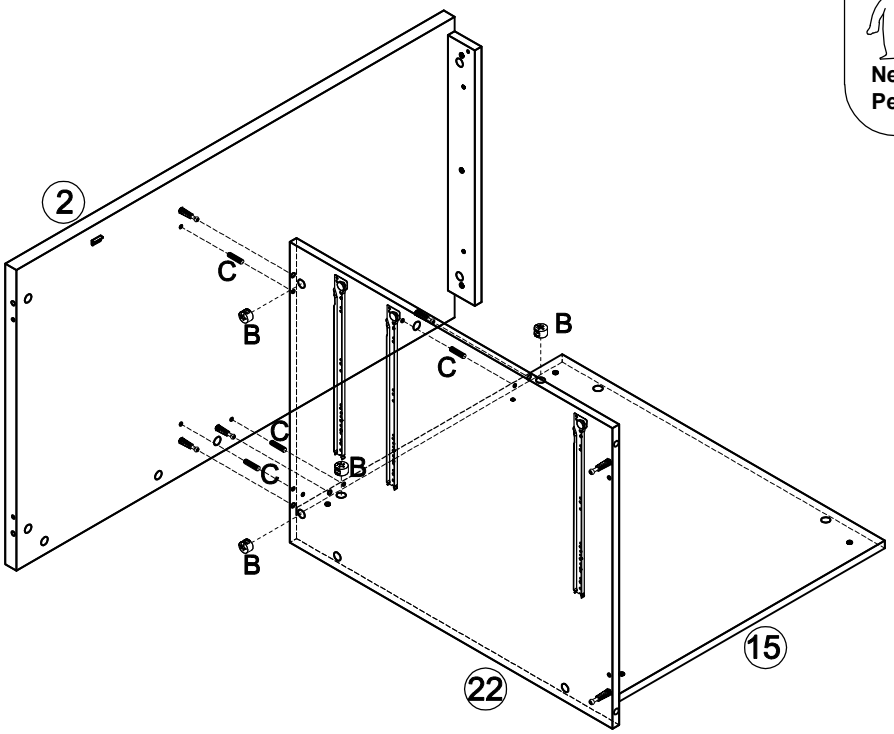


B	x4
	

C	x4
	
Ø6x30mm	


STEP26

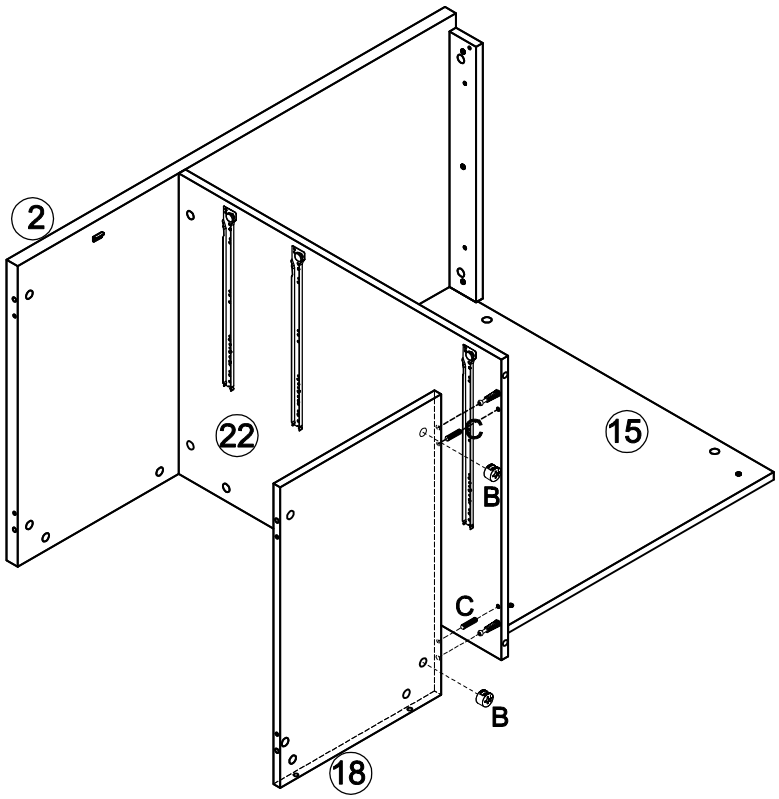


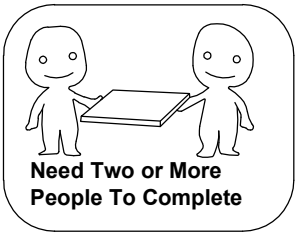

B	x2	C	x2
			
			Ø6x30mm


STEP27

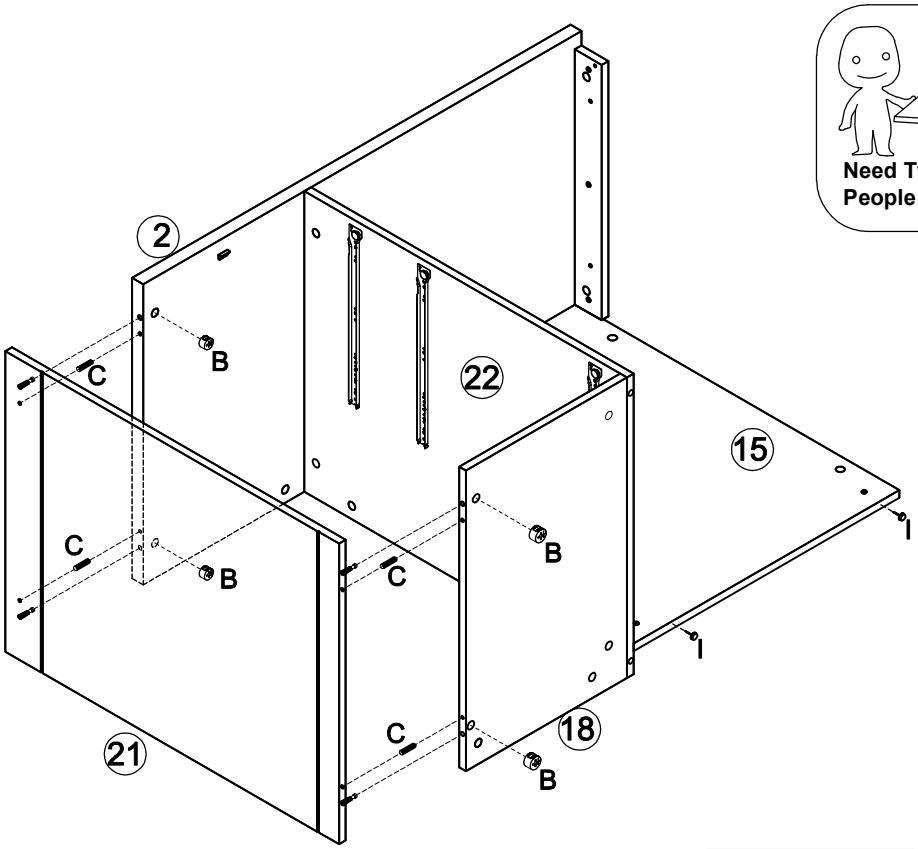


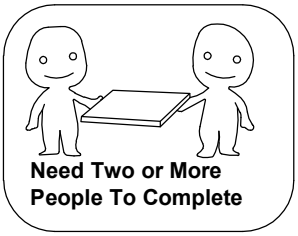

I	x2	B	x4	C	x4
					
					Ø6x30mm

STEP28

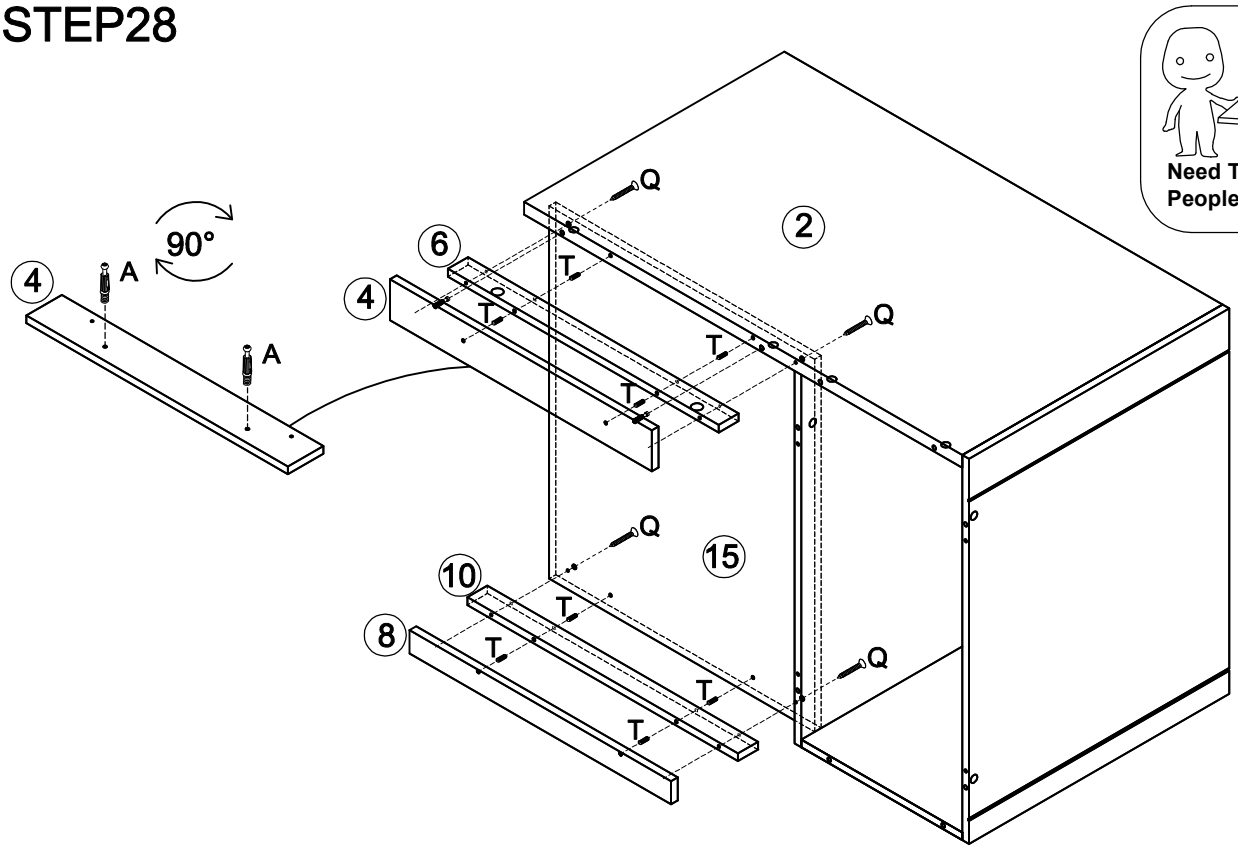

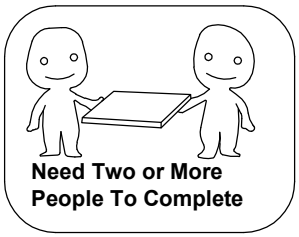


A	x2
	
Ø6x32mm	

T	x8
	
Ø6x20mm	


Q	x4
	
Ø4x70mm	

STEP29

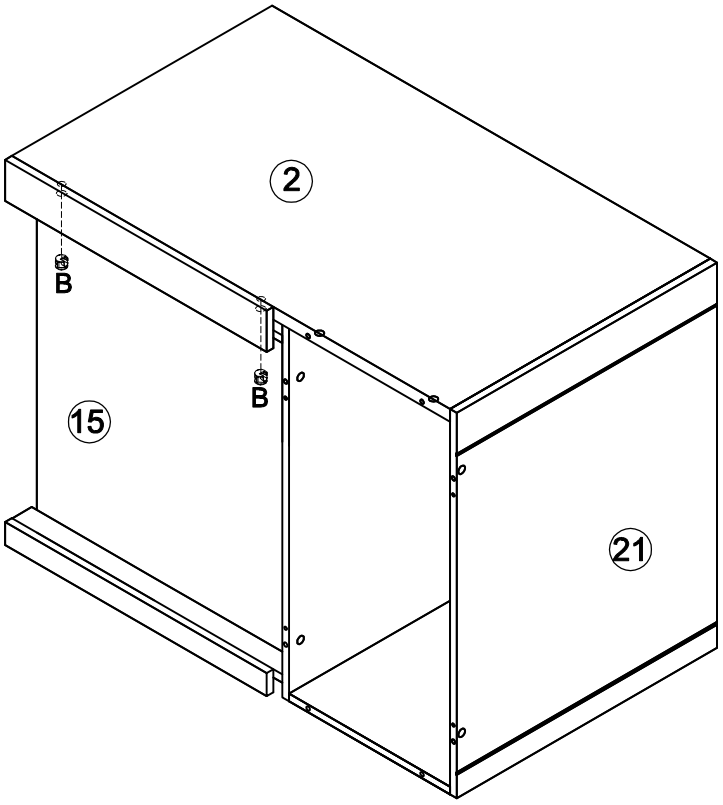

B	x2
	

STEP30

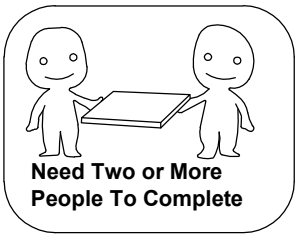


A	x8
Ø6x32mm	

B	x6

C	x4
Ø6x30mm	


STEP31

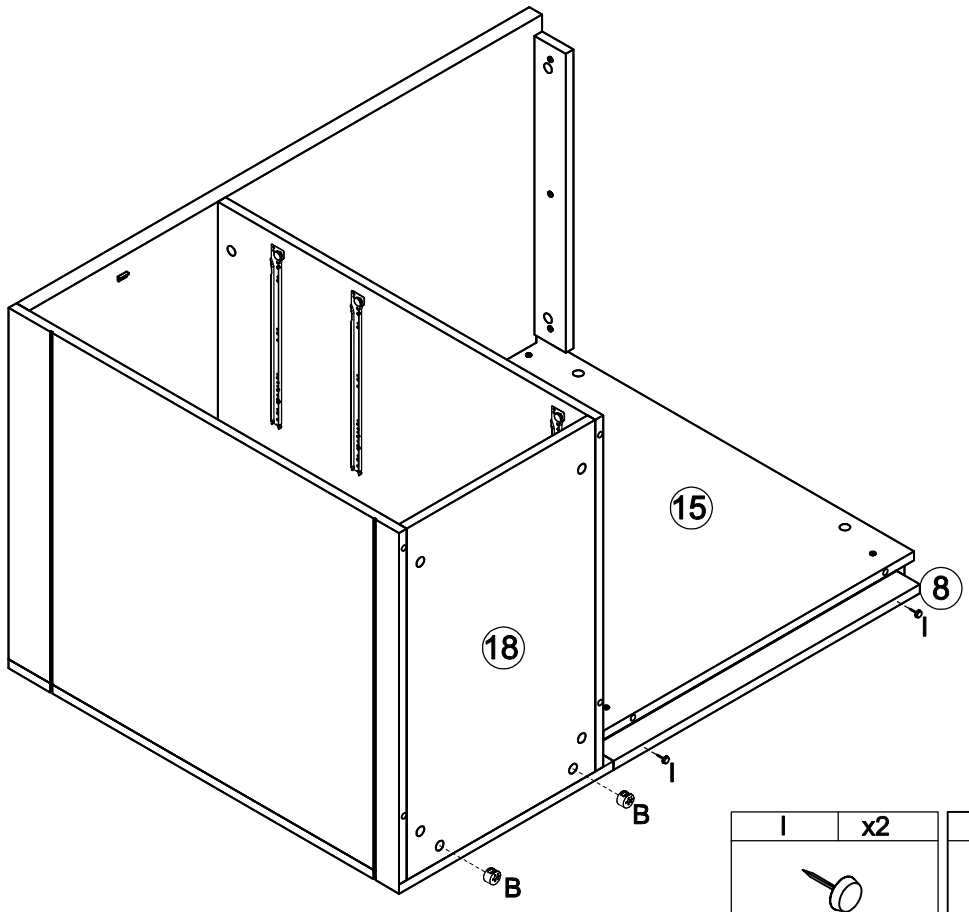


I	x2

B	x2

STEP32

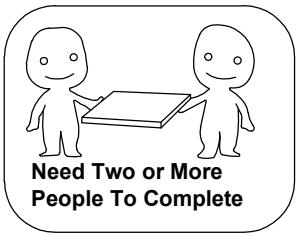

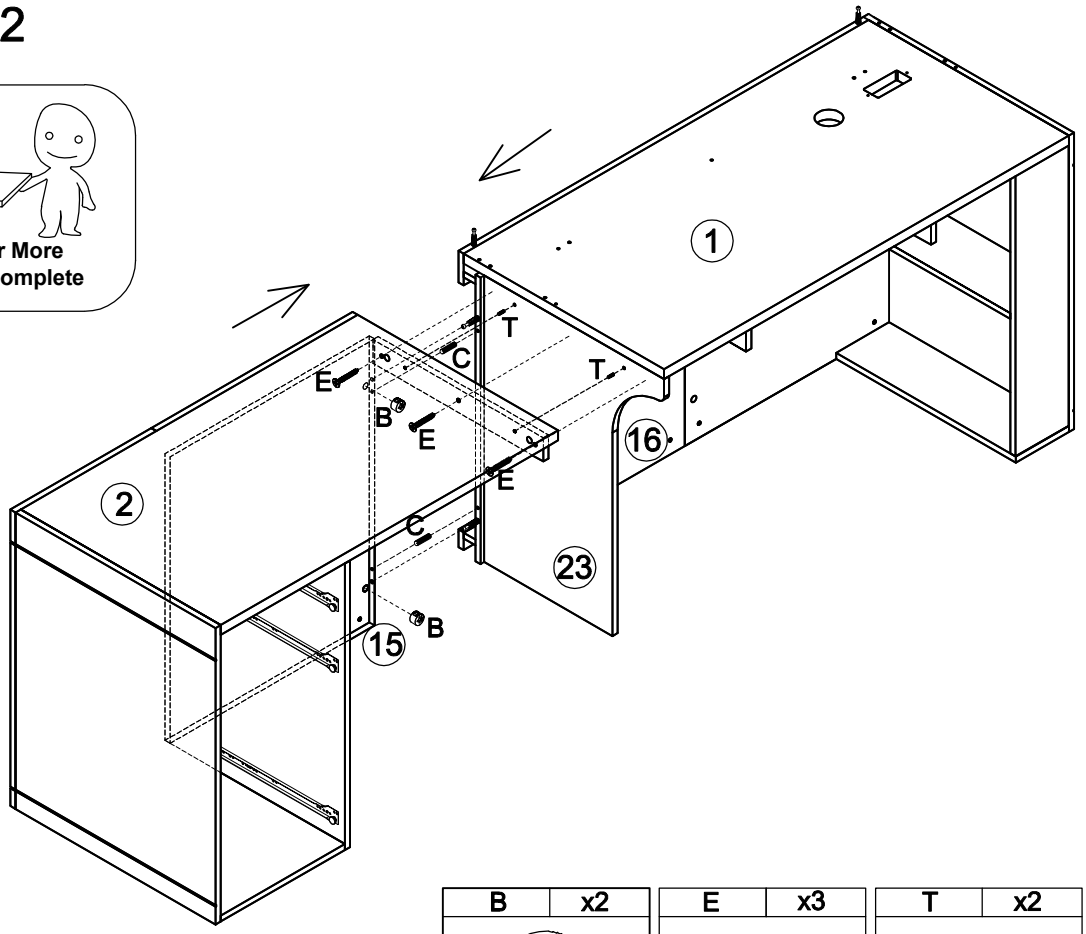


B	x2
	


E	x3
	Ø4x25mm

T	x2
	Ø6x20mm


C	x2
	Ø6x30mm


STEP33

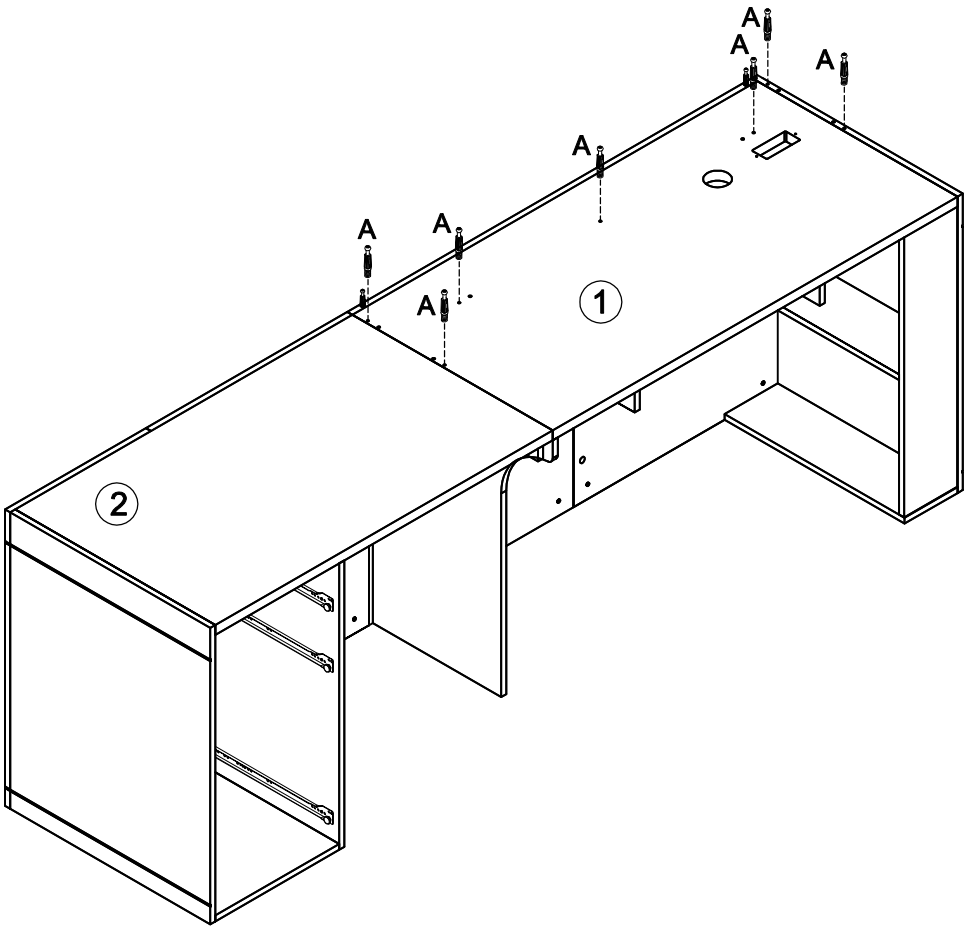

A	x7
	Ø6x32mm


STEP34

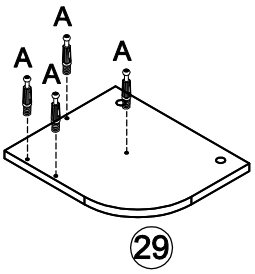


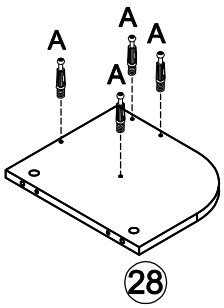


A	x8
	
Ø6x32mm	


STEP35

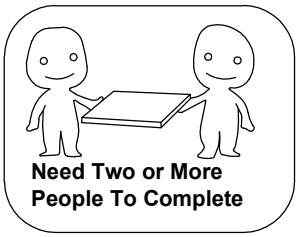

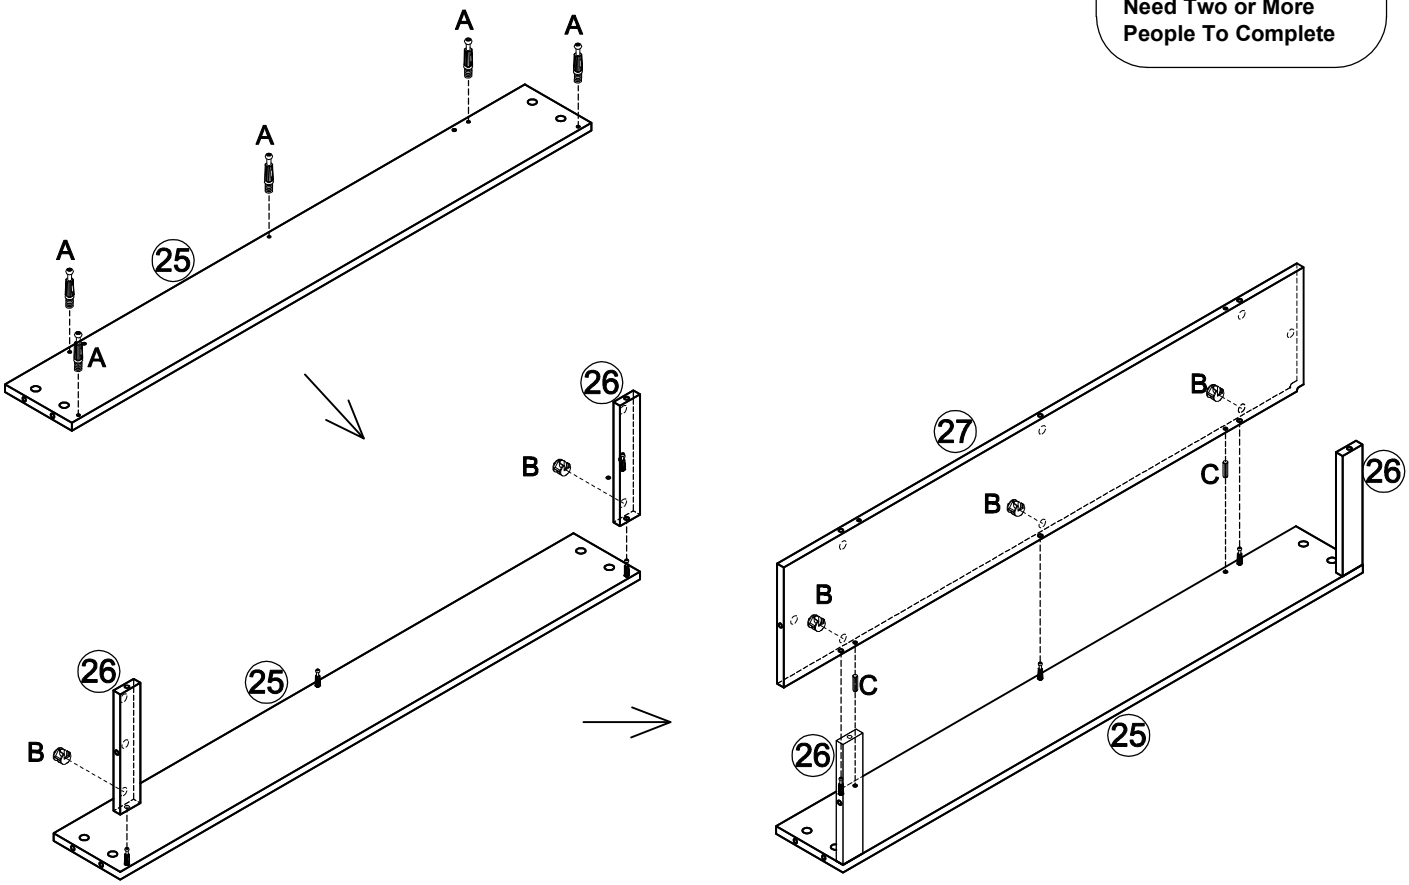


A	x5	B	x5	C	x2
					
Ø6x32mm				Ø6x30mm	


STEP36

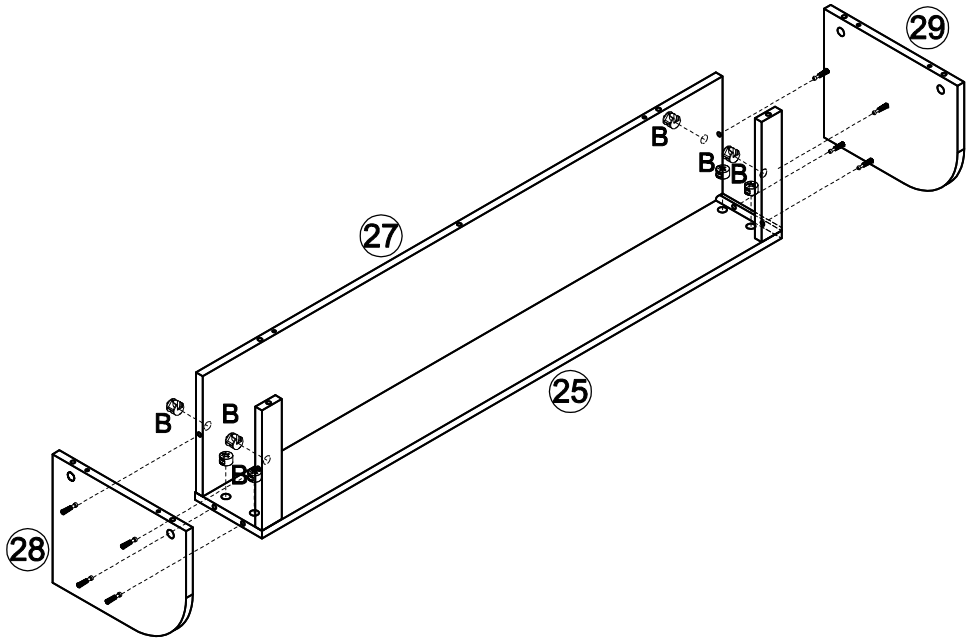

B	x8
	

STEP37

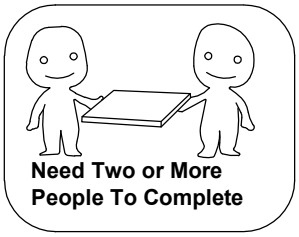


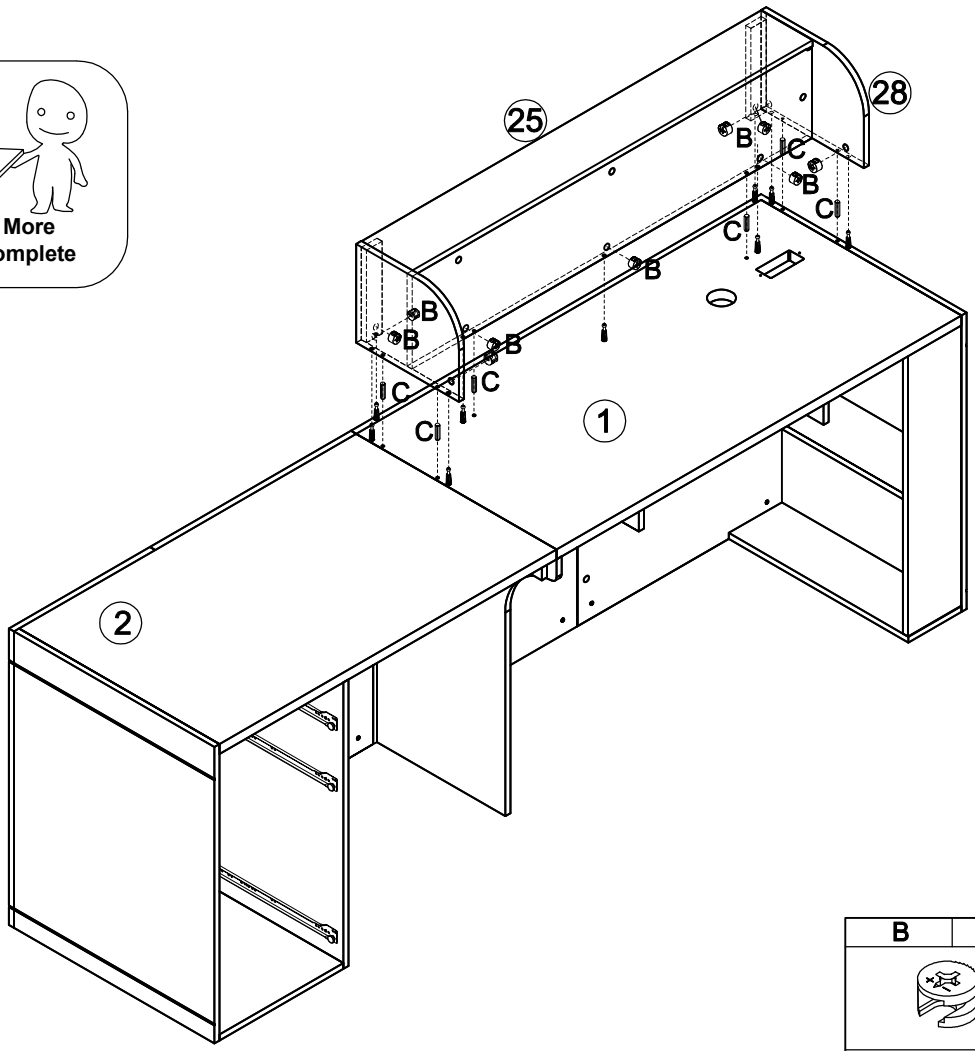


B	x9

C	x6
	
Ø6x30mm	

STEP38

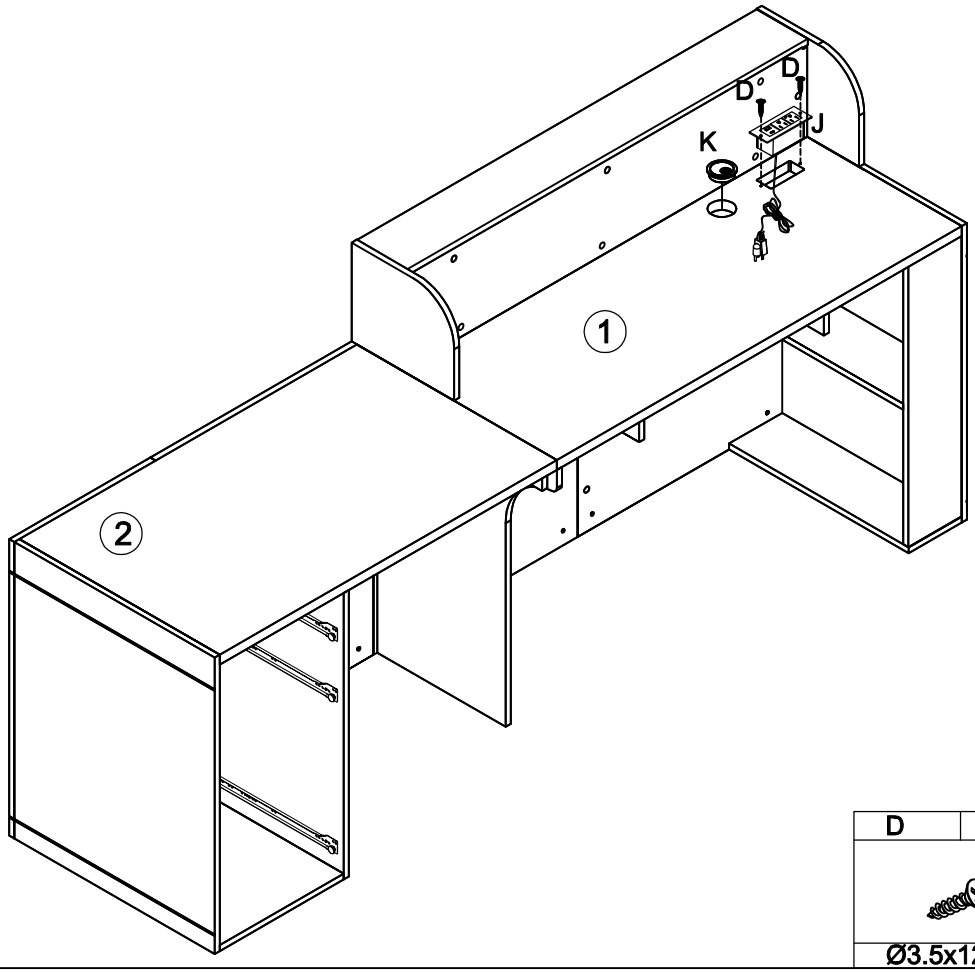


J	x1
	

D	x2
Ø3.5x12mm	


K	x1
	

STEP39

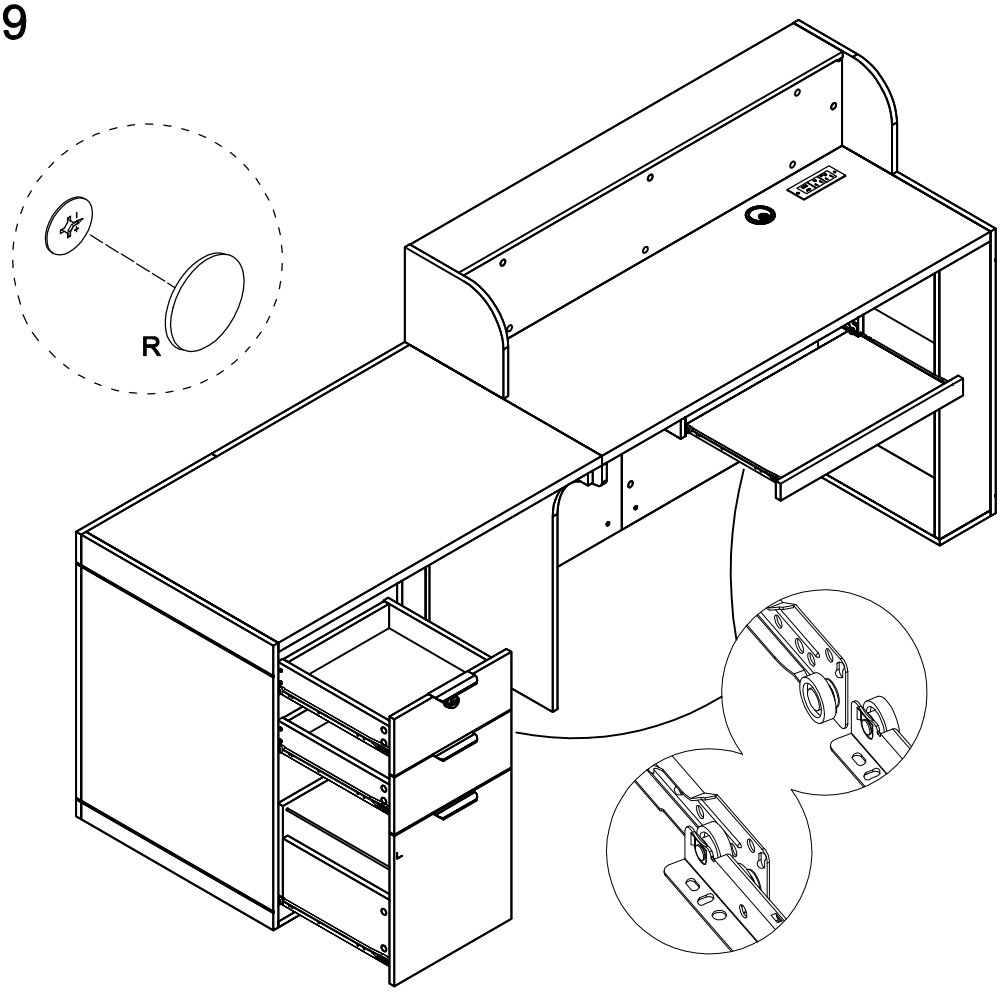

R	x50
	

STEP40

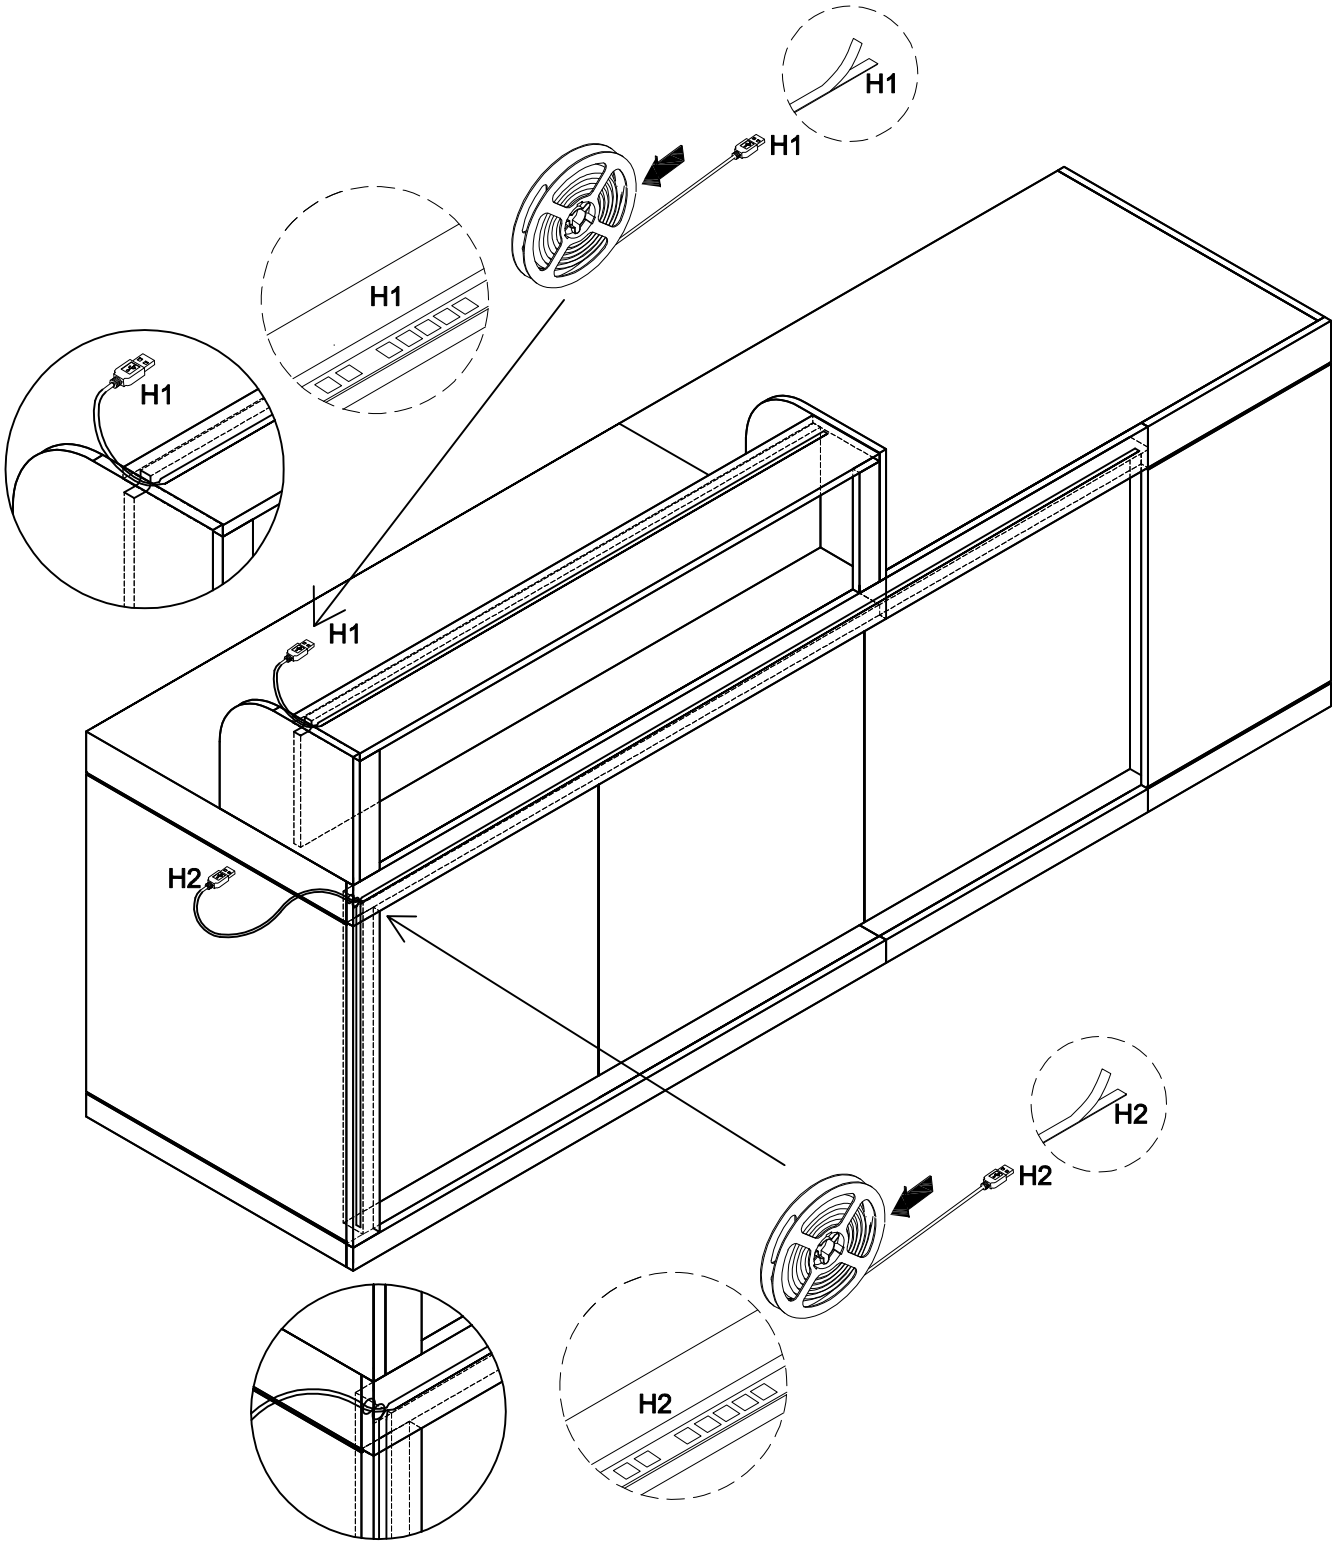

Note: There are additional USB-A ports at the bottom of the power strip. You can plug the LED strip into the bottom of the outlet.

H1	x1
H2	x1