


# Hidden Bracket

## Installation Directions

**Recommended weight rating:** 15lb. per screw installed into stud - 5lb. per anchor. See back page.

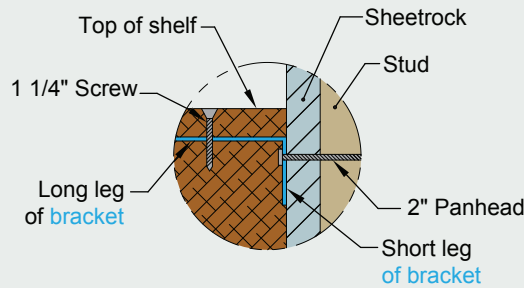

### TOOL LIST



- Phillips screwdriver/bit
- Pencil and Level
- Drill or Drill Driver
- 1/4" bit for masonry
- Drill bit 1/8" and 3/16"
- Stud finder is helpful

### NOTE Thin brick / stone / veneers / tile.

Drill 1/4" hole thru wall board to the studs behind the veneer. The screws must penetrate the studs a minimum of 1 1/2". If veneer is over masonry, anchors must be into the concrete block or wall behind the veneer. Screw length may vary and must be purchased by customer. Contact us if you require assistance.

1

Find the studs in your wall and mark them (Figure A). Make corresponding marks on the bracket toward the bend line. Keep screws close to the bend in bracket. **VERY IMPORTANT!**

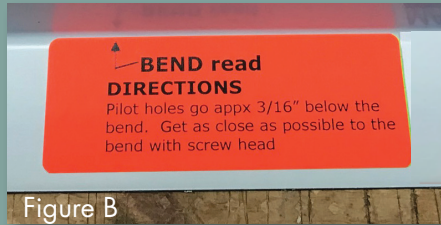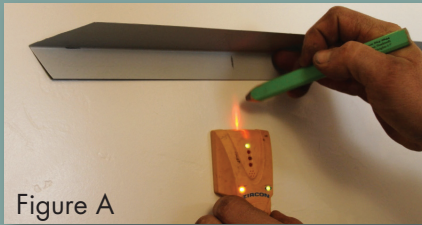

2

Screw the bracket to the wall, **MAKING SURE YOU HIT THE STUDS**. Use a 2" pan head screw. To ease installation of screws, pre-drill a 1/8" diameter hole in the studs, especially if you are using a hand screw driver. **If bracket warps or twists a screw may have been overtightened. If this happens it is usually due to a wall not being flat. Remedy: loosen the screw that is over tightened or too deep.** (Figure C).



- ❑ For shelves <18" wide: use 1 screw into stud and 1 anchor, or 2 anchors.
- ❑ 19" – 32": either into 2 studs or 1 stud and 1 anchor
- ❑ 33" up to 48": 2 screws into studs, 3 is better.
- ❑ 49" – 60": 3 screws into studs
- ❑ 61" – 71": 4 screws into studs.
- ❑ 72" & > : 5 screws into studs
- ❑ IF USING supplied ANCHORS, drill a 1/4" diameter hole for the anchor, use the silver screw supplied

3

There is a corresponding saw cut groove (Figure D) in the back of the mantel or shelf. Slide the mantel on (Figure E) and **push it tight to the wall**. Install supplied 1 1/4" or 1 5/8" screws into the countersunk holes in the top (Figure F), lightly lift front of shelf or mantel while pushing it tight to the wall. The screws will go through the top of the shelf in pilot holes, through the metal bracket and into the wood below. (See Figure F) Do not over-tighten the screws. They should be flush with the top of the shelf when installed properly. (See Figure G)

