




Beverly Queen Storage bed Assembly instructions


Hardware included in headboard carton to attach bed feet and wings.

E	F	I	R	C	K
Φ8MM	H=10CM	Φ8MM	Φ8*70MM	Φ8*60 MM	Φ8*80 MM
14PCS	4PCS	1PC	8PCS	4PCS	2PCS

①

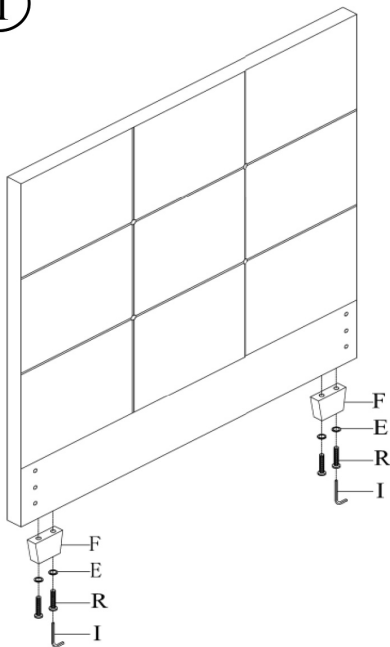

②

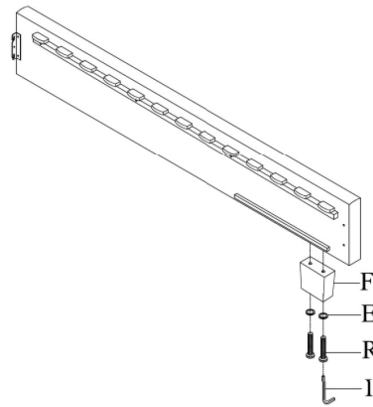

Step#1

Retrieve bed feet from carton fastened behind the headboard.

Attach bed feet (F) to the headboard using Wrench (I), Bolt (R) and Washer (E).

Step#2

Attach bed feet (F) to the side rails using Wrench (I), Bolt (R) and Washer (E).


CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Beverly Queen Storage bed Assembly instructions

Hardware included in headboard carton to attach bed feet and wings.

E	F	I	R	C	K
					
Φ8MM	H=10CM	Φ8MM	Φ8*70MM	Φ8*60 MM	Φ8*80 MM
14PCS	4PCS	1PC	8PCS	4PCS	2PCS

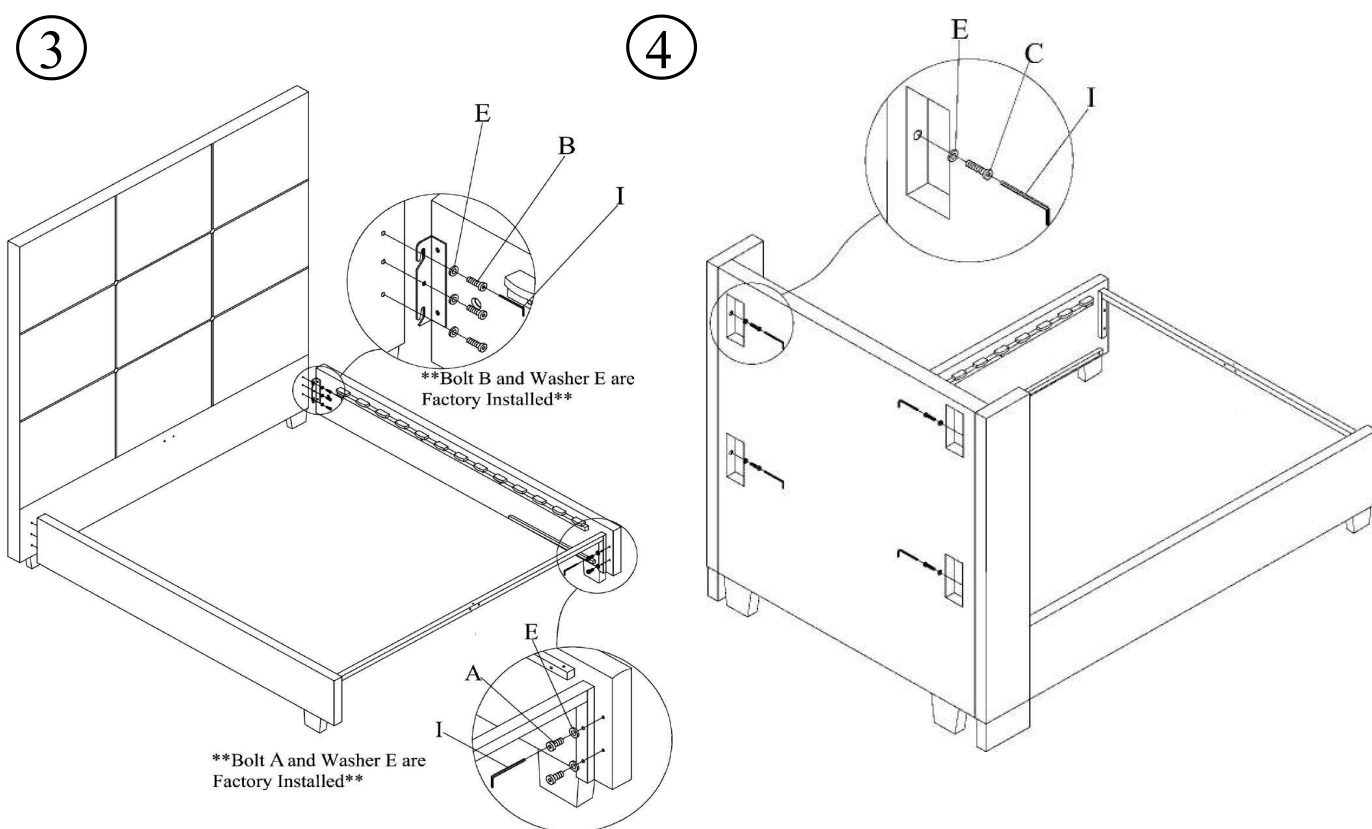

Step#3

Attach side rails to headboard using Wrench(I), Bolt (B) and Washer (E)(factory installed).
Attach Metal support beam (U) to side rails using Wrench(I), Bolt (A) and Washer (E).
(factory installed).

Step#4

Attach wings through Headboard finger tight, using Wrench(I), Bolt (C) and Washer (E).

CONGRATULATIONS ON YOUR NEW BED PURCHASE


~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Beverly Queen Storage bed Assembly instructions


Hardware included in side rails carton to attach center support system.

D	E	I	J	L	M	N	O	P	U	Y	Z
											
Φ6 MM	Φ8 MM	Φ8 MM		Φ8*50 MM	Φ6*40M M						
3PCS	2PCS	1PC	3PCS	2PCS	3PCS	13PCS	1PC	26PCS	1PC	1PC	2PCS

5

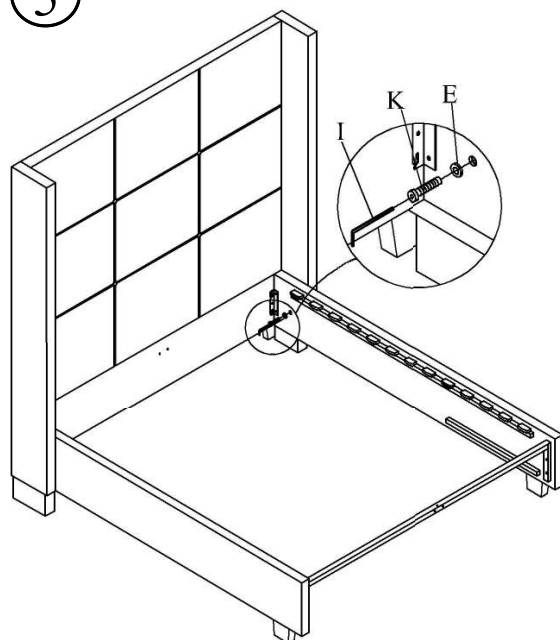

6

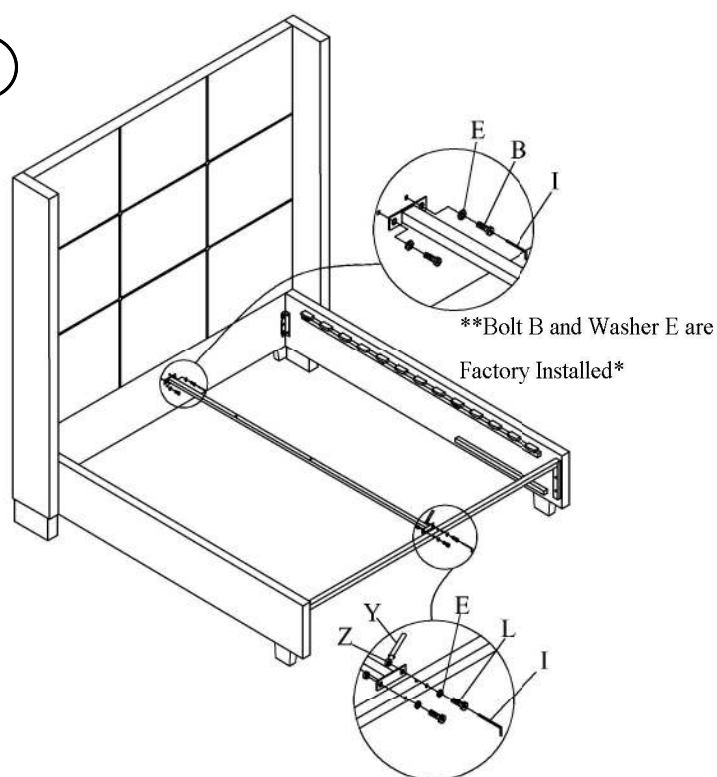

Step#5

Attach wings through side rail finger tight, using Wrench(I), Bolt (K) and Washer (E)
Tighten secure wings (6 bolts) with Allen wrench until snug.

Step#6

Attach center support rail (O) to the Headboard using Wrench (I), Bolt (B) and Washer (E).(factory installed).

Attach center support rail (O) to the Metal support beam (U) using Wrench(I), Bolt (L) ,Washer (E) and Nut(Z). Tighten/secure center support rail with Wrench (Y) .

CONGRATULATIONS ON YOUR NEW BED PURCHASE


~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Beverly Queen Storage bed Assembly instructions


Hardware included in side rails carton to attach center support system.

D	E	I	J	L	M	N	O	P	U	Y	Z
											
Φ6 MM	Φ8 MM	Φ8 MM		Φ8*50 MM	Φ6*40M M						
3PCS	2PCS	1PC	3PCS	2PCS	3PCS	13PCS	1PC	26PCS	1PC	1PC	2PCS

⑧

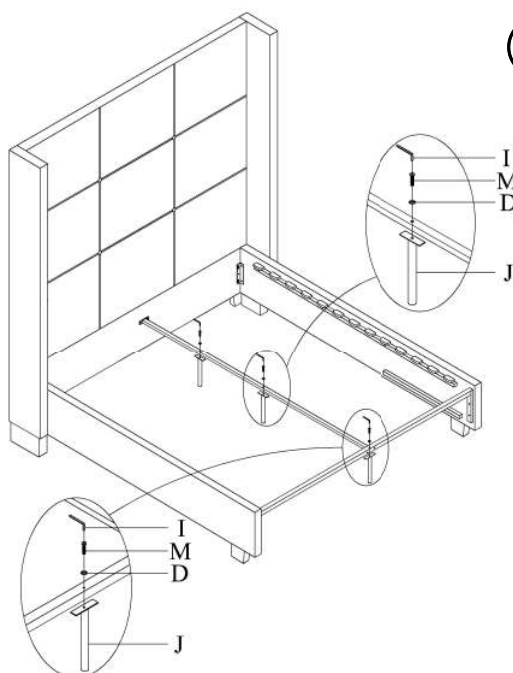

⑨

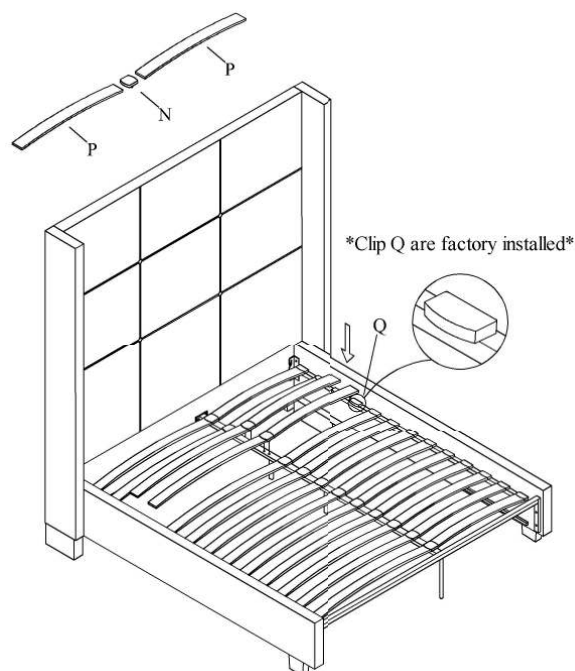

Step#7

Locate bed in final position before attaching center supports.

Step#8

Attach center support legs (J) to the Center support Rail (O) using Wrench(I), Bolt (M) and Washer (D).

Attach center support leg (J) to the Metal support beam (U) using Wrench(I), Bolt (M) and Washer (D).

Step#9

(IMPORTANT: Make sure slats are inserted into center clip BEFORE snapping into place)

Verify Euro Slats System Tension Slats are installed curved upwards per diagram.

Insert tension slats into center clip (N) and factory installed End clip (Q) before snapping into place

CONGRATULATIONS ON YOUR NEW BED PURCHASE


~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Beverly Queen Storage bed Assembly instructions


Hardware included in storage drawer carton.

G	H	D	I
			
Φ6*15MM	H=8 CM	Φ6 MM	Φ8 MM
16PCS	8PCS	16PCS	1PC

10

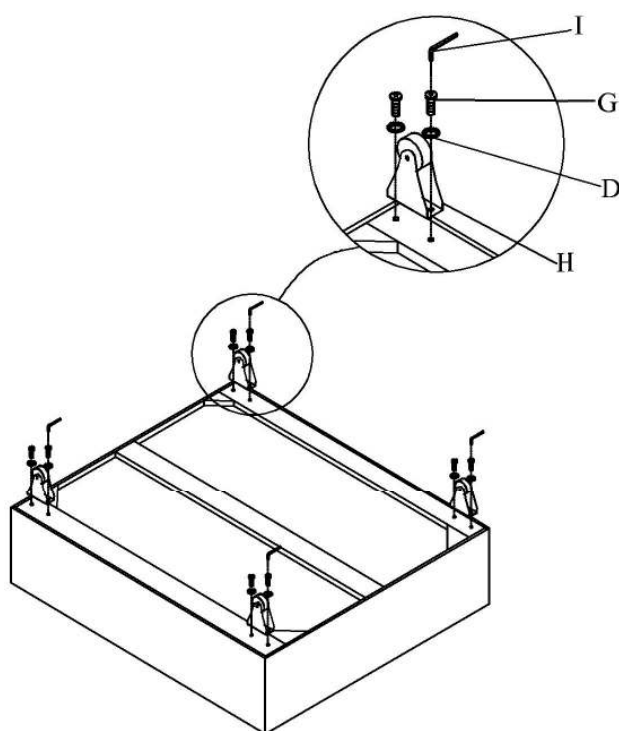

11

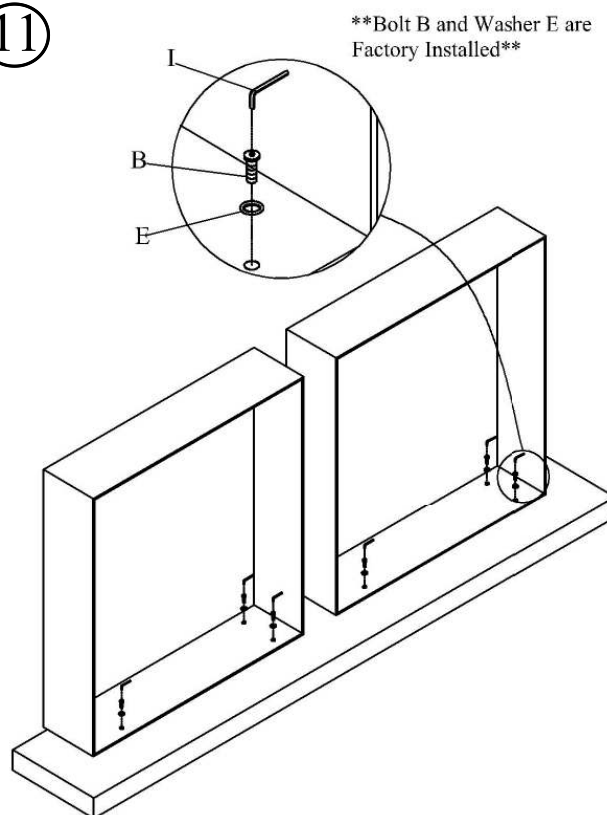

Step#10

Attach casters (H) to the drawer using Wrench(I), Bolt (G) and Washer (D).

Step#11

Attach drawers to the footboard using Wrench (I), Bolt (B) and Washer (E).


Drawers attach 3/4" below bottom of footboard.

CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Beverly Queen Storage bed Assembly instructions

12

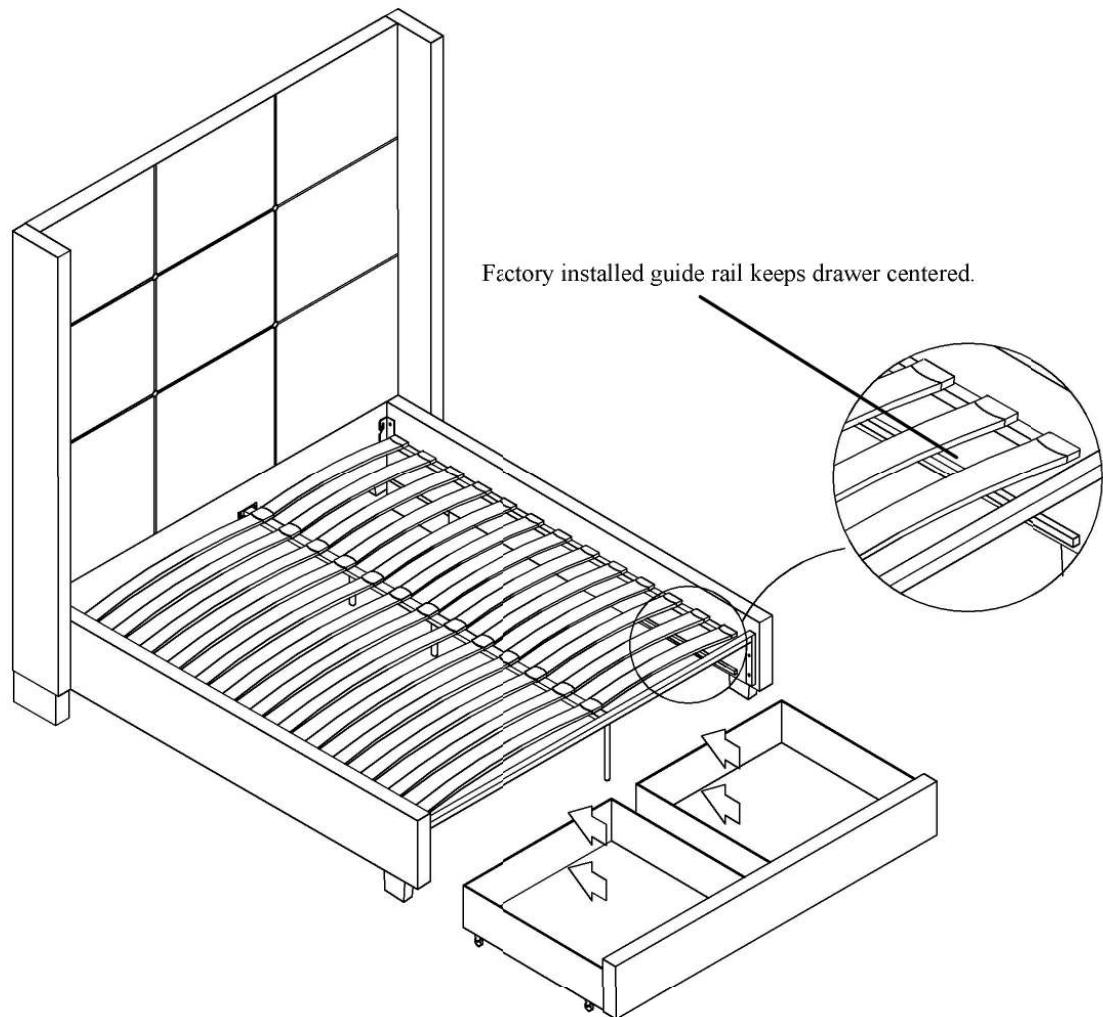

Step#12

Insert/Roll the drawer under the bed.

Factory installed guide rail keeps drawer centered.

CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~