

ASSEMBLY INSTRUCTION - Please Keep For Future Reference

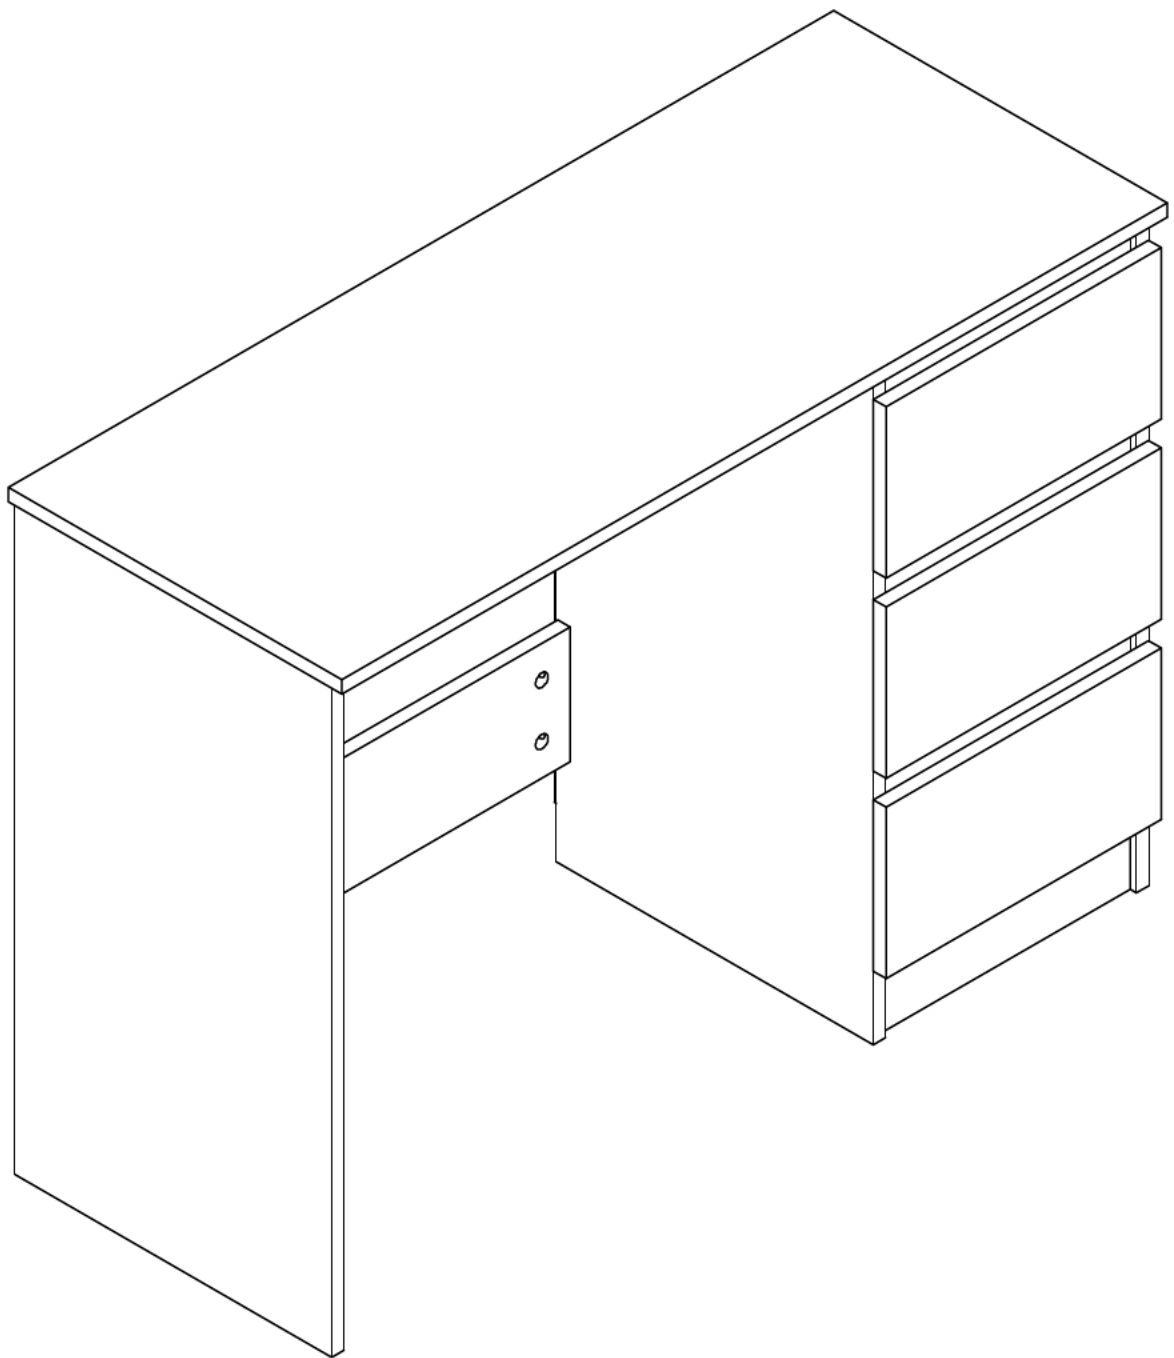

Safety and Care Advice

IMPORTANT - Please Read This Instruction Carefully Before Assembly.






- Check you have all the components and tools listed on page 3.
- Remove all settings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before assembly.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to it's intended position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit.
- Parts of the assembly will be easier with 2 people.
- Do not use power drill/drivers for assembly, or the unit may be damaged.
- Dispose of all packaging carefully and responsibly.



CARE and MAINTENANCE

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


General Hints & Tips

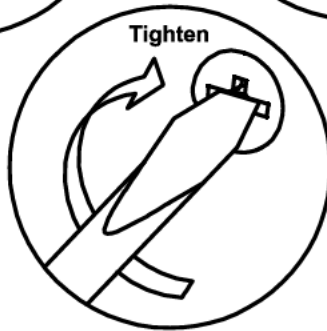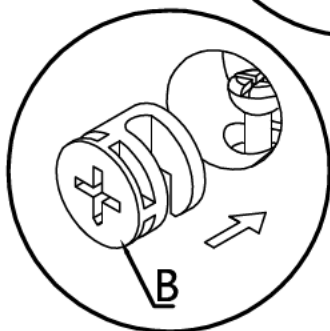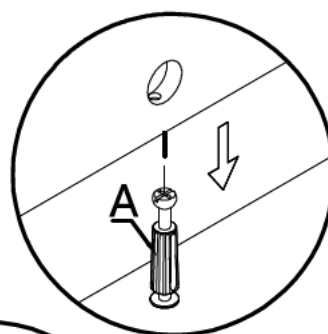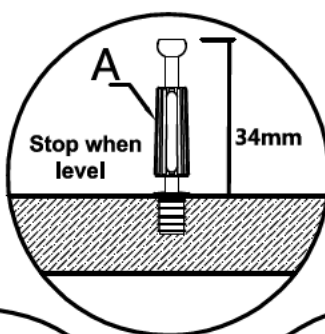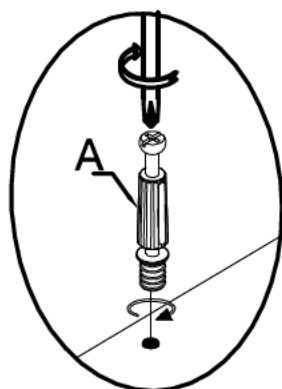







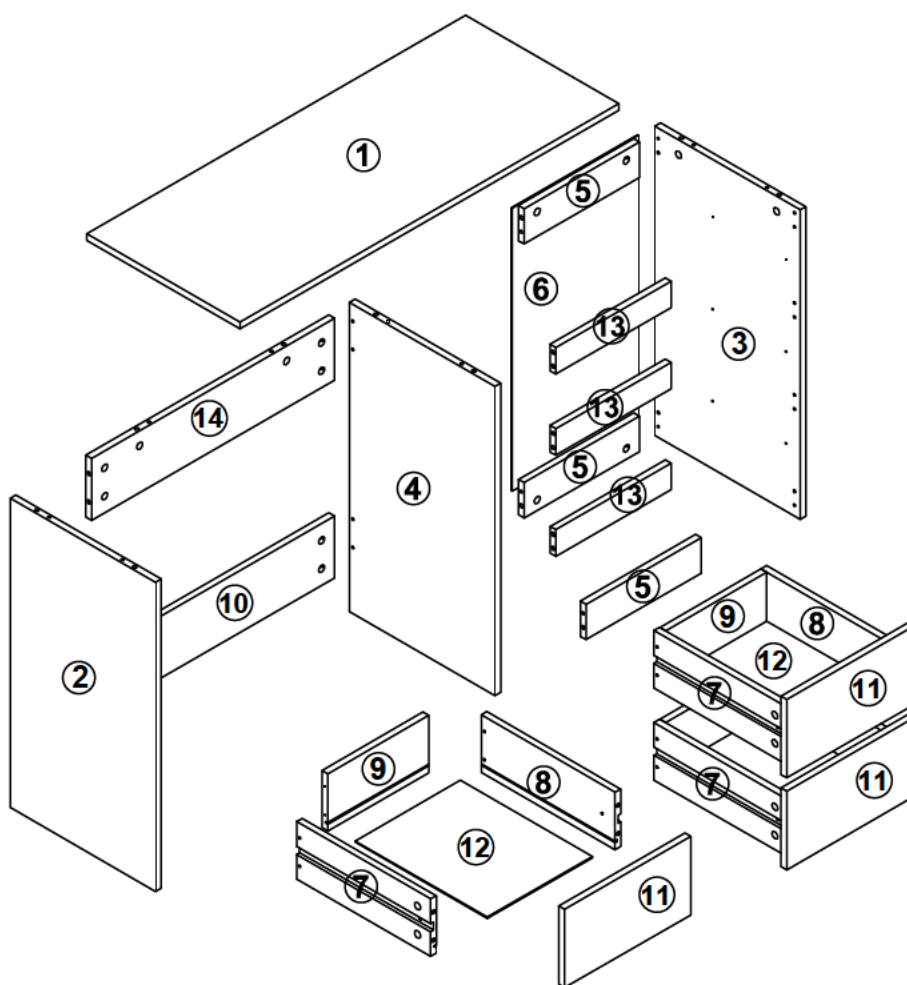


Components and Tools

IMPORTANT - Please Check If You Have All The Components and Tools.

Note: The quantities below are the correct amount to complete the assembly. In some cases more pieces may be supplied than are required.



A=46  Peg M6*34mm	B=46  Lock M15*12mm	C=14  Dowel M6*30mm	D=12  Screw M3.5*14mm	E=12  Screw M4*38	F=6  Plastic Feet
G=8  Pin	H=6  Screw M4*12mm	J=6  Drawer Runner			

Assembly Instruction

Step 1


A=20

C=8



Peg

Dowel

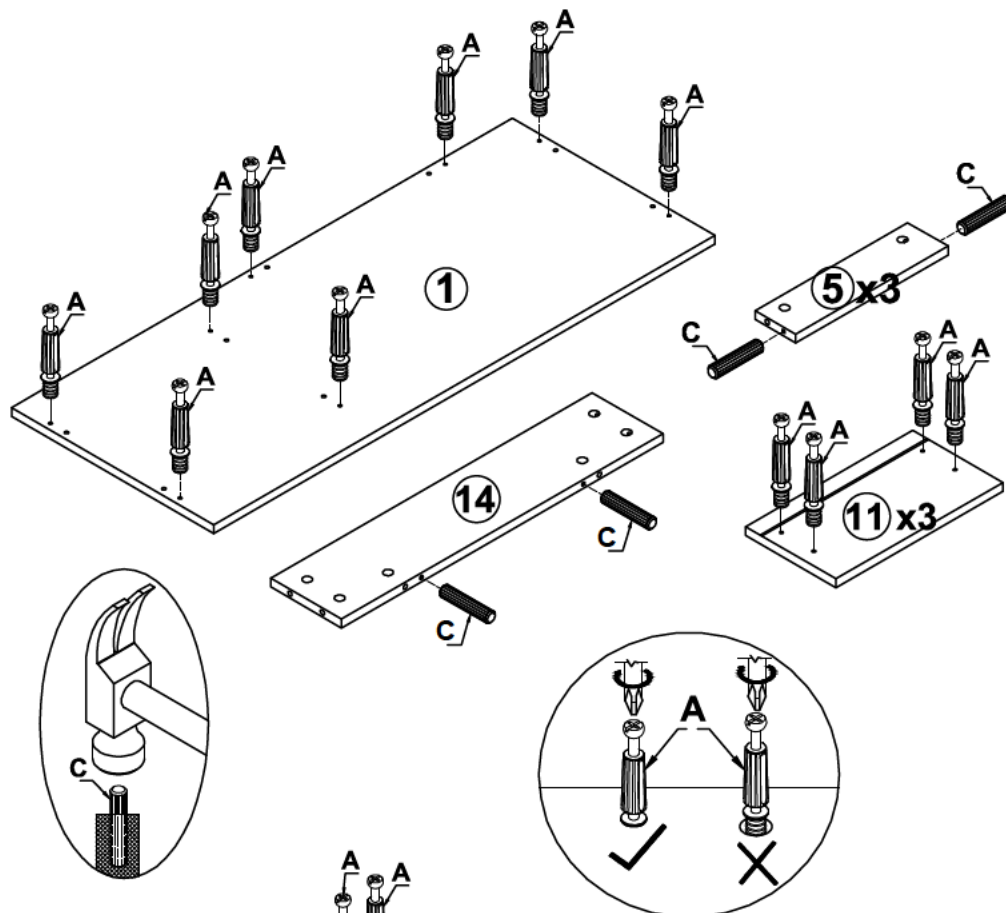

Step 2

A=13

C=4



Peg

Dowel


J=3

D=6



Drawer Runner

Screw M3.5*14mm

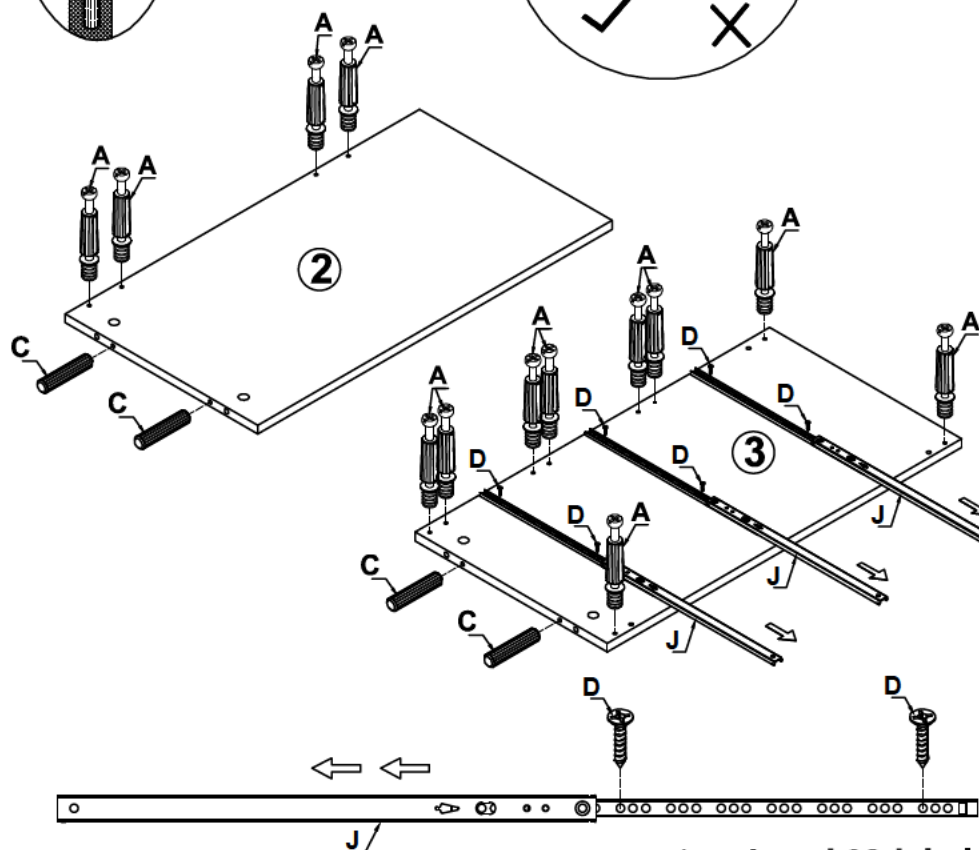

Screw in 4th and 22th holes.

Assembly Instruction

Step 3

A=13

C=2



Peg

Dowel


J=3

D=6



Drawer
Runner

Screw
M3.5*14mm

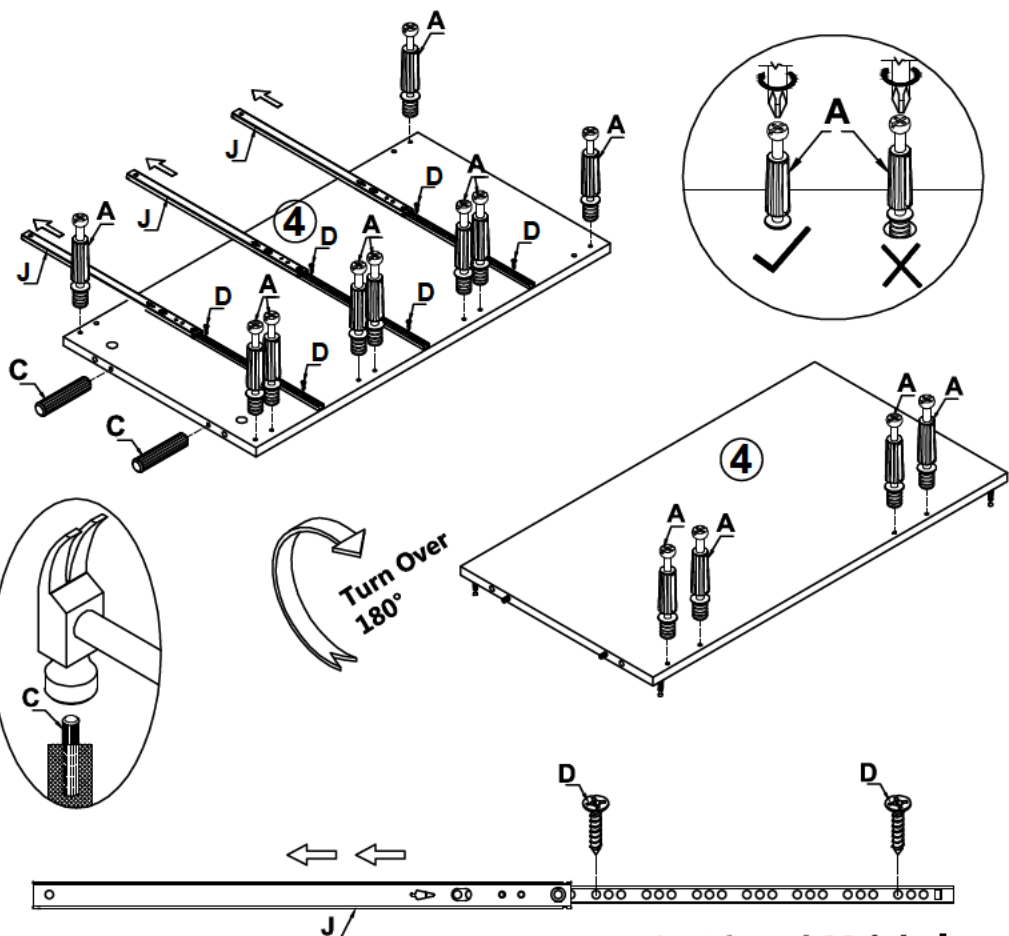


Step 4

B=9



Lock

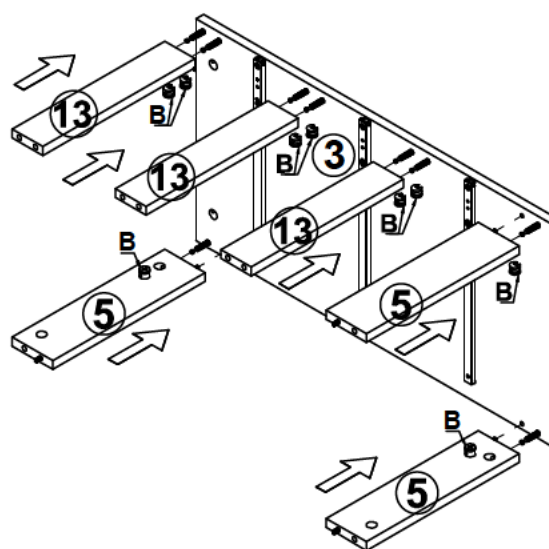



Assembly Instruction

Step 5

B=9



Lock

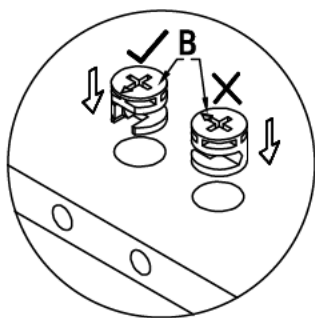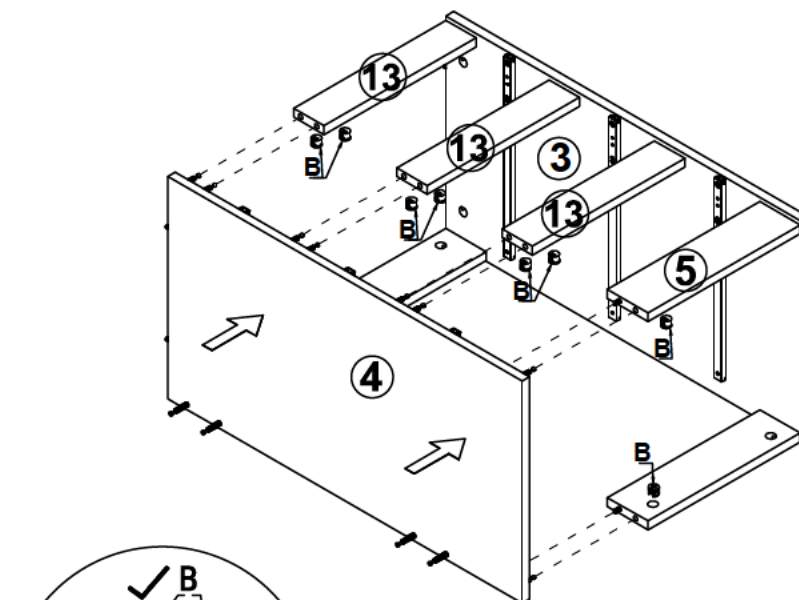


Step 6

B=4



Lock

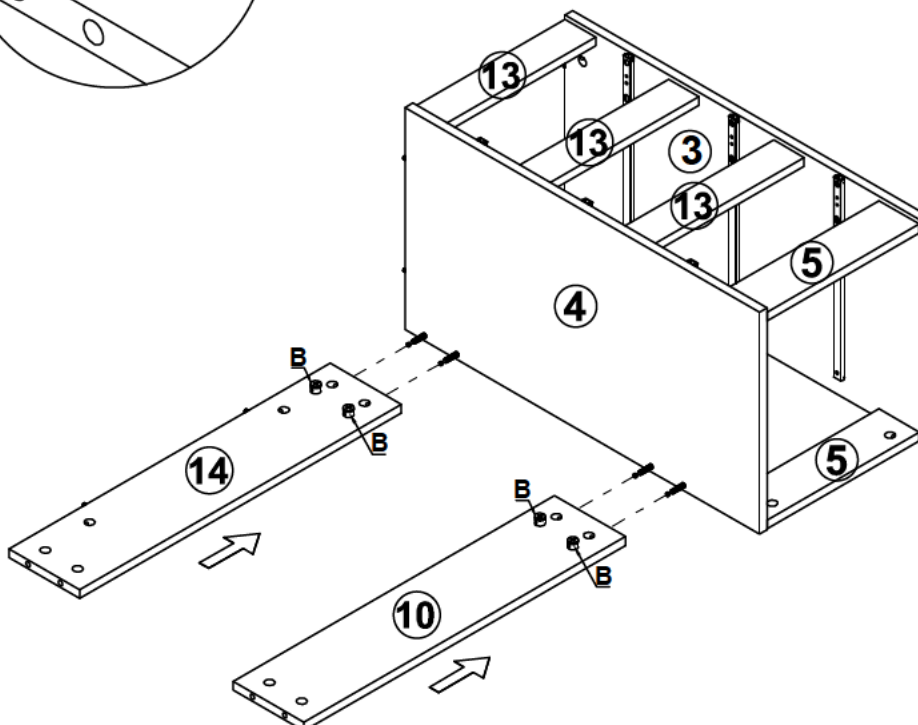


Assembly Instruction

Step 7

B=4



Lock

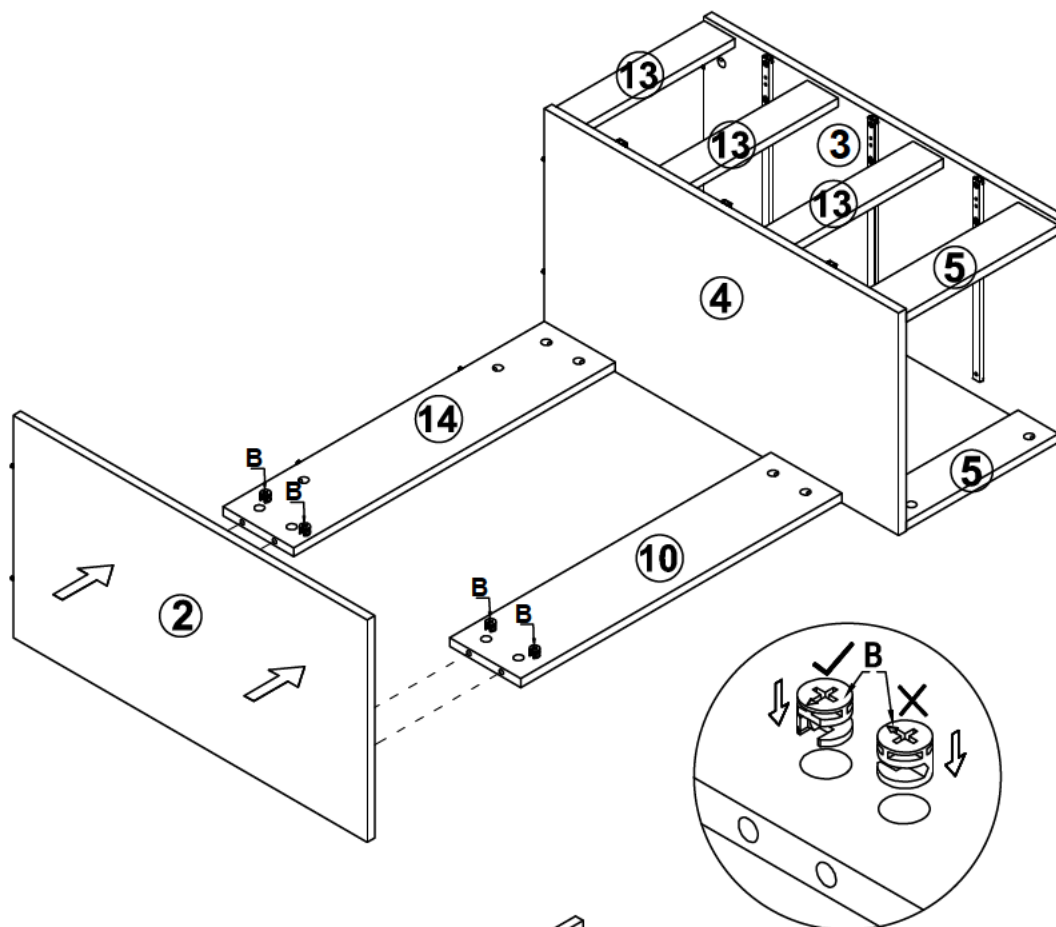


Step 8

B=8



Lock

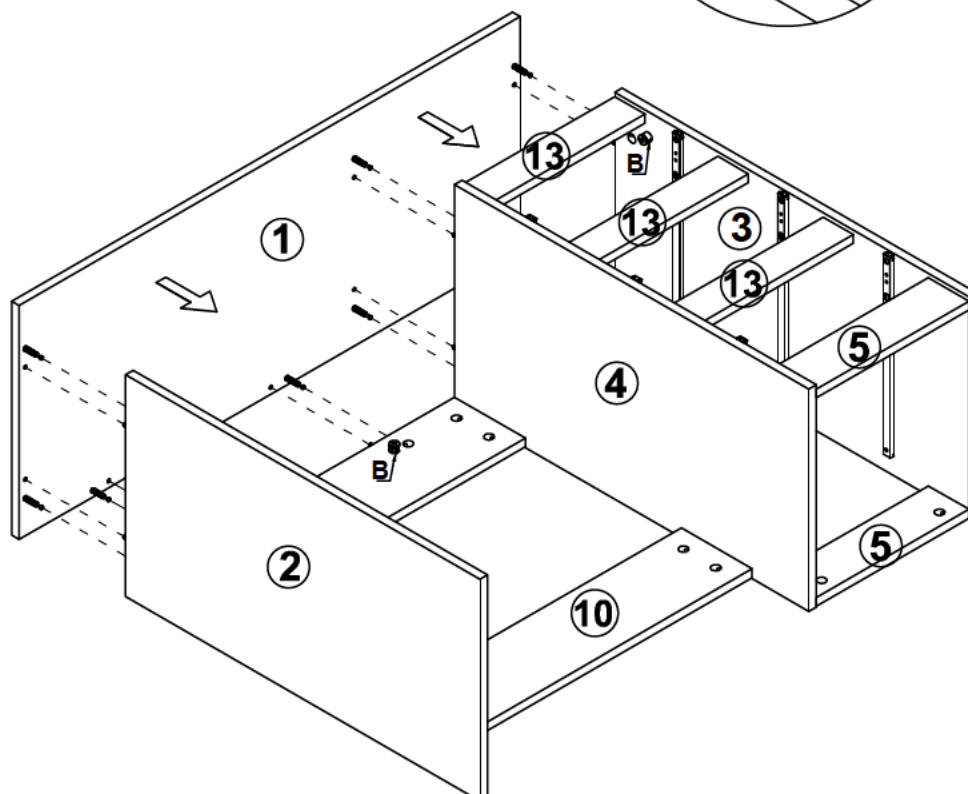

Assembly Instruction

Step 9

G=8


F=6



Pin



Plastic
Feet

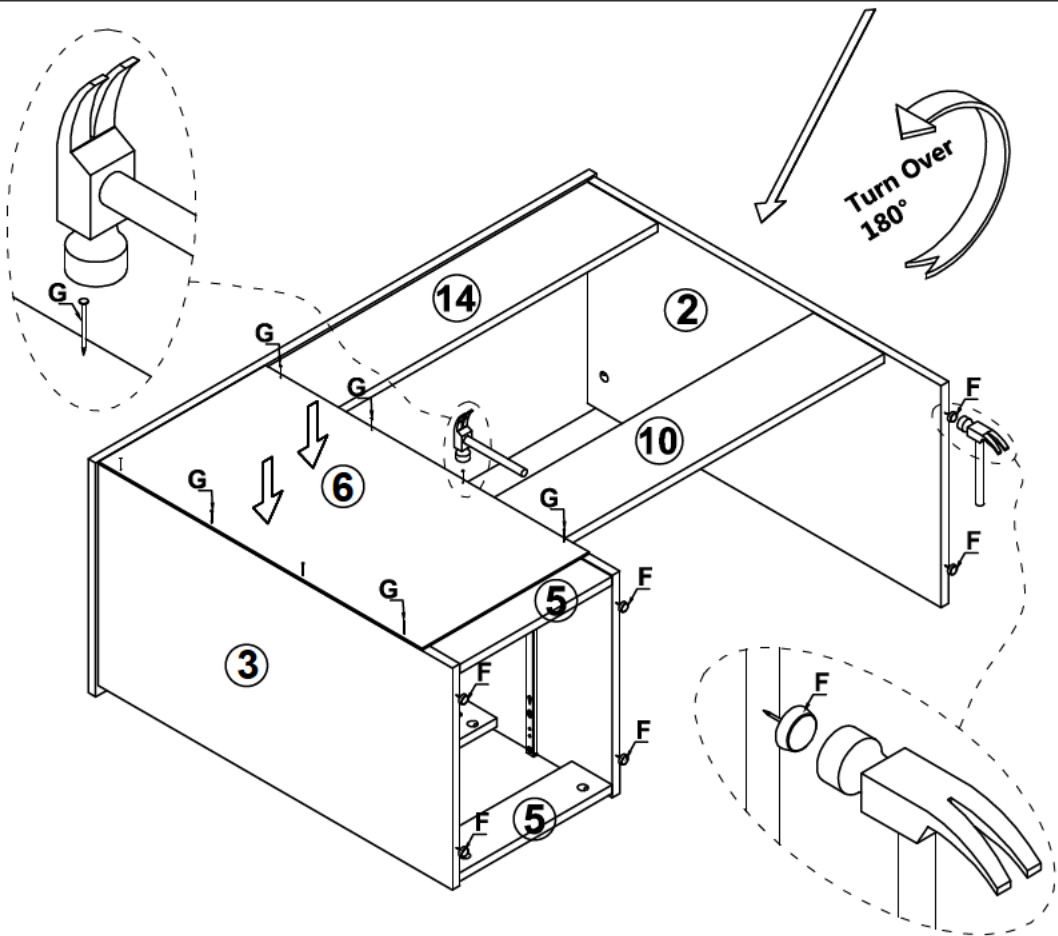

Step 10

B=12


E=12



Lock




Screw
M4*38

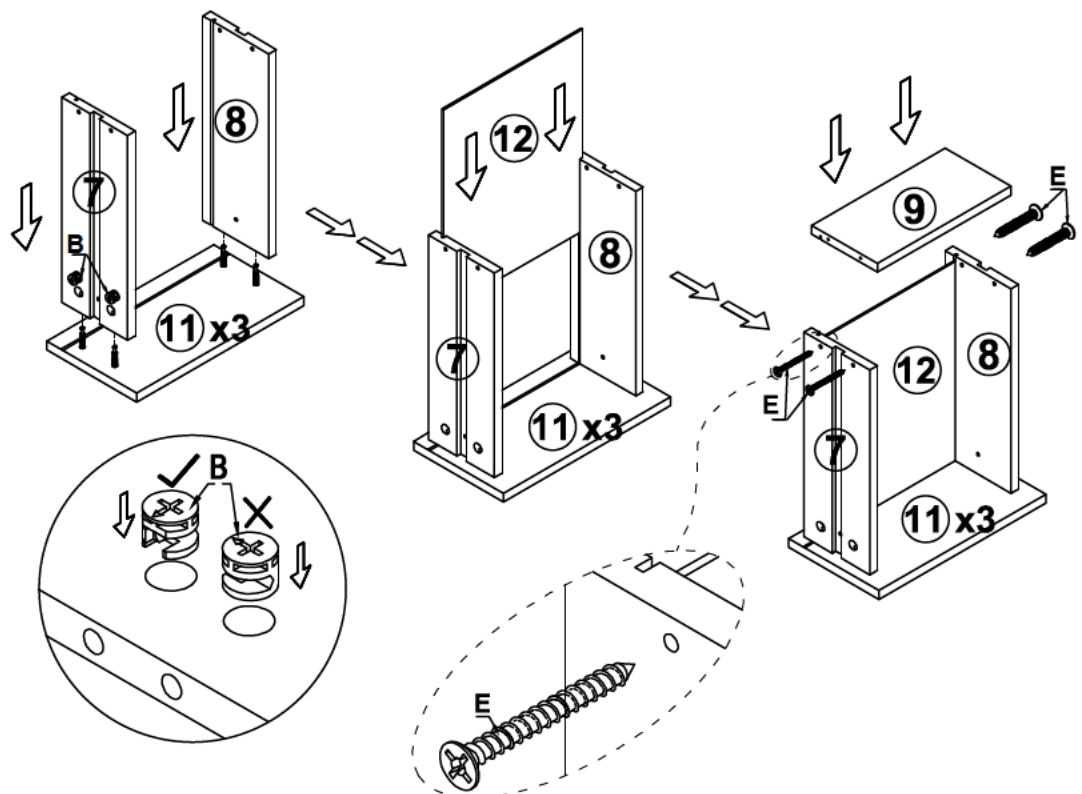


Assembly Instruction

Step 11

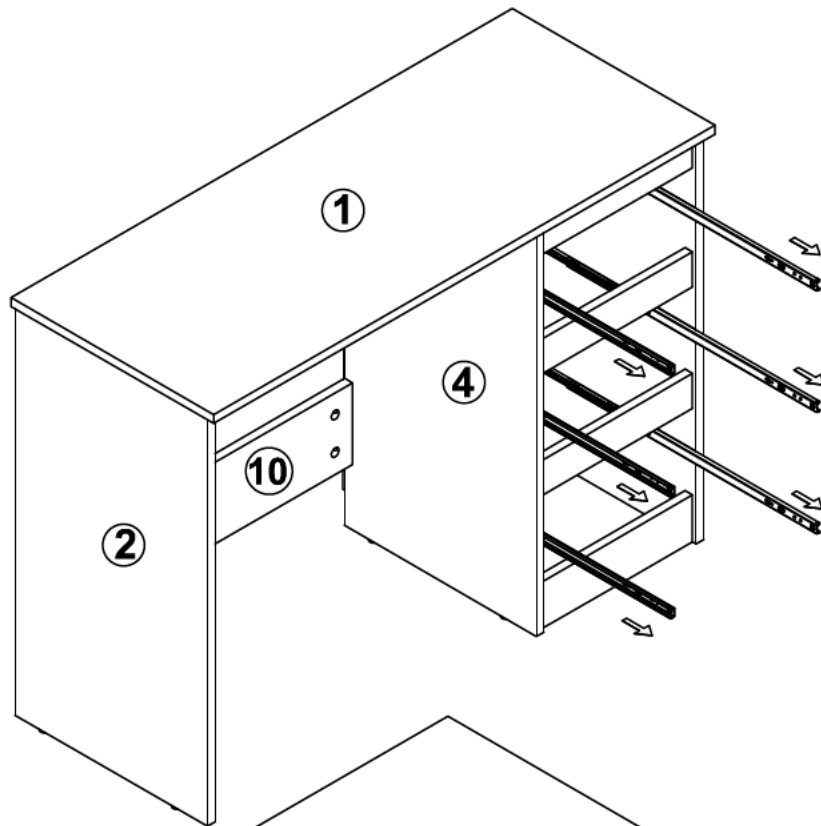

Step 12

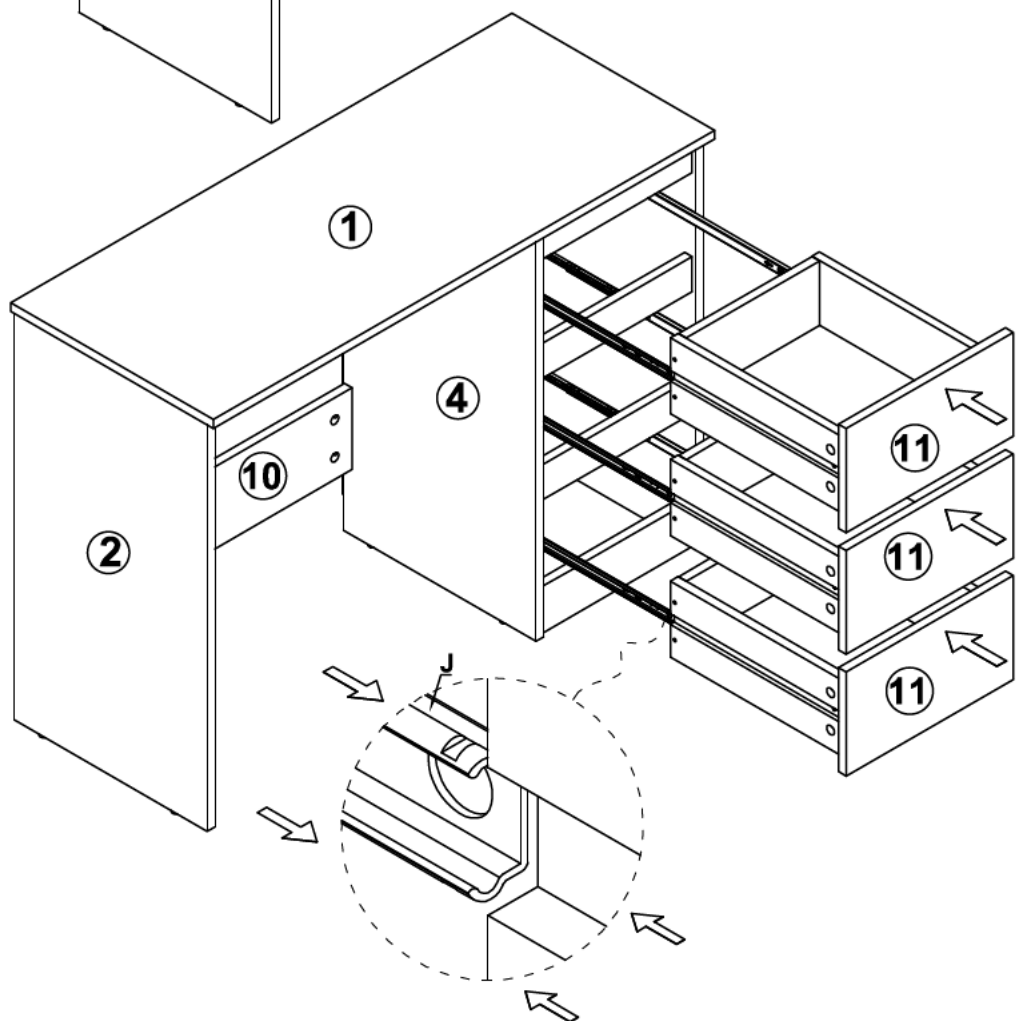




Assembly Instruction

Step 13

H=6



Screw
M4*12mm

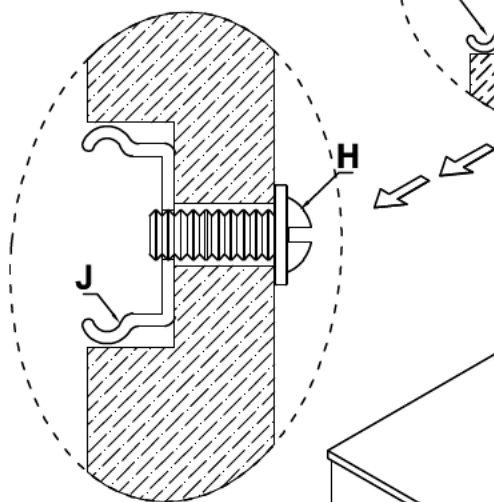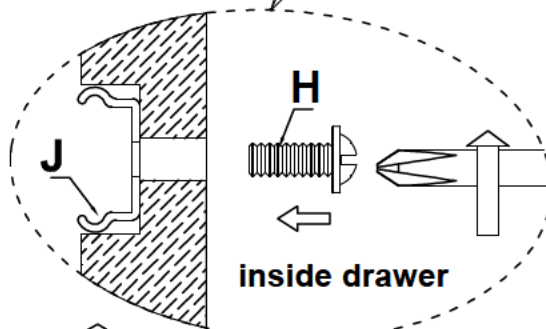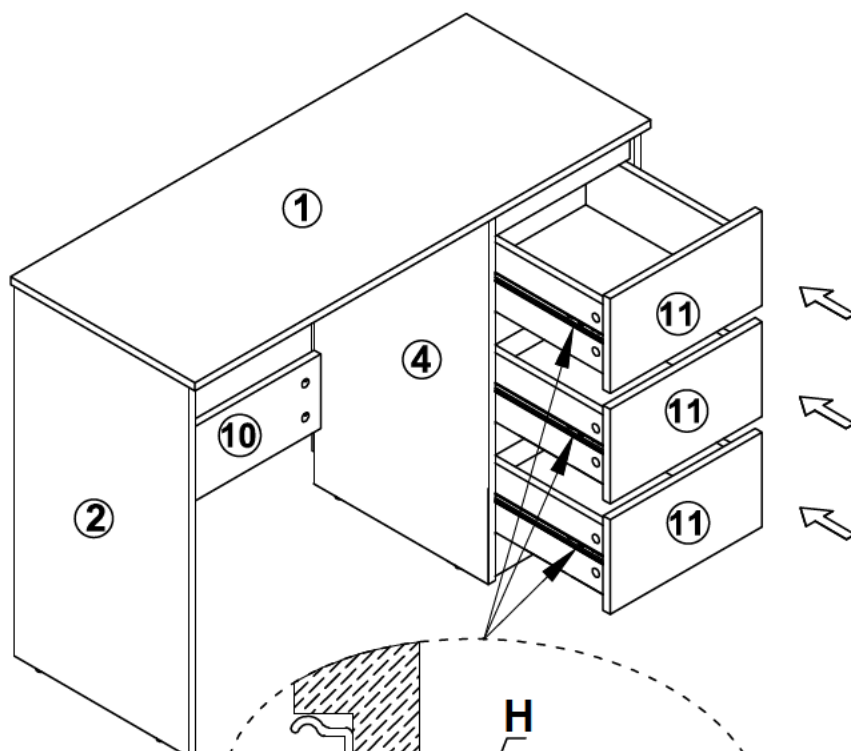

Step 14

