

UK-DGZCWG_V2.0

STORAGE CABINET

ASSEMBLY INSTRUCTION

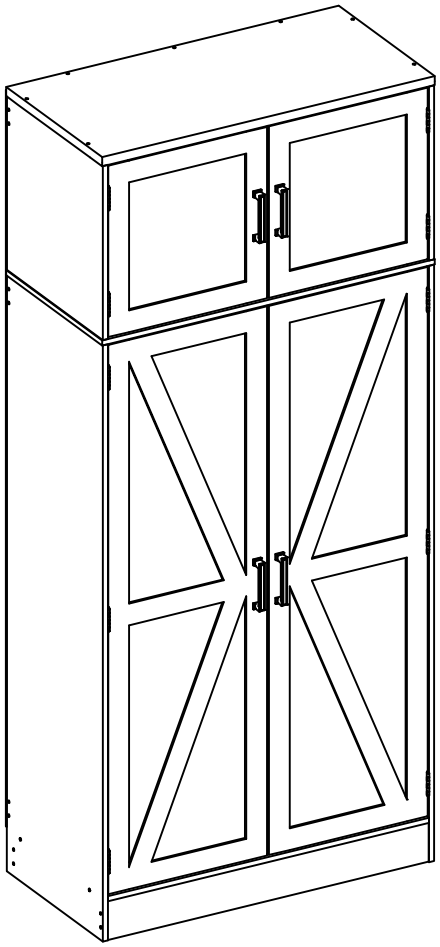

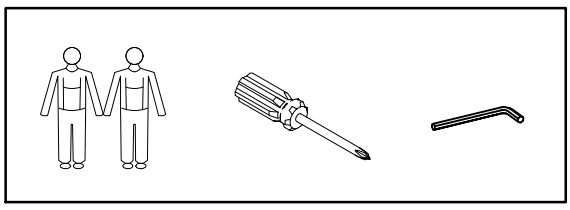

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

homeycs@hotmail.com

Dear Customers,

Thank you for purchasing our products.


As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us from our store or **homeycs@hotmail.com** in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it. Please call for replacement parts or assistance: 1-857-800-8808. Mon-Fri 9am-5pm (PST)



Please follow the instruction manuals and use a pad to protect the product during your assembly.

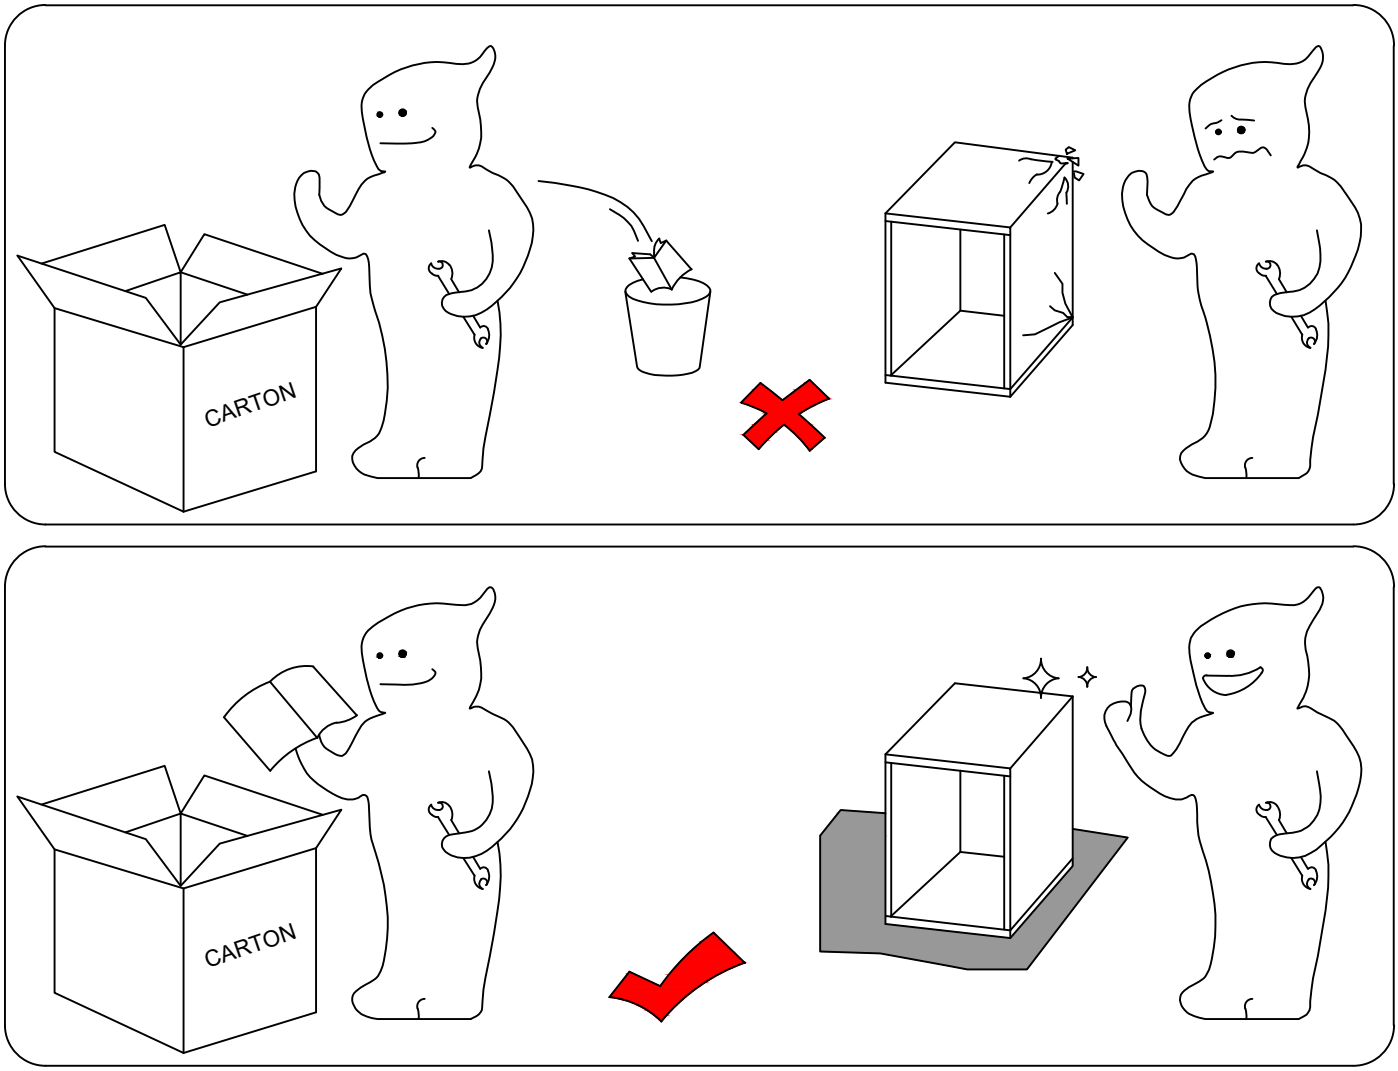


homeycs@hotmail.com

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

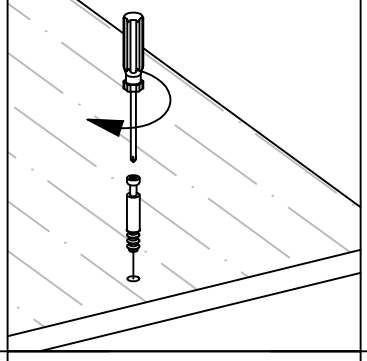

Push the male camlock into the entry hole.


2

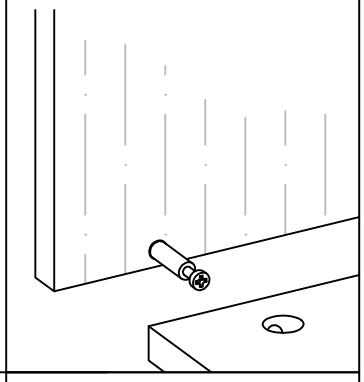

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

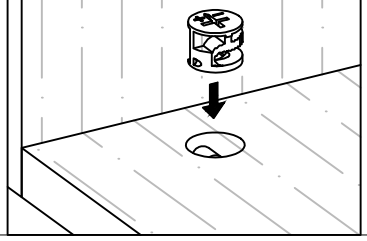



Turn the female camlock clockwise with a screwdriver.


















You should feel a click when the camlock is locked in place.









The joint is now secure.

4

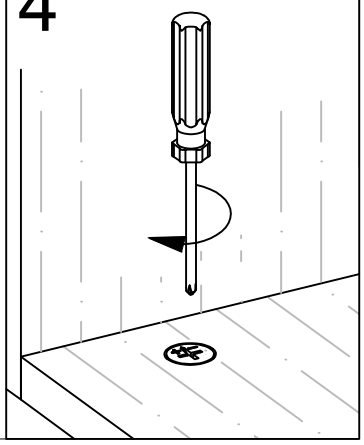


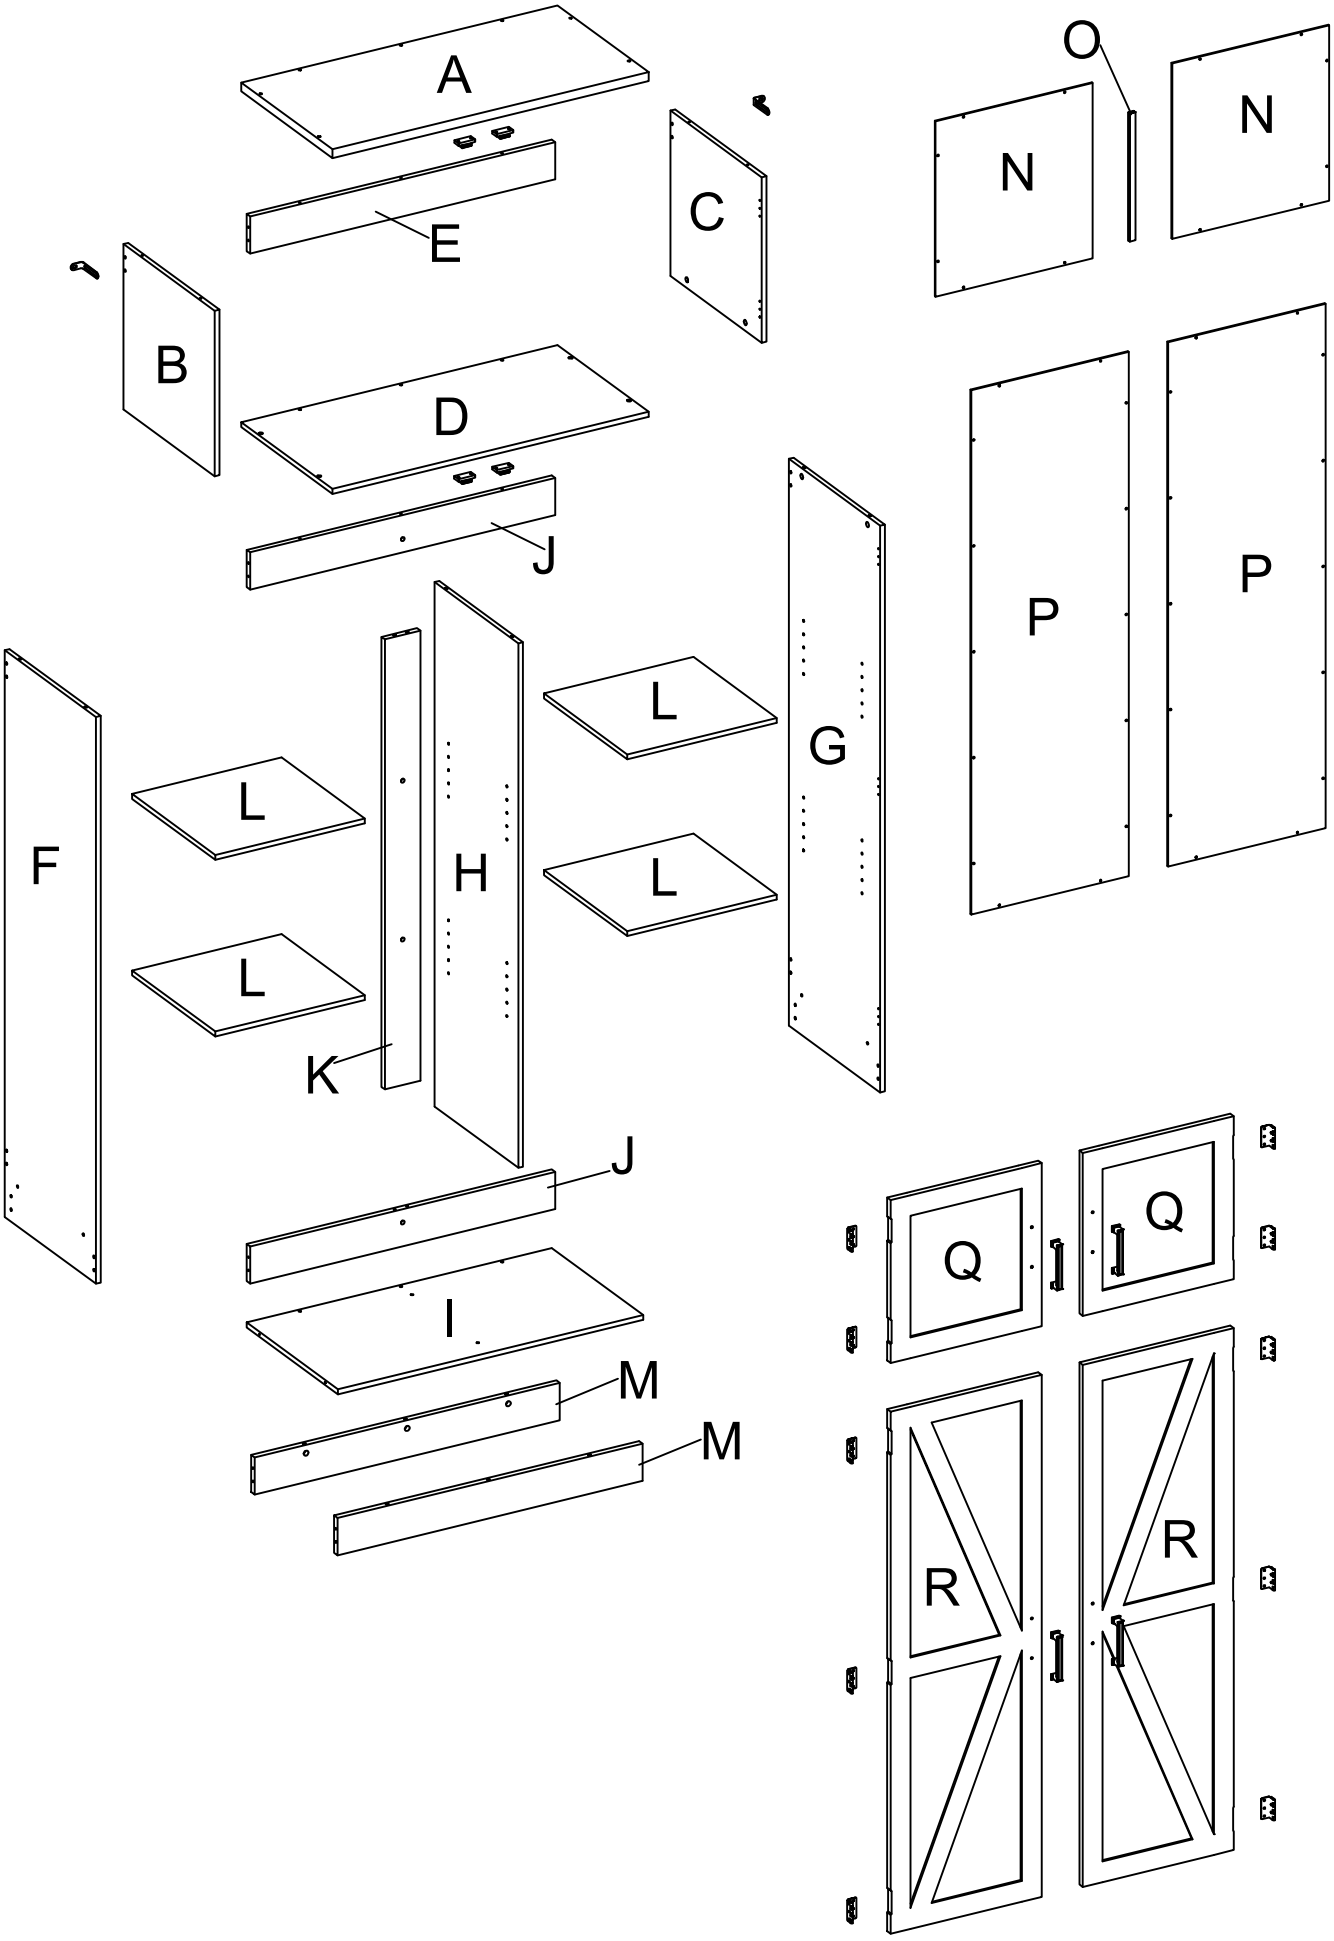
A
E
C
O
N
N
B
D
J
P
P
F
L
L
L
L
H
G
K
J
I
M
M
Q
Q
R
R

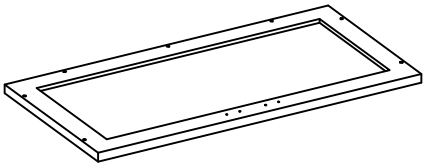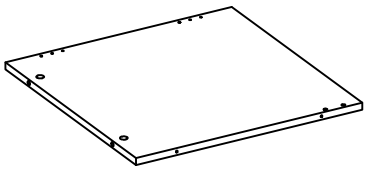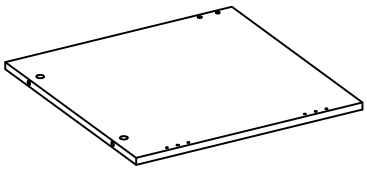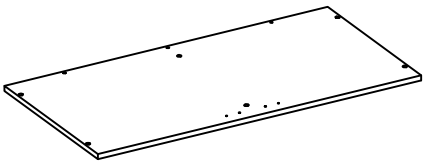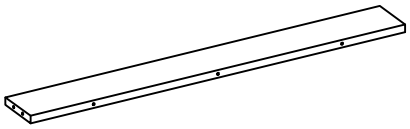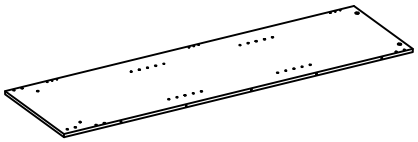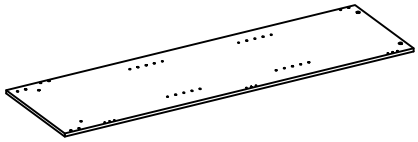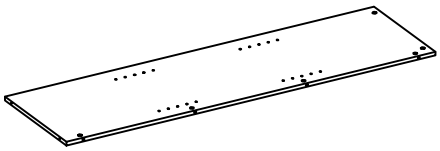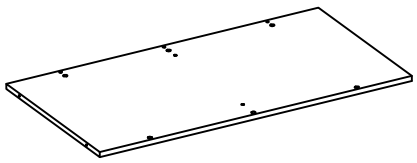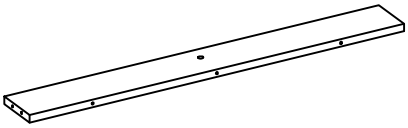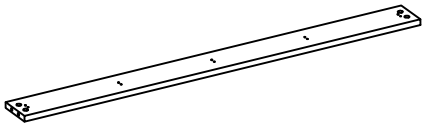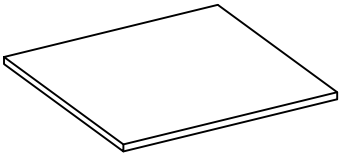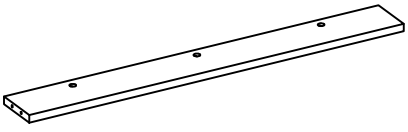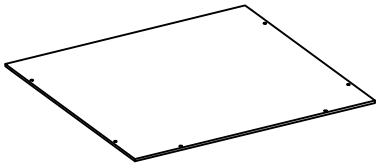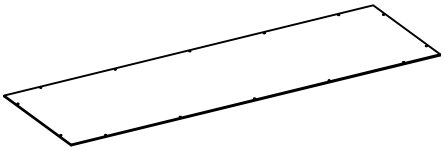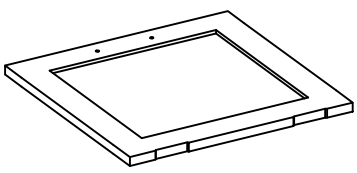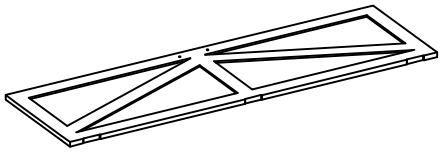
PART LIST		
A  1 pc	B  1 pc	C  1 pc
D  1 pc	E  1 pc	F  1 pc
G  1 pc	H  1 pc	I  1 pc
J  2 pcs	K  1 pc	L  4 pcs
M  2 pcs	N  2 pcs	O  310L 1 pc
P  2 pcs	Q  2 pcs	R  2 pcs

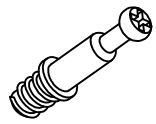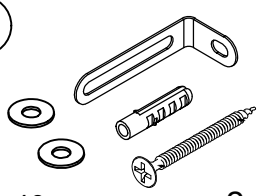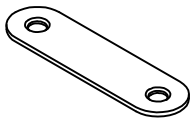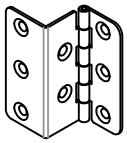HARDWARE LIST			
①  M6x28 24 pcs	②  Ø12 24 pcs	③  M5x40 39 pcs	④  M6x19 16 pcs
⑤  M4x40 2 pcs	⑥  M3x16 40 pcs	⑦  M4x18 8 pcs	⑧  4 pcs
⑨  M3x16 4 pcs	⑩  4 pcs	⑪  51*15*1.0 10 pcs	⑫  M3x12 88 pcs
⑬  8 pcs	⑭  M3 1 pc	⑮  1 pc	


STEP 1

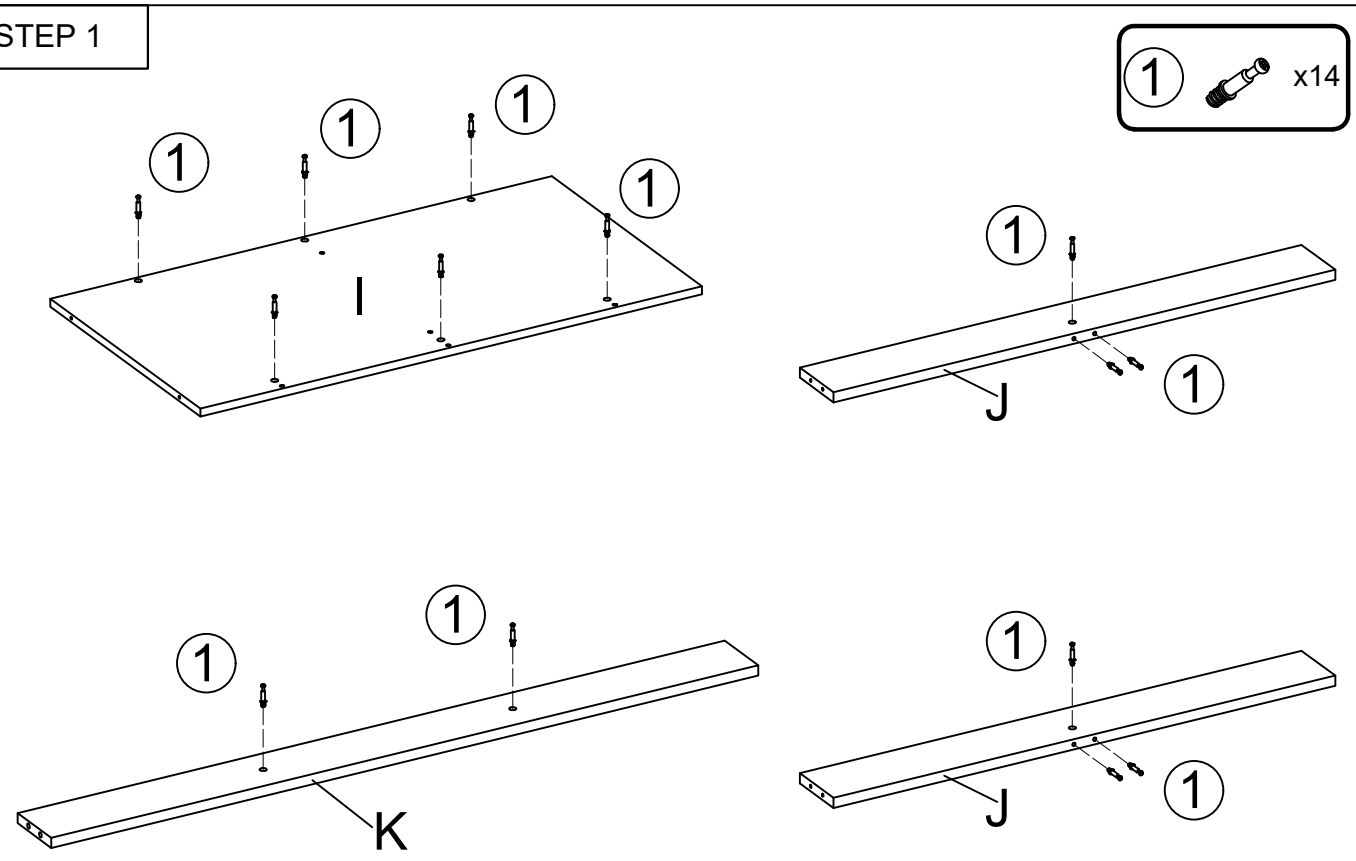


STEP 2

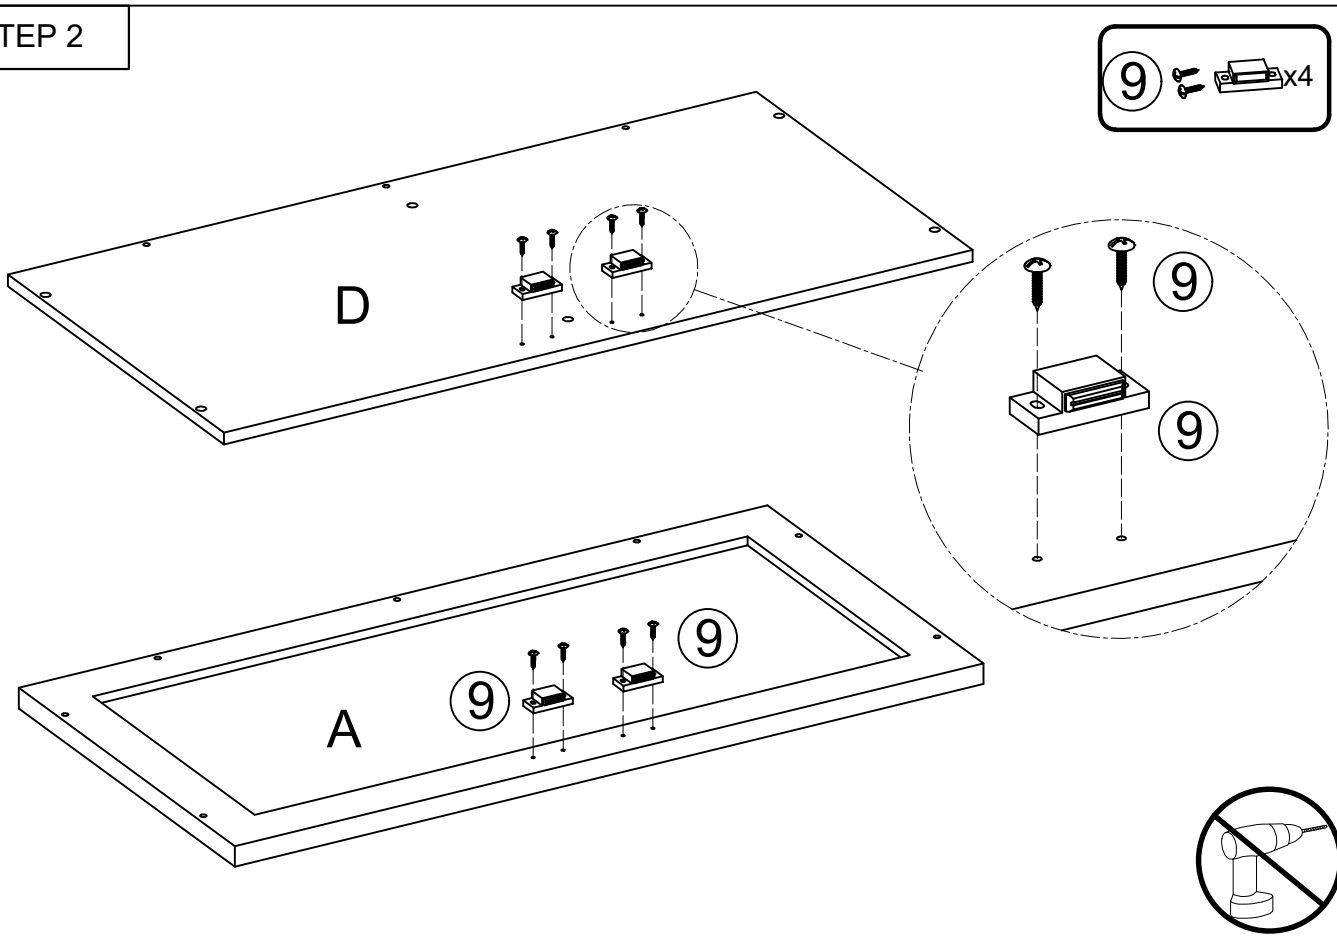


STEP 3

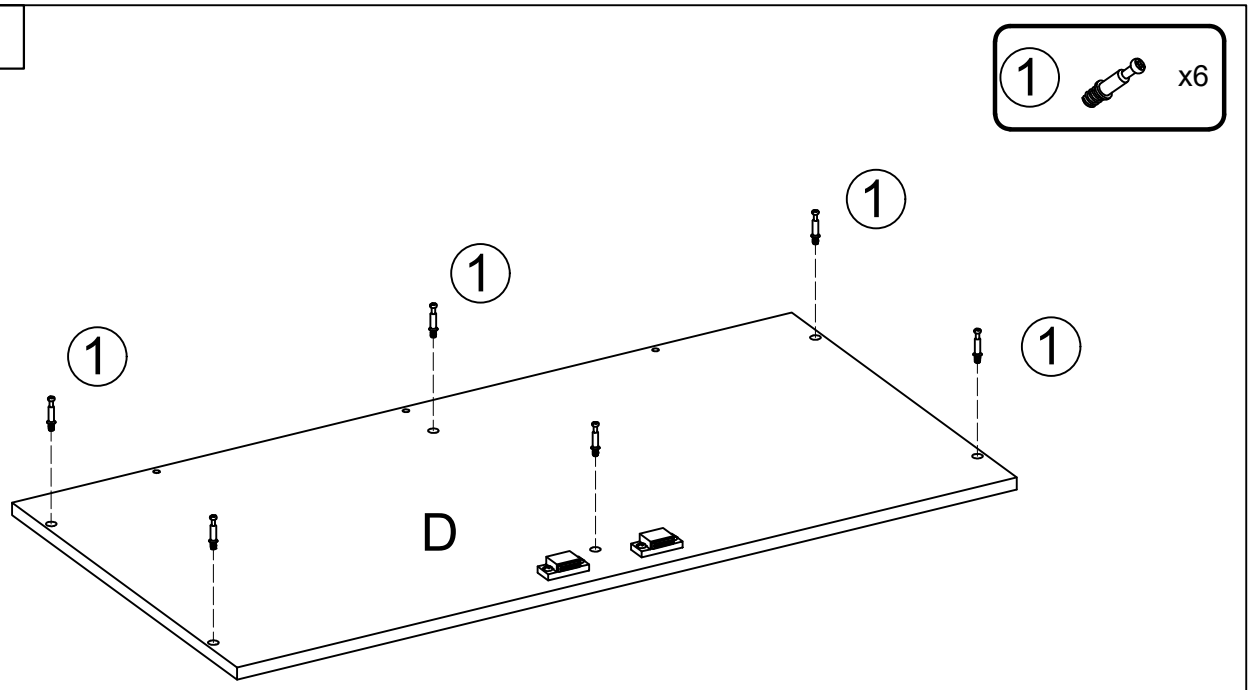

1
x6
1
1
1
D

STEP 4

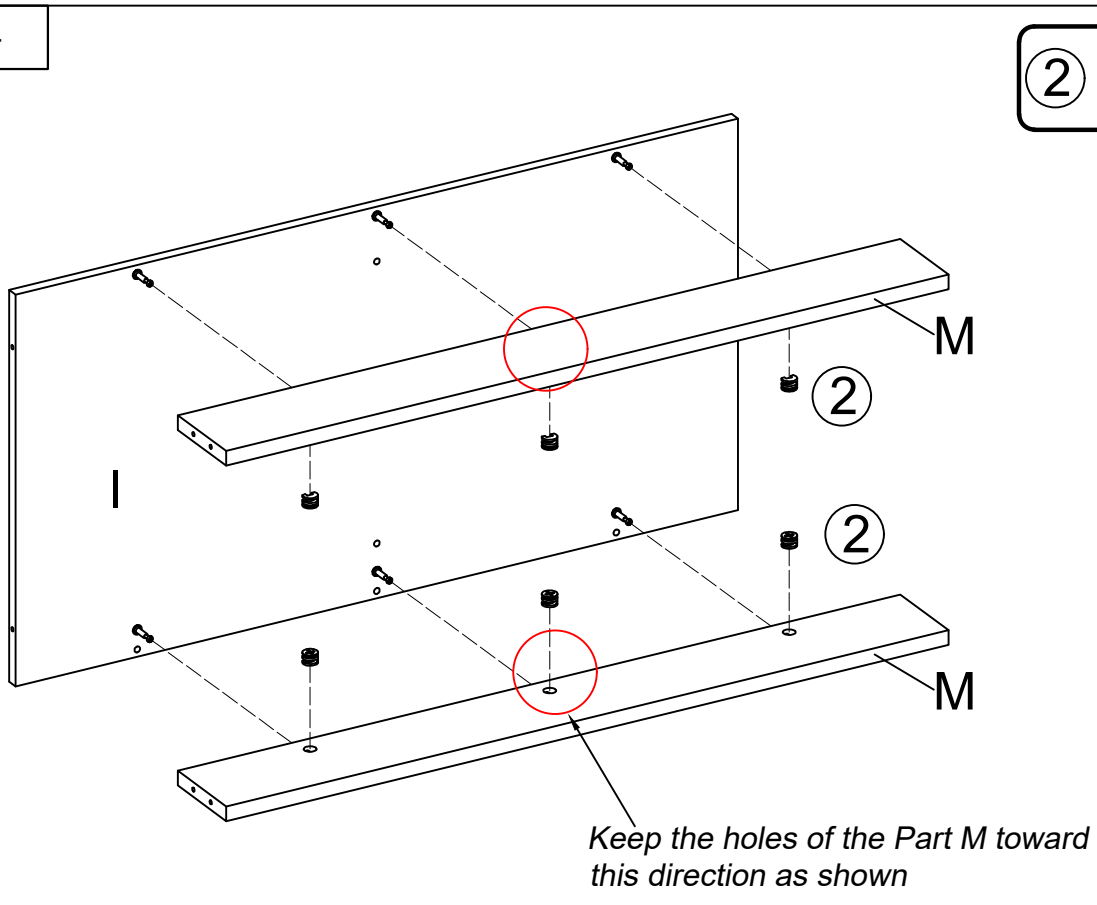
2
x6
M
2
I
2
M
Keep the holes of the Part M toward
this direction as shown


STEP 5




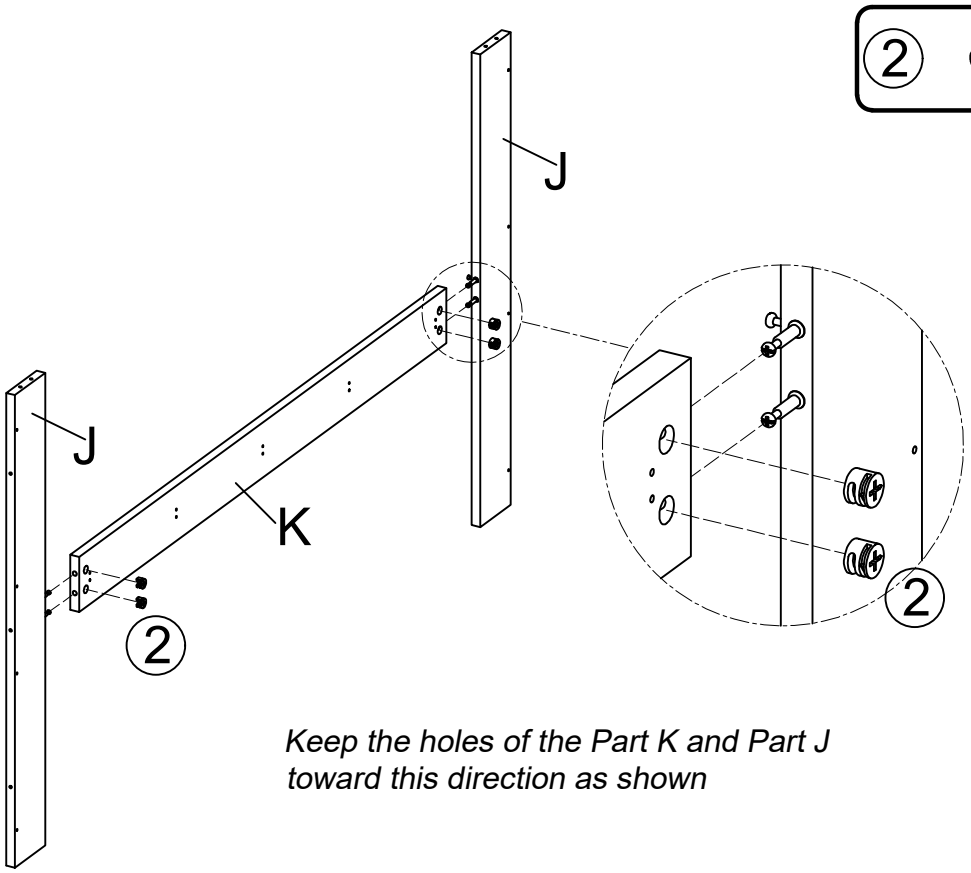

Keep the holes of the Part K and Part J toward this direction as shown


STEP 6



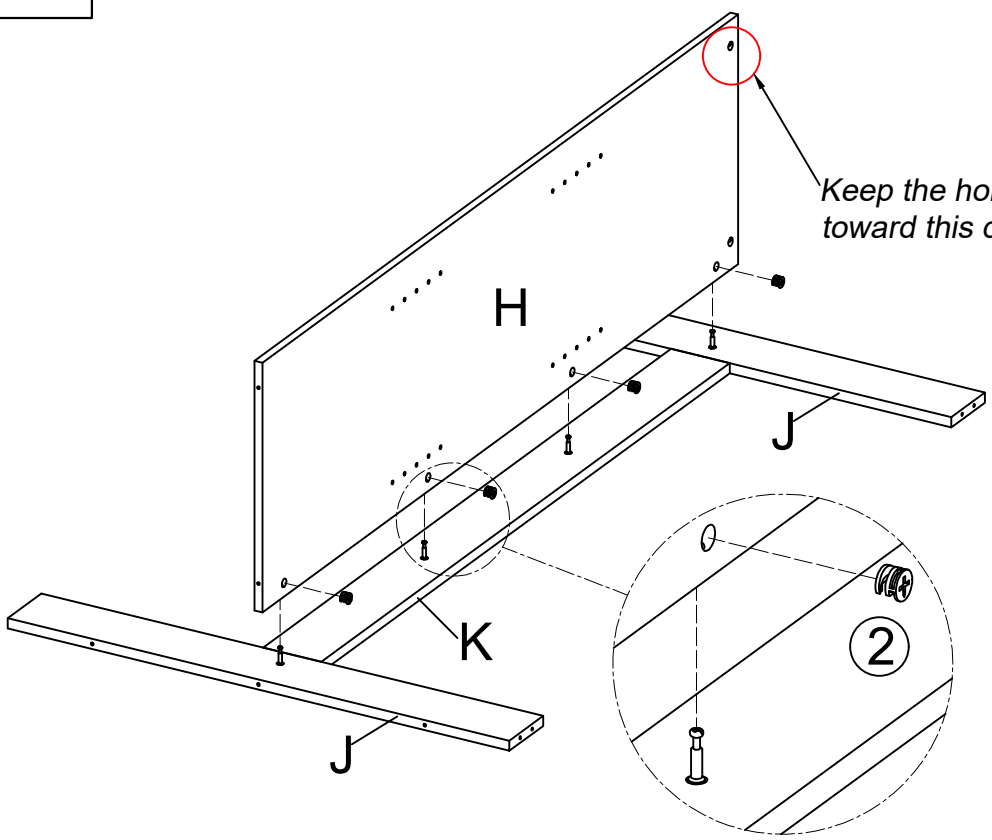


Keep the holes of the Part H toward this direction as shown

STEP 7

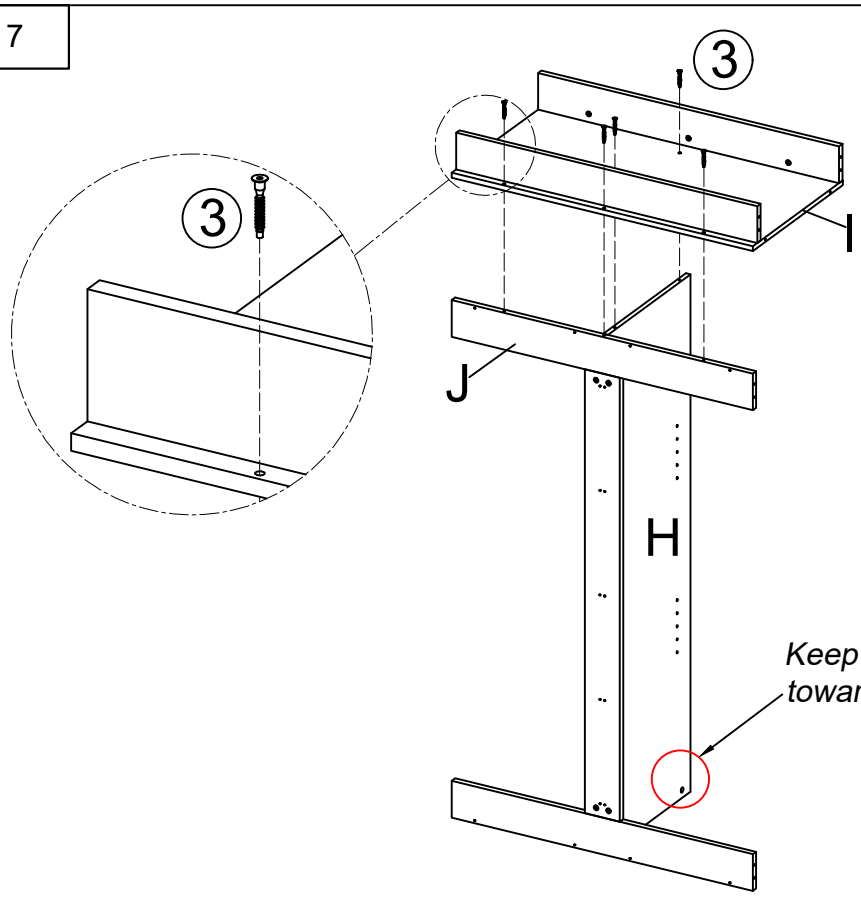


3 x5

STEP 8

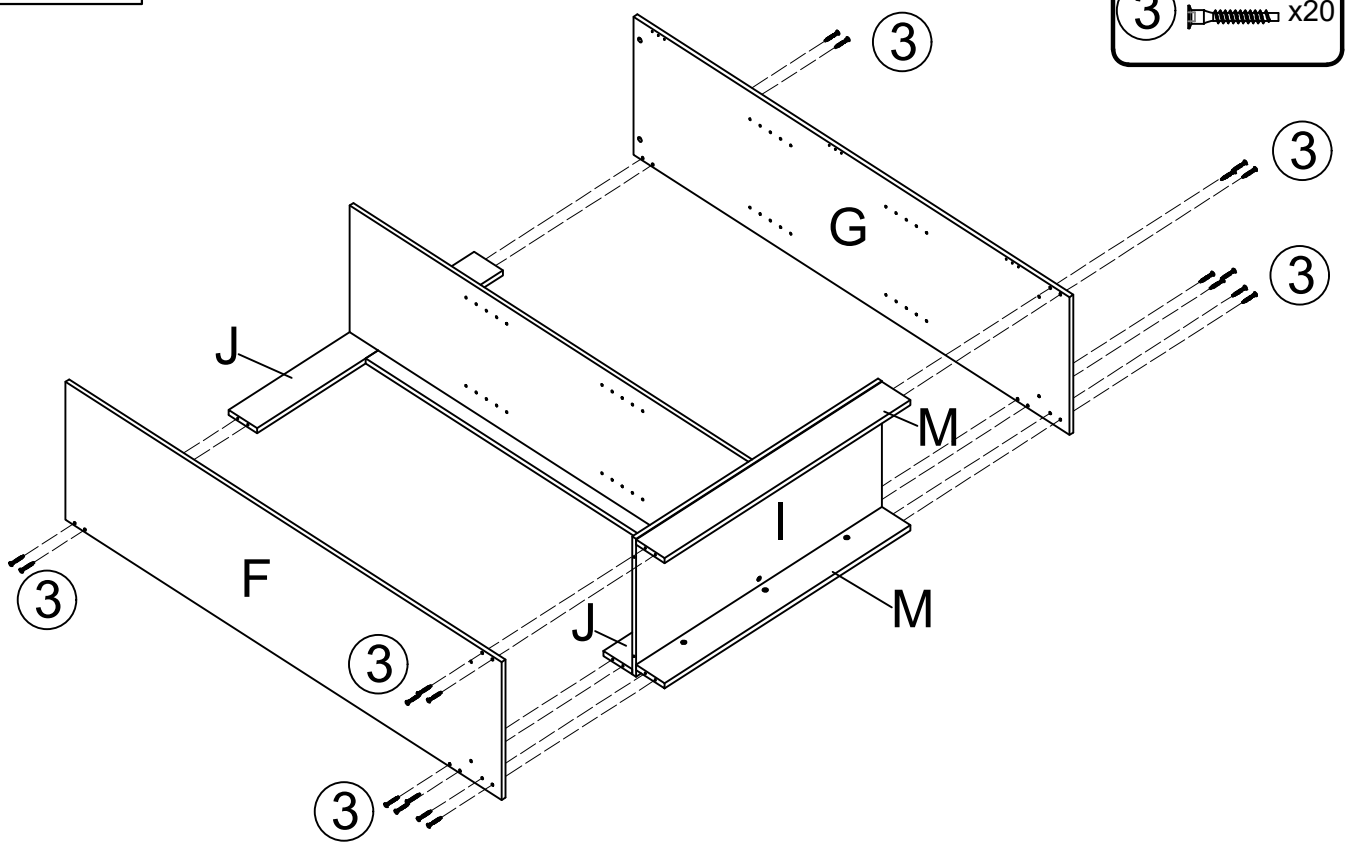

3 x20


STEP 9

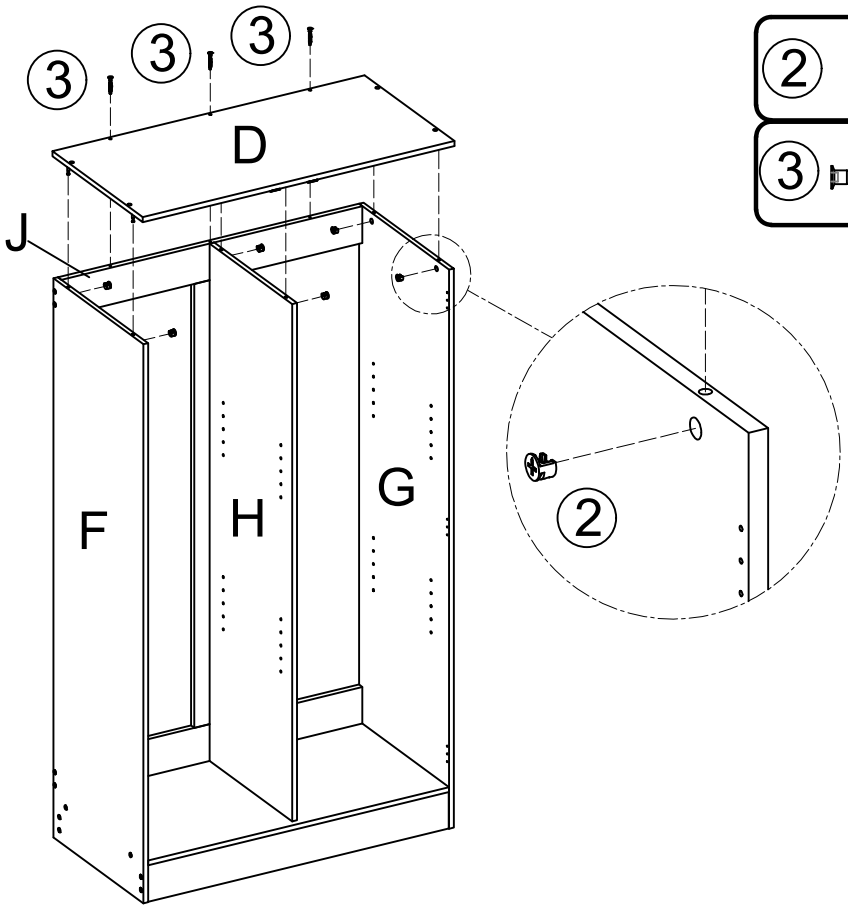

2 x6

3 x3


STEP 10

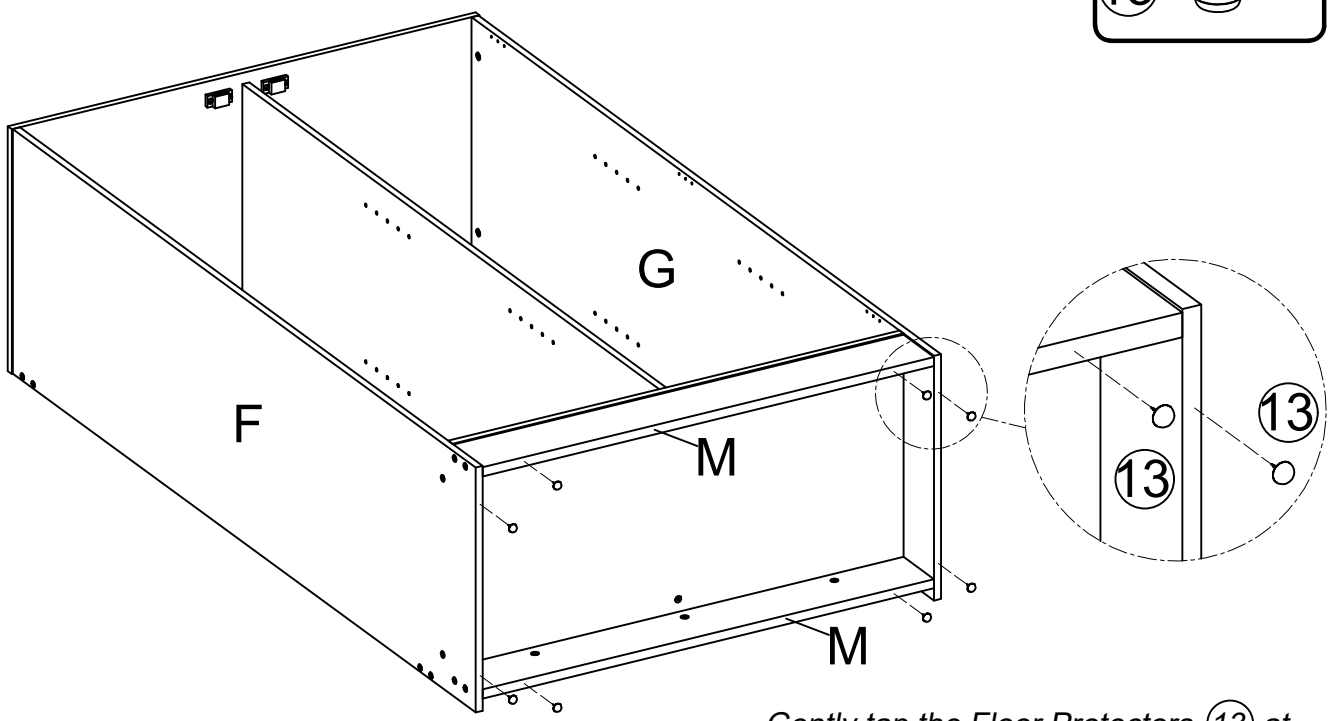


13 x8

Gently tap the Floor Protectors (13) at the bottom of side panels avoiding crack or damage of side panel.


STEP 11

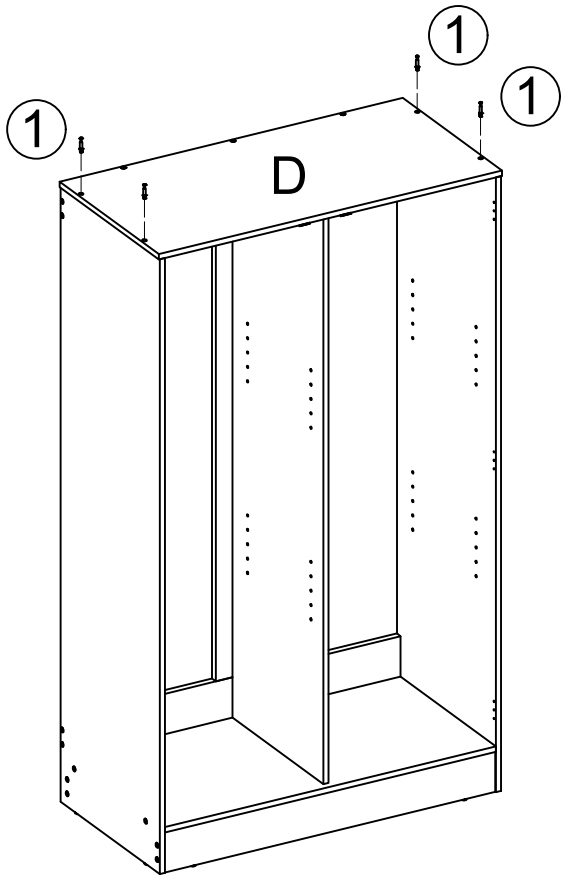





STEP 12

Keep the holes of the Part E
toward this direction as shown

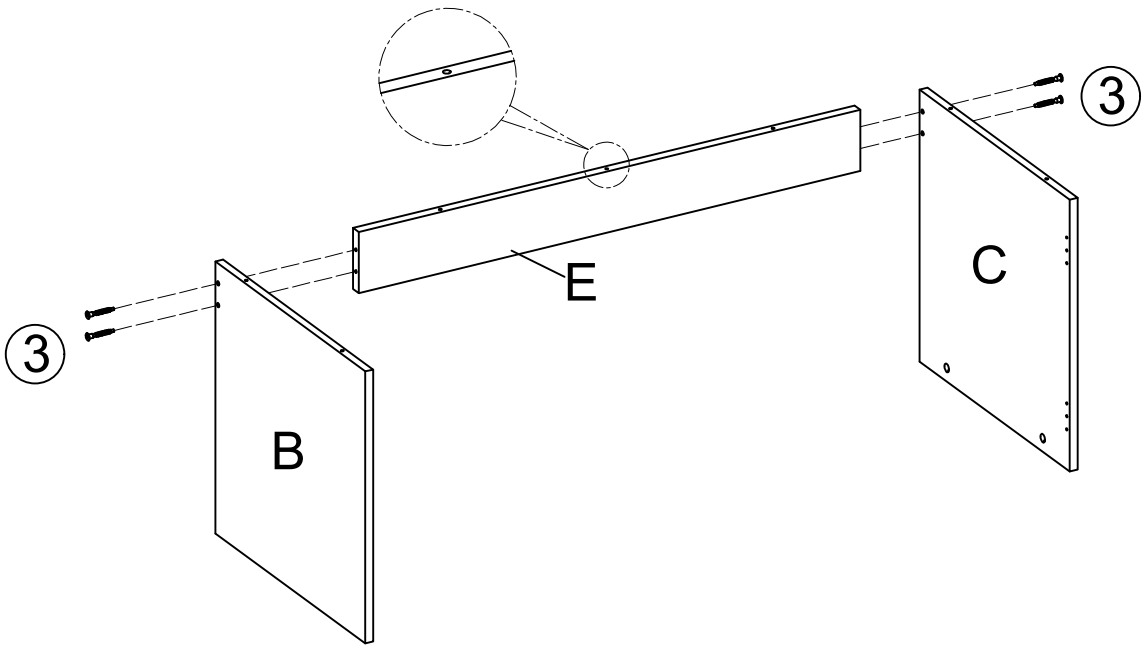




STEP 13

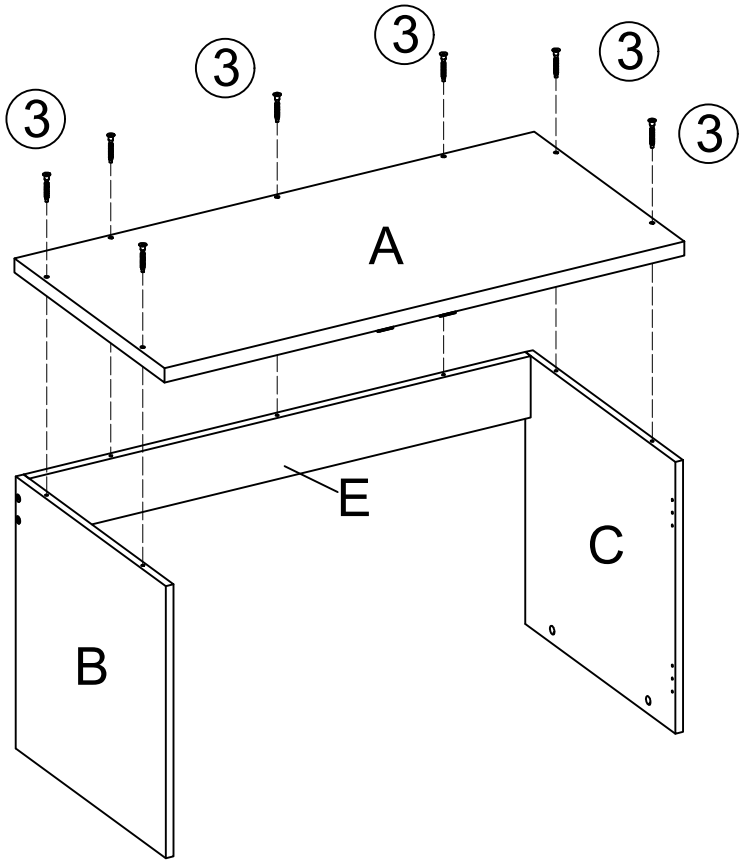


3 x7

STEP 14

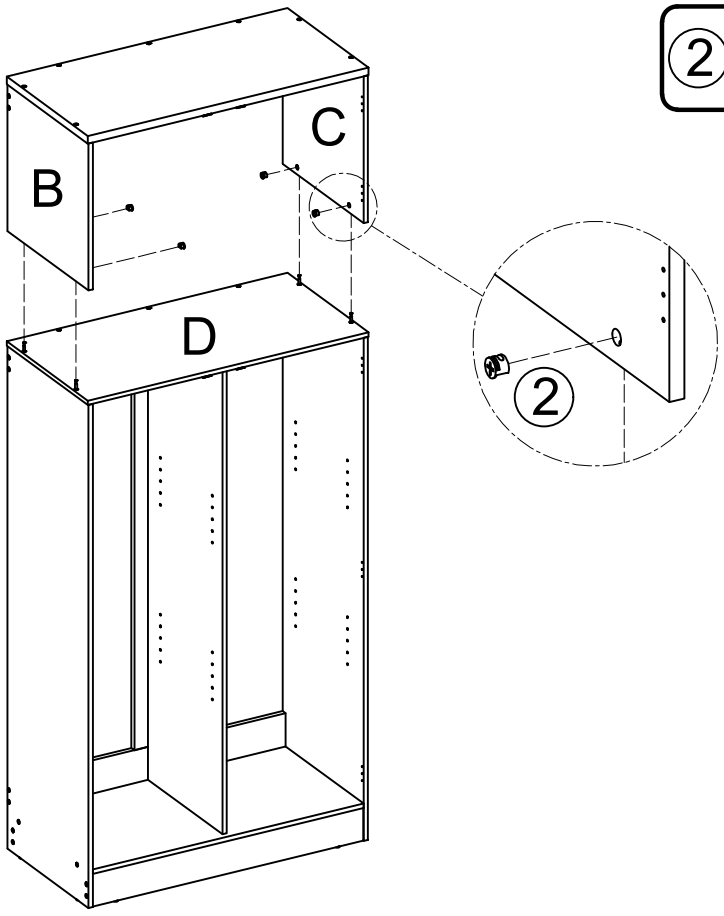


2 x4


STEP 15

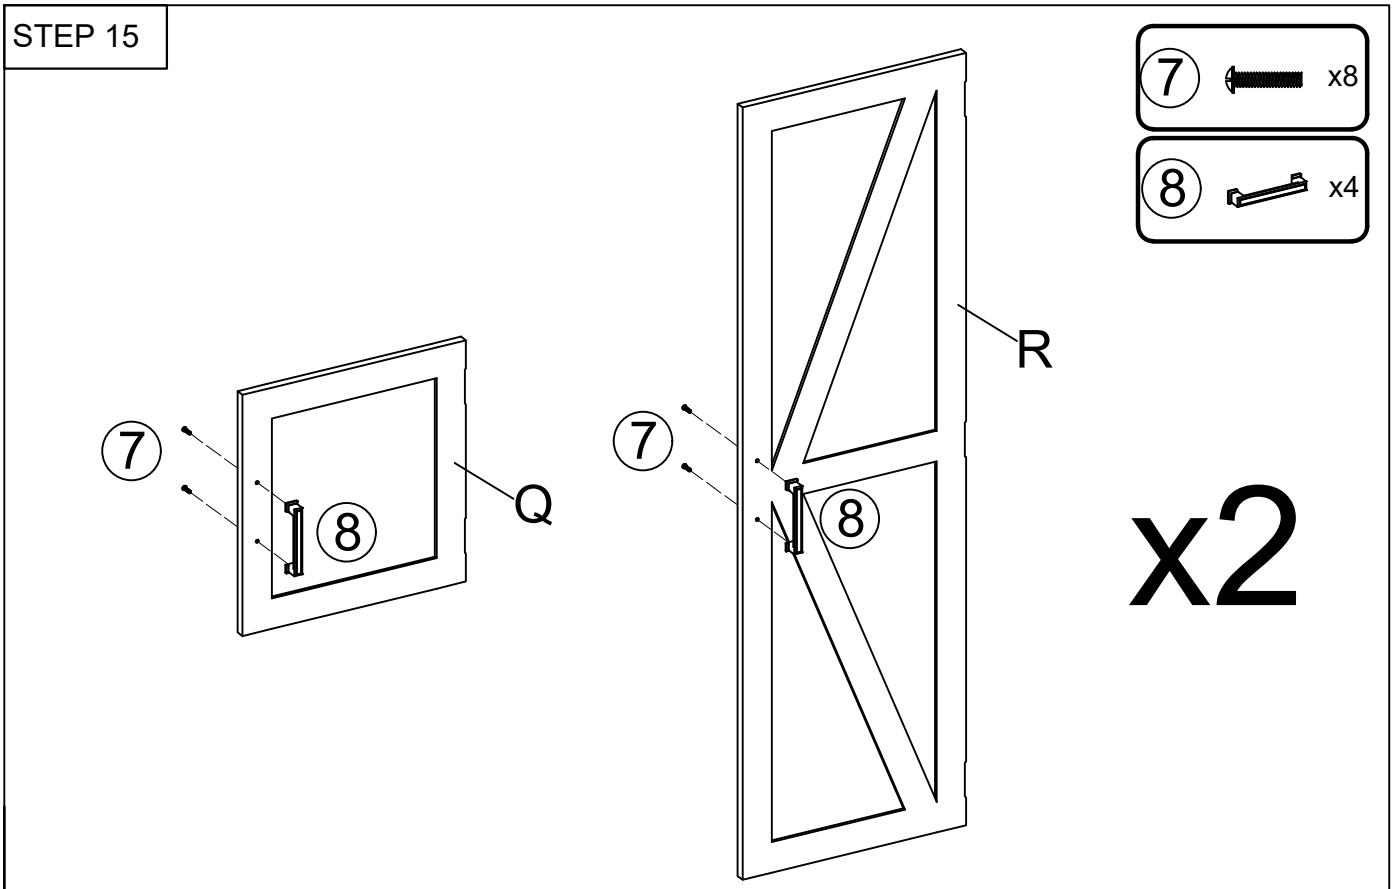


STEP 16

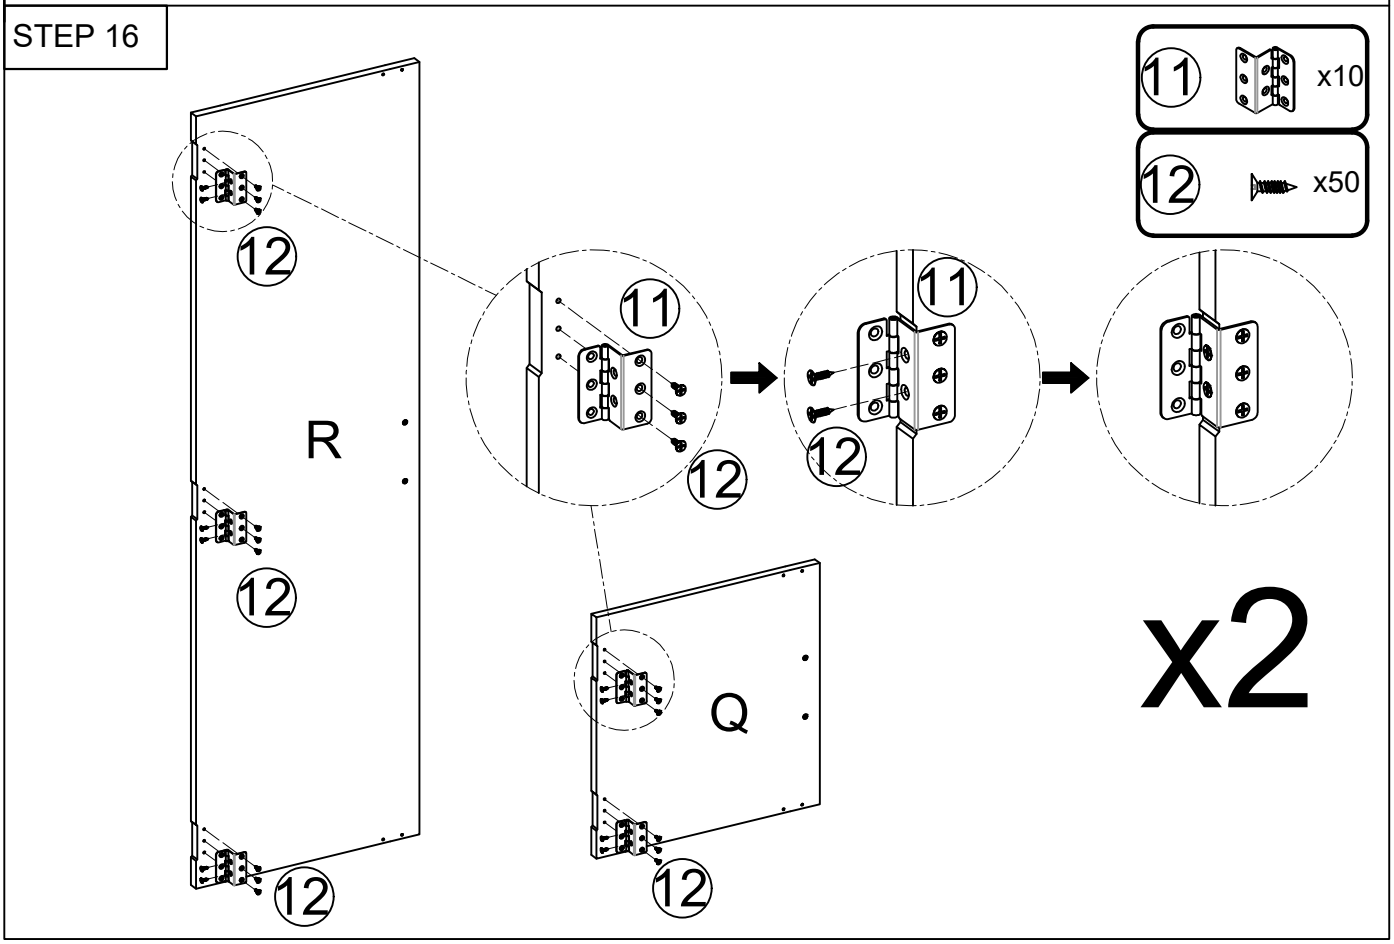

STEP 17

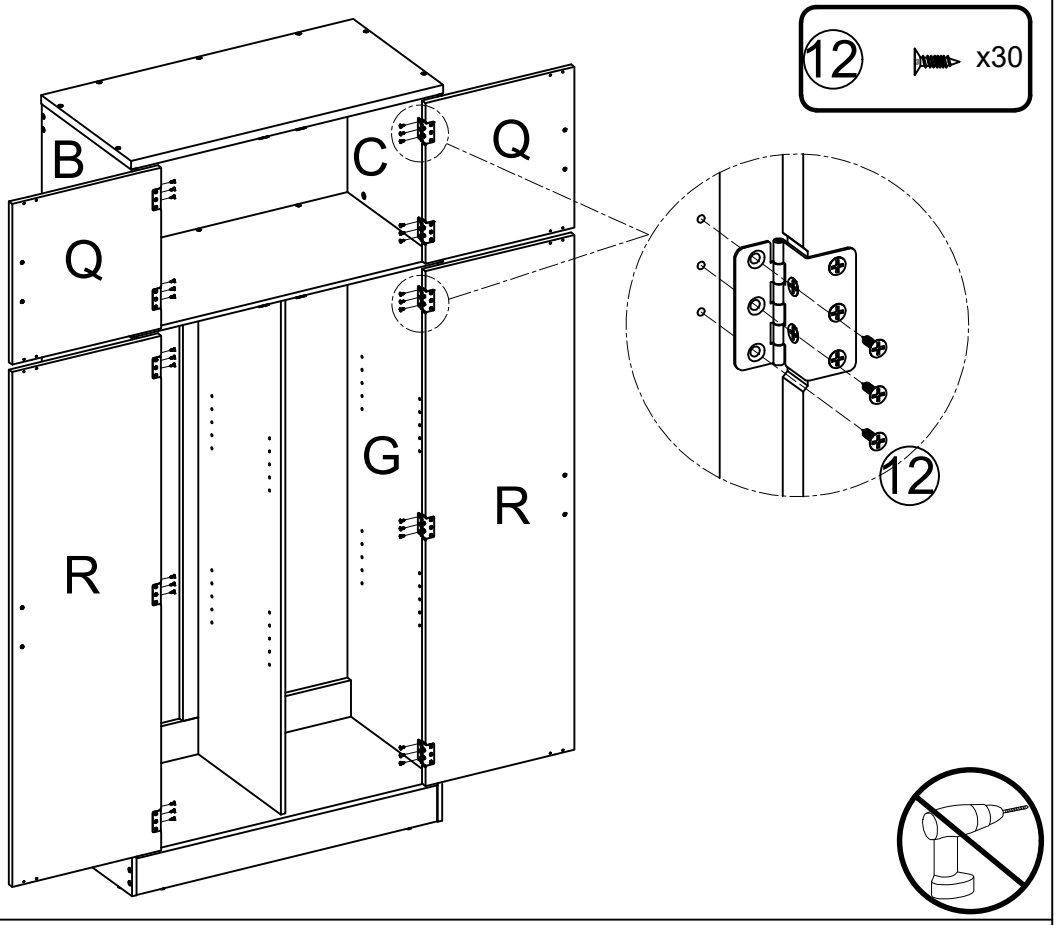


STEP 18

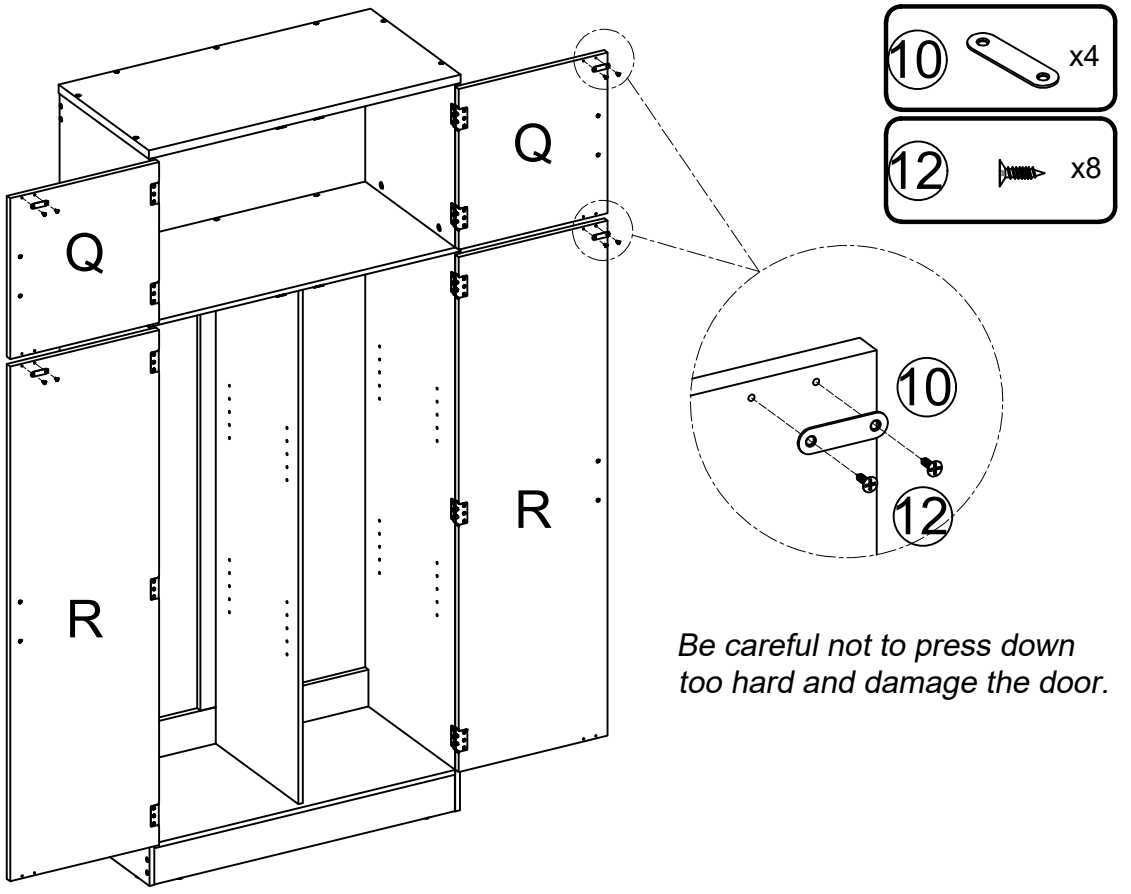


Be careful not to press down too hard and damage the door.

STEP 19

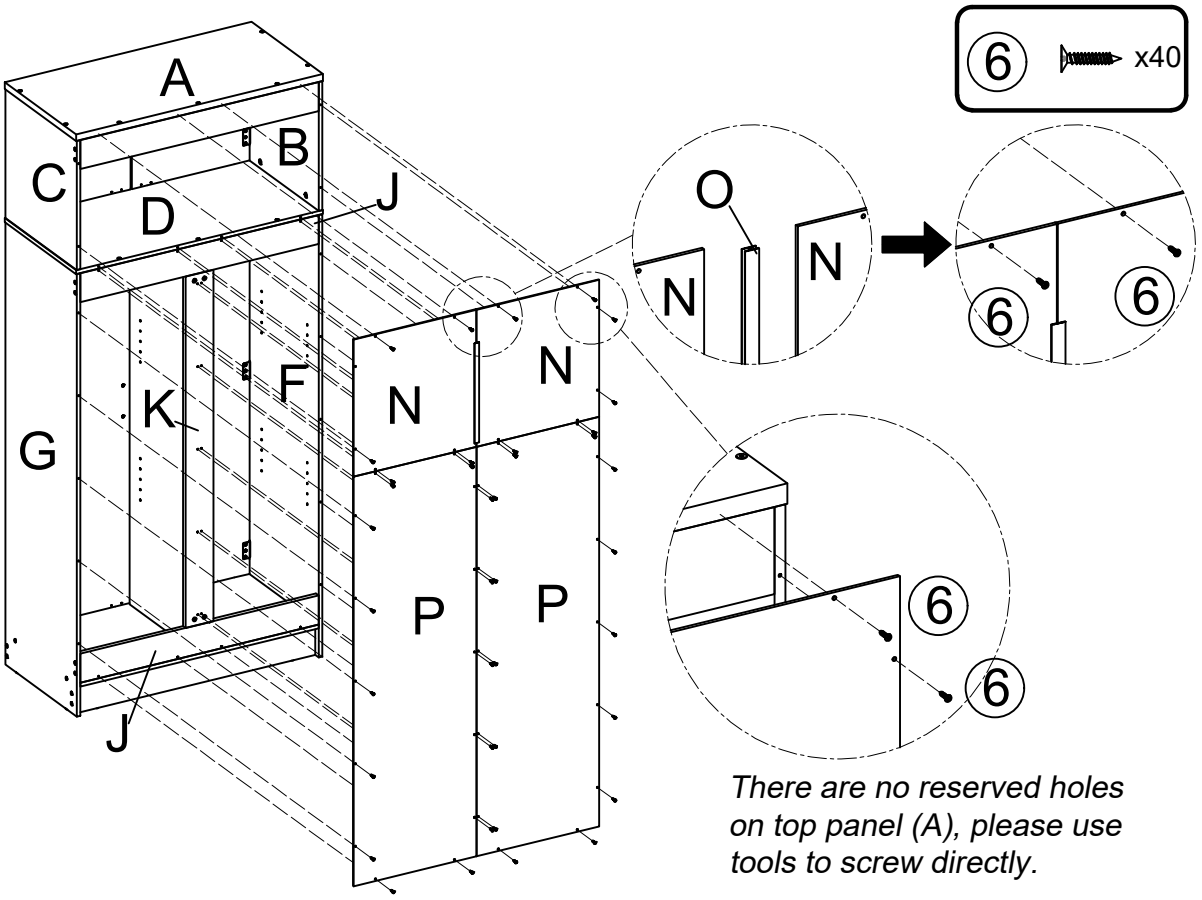

There are no reserved holes on top panel (A), please use tools to screw directly.


STEP 20

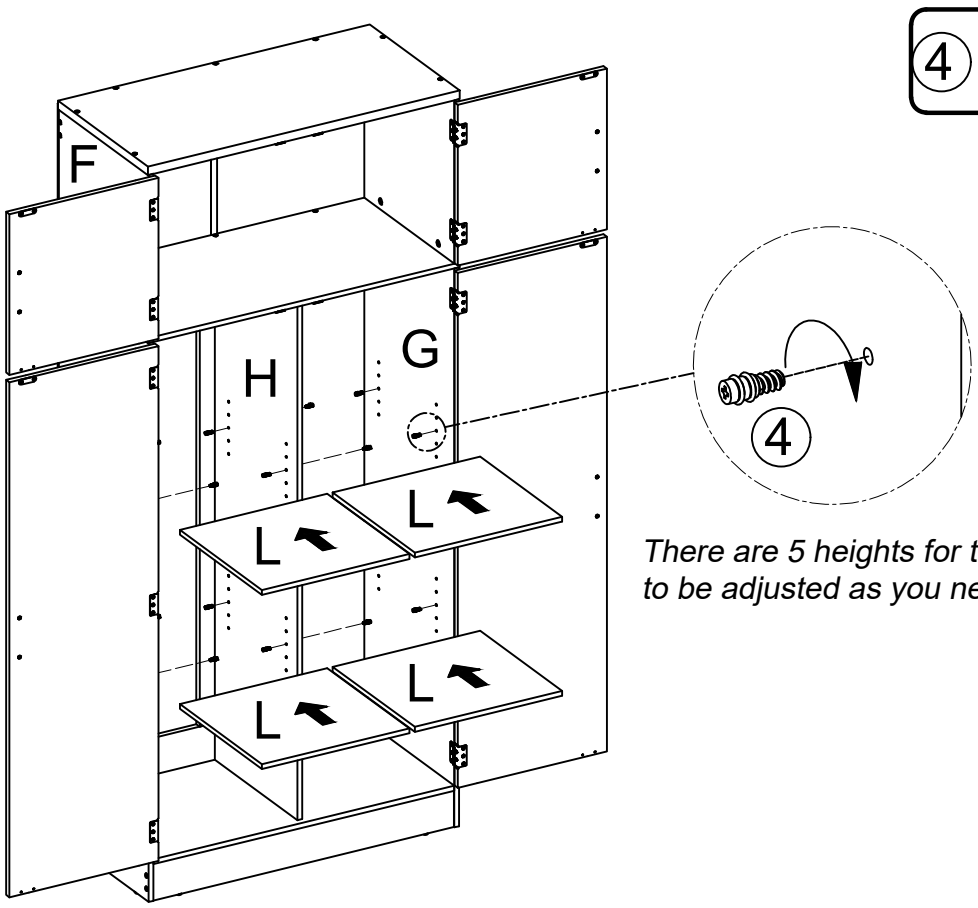

There are 5 heights for the shelf to be adjusted as you need.

STEP 21

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

