

12ft. Garden Bridge

Tools Required:

- You will need a #2 Philips or Robertson driver

NOTE: It's recommended a 2nd person assists with this assembly


Package Contents:

(A) Sides...2

(B) Foot Planks...25


Hardware:

- 2 ½" Screw ...100
- Spacer Block ...6

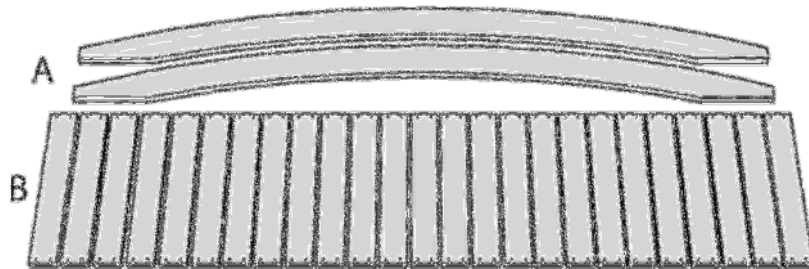

STEP 1. Align Sides

- Use a foot plank (B) to make sides parallel at 35 inches apart (outside edge to outside edge)
- Using 2 ½" screws attach a foot plank to each end and middle of sides.

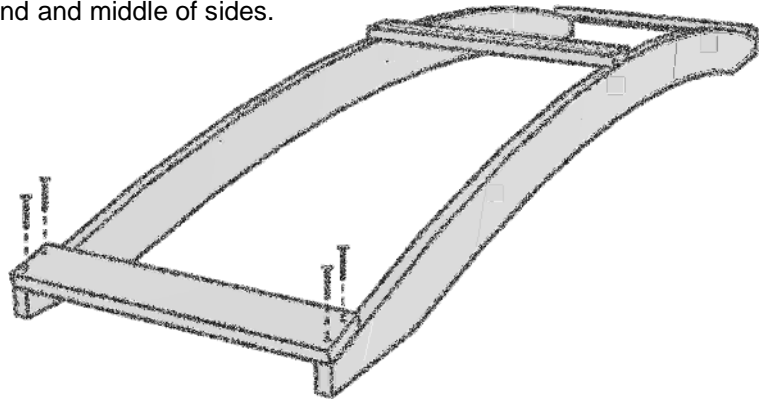

STEP 2. Attach Foot Planks

- Layout the remaining foot planks across sides.
- Use Spacer Blocks to create even spacing between planks and attach using 2 ½" screws.
- Your new bridge is ready or use

