


Storage Cabinet

Instruction Manual




EXPLODED VIEW

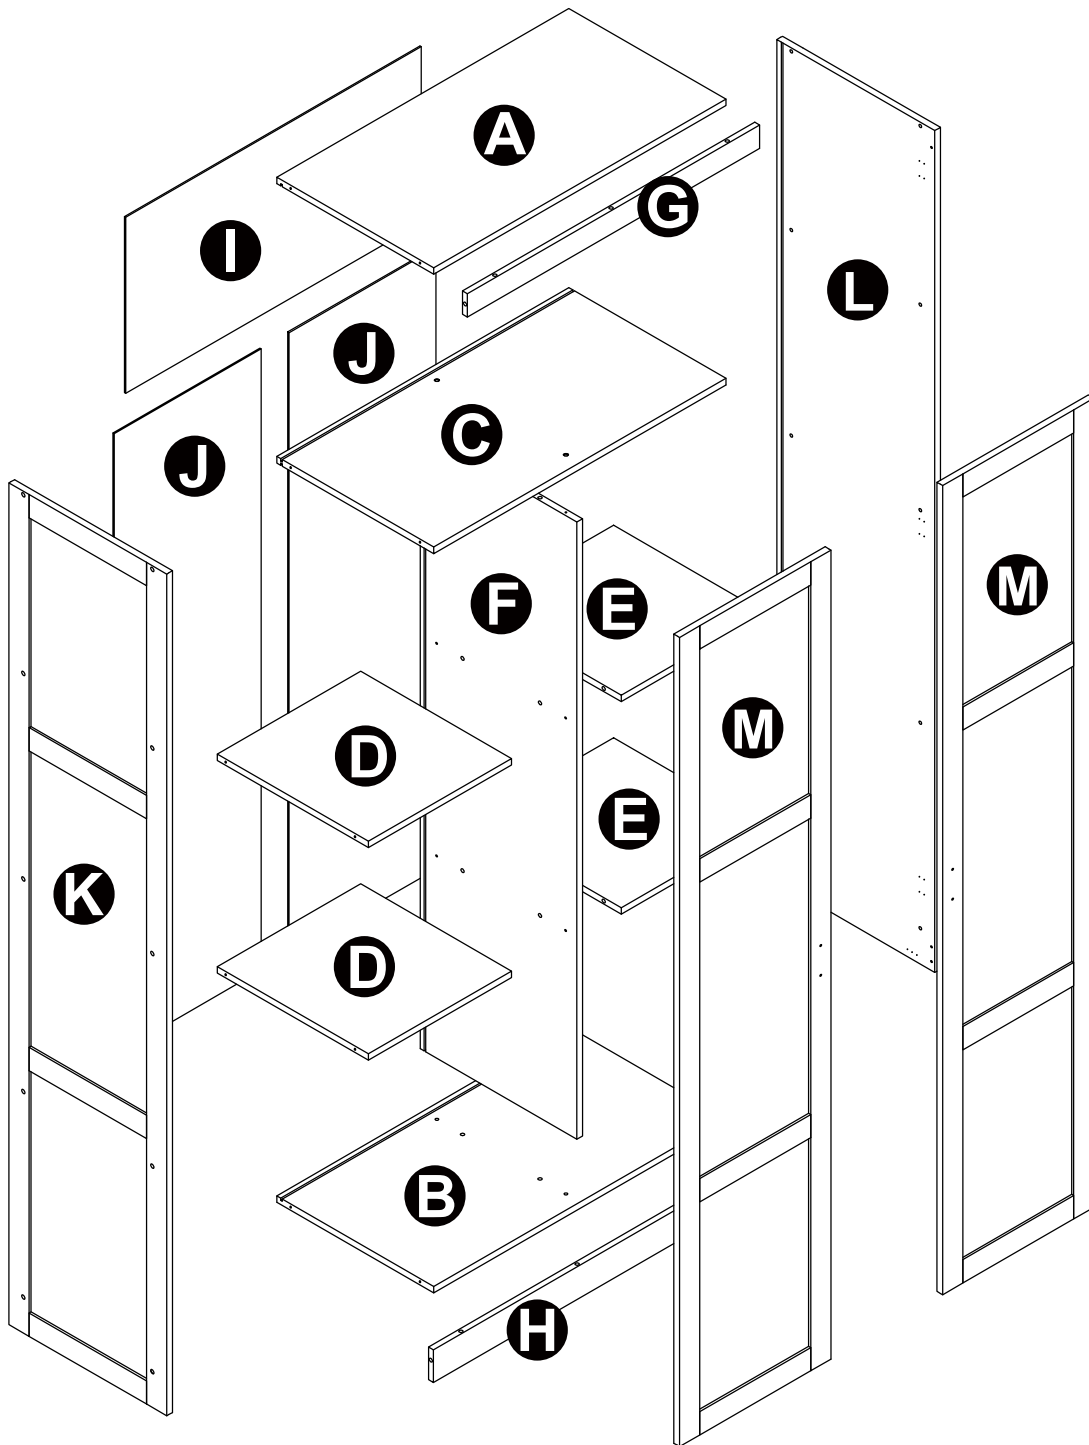


PARTS LIST


Ax1

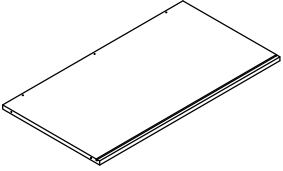


Bx1

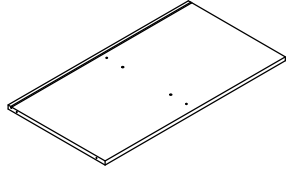


Cx1

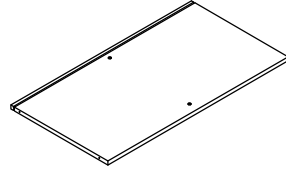

Dx2

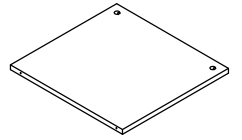


Ex2

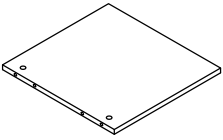


Fx1




Gx1

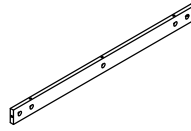

Hx1

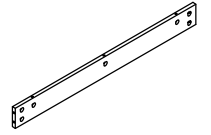

Ix1

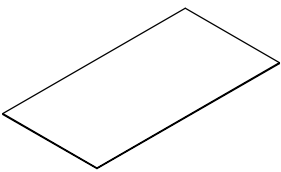


Jx2




Kx1



Lx1




Mx2



HARDWARE

1x20+1




M6x34mm

2x20+1




M15x9.5mm

3x12+1



M8x30mm

4x4




M5/32"x12mm

5x36+2




Nickel color
M3.5x12mm


6x6

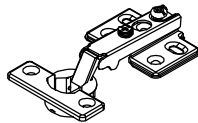

7x2

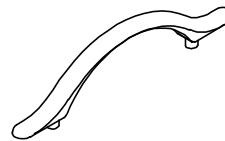


8x24+1




M9.5*6.2*40mm


9x1

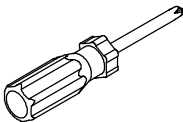

10x2

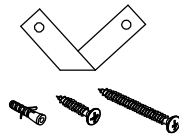


11x1




Left Support Foot

12x1



Right Support Foot

13x16




14x28




Zinc Color
M3.5x12mm


15x20




Please have the following auxiliary tools ready.
Bitte halten Sie folgende Hilfswerkzeuge bereit.
Veuillez préparer les outils auxiliaires suivants .
Si prega di avere pronti i seguenti strumenti ausiliari.
Por favor, tenga listas las siguientes herramientas auxiliares.

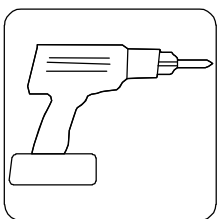


Electric Drill

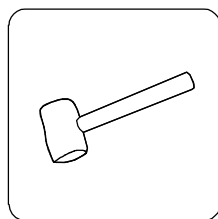


Hammer

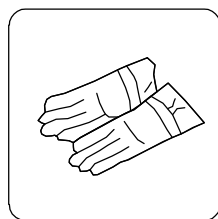

Gloves

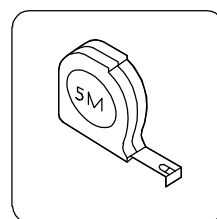

Tape Measure 5M

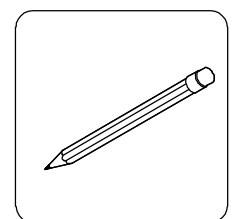


Pencil


NOTE: This product requires at least two people for installation.

ASSEMBLY INSTRUCTION


STEP 1

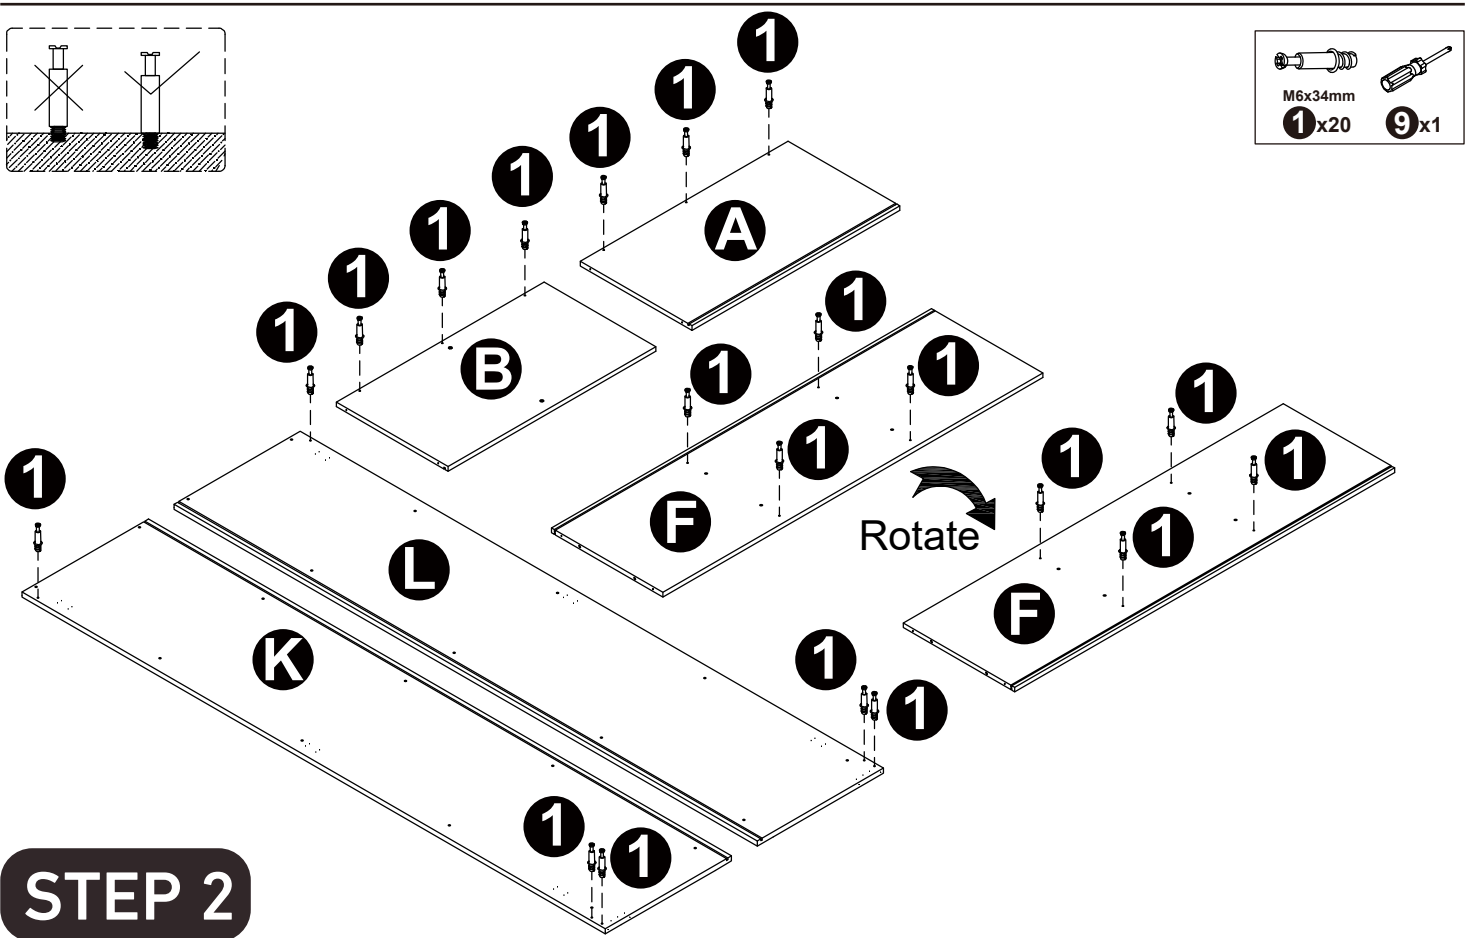

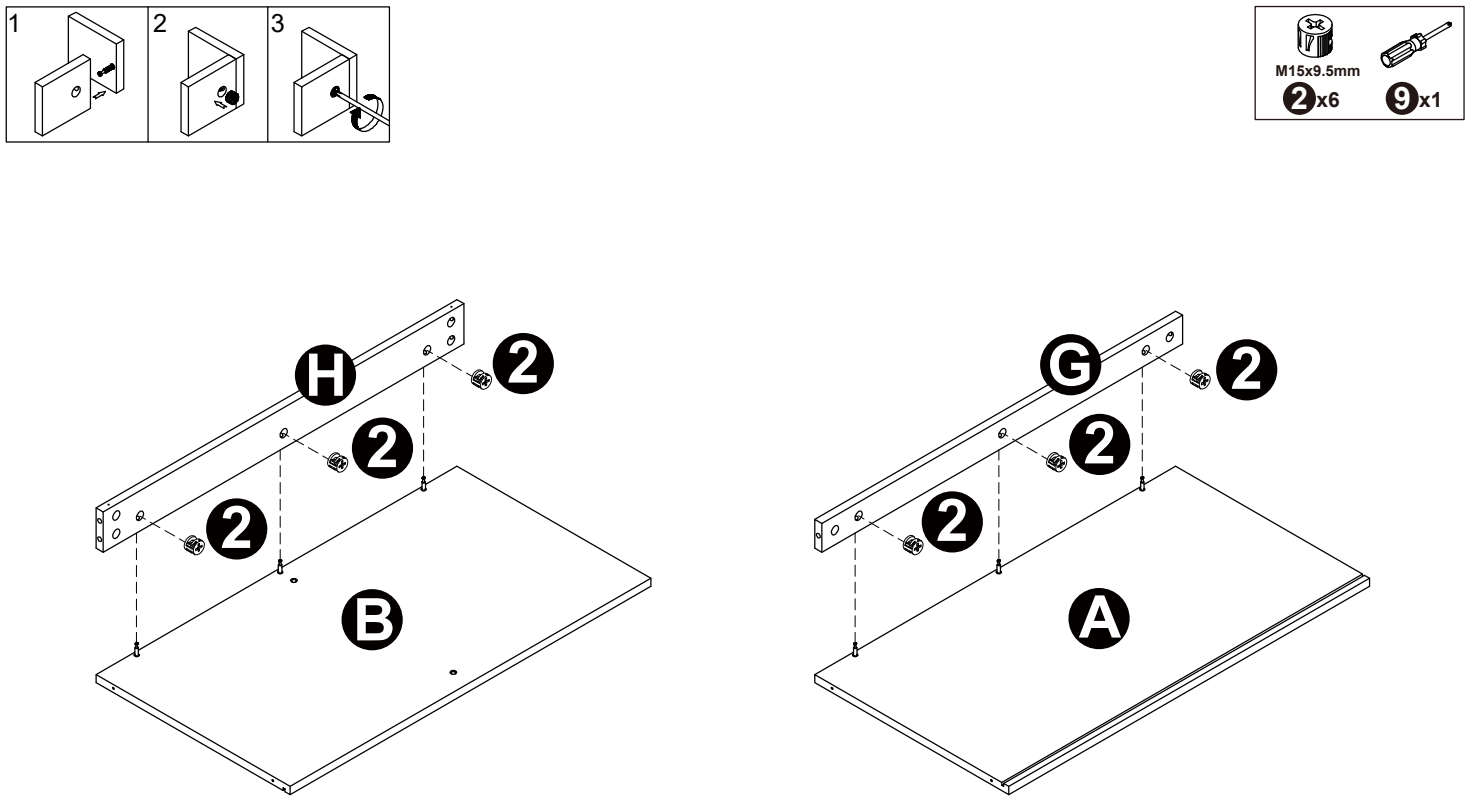


STEP 2





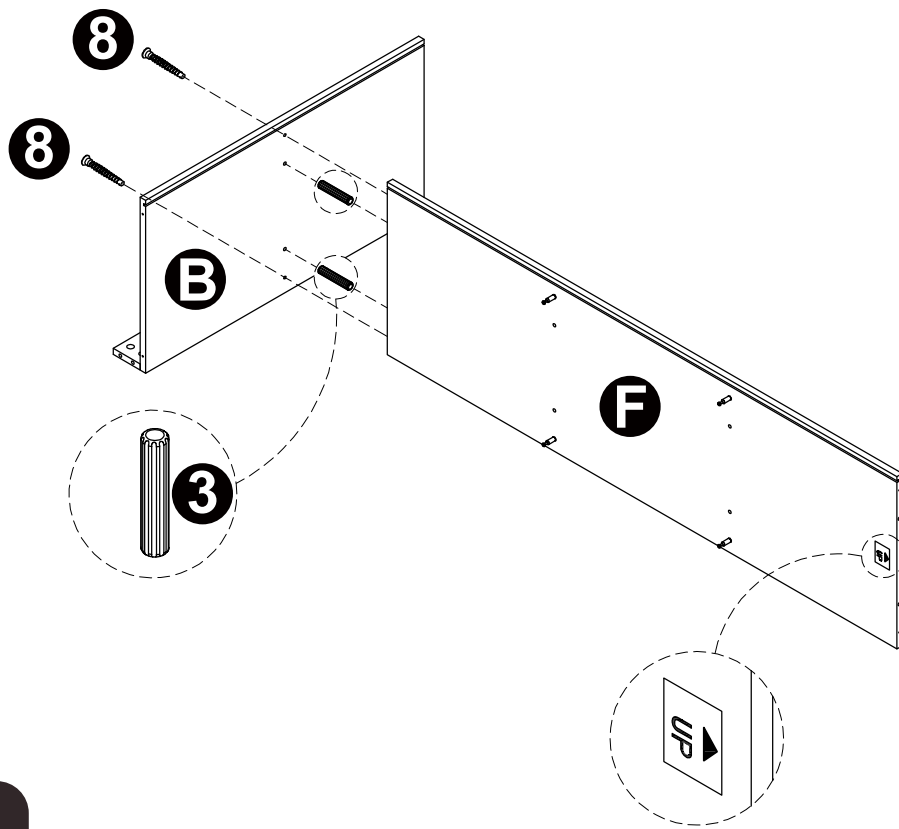


STEP 3



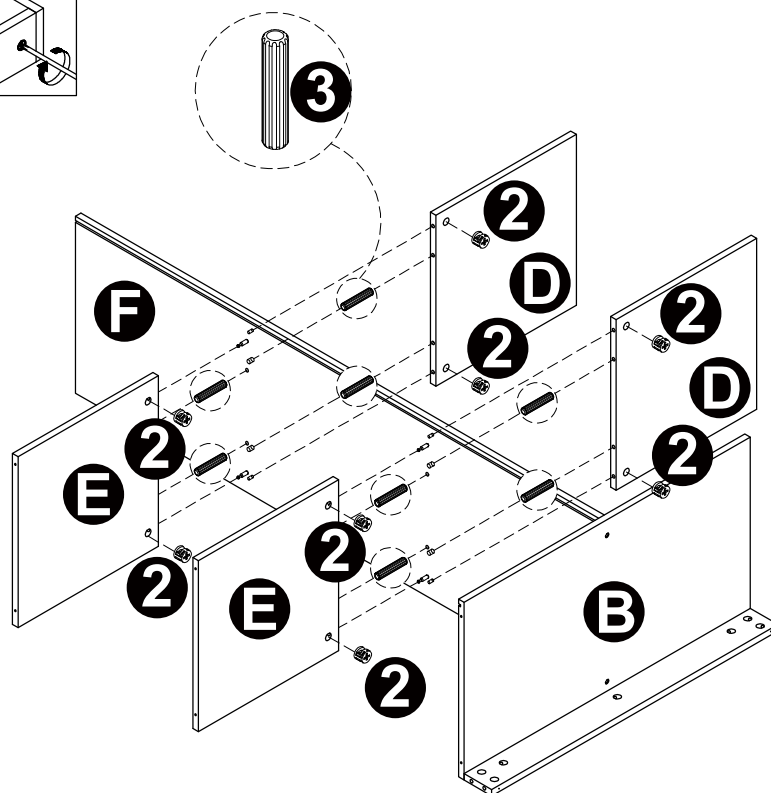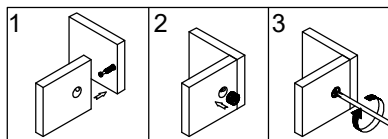


		
M8x30mm	M9.5*6.2*40mm	
3 x2	8 x2	9 x1


STEP 4






		
M8x30mm	M15x9.5mm	
3 x8	2 x8	9 x1

STEP 5



 M9.5*6.2*40mm 8 x6	 M15x9.5mm 2 x2	 9 x1
---	---	--

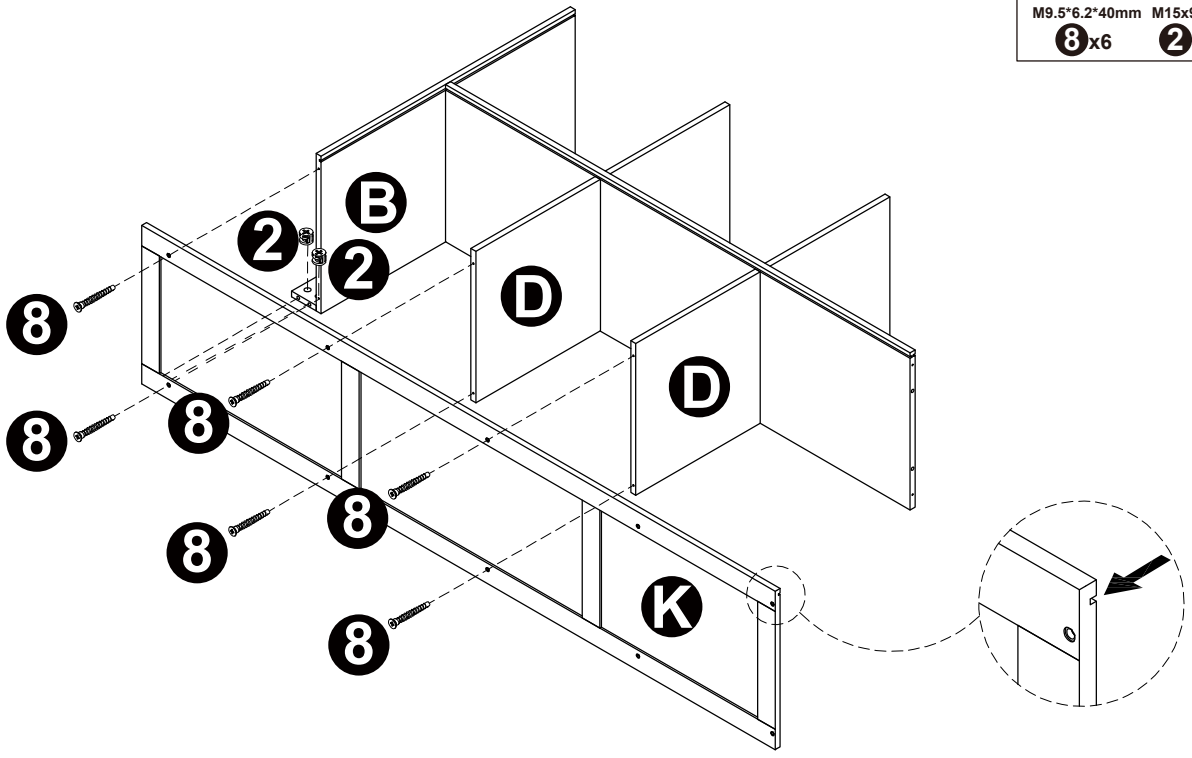


STEP 6

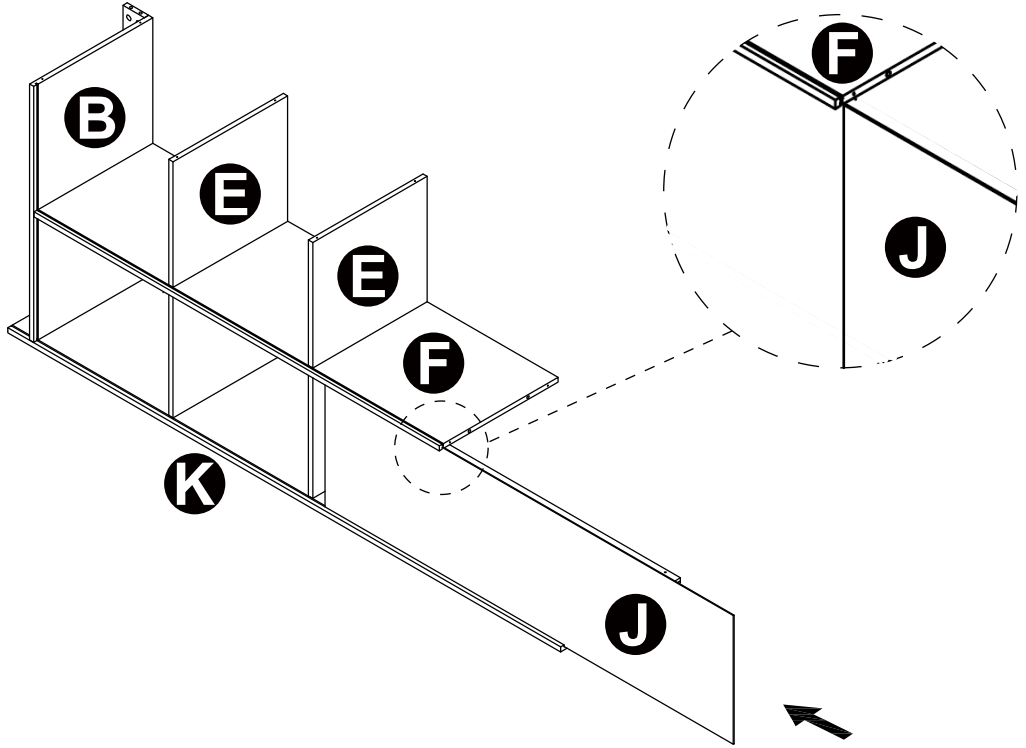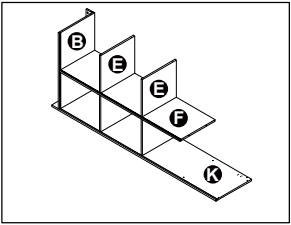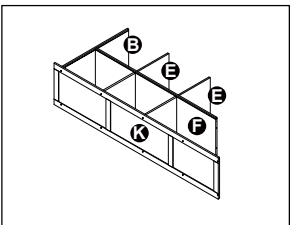




STEP 7

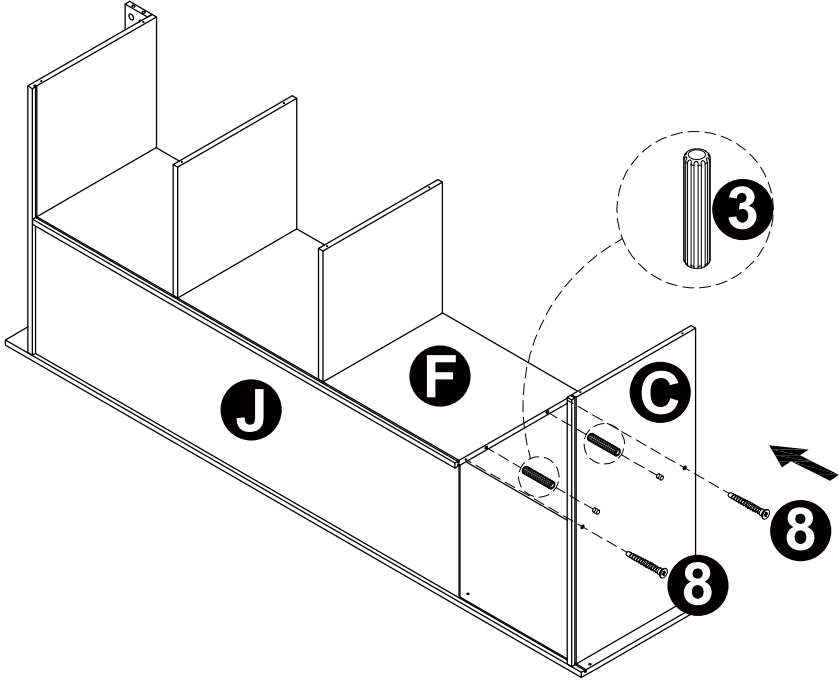


STEP 8

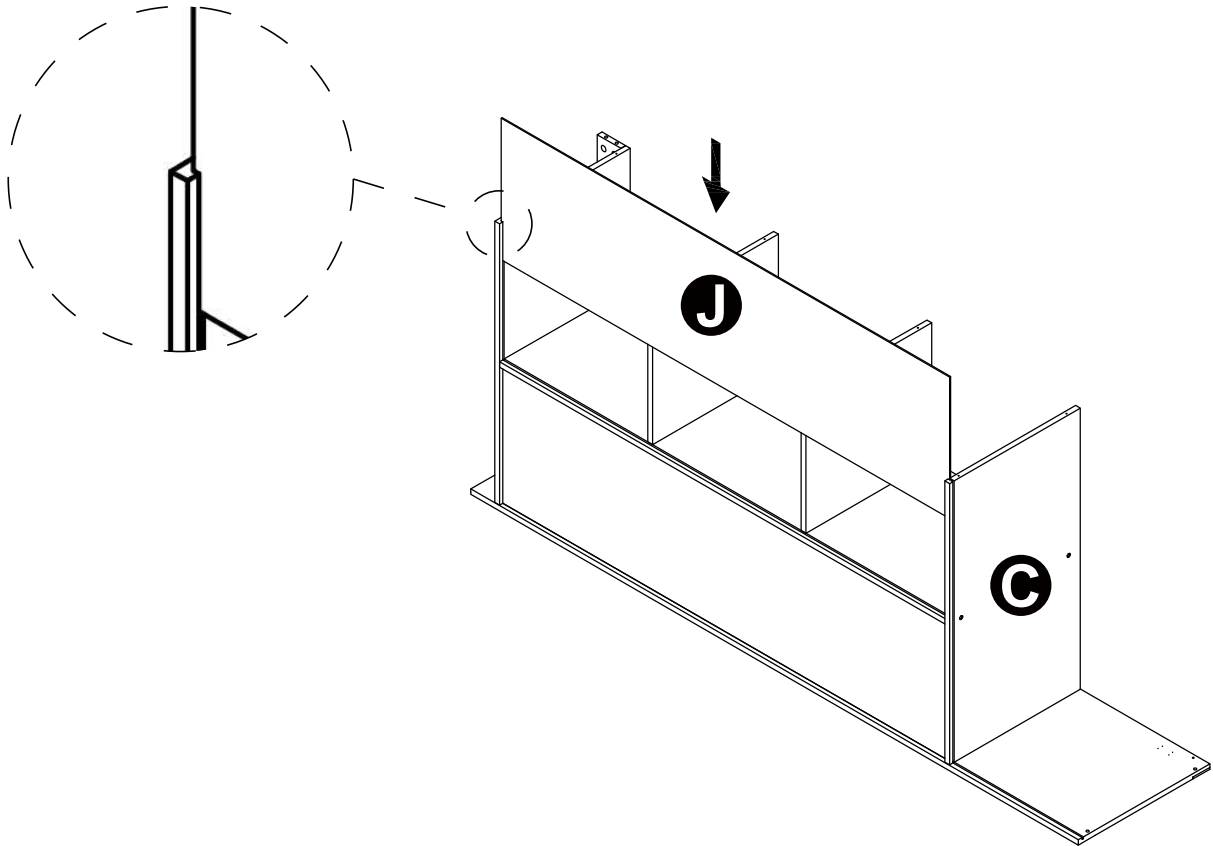





STEP 9

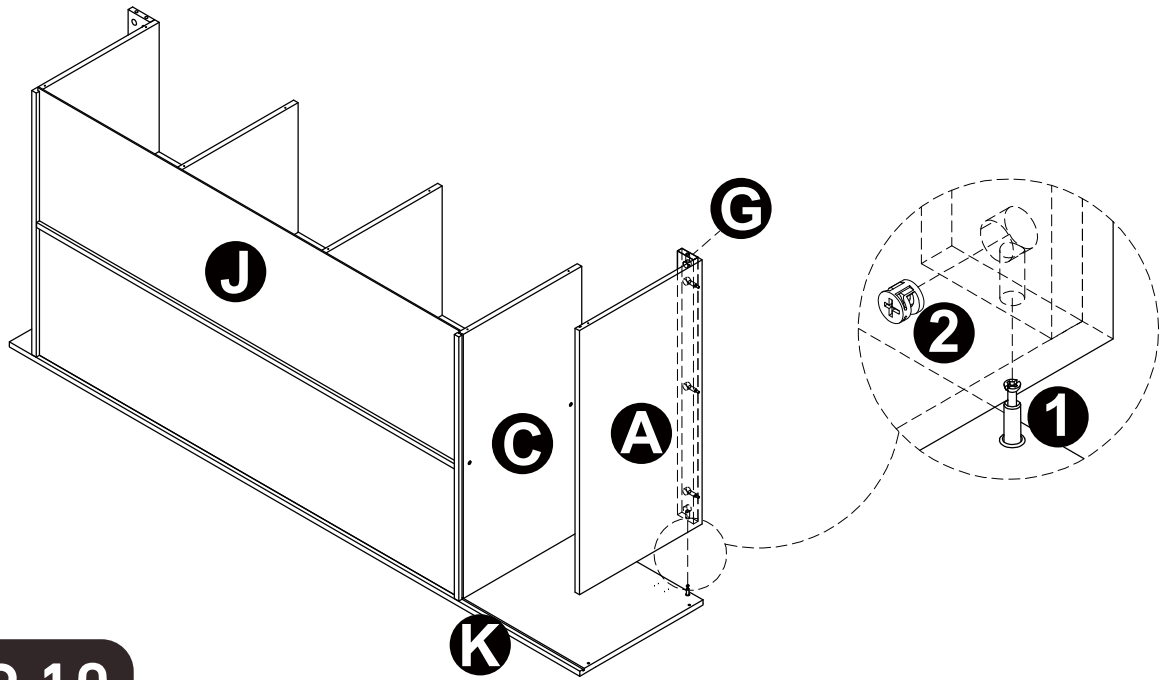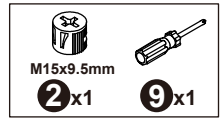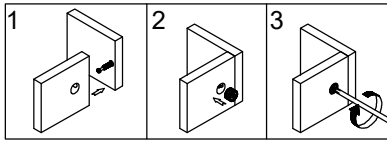



STEP 10

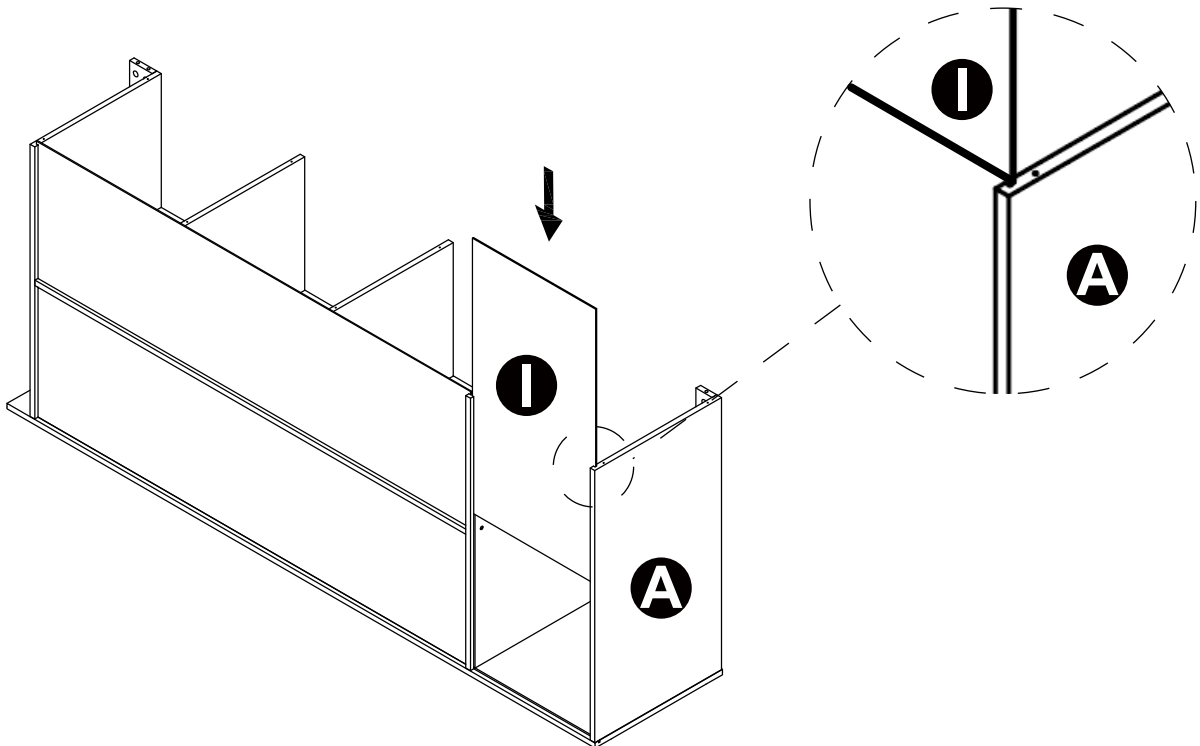



STEP 11

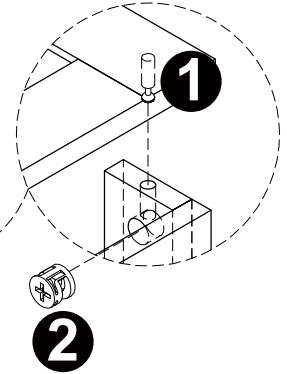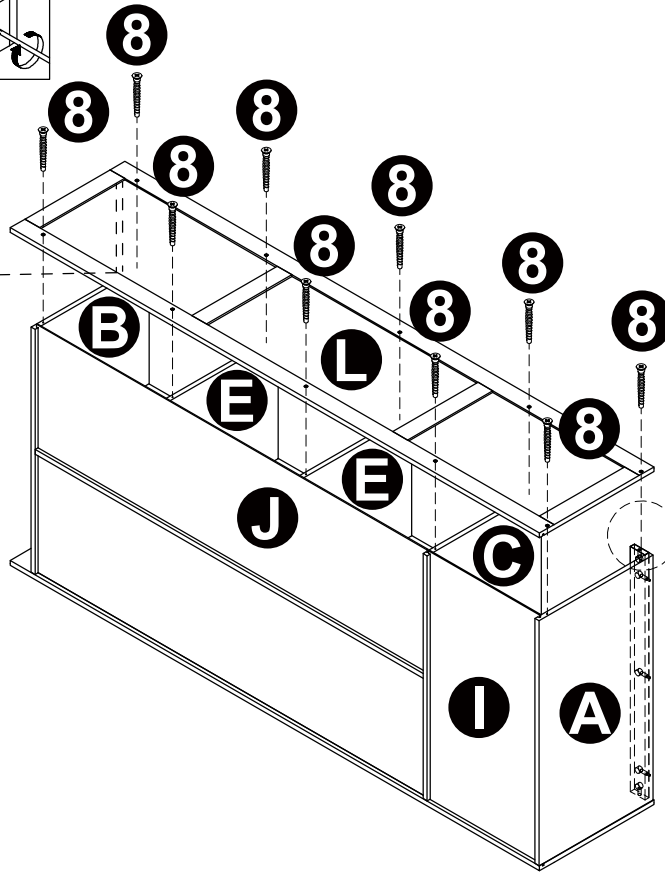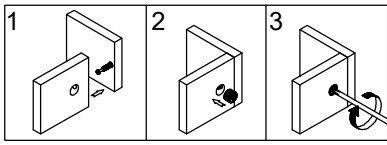



STEP 12

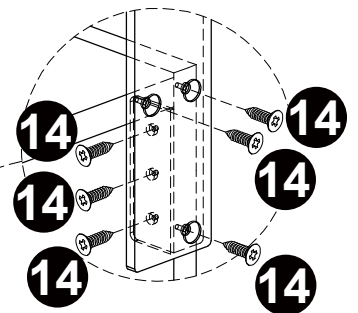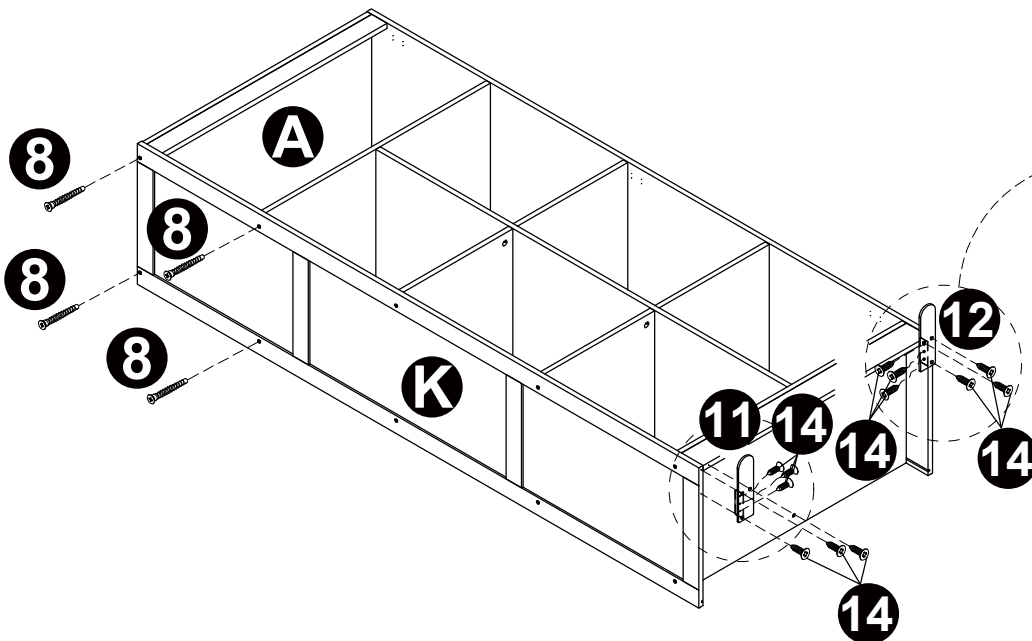

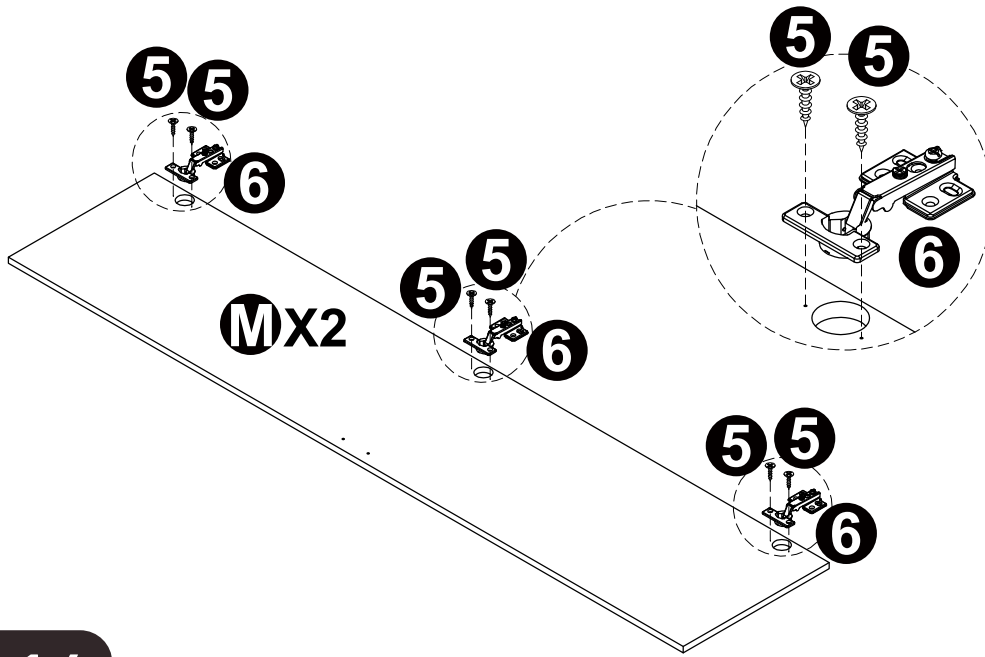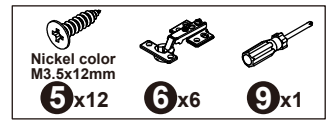


STEP 13

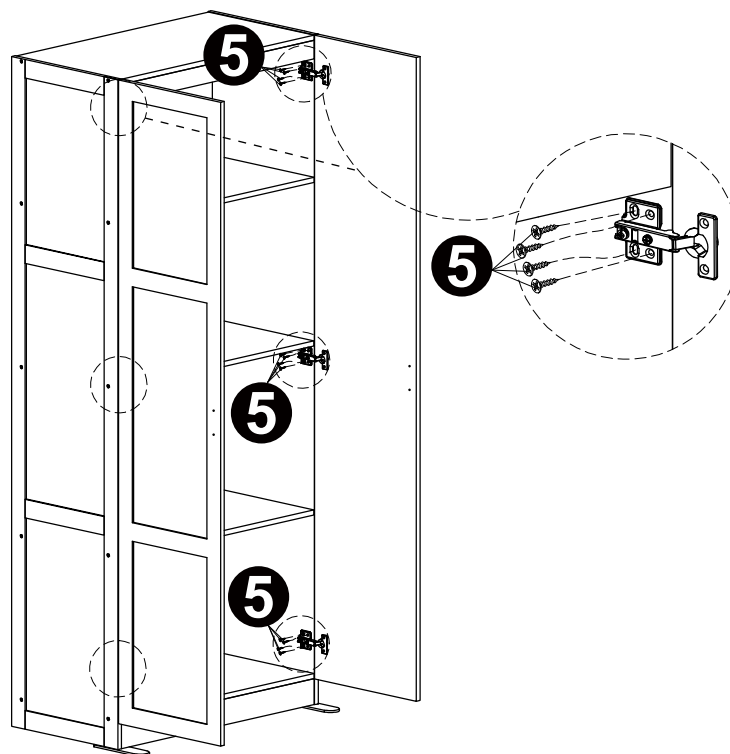


STEP 14




STEP 15


 M5/32"x12mm		
4 x4	7 x2	9 x1

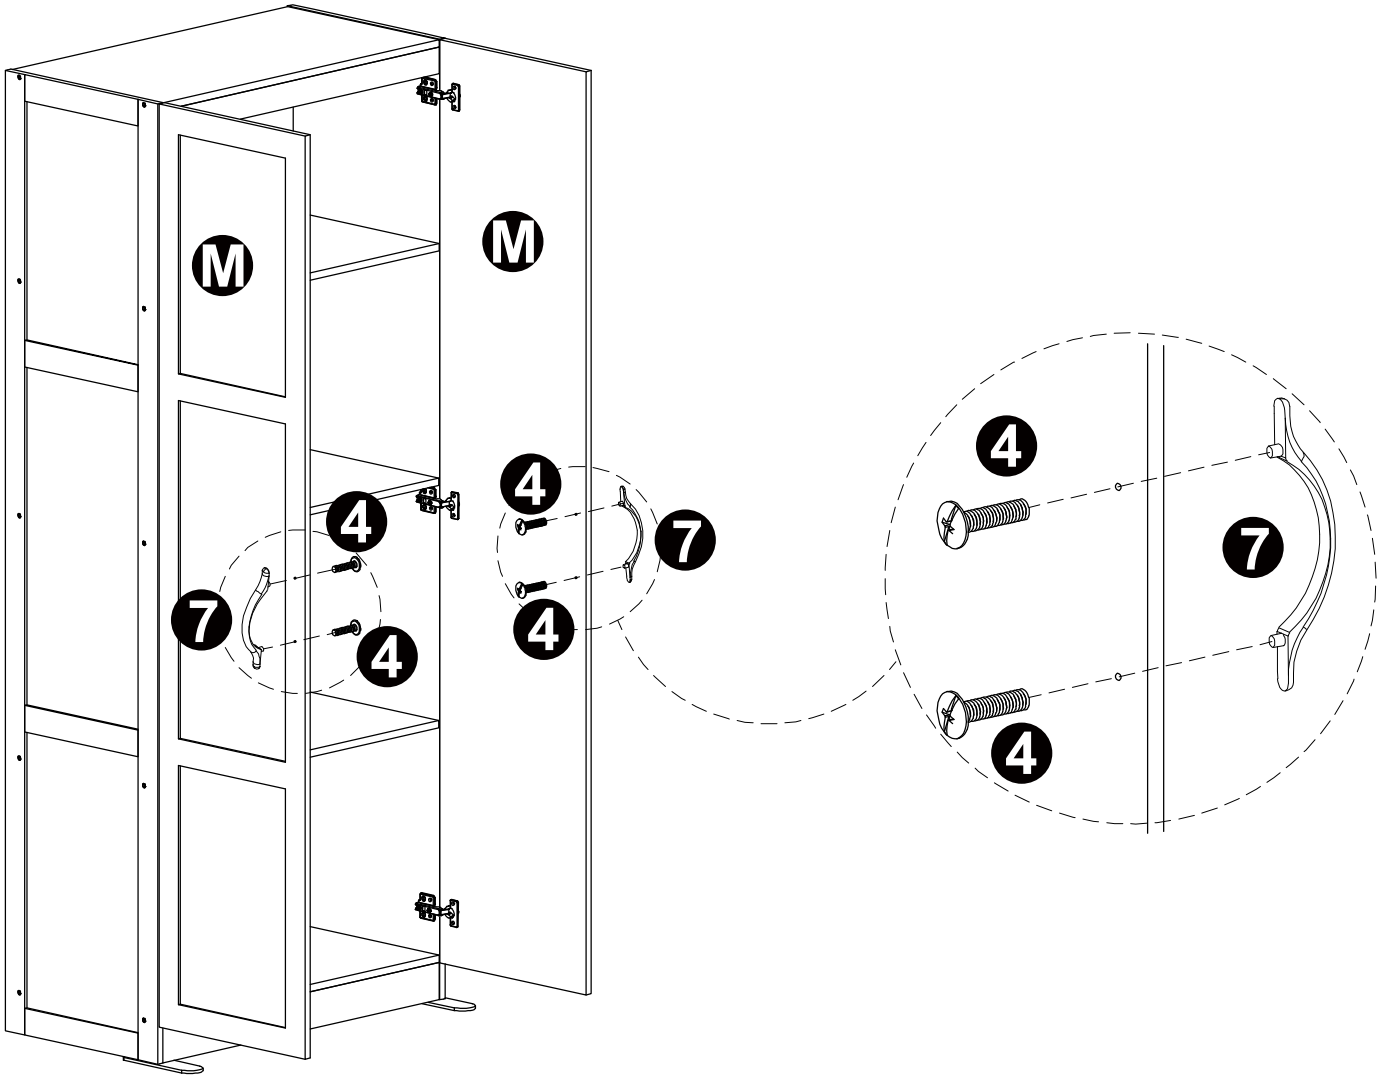

STEP 16





Secure the strap to the cabinet with the short screws.

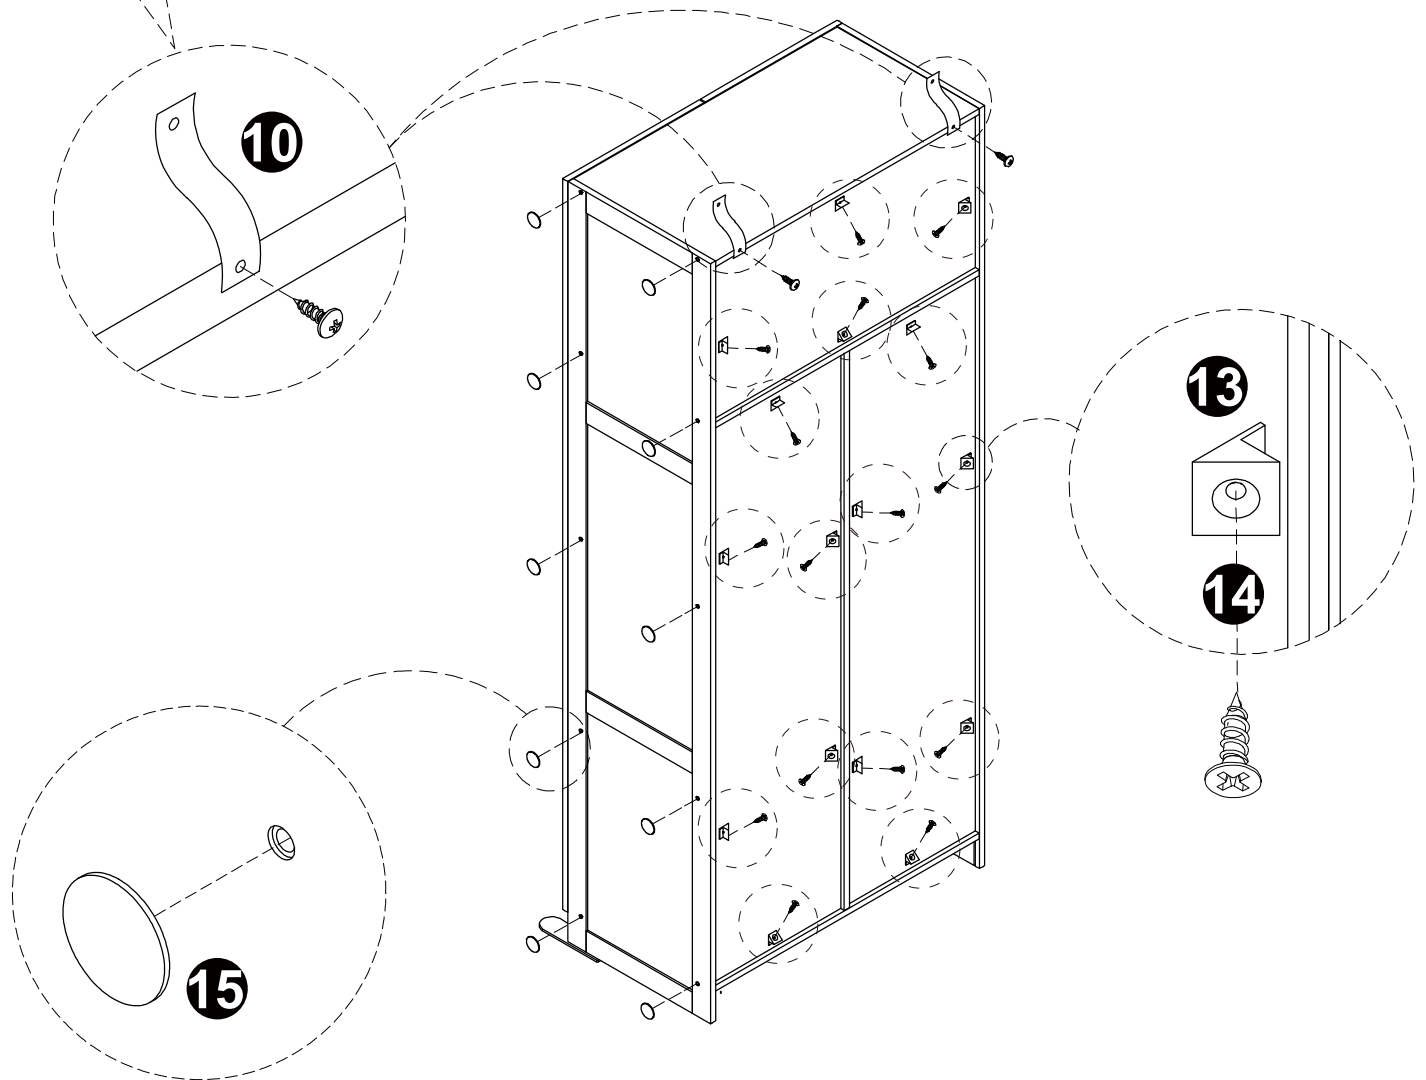


STEP 17


Install the anti-tip kit

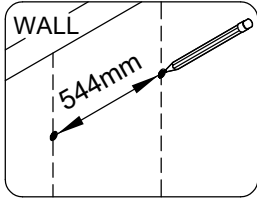


1. Make mark on the wall

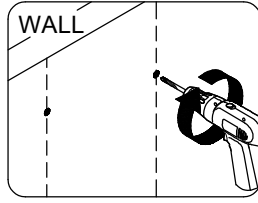

2. Drill two Ø6mm holes on the wall

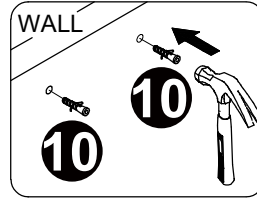


3. Insert two anchors in the holes

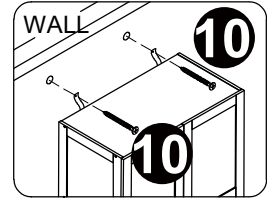

4. Insert the long screws through the strap into the holes

NOTE: Pencil, electric drill, and hammer are not included.

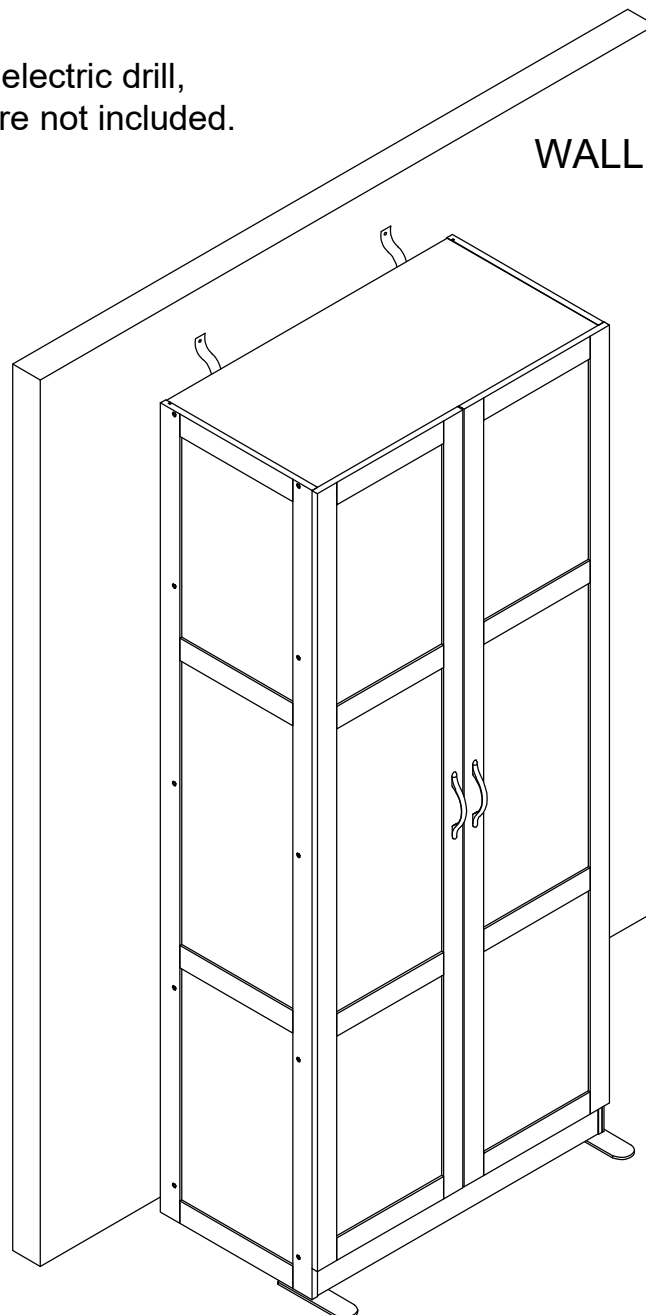

STEP 18

