

Parts List For Bed


BED CARTON

- (10) HEADBOARD PANEL
 (11) FOOTBOARD PANEL
 PART HARDWARE BAG FOR BED
 ATTACHMENT TO FRAME
 (1) 1/4-20 X 2 1/4" COUNTERSUNK ALLEN HEAD
 SCREW-4
 (2) 1/4-20 X 1" FLAT ALLEN HEAD SCREW-4
 (3) 1/4-20 HEX NUT-4
 (4) 1/4" ID FLAT WASHER-8
 (5) ALLEN WRENCH
 (6) EXTENSION LEG-2
 (7) FINIAL-4
 (8) FOOT CASTING-2
 (9) PLASTIC GLIDES-2


NOTE: PLASTIC GLIDES PRE-INSTALLED-2

HEADBOARD CARTON


- (10) HEADBOARD PANEL
 PART HARDWARE BAG FOR
 HEADBOARD ATTACHMENT TO FRAME
 (1) 1/4-20 X 2 1/4" COUNTERSUNK ALLEN HEAD
 SCREW-4
 (3) 1/4-20 HEX NUT-4
 (4) 1/4" ID FLAT WASHER-4
 (5) ALLEN WRENCH
 (6) EXTENSION LEG-2
 (7) FINIAL-2
 (9) PLASTIC GLIDES-2

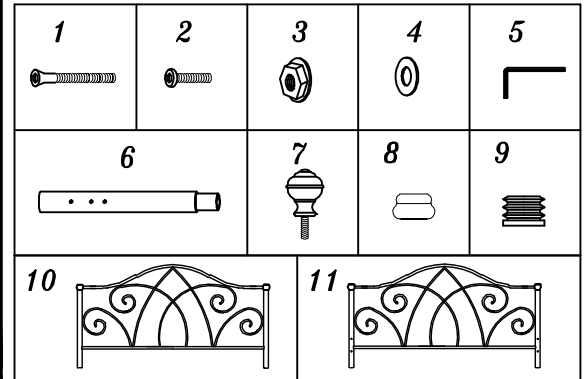


PRODUCT FULLY ASSEMBLED

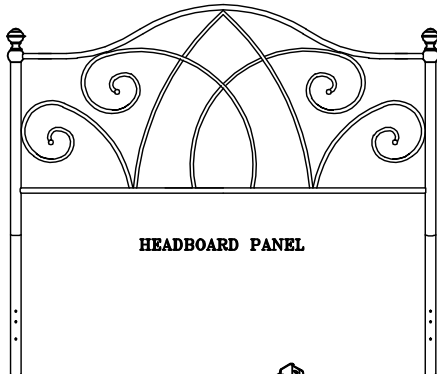


HEADBOARD PANEL

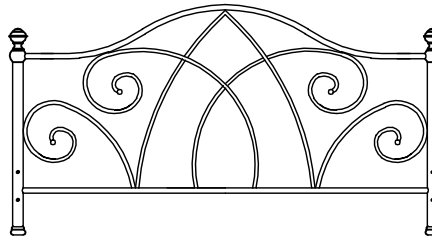


FOOTBOARD PANEL

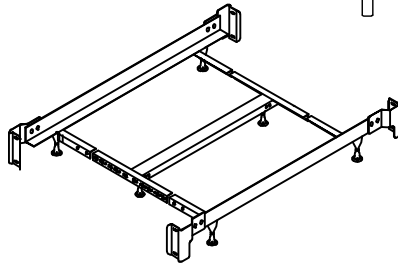


QUEEN - KING BED FRAME FULLY ASSEMBLED
 NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
 FOR FRAME ASSEMBLY

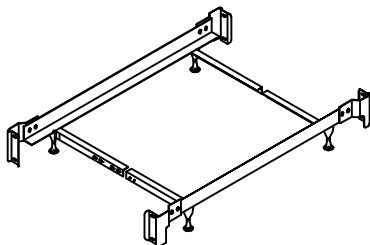

TWIN - FULL BED FRAME FULLY ASSEMBLED
 NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
 FOR FRAME ASSEMBLY

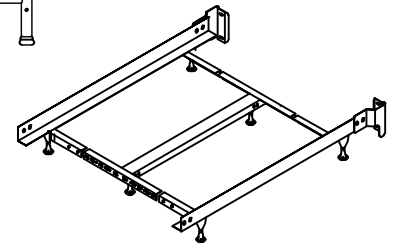

QUEEN - KING HEADBOARD ONLY FRAME FULLY ASSEMBLED
 NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
 FOR FRAME ASSEMBLY

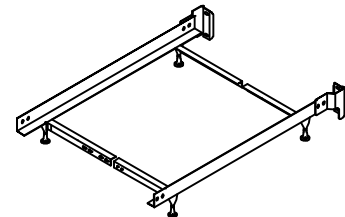

TWIN - FULL HEADBOARD ONLY FRAME FULLY ASSEMBLED
 NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
 FOR FRAME ASSEMBLY

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS
 PRODUCT.

PLEASE
 HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU
 CALL. (STYLE # OR NAME CAN BE FOUND ON
 PACKING CARTON OR SALES RECEIPT.)
 OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN
 GOOD CONDITION. IF YOUR FURNITURE APPEARS
 TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU
 ARE IN NEED OF REPLACEMENT PARTS PLEASE
 CONTACT THE DEALER FROM WHOM YOU
 PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

HEADBOARD PANEL

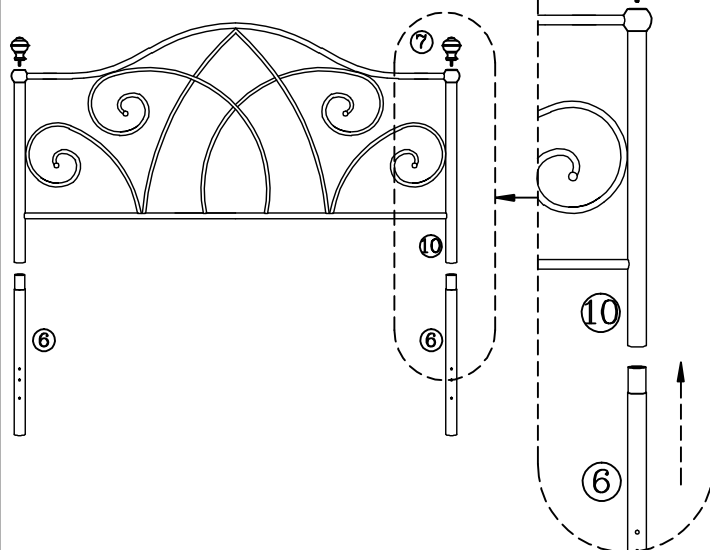


FIGURE 2

FOOTBOARD PANEL


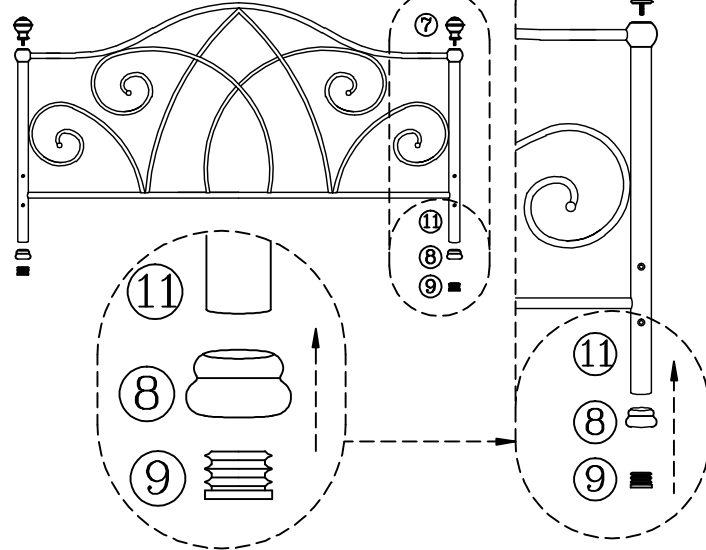


FIGURE 3

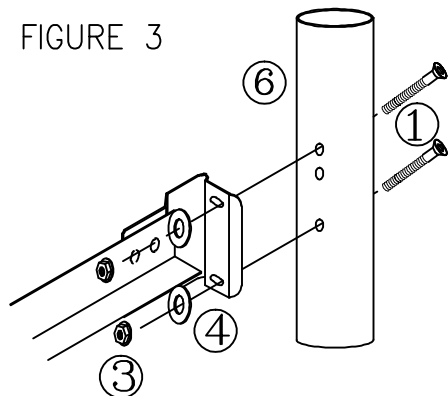

Step 1 Headboard Assembly

- Align top reduction of extension legs (6) with bottom of headboard panel (10) posts. (SEE FIGURE 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (6) into bottom of headboard (10) posts.
- Screw in finials (7) on top of headboard Panel (10). (SEE FIGURE 1)


Step 2 Footboard Assembly

- Insert foot casting (8) into footboard panel post (11). (SEE FIGURE 2)
- Secure foot casting (8) with plastic glide (9).
- Screw in finials (7) on top of footboard Panel (11). (SEE FIGURE 2)

Step 3 Headboard Frame Assembly

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in extension leg (6). (SEE FIGURE 3)
- Align bed frame bracket over screws.
- Place a flat metal washer (4) over screws first and then a hex nut (3) on each screw. Hand tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).

FIGURE 4

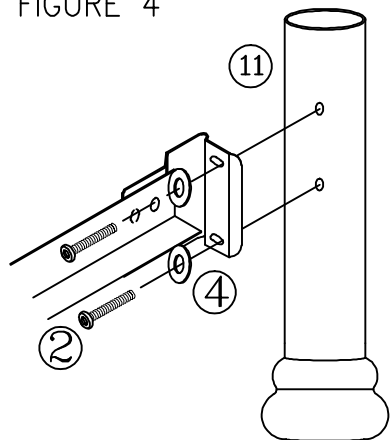

Step 3 Footboard Frame Assembly

- Position footboard panel (11) and align holes in the post with holes in the frame bracket. (SEE FIGURE 4)
- Place flat metal washer (4) on each screw (2). Insert through bracket and into footboard post. Hand tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench (5).