

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



Stains may be removed with mild soap solution and damp cloth.




Children should not climb or jump on the furniture.











Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.












CABINET SINK (47")












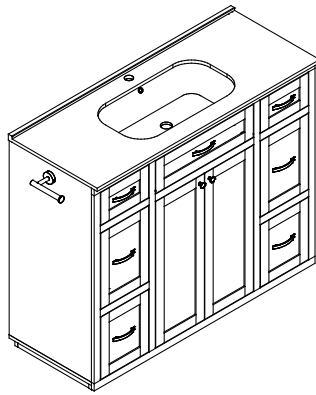







Parts List

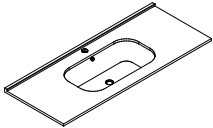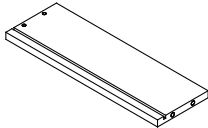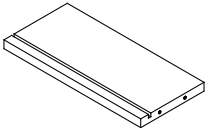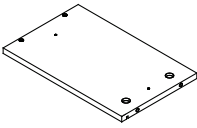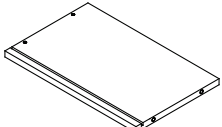
Label	Picture	Description	QTY
		Sink	1
③		Slide rail pad strip	12
⑧		Drawer bottom rail	4
②②		Left drawer side panel	2
②③		Right drawer side	2
②④		Drawer back	2
②⑧		Left drawer side panel	4
②⑨		Right drawer side	4



30		Front Apron	4
----	---	-------------	---

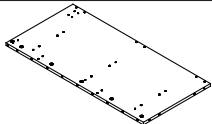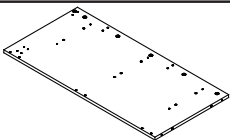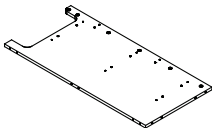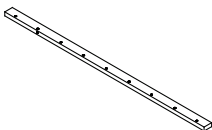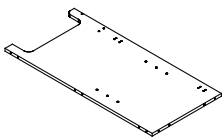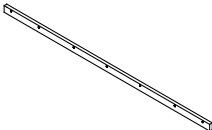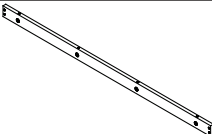
1		Left side panel	1
2		Side panel strip	2
4		Right side panel	1
5		Left middle side panel	1
6		Left middle lower strip	1
7		Right middle side	1
9		Bottom strip	4
10		Bottom panel	1
11		Front lower rail	1
12		Front and rear rails	2
13		Left and right rails	2

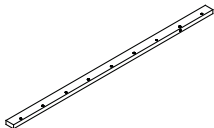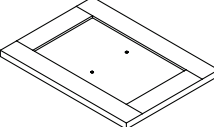14		Back brace	3
15		Adjustable shelf	1
16		Drawer lower middle rail	1
17		Upper strip	1
18		Right middle lower strip	1
19		Left door panel	1
20		Right door panel	1
21		Drawer front	2
25		Drawer bottom	6
26		Drawer front	2
27		Drawer front	2
31		Flip drawer front	1

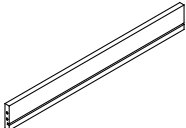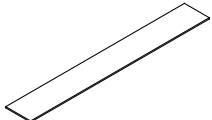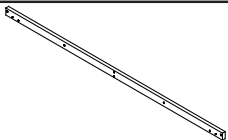32		Left side of flip-down drawer	1
33		Right side of flip-down drawer	1
34		Flip-down drawer back	1
35		Flip-down drawer bottom	1
36		Front upper apron	1


Hardware			
A		Cam bolt (ø6 x 35mm)	114 Extra2
B		Wooden dowel (ø6 x 30mm)	37 Extra2
C		Cam lock (ø15 x 10mm)	114 Extra2
D		Screw (ø4*30 mm)	28 Extra2
E		Screw (ø3*12 mm)	50 Extra2
F		two-section slide (300mm)	12
G		Screw (ø4*40 mm)	22 Extra2
H		Screw (ø3.5*14 mm)	50 Extra2
I		plastic door bumper	1
J		Screw (ø4*25 mm)	24 Extra2
K		four-hole angle iron	2

Hardware			
L		10-hole corner bracket	2
M		plastic shelf peg	4 Extra1
N		anti-tipping kit	2set
O		35mm soft-closing full overlay hinge	4
P		Screw (M4*18 mm)	2 Extra1
Q		Handle	2
R		Screw (M4*8 mm)	14 Extra1
S		toilet paper holder	1set
T		furniture felt pad	10
U		round EVA pad	4
V		Phillips & hex double-end wrench	1
W		Wooden dowl (ø6 x 20mm)	24 Extra2
X		Two-hole iron sheet	1
Y		Handle	7
Z		Grenade shelf pin	2
a		Plastic middle shaft	2

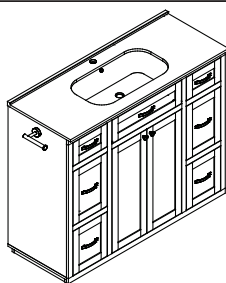


Assembly Steps

Overview

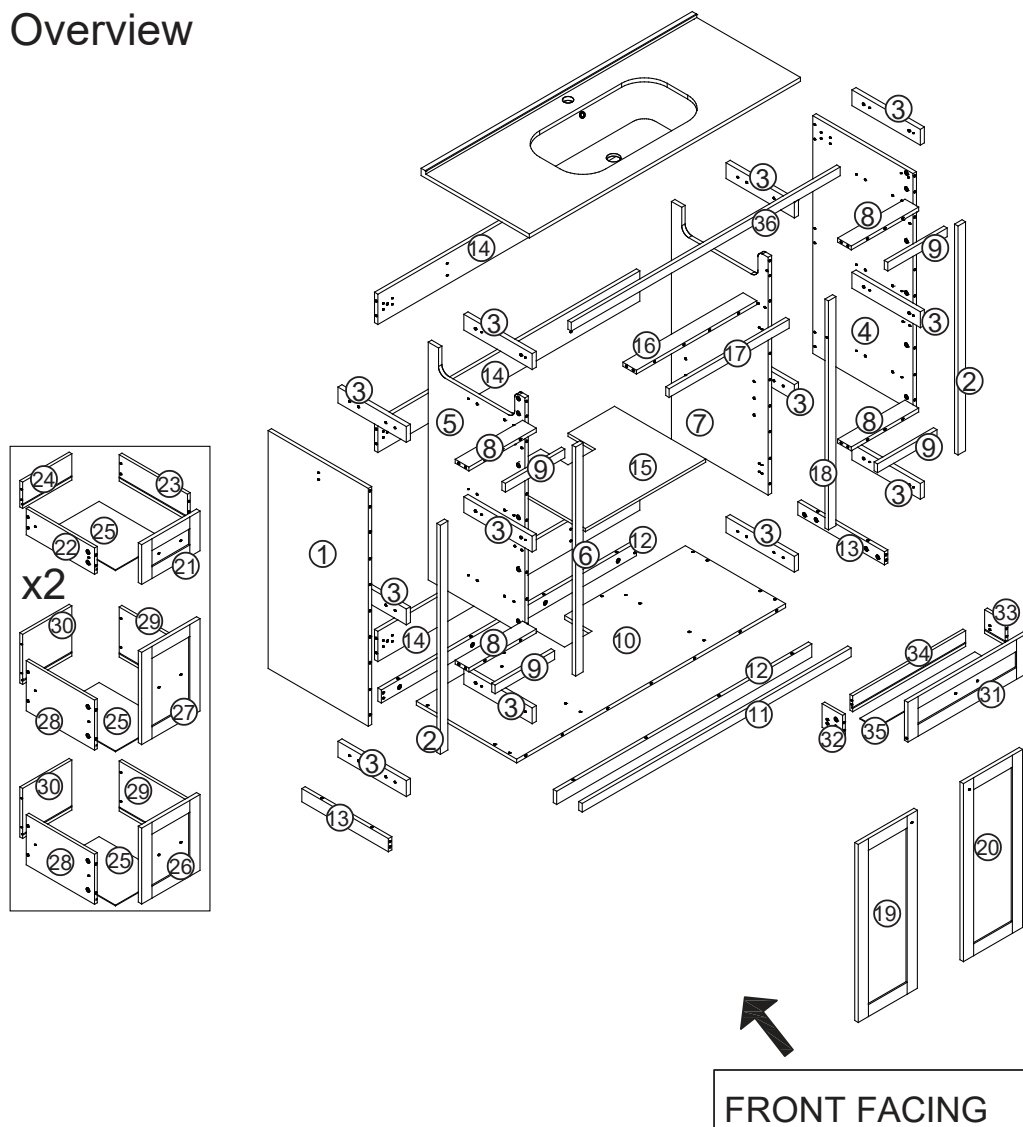

This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Completed

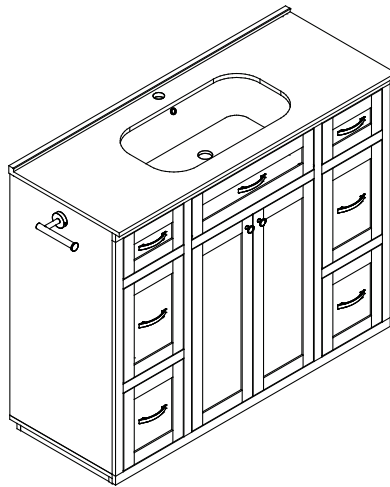


Turn the CABINET SINK right side up.
Place the CABINET SINK on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Gently and gracefully, sit into to the CABINET SINK.
This would help to align all the parts at all the joint areas.


Then get off the CABINET SINK, and in a sequential manner,
proceed to tighten all screws.
To tighten the Screws at the base of the Backrest, do secure
assistance from your adult partner(s).
You may be required to turn the CABINET SINK, to gain easy
access to the secure points.
Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten
sequentially.
DO NOT tighten any screw fully and then towards the next
one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this
same process.
WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD
LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.
The CABINET SINK is ready to be used.
Caution 2: This CABINET SINK can only be used on a flat,
level surface.


Step 1

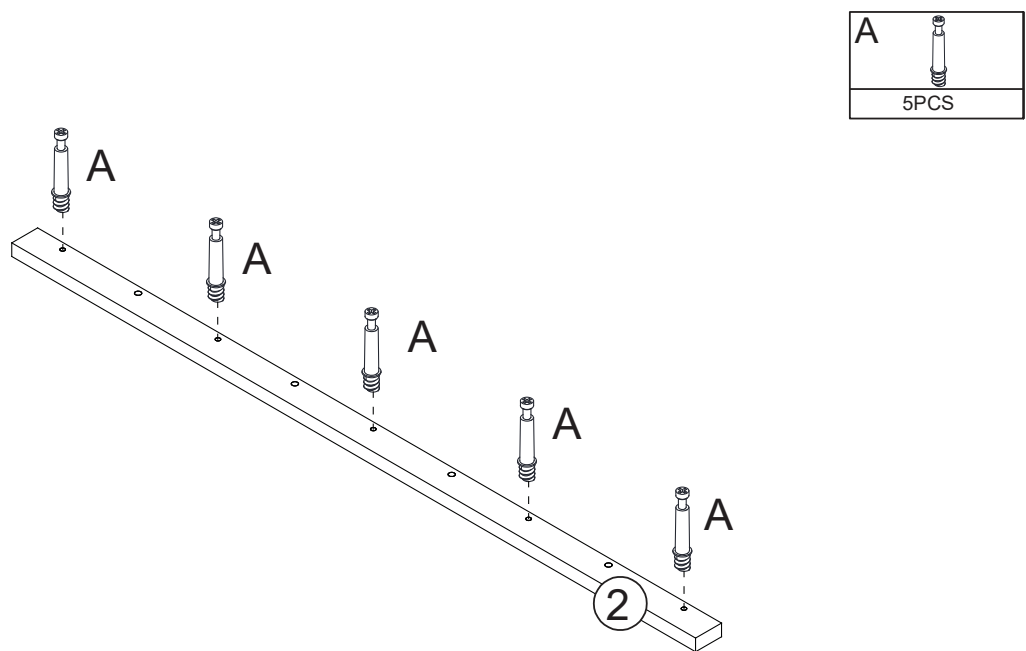


Step 2

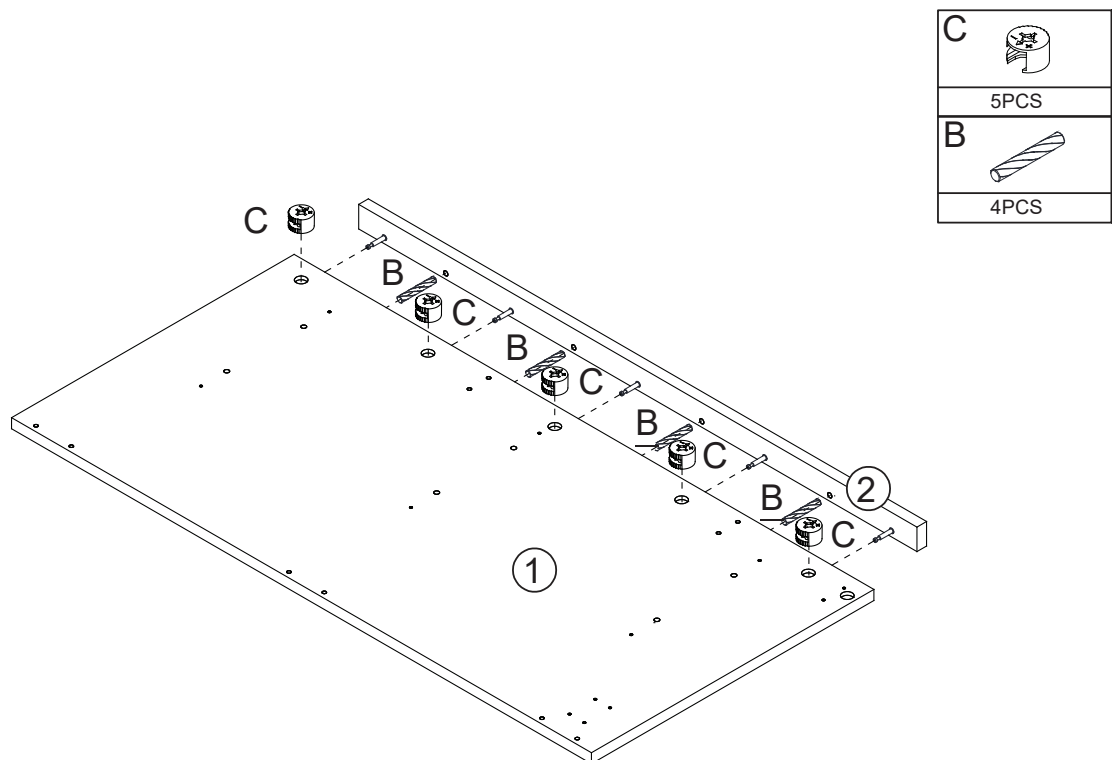


Step 3

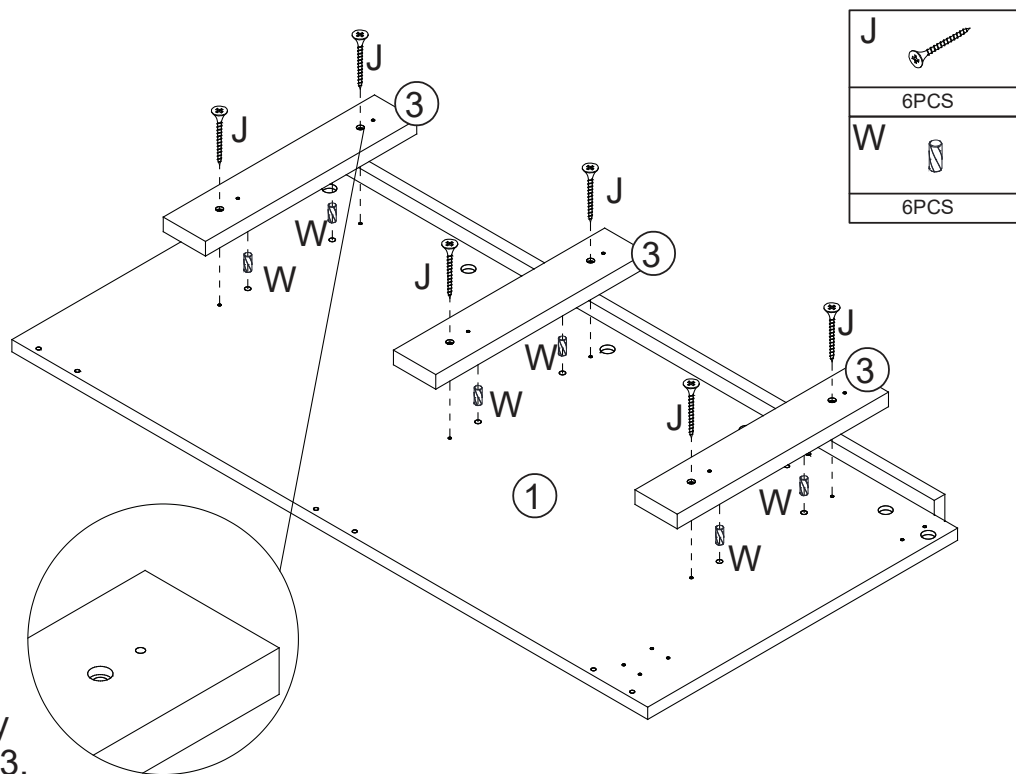


Step 4

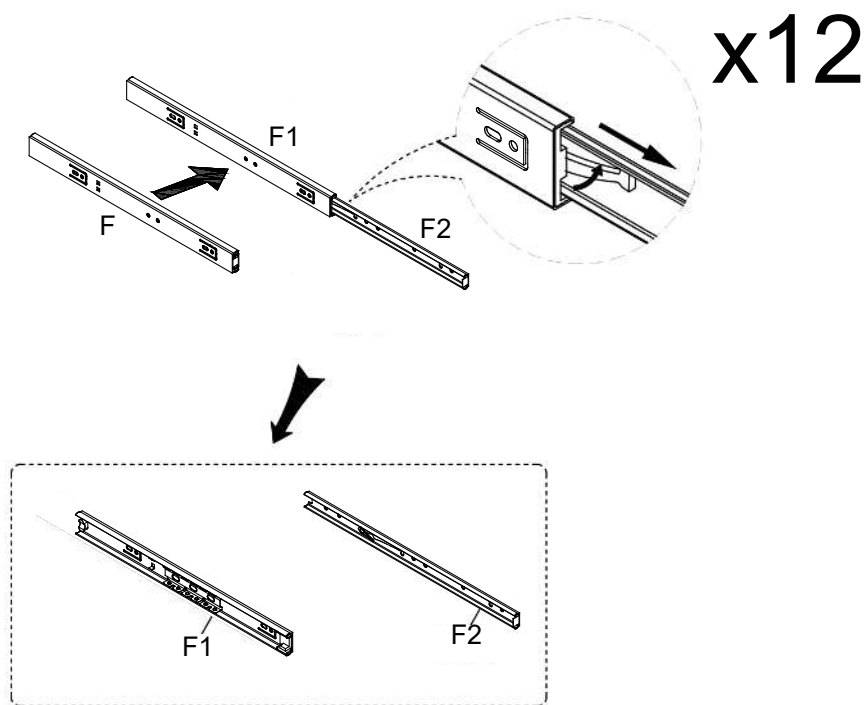


Step 5

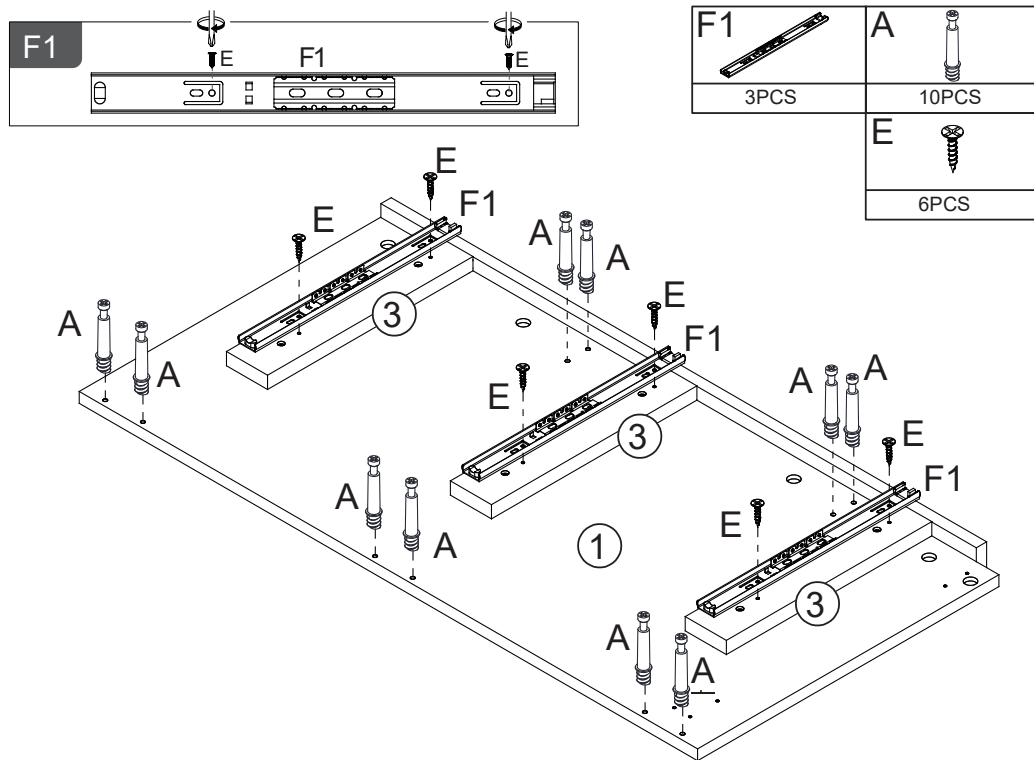

Step 6

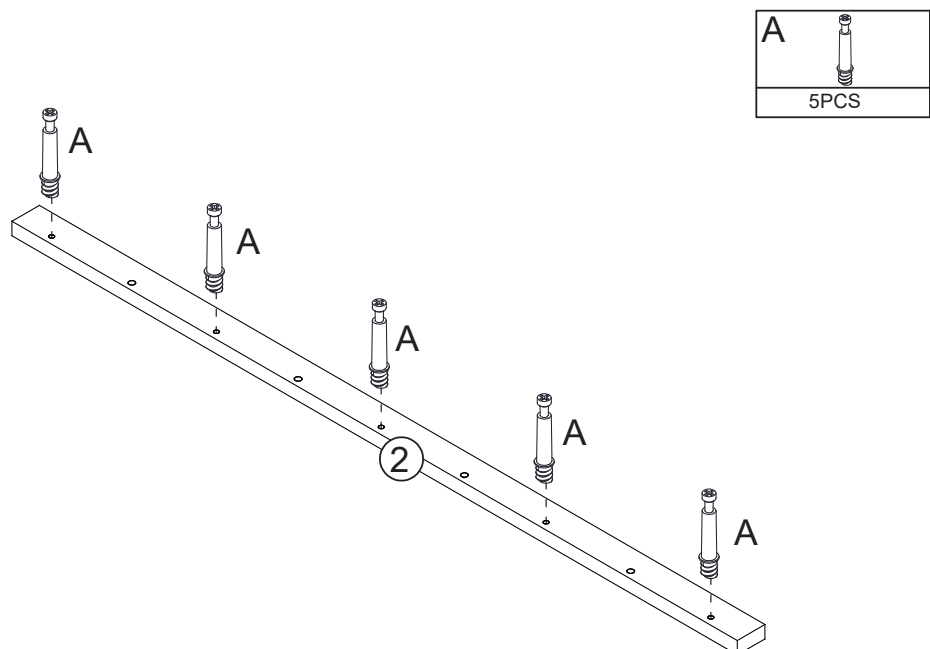


Step 7

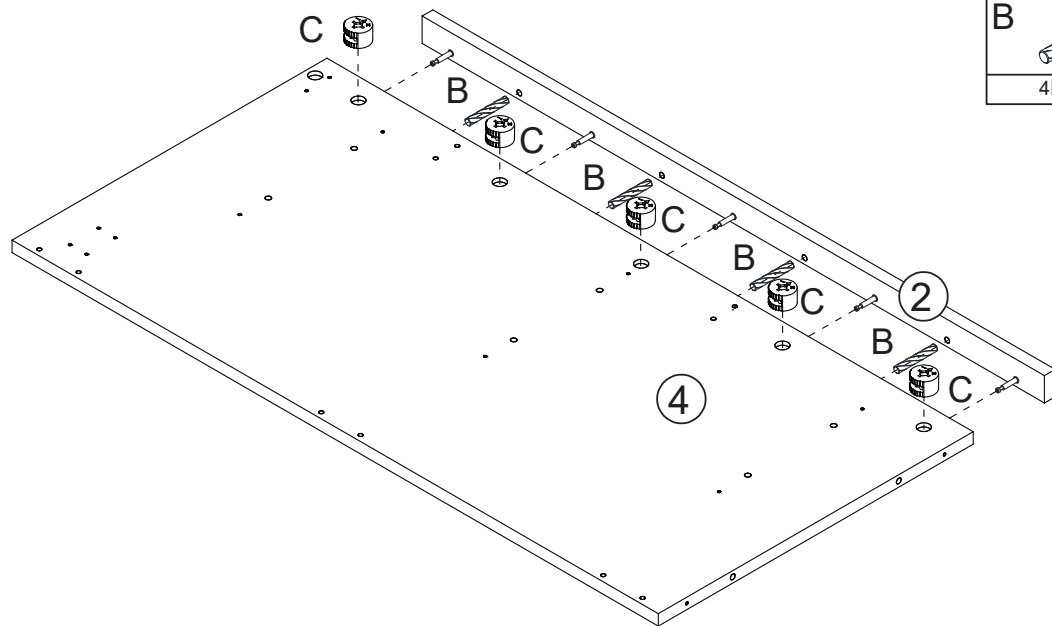

C	
5PCS	
B	
4PCS	


Step 8

Note the assembly direction of board 3.

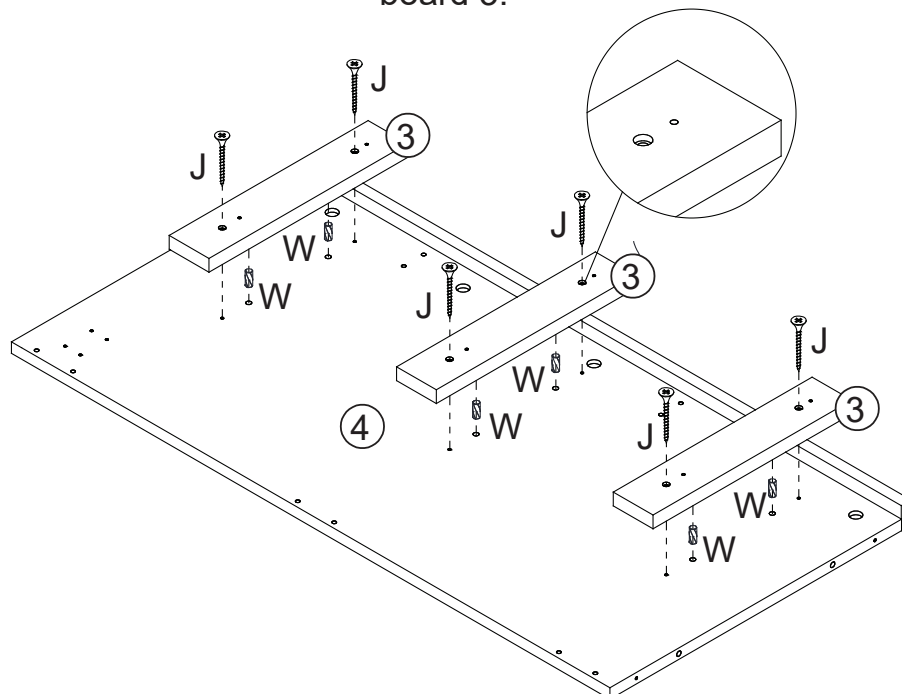


J	
6PCS	
W	
6PCS	


Step 9

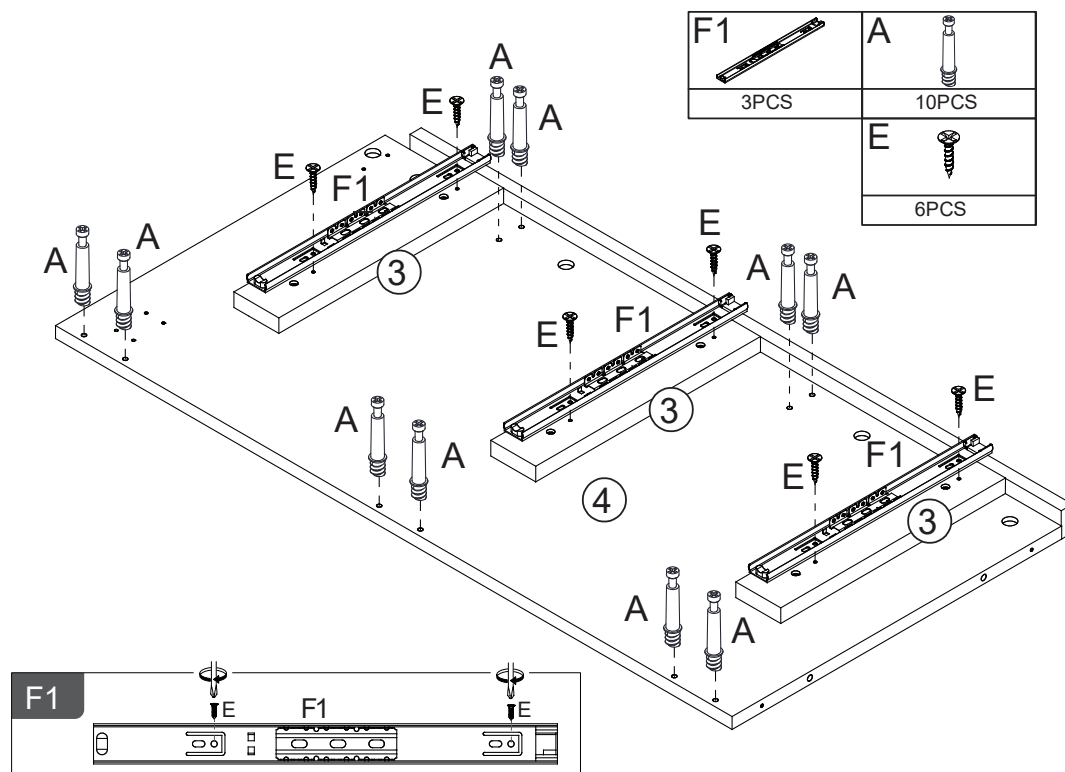

Step 10

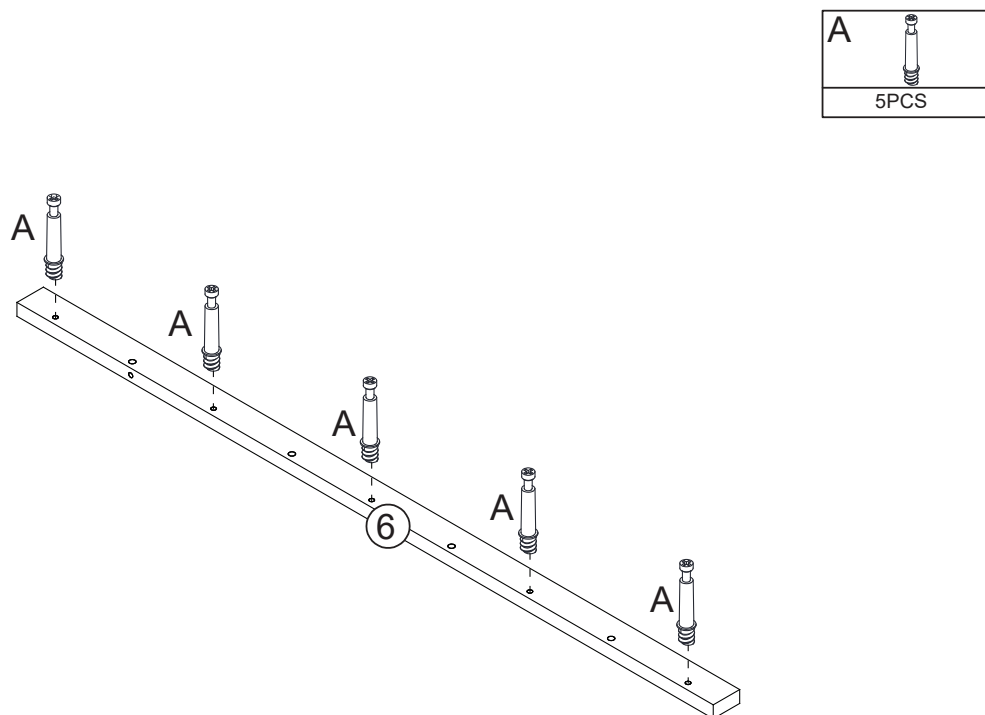


Step 11

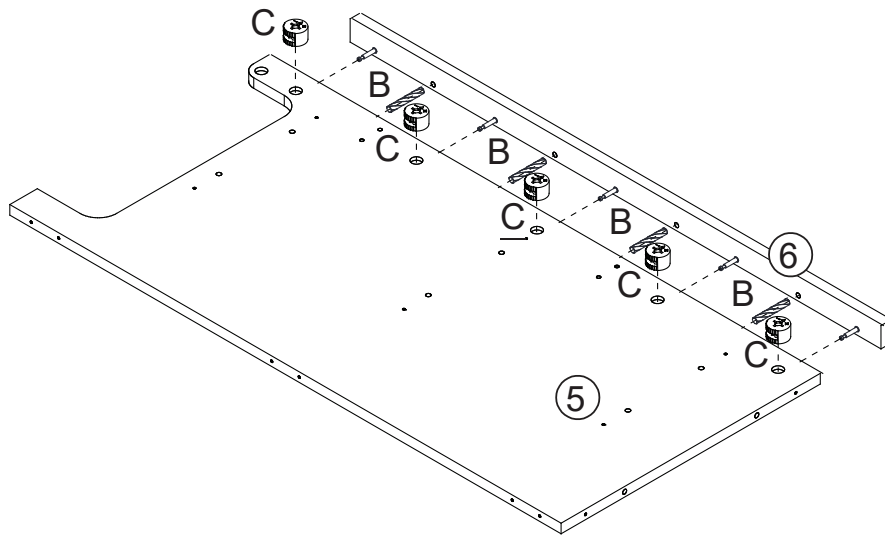

C	
5PCS	
B	
4PCS	


Step 12

Note the assembly direction of board 3.

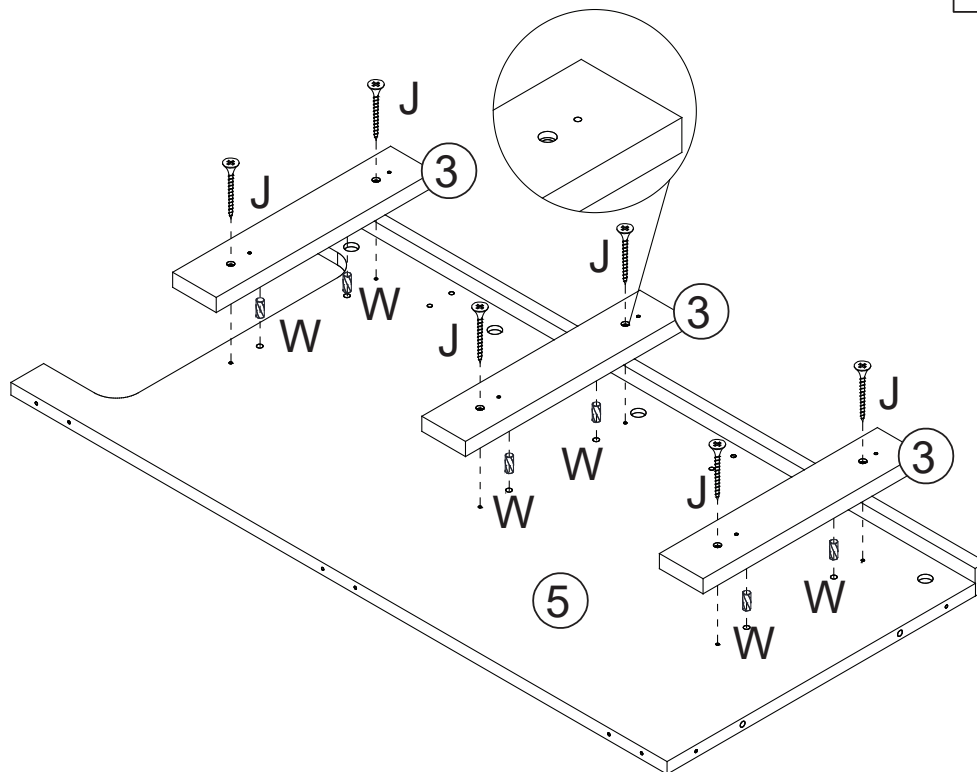


J	
6PCS	
W	
6PCS	

Step 13

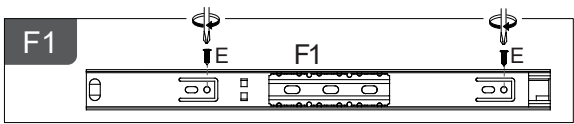


F1	A
3PCS	6PCS
	E
	6PCS

Panel No. 5 requires installation on both sides.

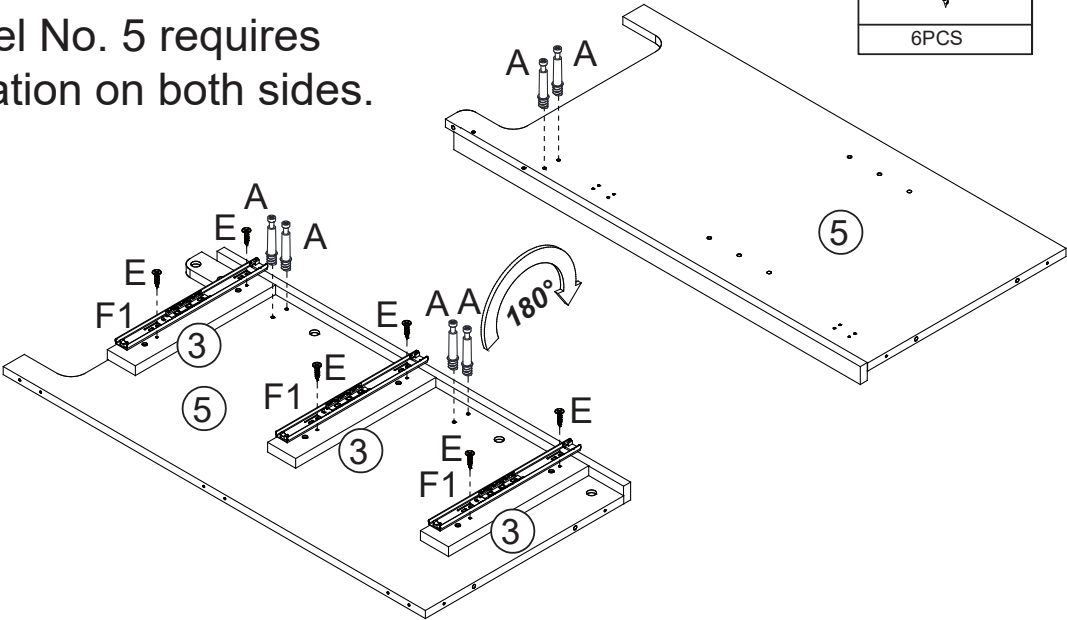


Step 14

A
6PCS

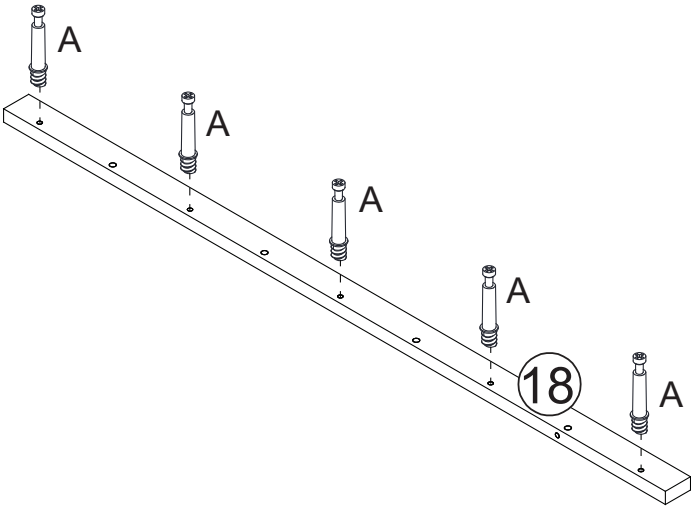


Step 15

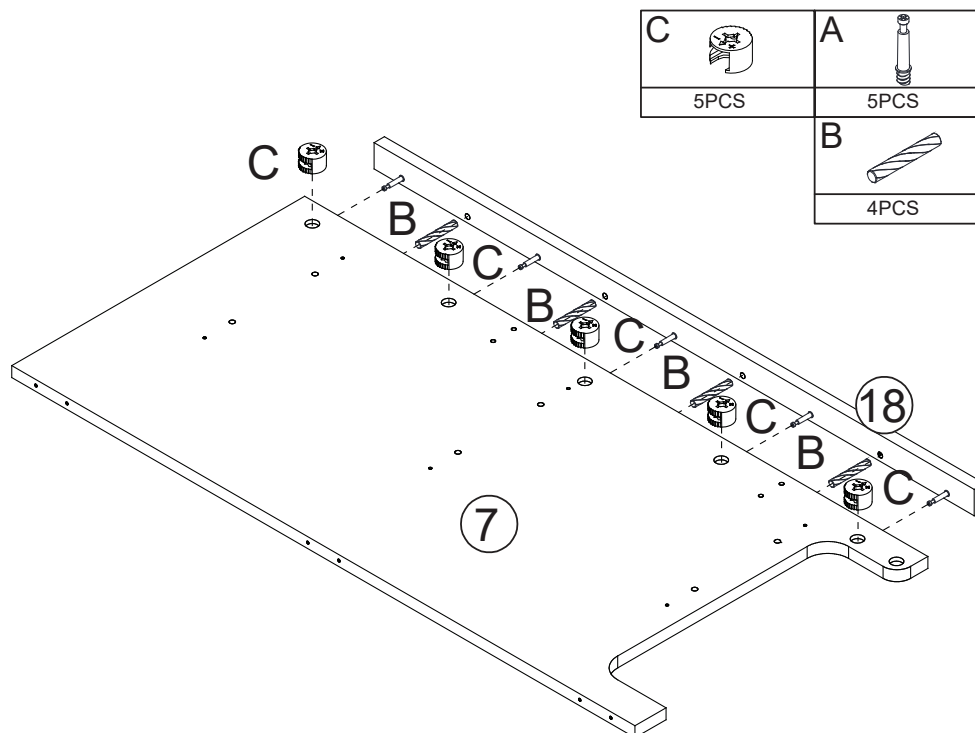


Step 16

Note the assembly direction of board 3.

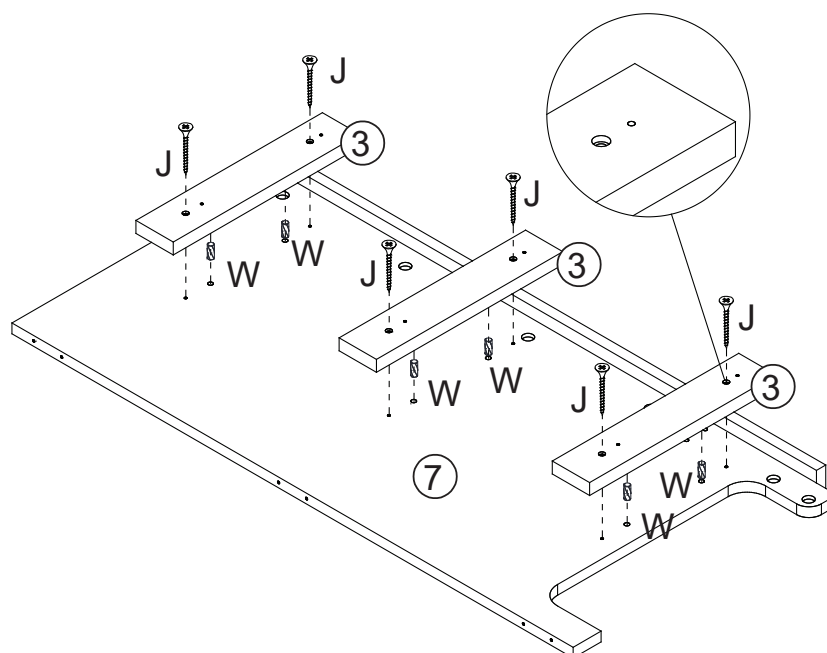


J	
6PCS	
W	
6PCS	

Step 17

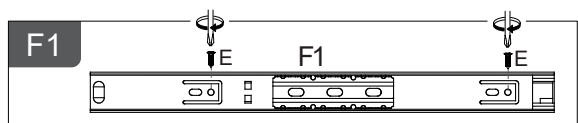


F1	A
3PCS	6PCS
	E
	6PCS

Panel No. 7 requires installation on both sides.

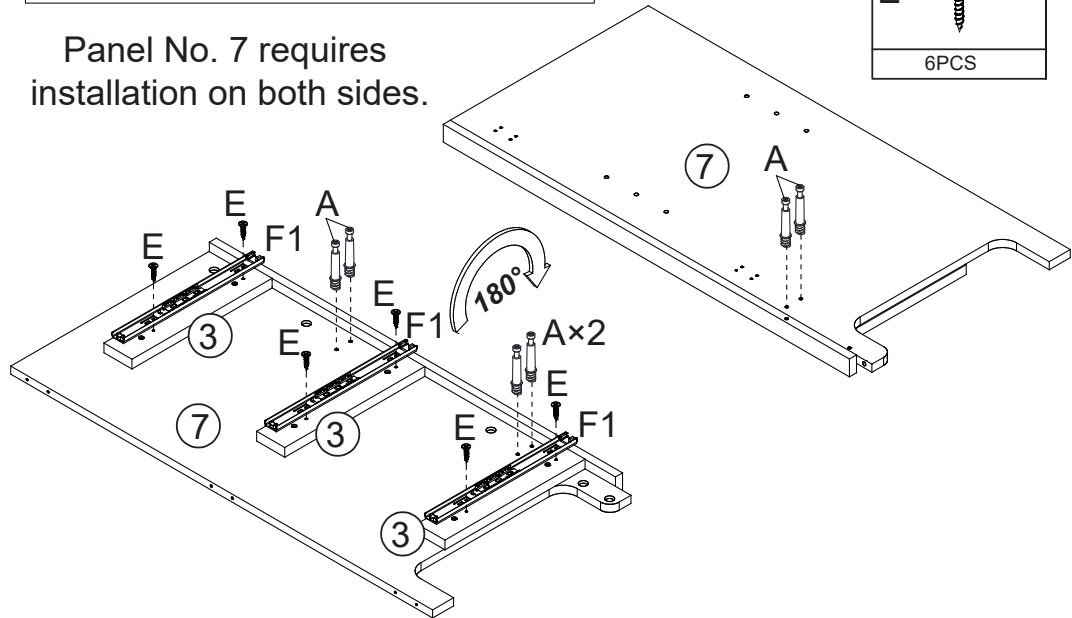


Step 18

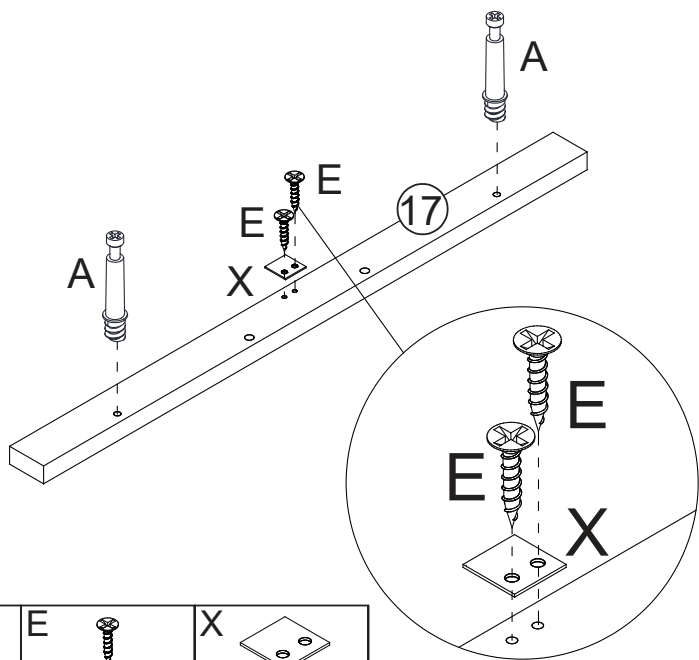


A	E	X
2PCS	2PCS	1PCS

Step 19

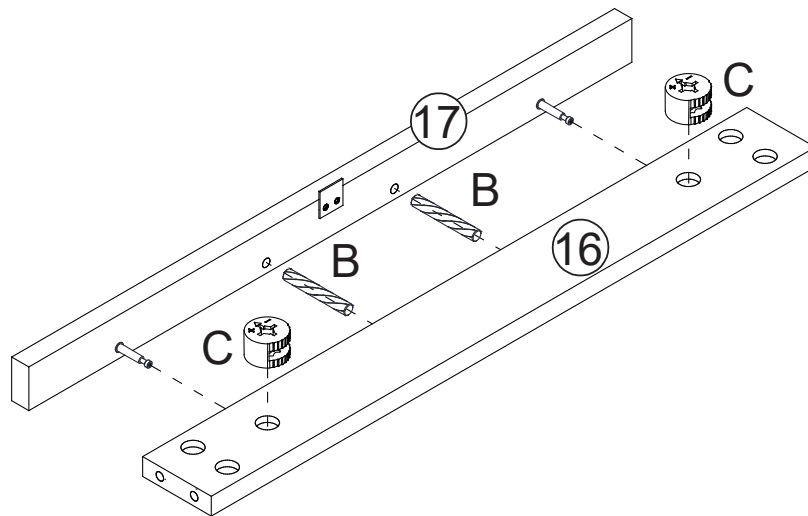


B 	C 
2PCS	2PCS

Step 20

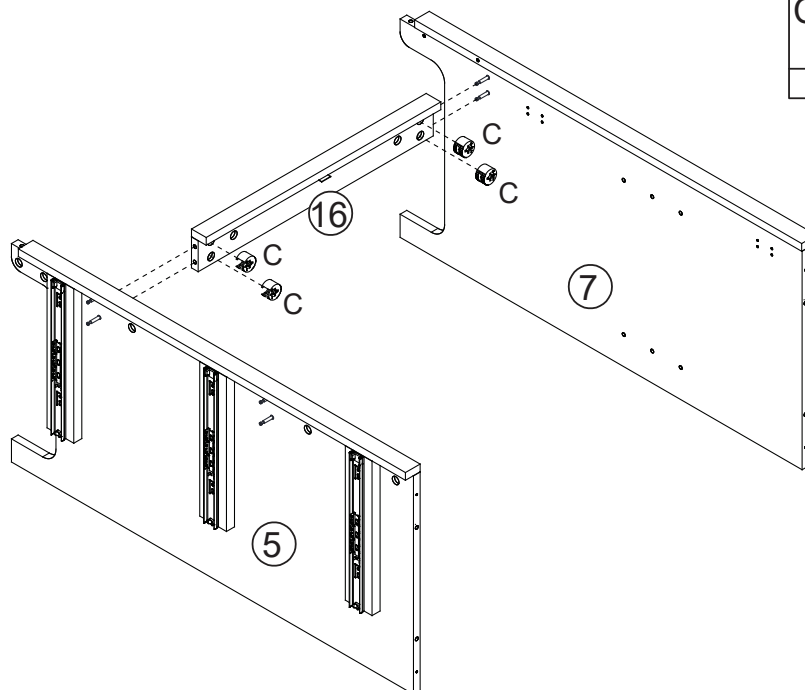


C 
4PCS



Step 21

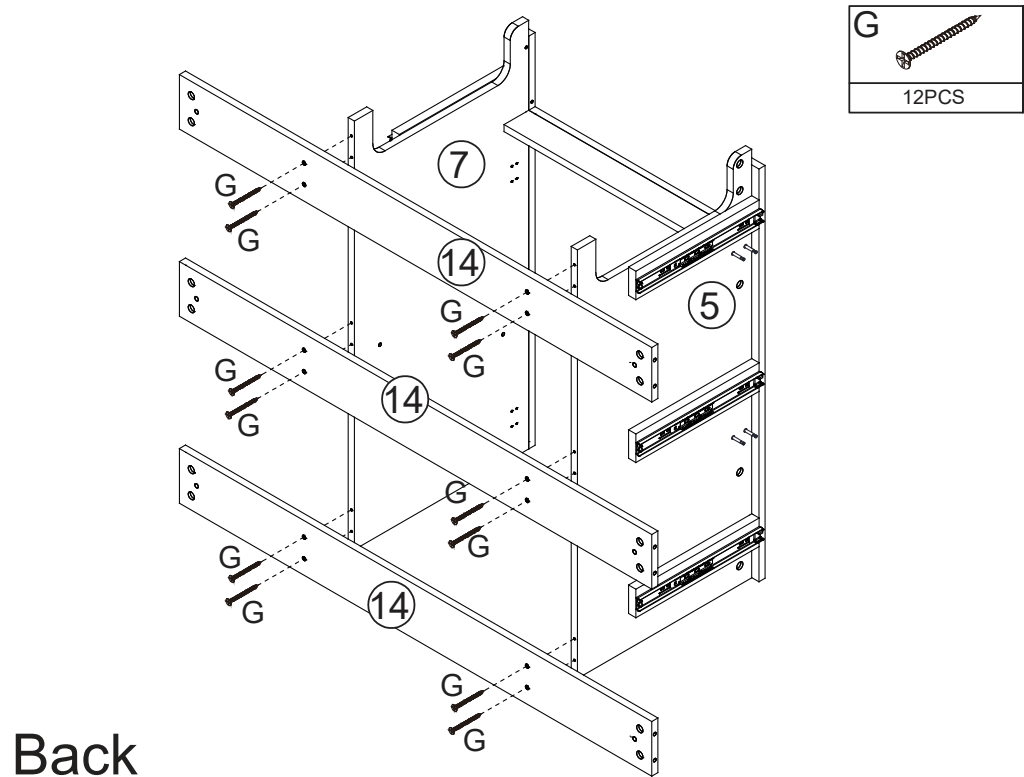



Step 22

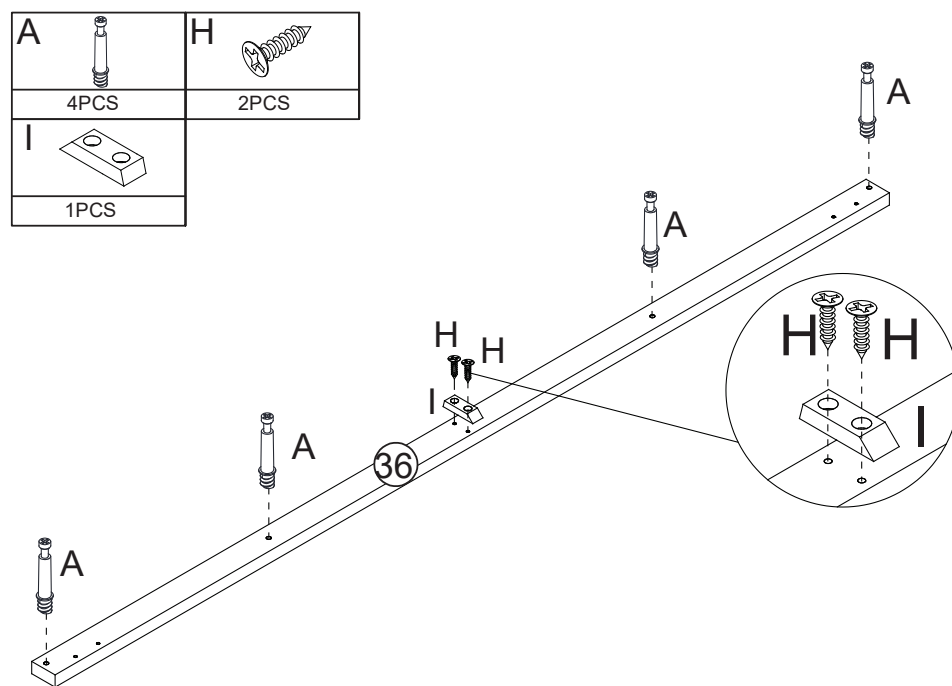



Step 23

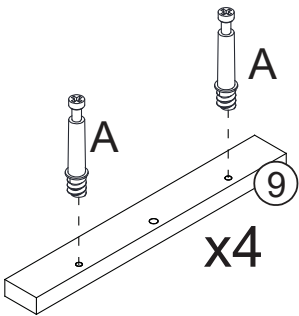


Step 24

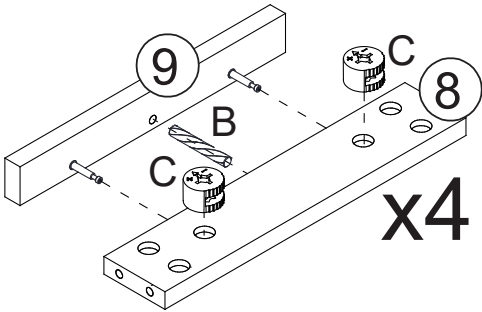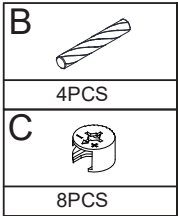


Step 25

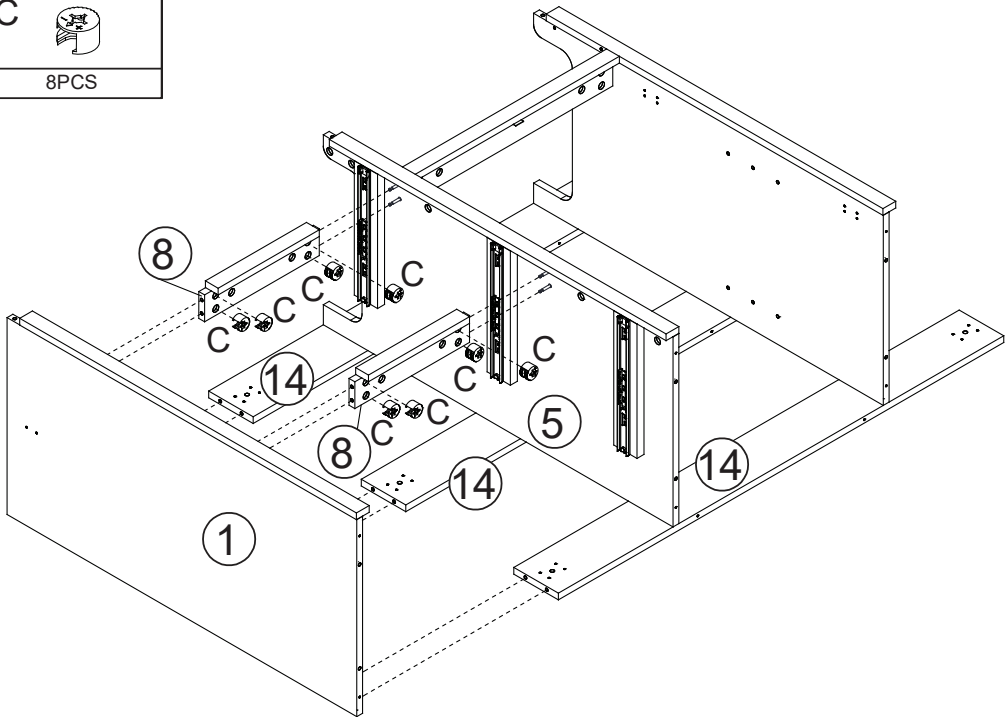

Step 26

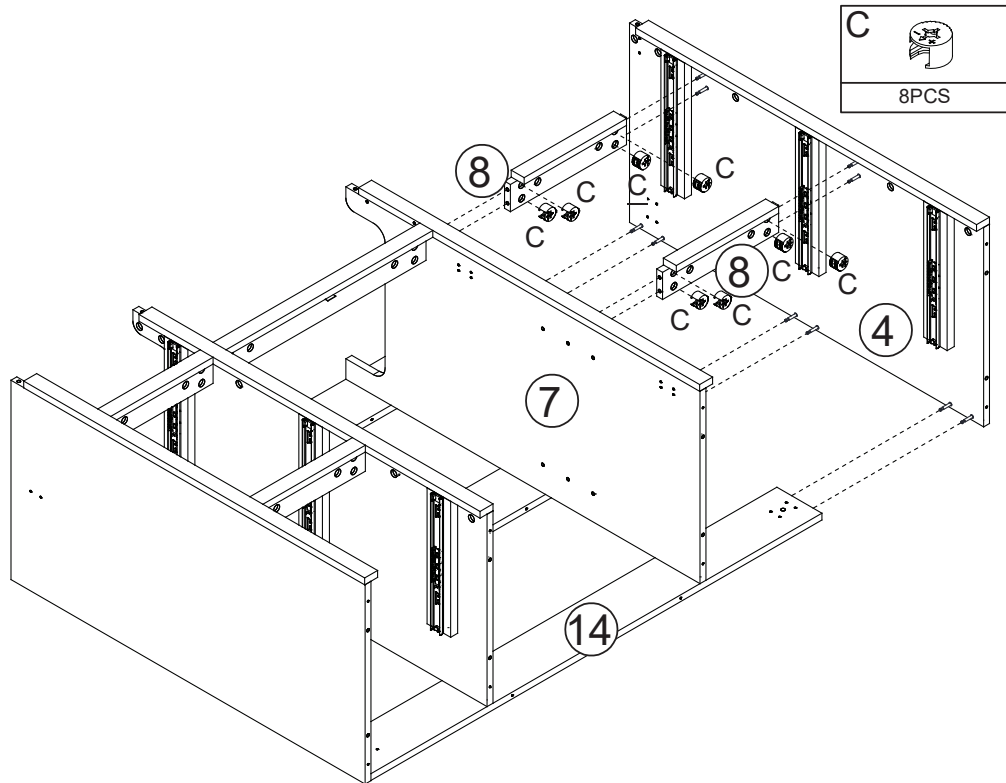


Step 27

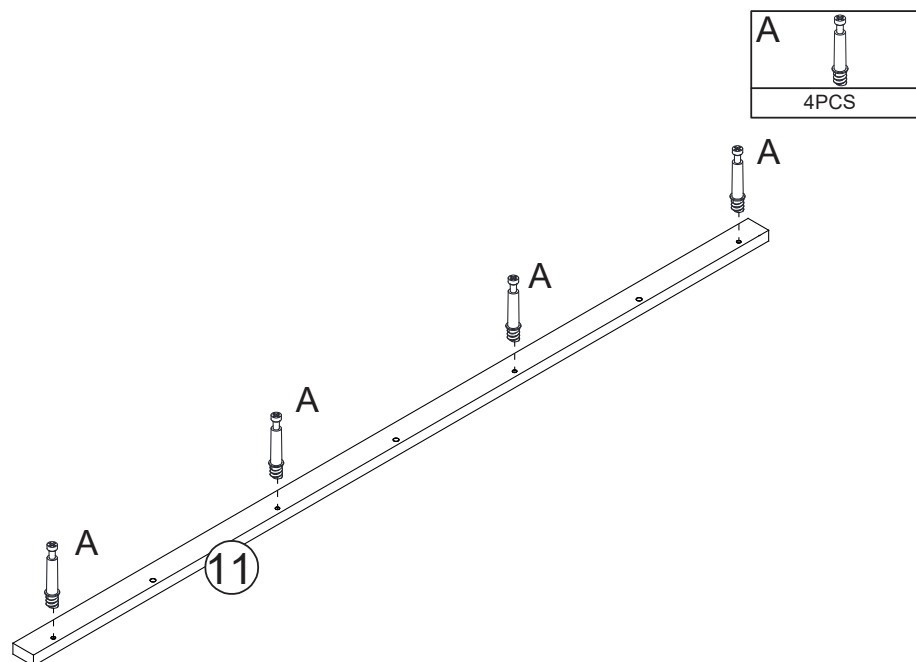


Step 28

B	
3PCS	
C	
4PCS	

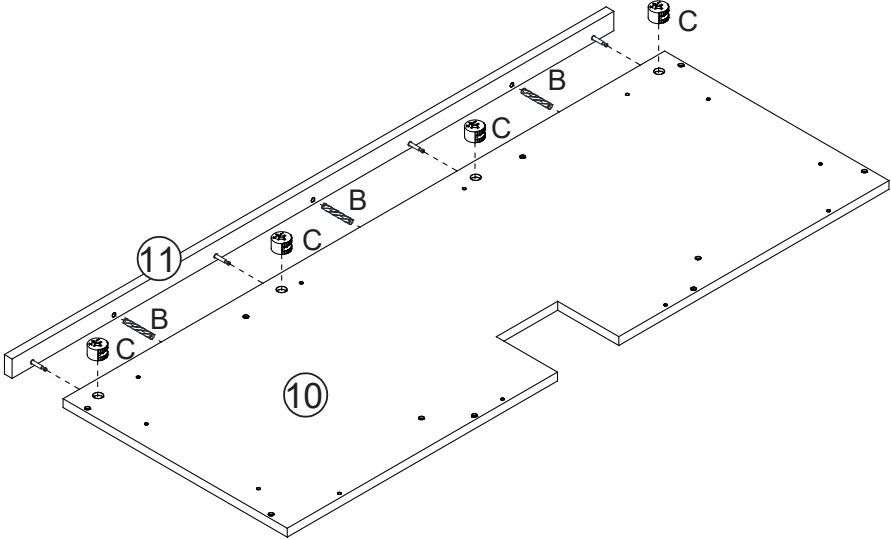


Step 29


A	
12PCS	

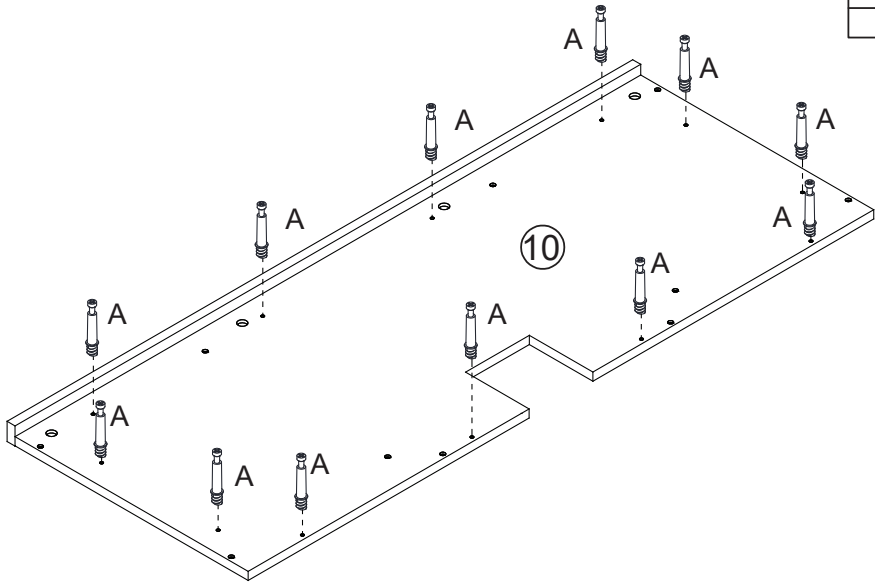


Step 30

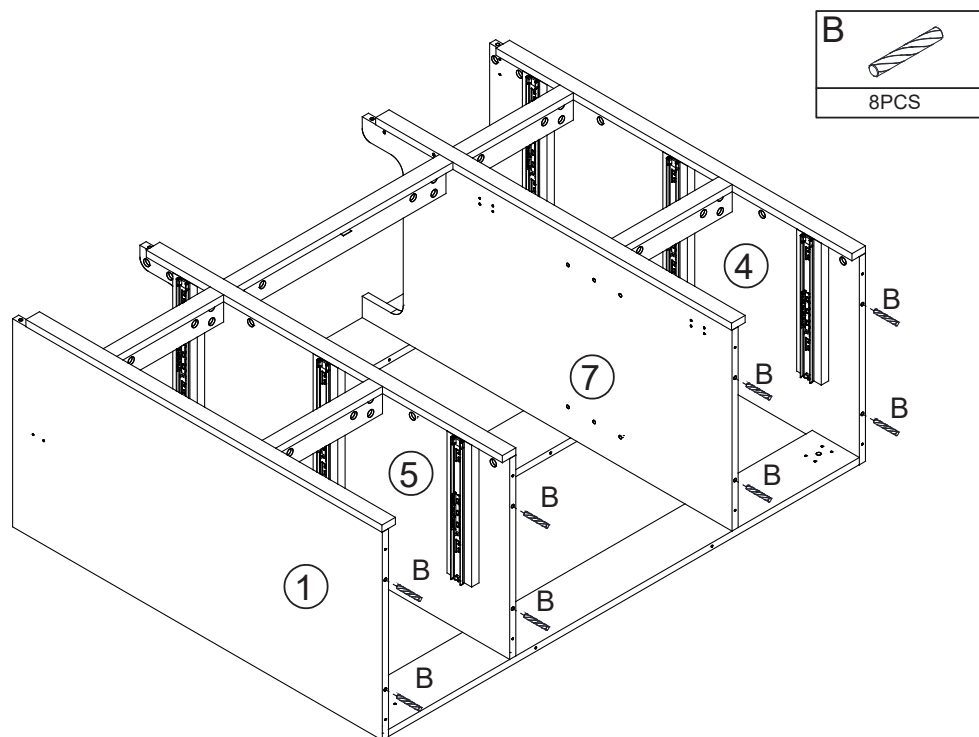


Step 31

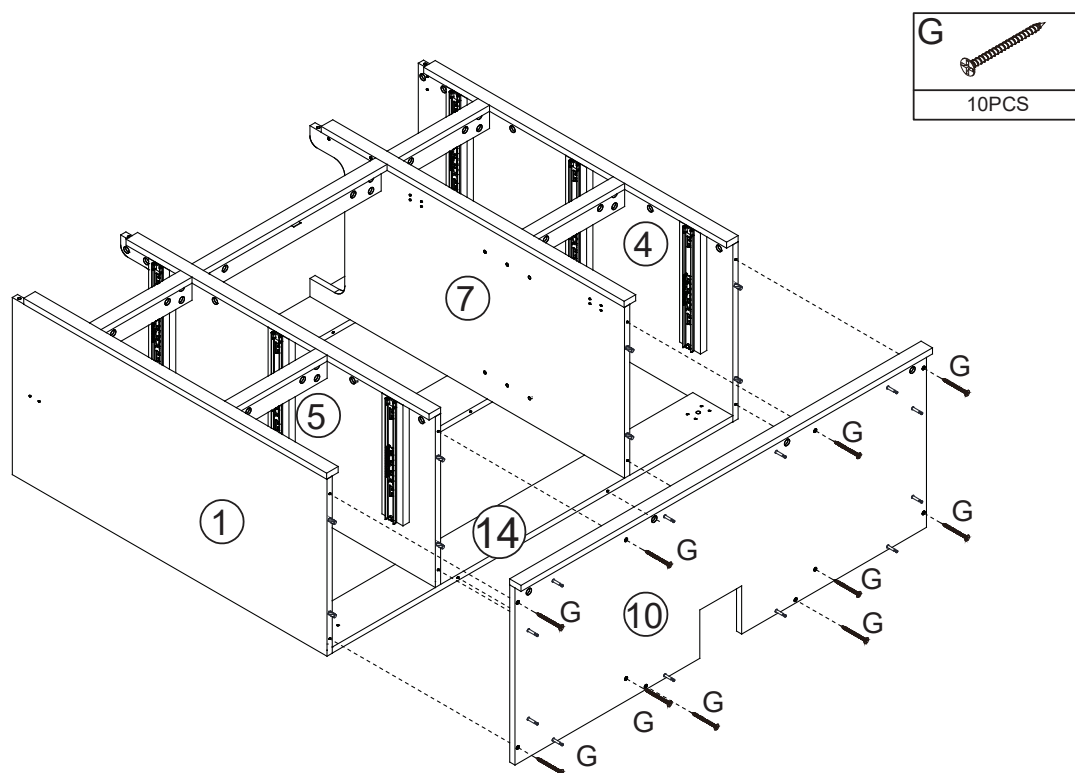


Step 32

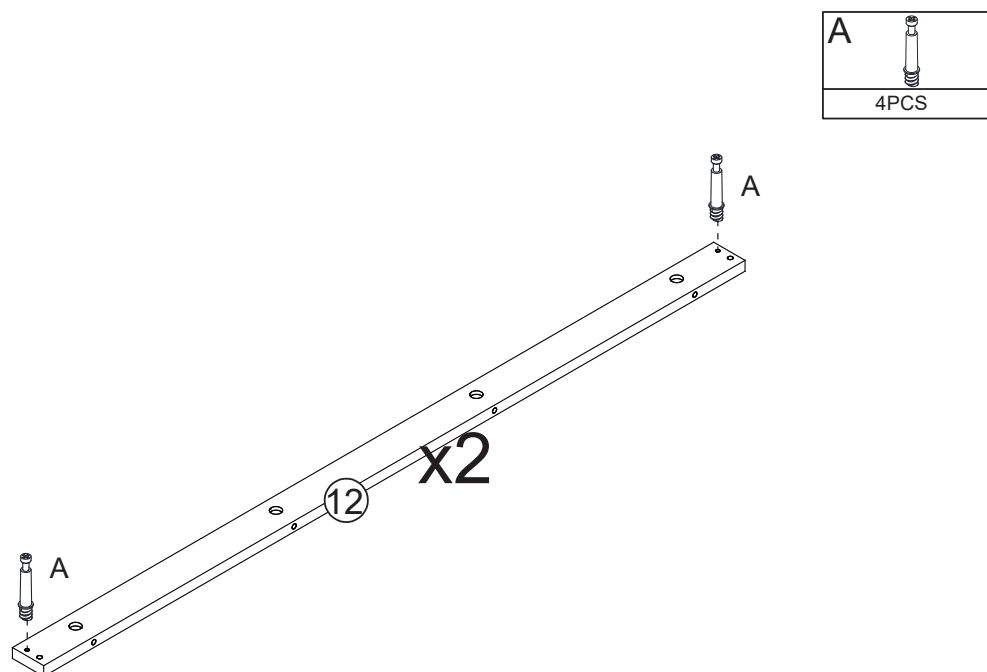


Step 33

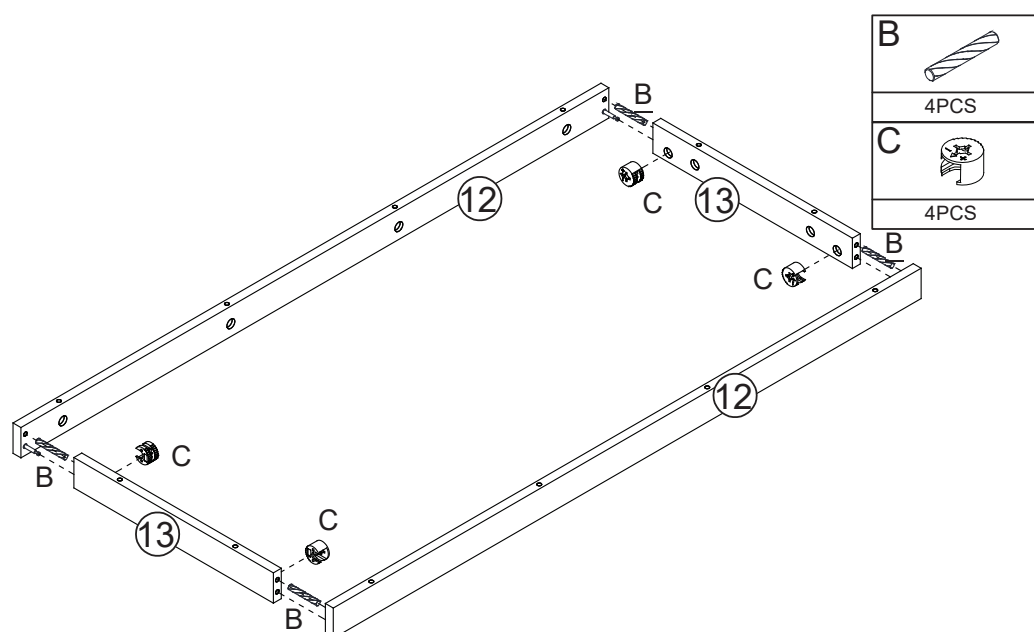

Step 34

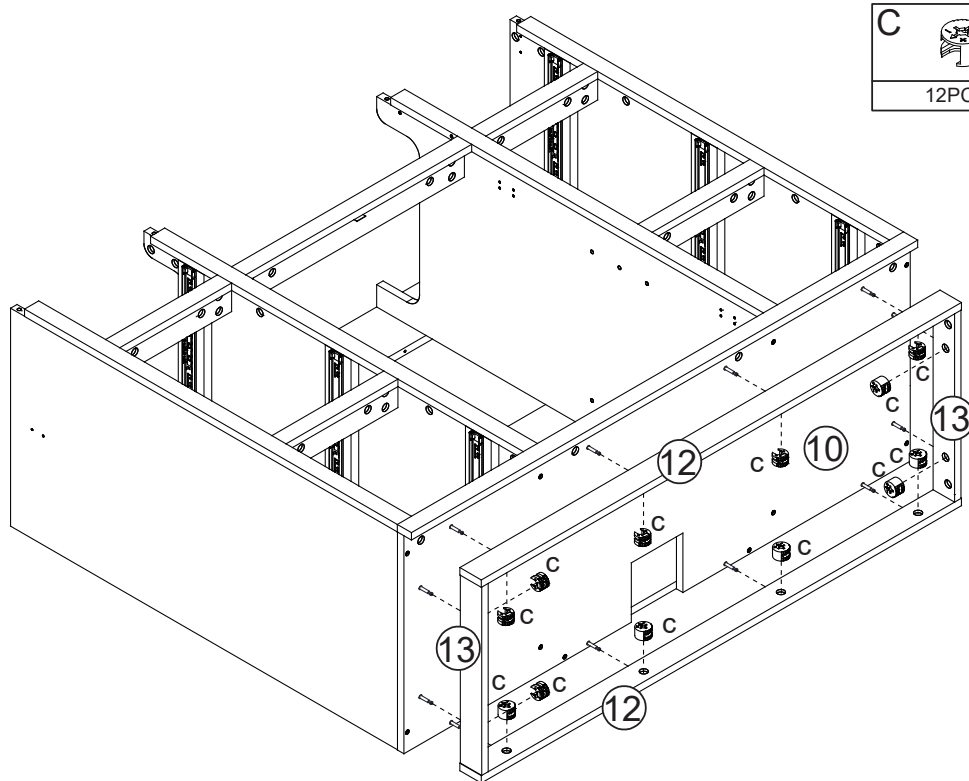

Step 35

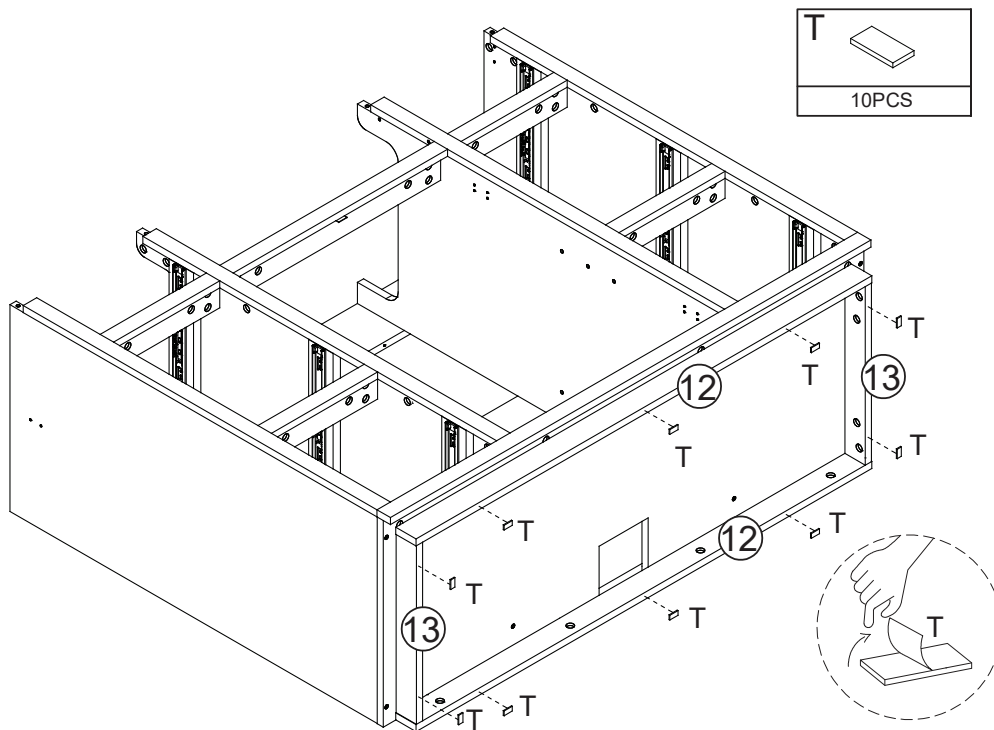


Step 36




L	C
	
2PCS	4PCS


Step 37

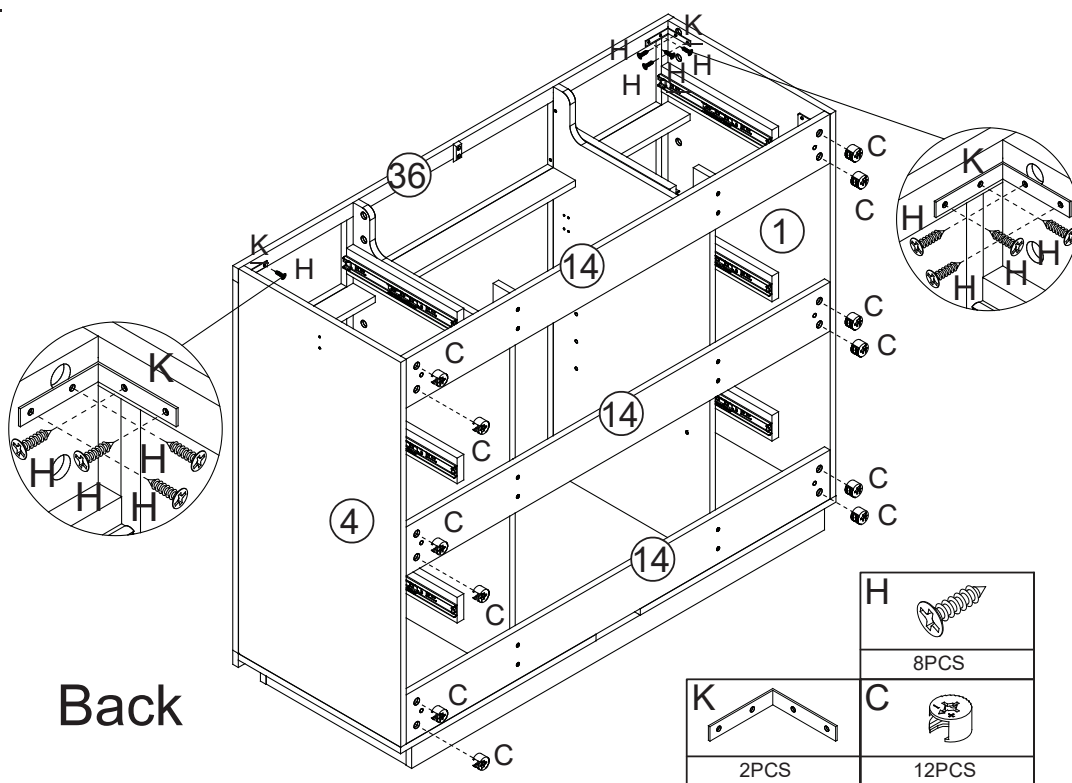

Step 38

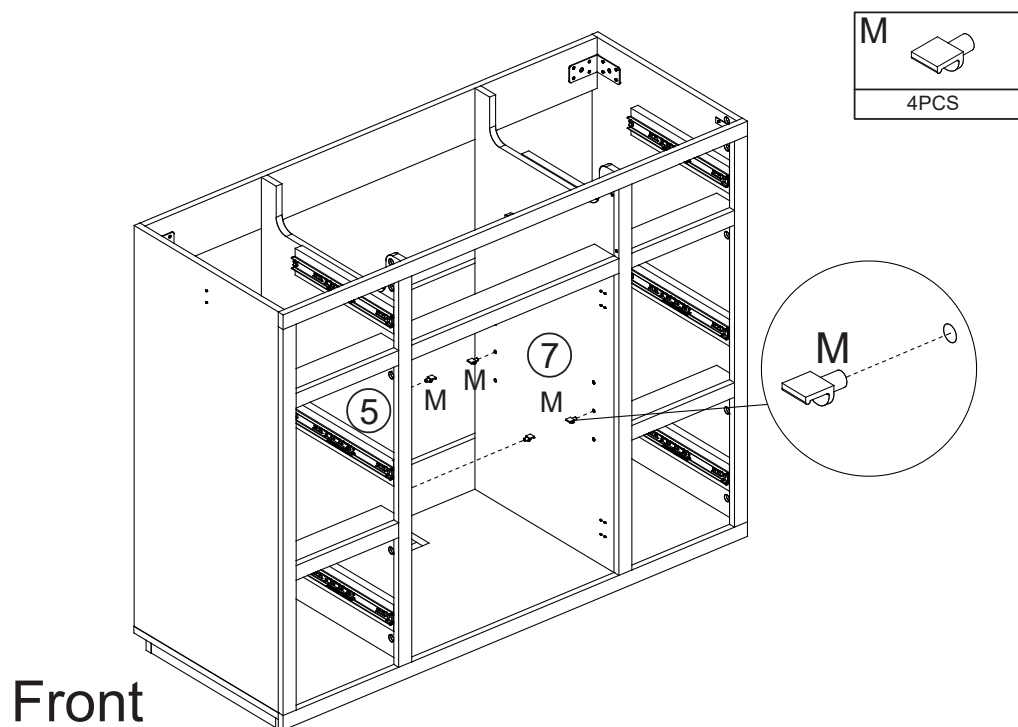


Step 39

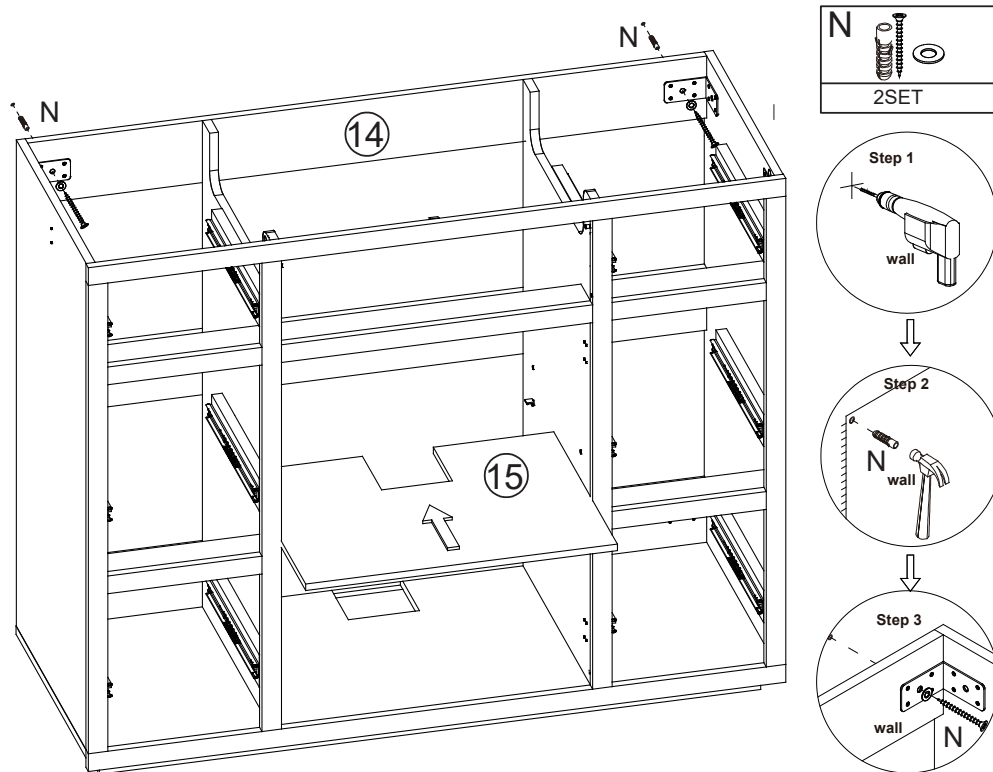


Step 40


P		Q		O		H	
	2PCS		2PCS		4PCS		8PCS

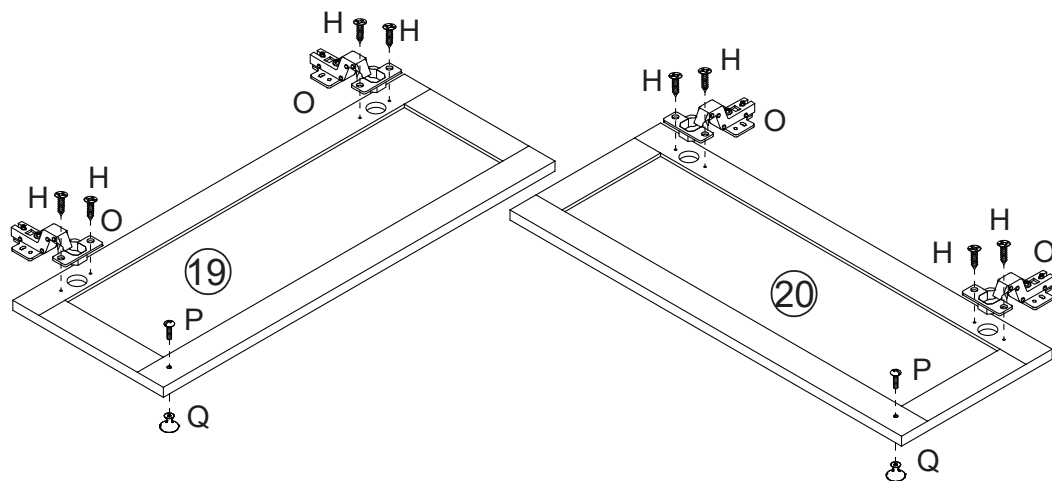


Step 41

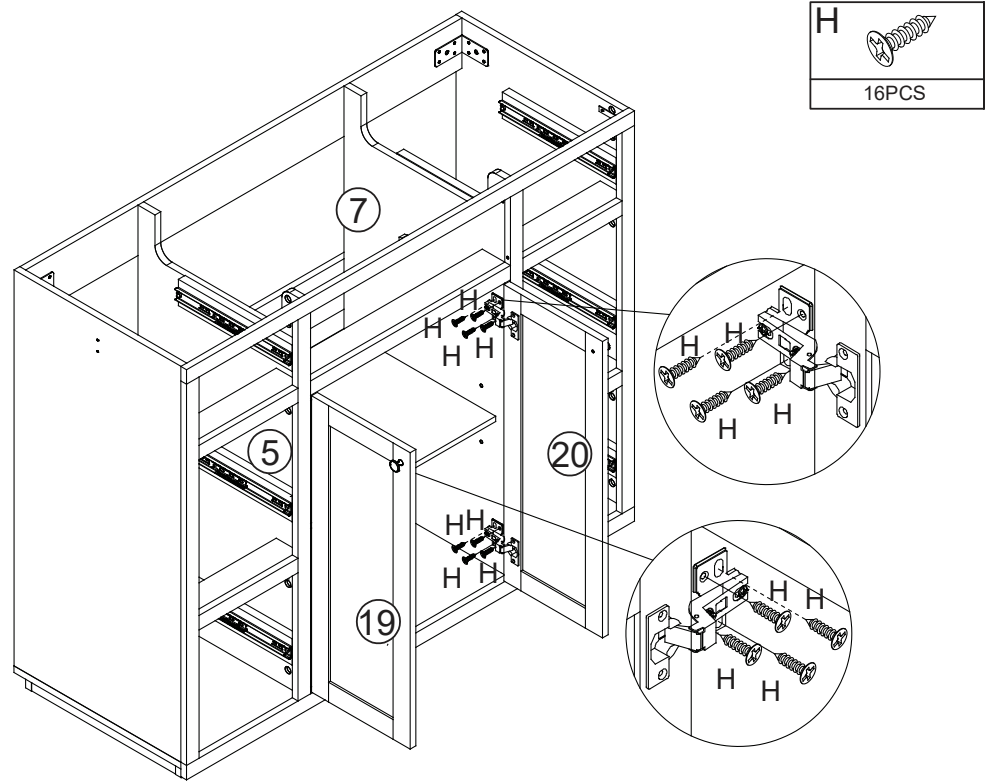


Step 42

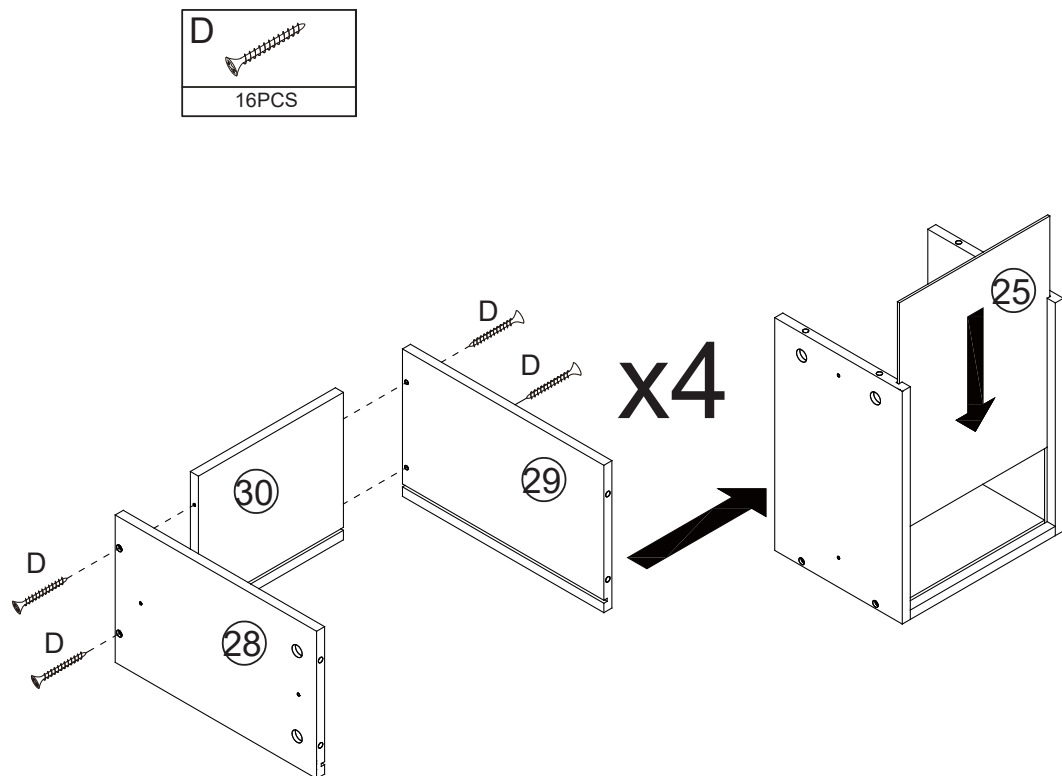

Step 43

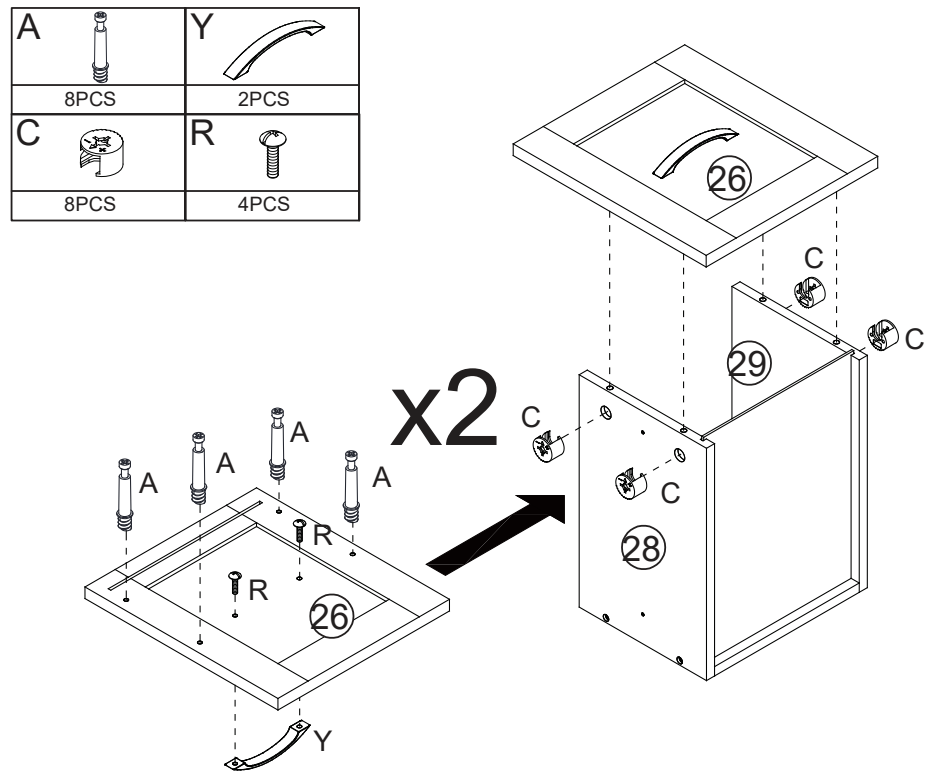


Step 44

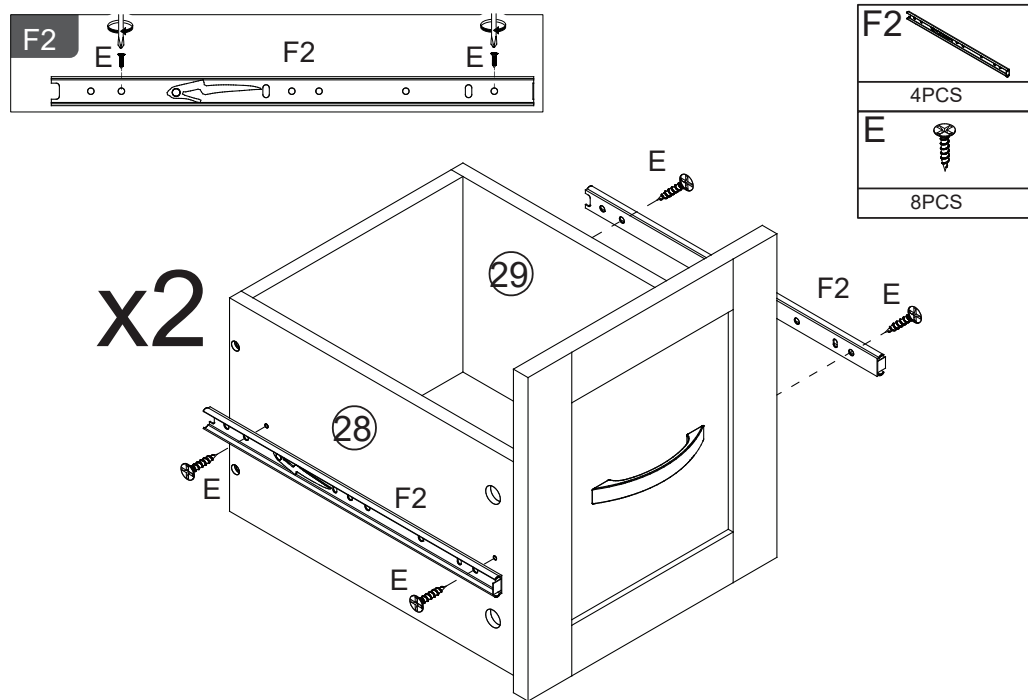


Step 45


A	Y
8PCS	2PCS
C	R
8PCS	4PCS

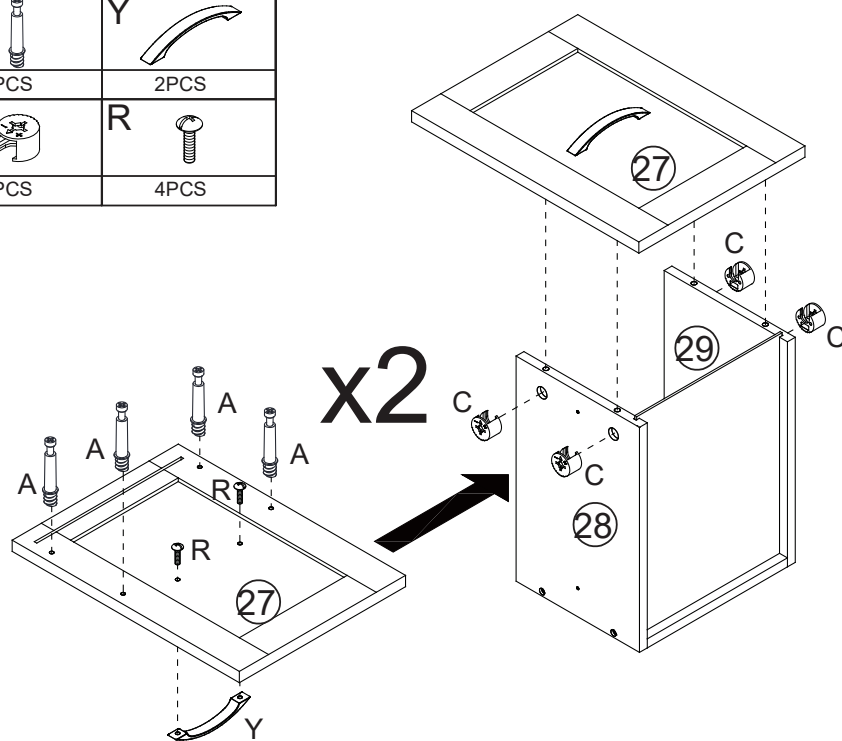

Step 46




F2
4PCS
E
8PCS

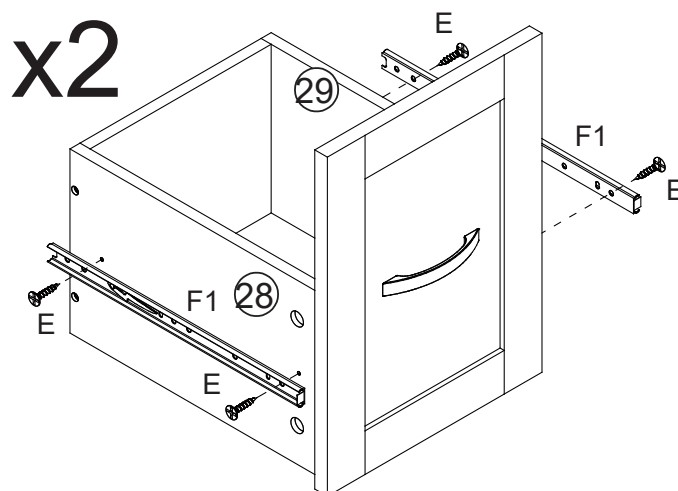


Step 47

D	
8PCS	

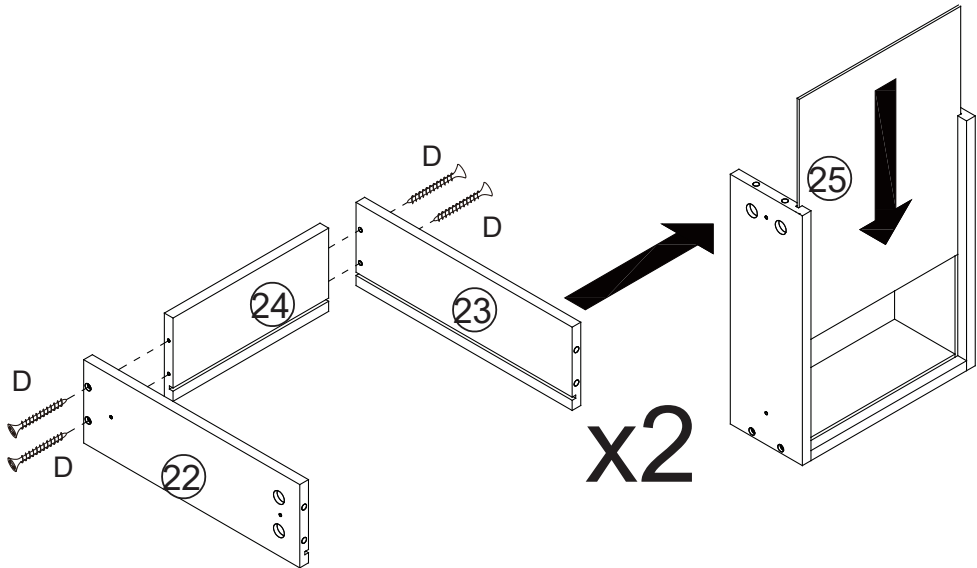


Step 48

A		Y	
8PCS		2PCS	
C		R	
8PCS		4PCS	

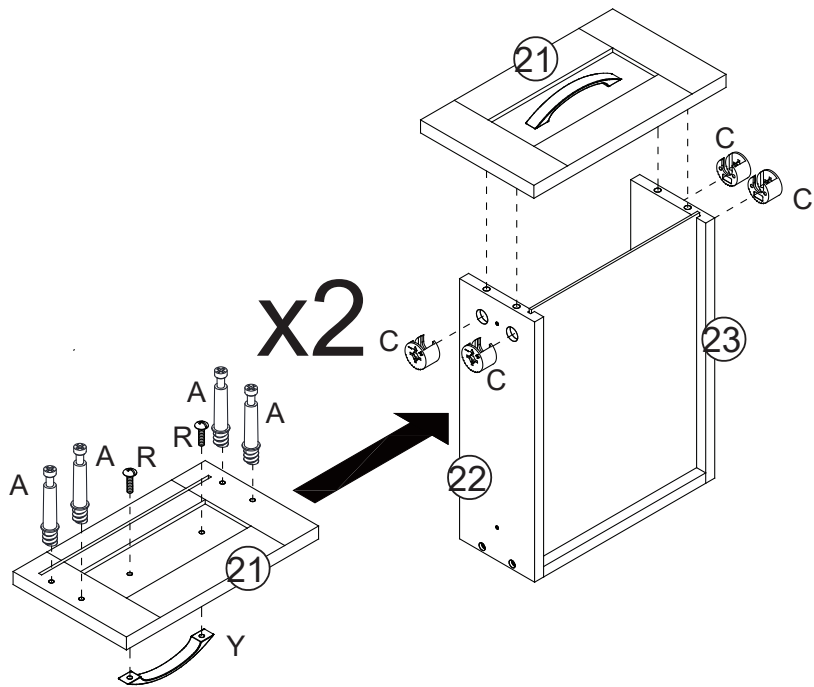


Step 49




F2	
4PCS	
E	
8PCS	

x2

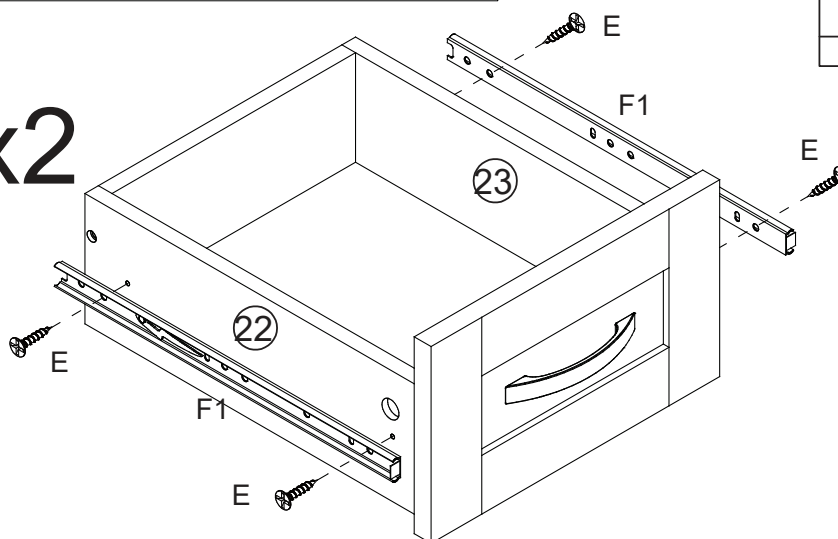


Step 50

Z	
2PCS	

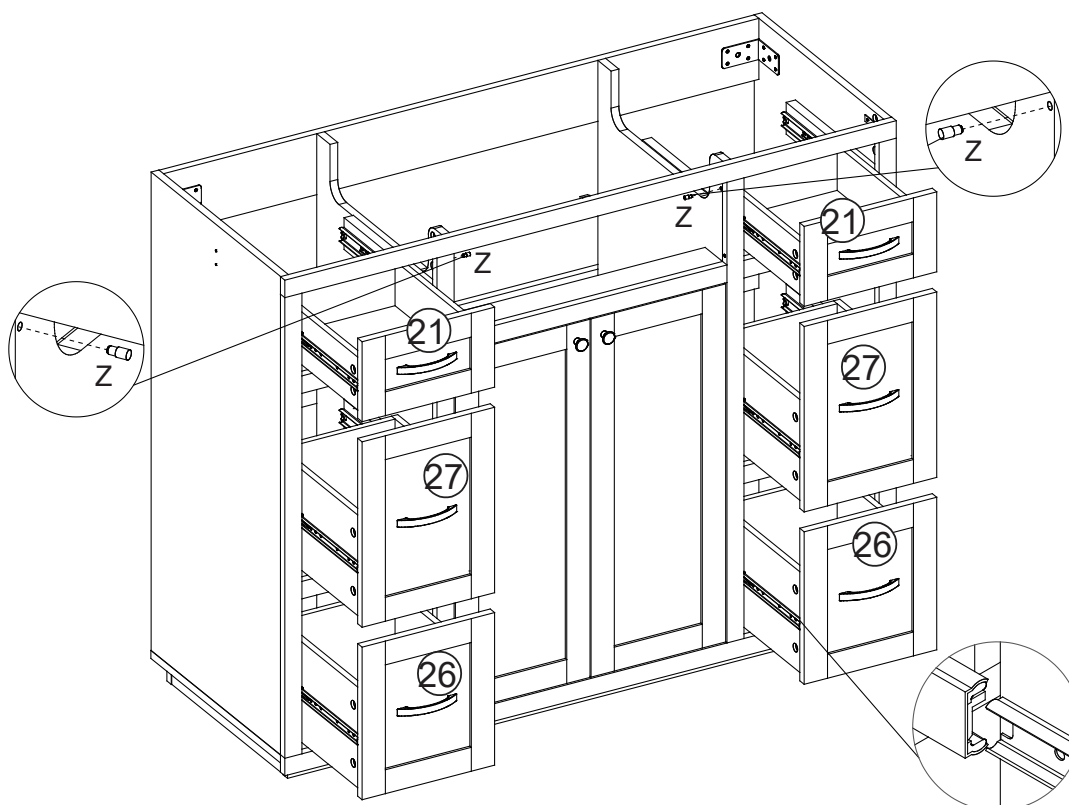


Step 51

D	
4PCS	

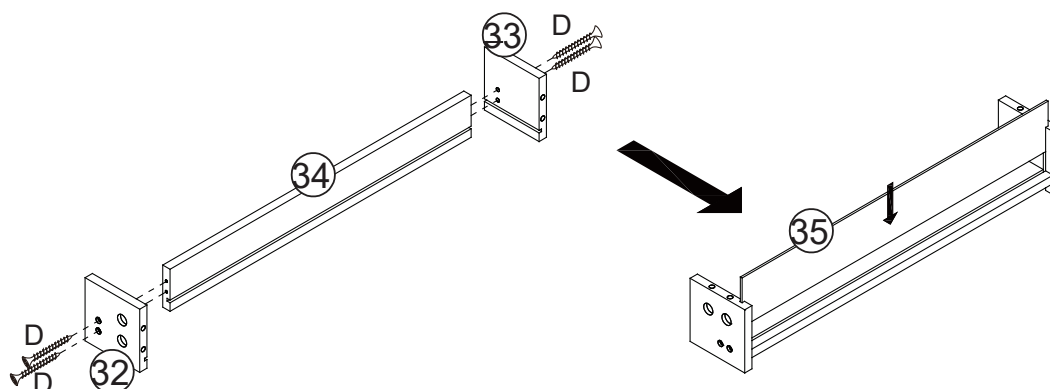


Step 52



A		Y		a	
4PCS		1PCS		2PCS	
C		R			
4PCS		2PCS			

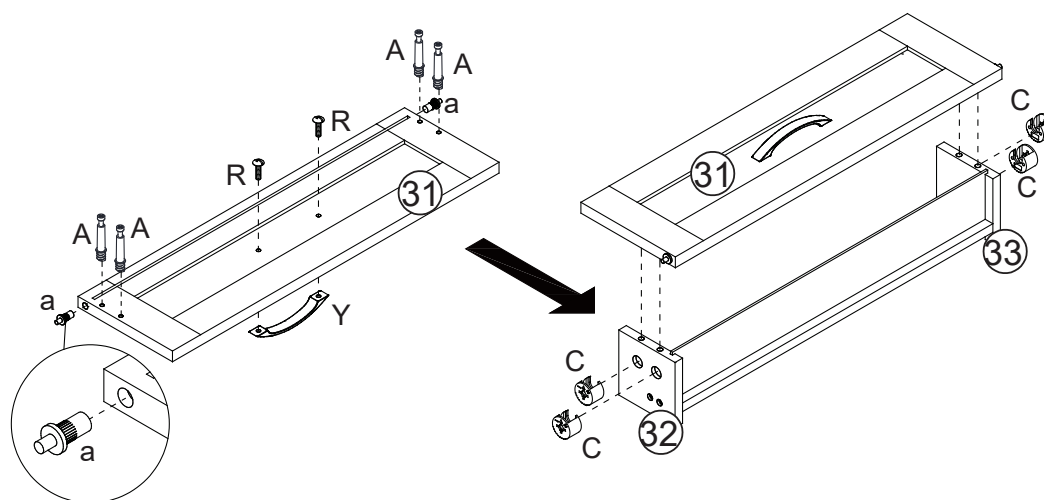


Step 53

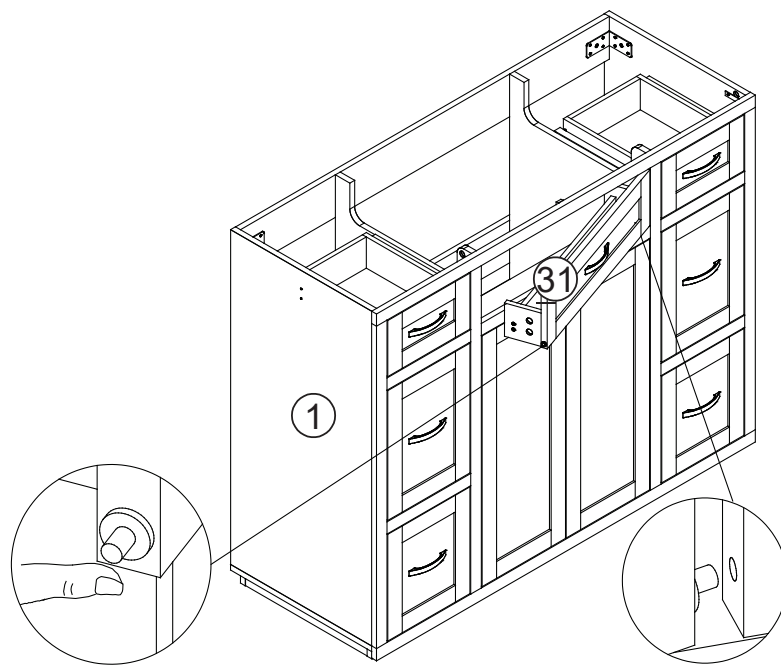


Step 54

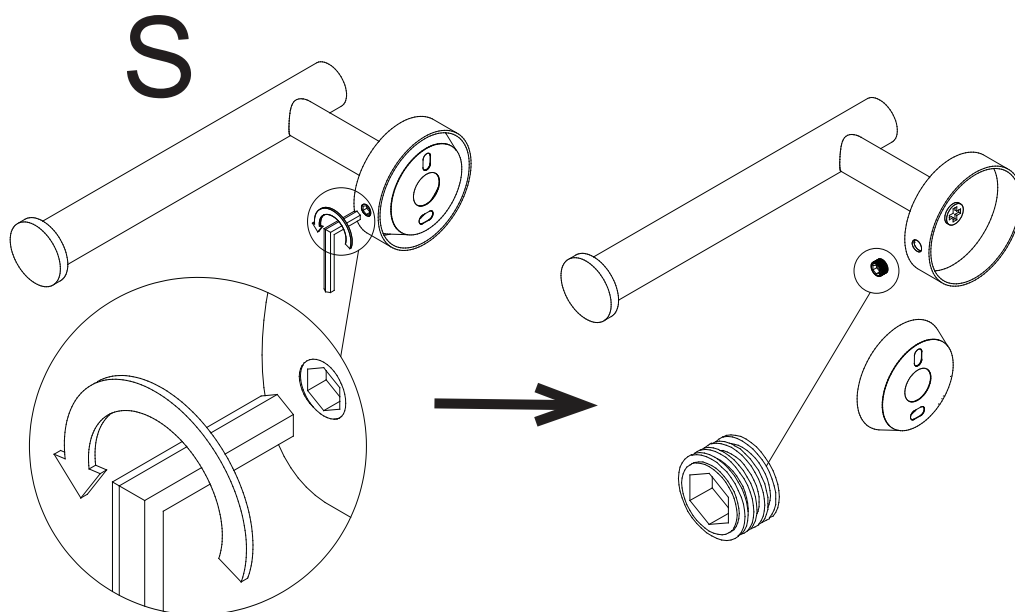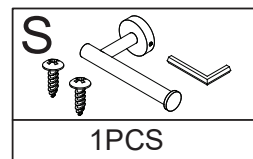


Step 55

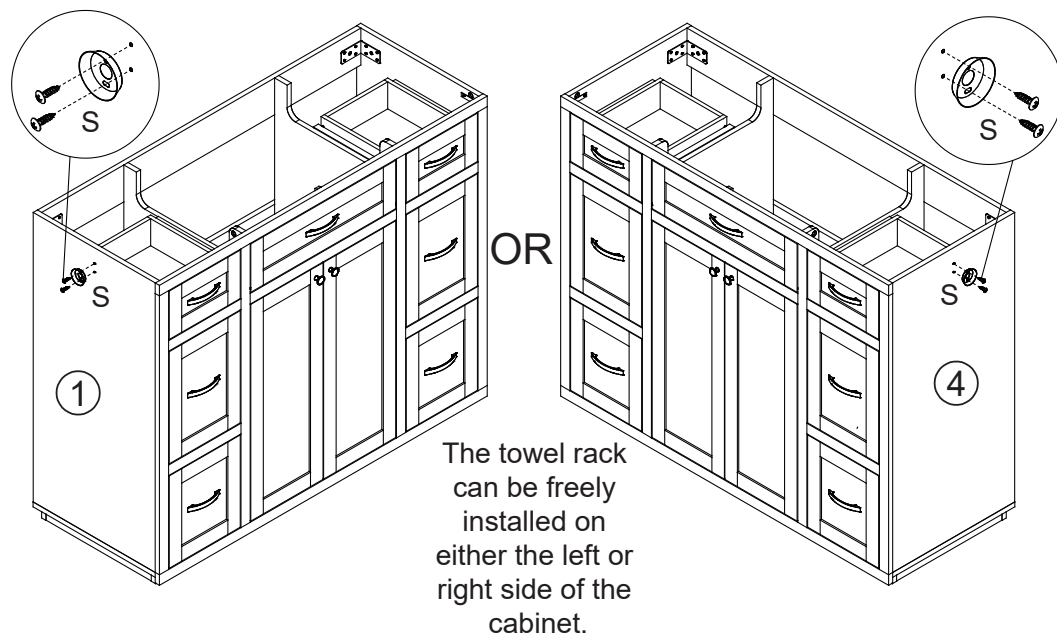

Step 56

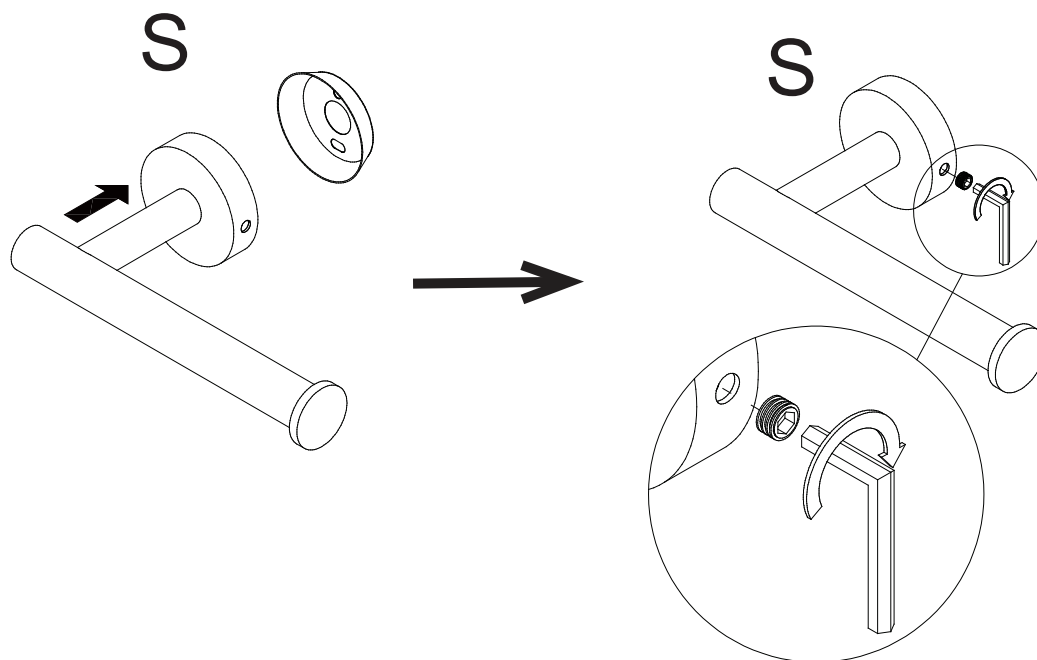


Step 57

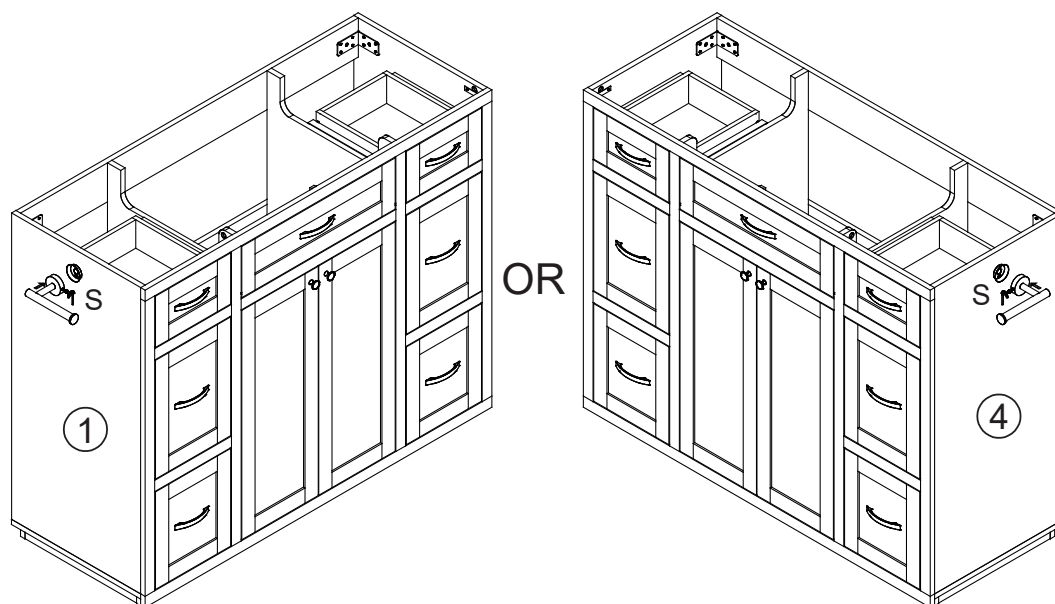

Step 58

Before setting the basin in place, make sure to use the pad.

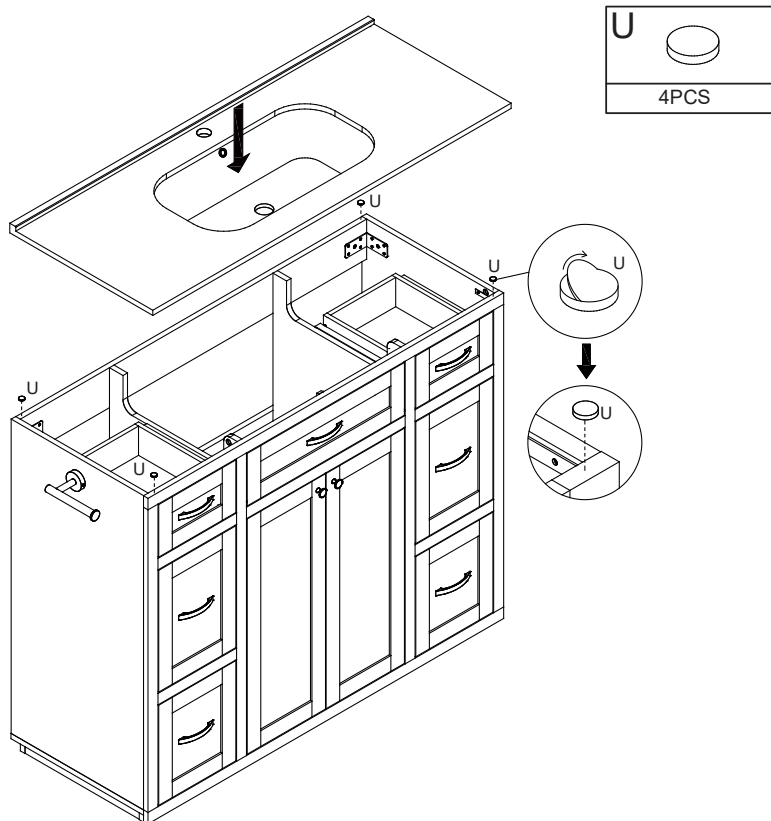

Step 59

