


# BAR CABINET

---

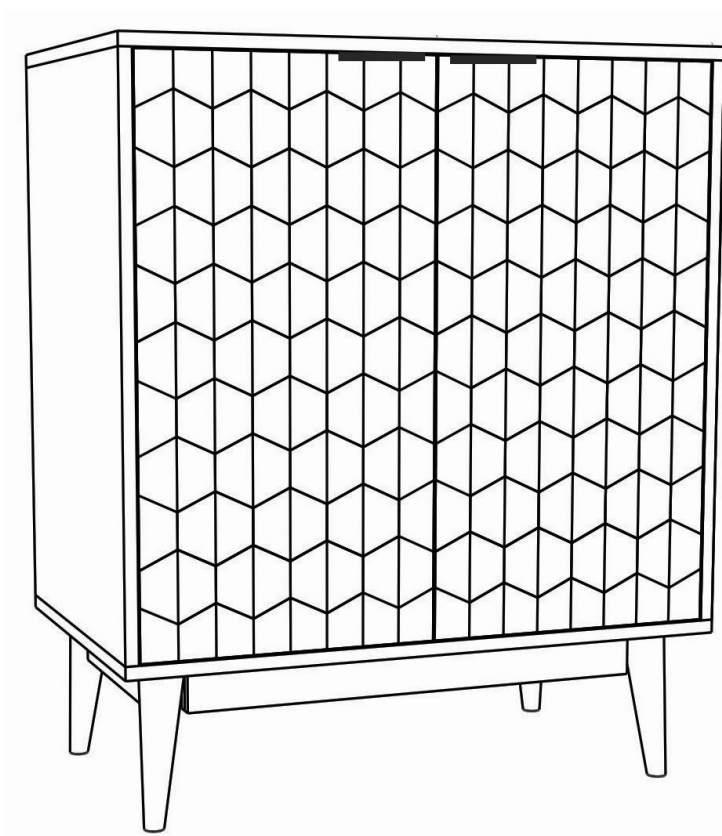

**Thank you for purchasing the BAR CABINET. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.**

---

This product is **HEAVY**, please unwrap your piece carefully, ensuring it is as close as possible to point of use. **Take care when lifting** to avoid personal injury and (or) damage to the product.

## **Care and Maintenance for Wood**

We recommend dusting surfaces with a clean, soft, dry or slightly damp cloth.

Always clean the surface by rubbing in the direction of the grain.

We recommend polishing your furniture twice a year with a non-silicone cleaning agents or polish to clean the surfaces of this product.

Waxes should be avoided because their regular use may result in a build-up of wax film on the surface of the furniture.

Remove liquid spills promptly.

Be sure to use pads under hot or very cold dishes, beverages, vases, etc. to protect the furniture surface.

Please note long periods of heat or excessive dampness can cause splitting, warping and swelling in solid wood.

Keep away from direct sunlight.

## Necessary Tools

---








Please check assembly pack before attempting to assemble this product. A full checklist for component is given in this leaflet.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

You will require Allen Key to assemble this product. The Allen key is provided in the assembly pack but

Screw driver is not provided.

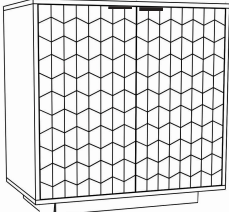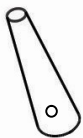The following list of hardware is required for assembly.

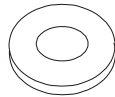SNO	PICTURE	NAME	QTY
1		CABINET	1
2		LEGS	4
3		ALLEN KEY (6MM)	1
4		SOCKET HEAD ALLEN BOLT (8X70)	4
5		WASHER (8X20)	4

---

## Assembly Instructions

---

### STEP 1:

Place the cabinet upside down on clean and soft surface to prevent it from scratching.

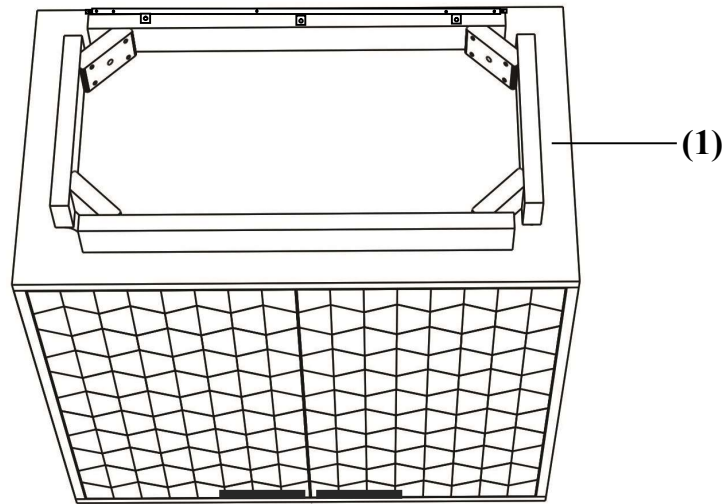


FIGURE 1

### STEP 2:

Align each leg with corners of cabinet by matching the number punches as shown in figure 2.

**Important: Number punch is mentioned at the bottom side of leg and on the corner blocks.**

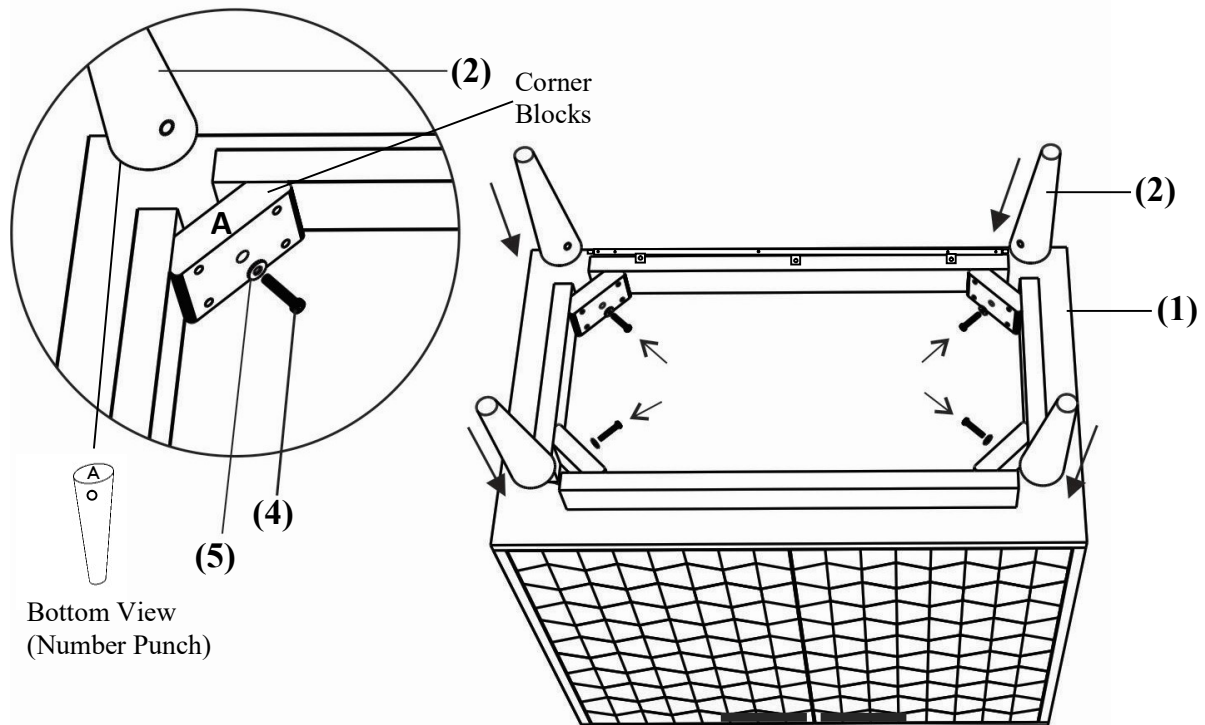


FIGURE 2


---

## Assembly Instructions

---

### STEP 3:


Now tighten the bolt with the help of allen key as shown in the figure 3. Repeat the same with other legs.

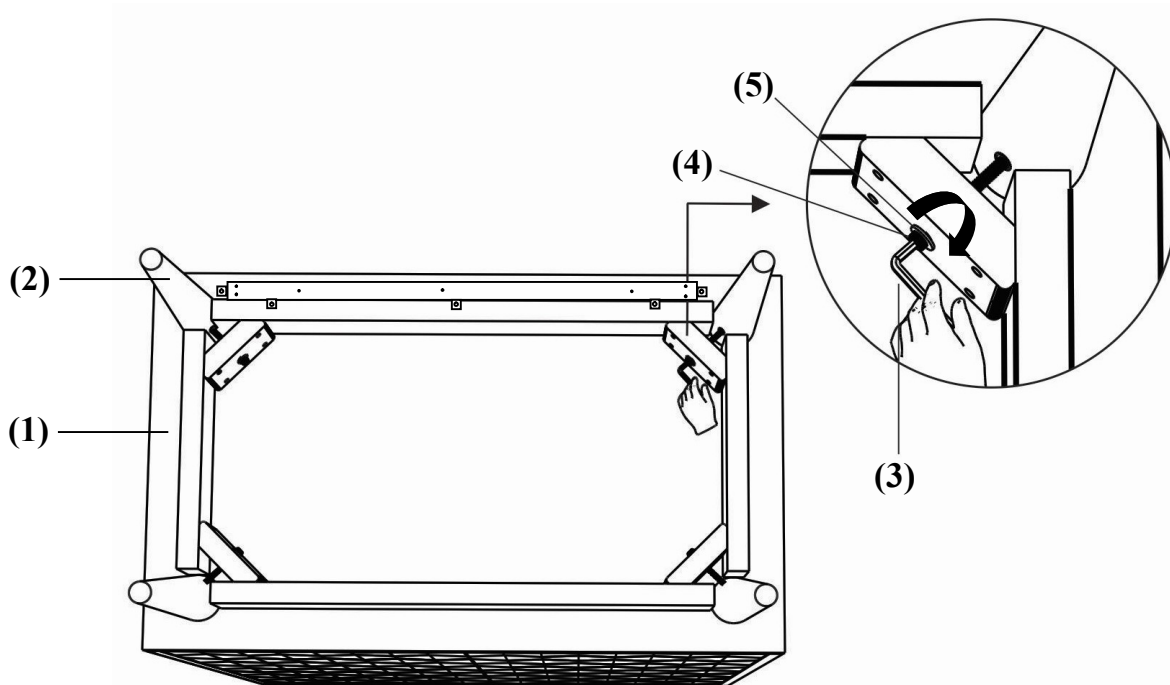

**FIGURE 3**

### STEP 4:

Keep the cabinet top upside up.

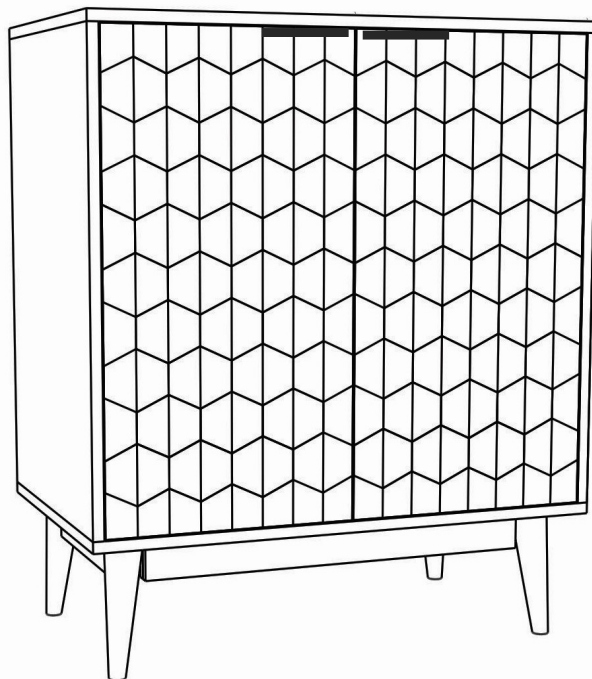

**YOUR BAR CABINET IS NOW READY. PLEASE FOLLOW SAFETY MEASURES/ANTI-TIP FIXING PROCEDURE GIVEN BELOW.**

## Safety Measures/Tip over restraint installation instructions

**WARNING:** This product is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws, brackets or straps.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

When properly installed, this restraint will provide protection against tipping of furniture. This tipping restraint **MUST** be secured to a wall-stud or wall structure of similar strength.

### Hardware included:

(2x) Brackets 48 x 21 x 10mm

(2x) Nylon Strap 300 x 12 x 8mm


(4x) Stud Mounting Screws # 8 x 38mm

(4x) Dry wall screw anchors # 8 x 20mm

### Tools needed (not included)

Screw driver

Hammer

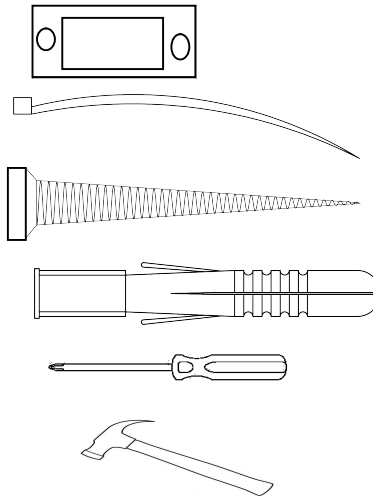

Note: For safe mounting it is essential to use the proper hardware for your wall type. The included hardware is for dry wall stud mounting only. If the mounting bracket cannot be secured to a wall stud because of inappropriate spacing and/or because you have a different wall type (e.g., plaster, concrete, brick etc..) please consult your local hardware store for fastener advice.

To install:

- 1) LOCATING THE STUDS:** Use a stud finder to locate the vertical wooden studs within your wall located behind the final position of the furniture item. Mark the stud locations with a light pencil-mark.
- 2) MOUNTING THE WALL-SIDE BRACKET:** Position the wall-side bracket along the selected stud mark so that it will be adjacent the furniture-side bracket when the furniture item is moved to its final position. The wall-side bracket should be about ONE inch lower than the furniture-side bracket (See Figure 3). Use the TWO long screws to secure the wall-side bracket to the wall. Remember to position the wall-side bracket vertically so that both screws will engage the selected wall stud (See Figure 1).
- 3) ATTACHING THE STRAP:** Once the wall brackets are securely attached, move the furniture to its final desired position and thread the strap through the openings of each bracket and also through the ratcheting "buckle". Tighten the strap until several "clicks" are heard. The furniture item is now securely tethered to the wall.

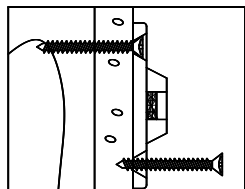


Figure 1

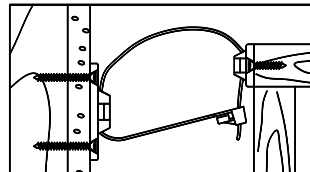


Figure 2



### Warning

Wall fixing screws are not included, since different wall materials require different types of screws / fixings, please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the wall always check that there are no hidden wires or pipes etc.



### Care and maintenance

**Safety:** Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

**Please ensure leaflet is read in full before attempting to assemble and retain for future reference.**