




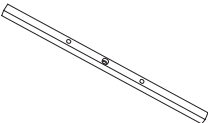
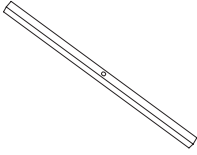








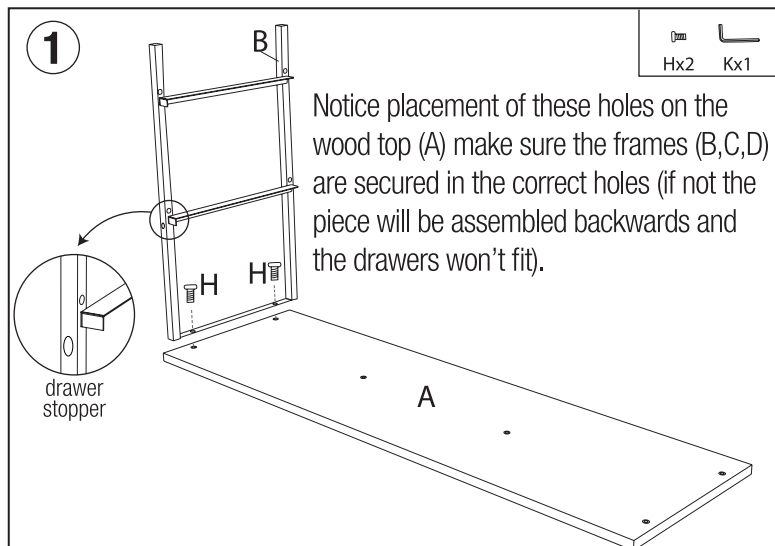


# 5 Drawer Storage




<b>A</b> Wood Top  1PC	<b>B</b> Frame  1PC	<b>C</b> Frame  2PCS	<b>D</b> Frame  1PC	<b>E</b> Frame  1PC	<b>F</b> Frame Pole  2PCS
<b>G</b> Pole  2PCS	<b>H</b> Screw  6PCS <b>I</b> Screw  16PCS	<b>J</b> Frame Screw  4PCS	<b>K</b> Hex Wrench  1PC	<b>L</b> Drawer Flooring  3PCS  2PCS	<b>M</b> Drawer  3PCS <b>N</b> Drawer  2PCS


## FOR EACH STEP MAKE SURE THE FRAMES ARE FACING THE CORRECT DIRECTION!




**Step 1:** Secure frame (B) to wood top (A) as shown above with screws (H) then secure with wrench (K). The drawer stopper should be facing the back.

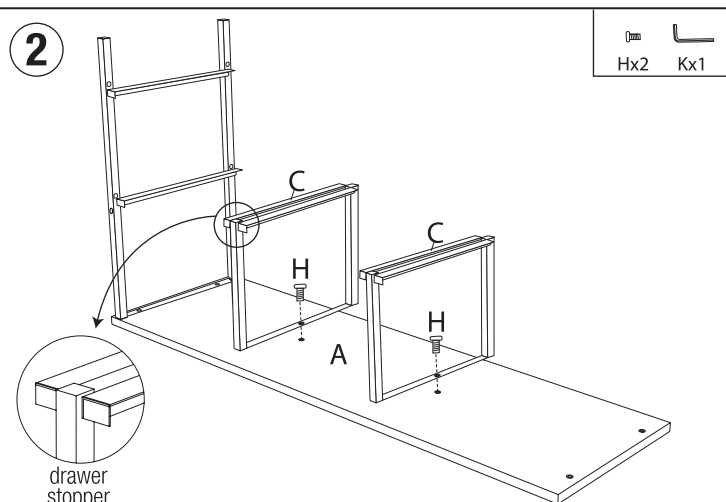

**Step 2:** Secure frames (C) to wood top (A) as shown above with screws (H) then secure with wrench (K). Please make sure the holes of the drawer top and the frame match the picture above. The drawer stopper should be facing the back.


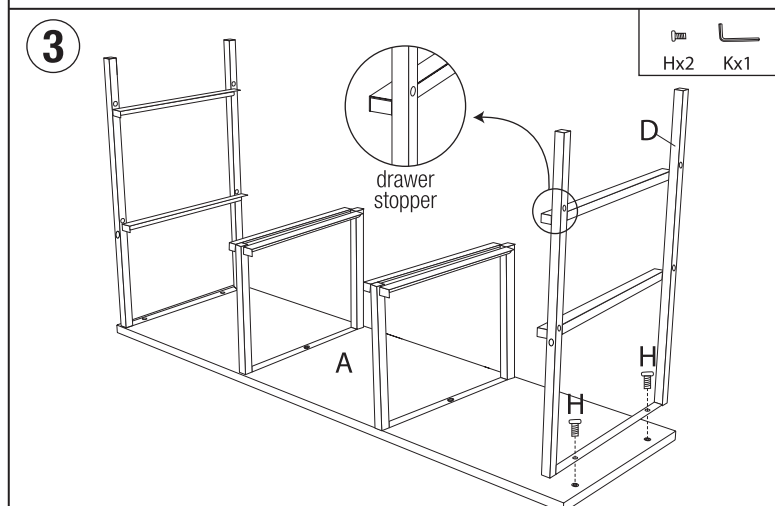


**Step 3:** Secure frame (D) to wood top (A) as shown above with screws (H) then secure with wrench (K). Please make sure the holes of the drawer top and the frame match the picture above. The drawer stopper should be facing the back.

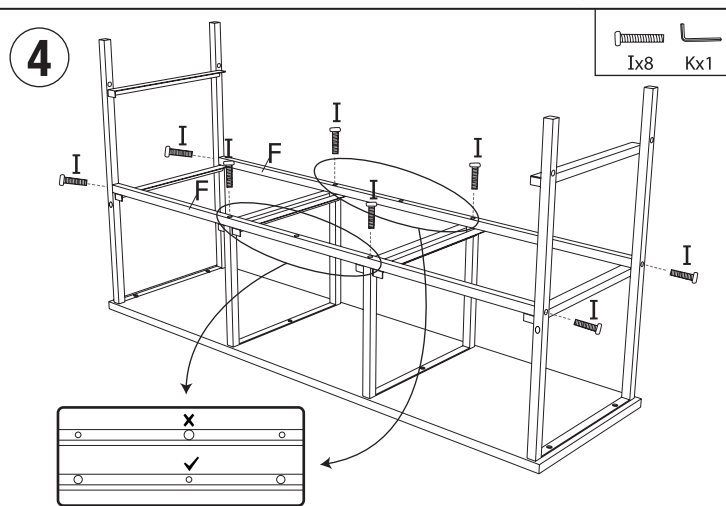



**Step 4:** Position the frame poles (F) into place and secure with screws (I) as shown. Make sure the holes are facing the right direction. Follow key above.

5

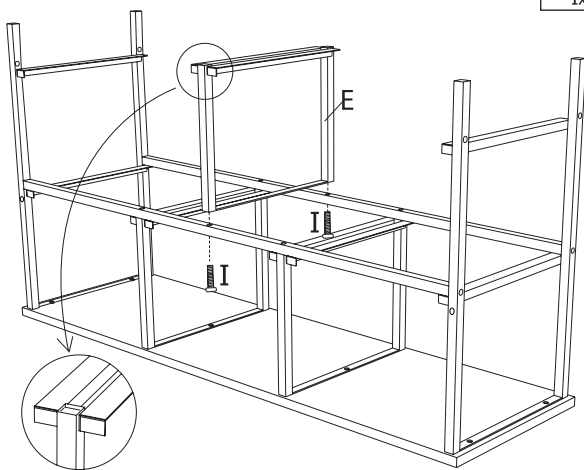


**Step 5:** Position frame (E) into place and secure with screws (I).

6

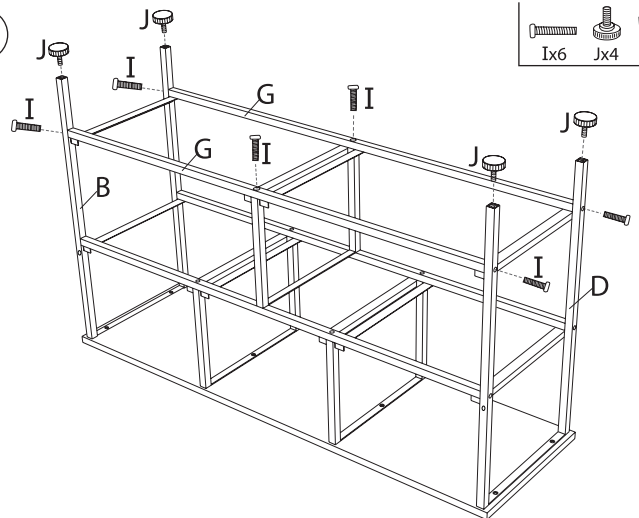



**Step 6:** Secure poles (G) with screws (I). Insert frame screws (J) into the legs of frames (B,D), twist until tight.

7

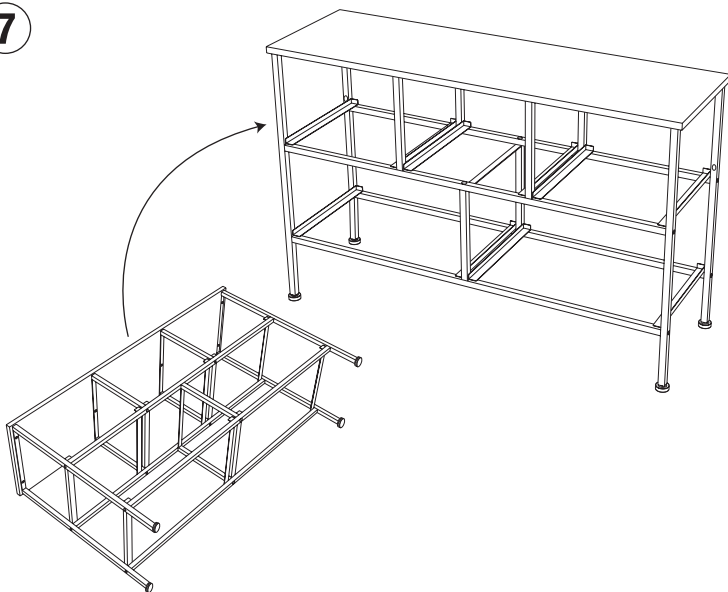



**Step 7:** Flip assembled shelf into position shown above.

8a

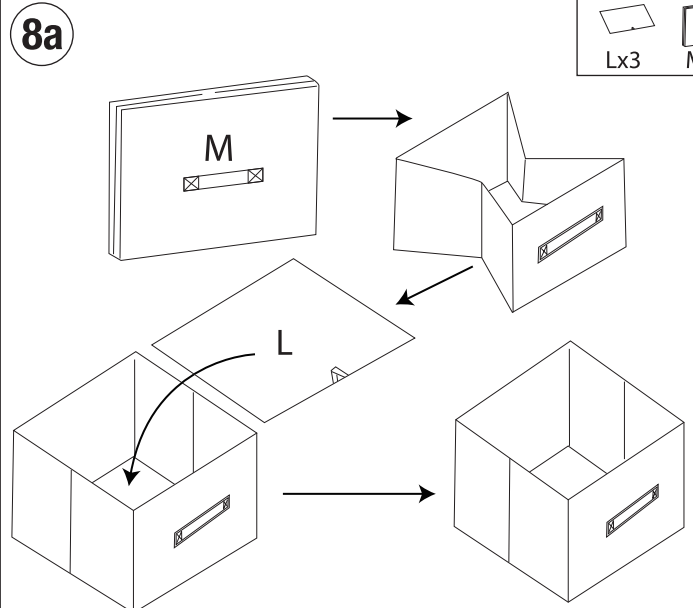


**Step 8a:** Unfold drawers (M), then place inset pad (L) inside.

8b

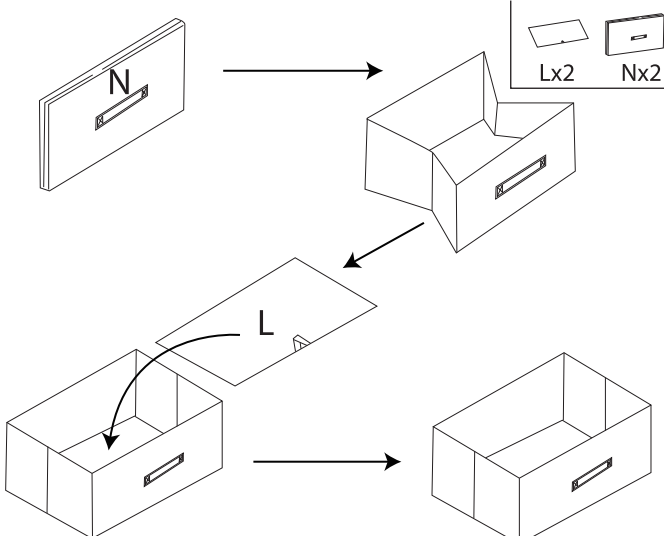


**Step 8b:** Unfold drawers (N), then place inset pad (L) inside.

9

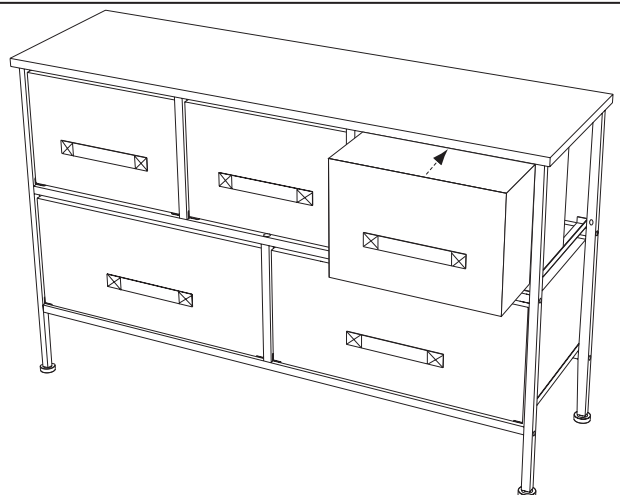


**Step 9:** Insert drawers within assembled storage dresser, then tighten installed screws. Make sure everything is secure. Enjoy!

**A** Wall Anchor




2PCS

**B** Wall Mount Screw




2PCS

**1**

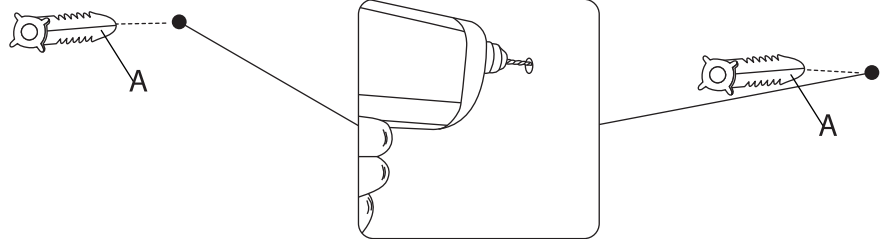

**Step 1:** Drill a hole into the wall using a 6mm bit and gently insert the wall anchor (A) with the help of a hammer.

**2**

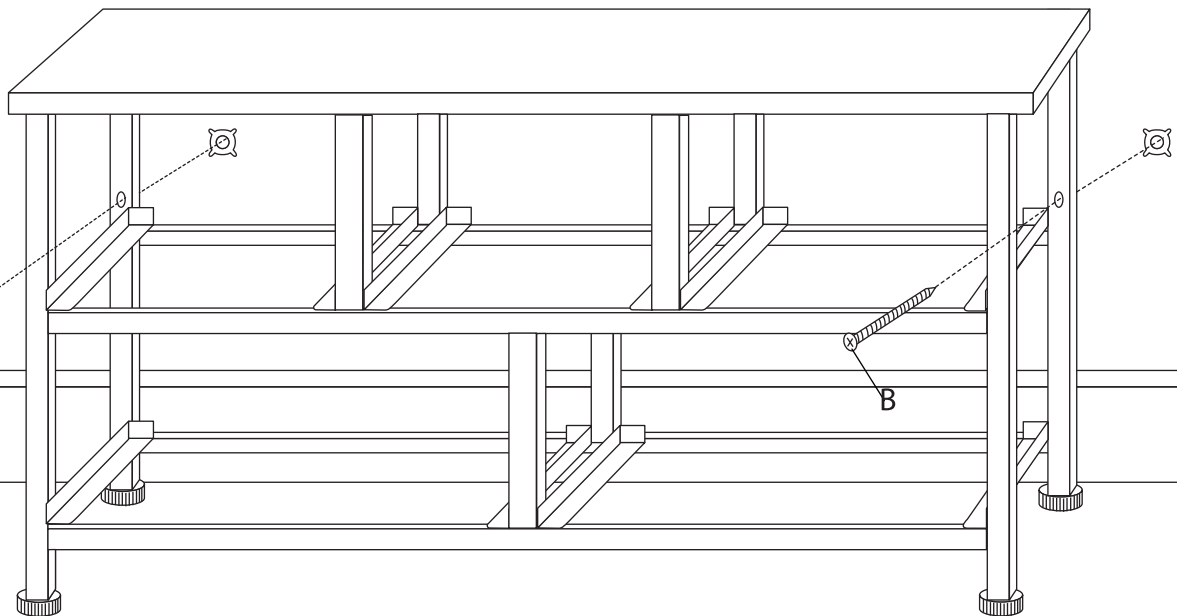

**Step 2:** Place the shelf against the wall, and insert the wall mount screws (B). After making sure everything is secure, feel free to use. Enjoy!