

## **FULL SIZE BED**

---

### **ASSEMBLY INSTRUCTIONS**



## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.







### Warning!




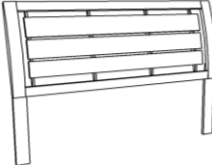

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION

### B1 (BOX 1)





<b>A</b>		HEADBOARD PANEL	1PC
<b>B</b>		LEFT HEADBOARD LEG	1PC
<b>C</b>		RIGHT HEADBOARD LEG	1PC
<b>D</b>		FOOTBOARD	1PC

### B2 (BOX 2)

<b>E</b>		BED SLAT	4PCS
<b>F</b>		BED SLAT SUPPORT WITH LEVELER	4PCS
<b>G</b>		BED RAIL	2PCS
<b>HB</b>		201971F (B1) *FROM BOX 1 HEADBOARD COMPLETE	1PC
<b>D</b>		201971F (B1) *FROM BOX 1 FOOTBOARD	1PC

## HARDWARE IDENTIFICATION

### Z - B1 (BOX 1) - Hardware pack is located in B1

<b>1</b>		BOLT	6PCS
<b>2</b>		ALLEN WRENCH	1PC
<b>3</b>		FLAT WASHER	6PCS
<b>4</b>		LOCK WASHER	6PCS

### Z - B2 (BOX 2) - Hardware pack is located in B2

<b>5</b>		FLAT HEAD SCREW	8PCS
----------	--	-----------------	------


NOTE: PHILLIPS HEAD SCREW DRIVER AND RUBBER Mallet ARE REQUIRED IN THE ASSEMBLY PROCESS. HOWEVER, MANUFACTURER DOES NOT PROVIDE THESE ITEMS.

## ASSEMBLY INSTRUCTIONS

## BOX 1


## STEP 1

Place headboard panel upside down on soft surface, place the headboard leg on the correct position.

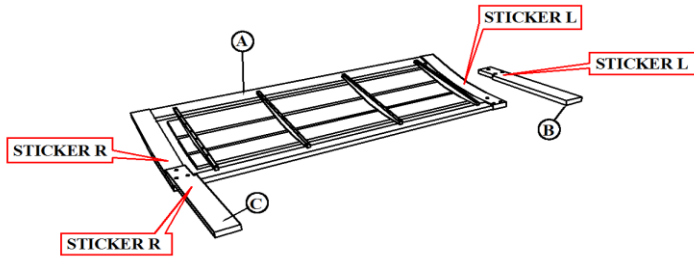**\*\*BACK VIEW**

## STEP 2

Align and fasten headboard leg to headboard panel using bolt, lock washer and flat washer, and tighten with Allen wrench.

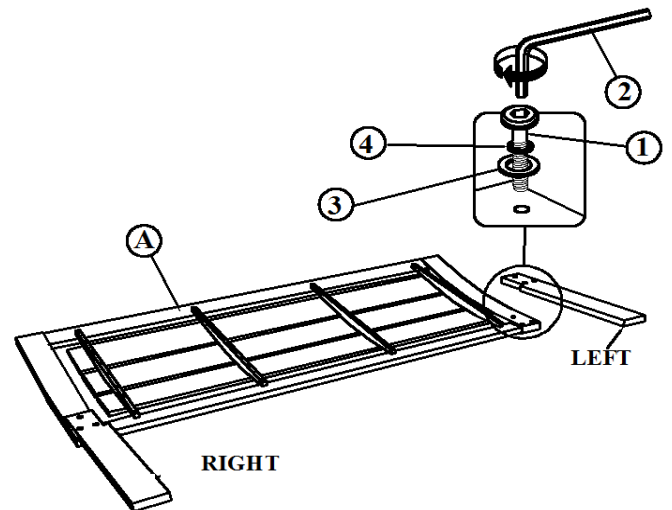
**\*\*BACK VIEW**

**IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS**

**BOX 1 & BOX 2**


### STEP 3

Align and hook the bed rails to headboard and footboard.

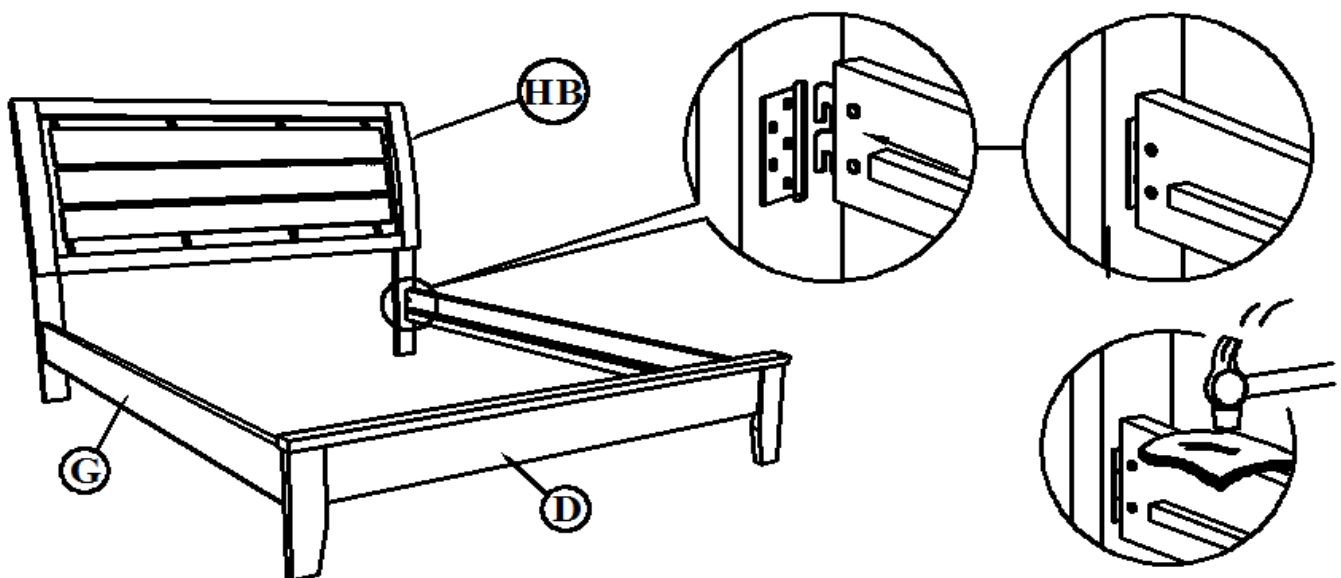


## STEP 4

Screw in the bed slat support to bed slat.

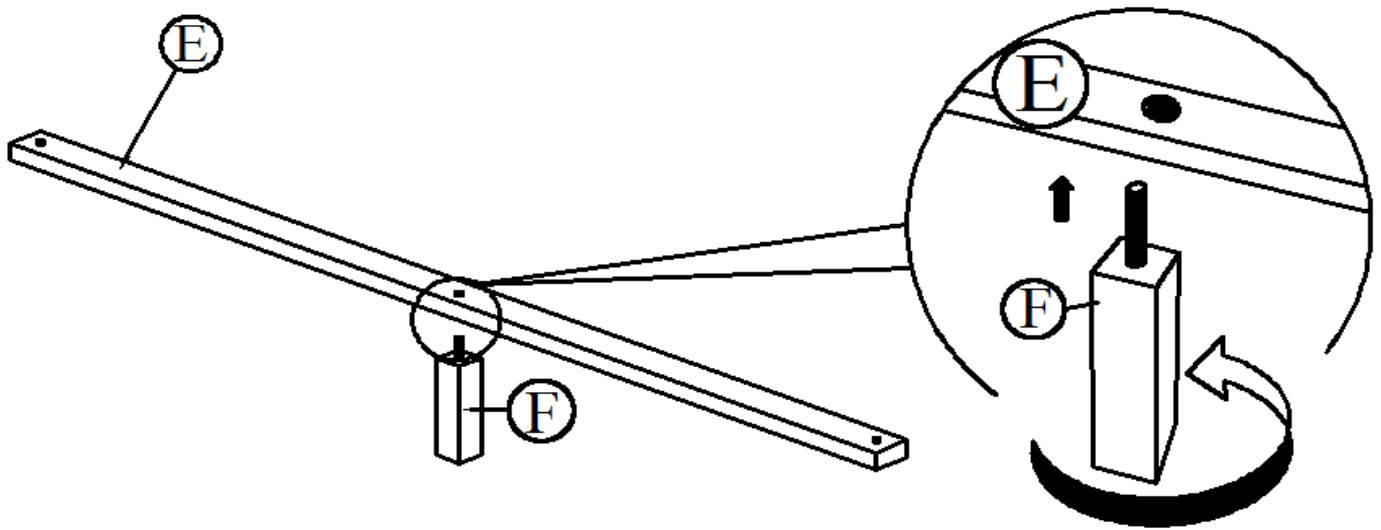

## STEP 5

Align and fasten bed slats to bed rails using screw and tighten with screw driver (Not included).

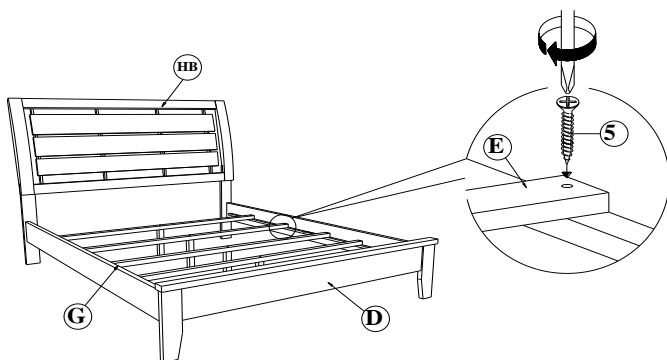

## STEP 6

Complete

