














Assembly Instructions

ITEM CODE: WF530454


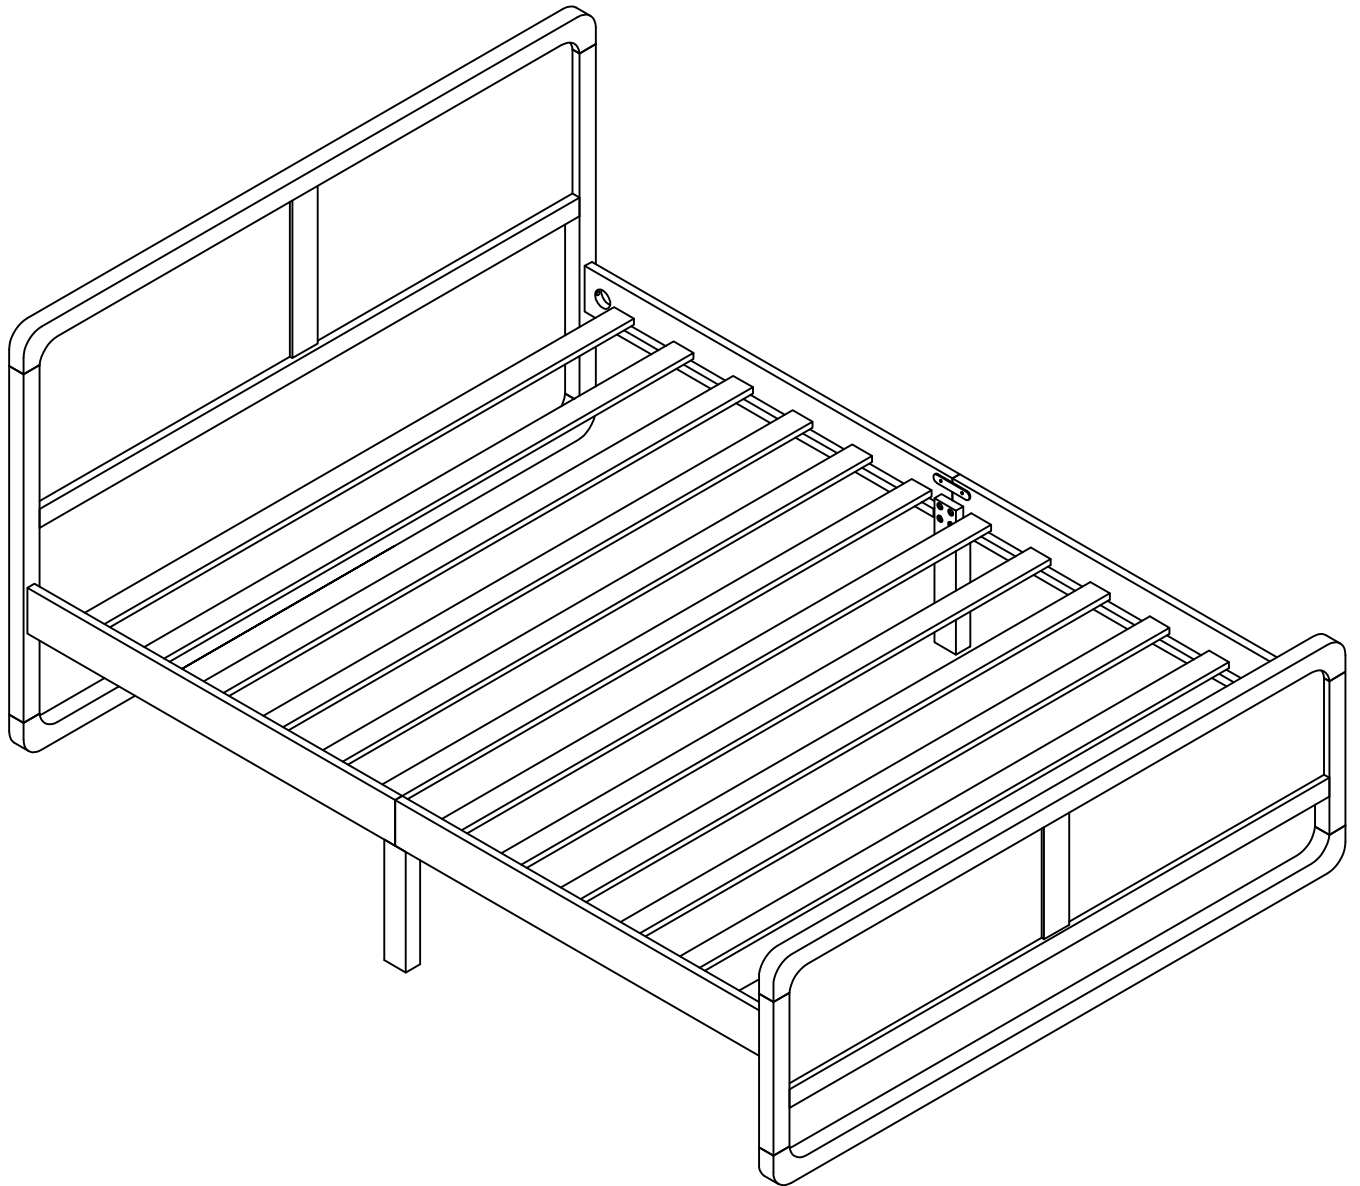



DETAIL VIEW

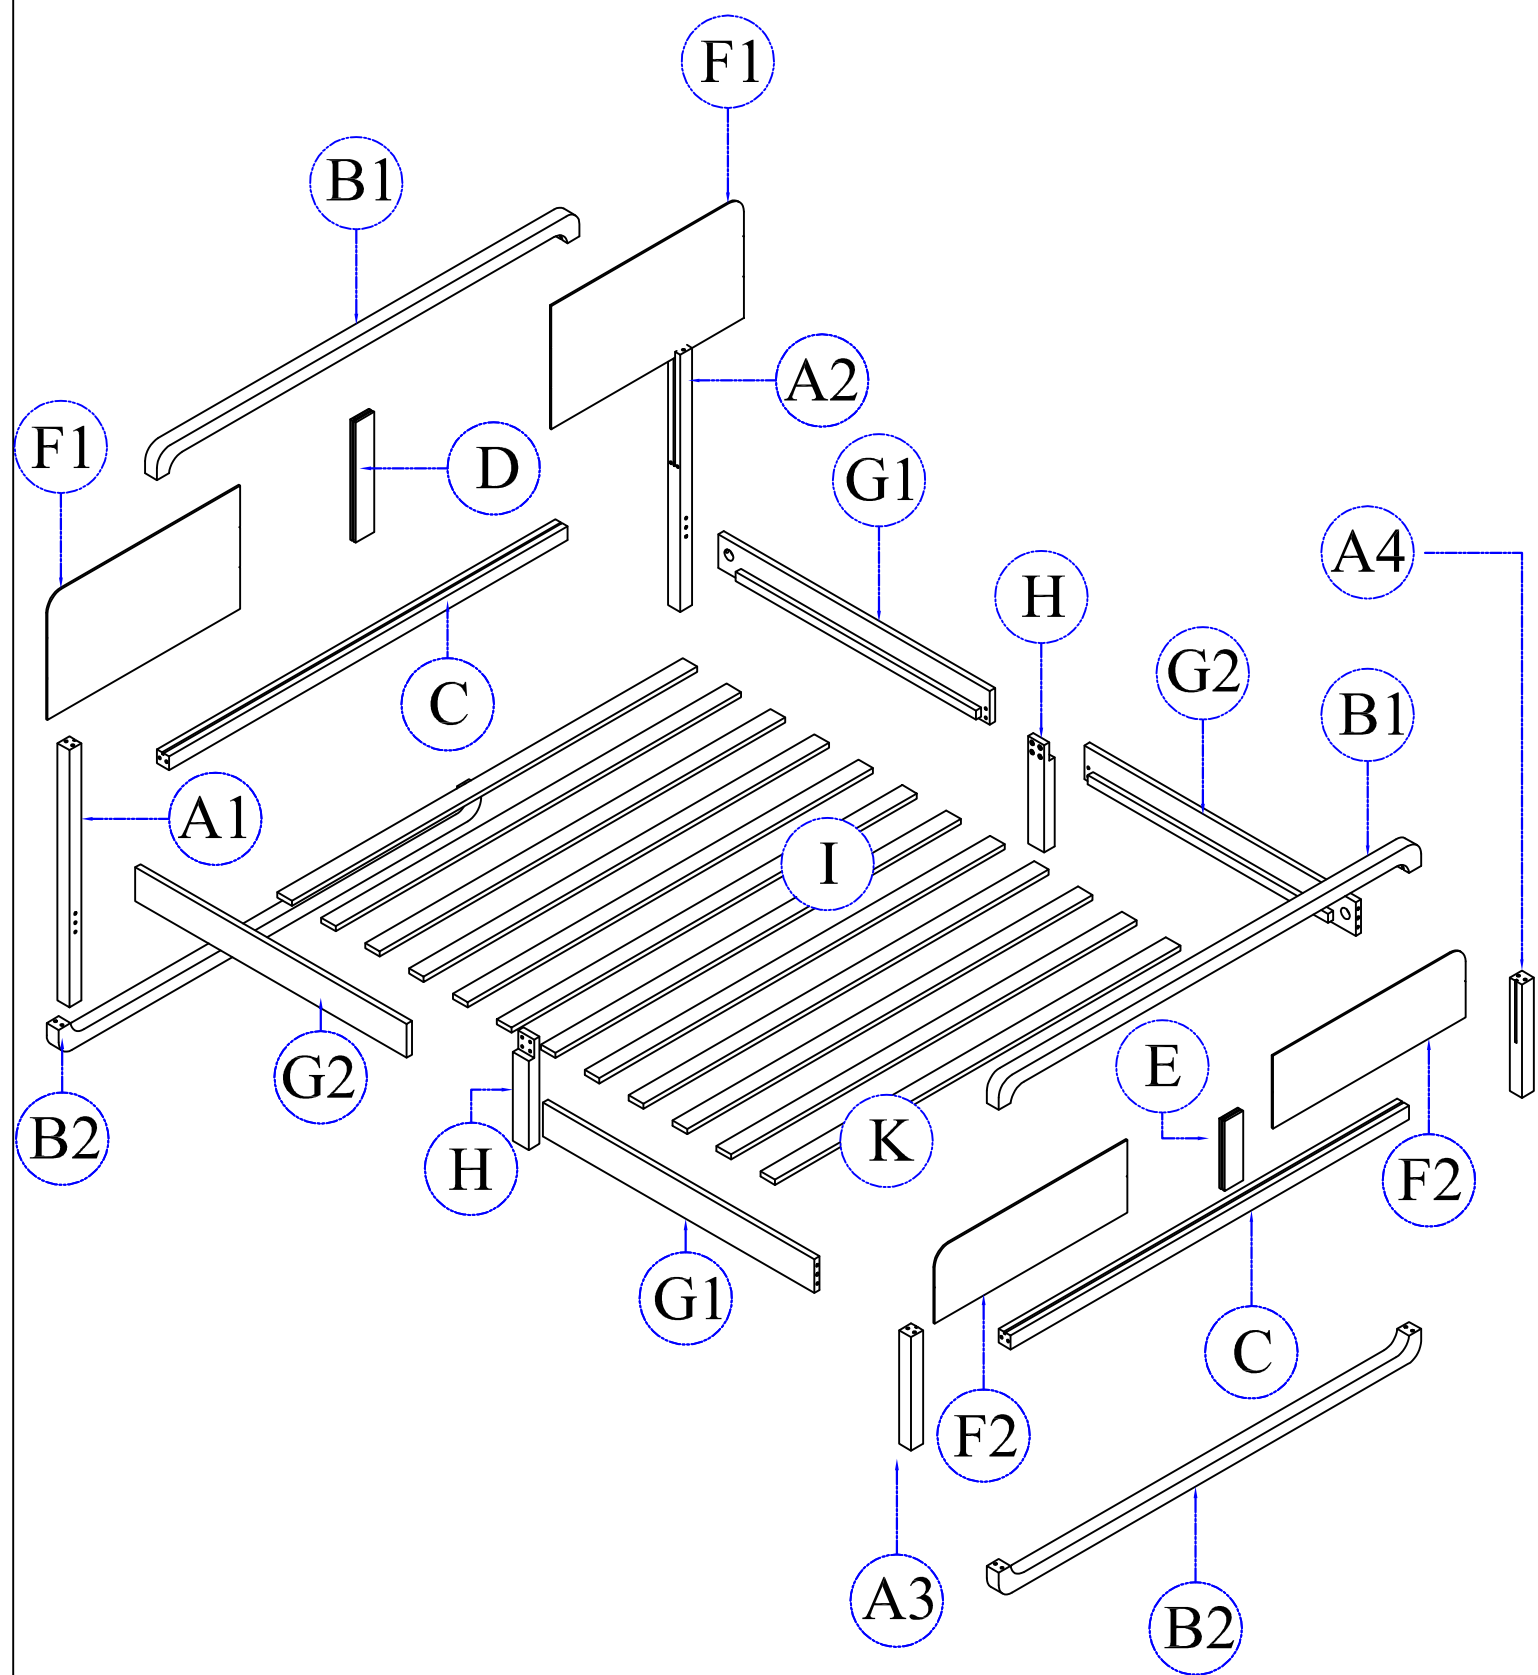

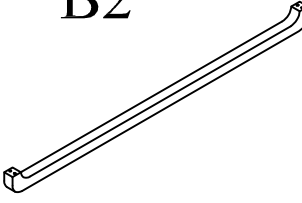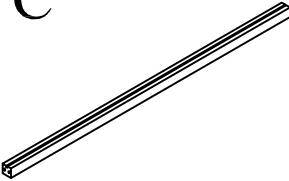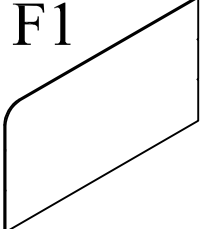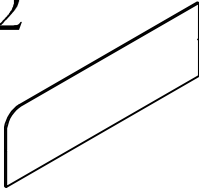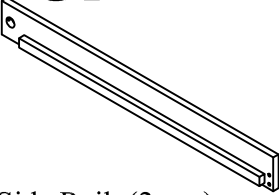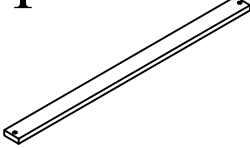A1  Headboard post (L) (1 pc)	A2  Headboard post (R) (1 pc)	A3  Footboard post (L) (1 pc)	A4  Footboard post (R) (1 pc)
B1  Top slat (2 pcs)	B2  Bottom slat (2 pcs)	C  Middle slat (2 pcs)	D  Headboard Center bar (1 pc)
E  Footboard Center bar (1 pc)	F1  Headboard panel (2 pcs)	F2  Footboard panel (2 pcs)	G1  Side Rail (2 pcs)
G2  Side Rail (2 pcs)	H  Support post side rail (2 pcs)	I  Slats (12 pcs)	


HARDWARE LIST : WF530454

1  Hex - Head bolts Ø1/4" * 40 - 12pcs	2  Hex - Head bolts Ø1/4" * 30 - 8pcs	3  connecting rod -4 pcs	4  Wood dowel Ø8 * 30 - 12pcs
5  Wood dowel Ø10 * 40 - 8pcs	6  Hexanon nut =4 pcs	7  Allen key M4*100 - 1pc	8  Wood crews M3.5 * 15 - 4pcs
9  Wood crews M4 * 30 - 24pcs	10  Connecting Metal=2 pcs	11  Wrench Metal =1 pc	12  Stud bolt Ø5/16" * 75 - 4pcs

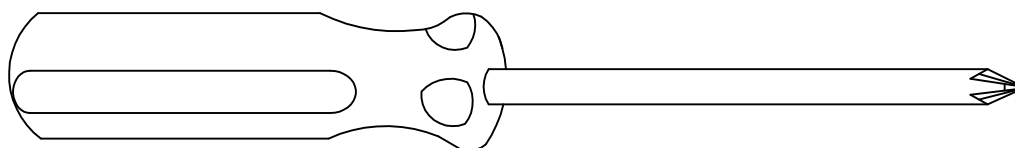


Assembly Tools Required (Not Included)

STEP 1

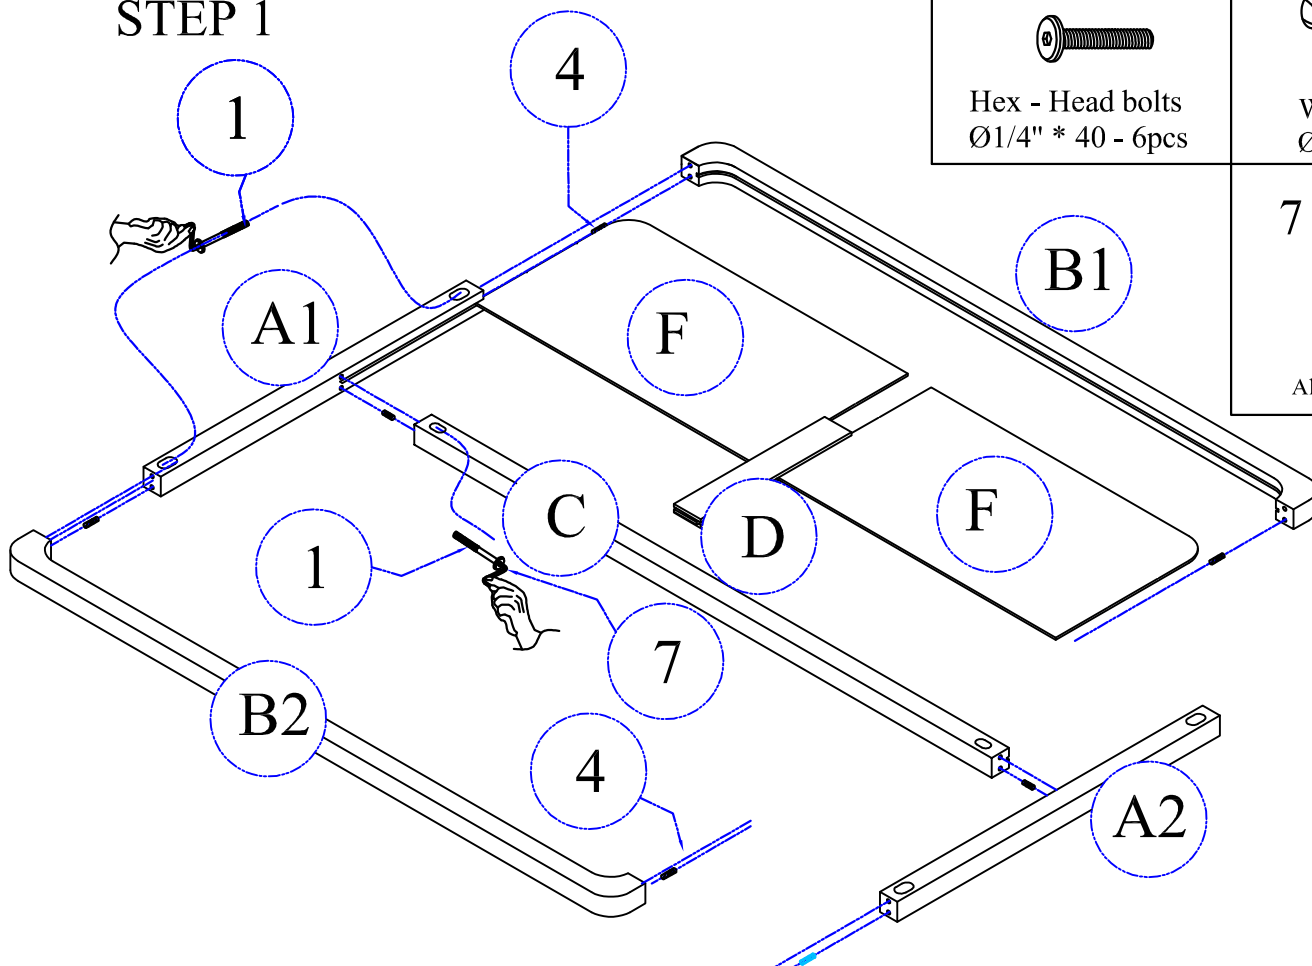

1



Hex - Head bolts
Ø1/4" * 40 - 6pcs

4




Wood dowel
Ø8 * 30 - 6pcs

7



Allen key K4 - 1pc

STEP 2

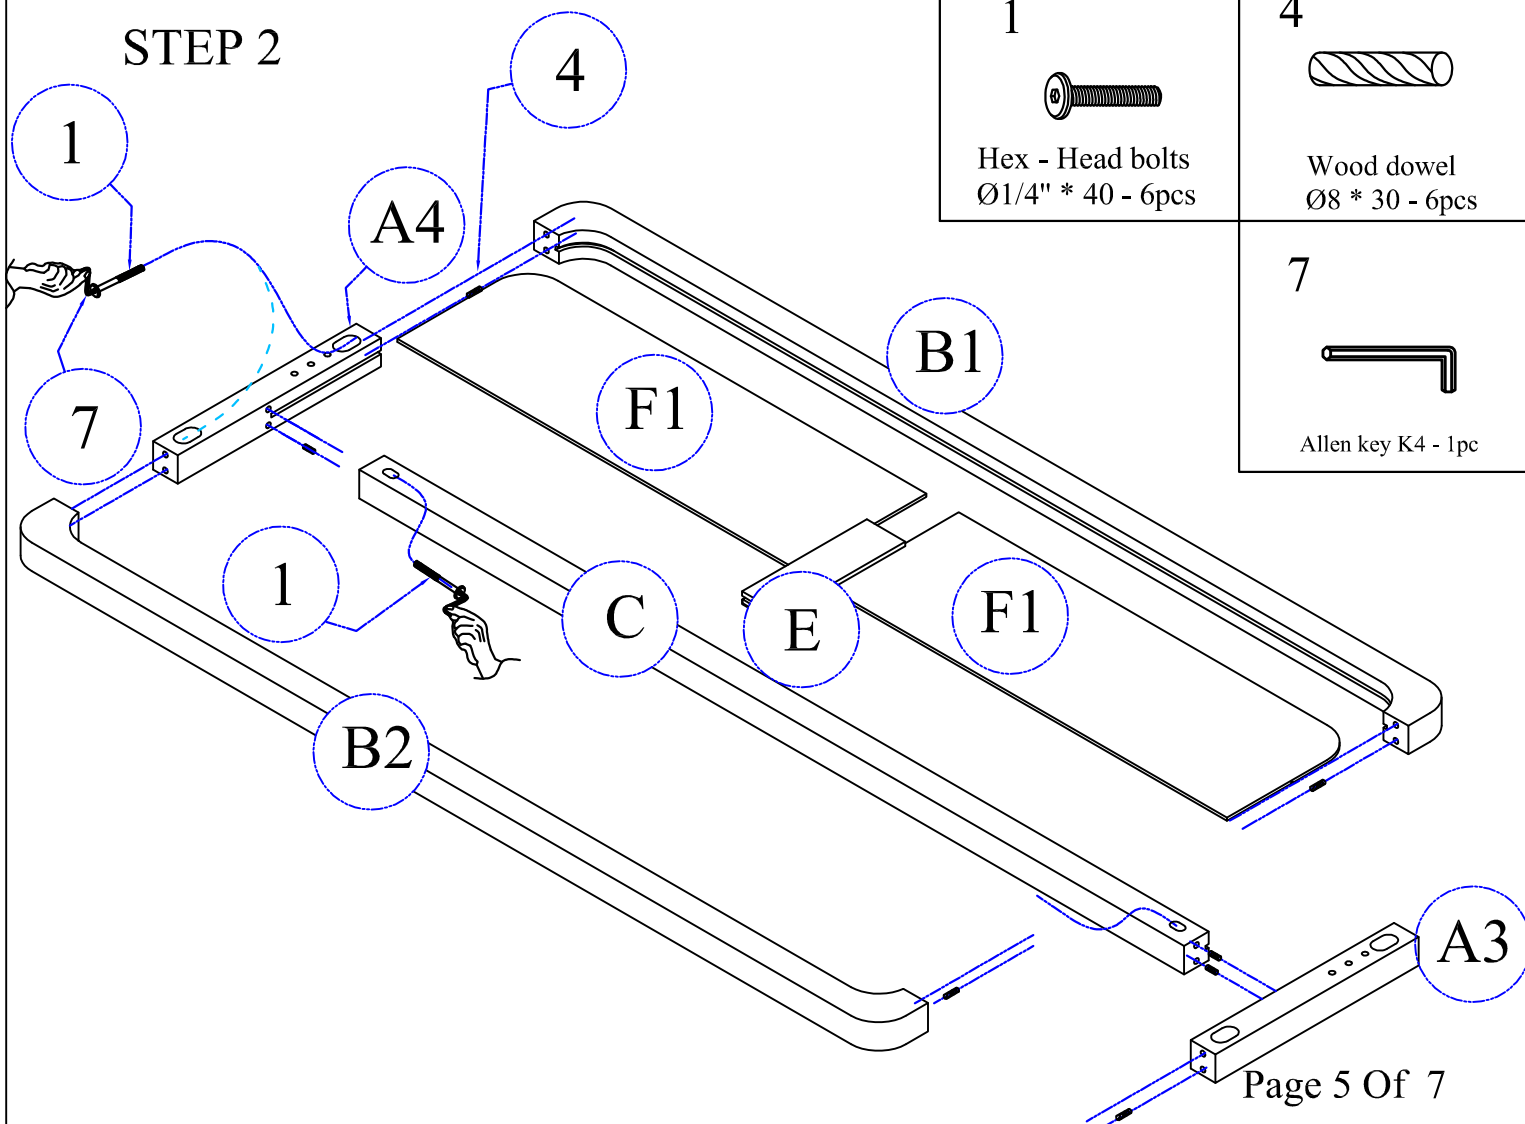

1



Hex - Head bolts
Ø1/4" * 40 - 6pcs

4




Wood dowel
Ø8 * 30 - 6pcs

7




Allen key K4 - 1pc

STEP 3 = 2

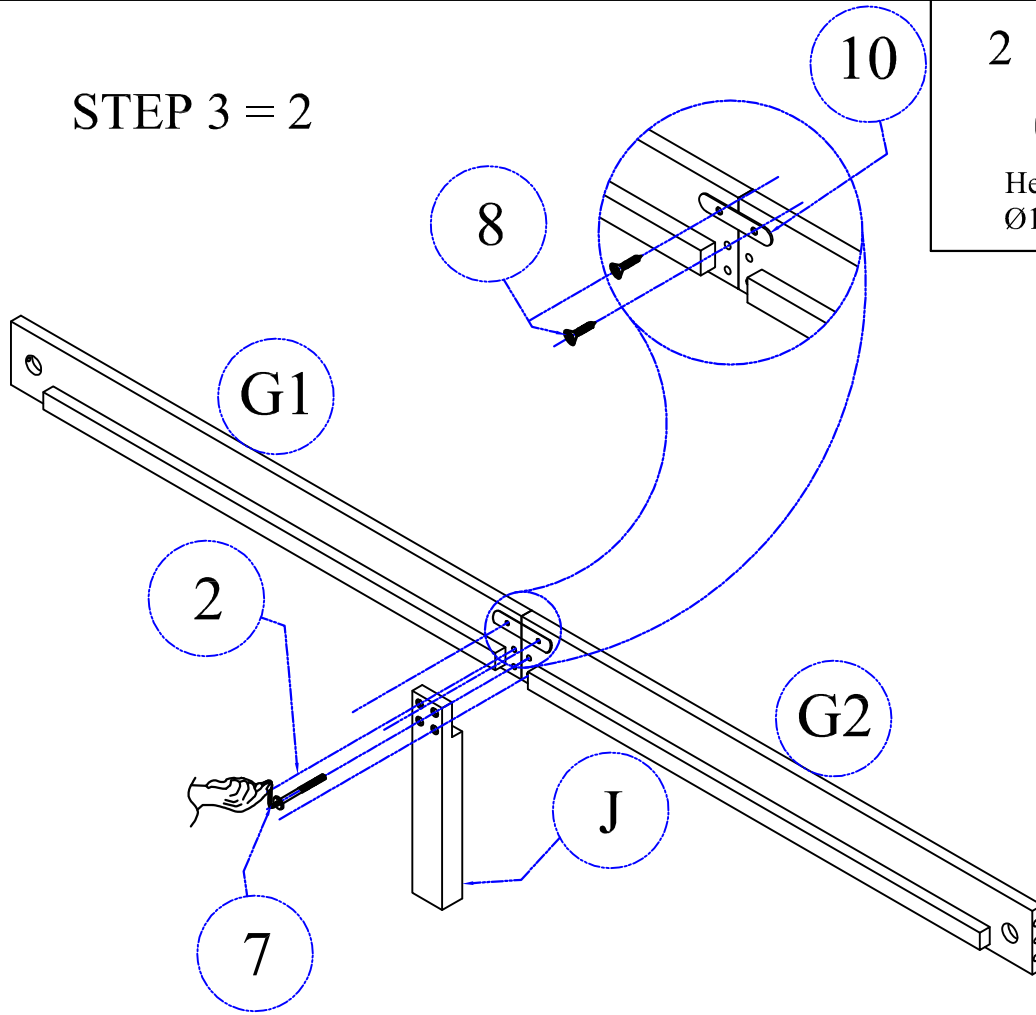

2



Hex - Head bolts
Ø1/4" * 30 - 4pcs

7




Allen key K4 - 1pc

8




Wood crews
M3.5 * 15 - 2pcs

10



Connecting Metal=1 pcs

STEP 4 = 2

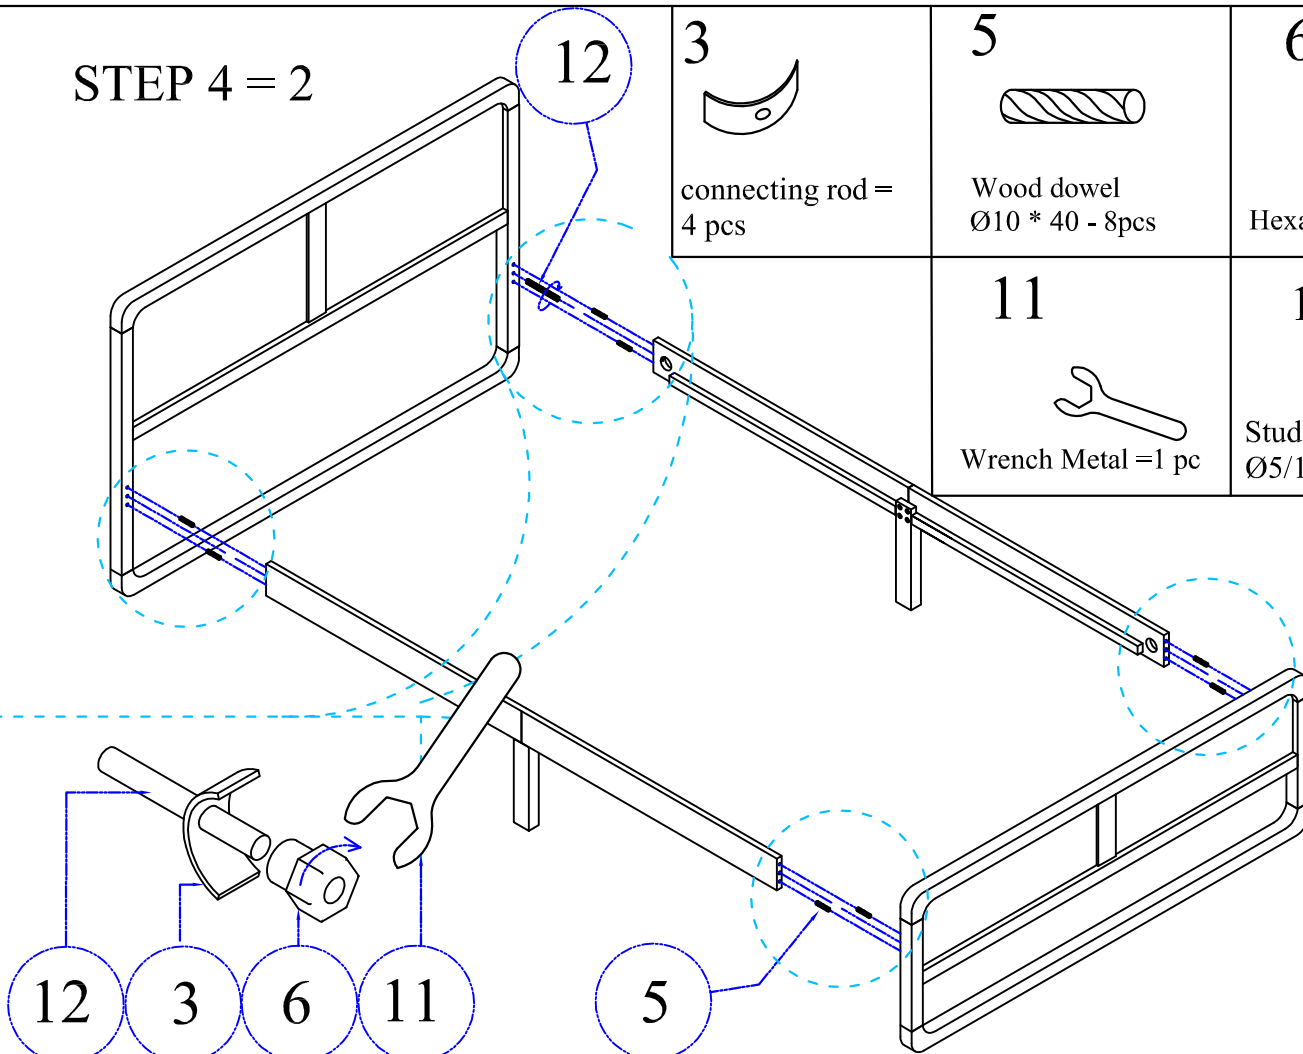


3



connecting rod =
4 pcs

5




Wood dowel
Ø10 * 40 - 8pcs

6



Hexanon nut =4 pcs

11




Wrench Metal =1 pc

12




Stud bolt
Ø5/16" * 75 - 4pcs

STEP 5

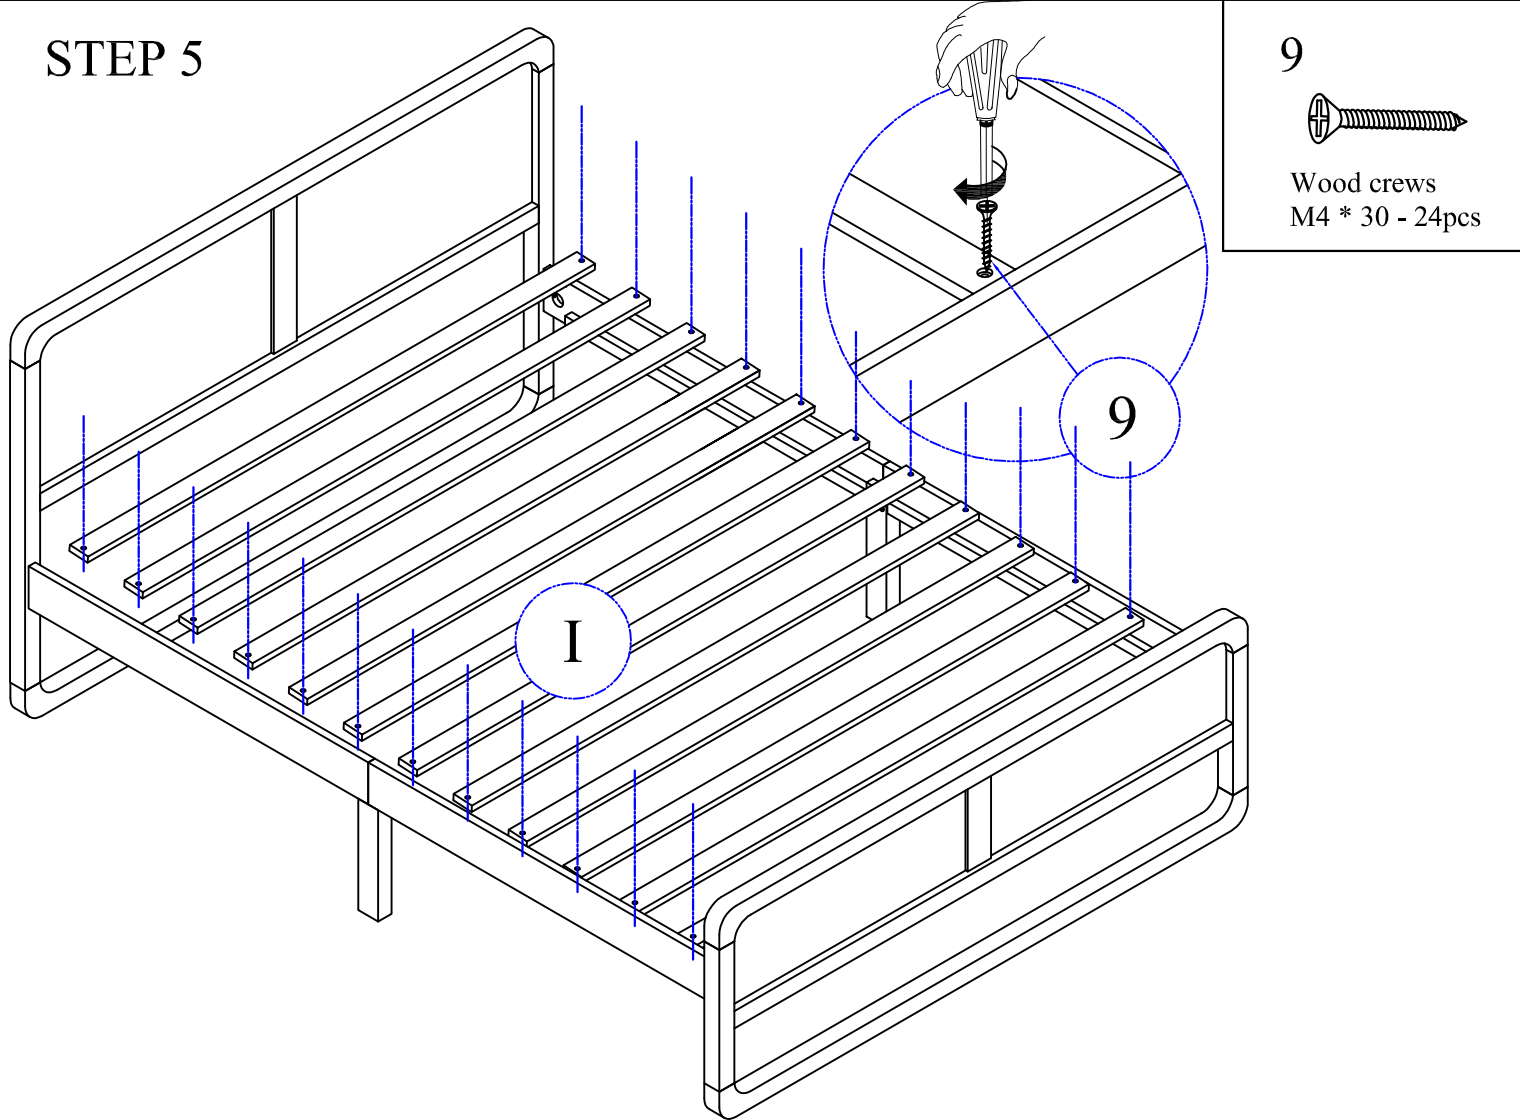

STEP 6

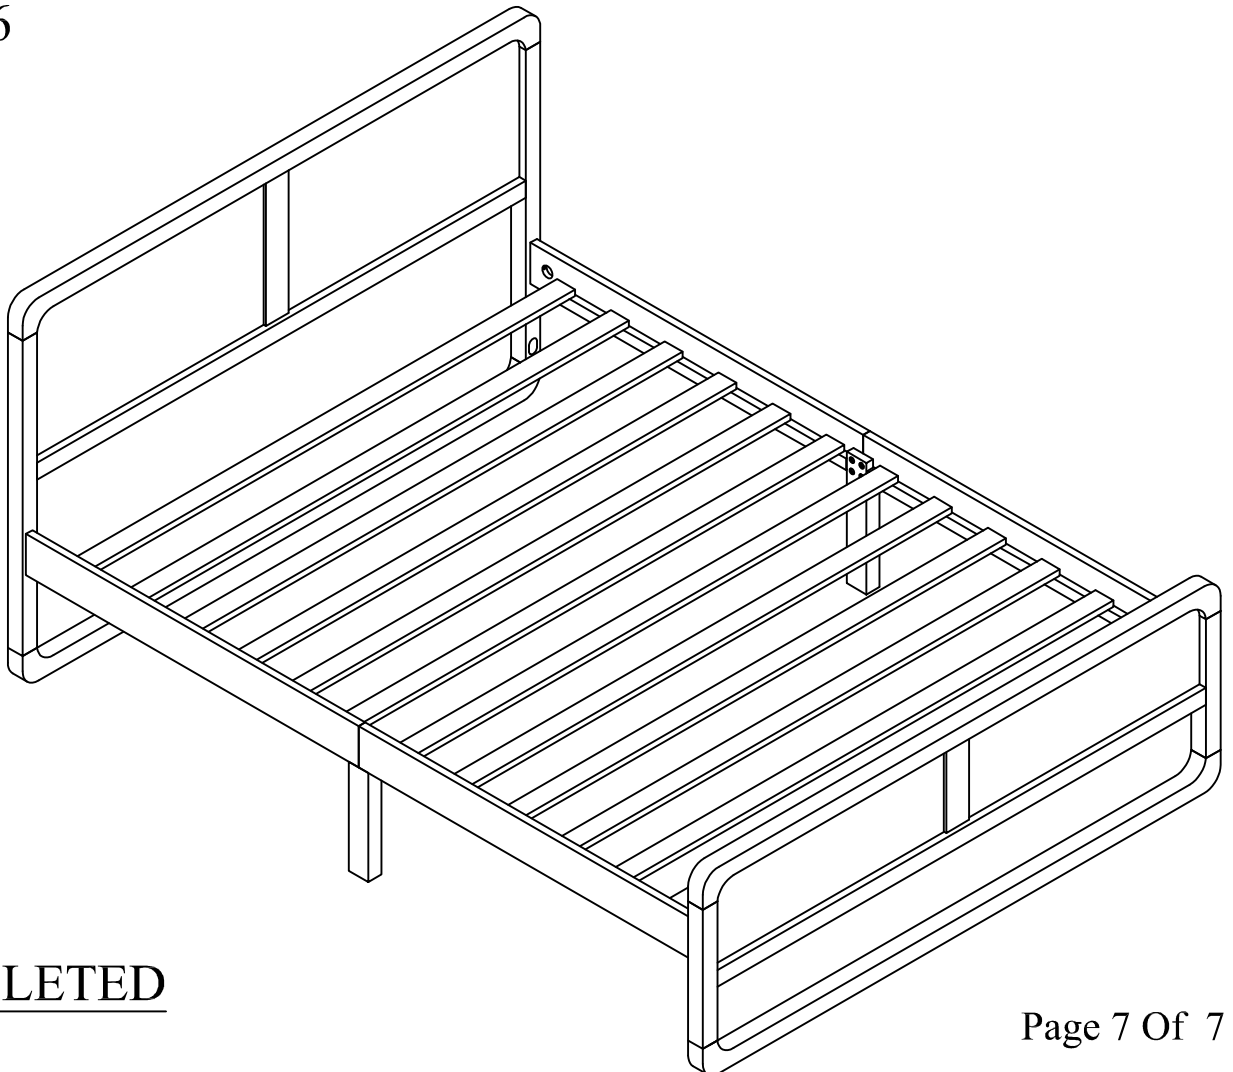

COMPLETED