
PLASTIC STORAGE SHED

8(W)x12(D)FT WITH WINDOWS

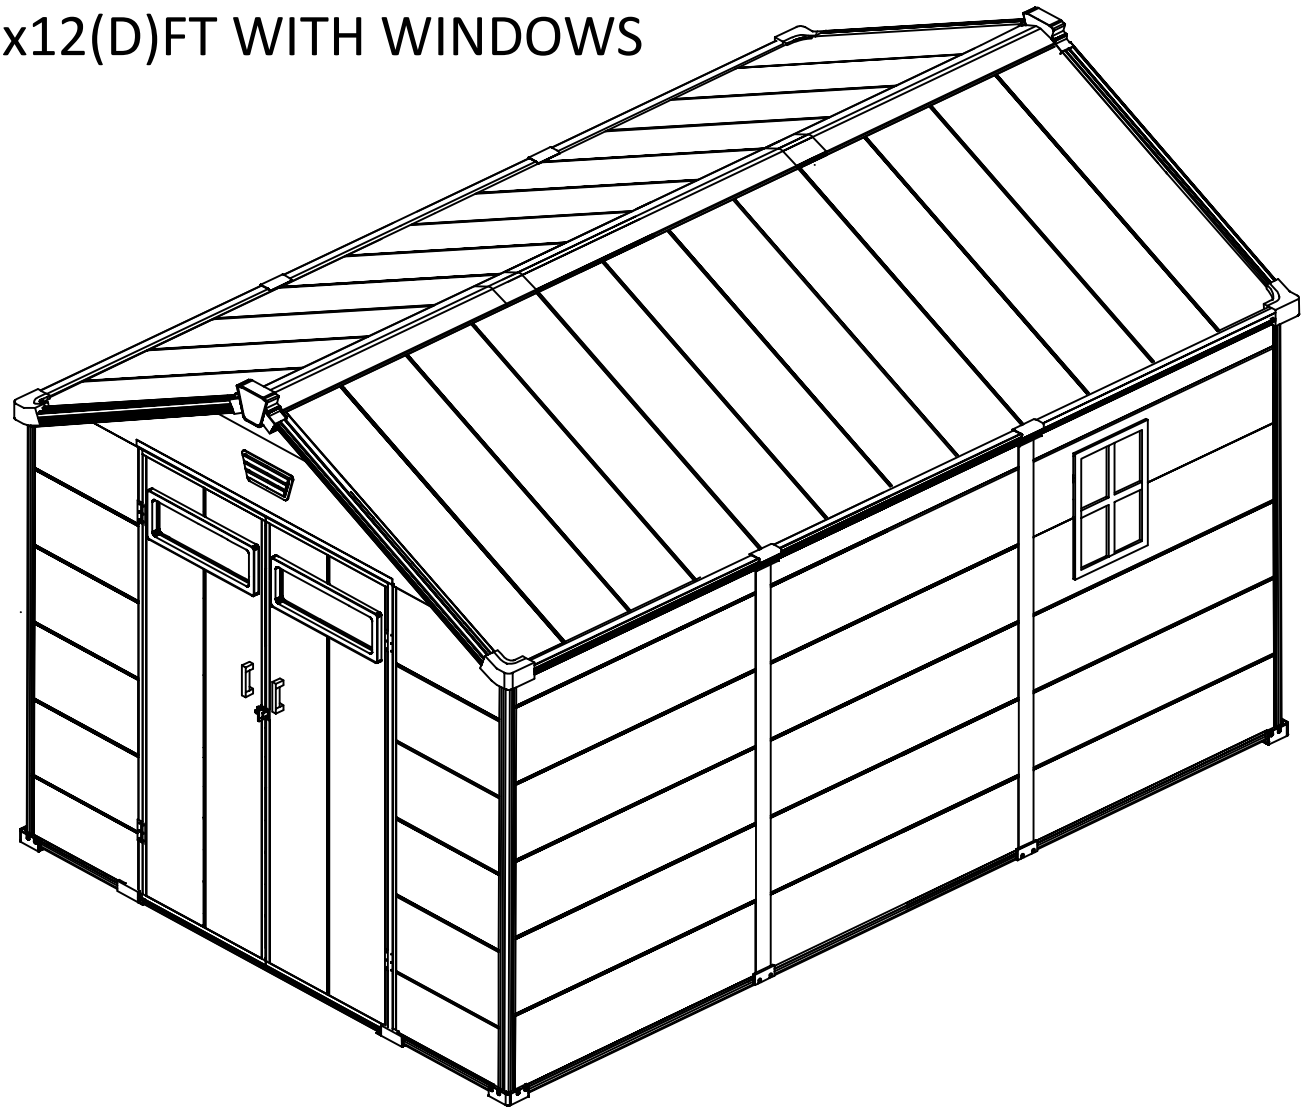

EASYHAWKservice@out look.com

Our team is available 24/7 to help with any product questions. Contact us anytime!

Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.



1.Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.

2.Protect spare parts carefully in case any losing,scratch or demage occured during installation. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or **neglect** of this product.

CARE AND SAFETY GUIDELINES

• The shed is intended for storage purposes only. It is not designed for habitation.
• It is strongly recommended to secure the shed to an immovable object or anchor to the round by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
• Do not attempt assembly on windy or cold days.
• Periodically check the shed to ensure that it is stable and that the site is level.
• Be careful when handling parts with steel edges.
• When assembling or handling the shed, use only those tools listed in the user manual.
• Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
• Avoid using a lawnmower or mechanical scythe near the shed.
• Wear safety goggles and always follow the manufacturer’s instructions when using power tools.
• Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
• Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.
• Avoid placing heavy items against the walls, as this may cause distortion.
• Avoid placing sharp items directly on floor which may cause broken.
• Keep the roof clear of accumulated snow and leaves. Large amounts of snow on the roof can damage the shed, making it unsafe to enter.
• Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.
• Do not stand on the roof.
• Consult your local authorities to check if permits are required to erect the shed.

Safety Precautions

We recommend **two adults** to complete the installation.
Two adults installed together will make the installation process easier and safer.
The gloves must be carried to prevent hand cuts during installation.
Take care when using power tools near water the use of a residual current device (RCD) is advised.
Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand.
Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Installation precautions

1.Site preparation


Leveling the ground.


Please place the product on a flat ground to prevent leaning and collapse.
If the ground is uneven, the door may can't be closed.




2. Set up the base

It is recommended to build a wooden base or concrete base.

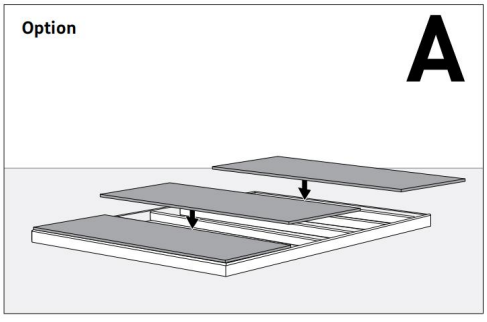


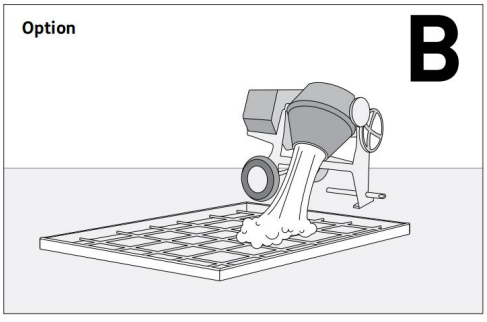

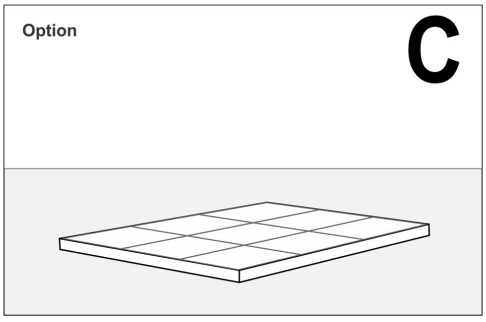

3. Leave enough space

Operating space shall be reserved for external installation work.

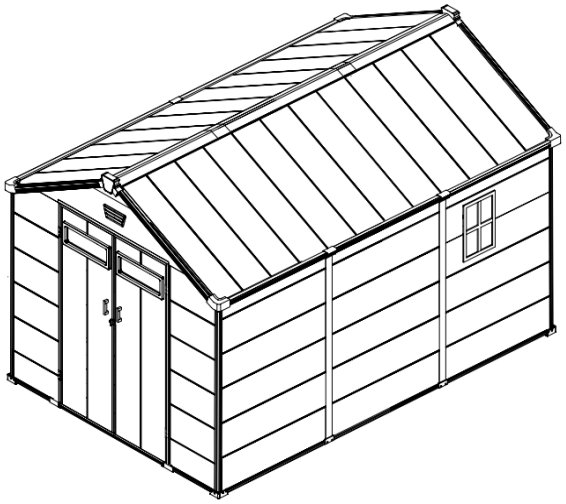


4. Tools required for installation

（**Note:** Installation requires two people to work together.）



5. Parts are placed after unpacking


Don’t lean the panels to avoid distortion.

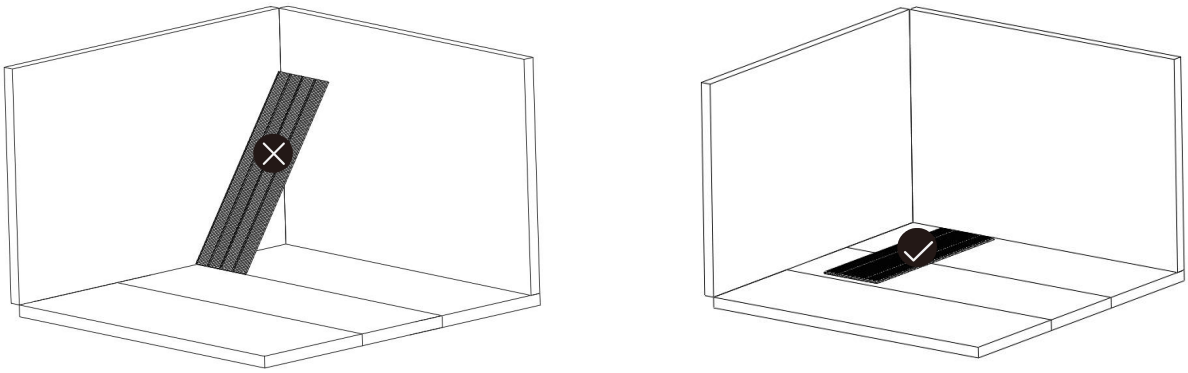


6. Protect The Floor

Disassemble the packaging cardboard box, unfold it and lay it on the floor to protect.

Directly use the ladder may cause floor demage.

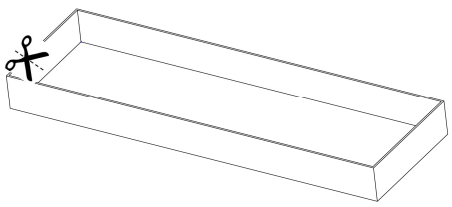


Ⅰ.【Product Introduction】

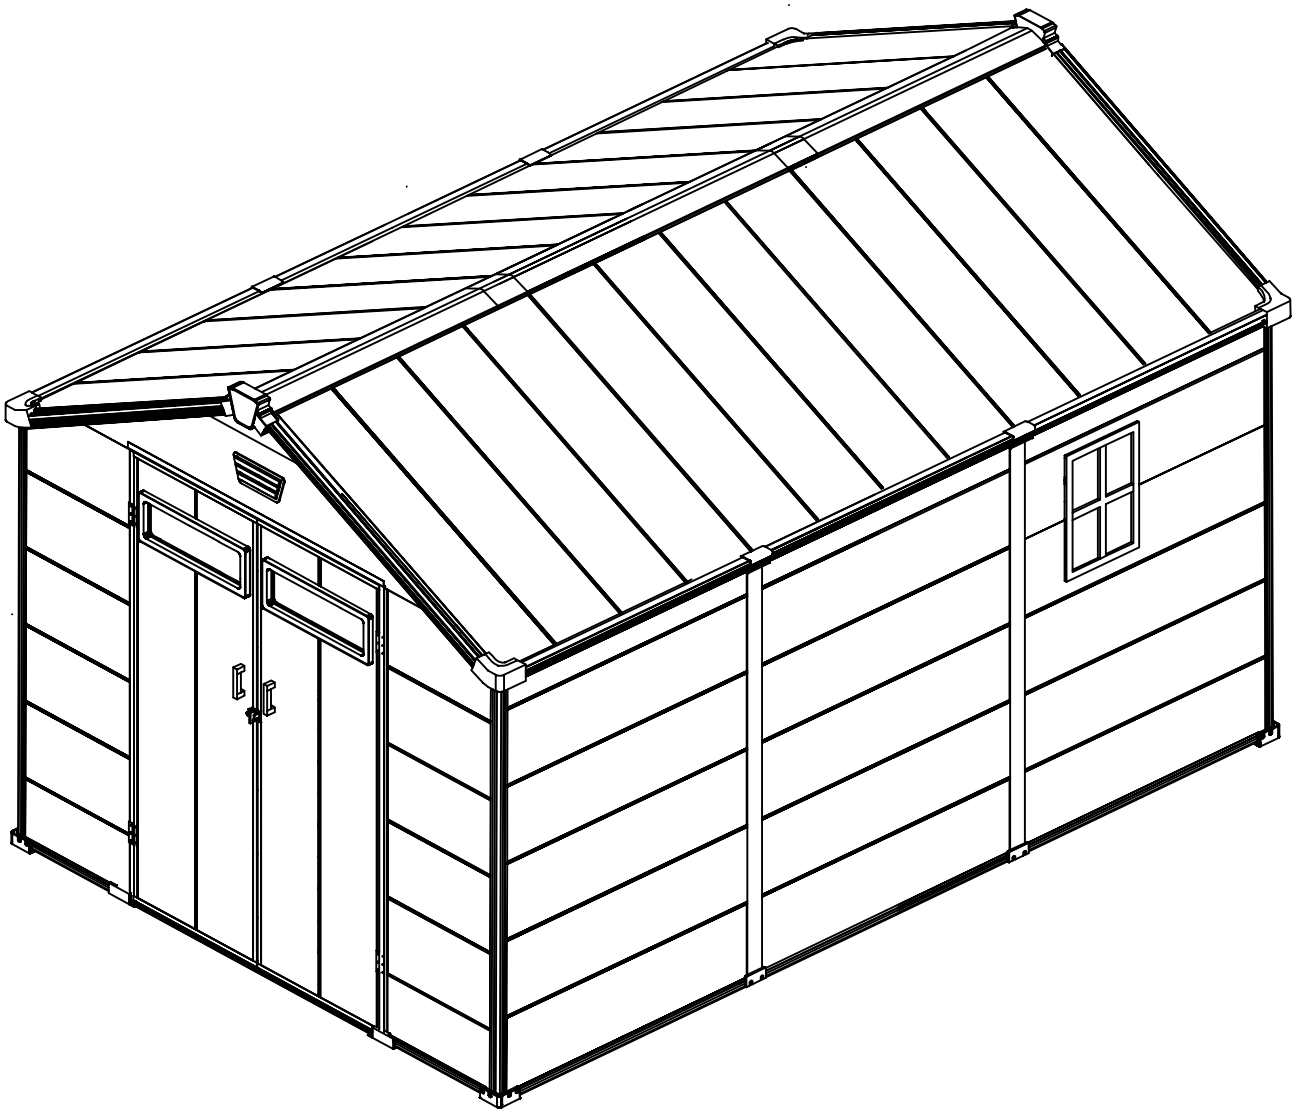


Installation Precautions for Plastic Tool Huts:


1. Before installation,ensure the installation platform is level and free of unevenness.Unevenness may cause slight misalignment of the panels during installation, but in most cases, the product can still be successfully assembled.
2. All plastic panels must be fully inserted, especially when installing components into the floor grooves. Make sure they are completely inserted. Assembly may require using a rubber mallet totap the panels (tap gently, do not use excessive force).
3. Plastic toolhuts contain some metal parts. Ensure all screws on the metal partsare tightened.

【 Resin Storage Shed_8x12ft】

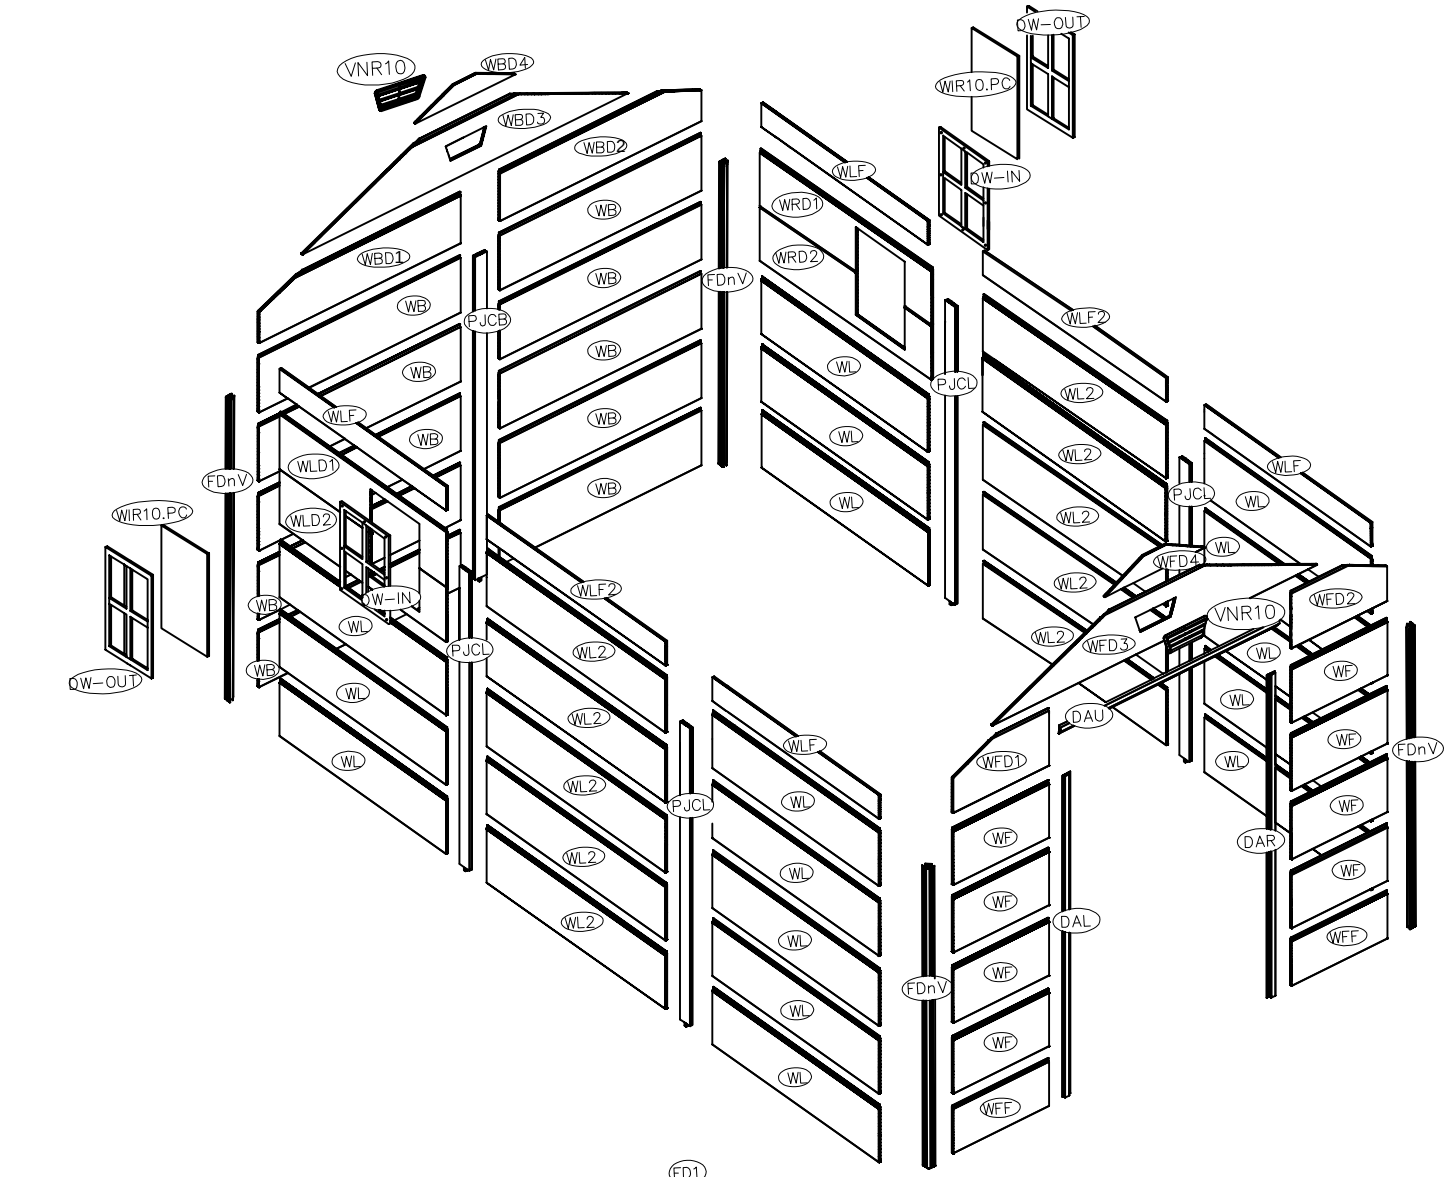

VNR10
WBD4
WBD3
WBD2
WBD1
WB
WLF
WLD1
WLD2
FDnV
PJCB
W-IN
WIR10.PC
W-OUT
WRD1
WRD2
PJCL
WL
WLF2
WL2
WFD4
WFD2
WFD3
WFD1
DAU
WF
DAR
DAL
WFF

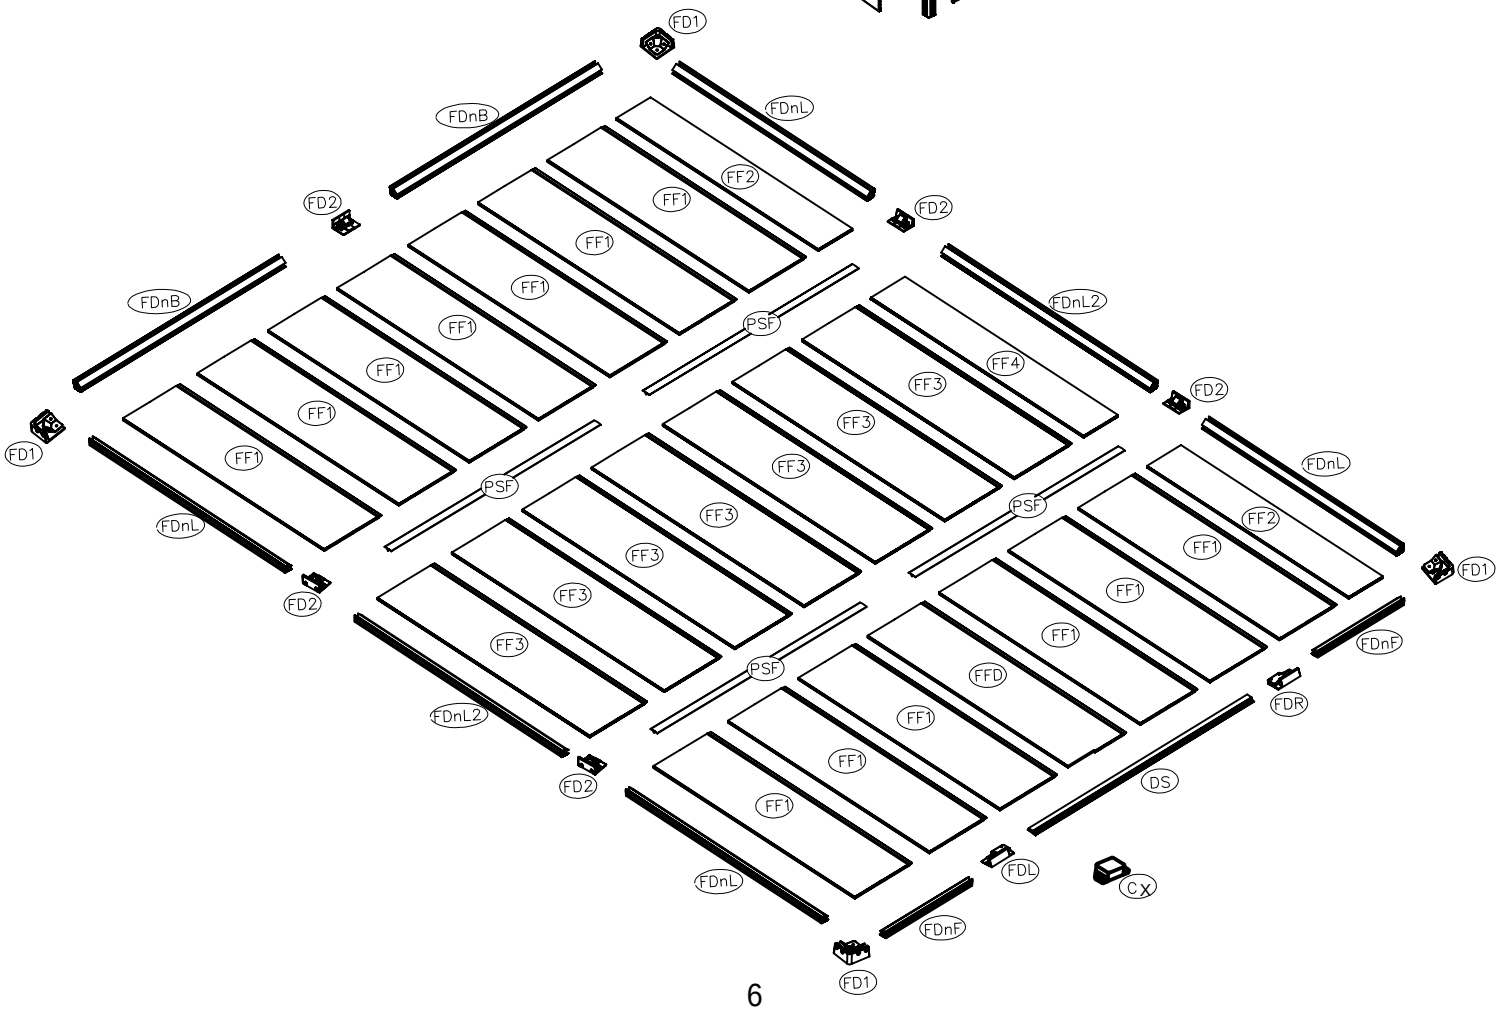
FD1
FDnB
FDnL
FF1
FF2
FD2
PSF
FDnL2
FF3
FF4
FDnF
FFD
FDR
DS
FDL
CX














EXP VIEW

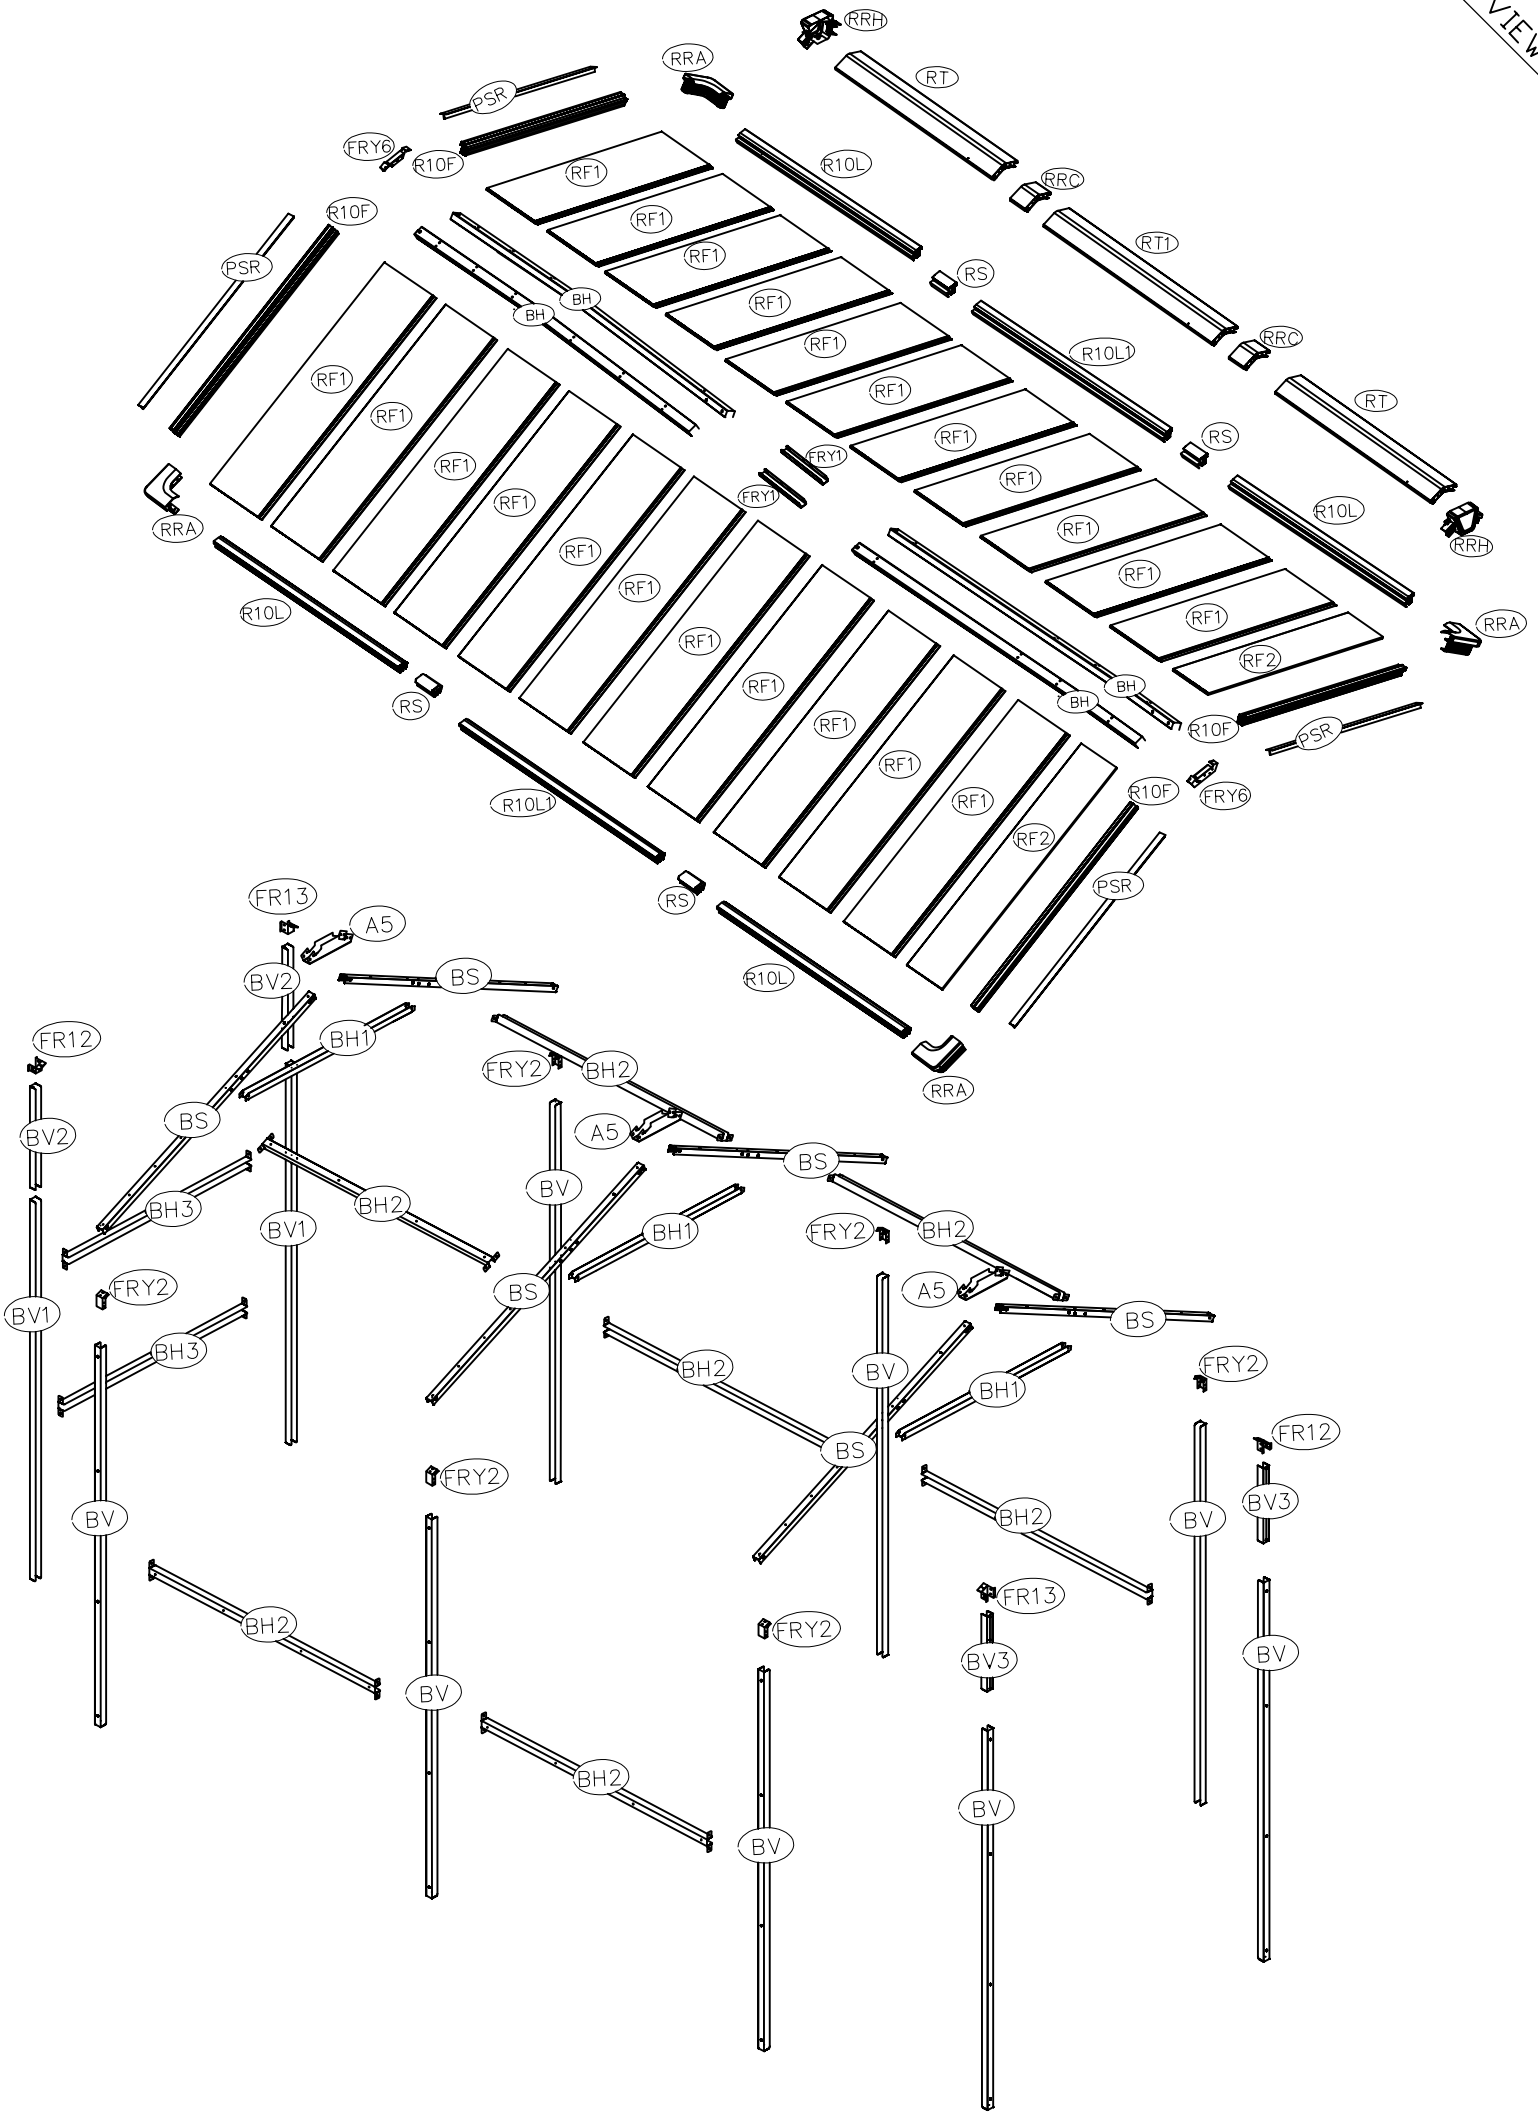

RRH
RRA
RT
PSR
FRY6
R10F
R10L
RF1
RRC
RT1
RS
BH
R10L1
FRY1
RF2
FR13
A5
BV2
BS
BH1
FR12
FRY2
BH2
BV
BH3
BV1
BV3

EXP VIEW




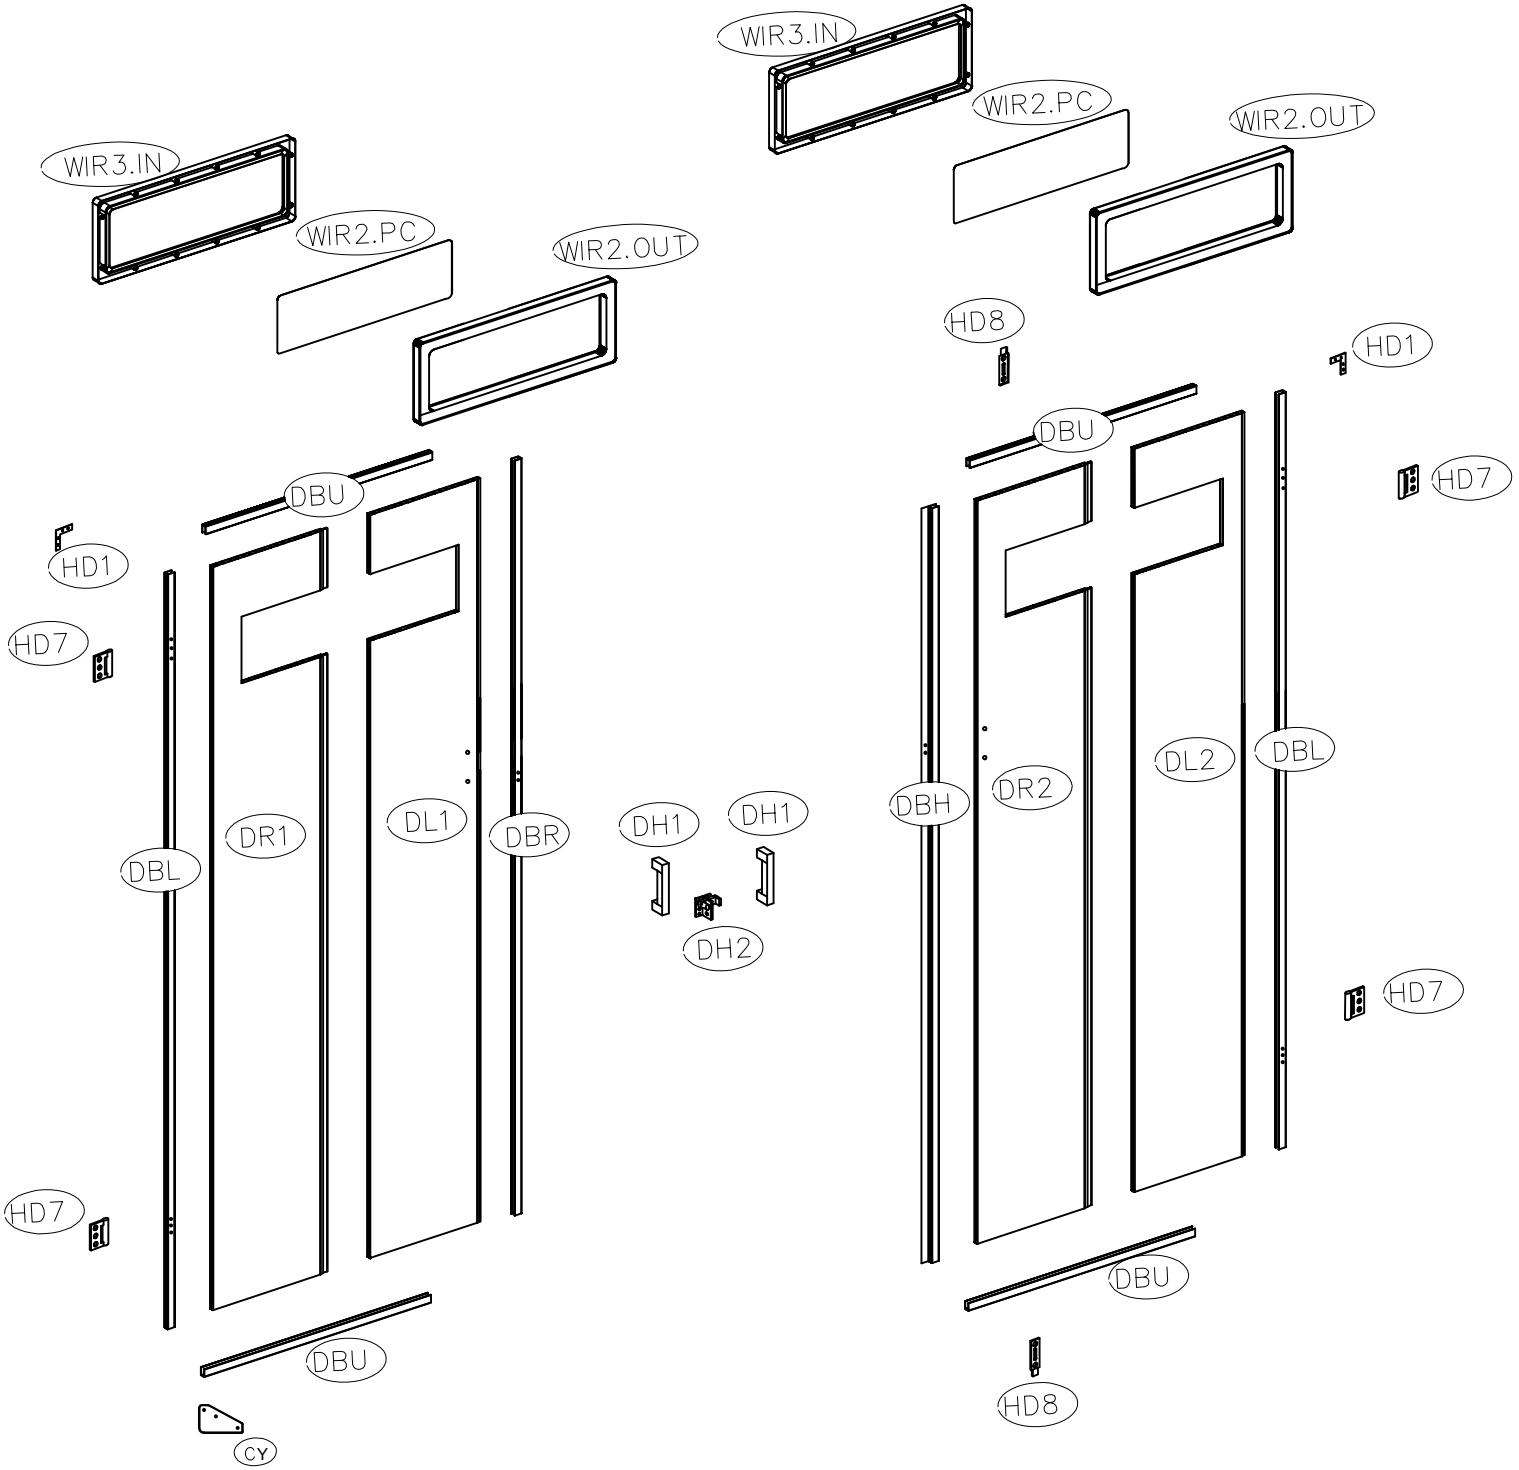

WIR3.IN
WIR2.PC
WIR2.OUT
HD1
HD7
DBU
DR1
DL1
DBR
DBL
DH1
DH2
HD8
DR2
DBH
DL2
CY







FLOOR

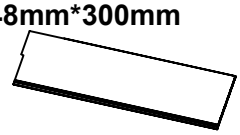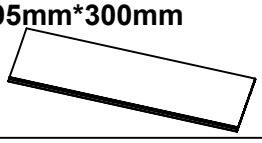Item no.	Reference Image	Qty.
DS	**1165mm** 	X1
FDnB	**1120mm** 	X2
FDnL	**1107mm** 	X4
FDnF	**482mm** 	X2
FDnL2	**1175mm** 	X2
FF1	**1148mm*300mm** 	X13
FF2	**1148mm*230mm** 	X2
FFD	**1148mm*300mm** 	X1
FF3	**1195mm*300mm** 	X7
FF4	**1195mm*230mm** 	X1
PSF	**1140mm** 	X4
FD1		X4
FD2		X5
FDR		X1












Item no.	Reference Image	Qty.
FDL		X1


WALL

Item no.	Reference Image	Qty.
WL	**1143mm*300mm** 	X16
WLF	**1143mm*130mm** 	X4
WLD1	**1143mm*300mm** 	X1
WLD2	**1143mm*300mm** 	X1
WRD1	**1143mm*300mm** 	X1
WRD2	**1143mm*300mm** 	X1
WB	**1158mm*300mm** 	X10
WBD1	**1158mm*300mm** 	X1
WBD2	**1158mm*300mm** 	X1
WFD1	**565mm*300mm** 	X1
WFD2	**565mm*300mm** 	X1
WBD3	**1704mm*300mm** 	X1
WBD4	**588mm*135mm** 	X1
WFD3	**1906mm*300mm** 	X1











Item no.	Reference Image	Qty.
WFD4	**791mm*190mm** 	X1
WF	**565mm*300mm** 	X8
WFF	**565mm*261mm** 	X2
PJCL	**1595mm** 	X4
PJCB	**1785mm** 	X1
VNR10		X2
DW-OUT	**548mm*386mm** 	X2
DW-IN	**548mm*386mm** 	X2
WIR10.PC	**483mm*321mm** 	X2
FDnV	**1630mm** 	X4
WL2	**1190mm*300mm** 	X10
WLF2	**1190mm*130mm** 	X2









DOOR

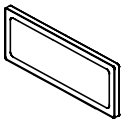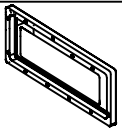Item no.	Reference Image	Qty.
DAL	1758mm 	X1
DAR	1758mm 	X1
DAU	1275mm 	X1
DBL	1745mm 	X2
DBR	1745mm 	X1
DBU	589mm 	X4
DBH	1745mm 	X1
DR1	1740mm*300mm 	X1
DL1	1740mm*285mm 	X1
DL2	1740mm*300mm 	X1
DR2	1740mm*285mm 	X1
WIR2.OUT		X2
WIR2.PC	459mm*159mm 	X2
WIR3.IN		X2




Item no.	Reference Image	Qty.
HD7		X4
DH1		X2
DH2		X1
HD1		X2
HD8		X2
CX		X1
CY		X1


ROOF

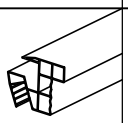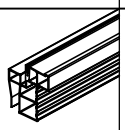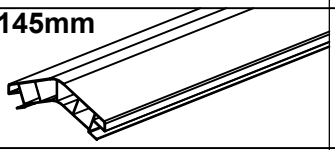Item no.	Reference Image	Qty.
RF2	1270mm*264mm 	X2
RF1	1270mm*300mm 	X22
R10L	1110mm 	X4
R10F	1210mm 	X4
RT	1145mm 	X2
PSR	1210mm 	X4
RRH		X2
RRA		X4
RRC		X2
BH	1750mm 	X4
FRY6		X2
FRY1	240mm 	X2
BH1	885mm 	X3
BH2	1200mm 	X8

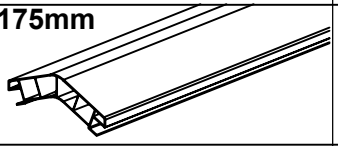Item no.	Reference Image	Qty.
BH3	1000mm 	X2
A5		X3
RS		X4
BS	1225mm 	X6
FR12		X2
FR13		X2
BV	1615mm 	X8
BV1	1635mm 	X2
FRY2		X6
BV2	607mm 	X2
BV3	357mm 	X2
R10L1	1174mm 	X2
RT1	1175mm 	X1


ACCESSORY


Item no.	Reference Image	Qty.
FT1 (M5x11)		X176
FT2 (M4x8)		X312
FT3 (M5x20)		X100
FT14B		X4
FT14 (M8*20)		X4
FT7 (M6*40)		X92
FT7A (M6)		X99
FT8 (M6x16)		X4
FT14A (M8)		X4
Rubber sealing strip		X1
HAMMER		X1

Item no.	Reference Image	Qty.
GLOVE		X2
OPEN END WRENCH		X1
HEXSOCKET		X1
FT12 (M8*80)		X4
FT11 (M3x14)		X62
FT9 (M6)		X3
FT10 (M6)		X3
HD5 (M6*230)		X3

ASSEMBLY INSTRUCTIONS

1

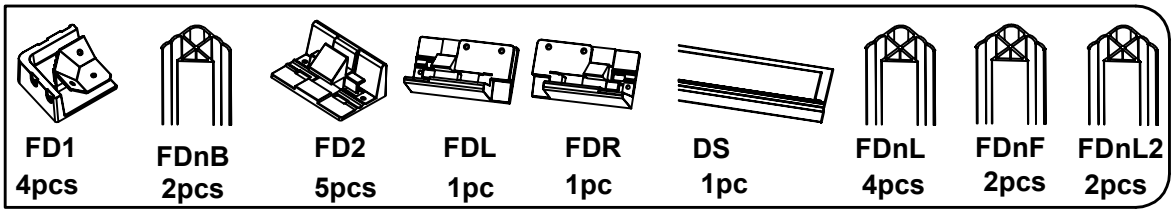

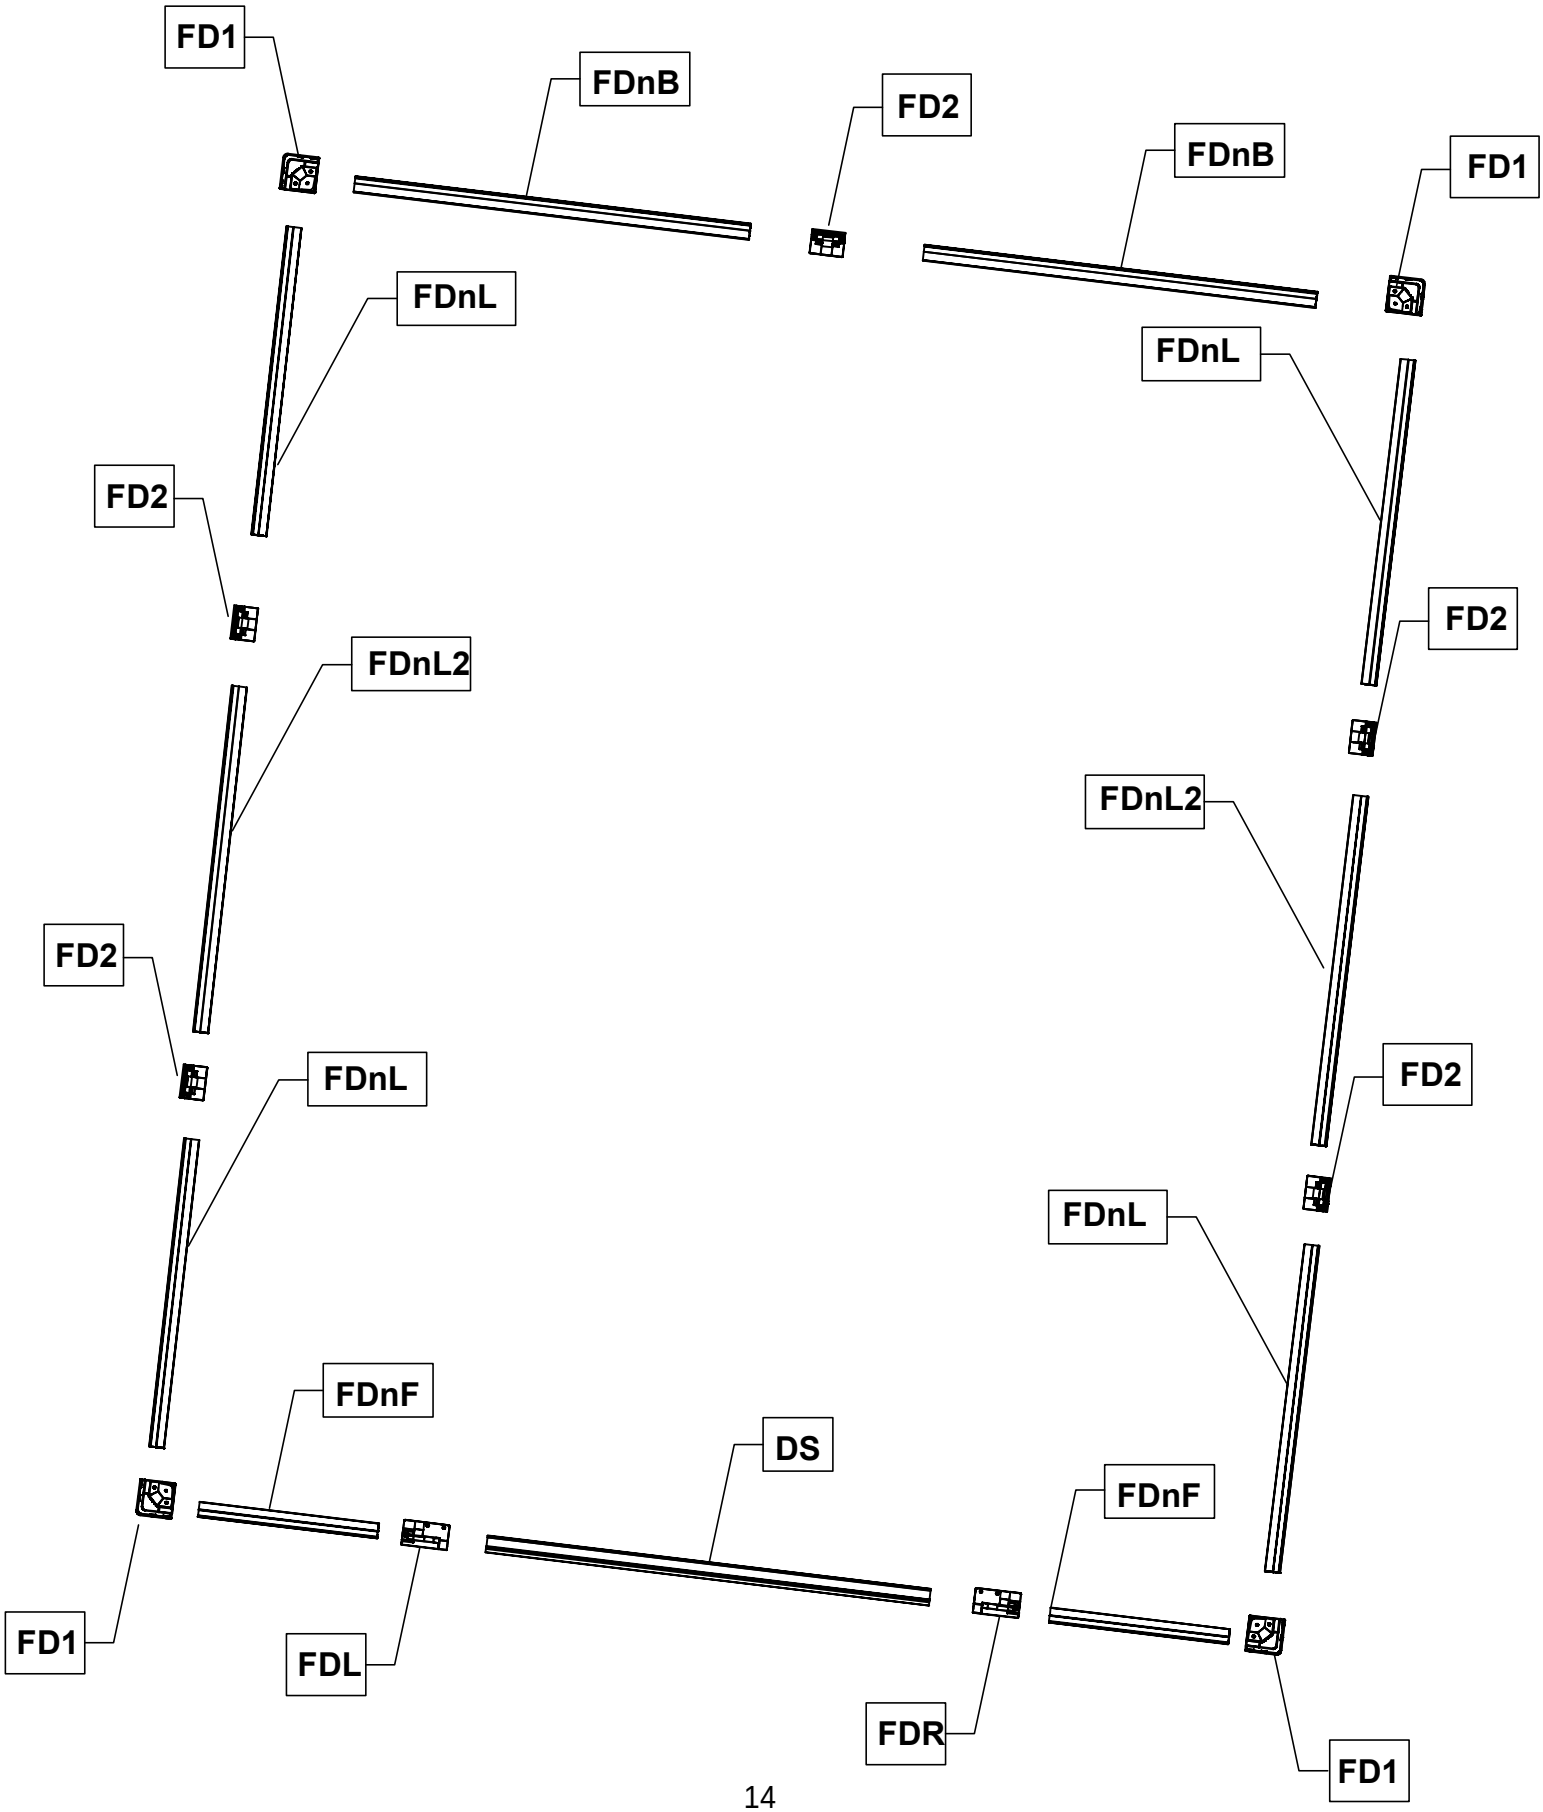


2



FT1
4pcs


FT3
6pcs


Don't install the right side this step.

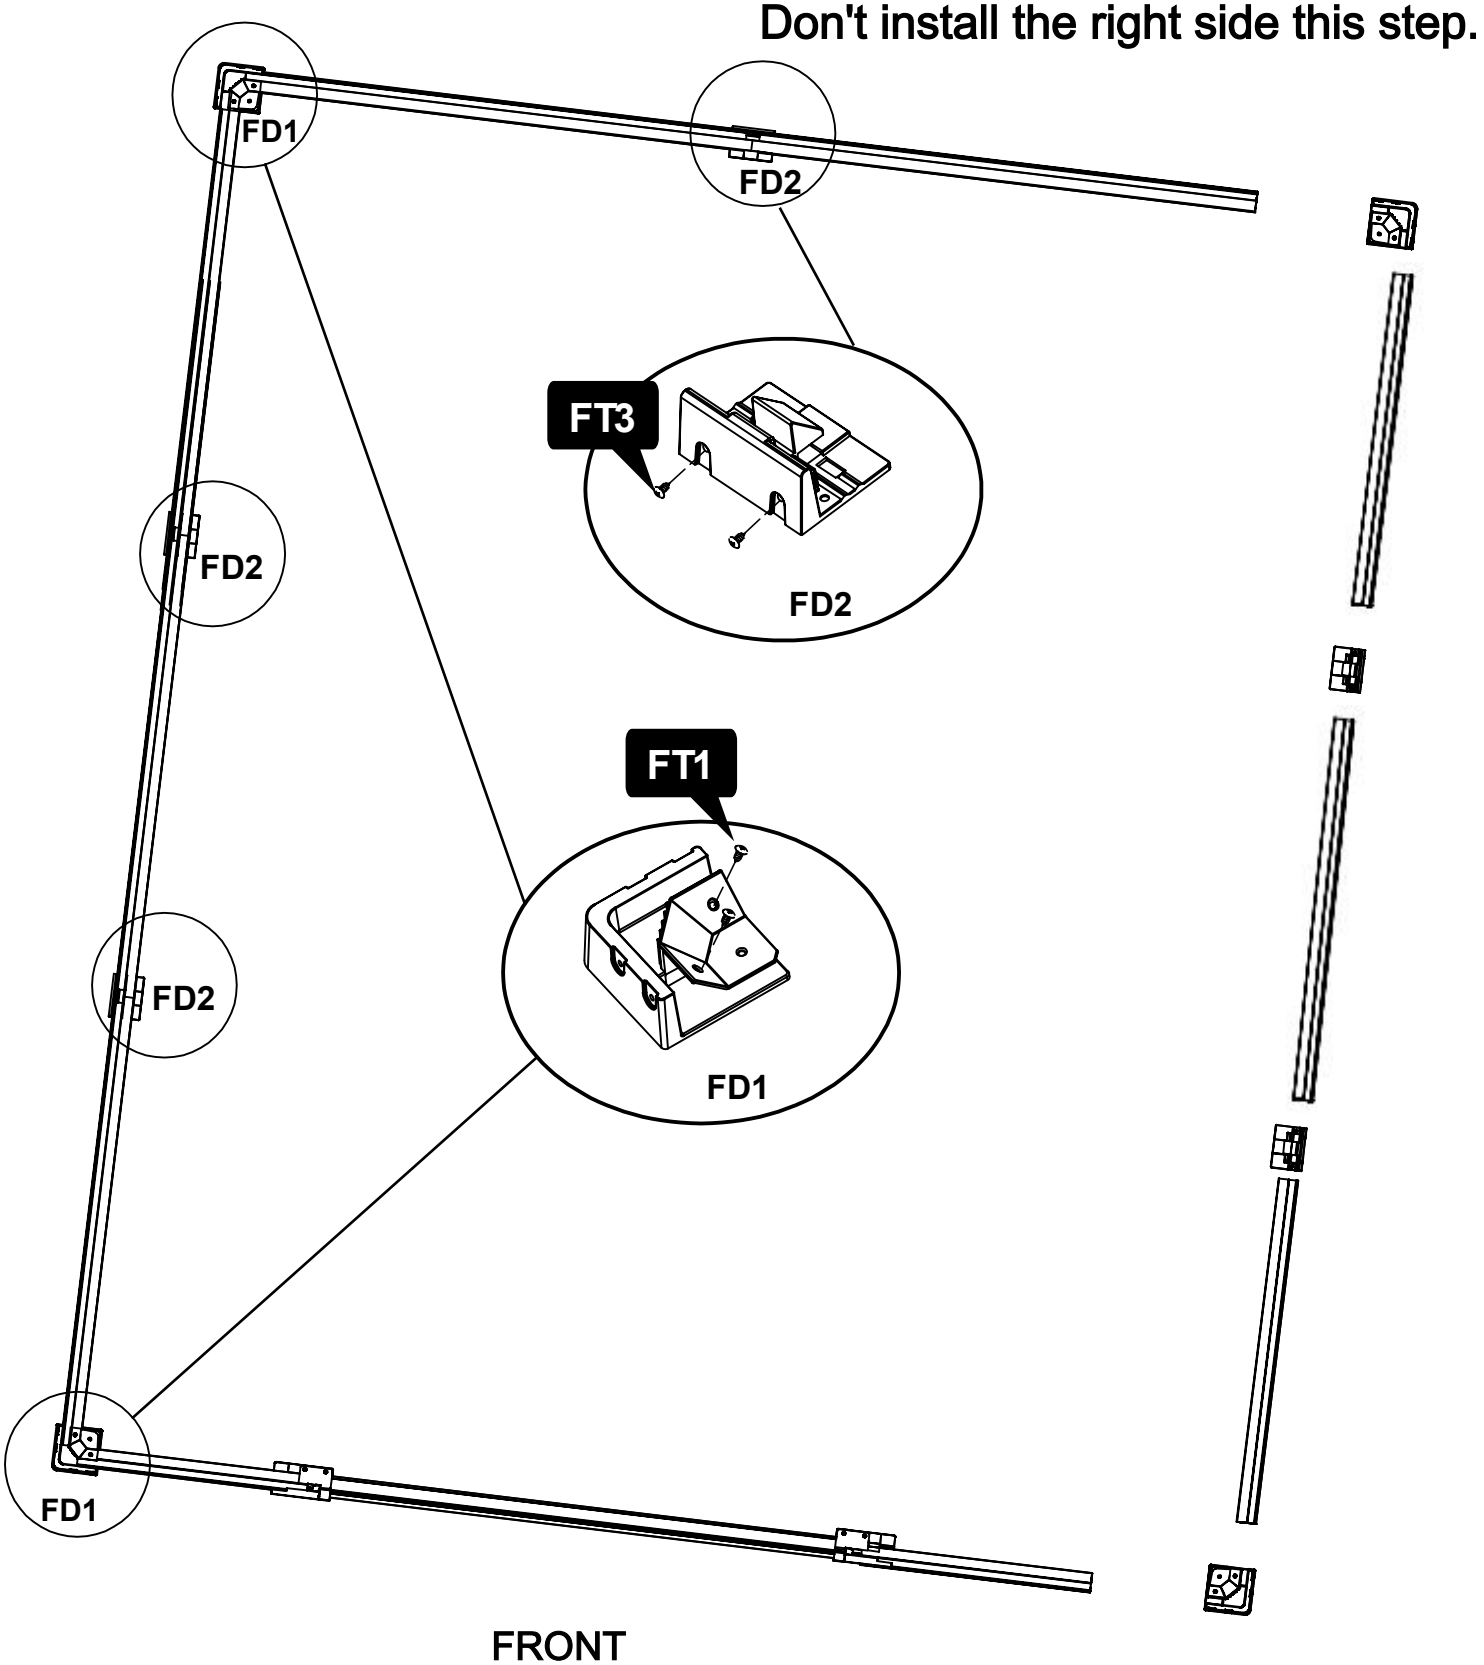


FRONT

3

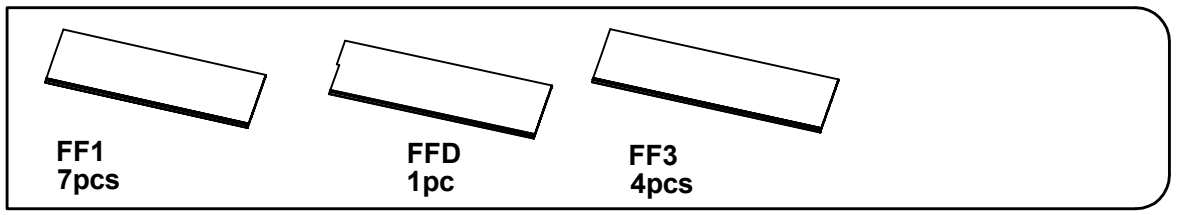

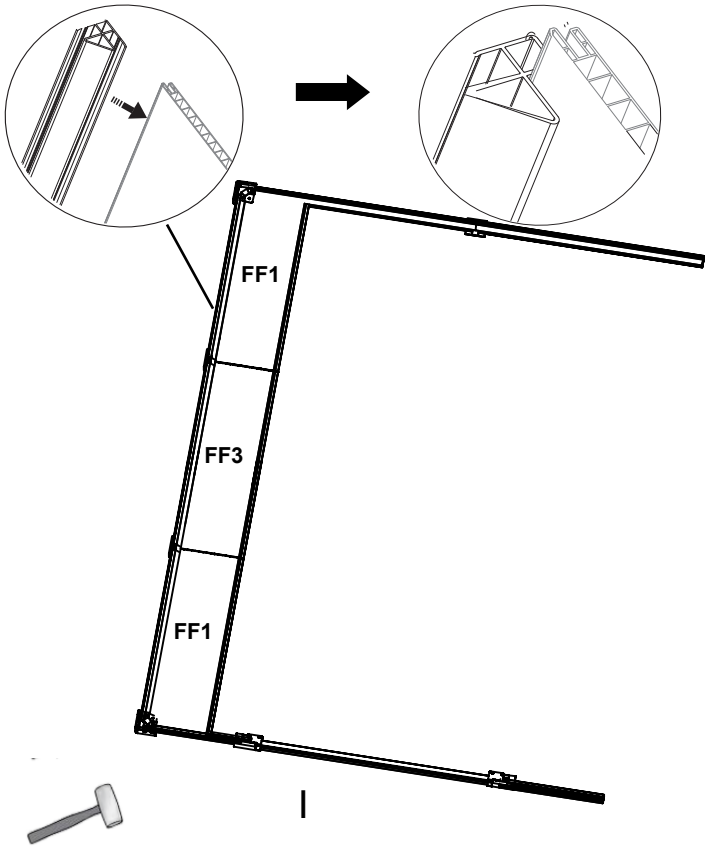



I

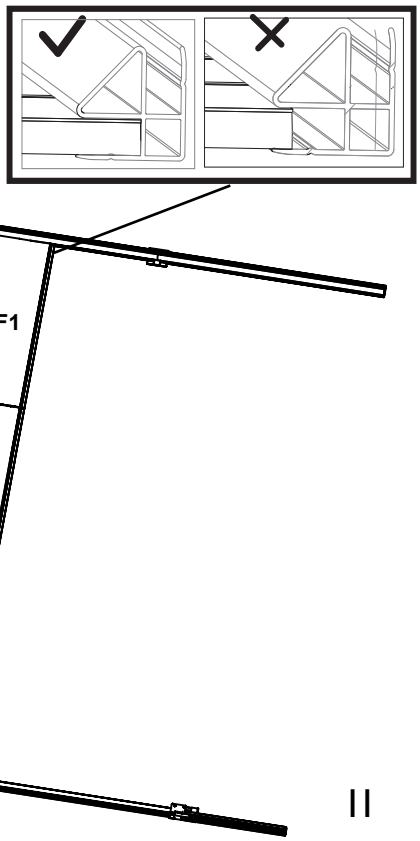


II

NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

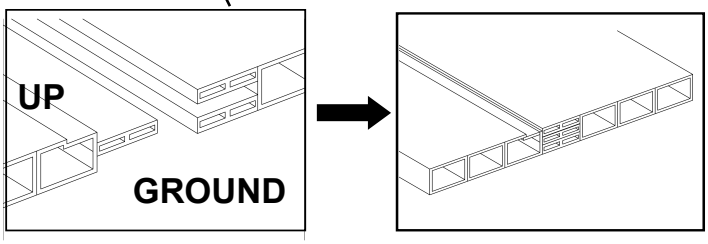

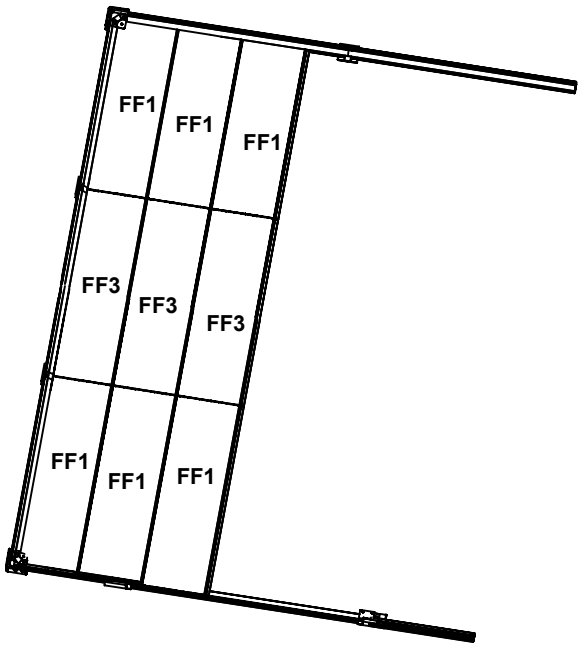



III

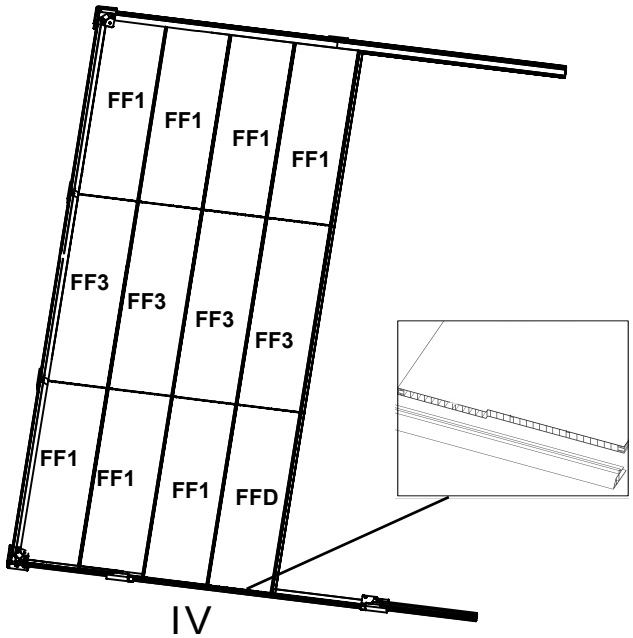


IV


4

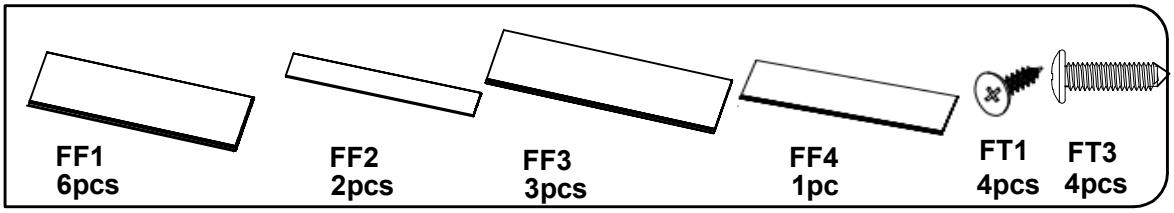
FF1
6pcs
FF2
2pcs
FF3
3pcs
FF4
1pc
FT1
4pcs
FT3
4pcs

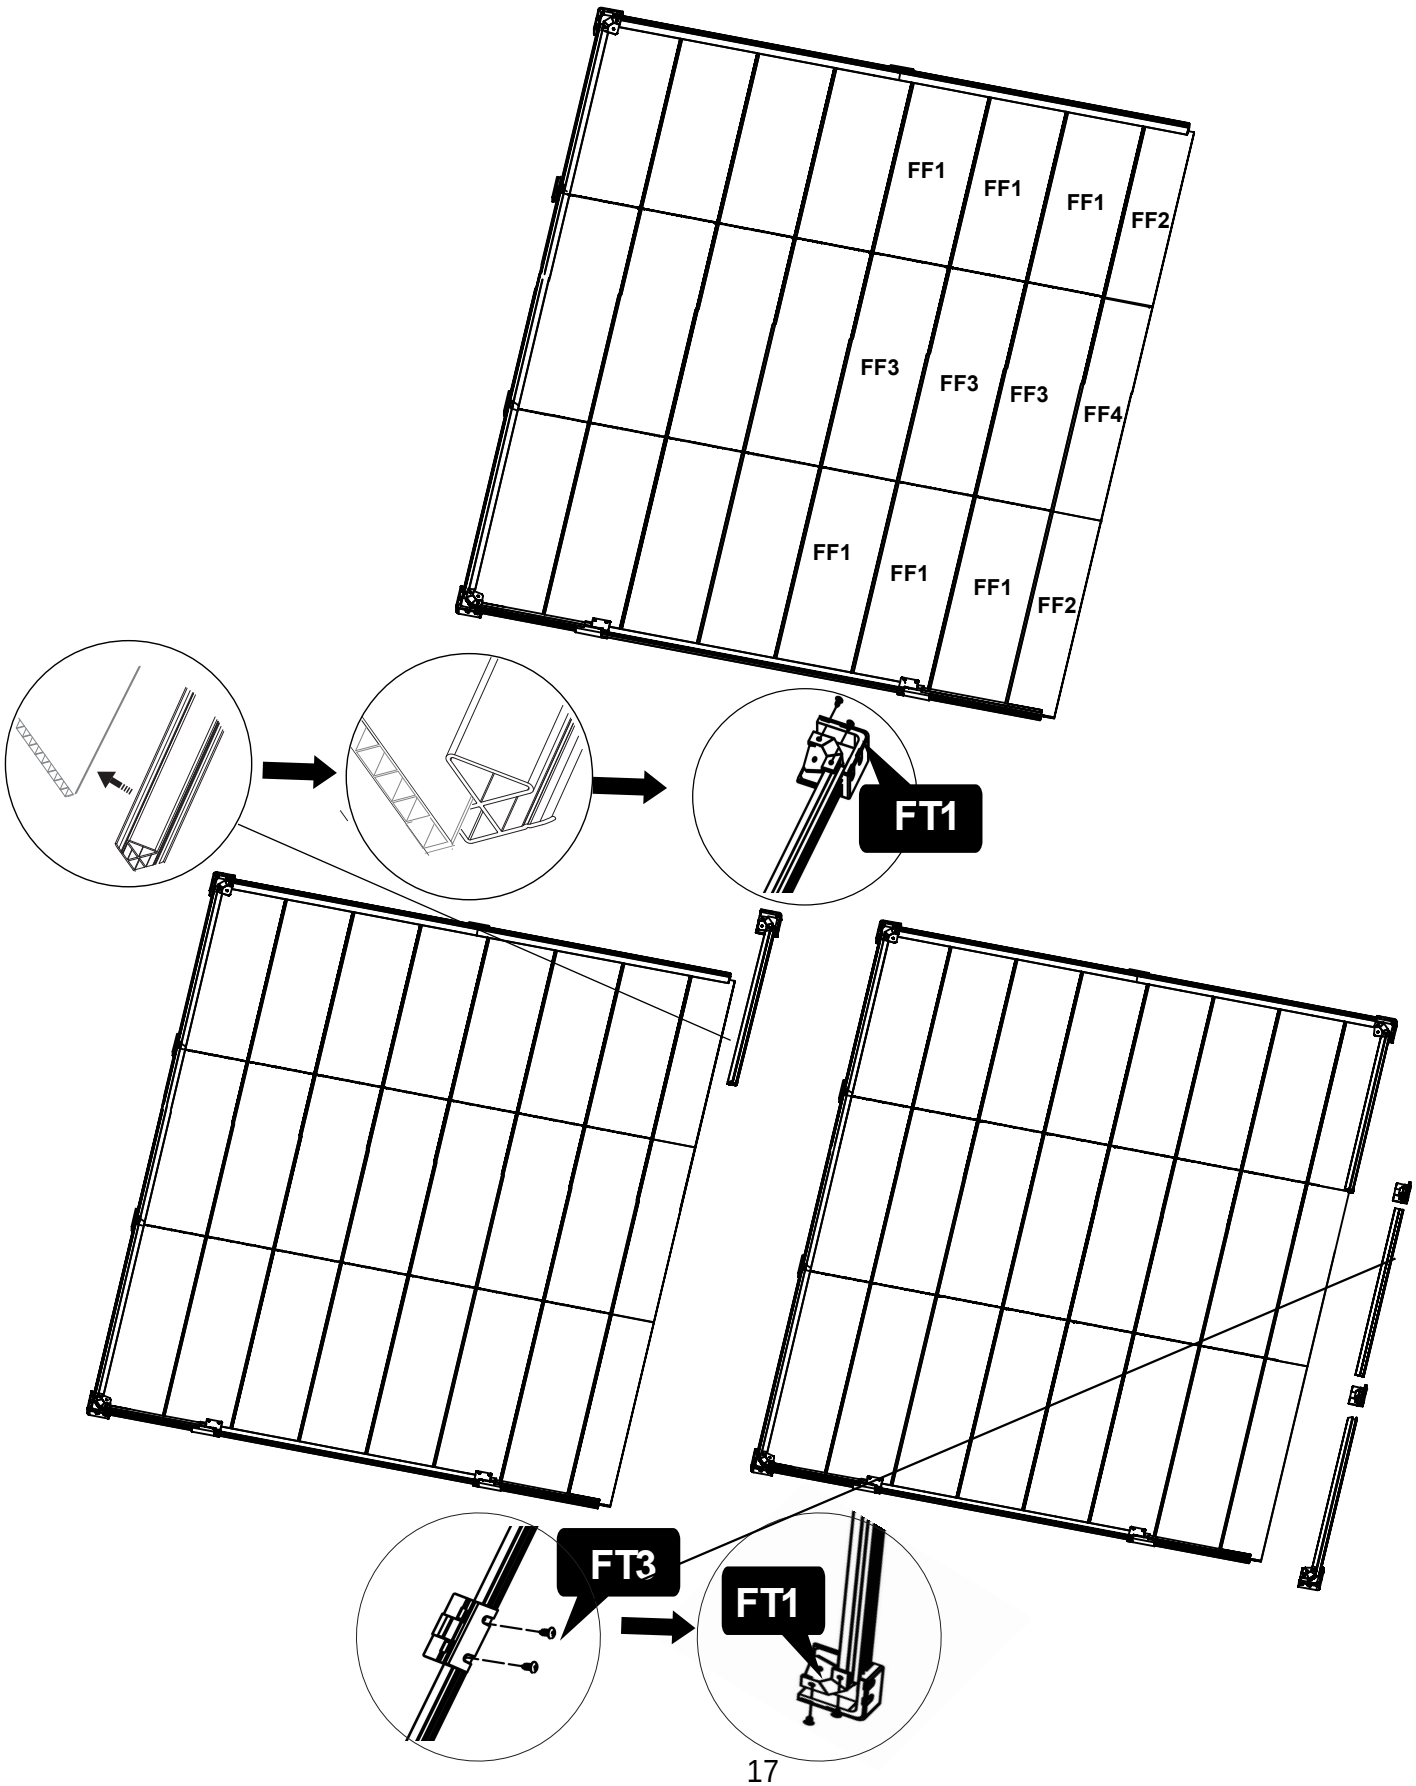

FF1
FF1
FF1
FF2
FF3
FF3
FF3
FF4
FF1
FF1
FF1
FF2
FT1
FT3
FT1


5

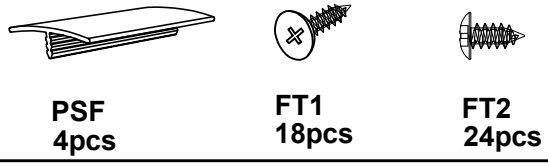

PSF
4pcs
FT1
18pcs
FT2
24pcs

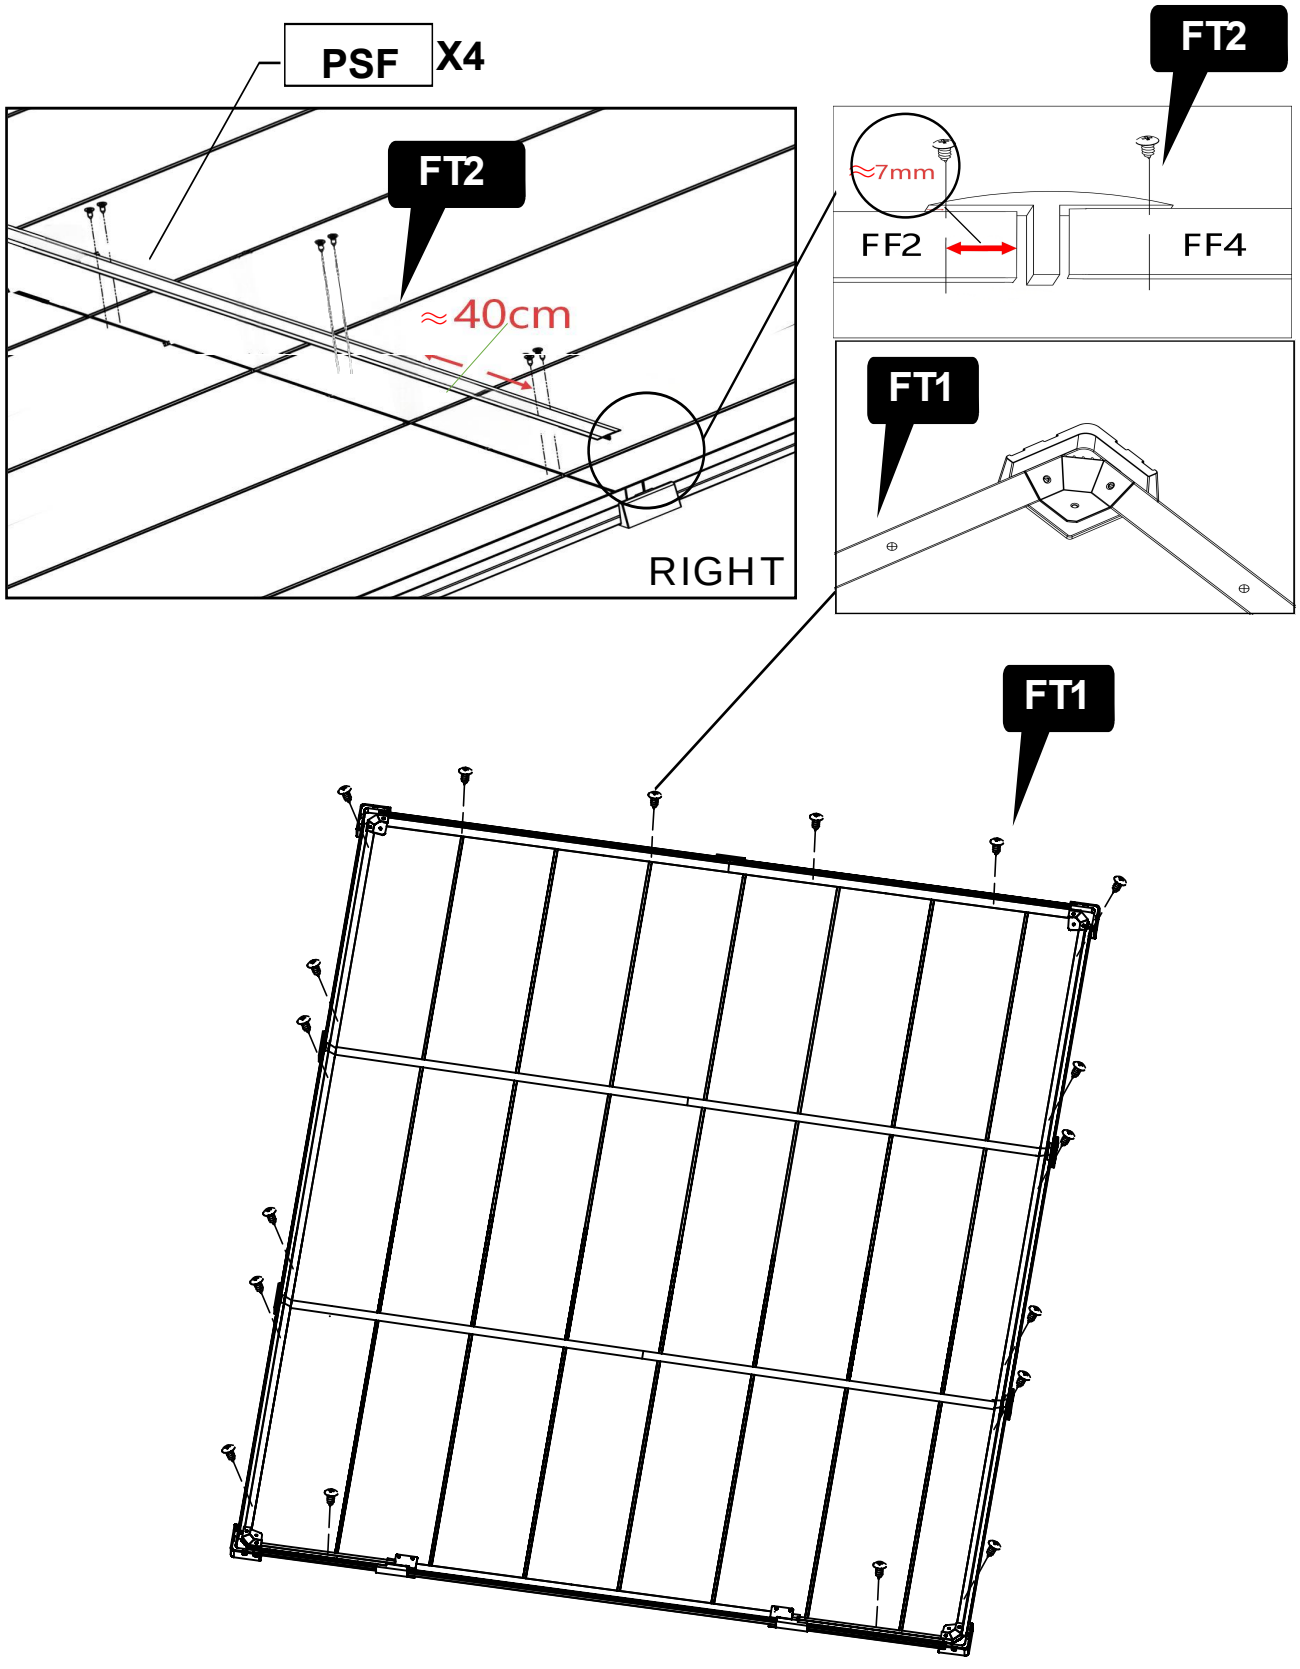

PSF
X4
FT2
≈40cm
RIGHT
FT2
≈7mm
FF2
FF4
FT1
FT1

6

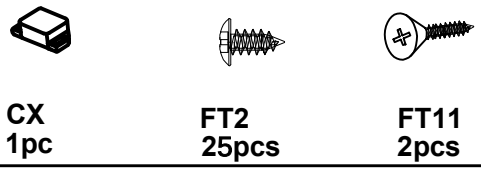


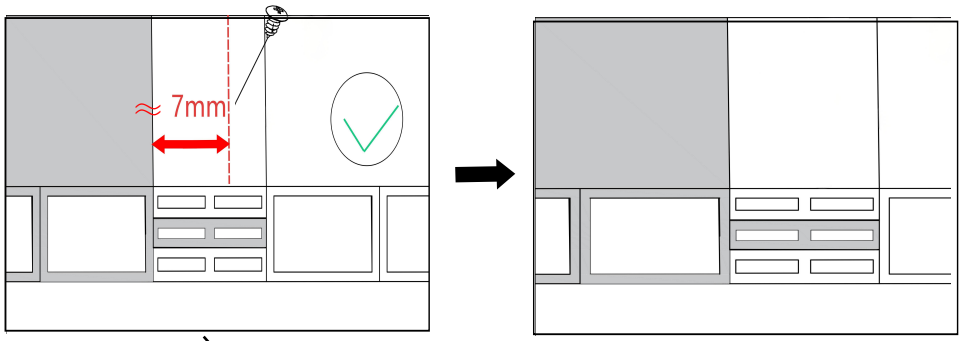


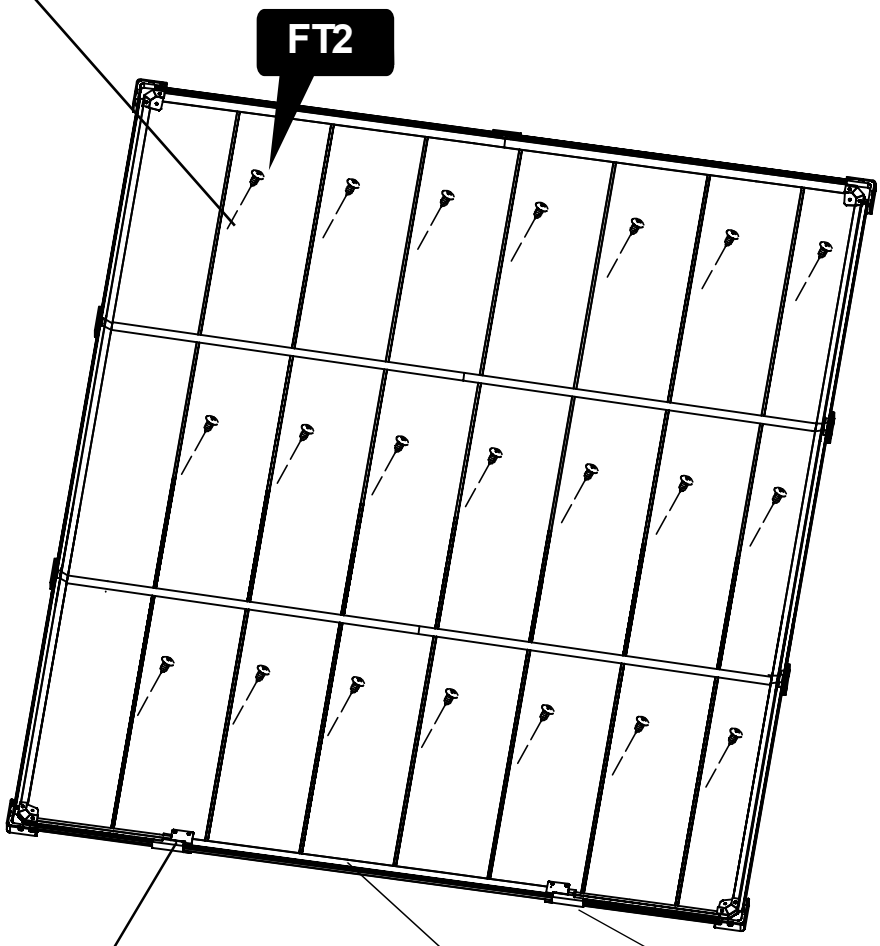

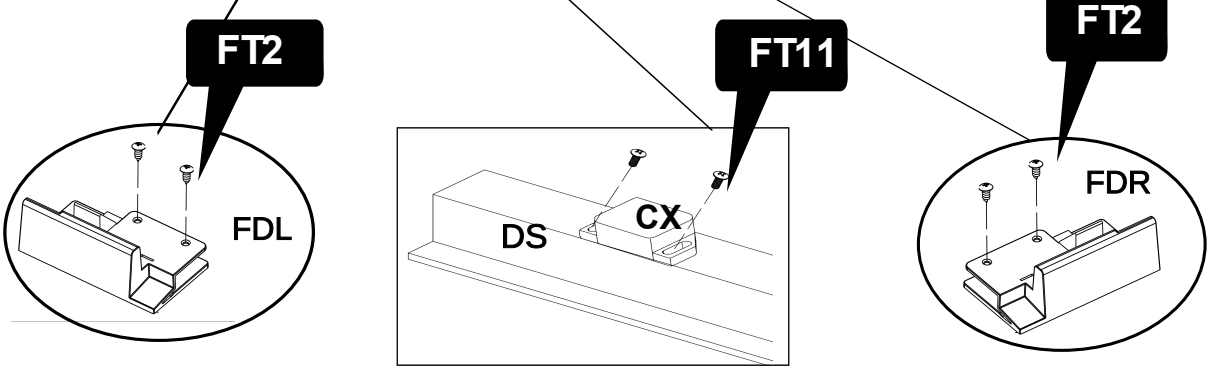


7

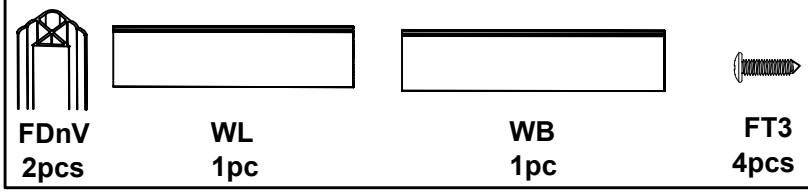

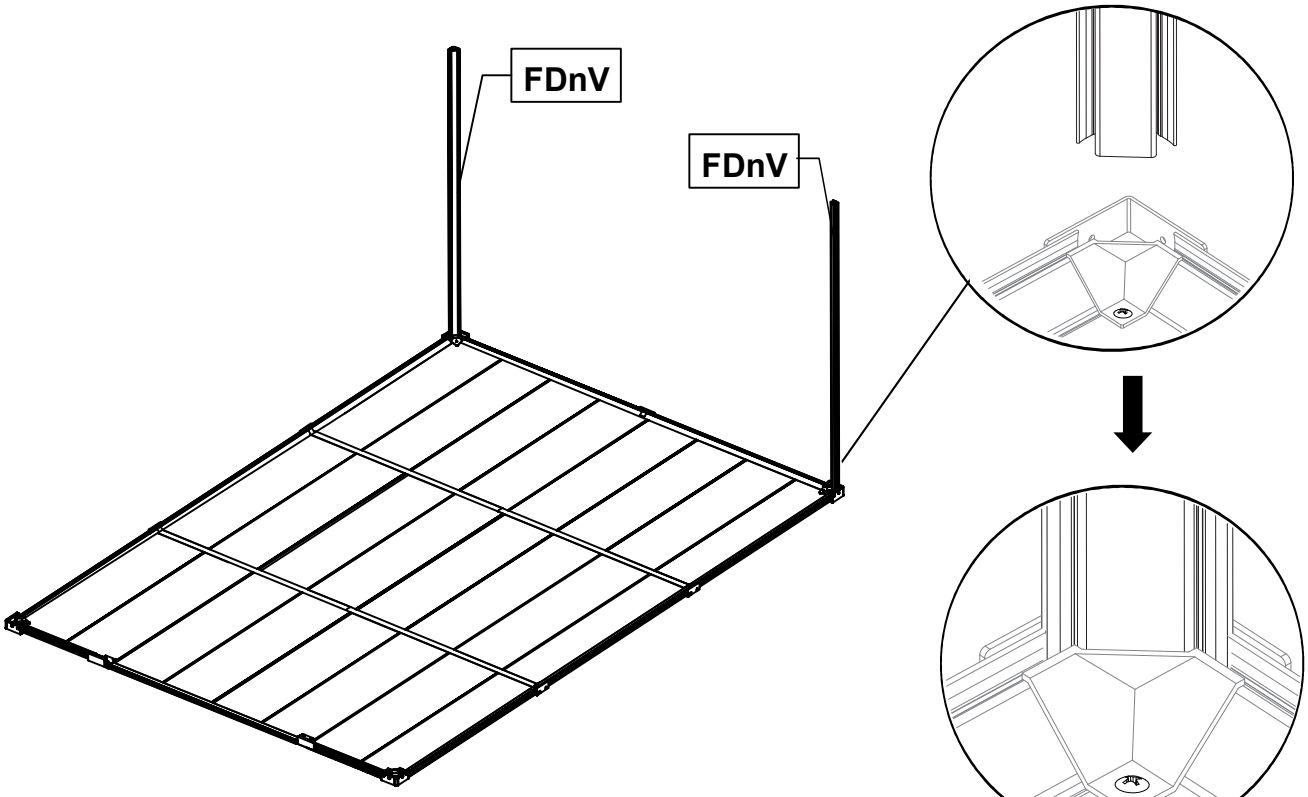


NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

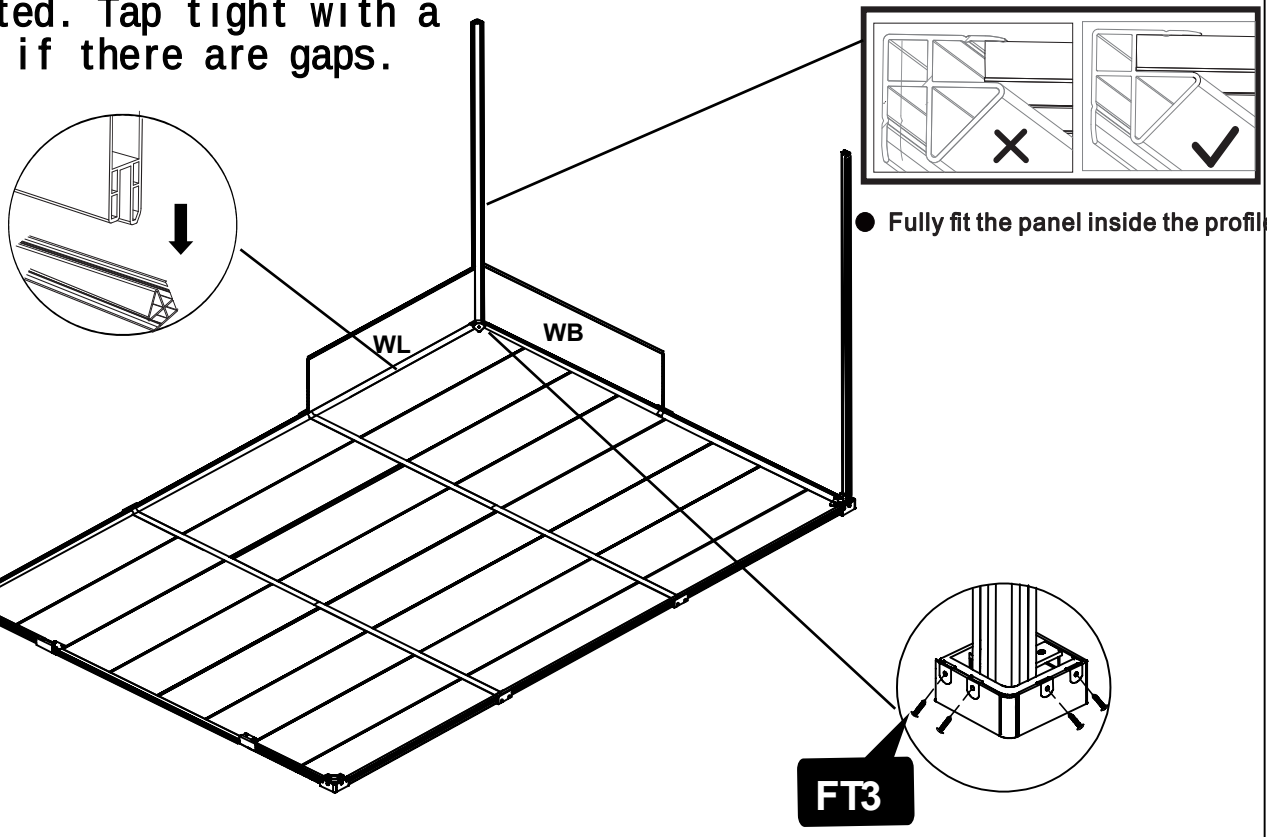


● Fully fit the panel inside the profile


8

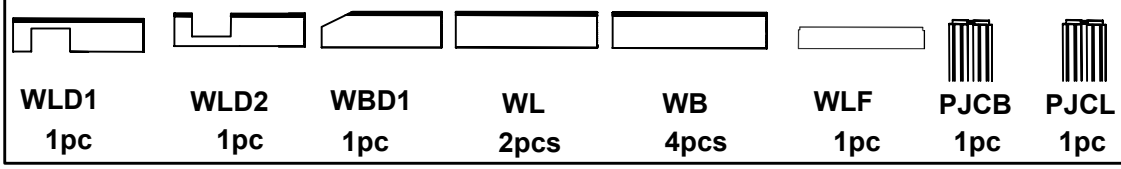


WLD1	WLD2	WBD1	WL	WB	WLF	PJCB	PJCL
1pc	1pc	1pc	2pcs	4pcs	1pc	1pc	1pc

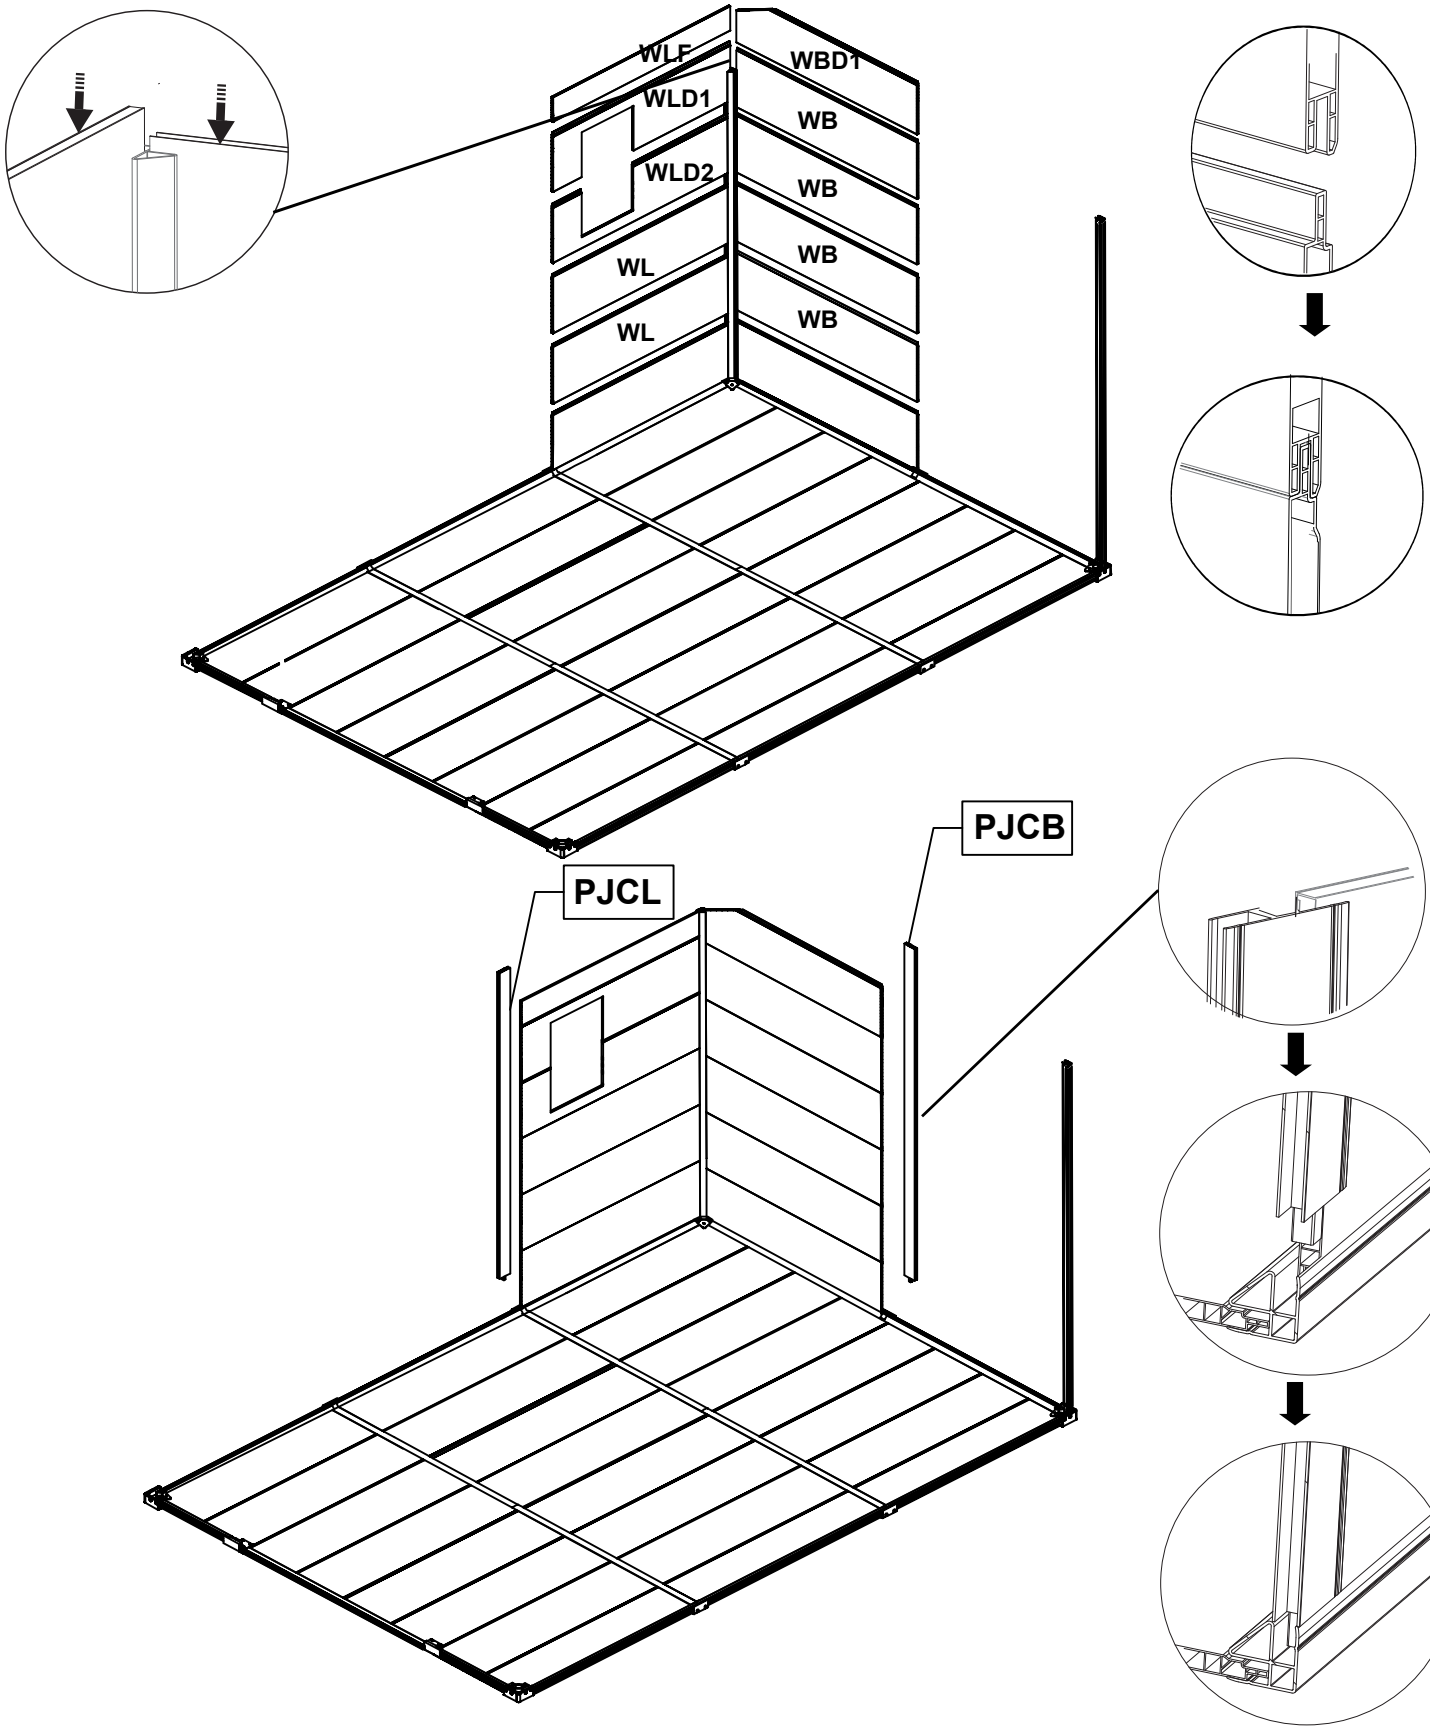


9

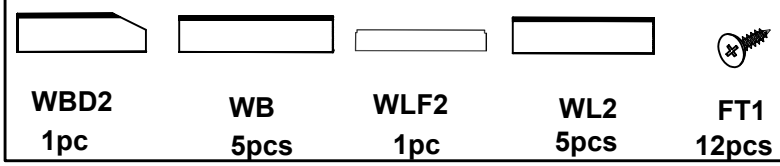



WBD2 1pc | WB 5pcs | WLF2 1pc | WL2 5pcs | FT1 12pcs

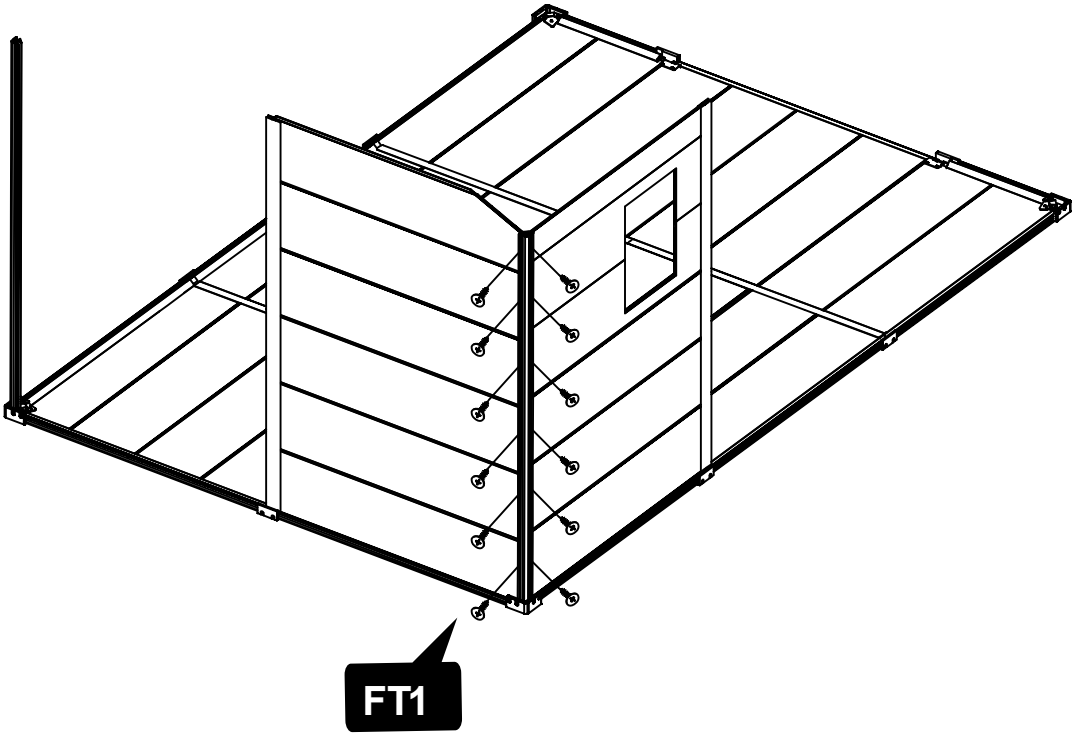


10

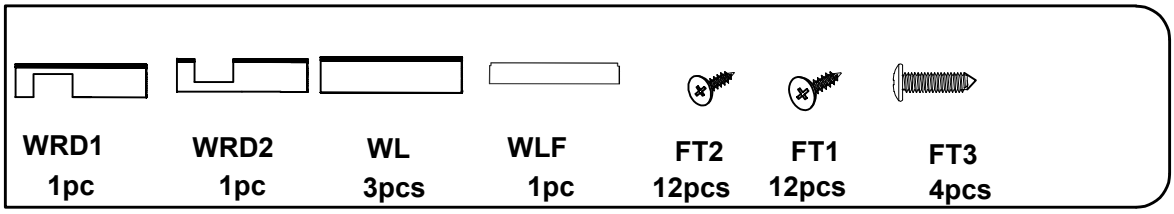
WRD1
1pc
WRD2
1pc
WL
3pcs
WLF
1pc
FT2
12pcs
FT1
12pcs
FT3
4pcs

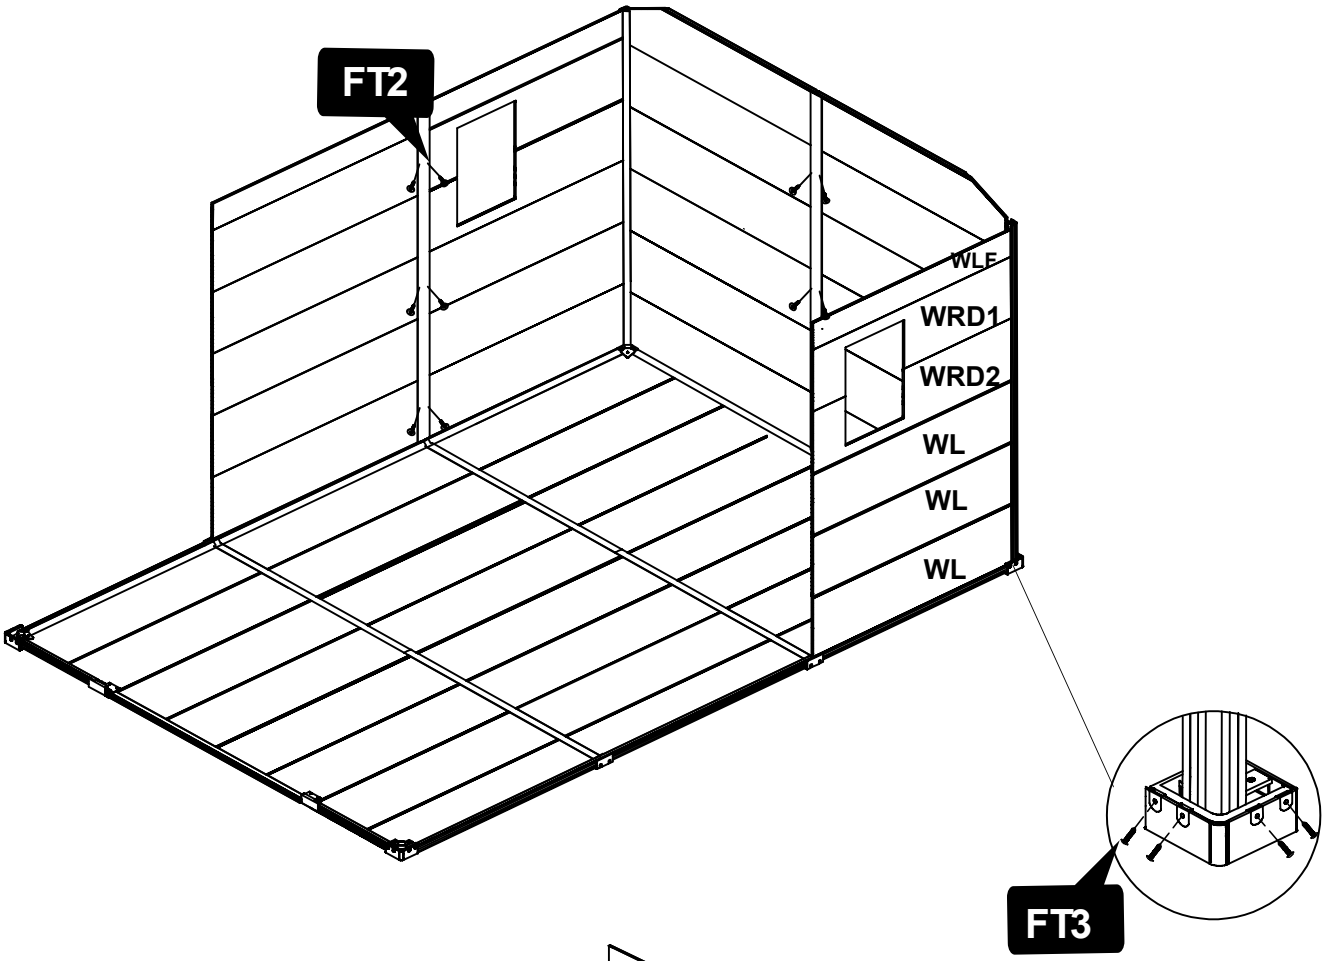

FT2
WLF
WRD1
WRD2
WL
WL
WL
FT3

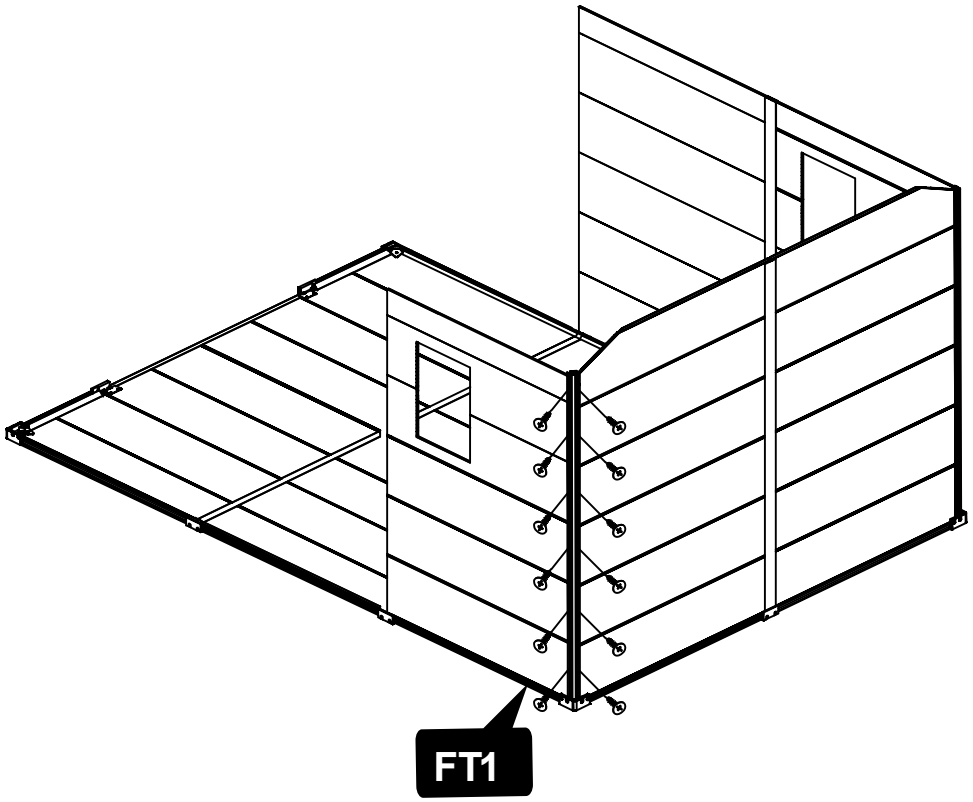
FT1

11




WL2
5pcs




WLF2
1pc




PJCL
3pcs

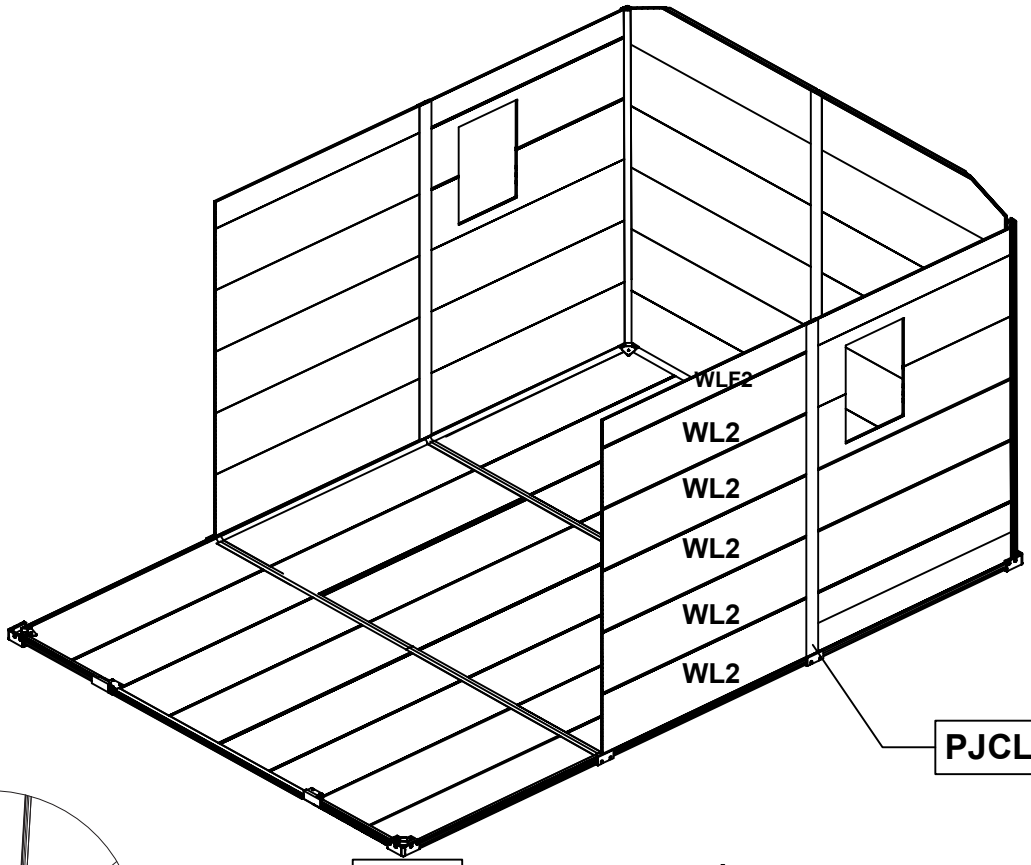


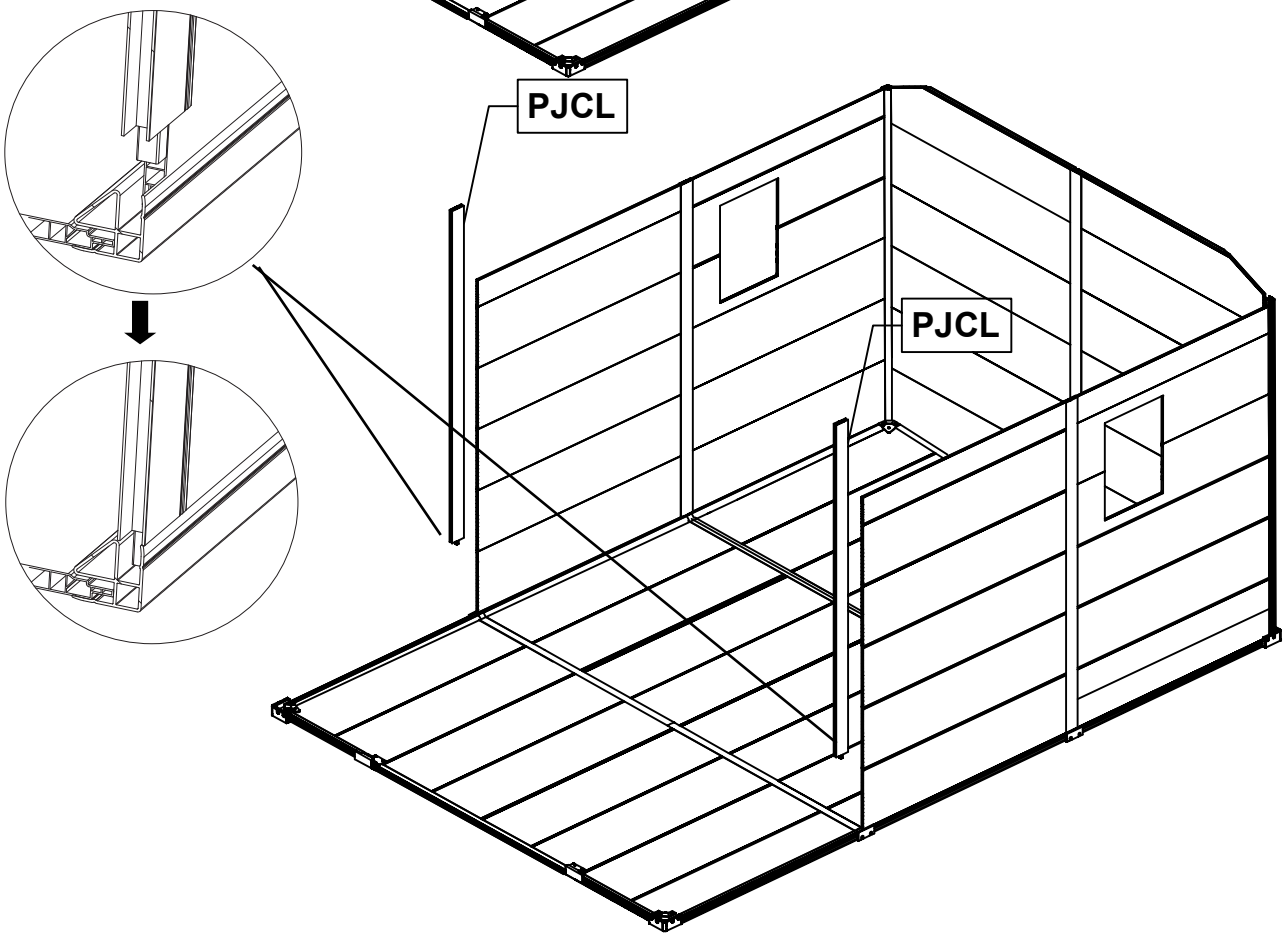


12



FDnV
2pcs


WL
10pcs


WLF
2pcs


FT2
18pcs

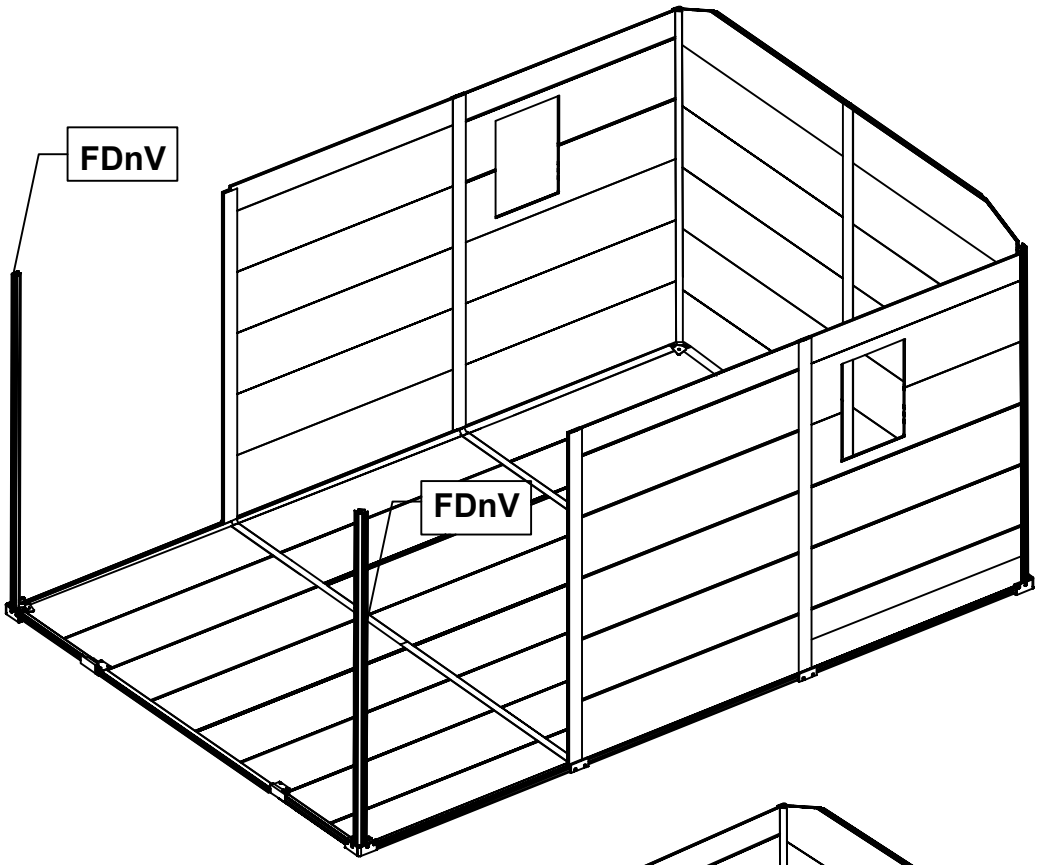


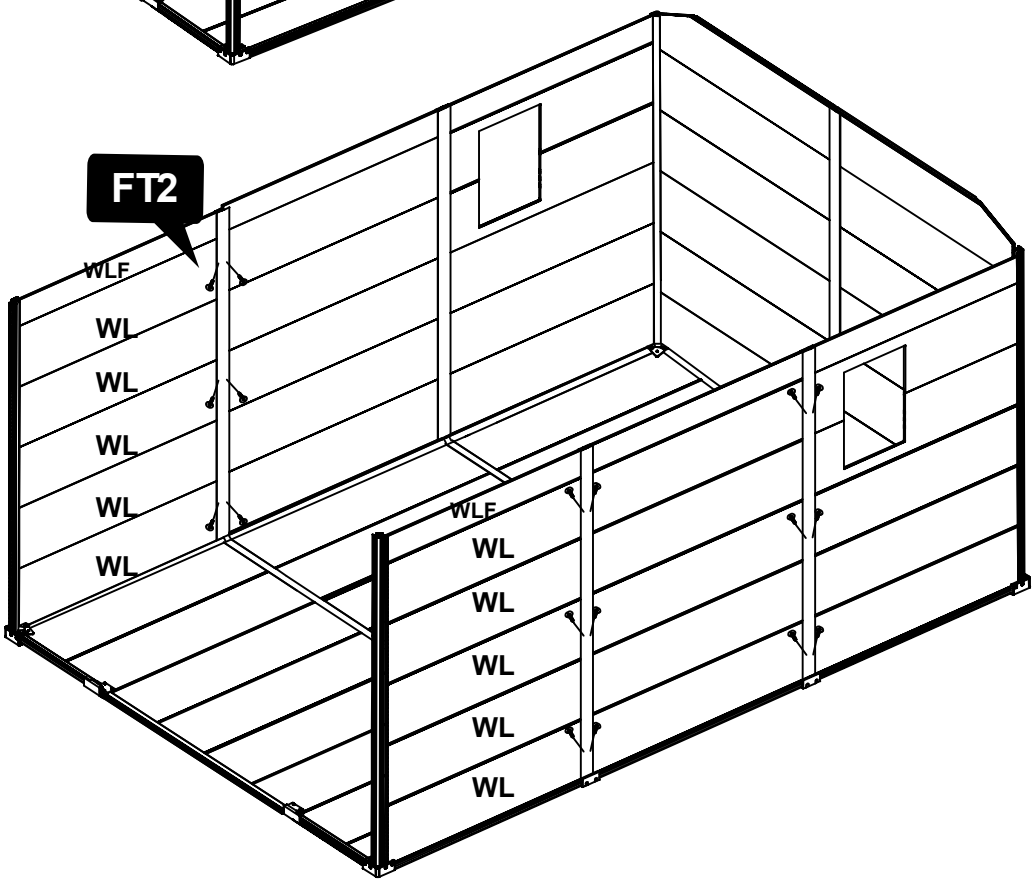


13





WFD1	WFD2	WF	WFF	FT1	FT3
1pc	1pc	8pcs	2pcs	24pcs	8pcs

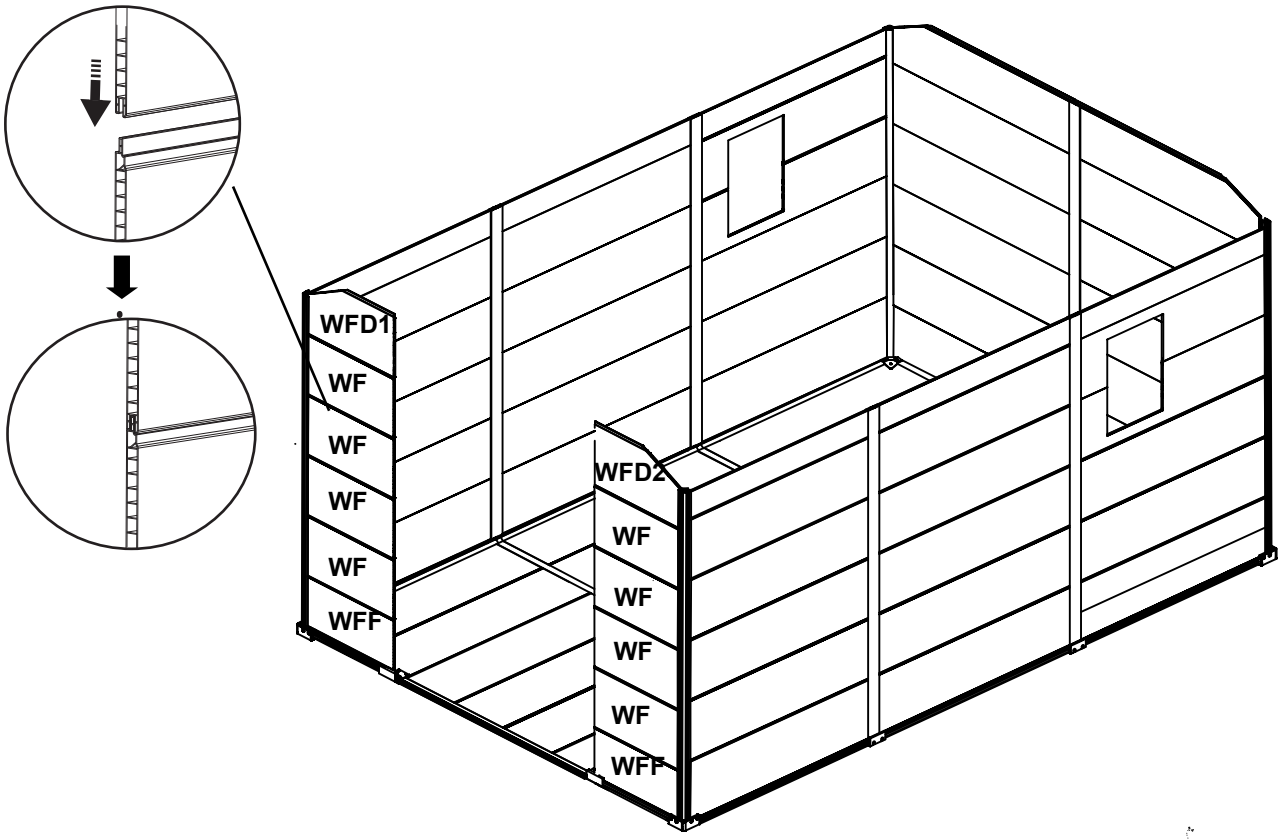

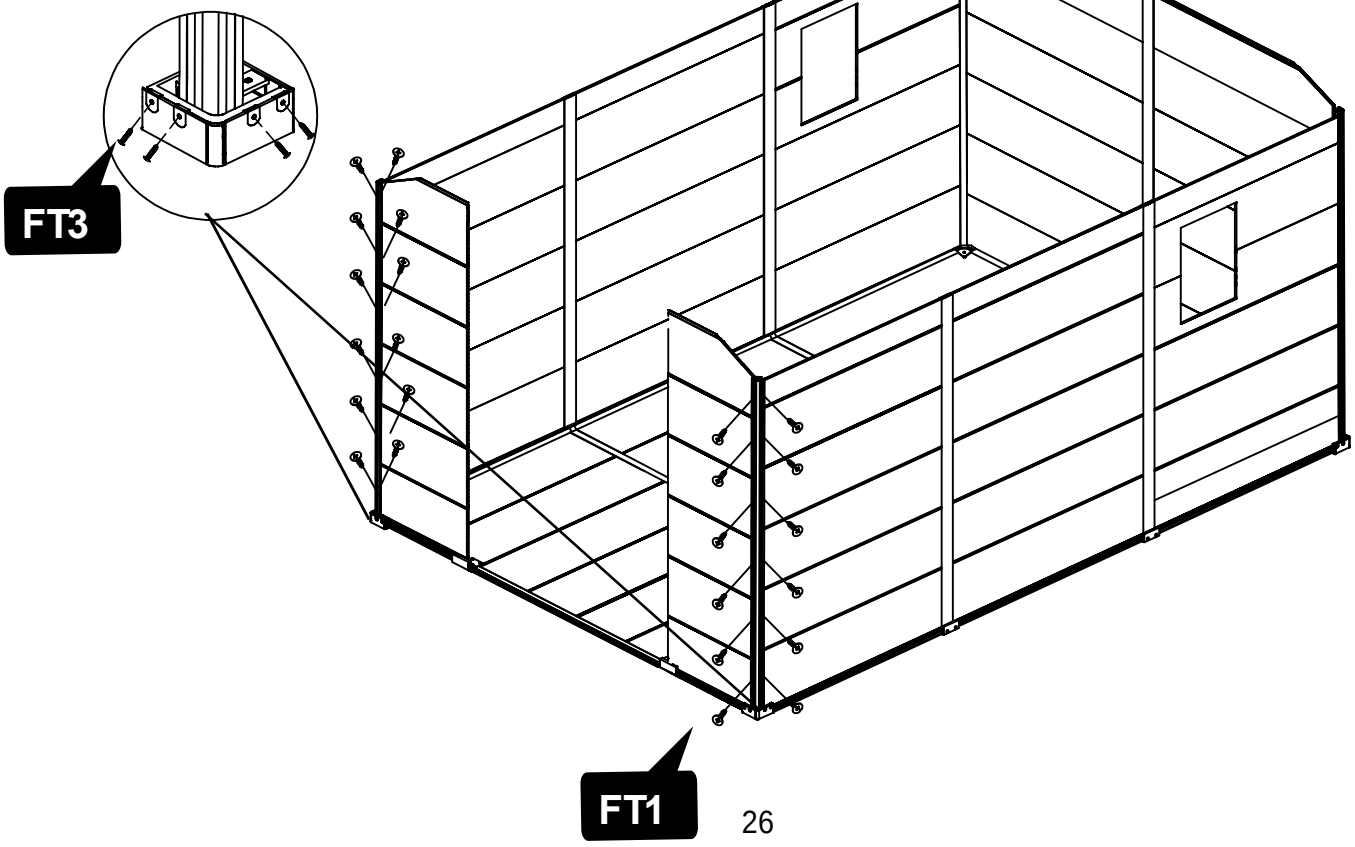


14


DAL
1pc


DAR
1pc


FT2
6pcs

Insert DAL and DAR fully to the bottom, aligned evenly.

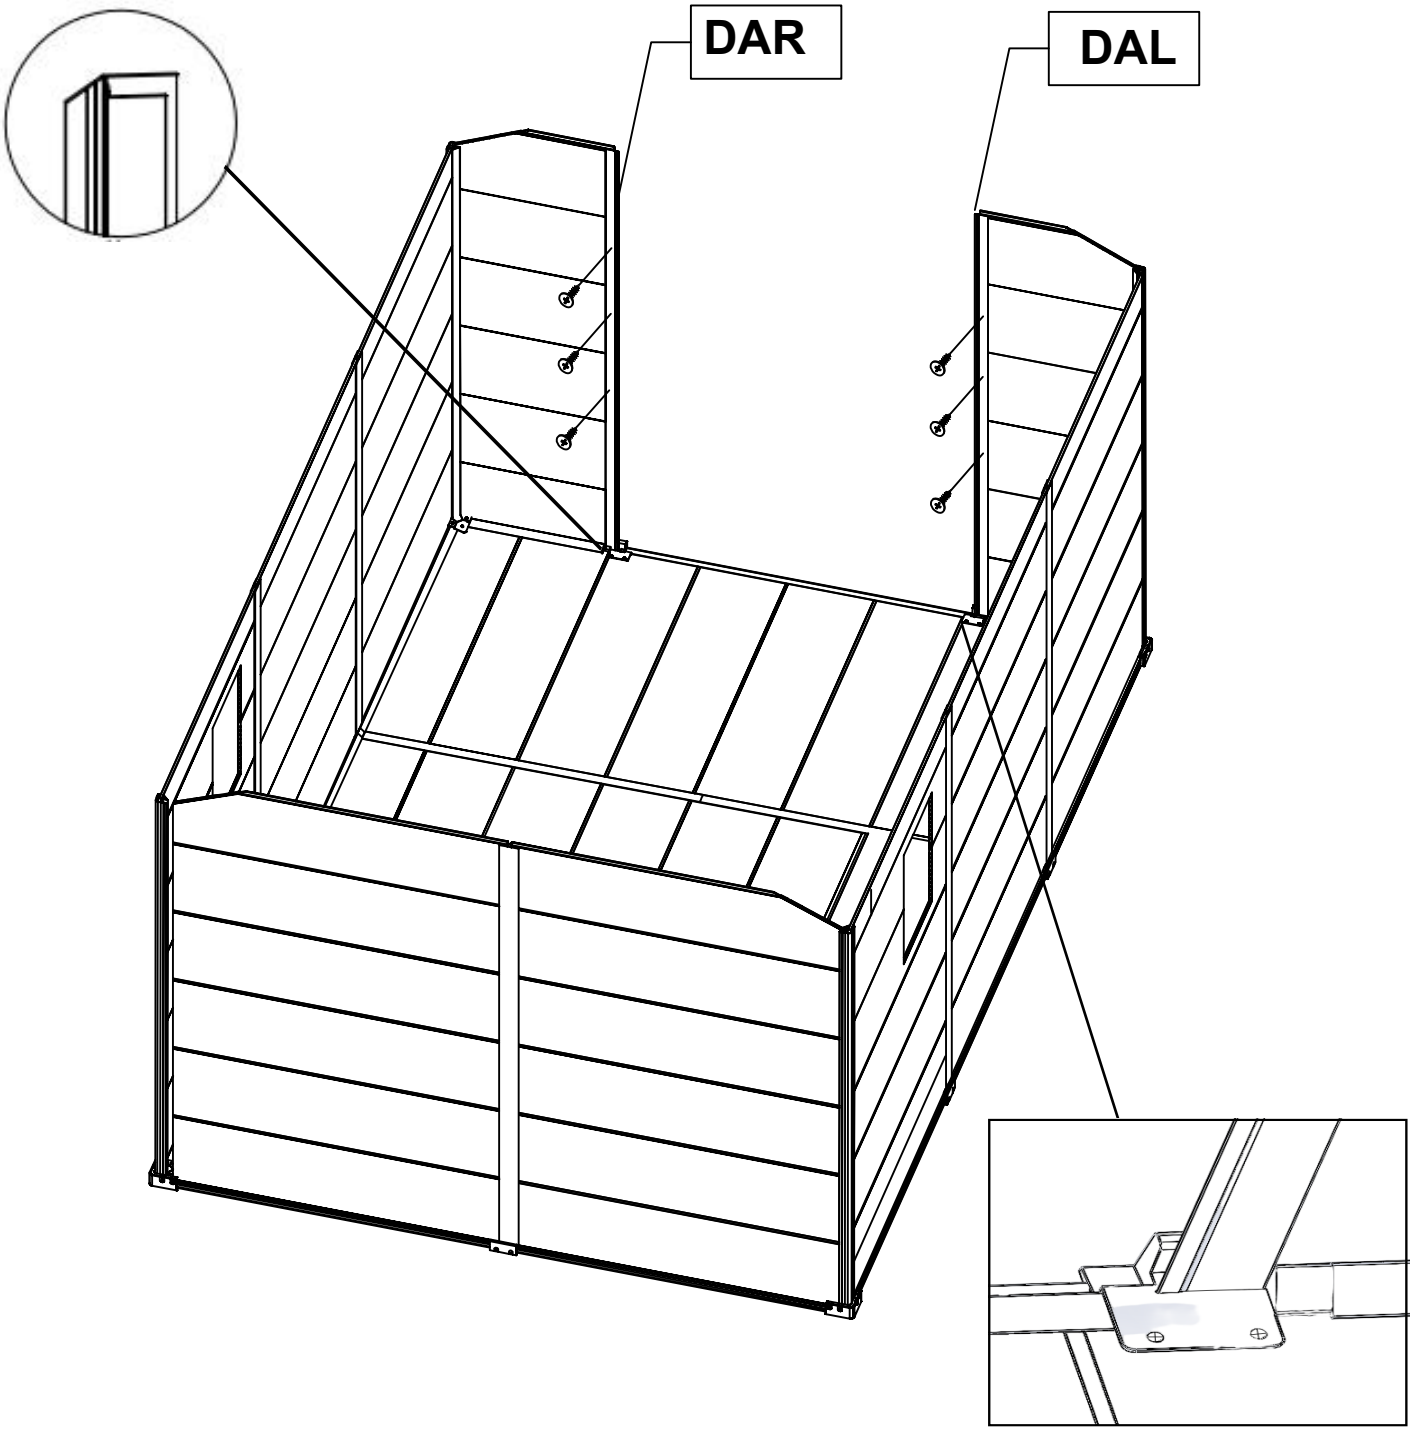


15


DW-OUT
2pcs



DW-IN
2pcs


WIR10.PC
2pcs


FT2
16pcs

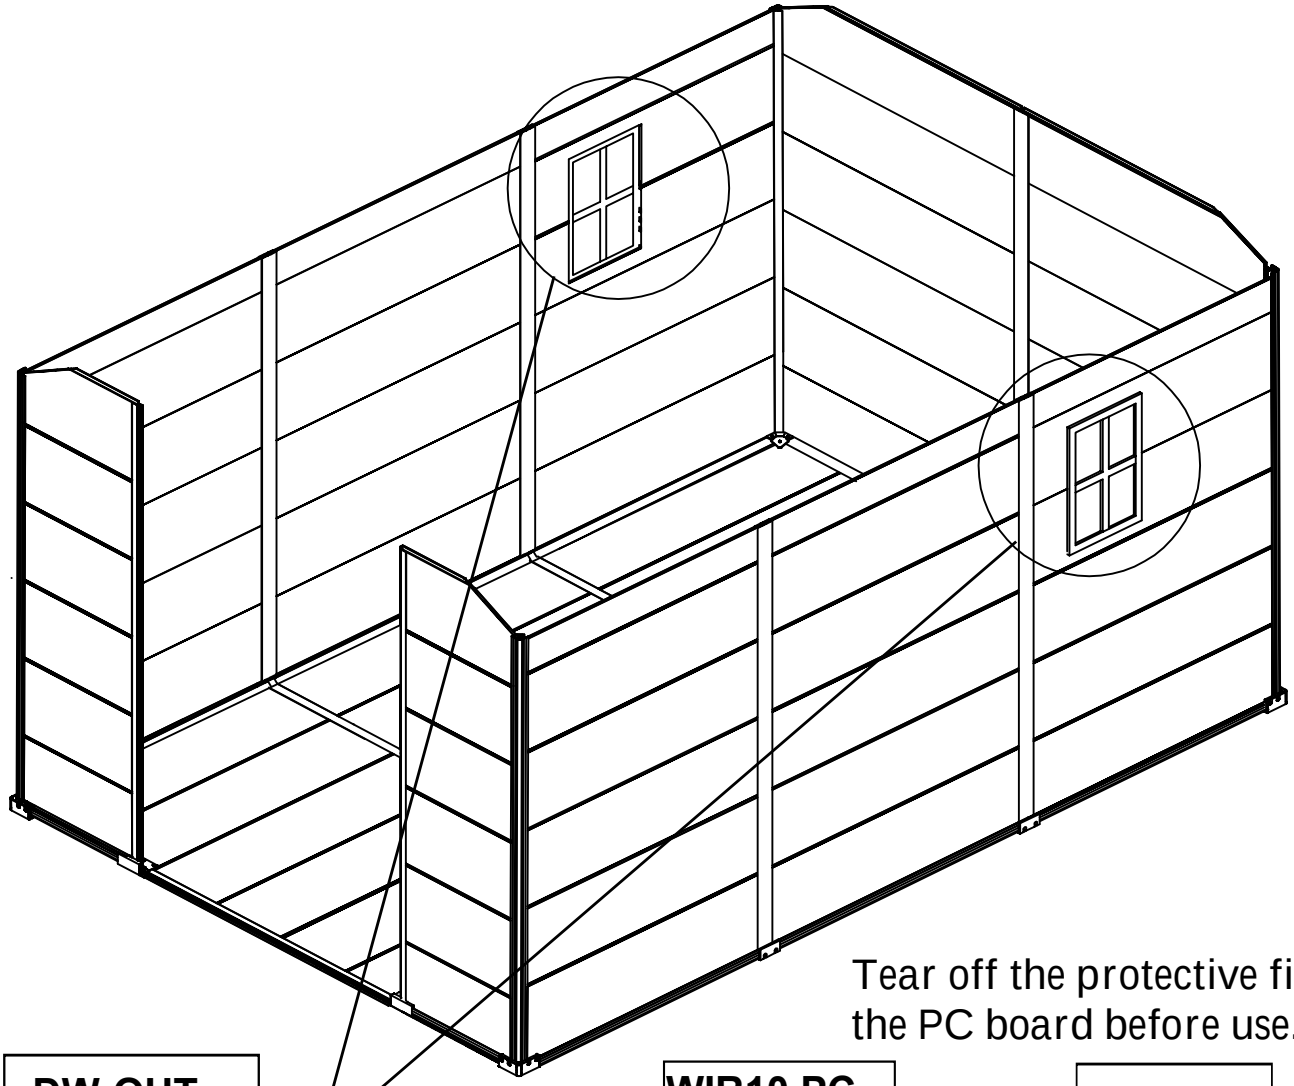

Tear off the protective film of the PC board before use.

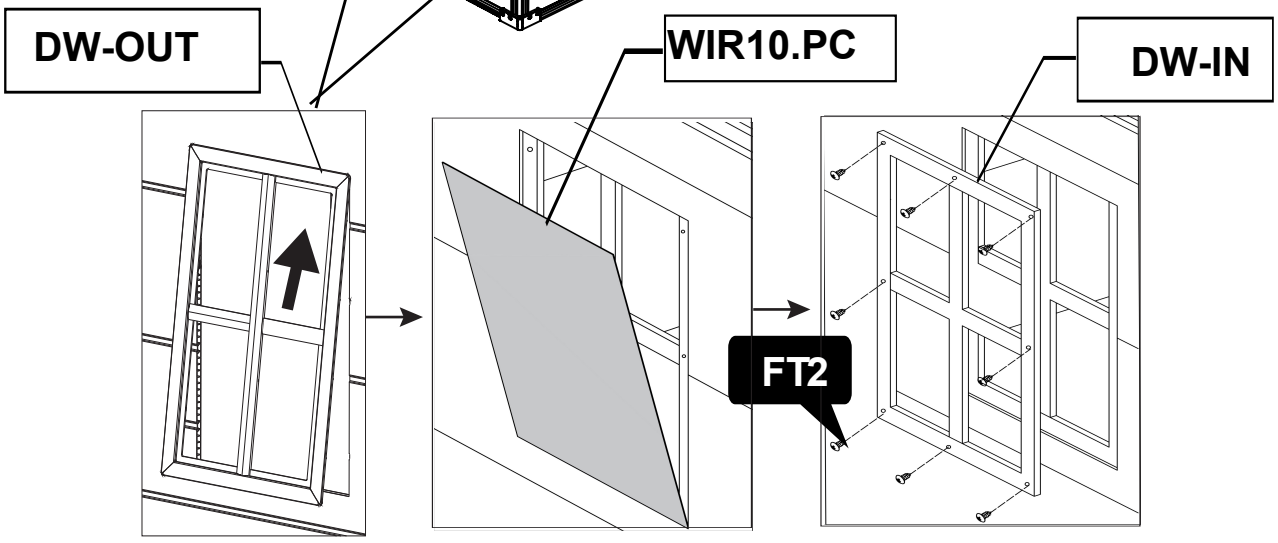



Two-person inside-outside coordination required.

16





FT3
18pcs

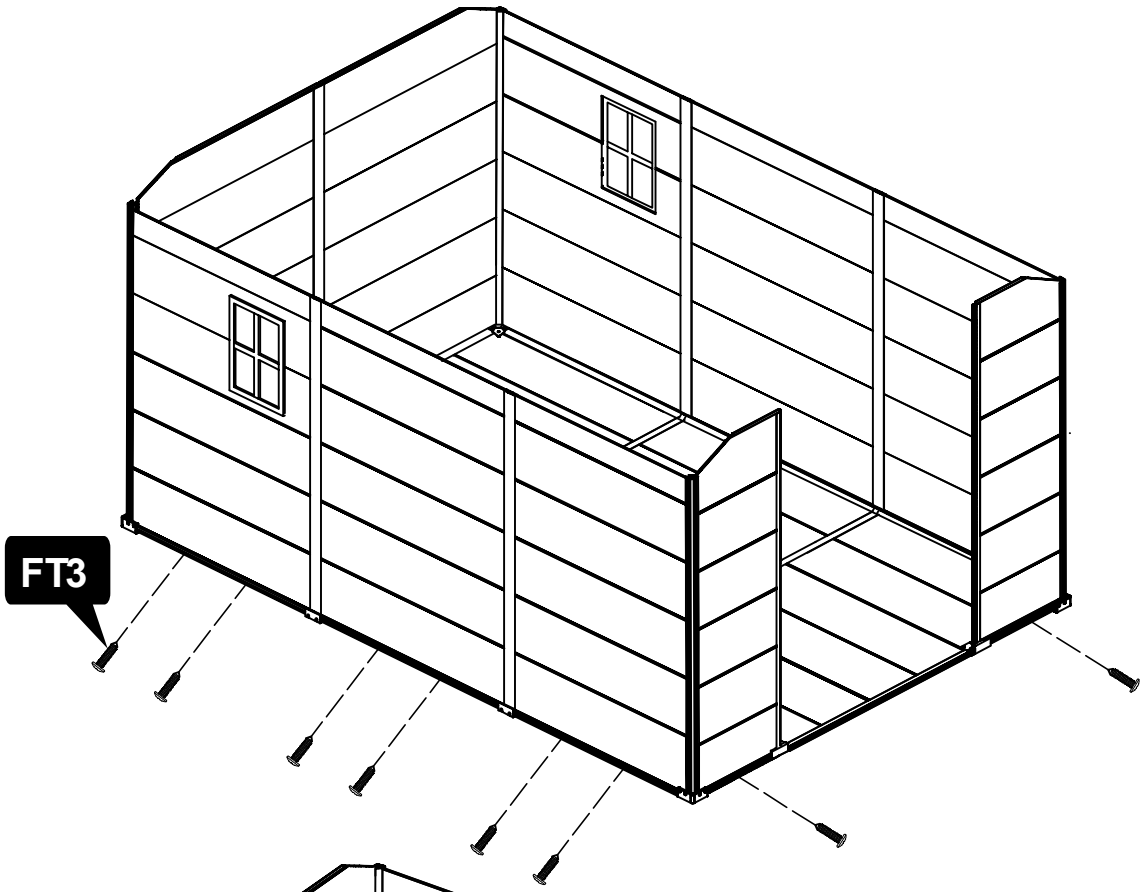

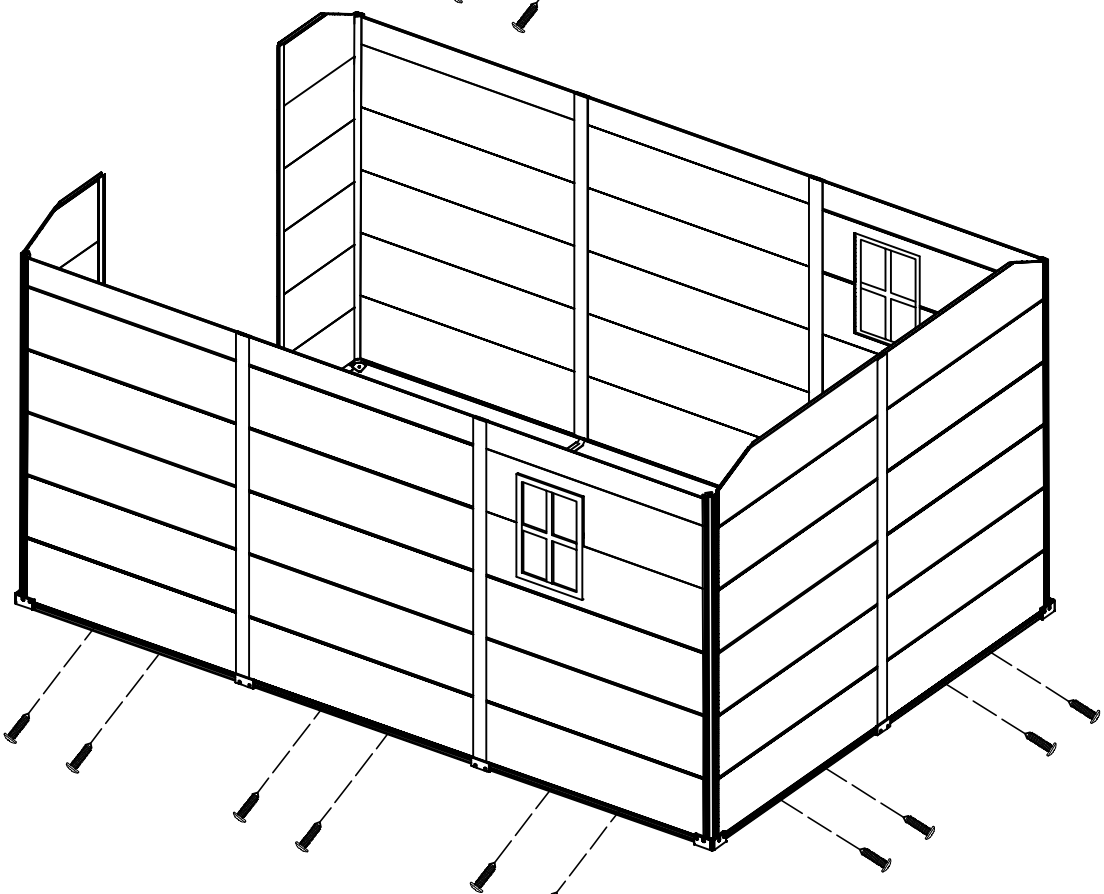


17

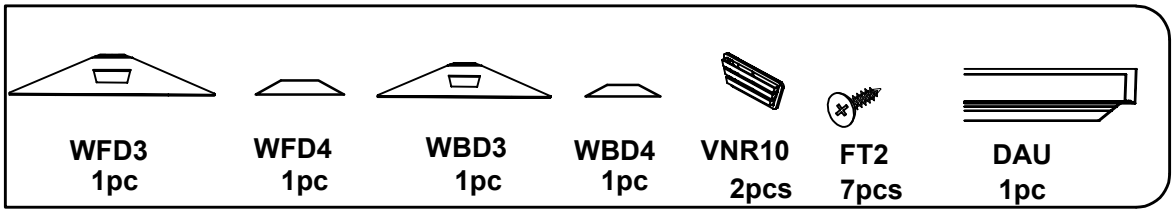
WFD3
1pc
WFD4
1pc
WBD3
1pc
WBD4
1pc
VNR10
2pcs
FT2
7pcs
DAU
1pc

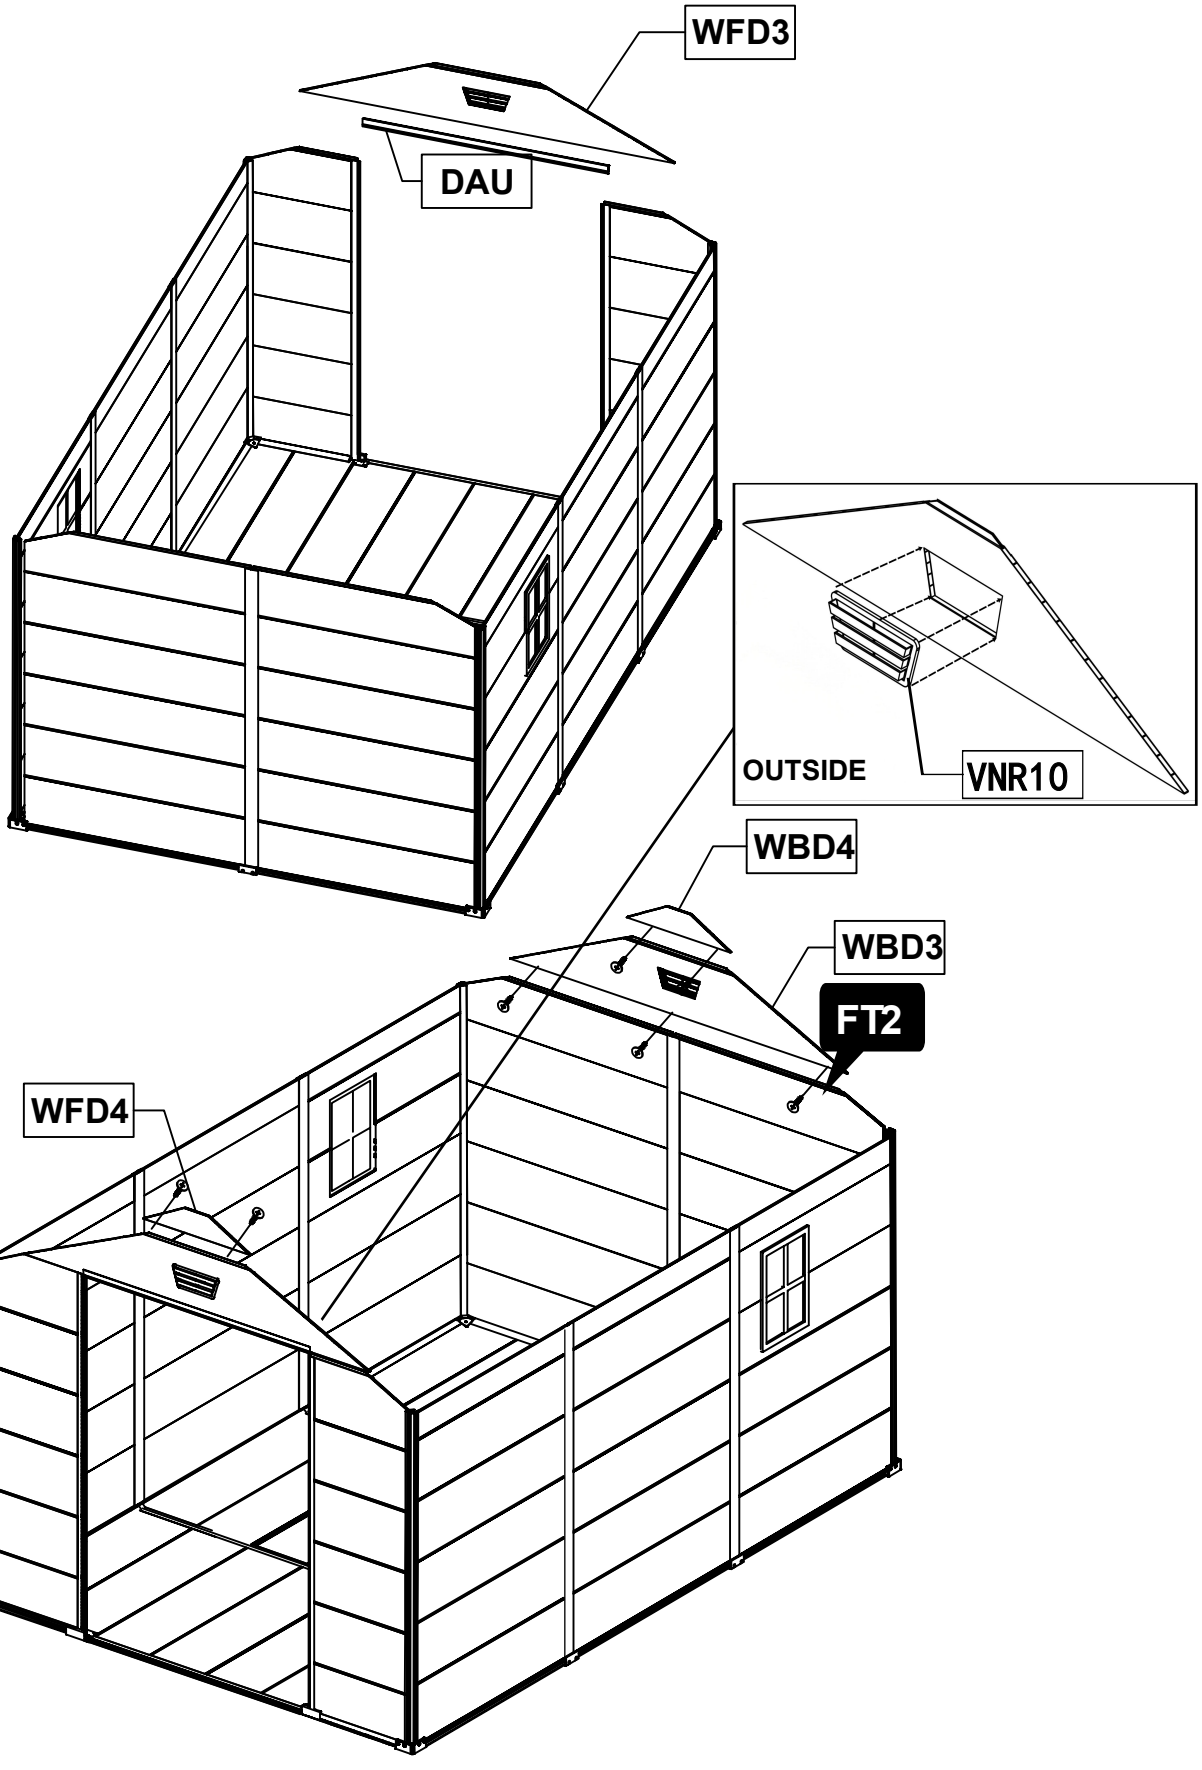

WFD3
DAU
OUTSIDE
VNR10
WBD4
WBD3
FT2
WFD4


18



HD1
2pcs


FT1
8pcs



FT2
1pc

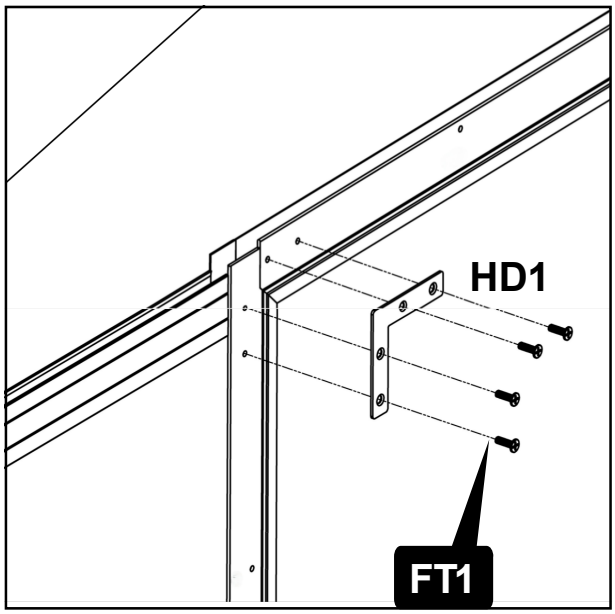

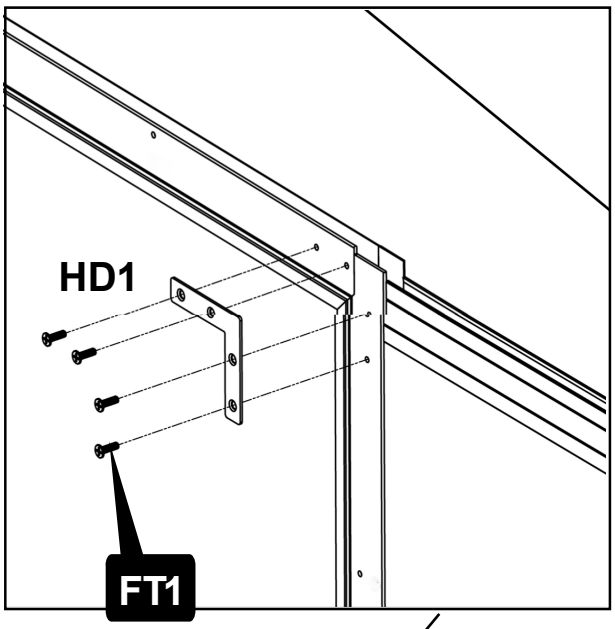


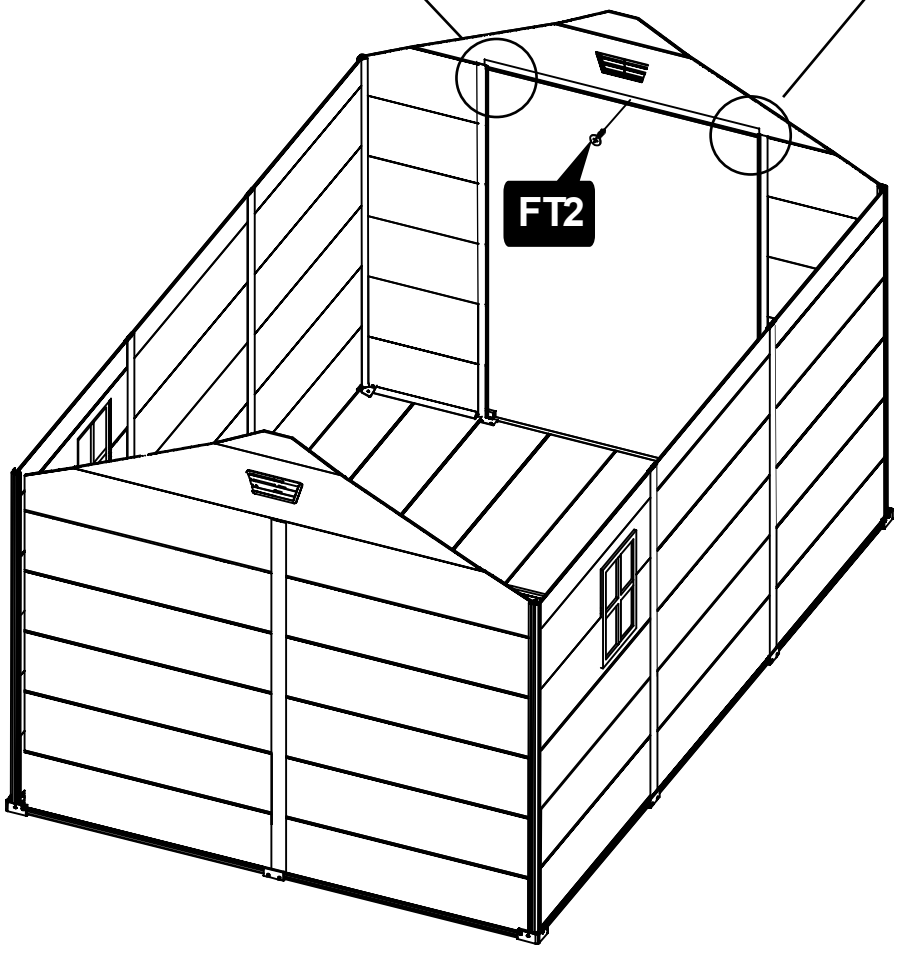


19

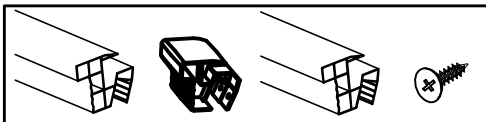


R10L 4pcs | RS 4pcs | R10L1 2pcs | FT1 20pcs

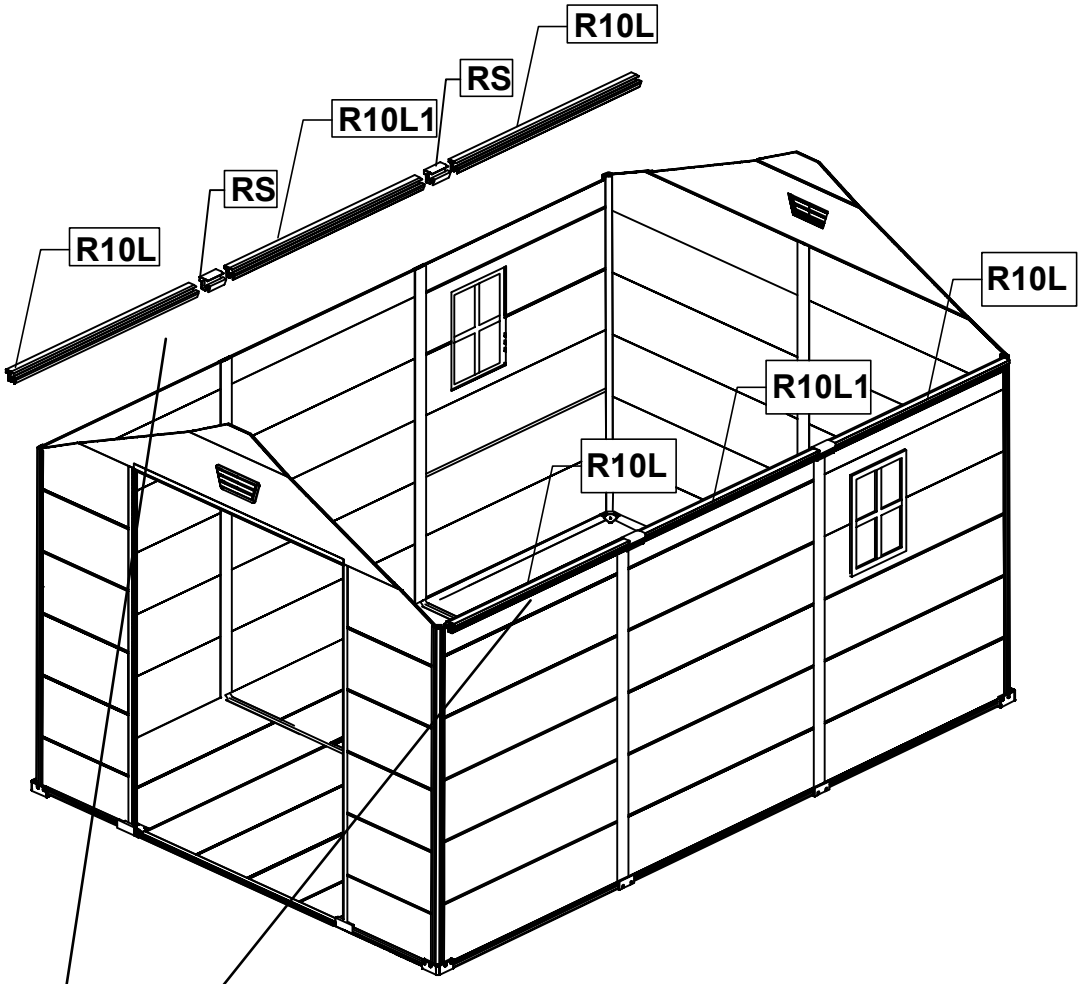


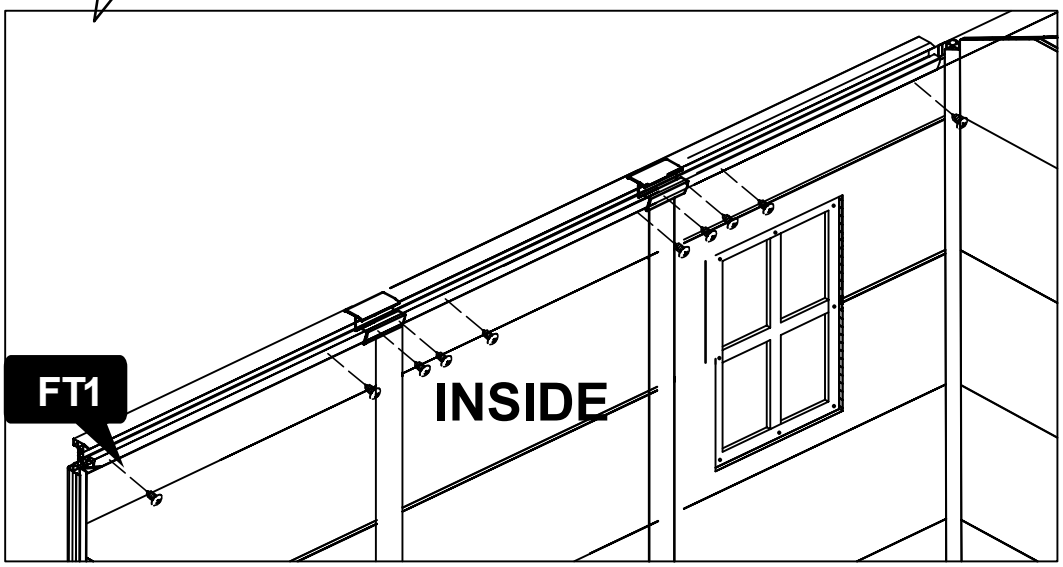


20

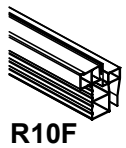



R10F
4pcs

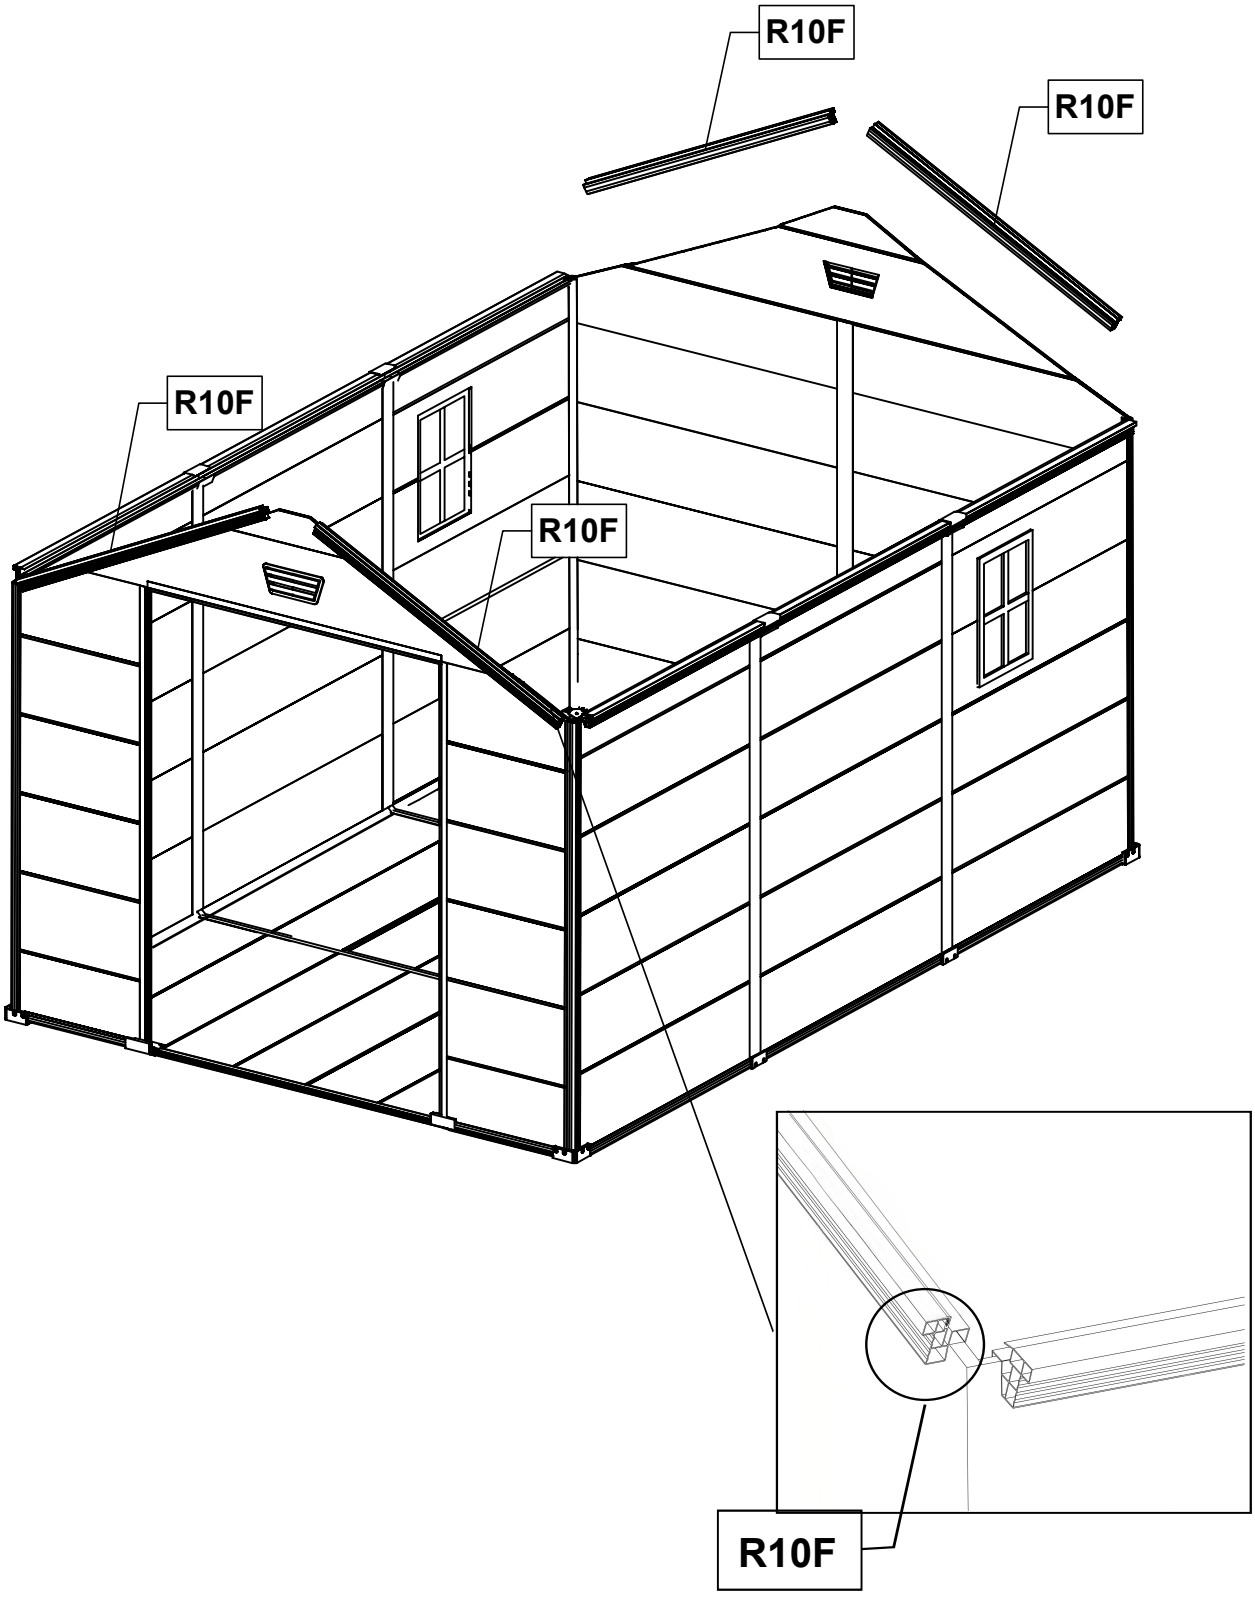

21

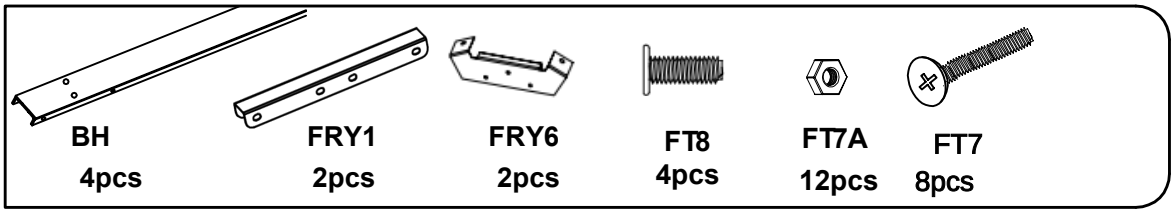
BH
4pcs
FRY1
2pcs
FRY6
2pcs
FT8
4pcs
FT7A
12pcs
FT7
8pcs

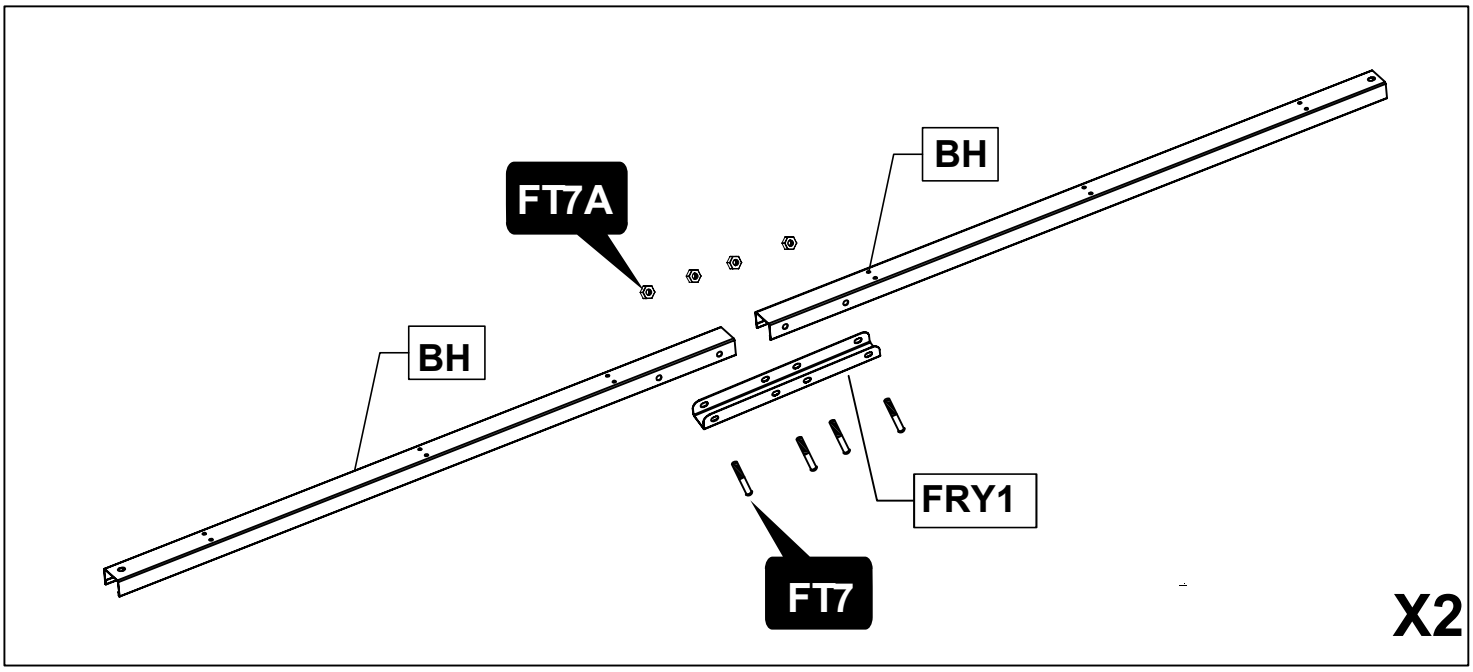
FT7A
BH
BH
FRY1
FT7
X2

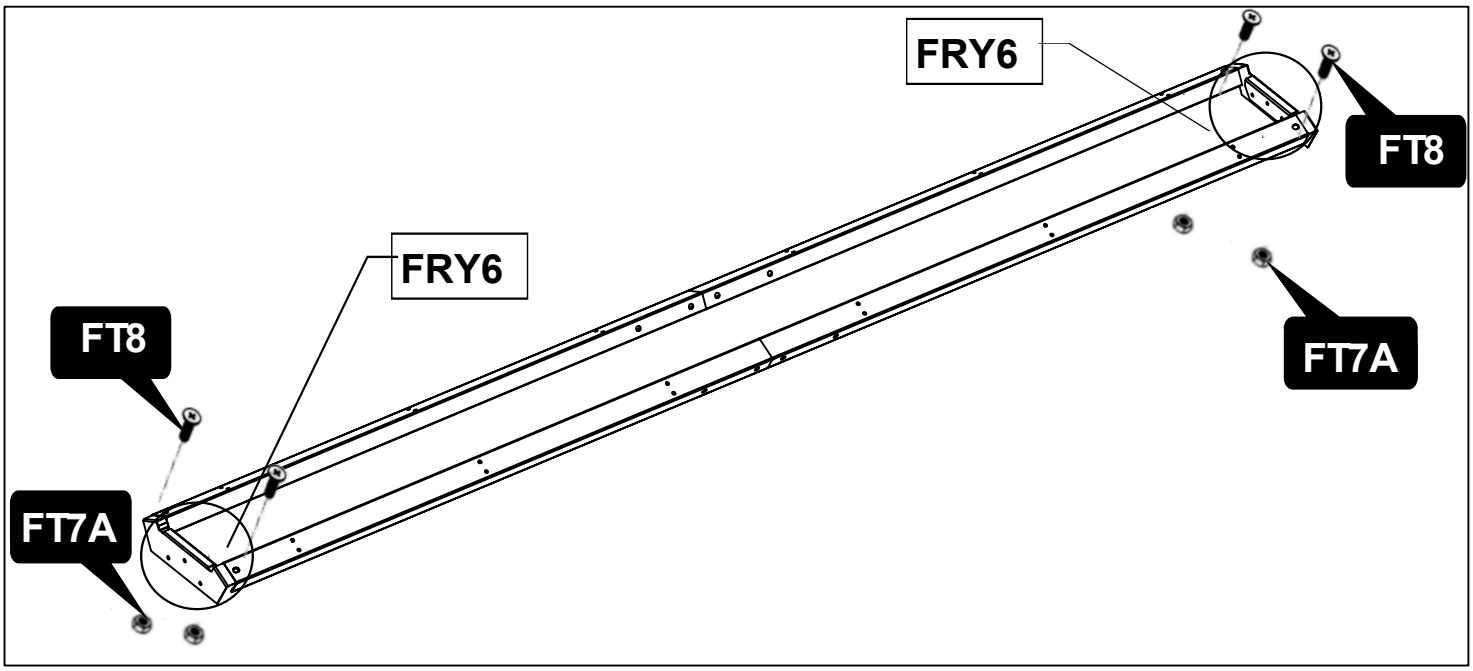

FRY6
FT8
FRY6
FT8
FT7A
FT7A


22




FT3
12pcs


FT2
12pcs

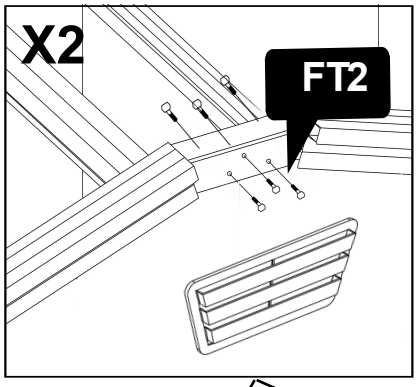


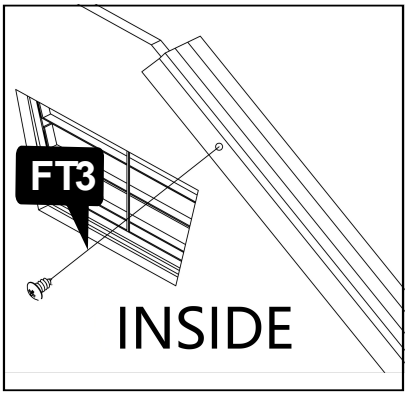


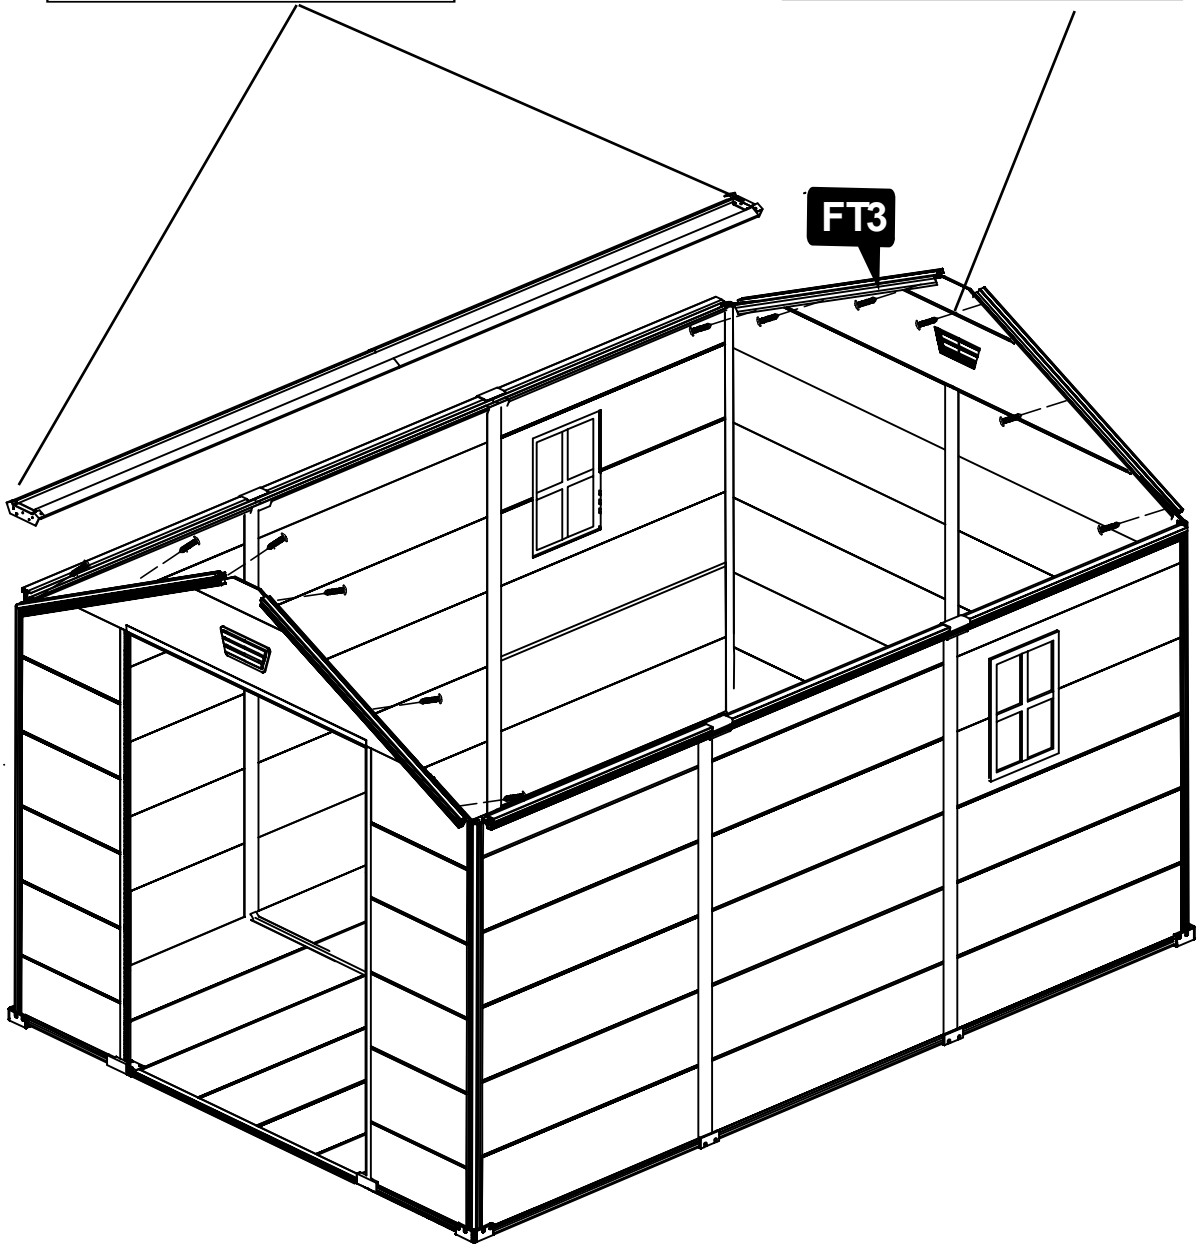



23

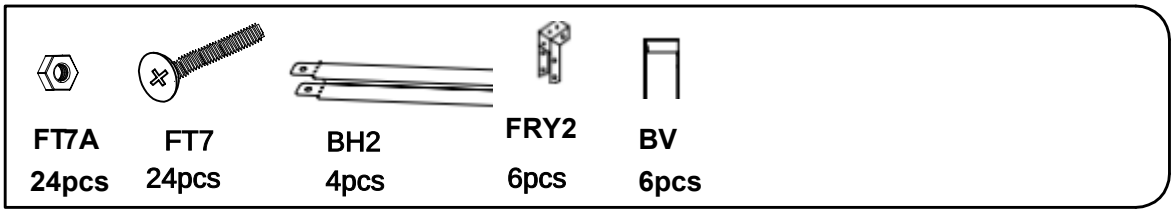

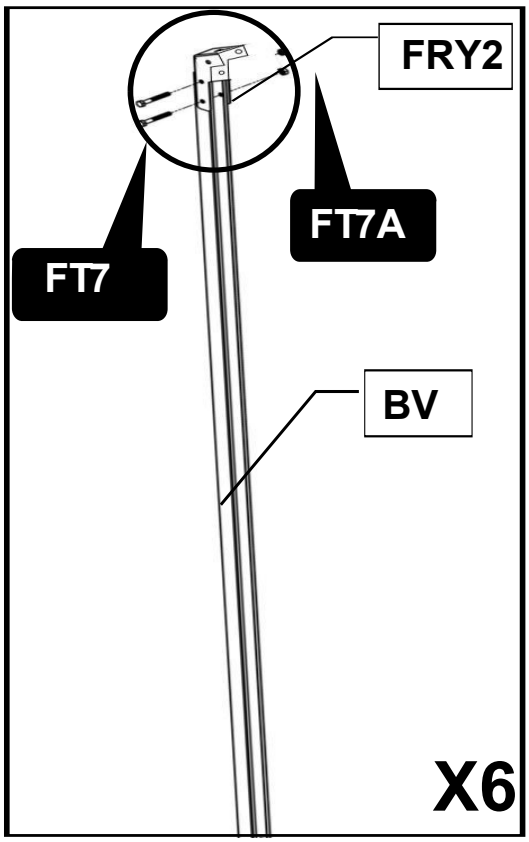


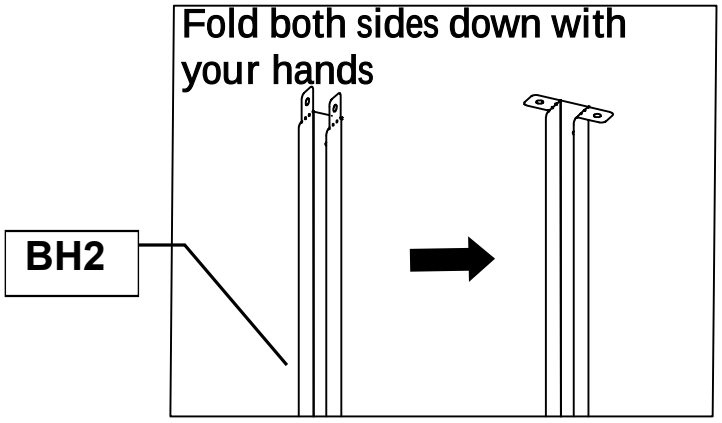

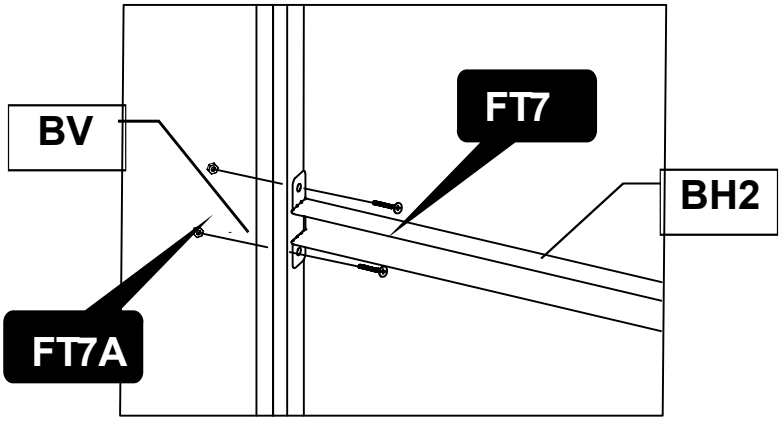

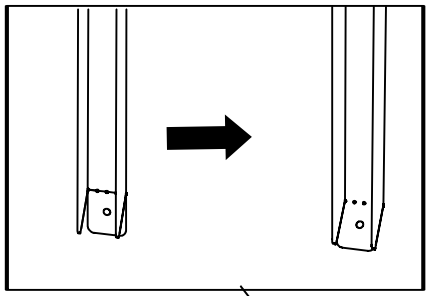


Fold both sides down with your hands

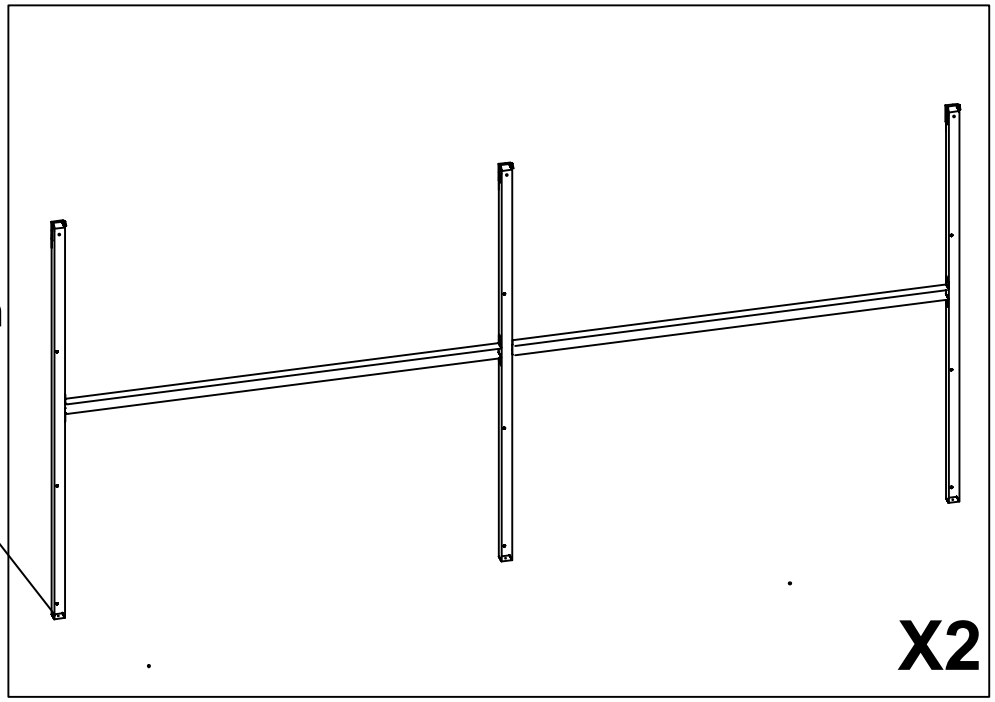

24





FT3 6pcs | FT2 40pcs | FT1 6pcs

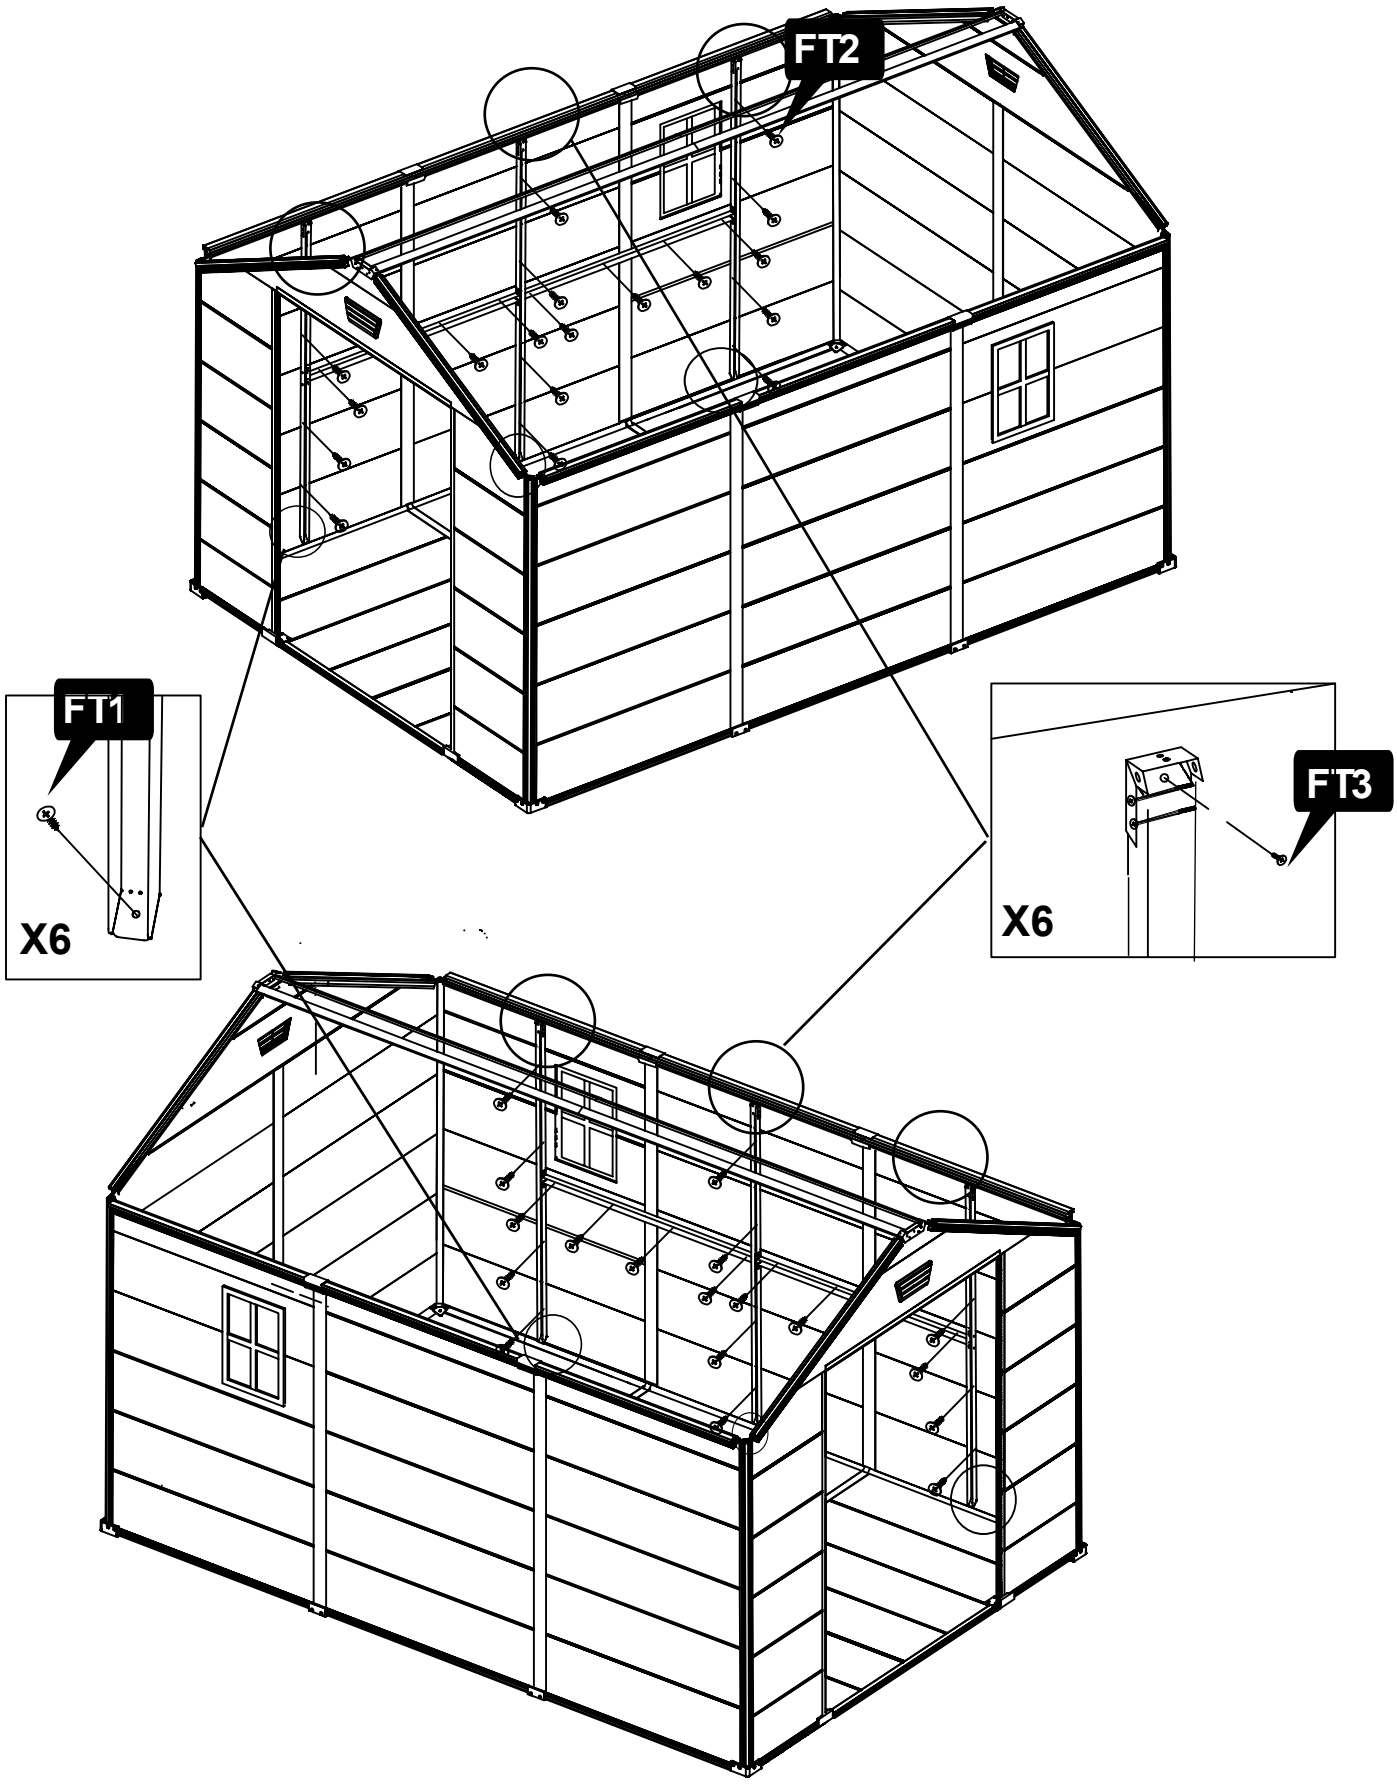


ASSEMBLY INSTRUCTIONS

25

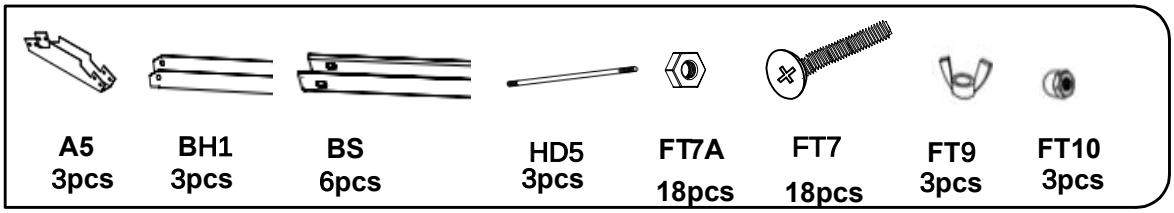


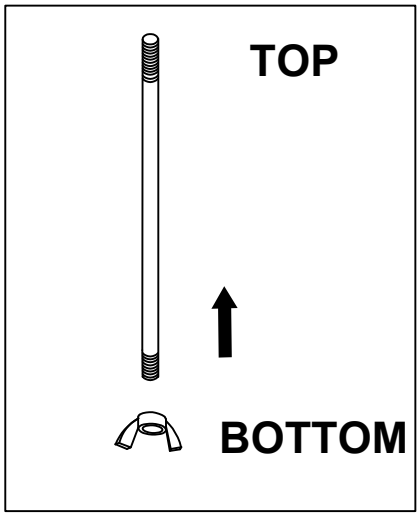

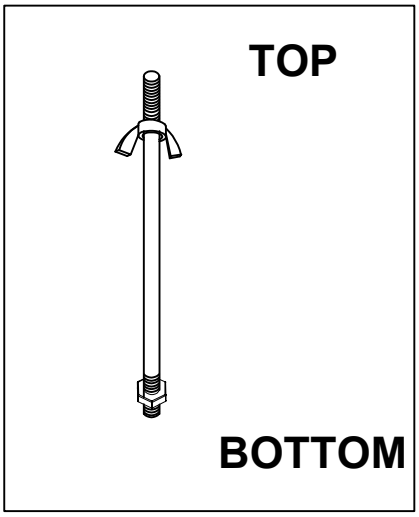


NOTE：The oil on HD5 is for rust prevention.

NOTE:Install by holding the nut stationary and turning the screw.

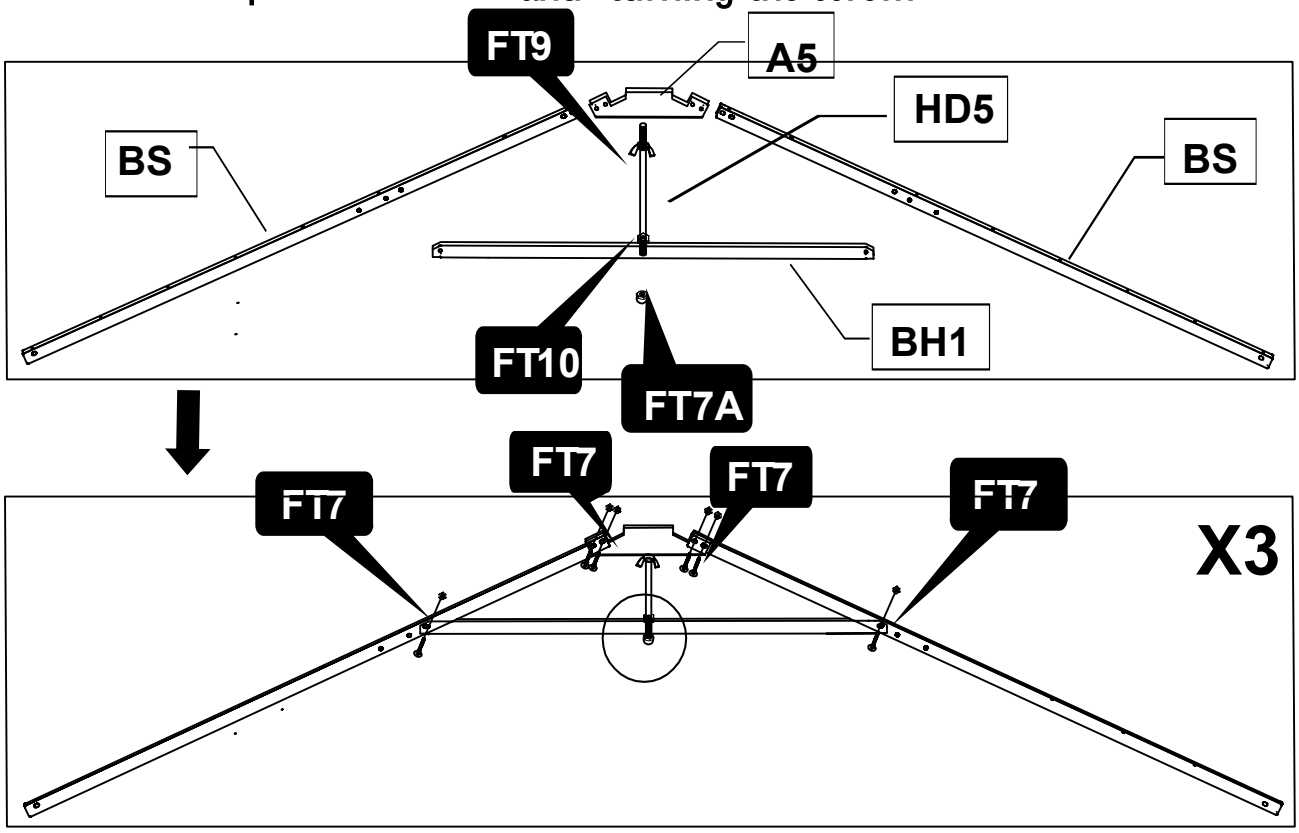


FT7A and FT10 to be tightened，After the top plate is installed, fully tighten FT9 and jack it upward for support.


26




FT7A 6pcs

FT7 6pcs

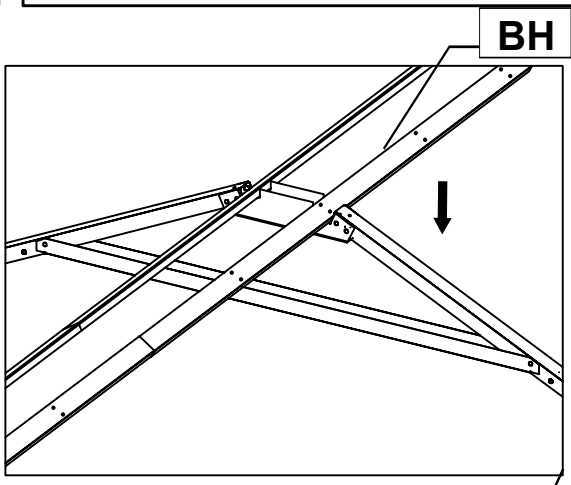


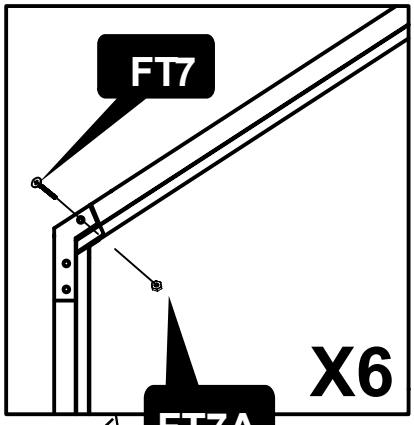


NOTE：BH needs to be set for a hard rejection at the upper bound of the A5 gap.

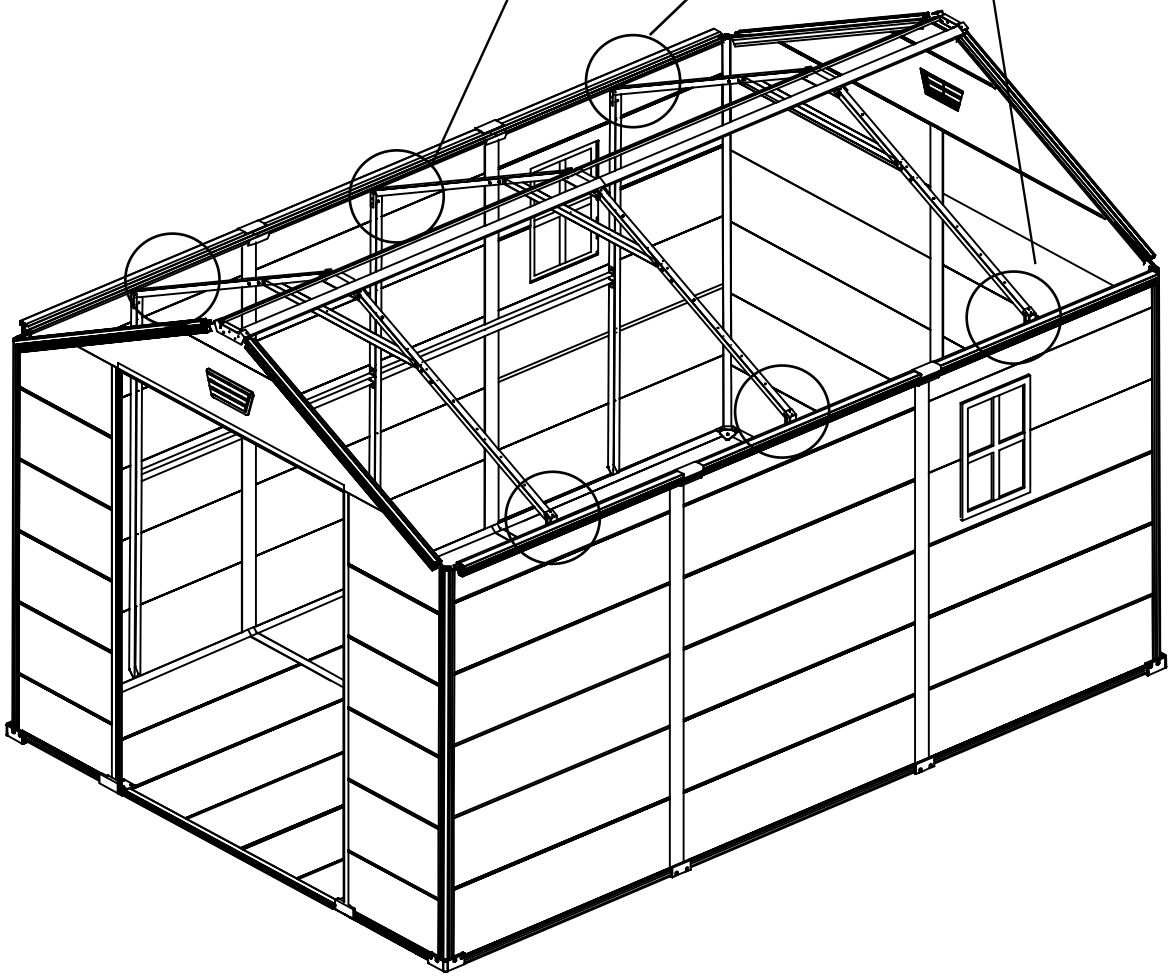


27




FT7A 12pcs | FT7 12pcs | BH2 4pcs

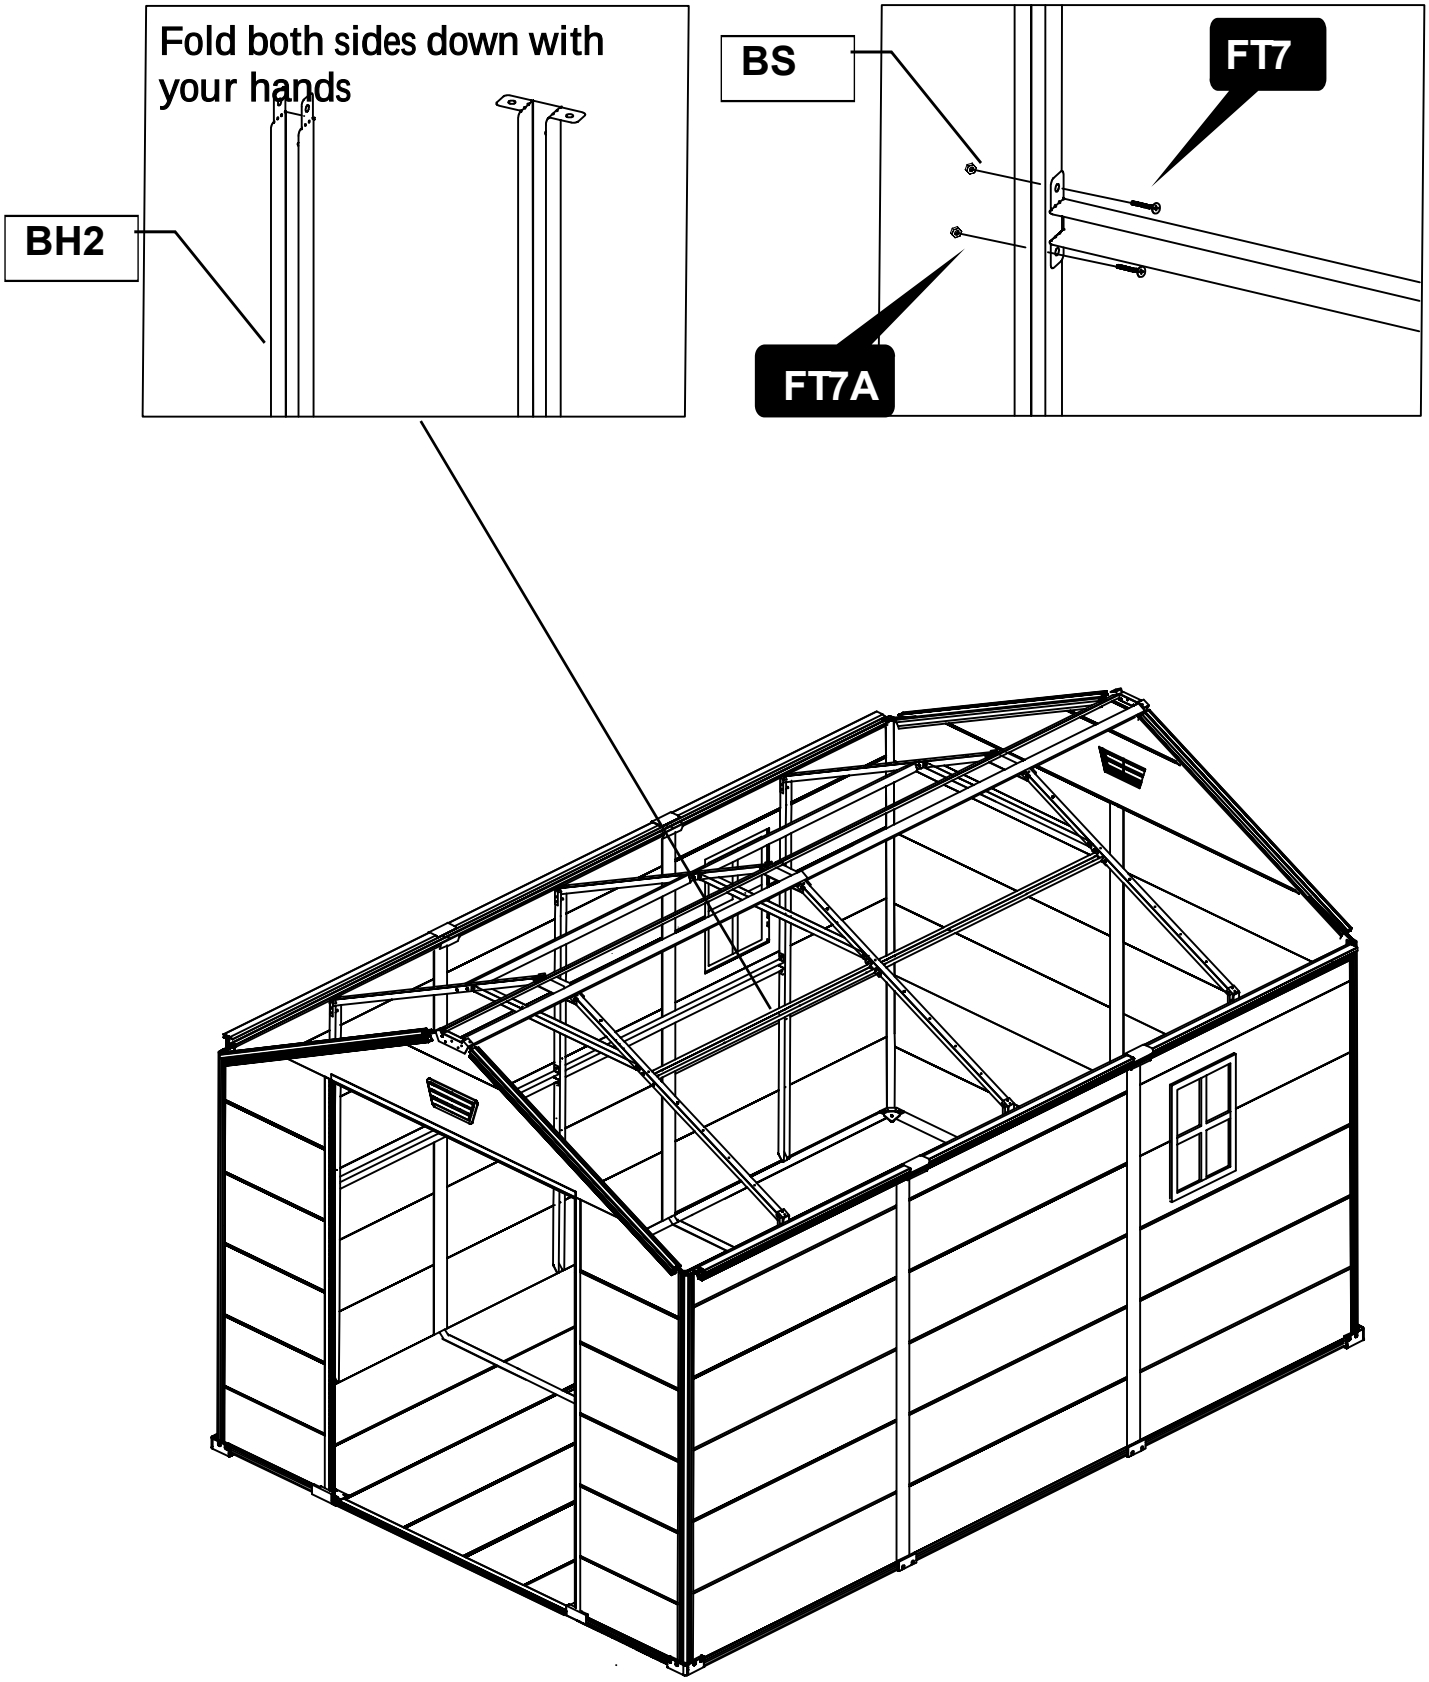



28

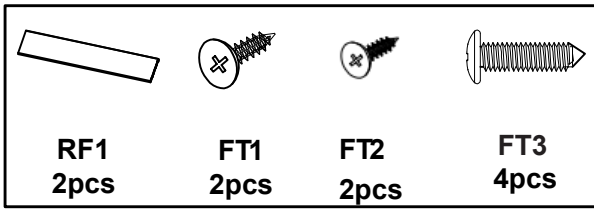



RF1 2pcs | FT1 2pcs | FT2 2pcs | FT3 4pcs

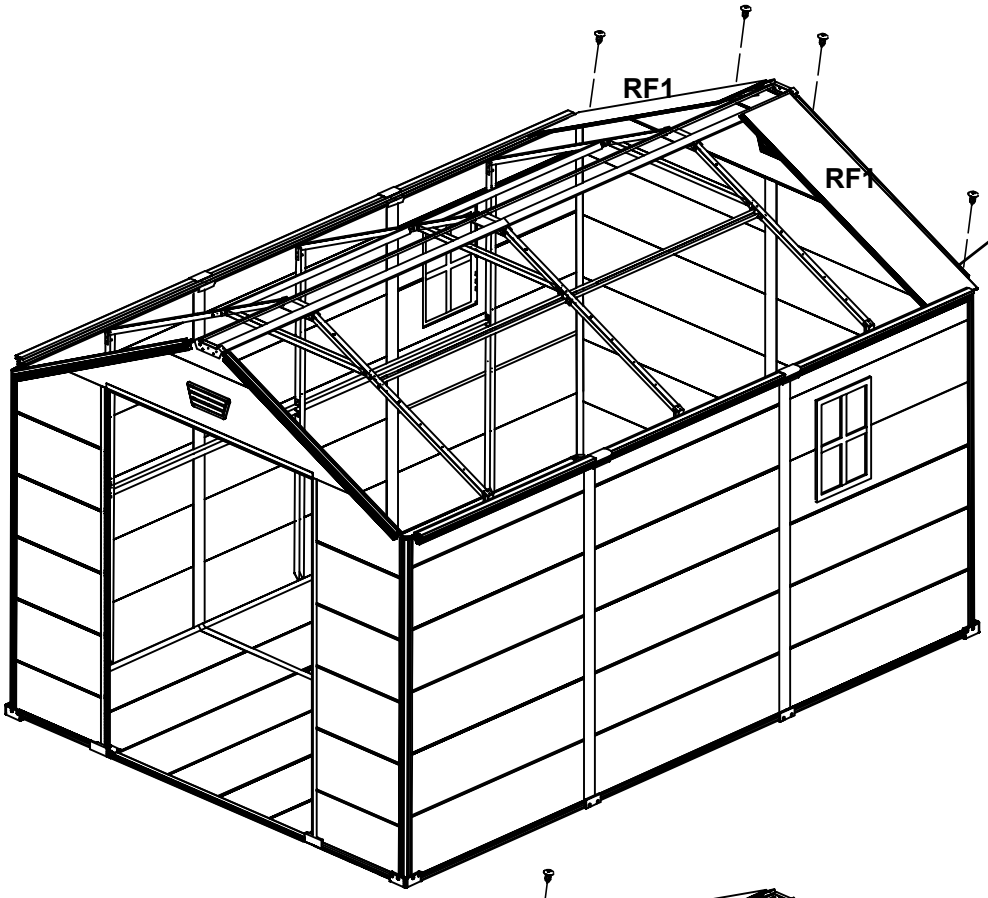


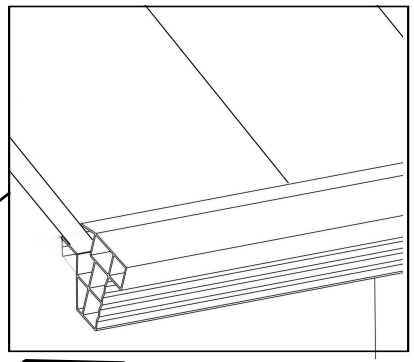

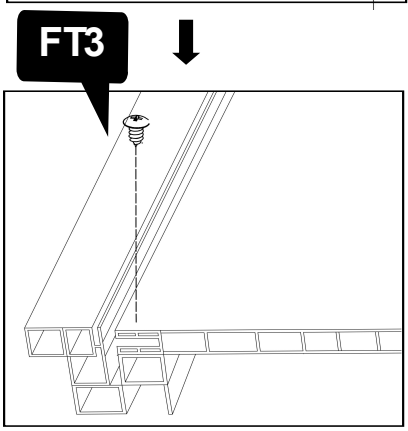

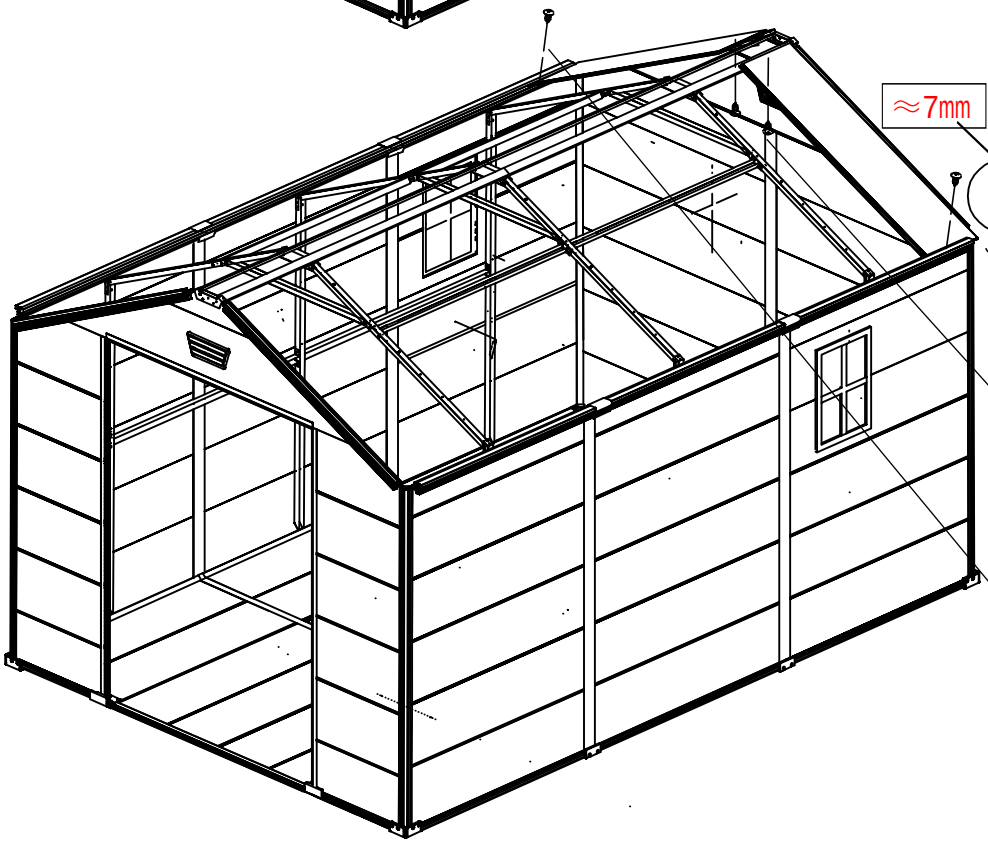

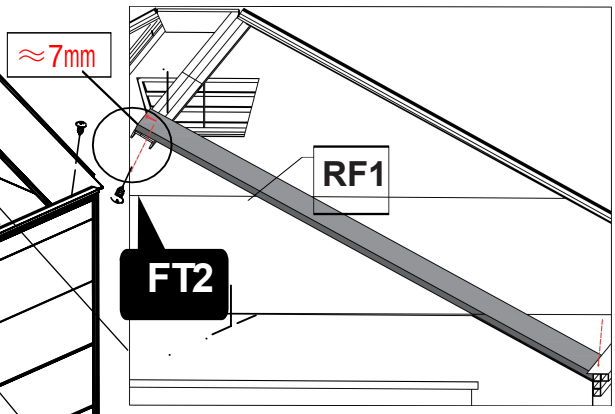


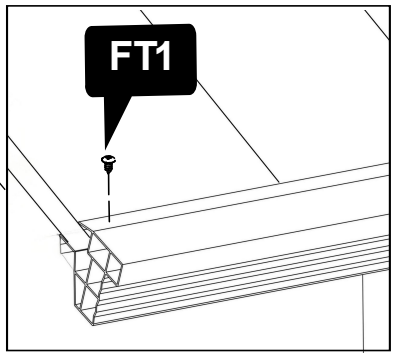

29




RF1 20pcs | FT1 20pcs | FT2 20pcs

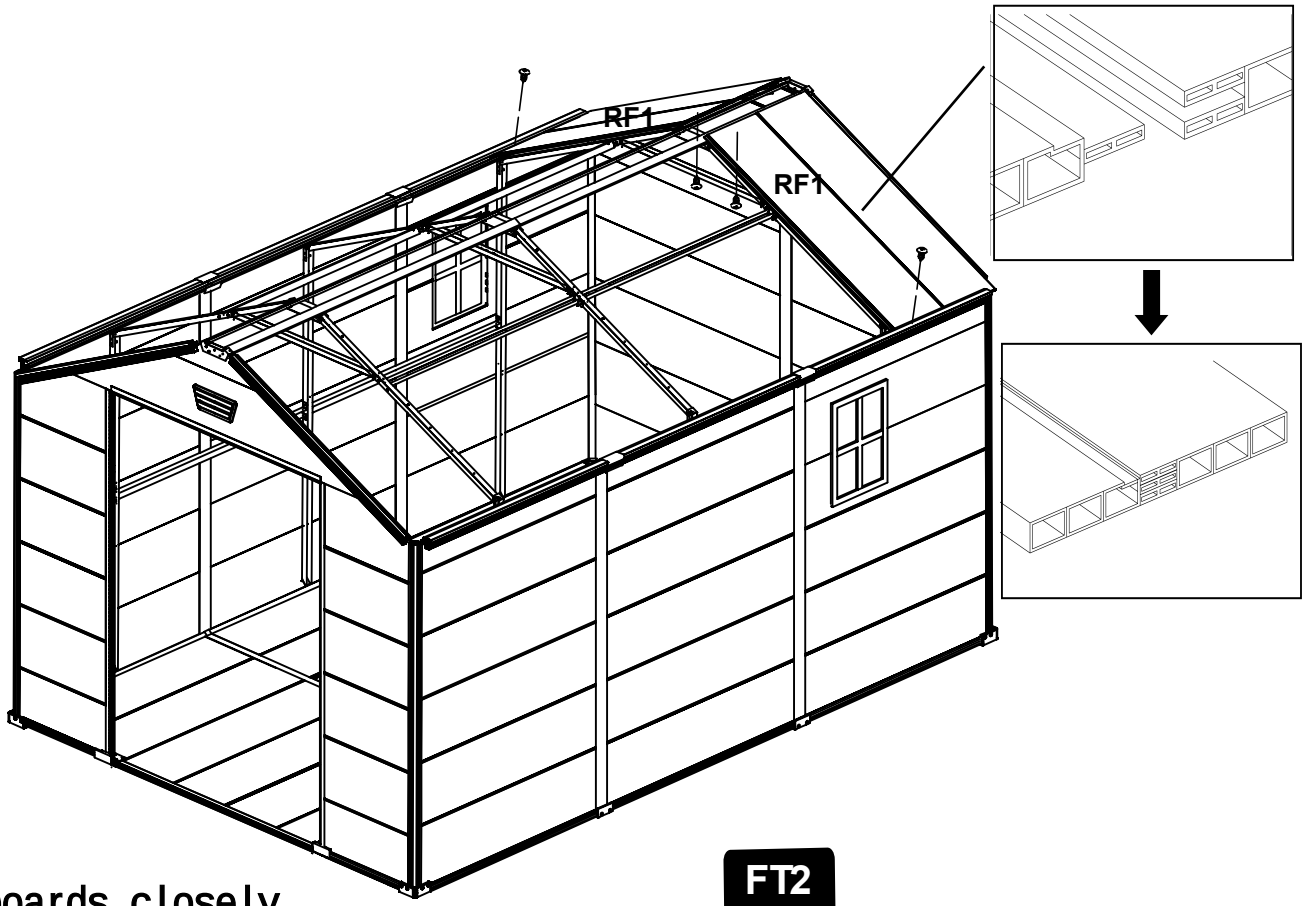





NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

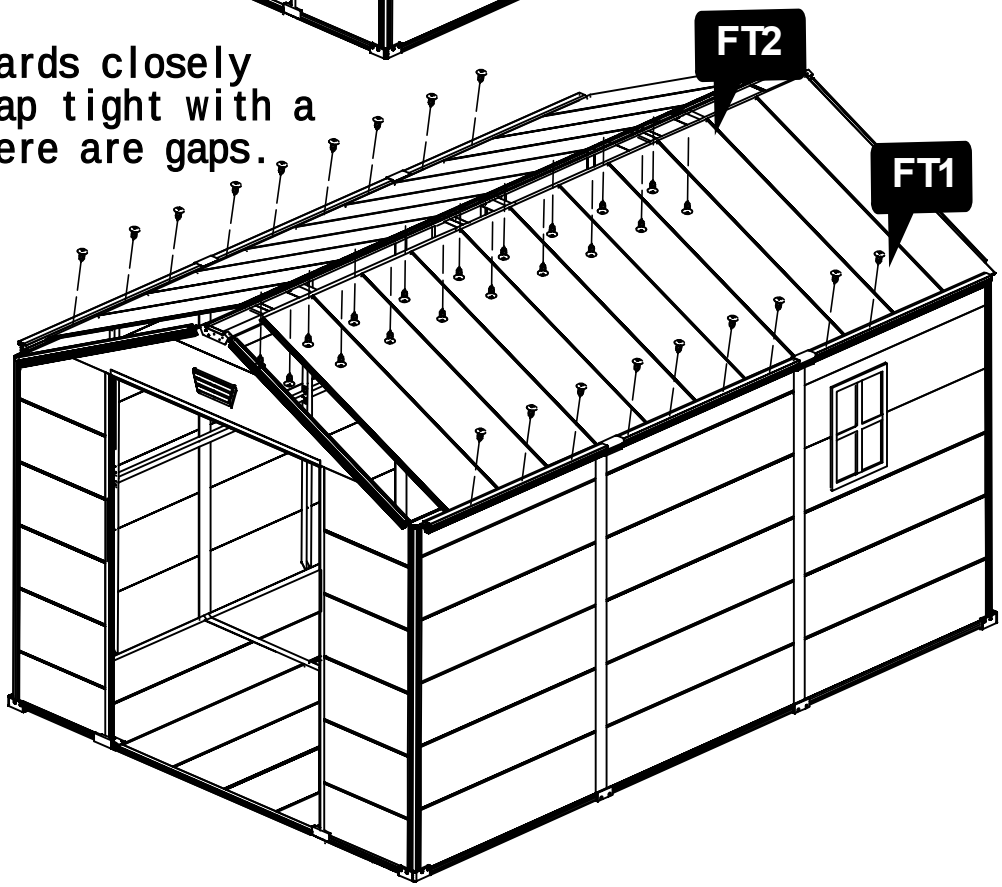


30



FT1 2pcs | FT2 2pcs | FT3 4pcs | RF2 2pcs

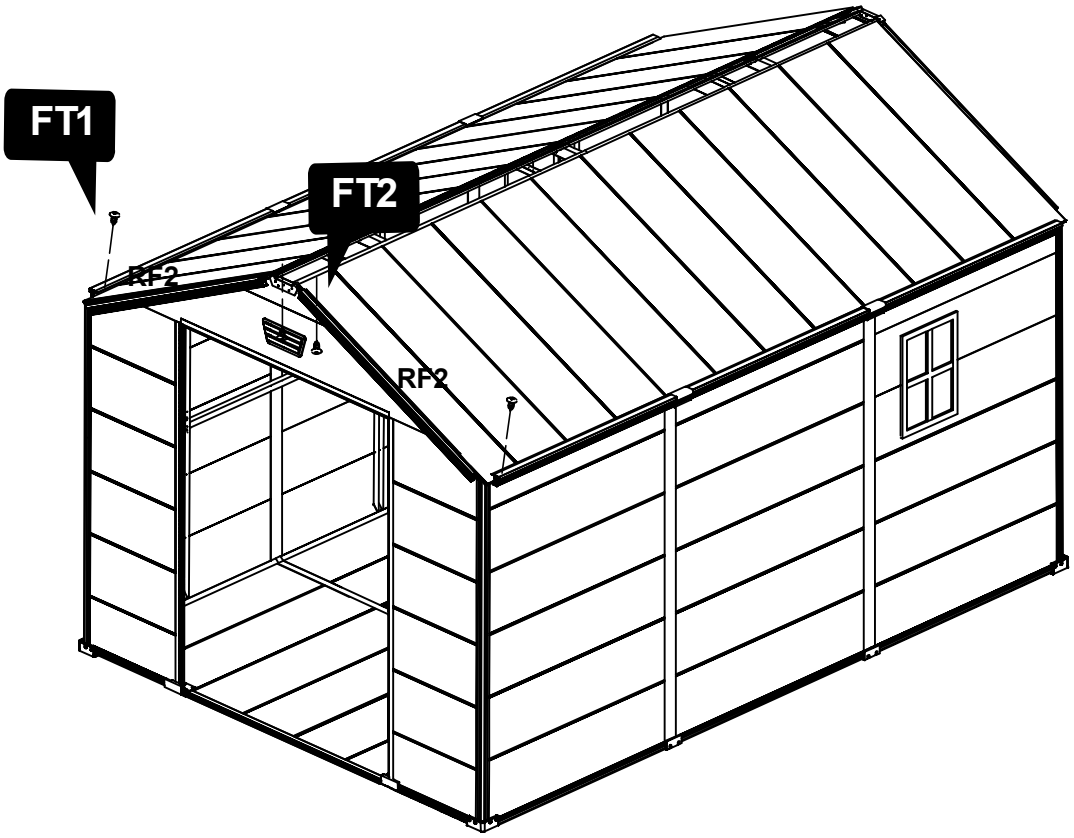


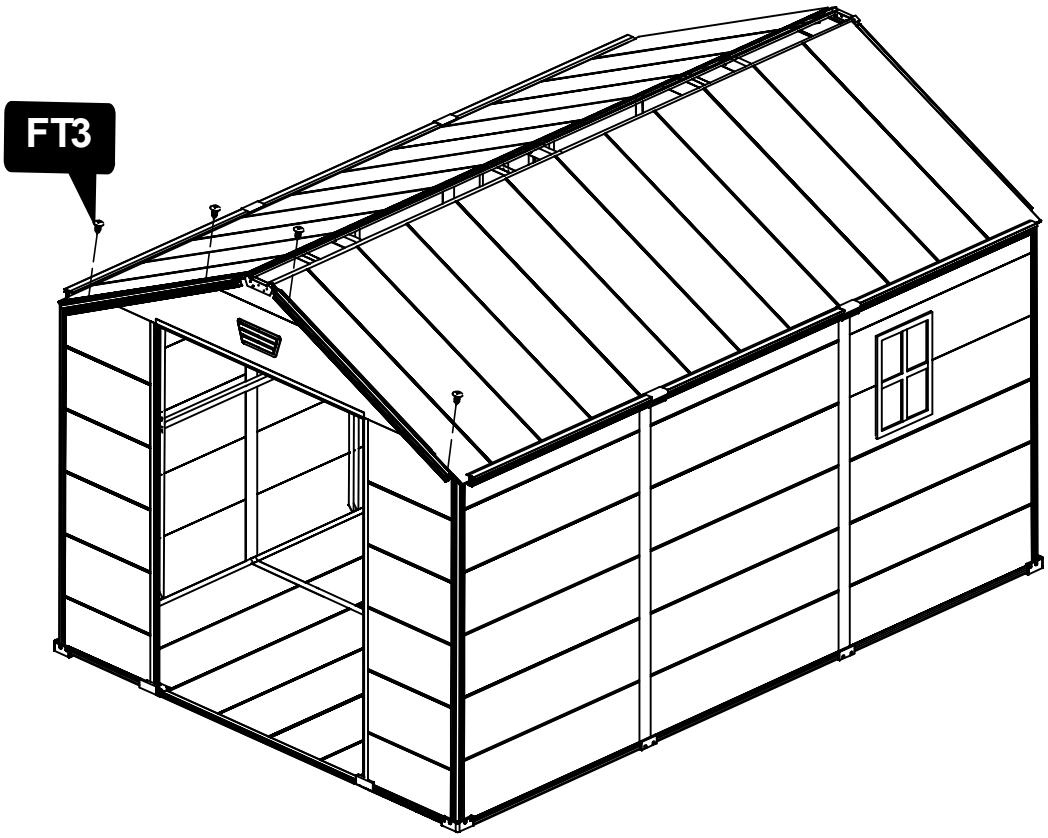


31





FT2
28pcs

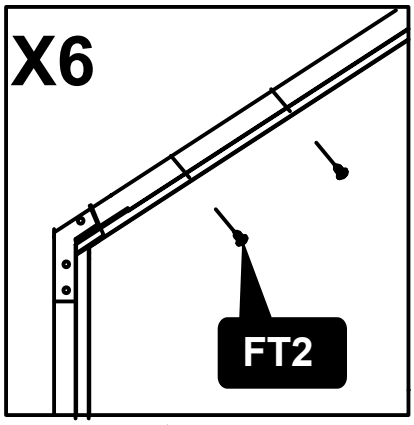

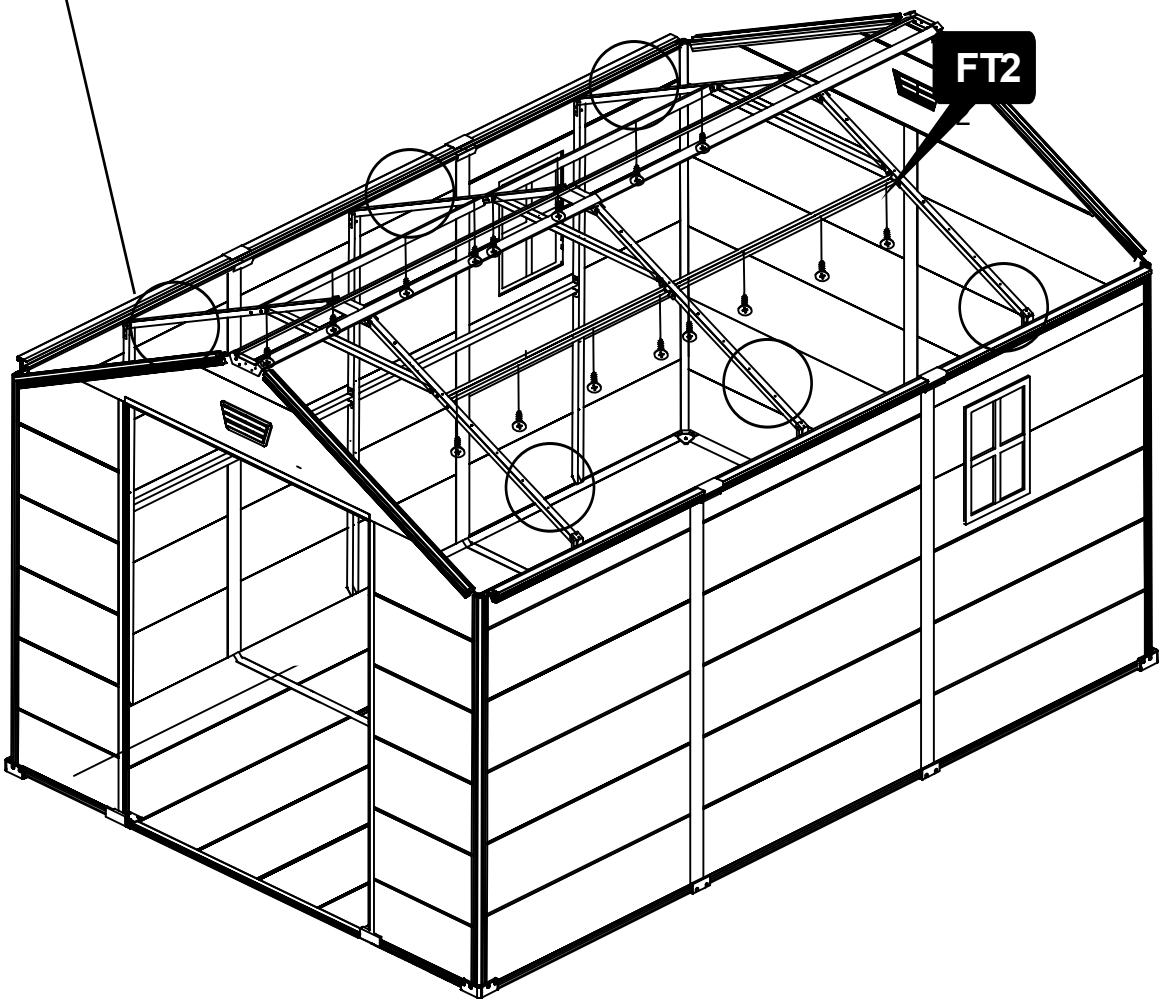


32

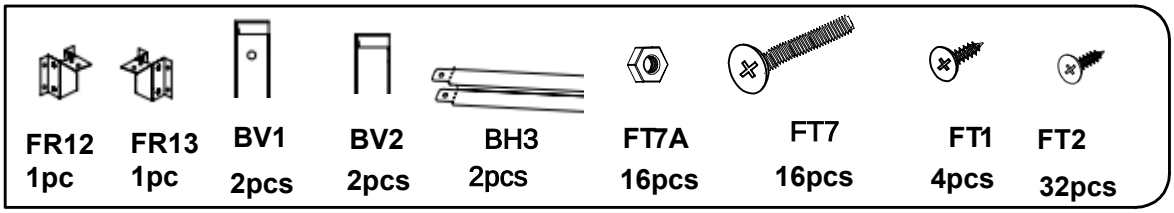


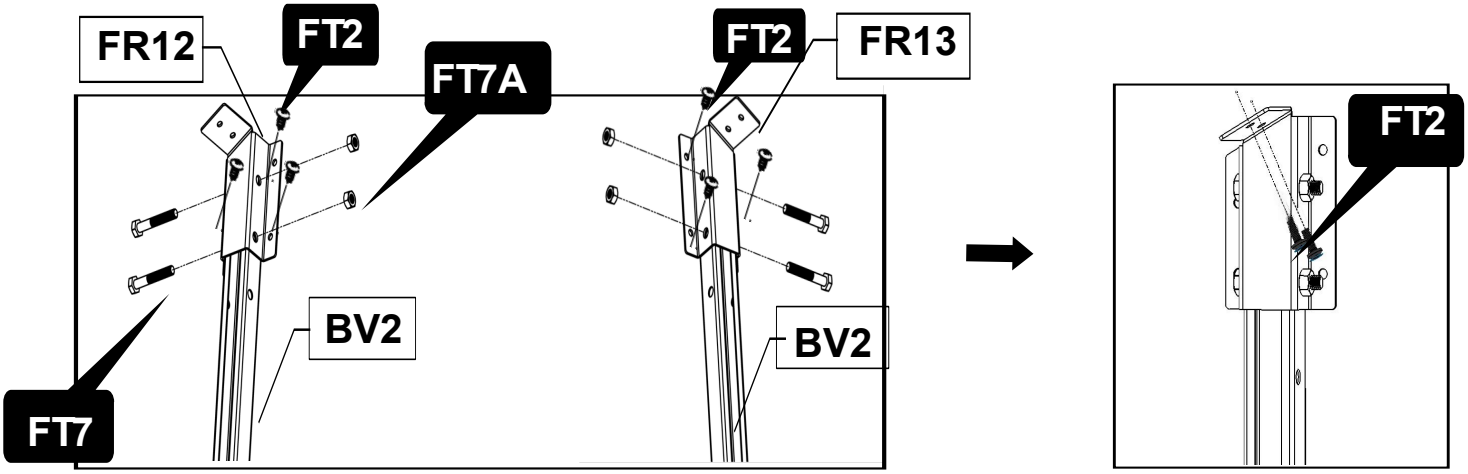


FT2 to be mounted on the ceiling slab.

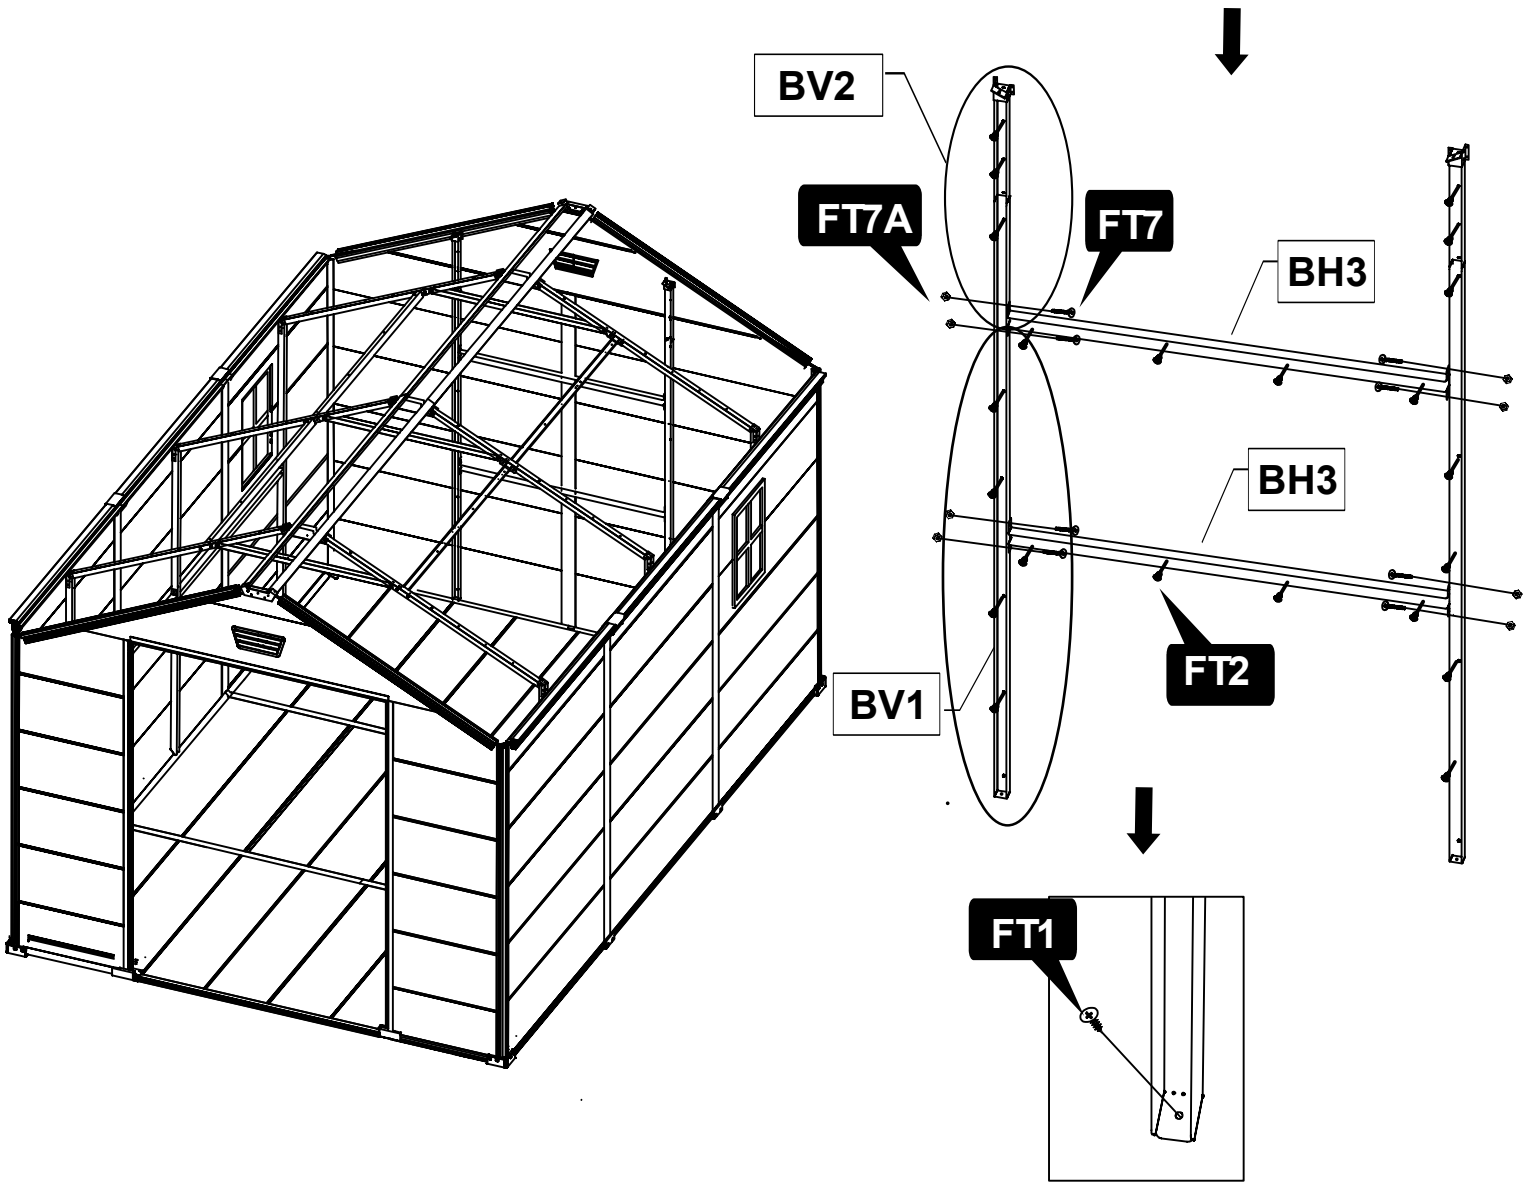


33

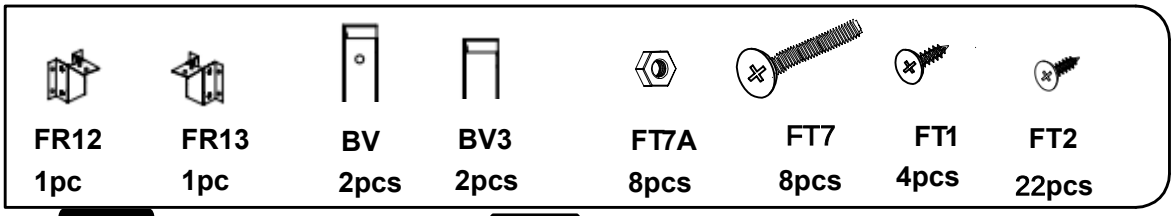

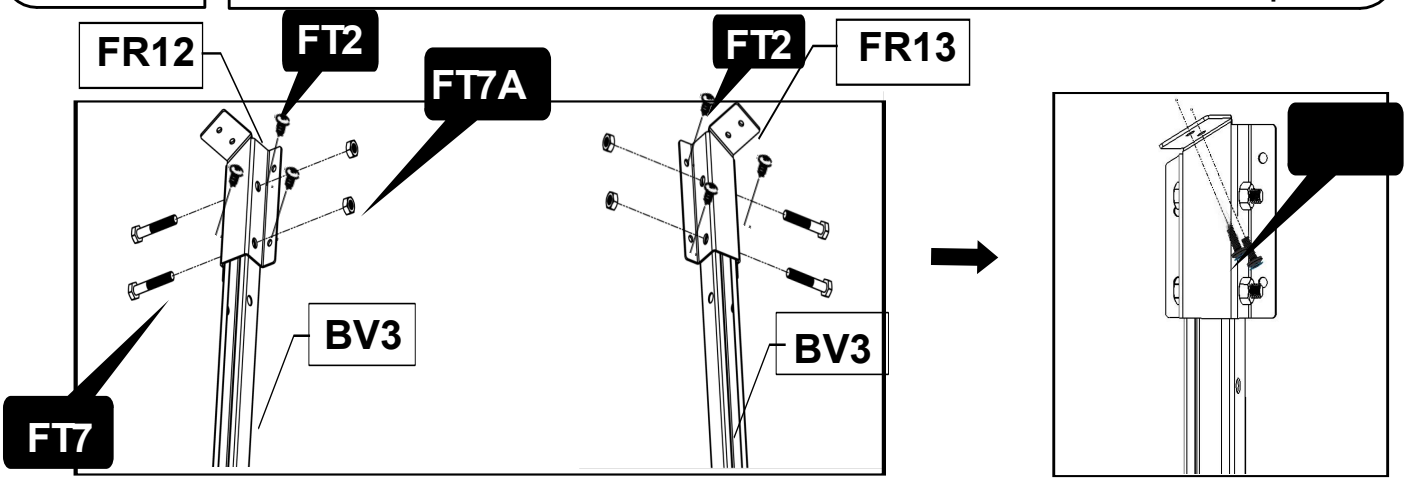


FT2 to be mounted on the ceiling slab.

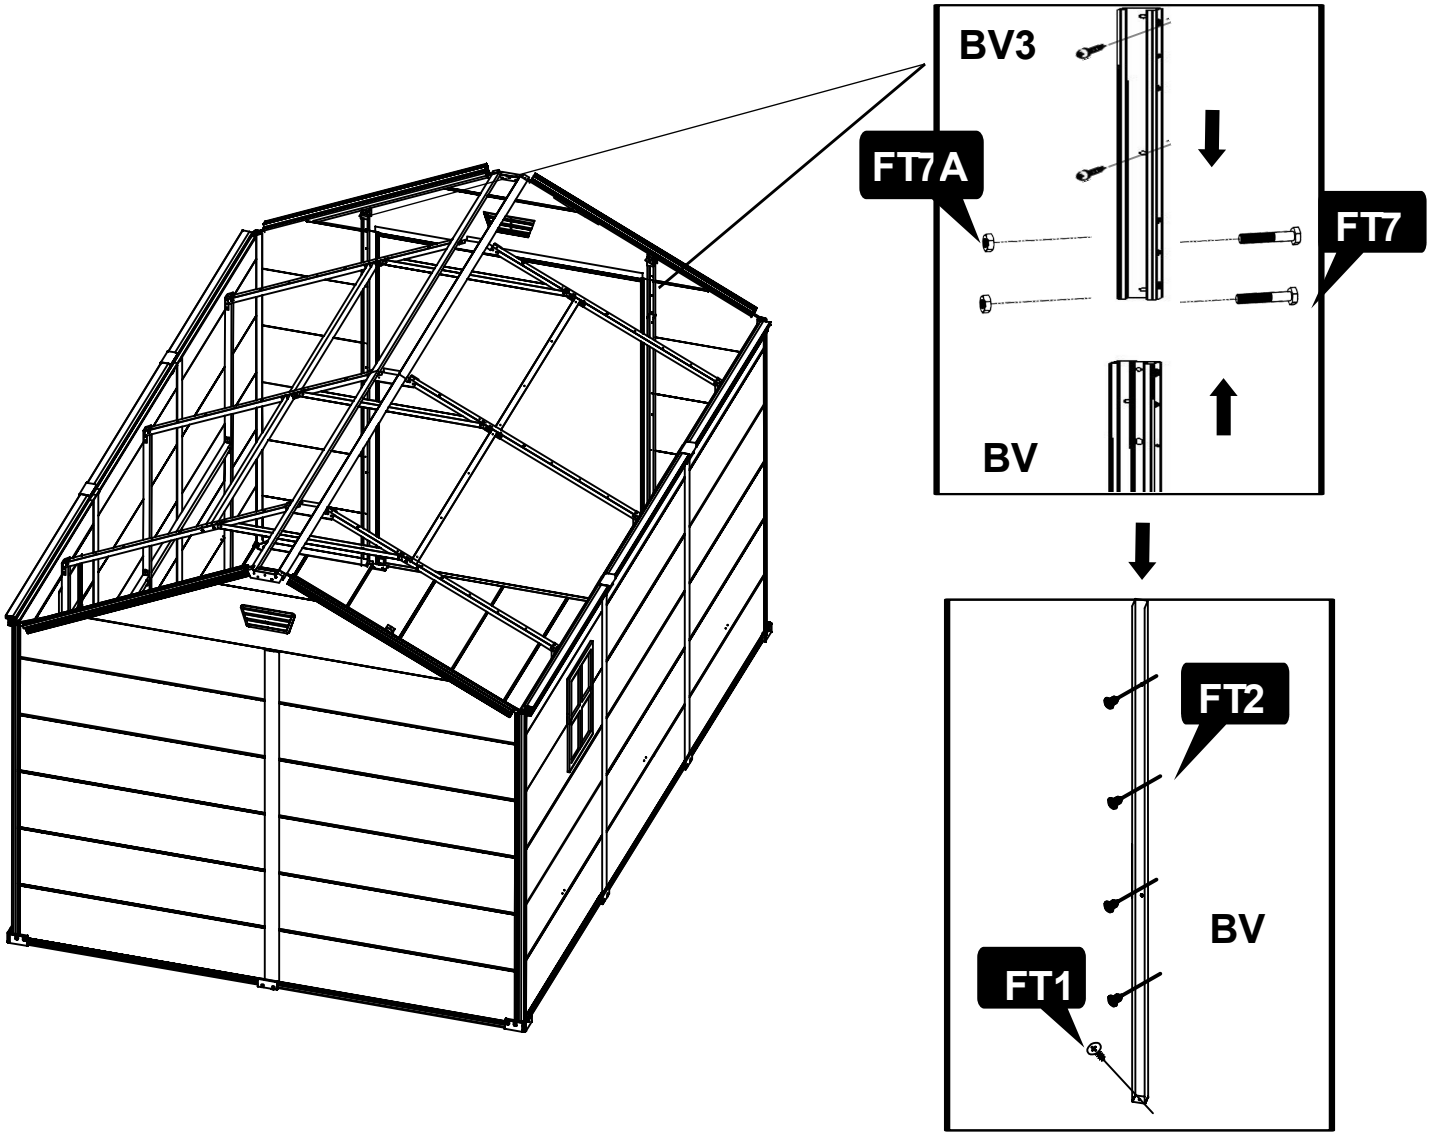

34




PSR
4pcs

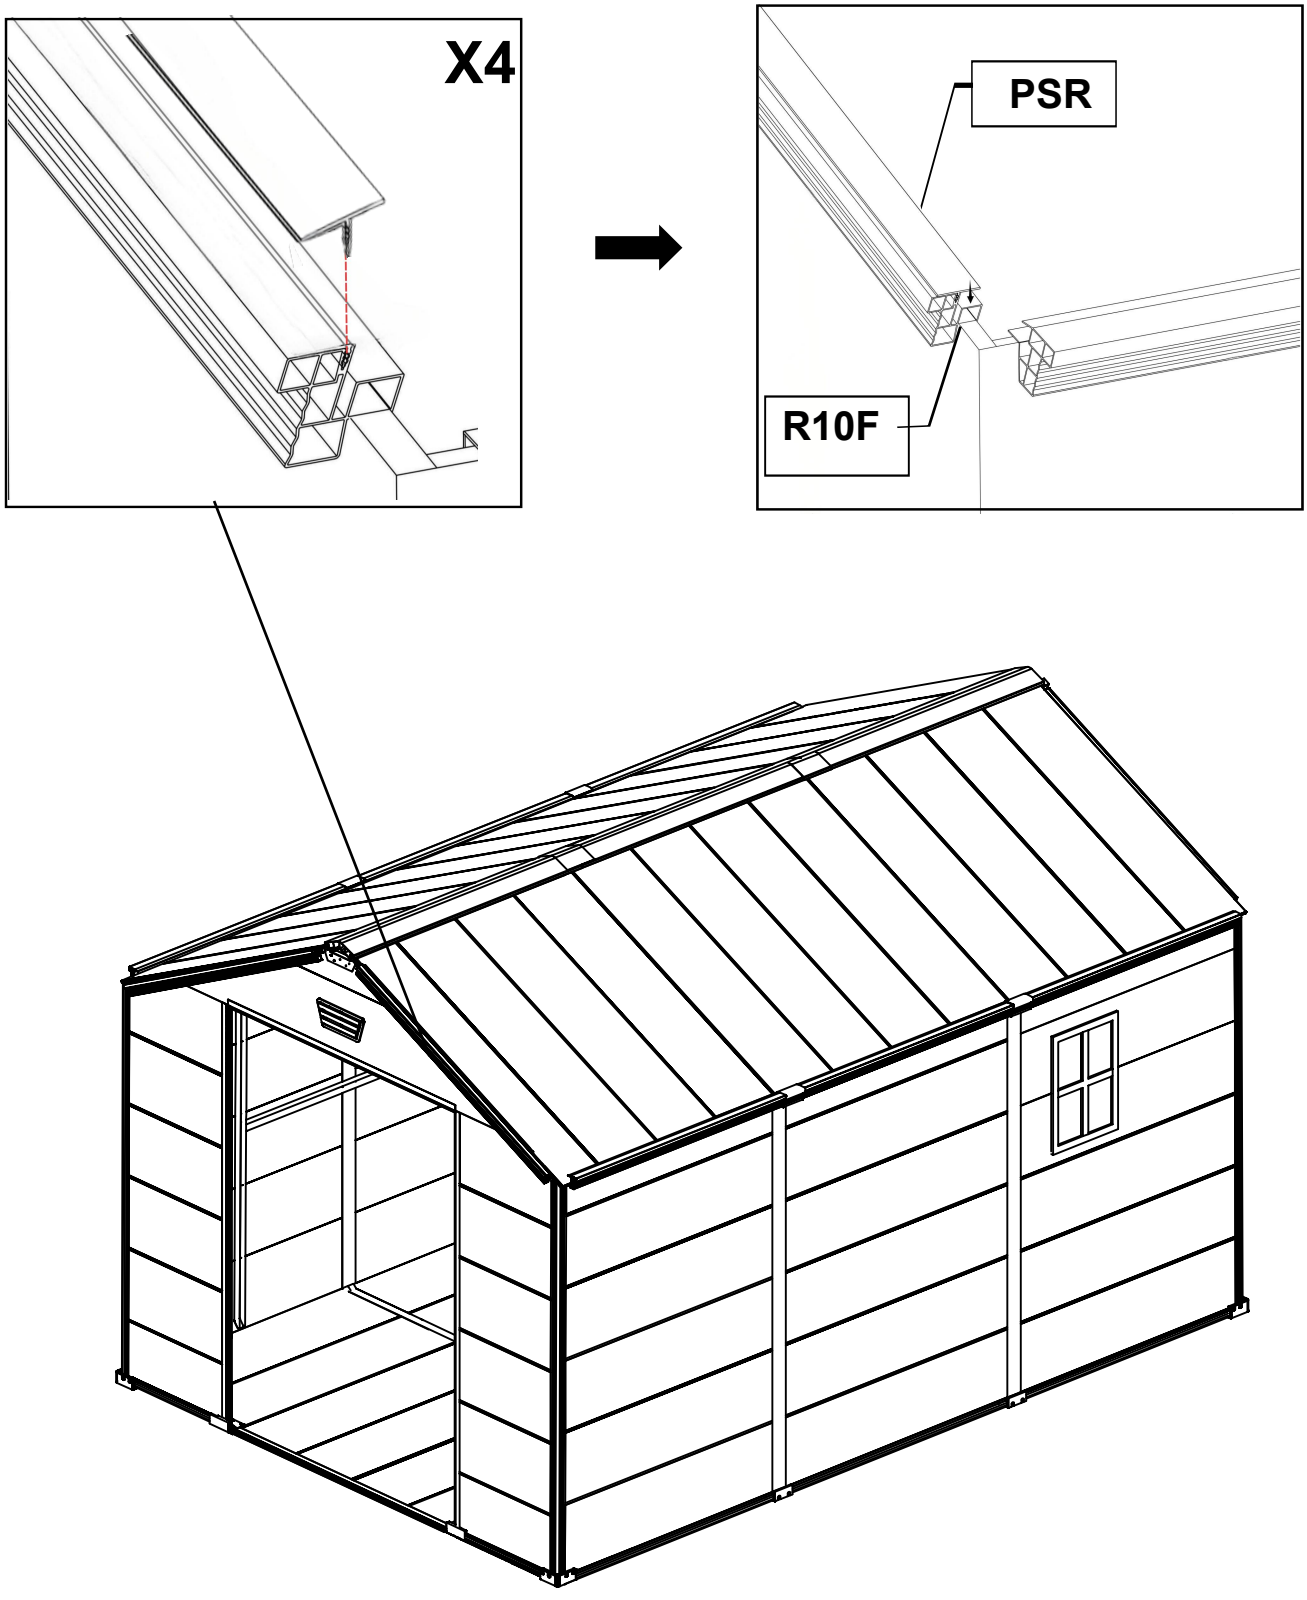


35




FT3
24pcs

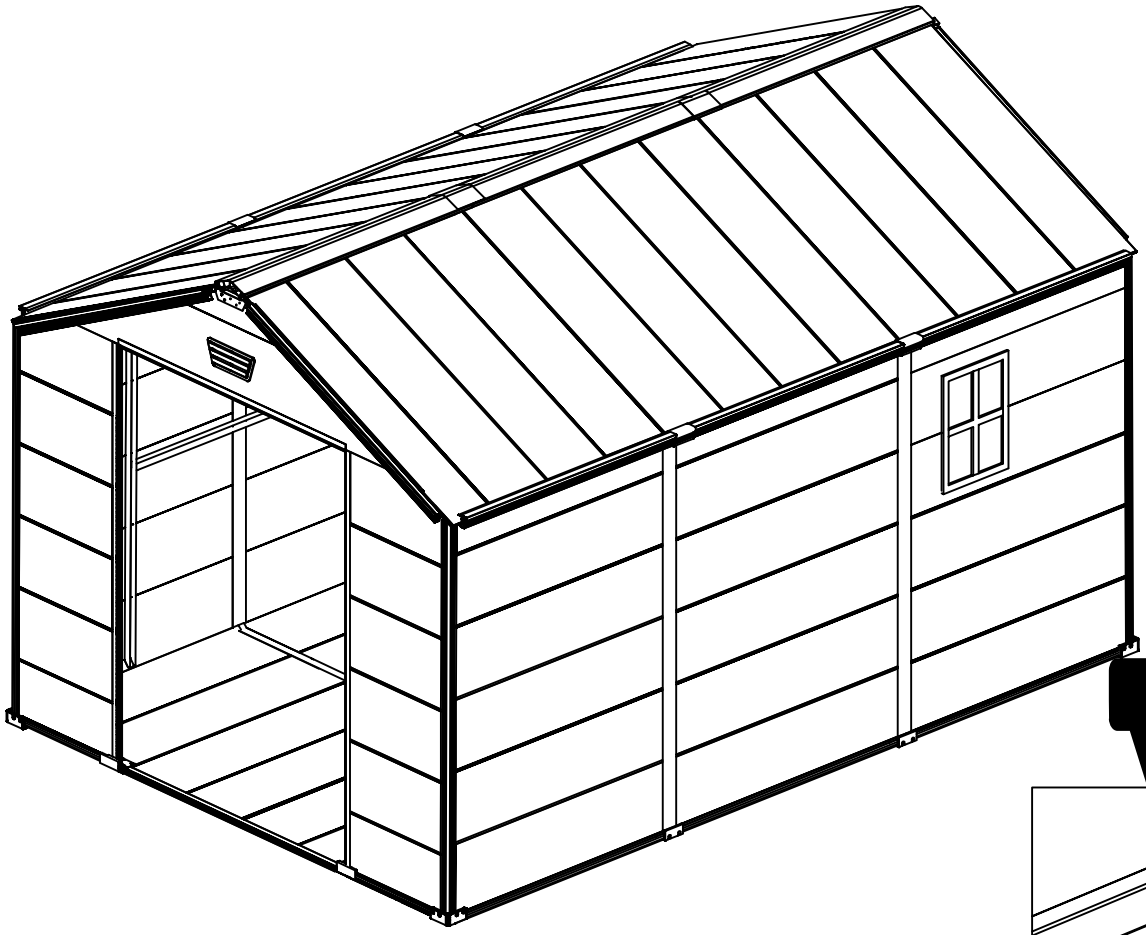

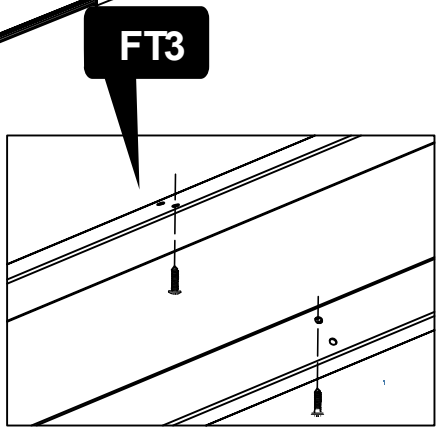

NOTE：Use drill to prop up before screwing for easier operation.
Fasten screws from front to back


Screw from inside of the shed Roof

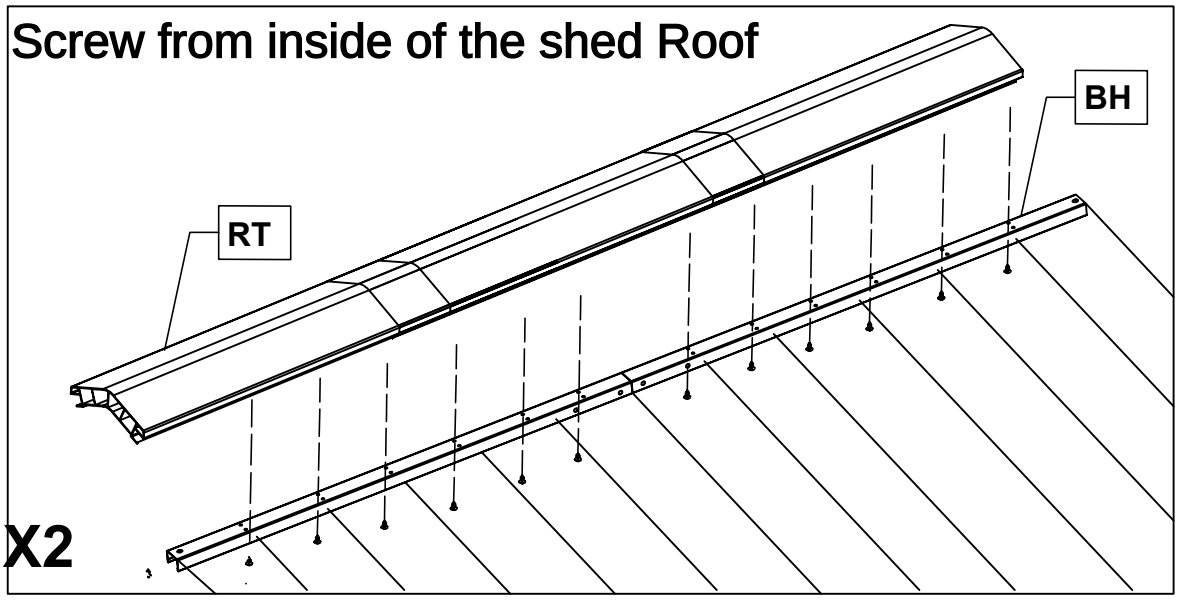

X2


Align rt with the top plate


36

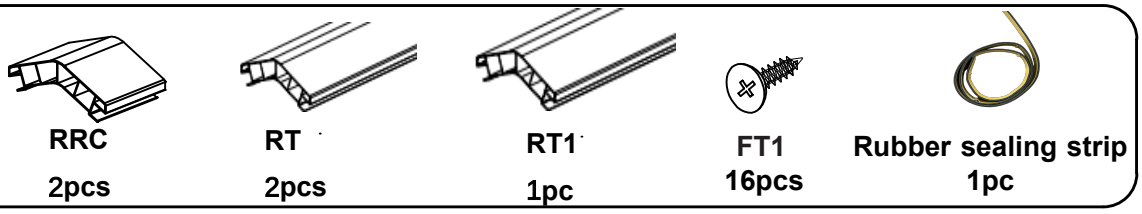


Rubber sealing strip (X1)


Rubber sealing strips shall be affixed to RRC as shown in the drawing.

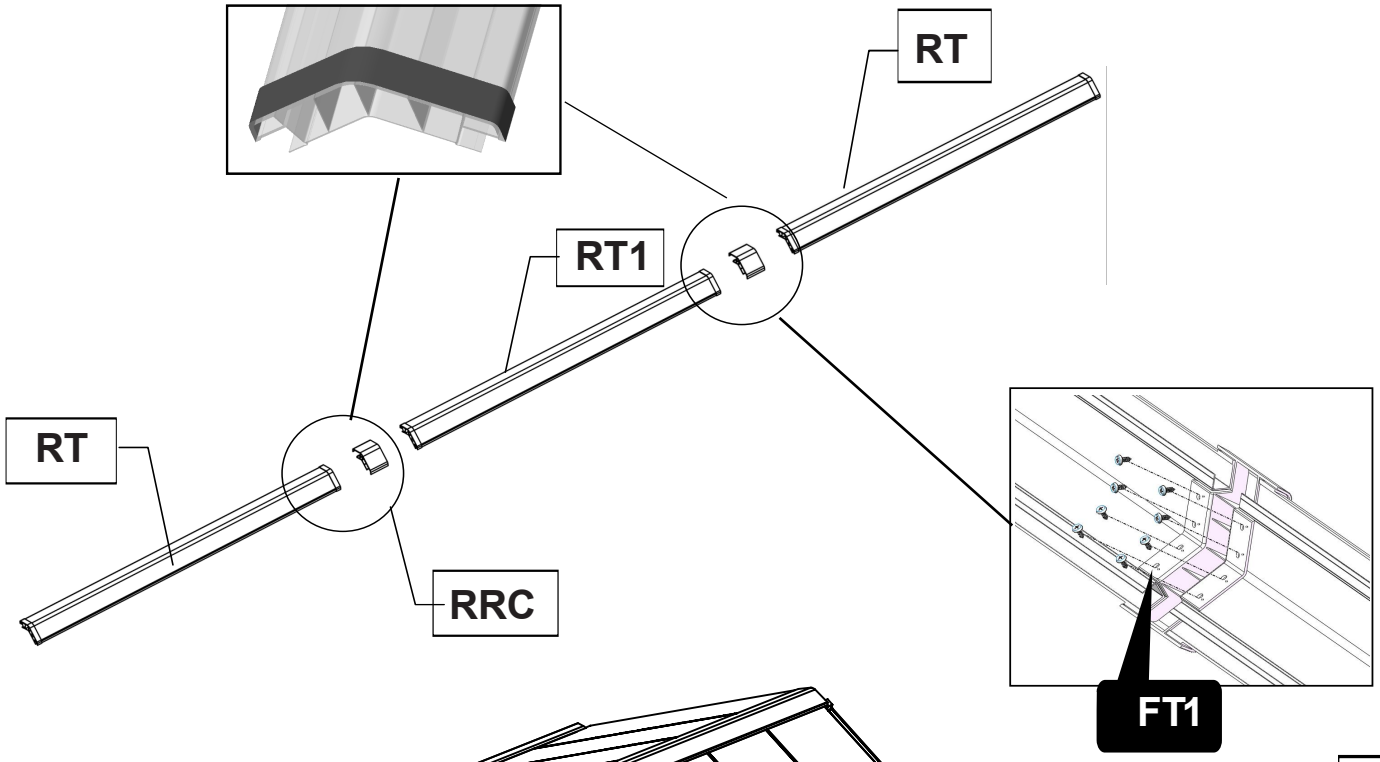

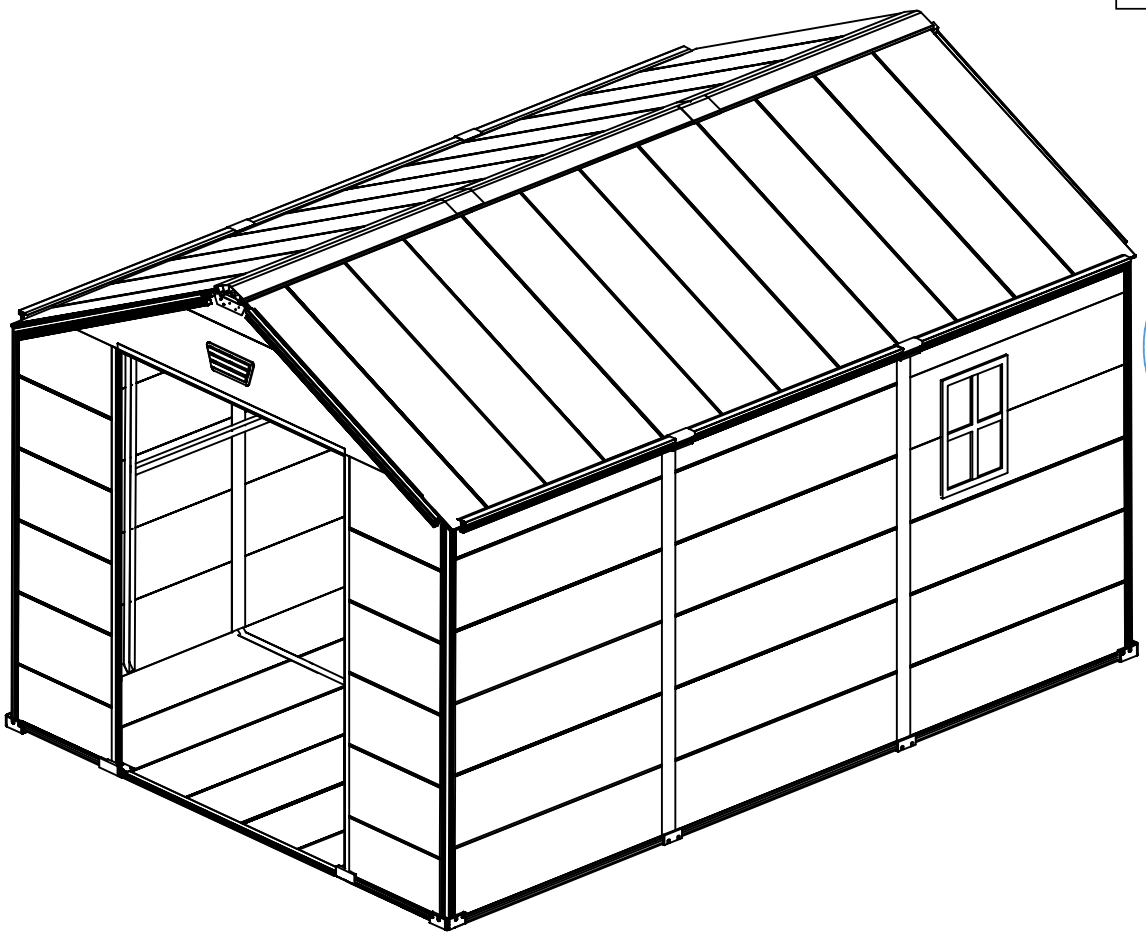

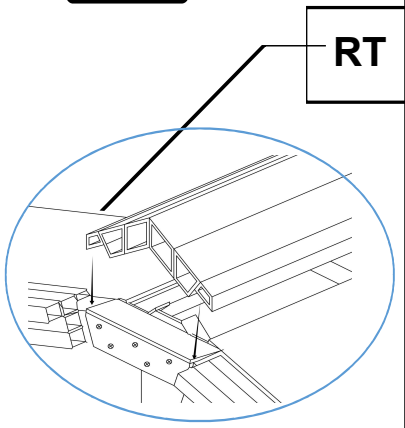


37





RRH
2pcs



FT1
8pcs

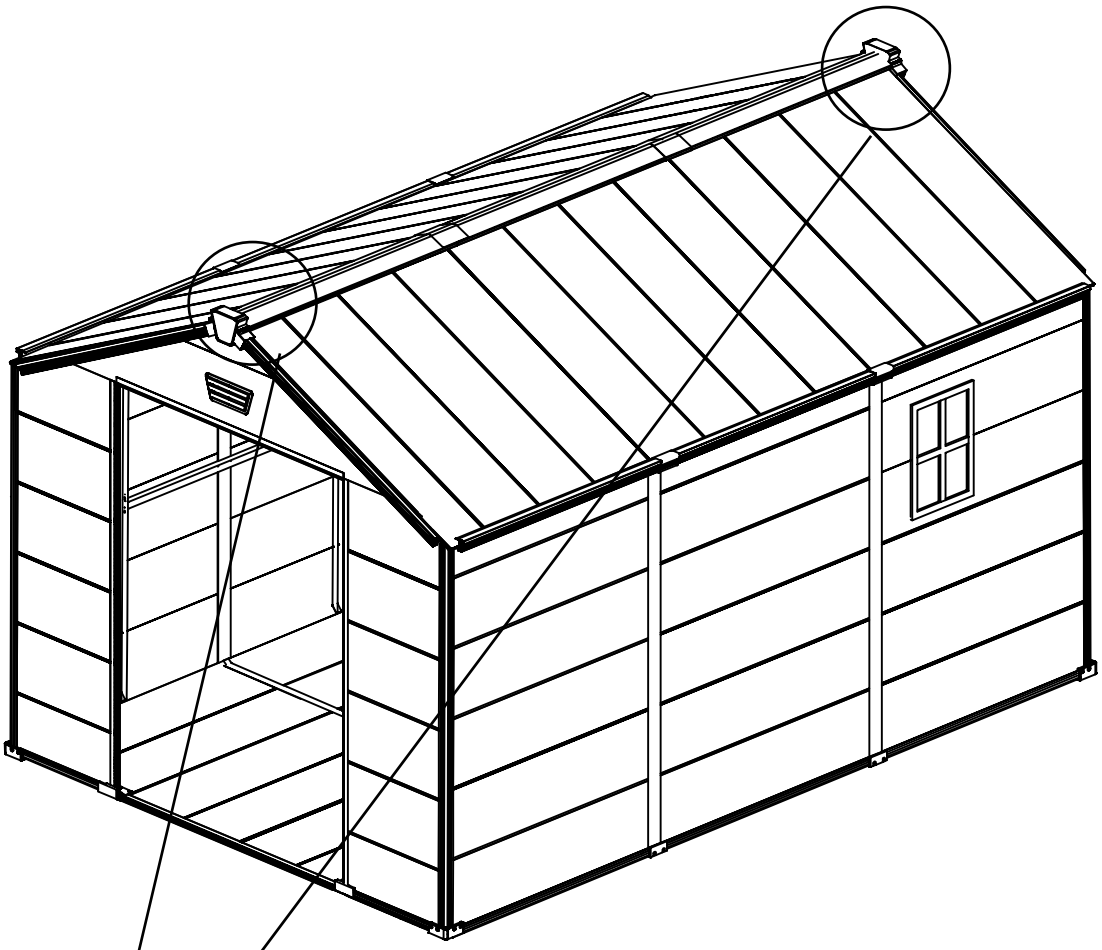

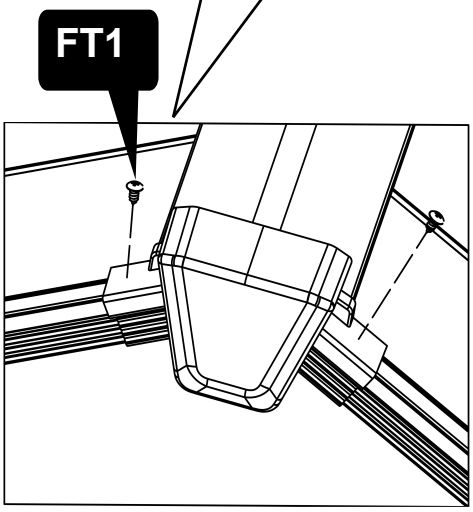

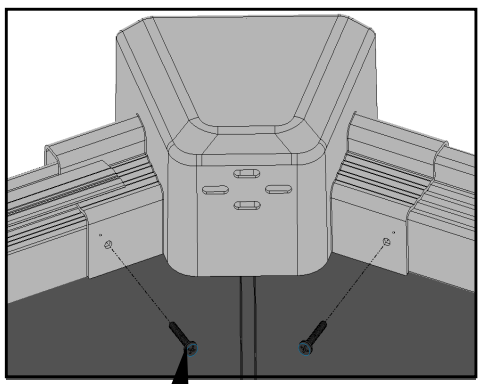


38



RRA
4pcs


FT11
8pcs



FT1
8pcs

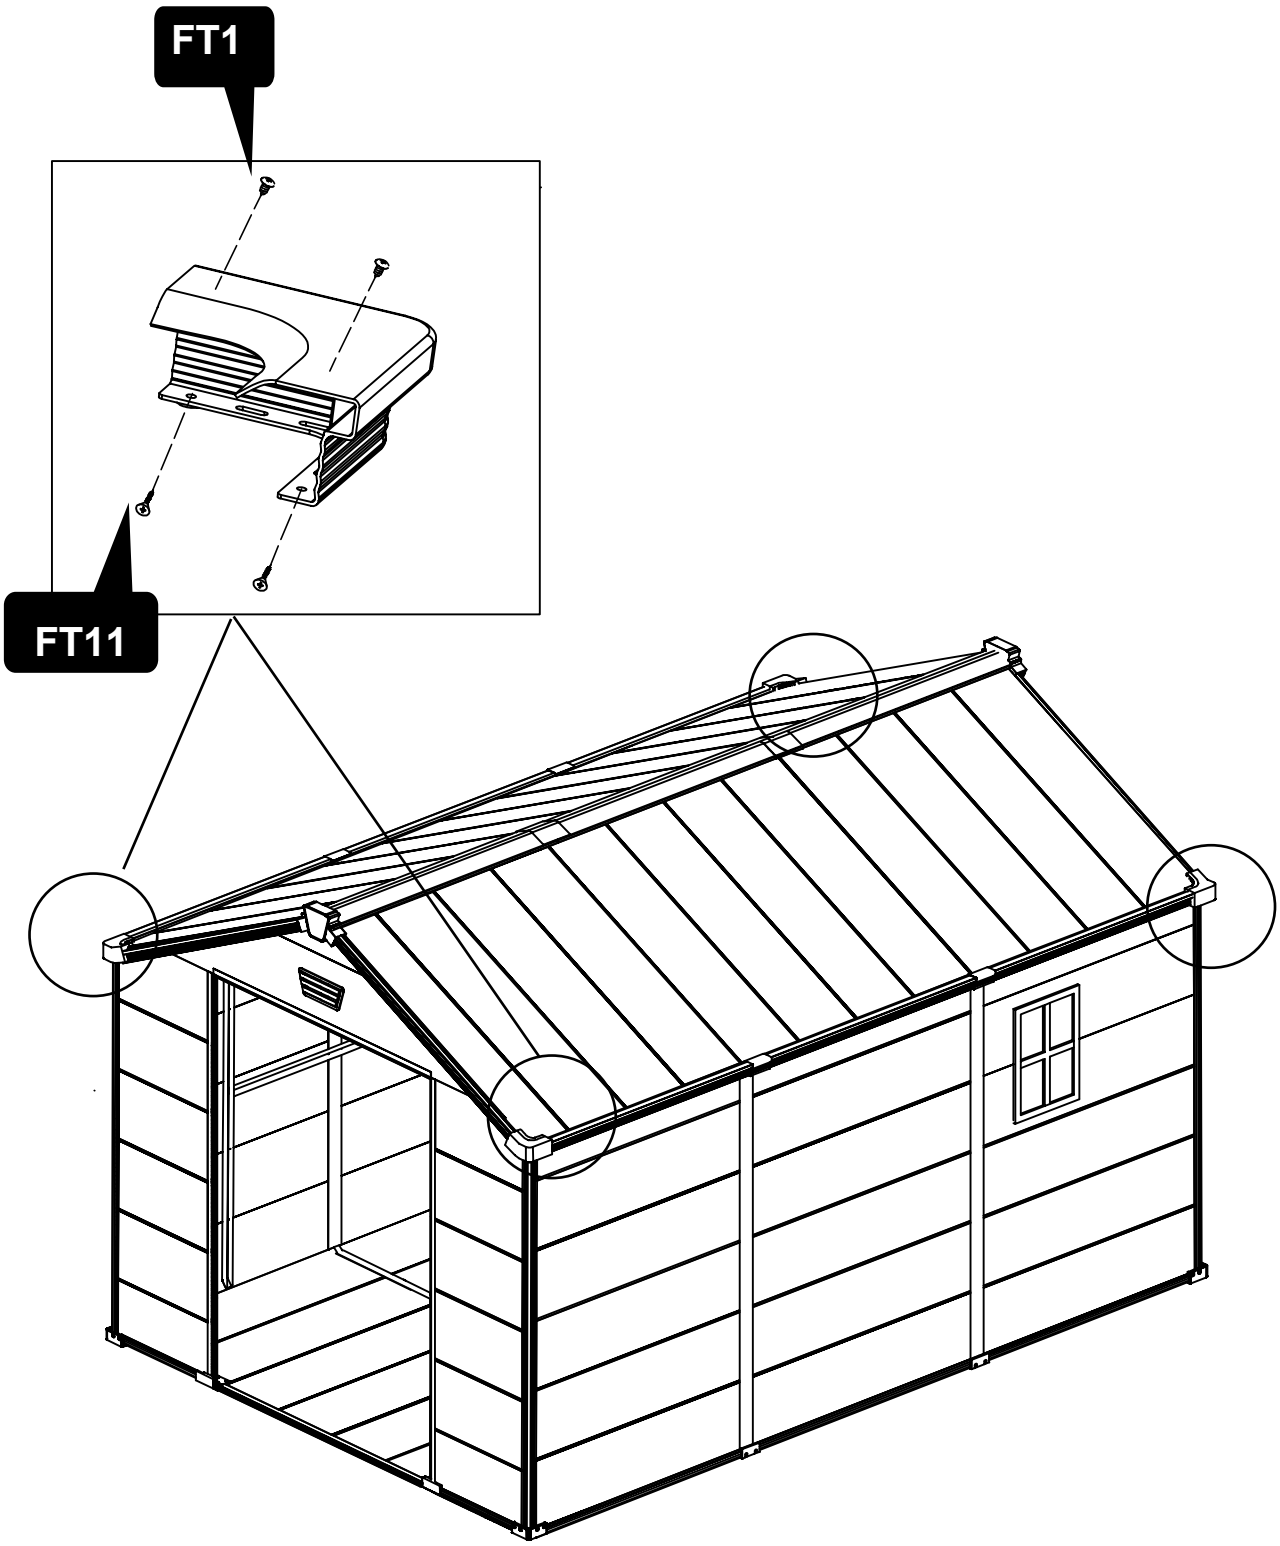


39

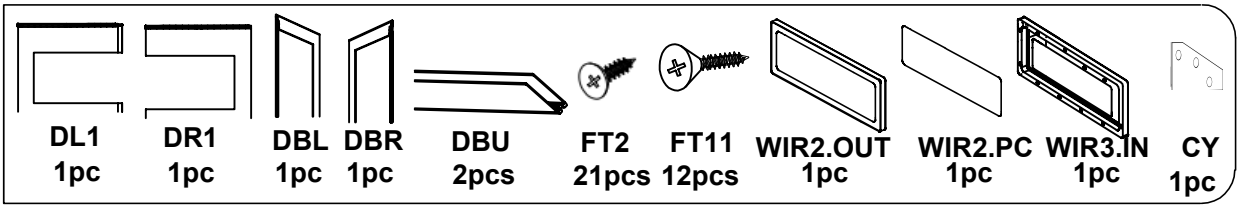
DL1
1pc
DR1
1pc
DBL
1pc
DBR
1pc
DBU
2pcs
FT2
21pcs
FT11
12pcs
WIR2.OUT
1pc
WIR2.PC
1pc
WIR3.IN
1pc
CY
1pc


LEFT DOOR

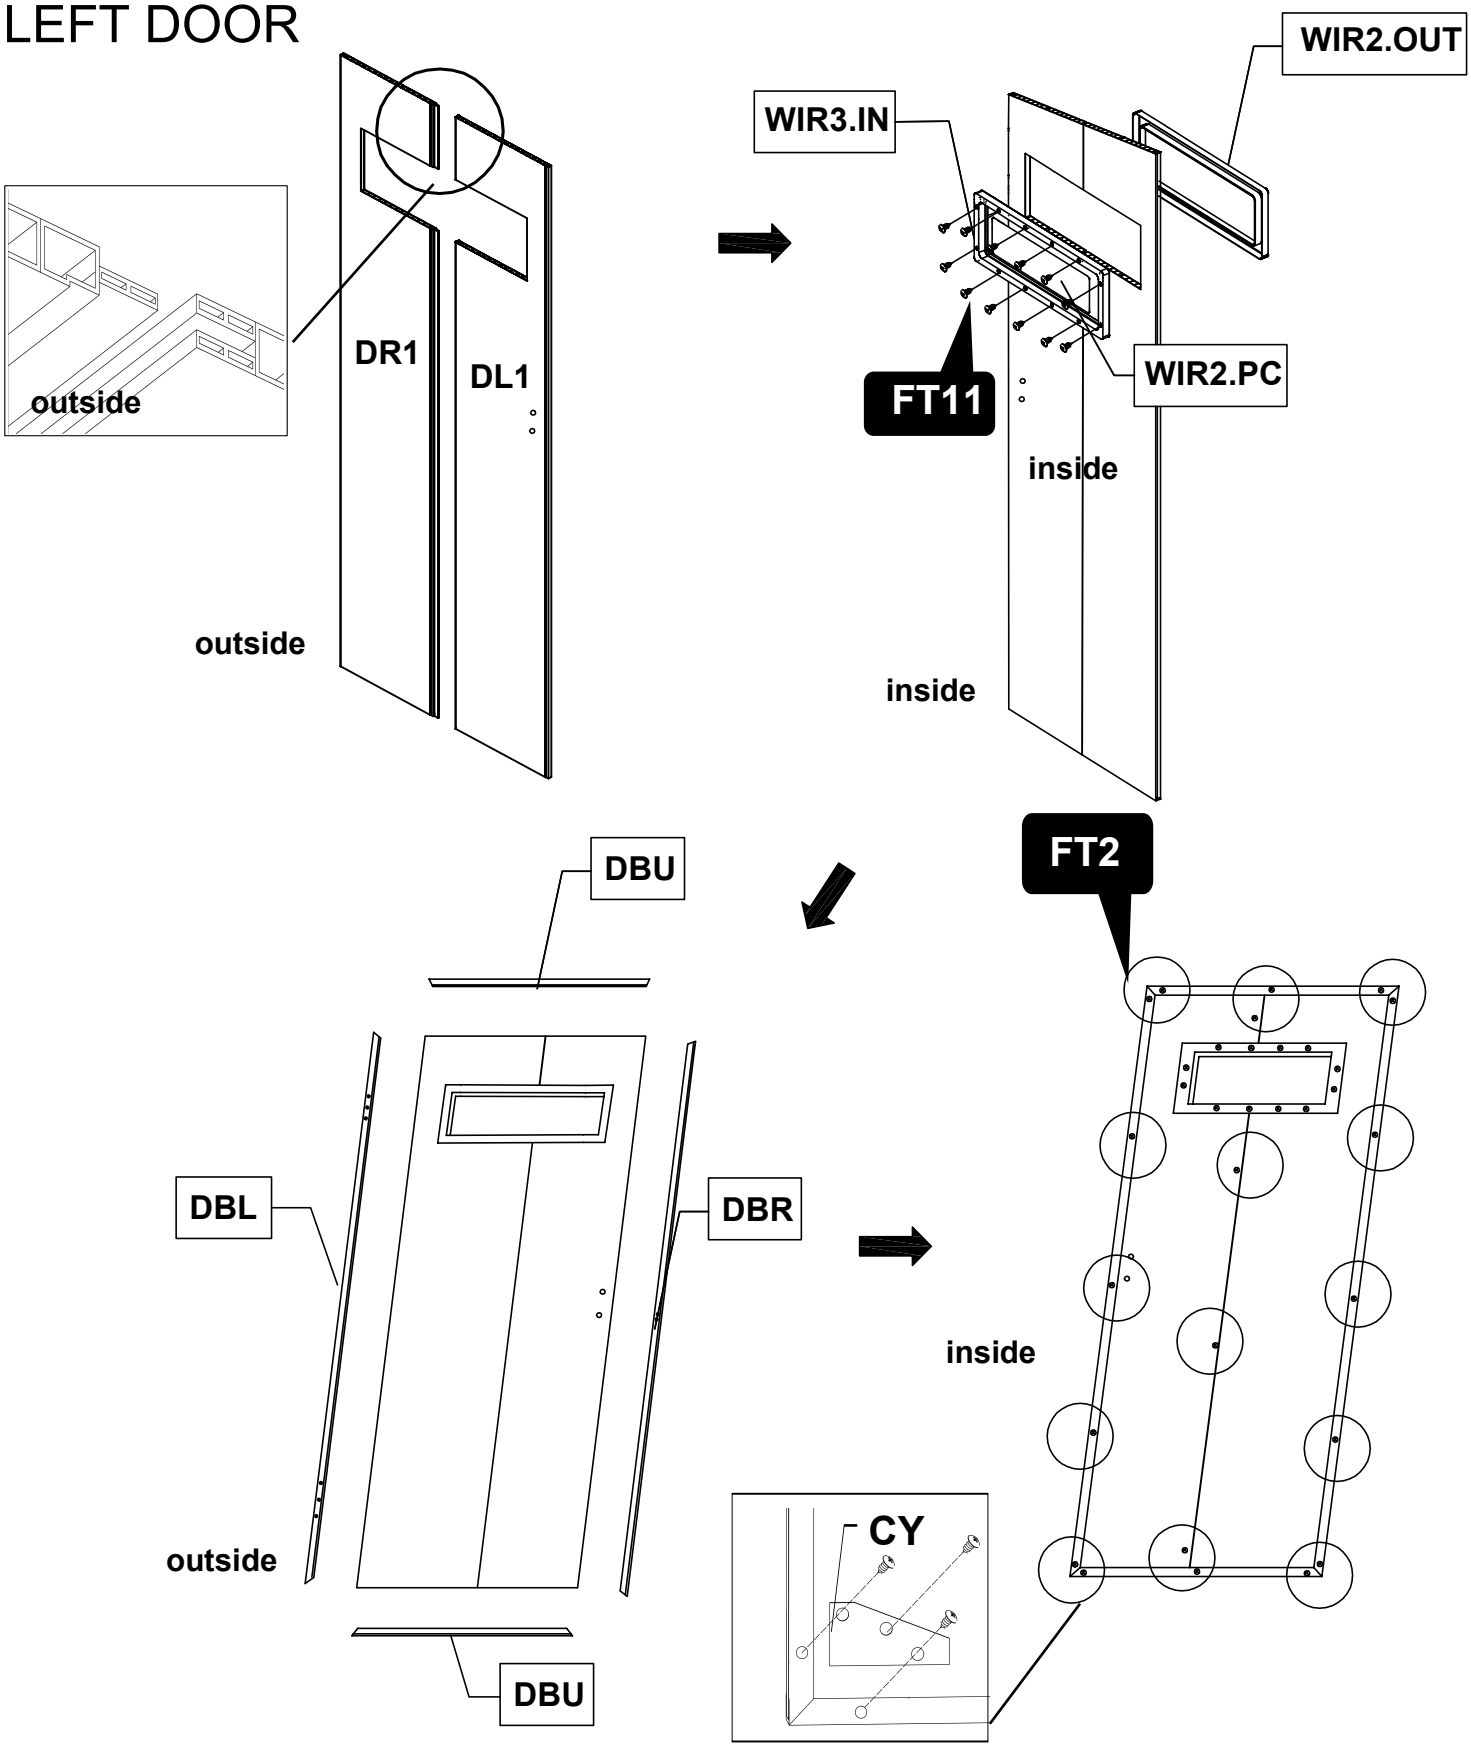

outside
DR1
DL1
outside
WIR2.OUT
WIR3.IN
FT11
WIR2.PC
inside
inside
DBU
FT2
DBL
DBR
outside
inside
CY
DBU

40

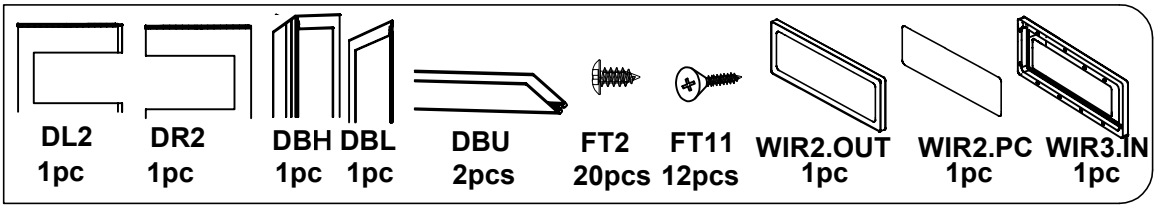



RIGHT DOOR

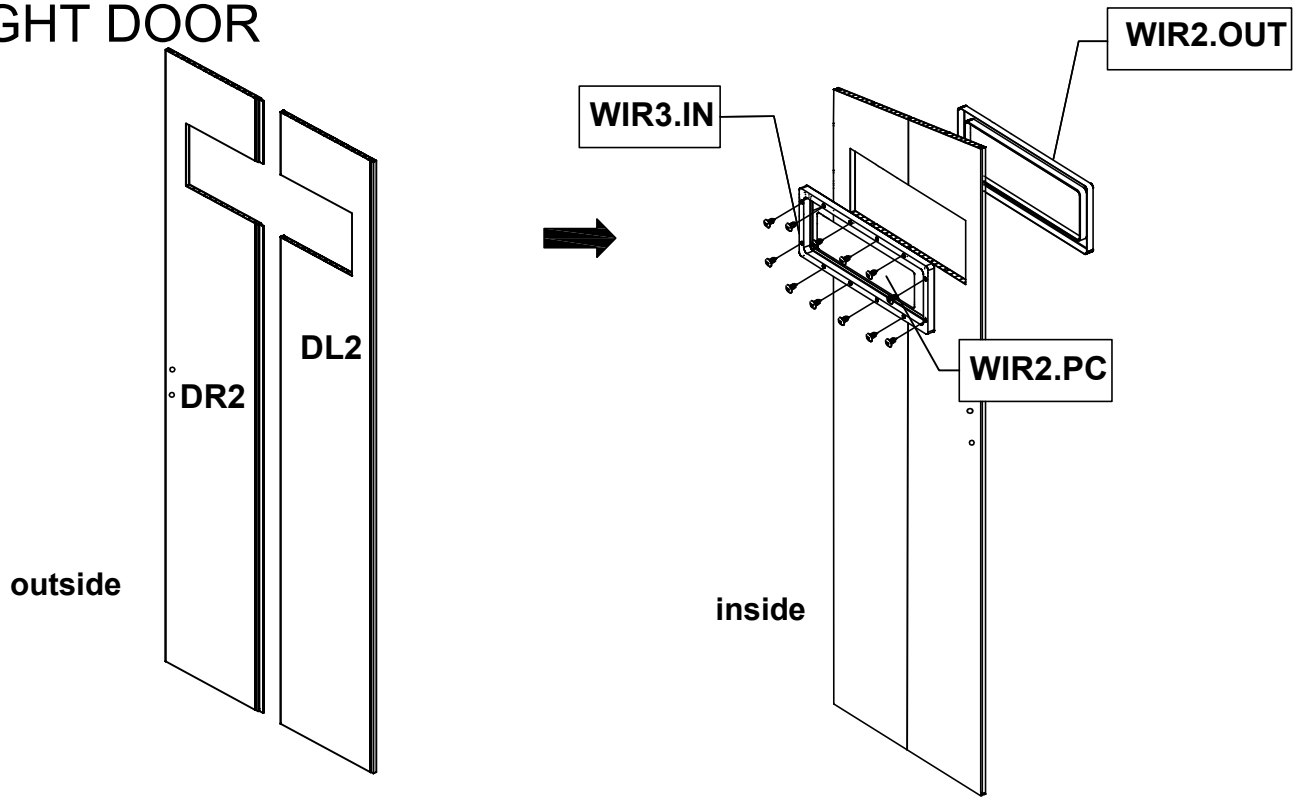

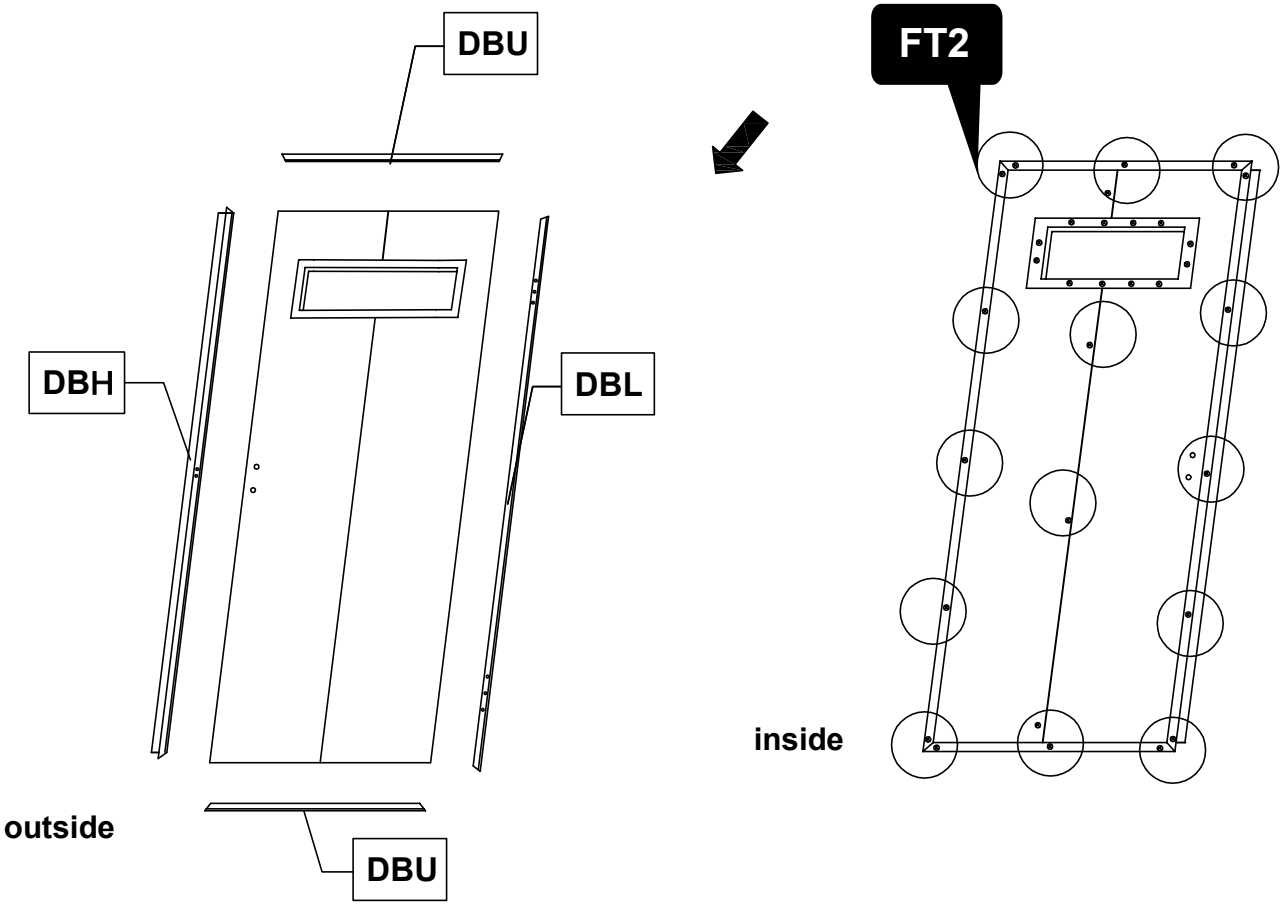



41

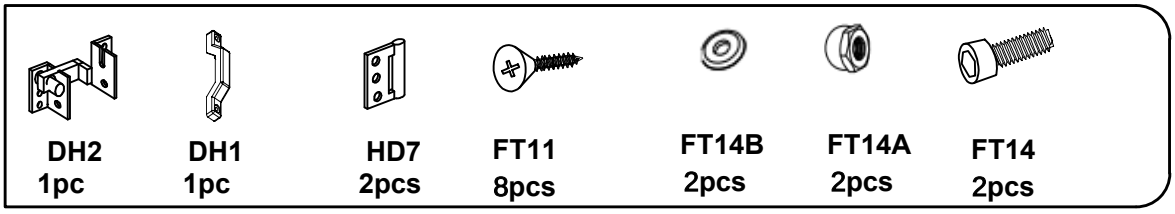
DH2
1pc
DH1
1pc
HD7
2pcs
FT11
8pcs
FT14B
2pcs
FT14A
2pcs
FT14
2pcs

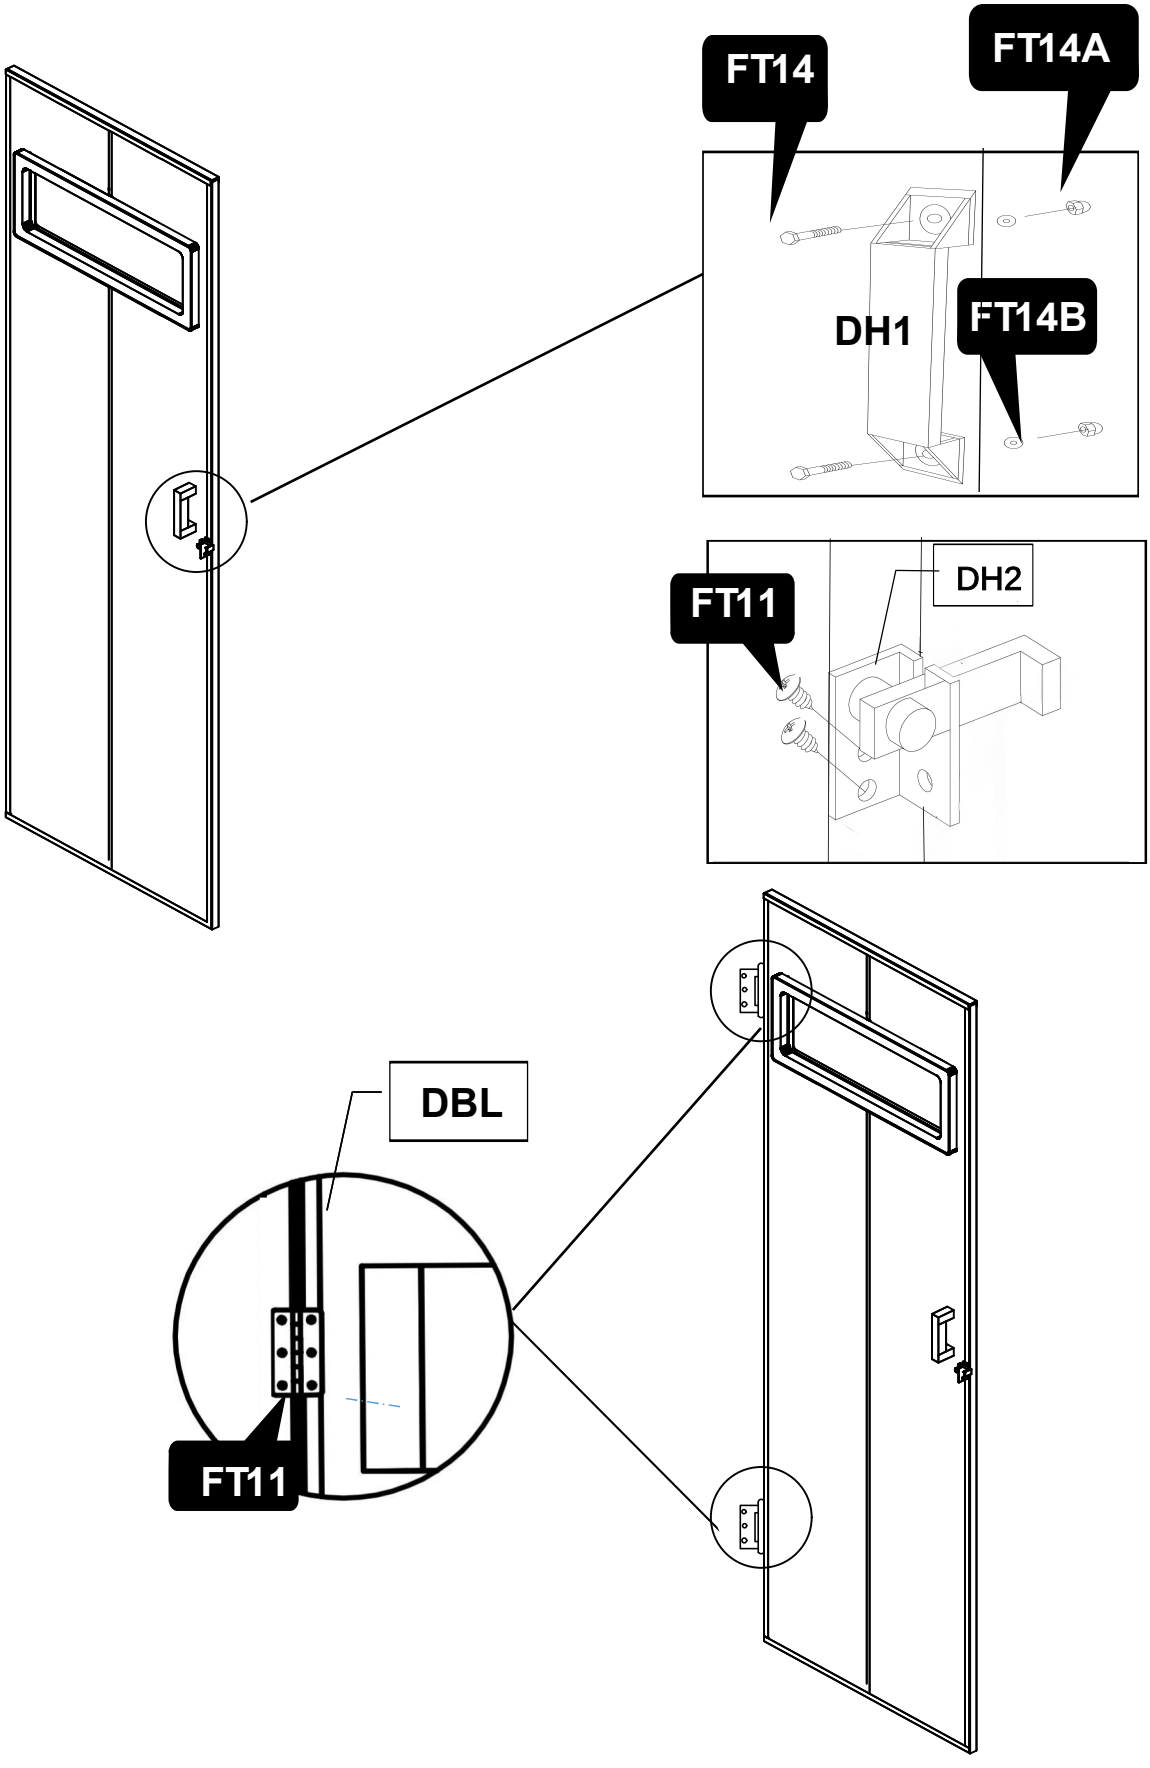
FT14
FT14A
DH1
FT14B
DH2
FT11
DBL
FT11

42

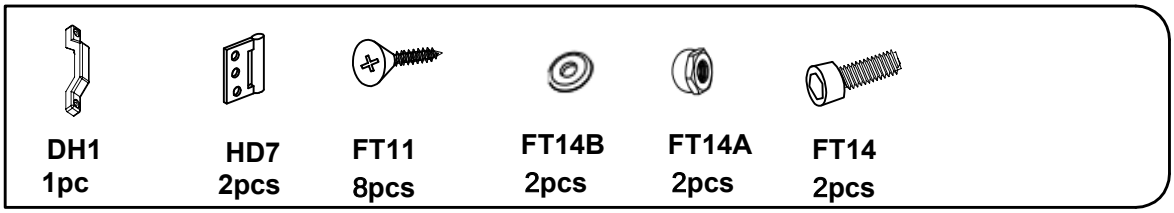

DH1
1pc
HD7
2pcs
FT11
8pcs
FT14B
2pcs
FT14A
2pcs
FT14
2pcs

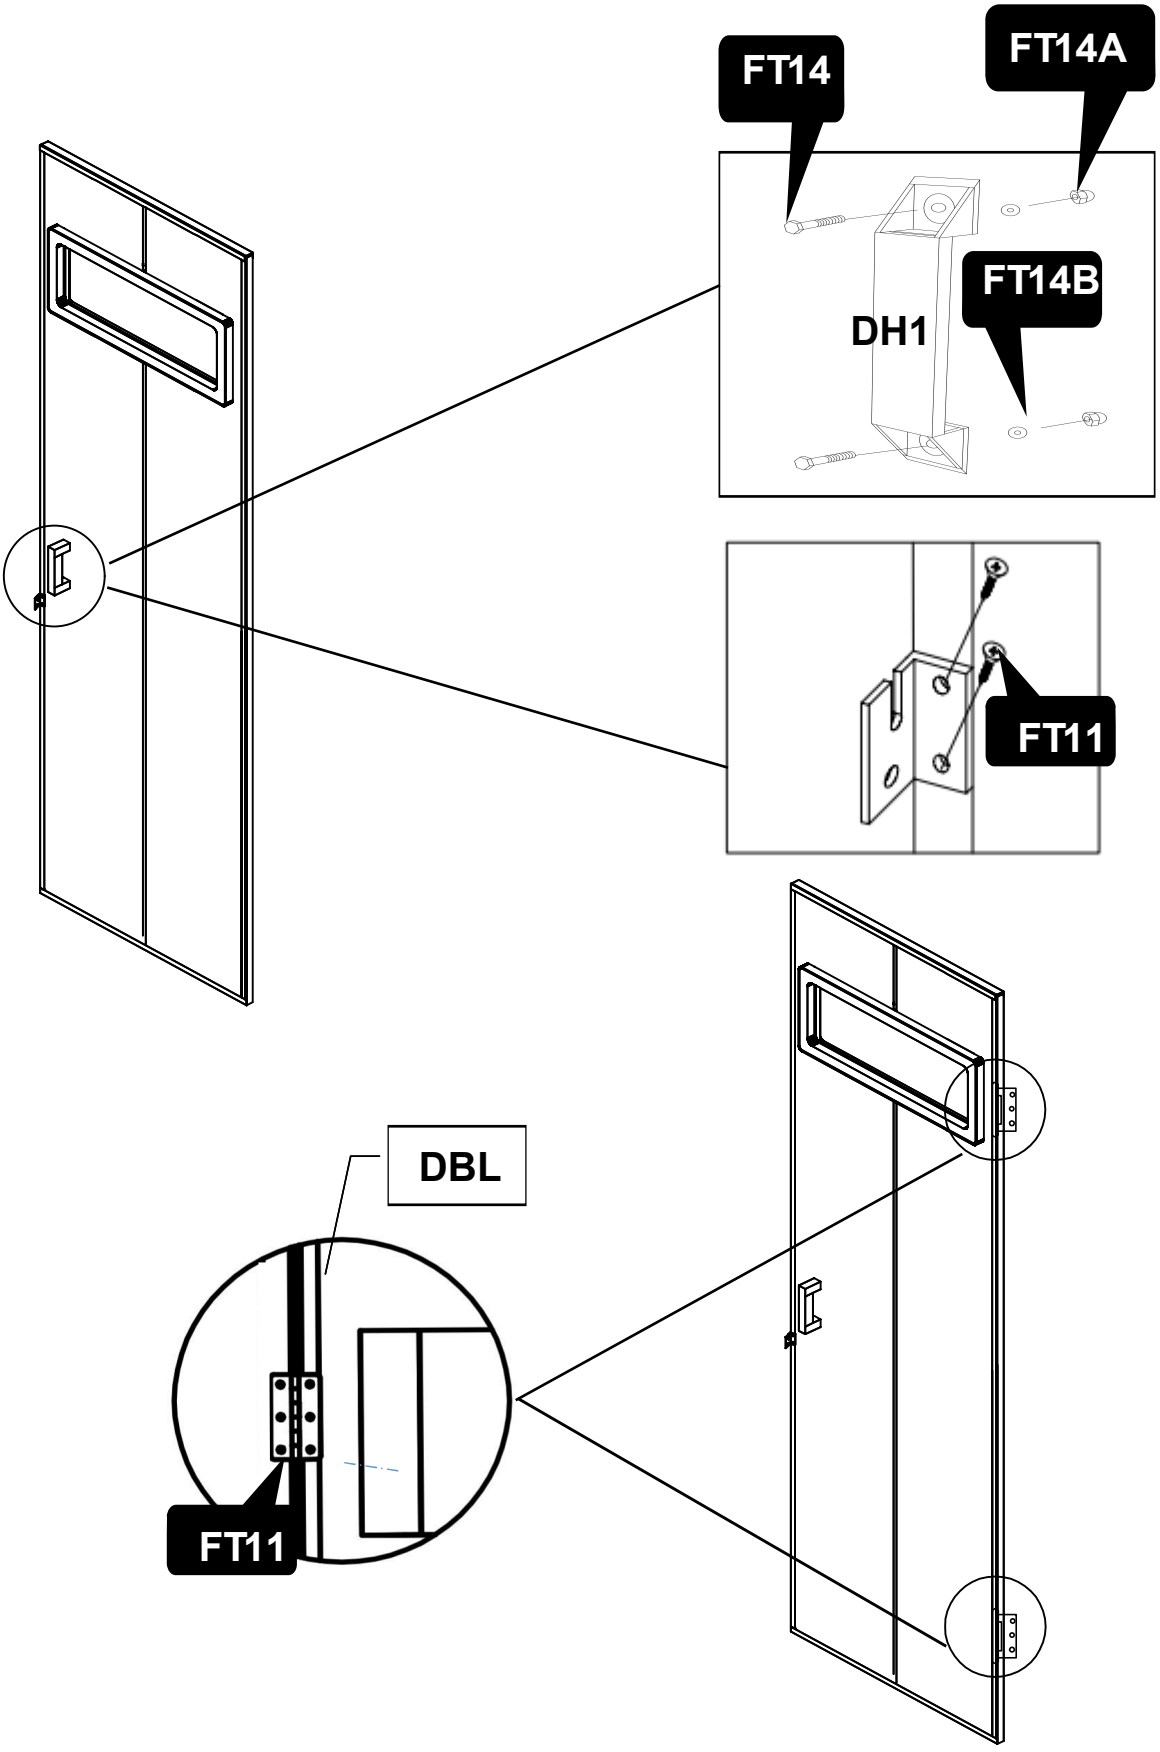
FT14
FT14A
FT14B
DH1
FT11
DBL
FT11


43



HD8
2pcs


FT1
4pcs

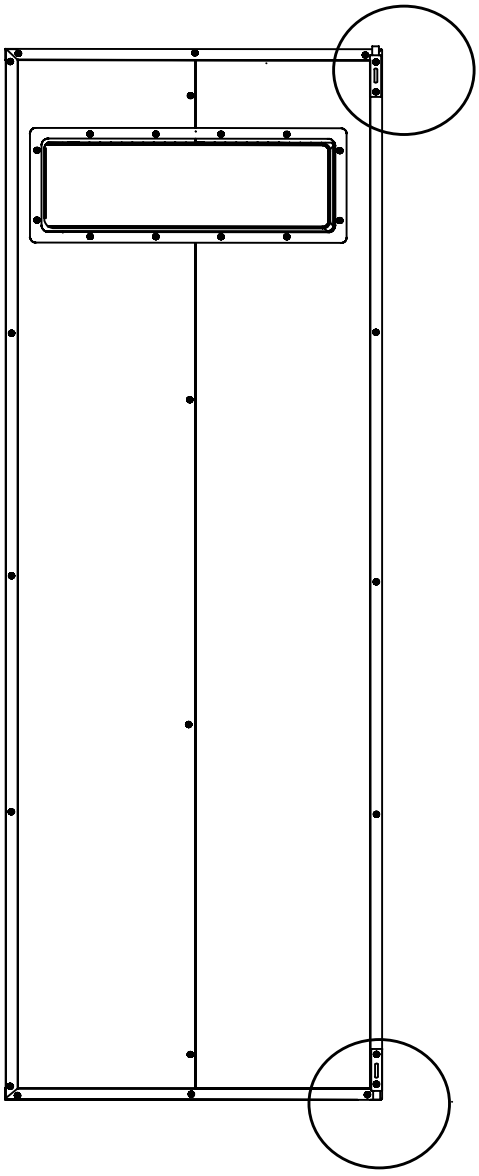

RIGHT DOOR

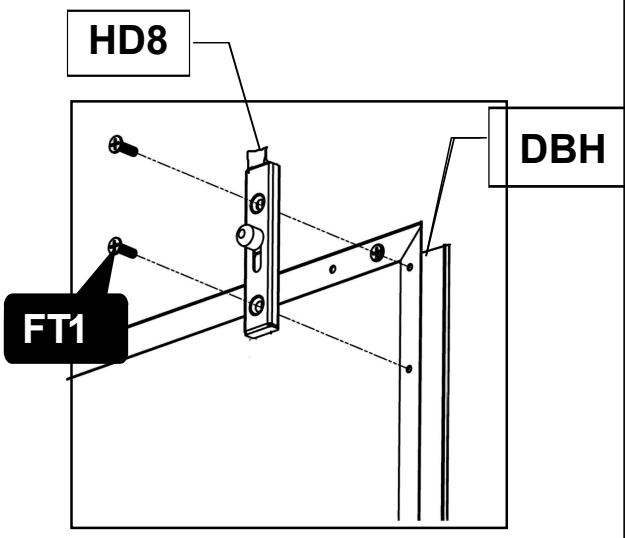

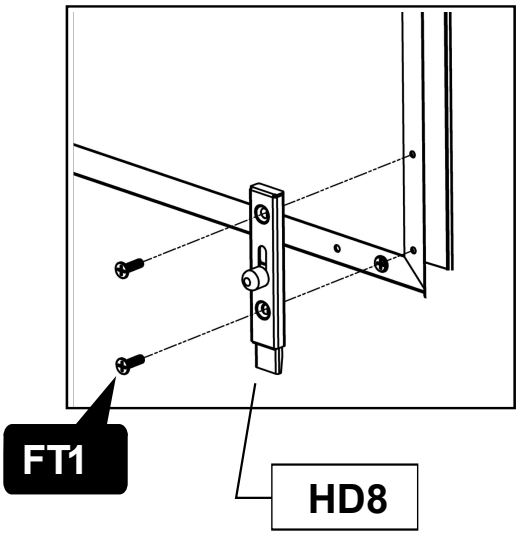


Install this part and tighten the screws gently and slowly.

44



FT11
12pcs





FT12
4pcs


OR




FT3
4pcs

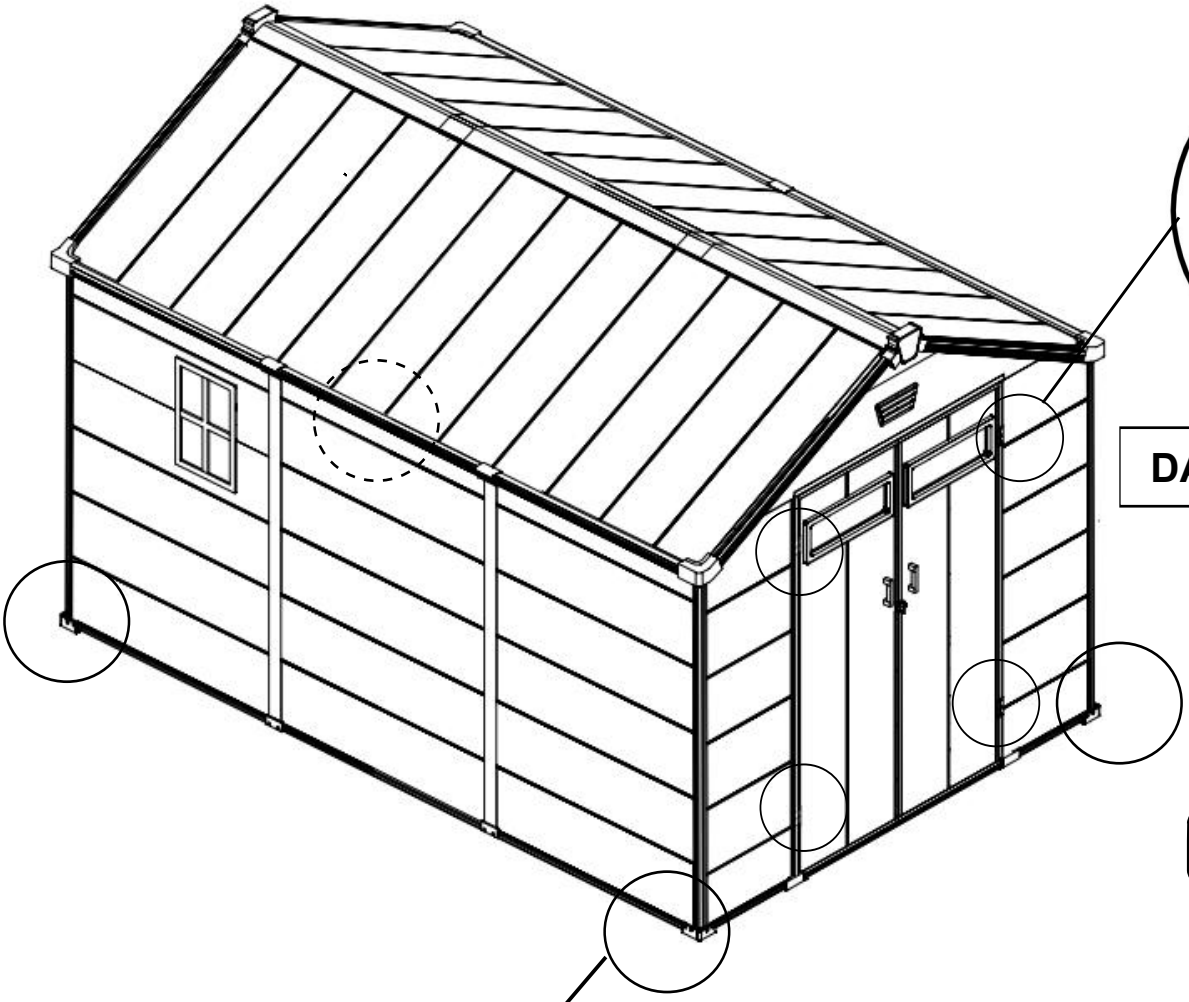

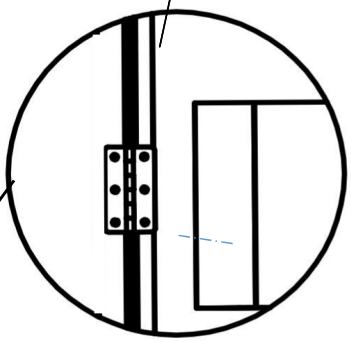

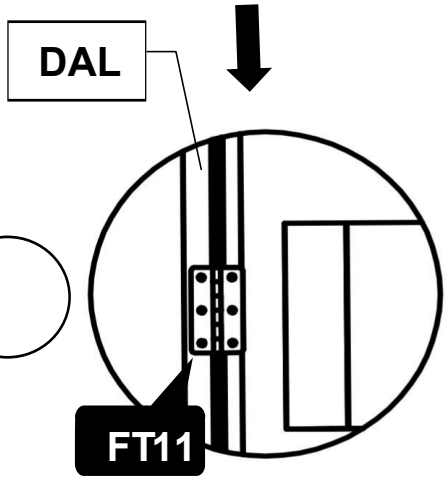

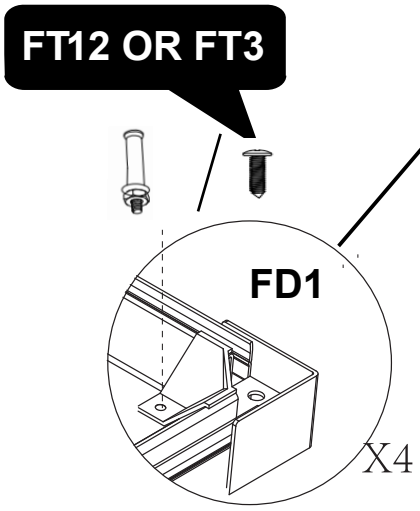

If you need to anchor the shed to a level solid surface (such as concrete or a wooden deck), please first remove the four FT2 screws installed during assembly (located at the four corners). Next, using your own impact drill, drill through the flooring at those same locations; then, secure the shed using FT12 screws for concrete surfaces or FT3 screws for wooden decking.

Thank you for purchasing and using our product; please feel free to contact us if you have any questions or feedback.