


HEADBOARD

ASSEMBLY INSTRUCTIONS




PARTS AND FITTING PACKAGING DETAIL

BOX HEADBOARD


- A. HEADBOARD PANEL 1 PC
- B. HEADBOARD LEG - LEFT 1 PC
- C. HEADBOARD LEG - RIGHT 1 PC

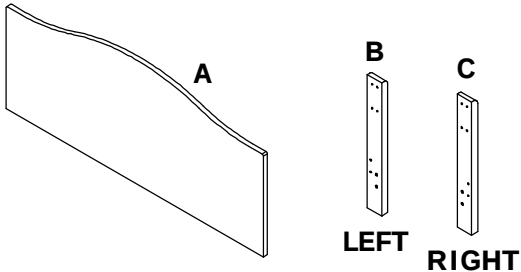

HARDWARE PACKED IN BOX HEADBOARD

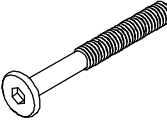
1	ALLEN BOLT 50MM	12 PCS	2	SPRING WASHER	16 PCS	3	WASHER 6x12.5MM	12 PCS
								
4	ALLEN BOLT 30MM	4 PCS	5	WASHER 6x16MM	4 PCS	6	ALLEN KEY	1 PC
								

OPTION 1 HEADBOARD TO THE BED FRAME

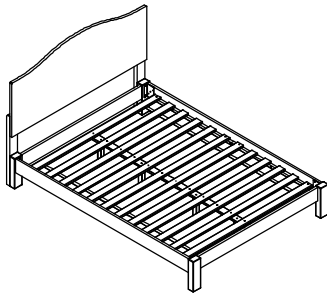


STEP 1 :

ATTACH THE HEAD BOARD LEG (B/C) TO THE HEADBOARD PANEL (A) USING ALLEN BOLT 50MM (1), SPRING WASHER (2), AND WASHER (3). USE ALLEN KEY (6) TO TIGHTEN THE BOLTS.

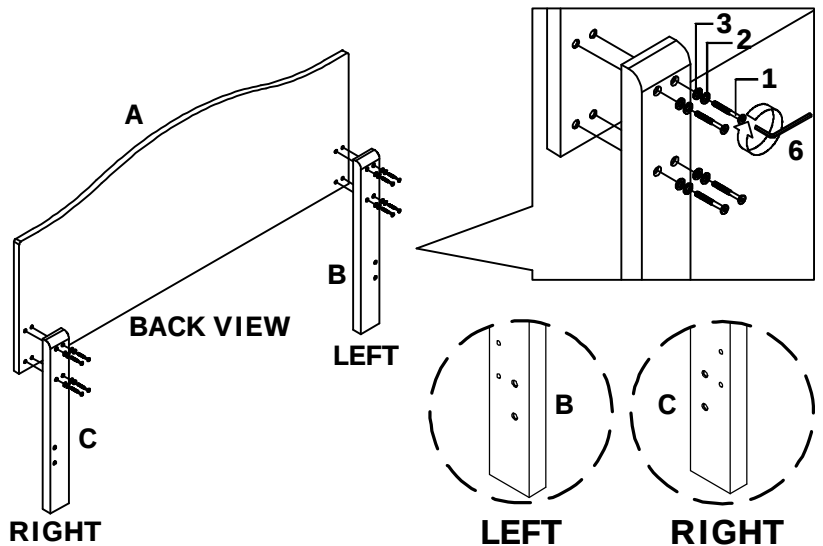


OPTION 2 HEADBOARD TO METAL BED FRAME

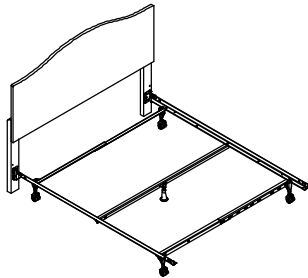

STEP 2 : OPTION 1 HEADBOARD TO THE BED FRAME

FOLLOW THE ILLUSTRATION, PUT THE ALLEN BOLT 50MM (1), SPRING WASHER (2), AND WASHER (3) IN THE PREDILLED HOLE. USE ALLEN KEY (6) TO TIGHTEN THE BOLTS.

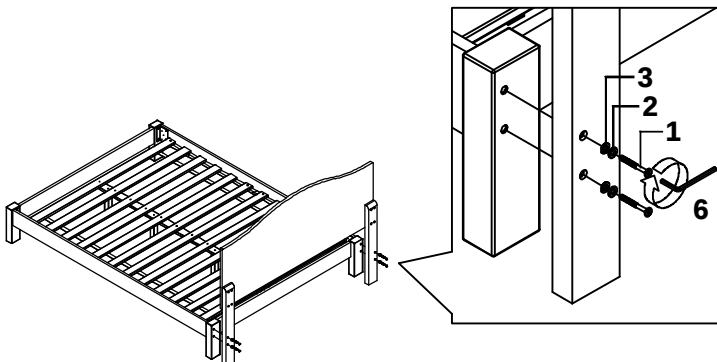

STEP 2 : OPTION 2 HEADBOARD TO METAL BED FRAME

FOLLOW THE ILLUSTRATION, PUT THE ALLEN BOLT 30MM (4), SPRING WASHER (2), AND WASHER (5) IN THE PREDILLED HOLE. USE ALLEN KEY (6) TO TIGHTEN THE BOLTS.

