


Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE? CALL US**

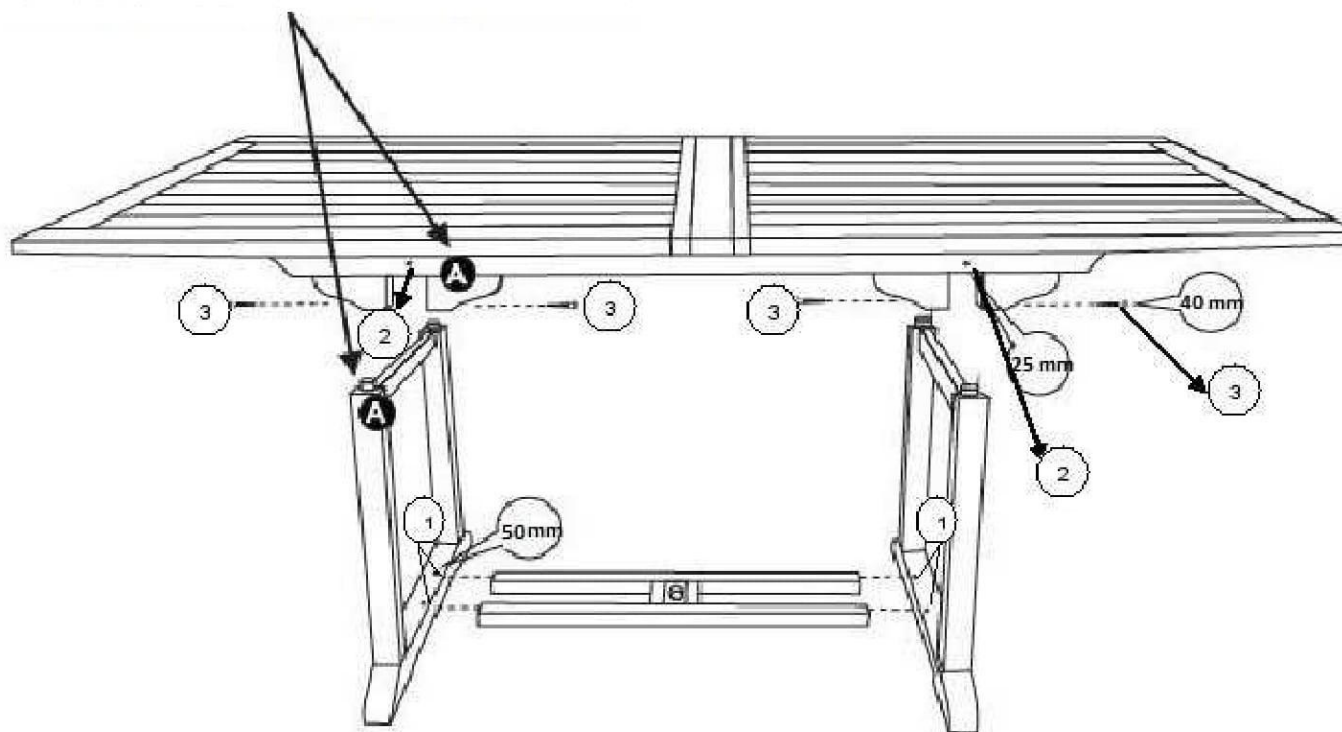

***Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly***

Hardware



1. Custom Bolt 50 mm (4 Pcs)



2. Custom Bolt 25 mm (4 Pcs)



3. Screw 40 mm (8 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section