

ASSEMBLY INSTRUCTIONS

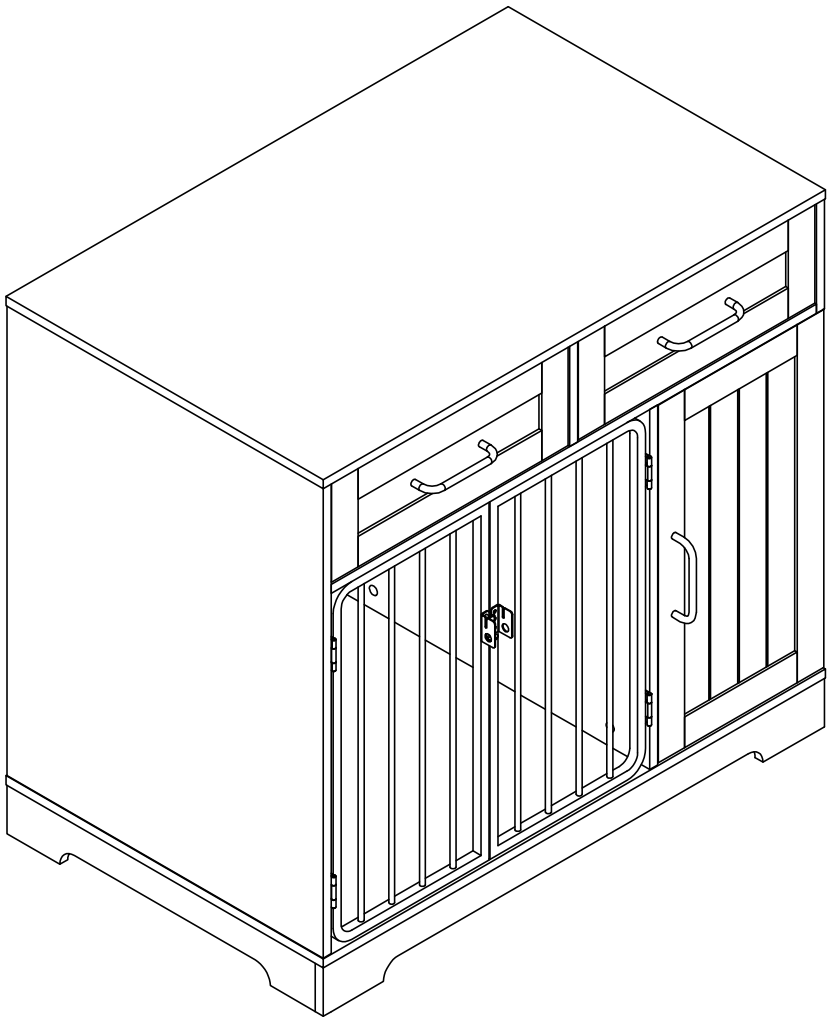
















NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS

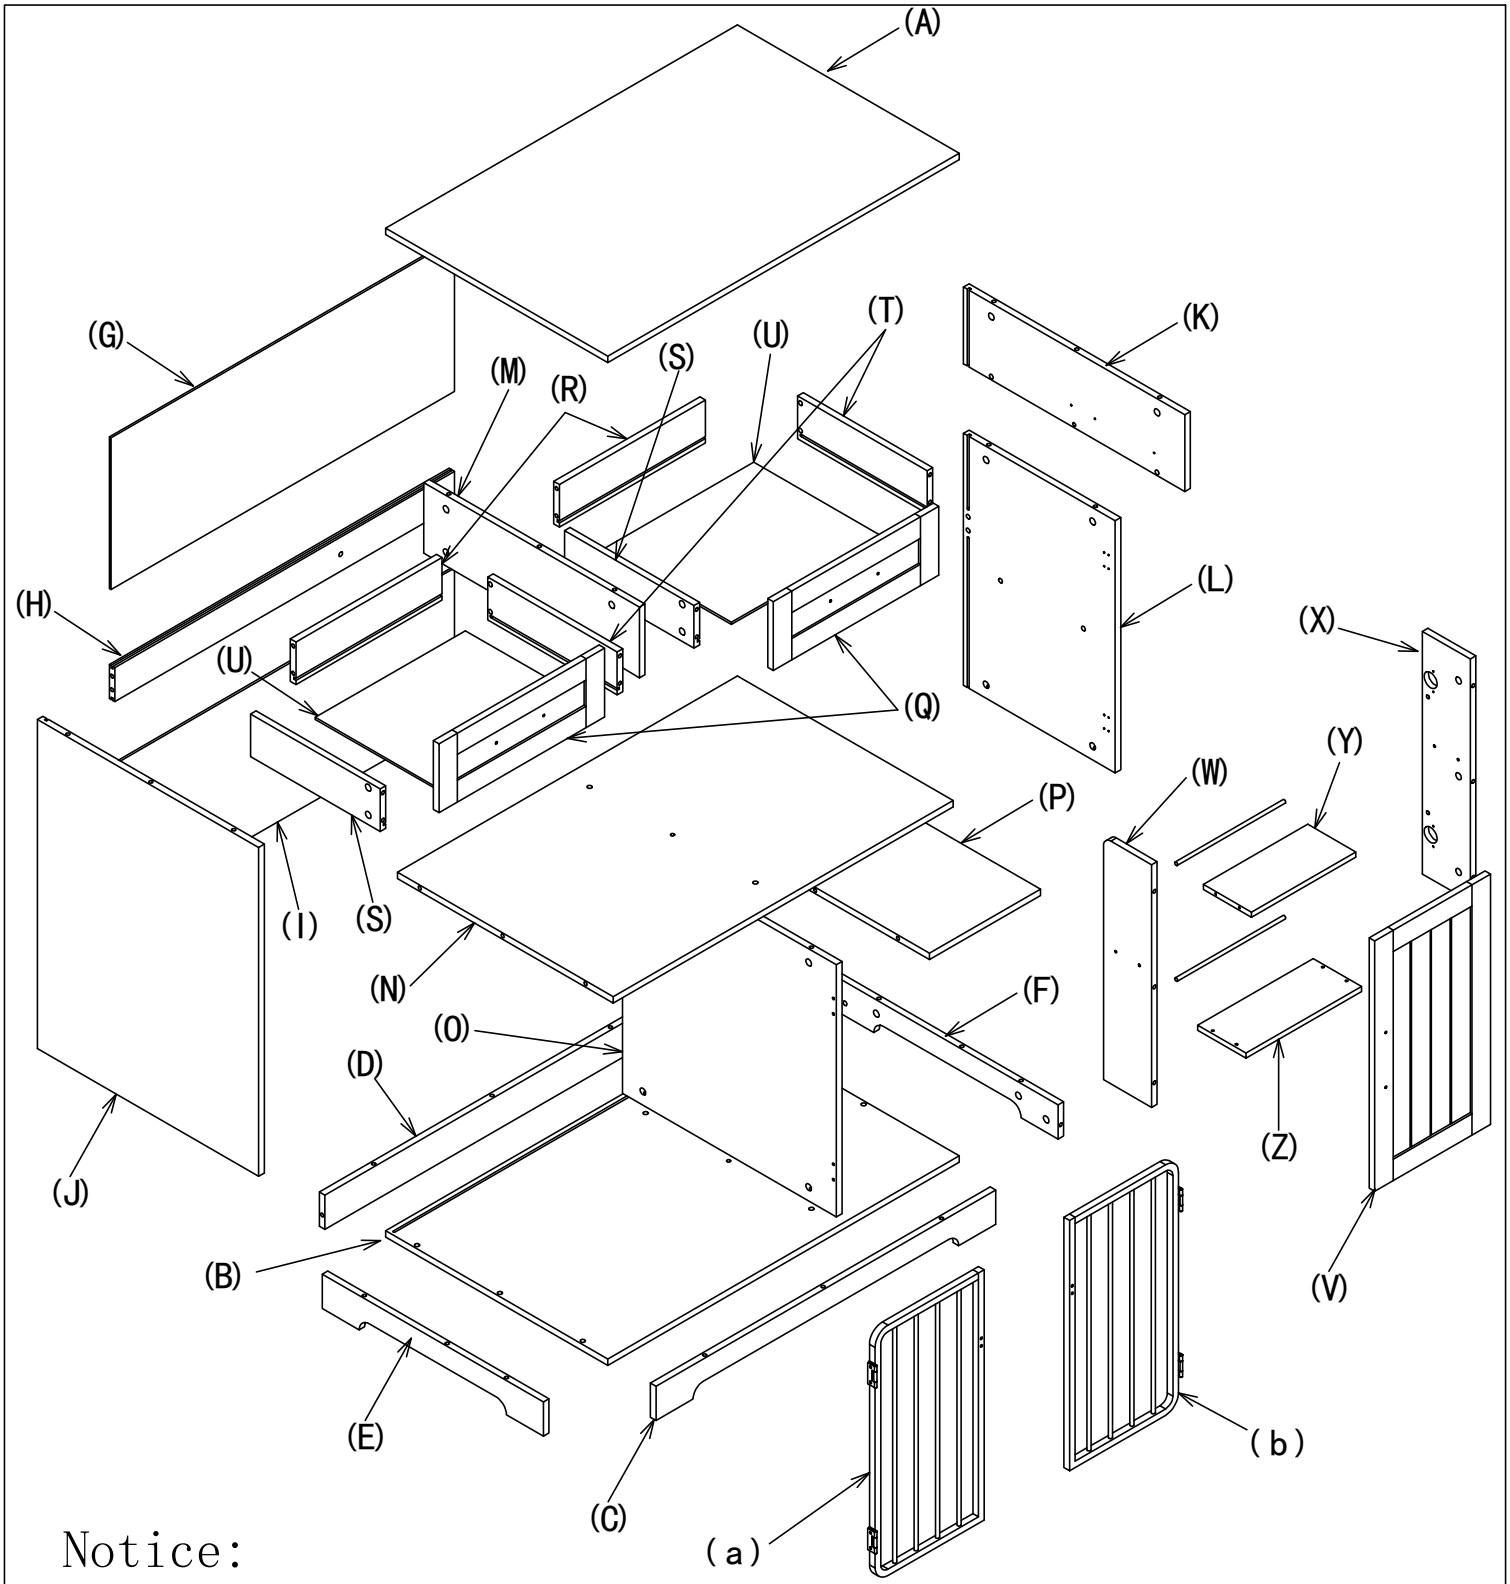











Notice:







1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

PART LIST

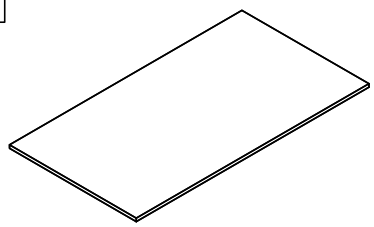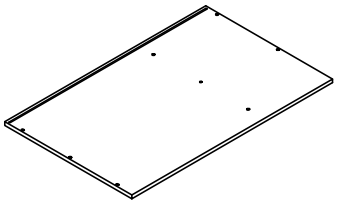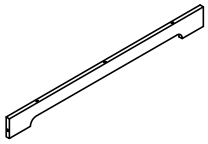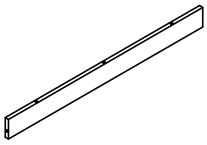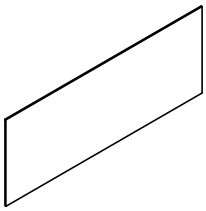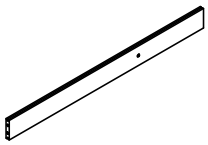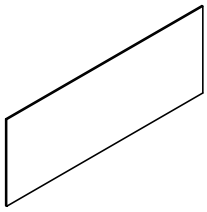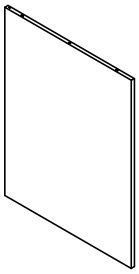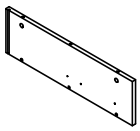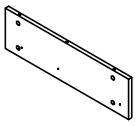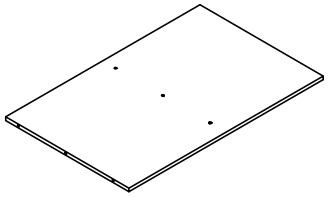
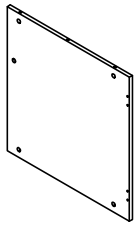
A  Top Panel(1PC)	B  Bottom Panel(1PC)	C  Front Strip(1PC)
D  Base Strip(1PC)	E  Left Strip(1PC)	F  Right Strip(1PC)
G  Upper Backplane(1PC)	H  Pull Gear(1PC)	I  Lower Backplane(1PC)
J  Left Panel(1PC)	K  Upper Right Panel(1PC)	L  Lower Right Panel(1PC)
M  Upper Center Panel(1PC)	N  Upper Panel(1PC)	O  Lower Center Panel(1PC)

PART LIST


P  Lower Panel(1PC)	Q  Drawer Panel(2PCS)	R  Drawer Back Panel(2PCS)
S  Drawer Left(2PCS)	T  Drawer Right(2PCS)	U  Drawer Bottom(2PCS)
V  Right Frame(1PC)	W  Inner Left Panel(1PC)	X  Inner Right Panel(1PC)
Y  Inner Panel(1PC)	Z  Inner Bottom Panel(1PC)	a  Left Frame(1PC)
b  Center Frame(1PC)		

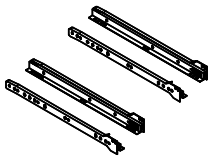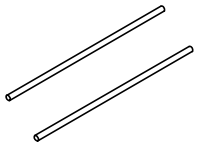HARDWORE LIST		
1  Bolt M5*40(8PCS)	2  Door Suction (1PC) Wood Screw M3*16(2PCS)	3  Wood Screw M3.5*16(12PCS)
4  Cam Bolt (67PCS)	5  Big Cam Lock (67PCS)	6  Wood Dowel ϕ8*40(11PCS)
7  90°-Hinge(2PCS)	8  Handle (1PC) Bolt M4*20(2PCS)	9  Sliding Rail (2SETS)
10  Circular Tube(2PCS)	11  Backplane Buckle (12PCS)	12  Black Wood Screw M3.5*12(8PCS)
13  Wood Screw M3.5*12(20PCS)	14  Handle (2PCS) Bolt M4*10(4PCS)	15  Beauty Paste (67PCS)


HARDWORE LIST

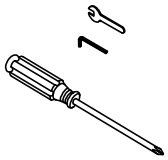16	17	18
		
Lock The Door(1SET)	Black Bolt M4*20(4SETS)	Allen Key 3mm(1PC) Open Spanner(1PC)


CARTON CONTENT:

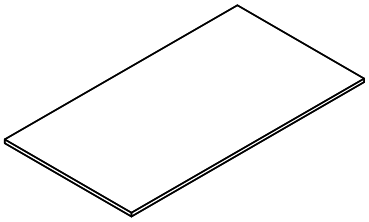


A Top Panel(1PC)

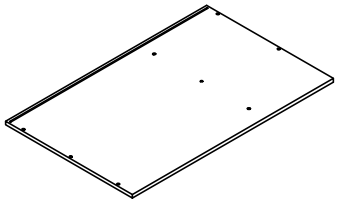


B Bottom Panel(1PC)

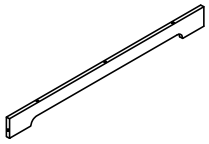


C Front Strip(1PC)

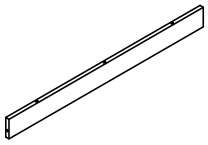


D Base Strip(1PC)




E Left Strip(1PC)




F Right Strip(1PC)

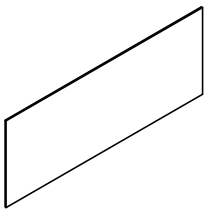


G Upper Backplane(1PC)

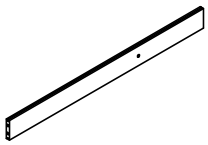


H Pull Gear(1PC)

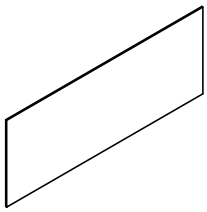


I Lower Backplane(1PC)

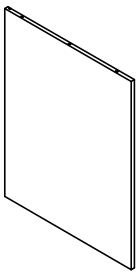


J Left Panel(1PC)

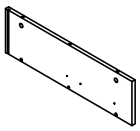


K Upper Right Panel(1PC)




L Lower Right Panel(1PC)

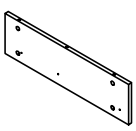

M Upper Center Panel(1PC)

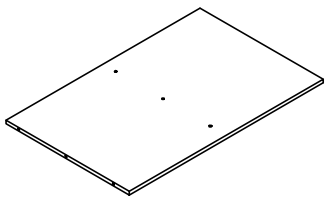


N Upper Panel(1PC)

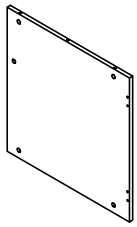


O Lower Center Panel(1PC)

CARTON CONTENT:



P Lower Panel(1PC)



Q Drawer Panel(2PCS)




R Drawer Back Panel(2PCS)




S Drawer Left(2PCS)




T Drawer Right(2PCS)




U Drawer Bottom(2PCS)




V Right Frame(1PC)




W Inner Left Panel(1PC)




X Inner Right Panel(1PC)




Y Inner Panel(1PC)



Z Inner Bottom Panel(1PC)




a Left Frame(1PC)




b Center Frame(1PC)

STEP 1

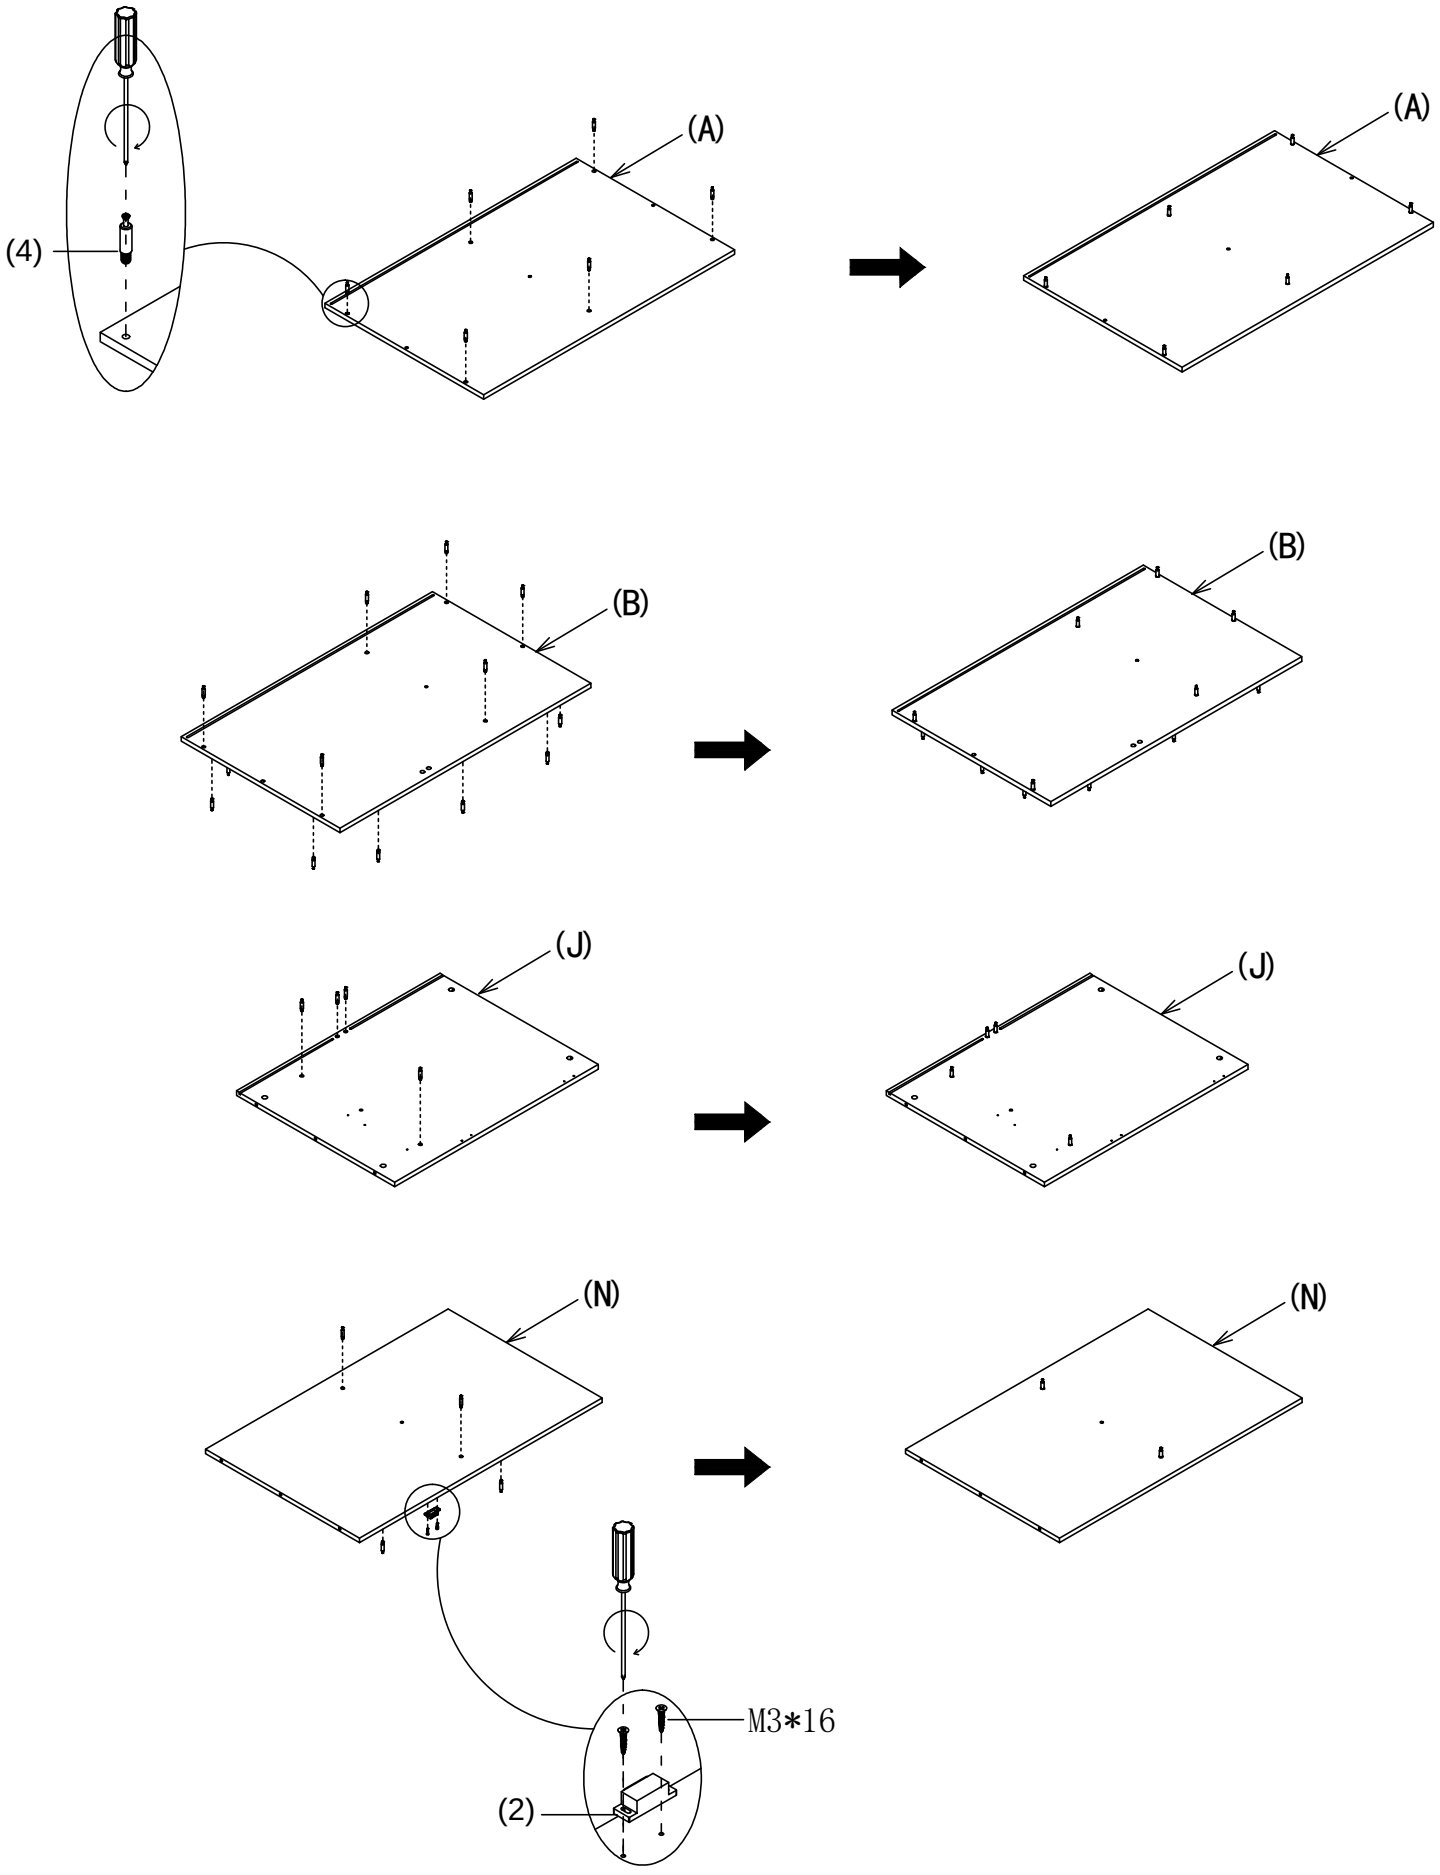


2		Door Suction/Wood Screw	1PC	4	Cam Bolt	30PCS

STEP 2

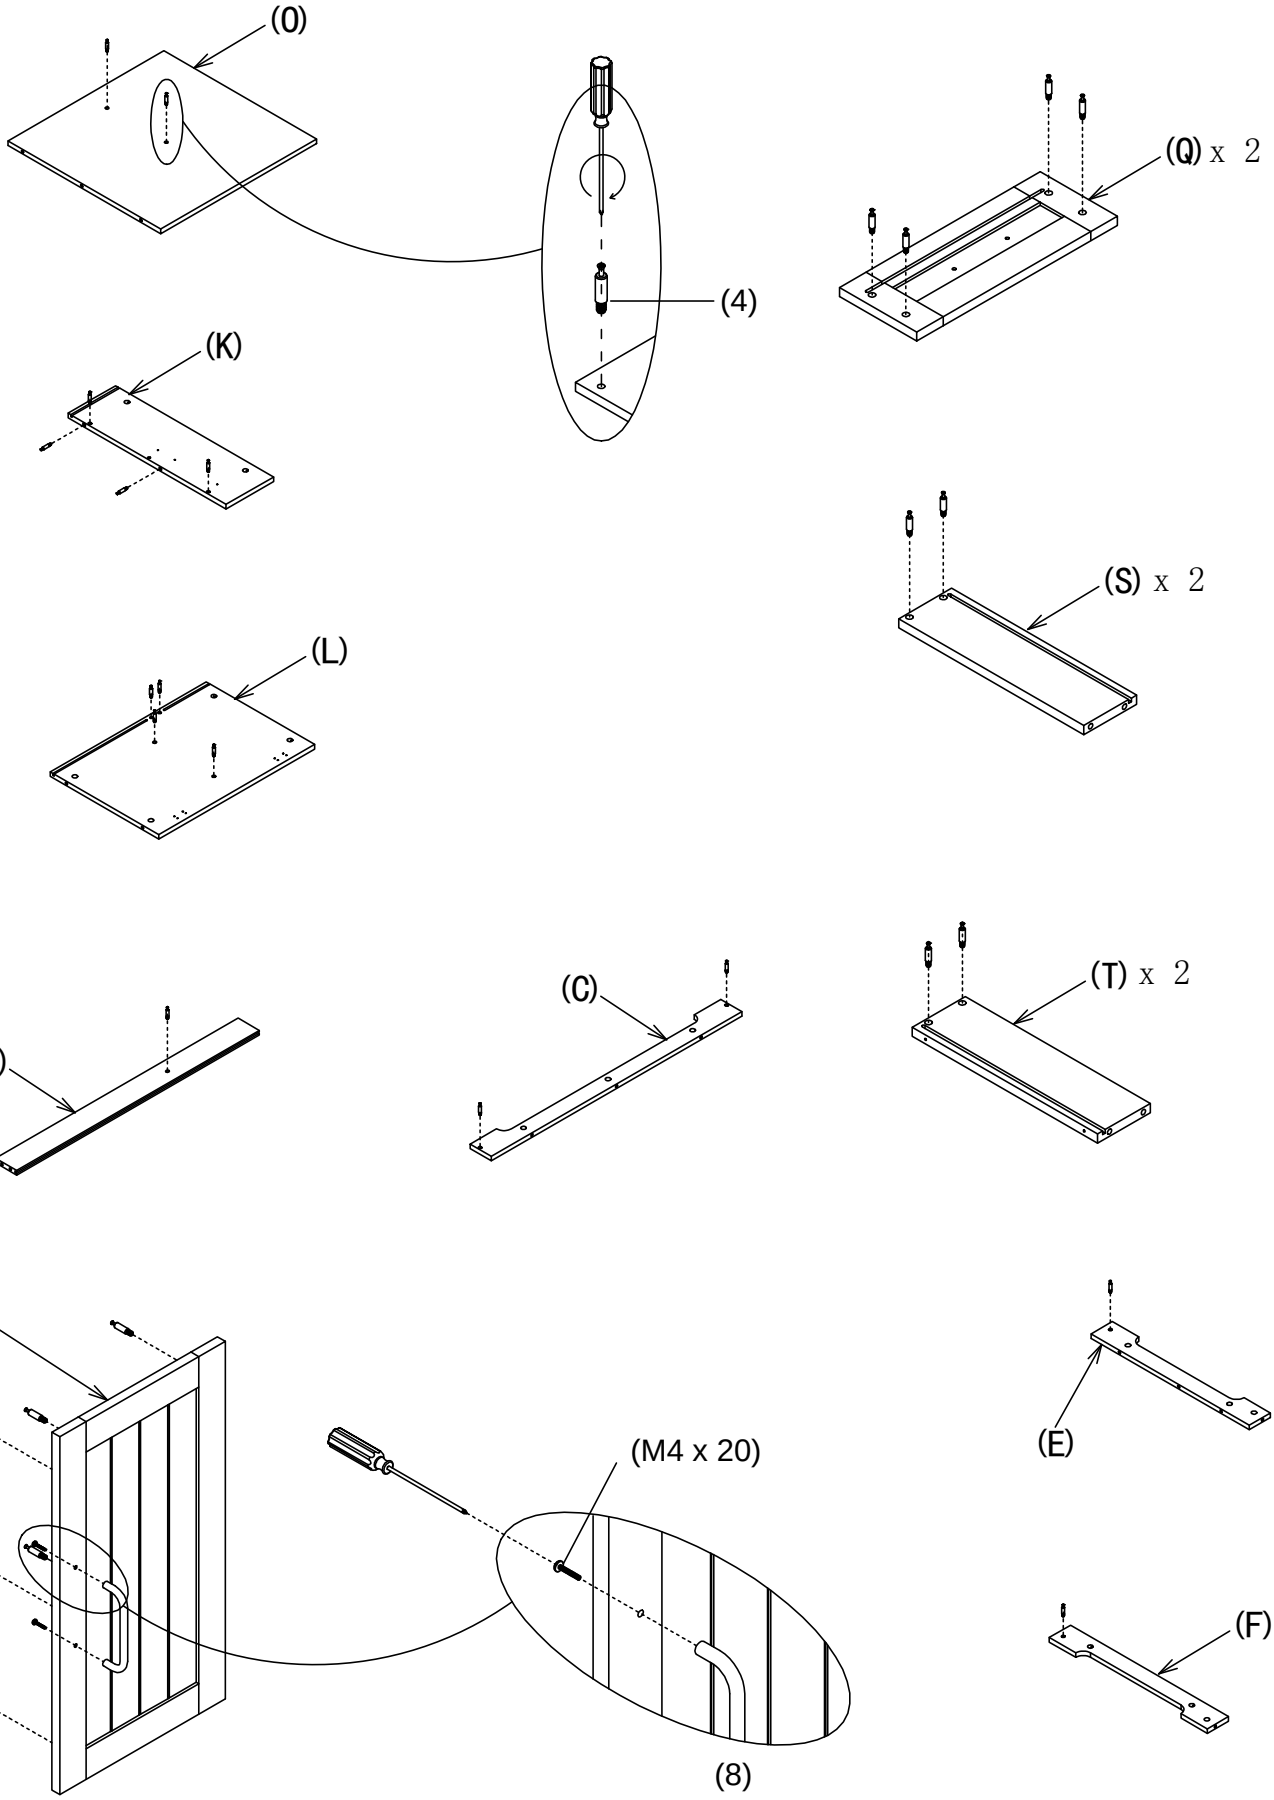

4	Cam Bolt	37PCS	8	Handle/Bolt M4*20	1PC

STEP 3

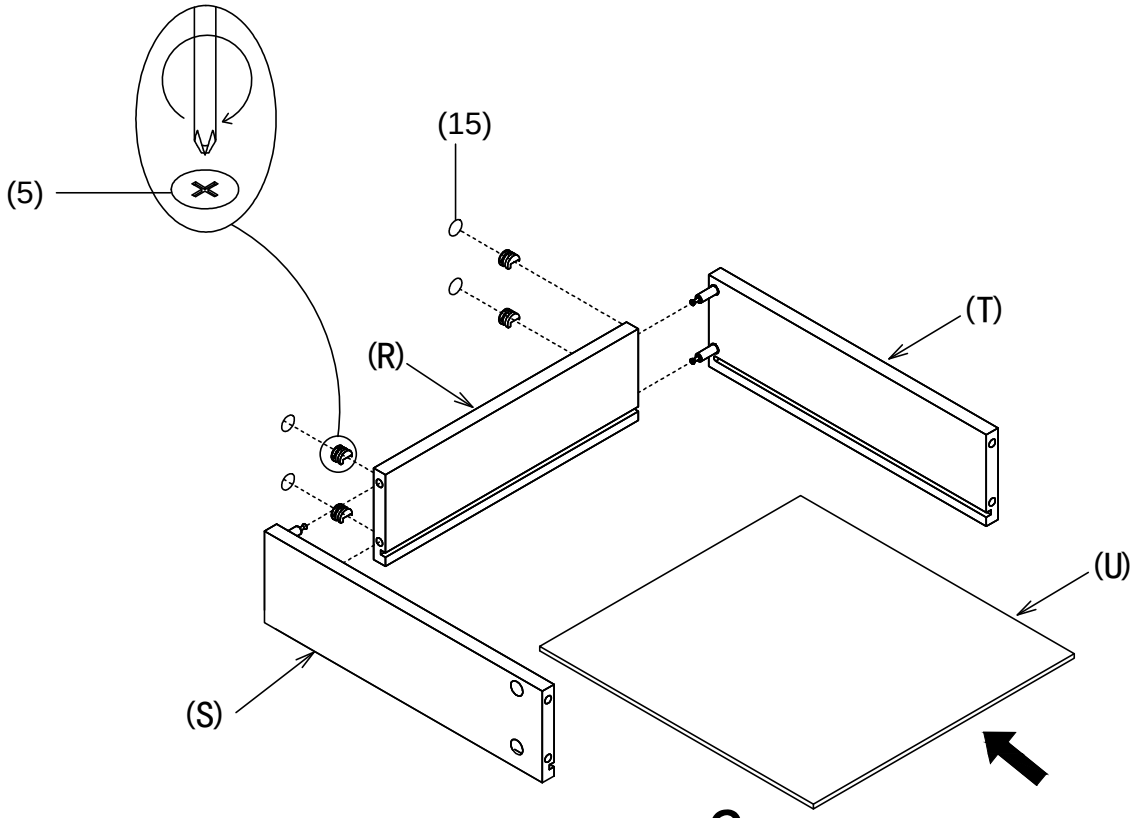


Install the other one in the same way.

x 2

5		Big Cam Lock	8PCS	15		Beauty Paste	8PCS

STEP 4

Install the other one in the same way.

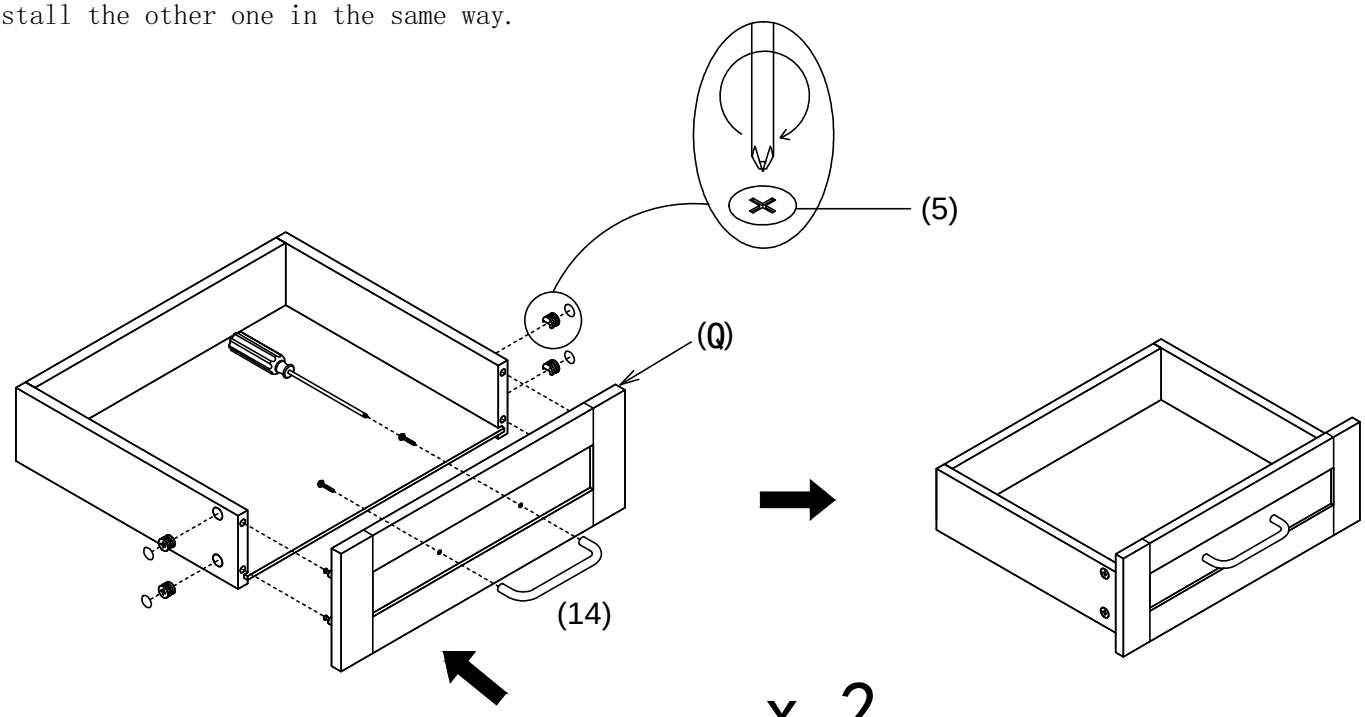


x 2

5		Big Cam Lock	8PCS				
15		Beauty Paste	8PCS	14		Handle/Bolt M4*10	2PCS


STEP 5

Install the other one in the same way.

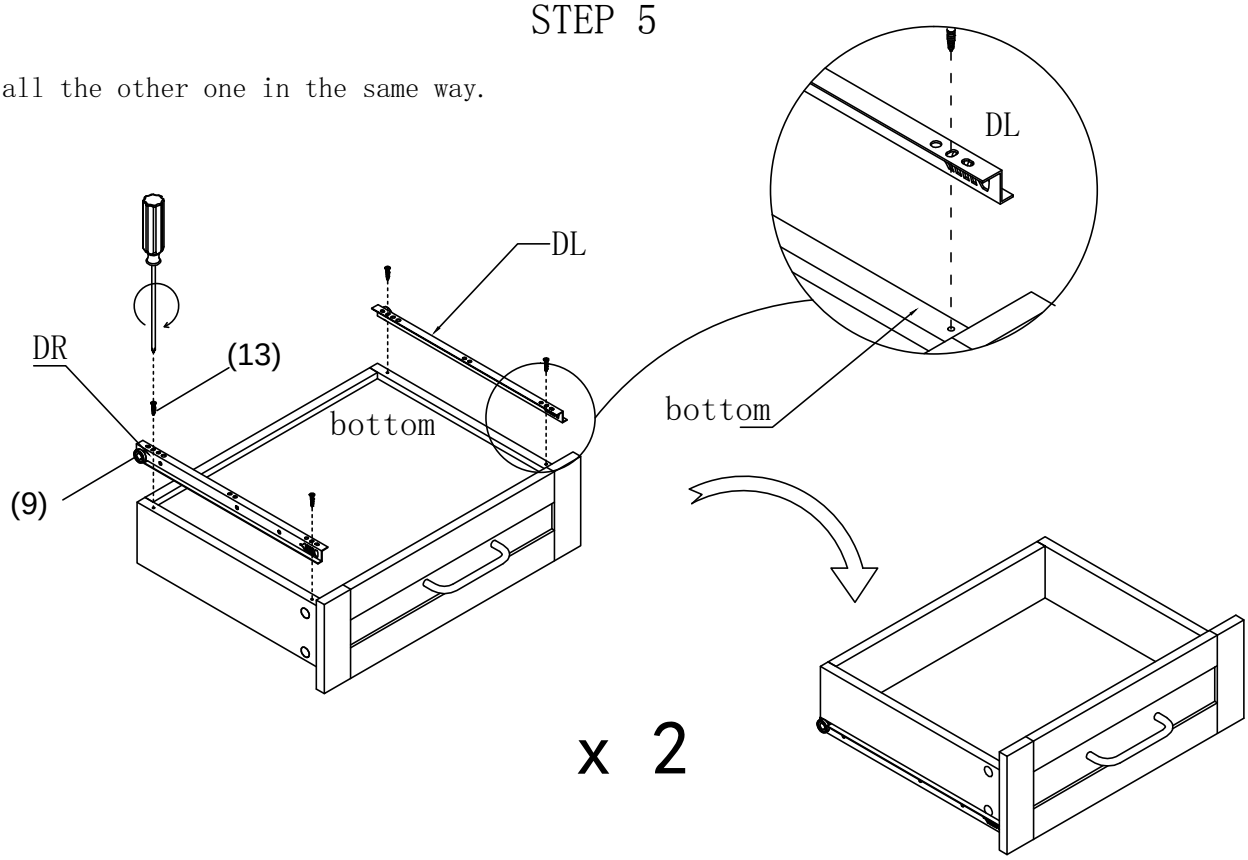


9		Sliding Rail	2SETS	13		Wood Screw	8PCS

STEP 6

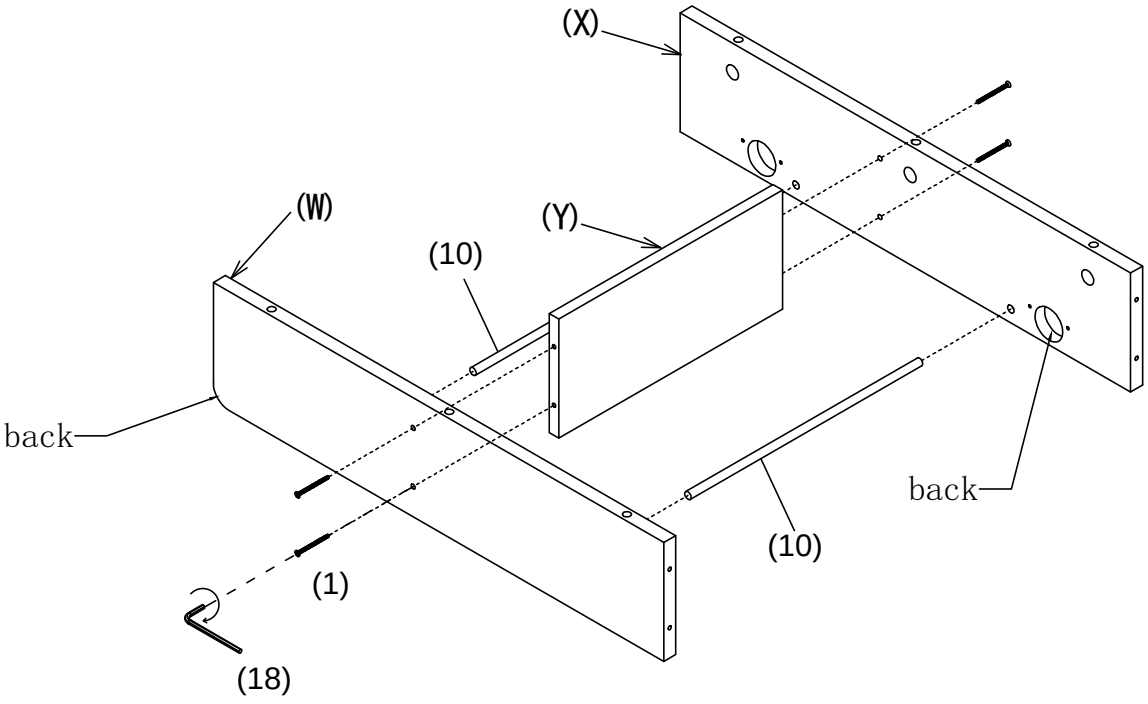


1		Bolt	4PCS				
10		Circular Tube	2PCS	18		Allen Key 3mm	1PC

STEP 7

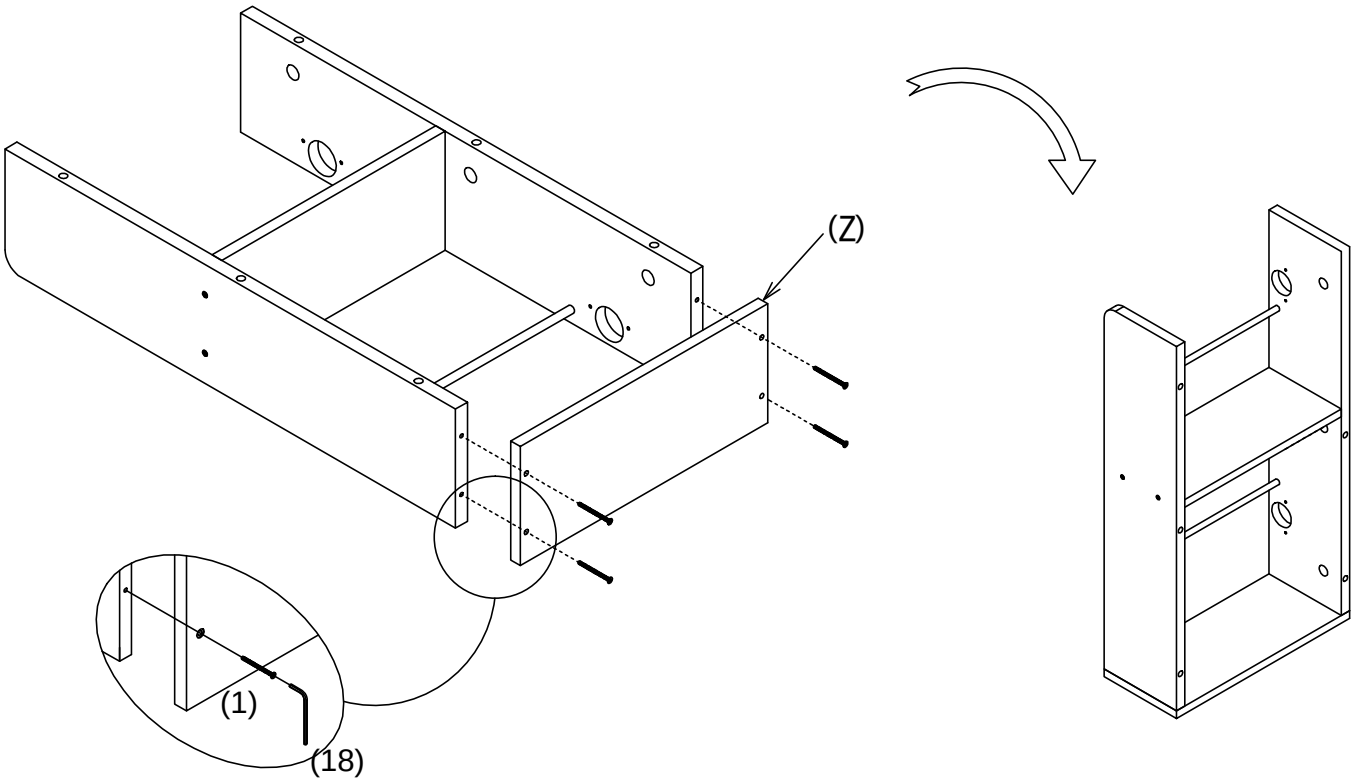


1		Bolt	4PCS	18		Allen Key 3mm	1PC

STEP 8

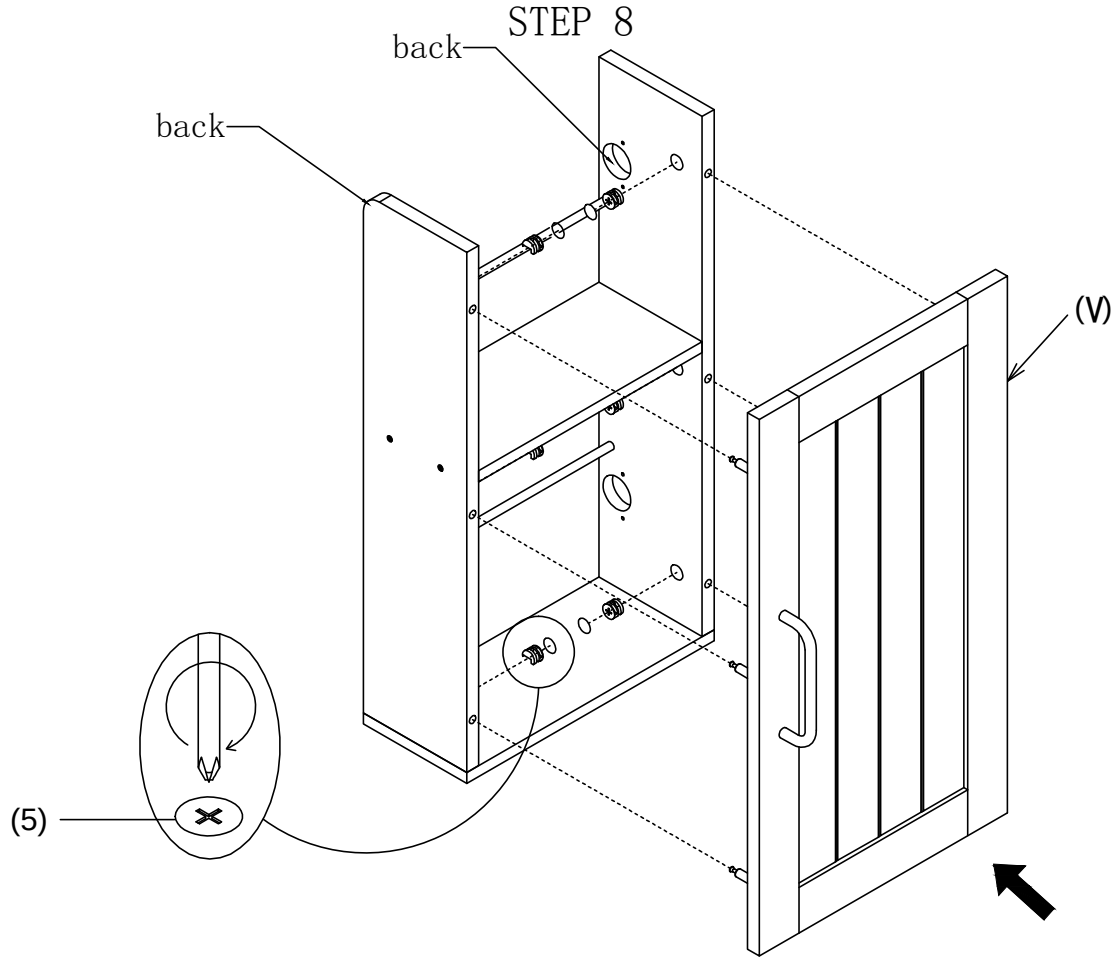


5		Big Cam Lock	6PCS	15		Beauty Paste	6PCS

STEP 9

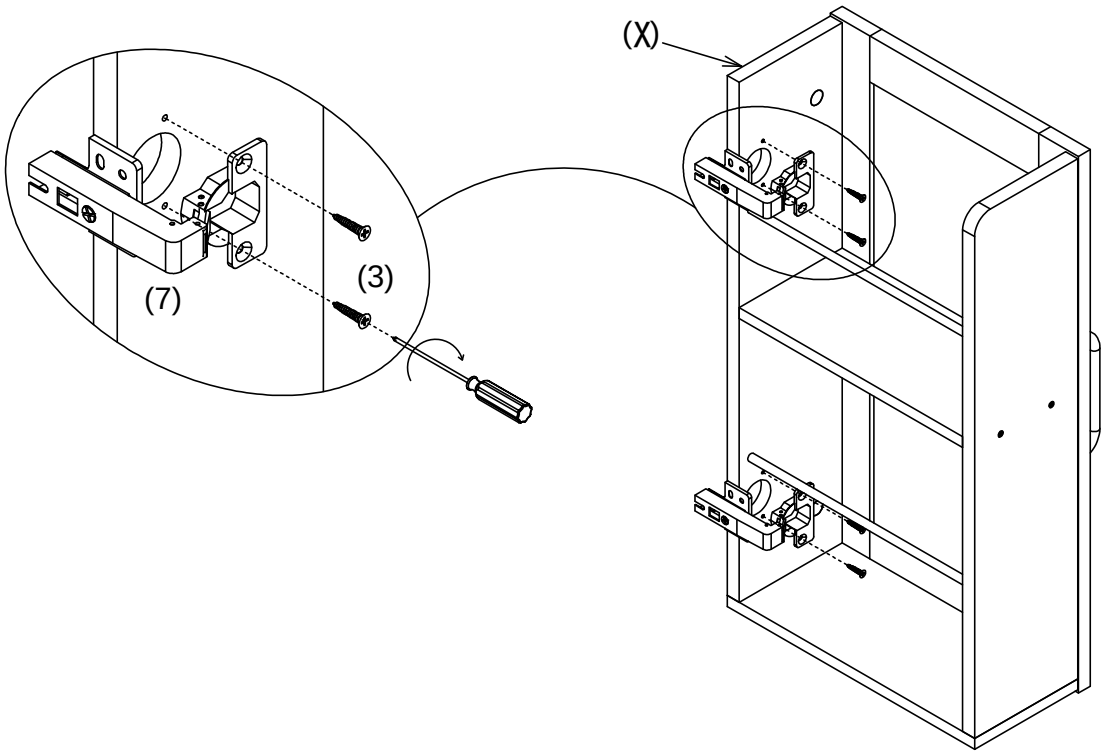


3		Wood Screw	4PCS	7		90°-Hinge	2PCS

STEP 10

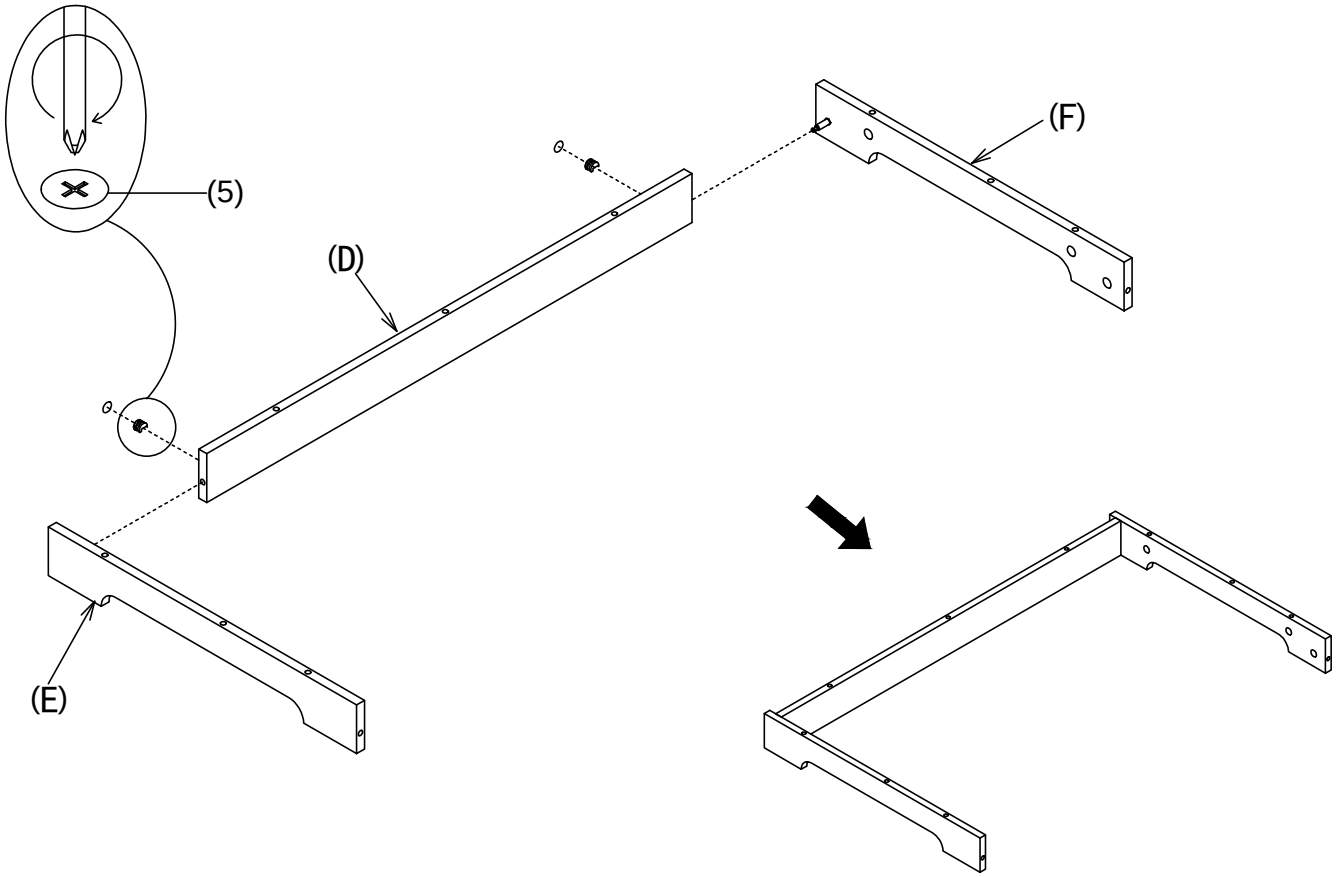


5		Big Cam Lock	2PCS	15		Beauty Paste	2PCS

STEP 11

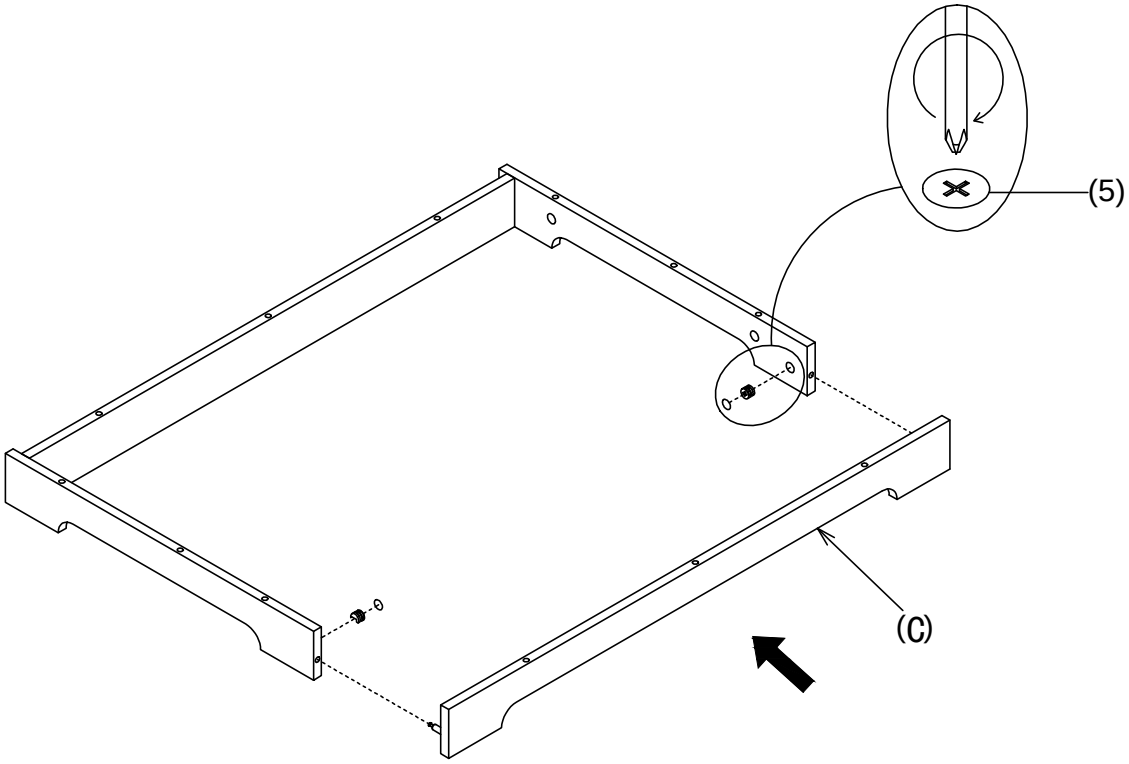


5		Big Cam Lock	2PCS	15		Beauty Paste	2PCS

STEP 12

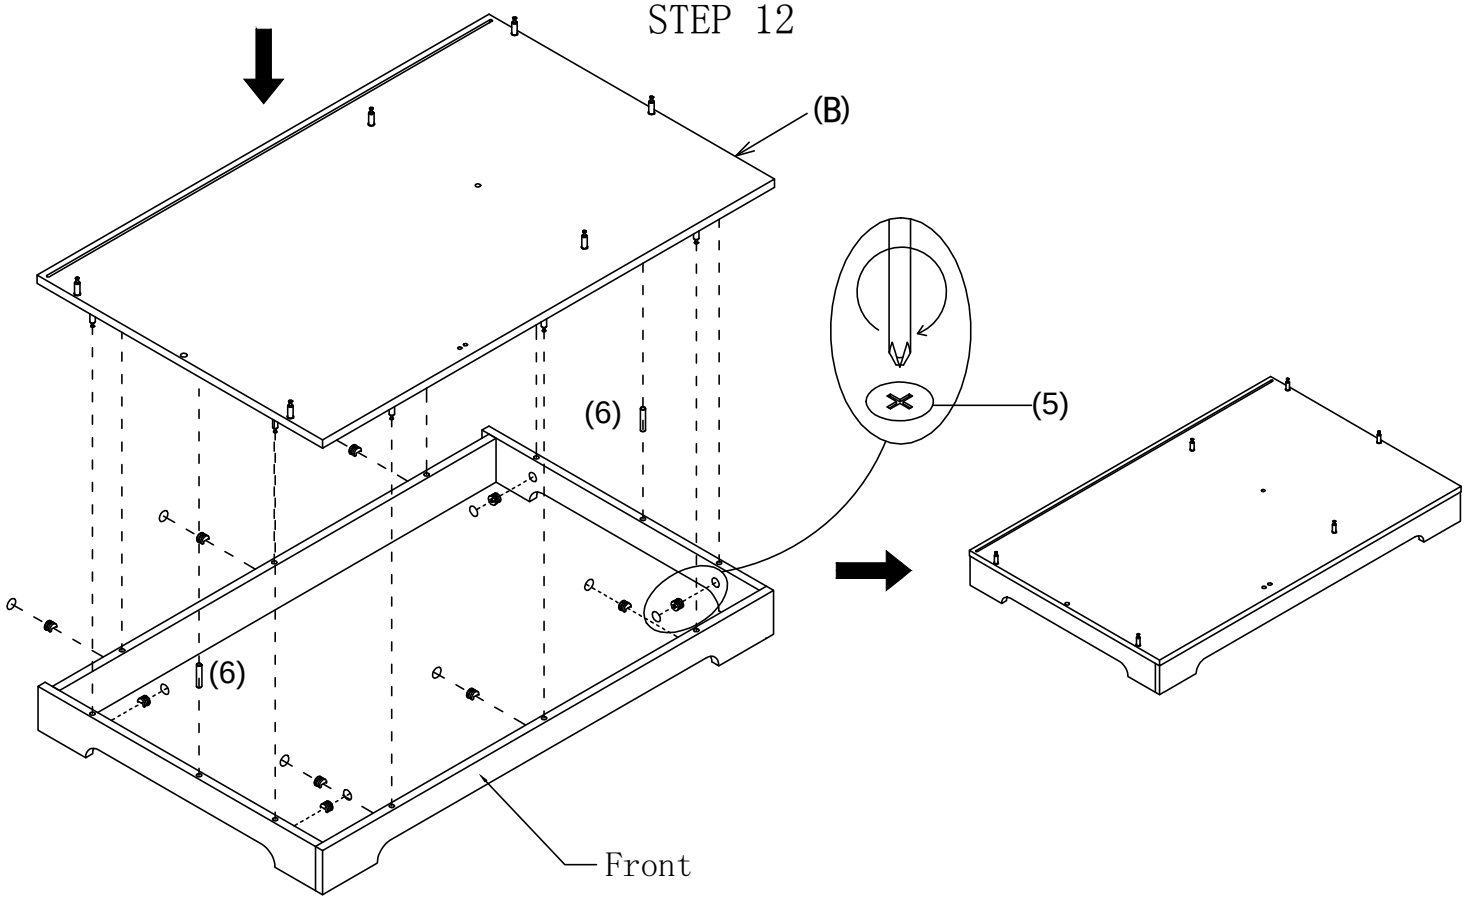


5		Big Cam Lock	10PCS				
6		Wood Dowel	2PCS	15		Beauty Paste	10PCS

STEP 13

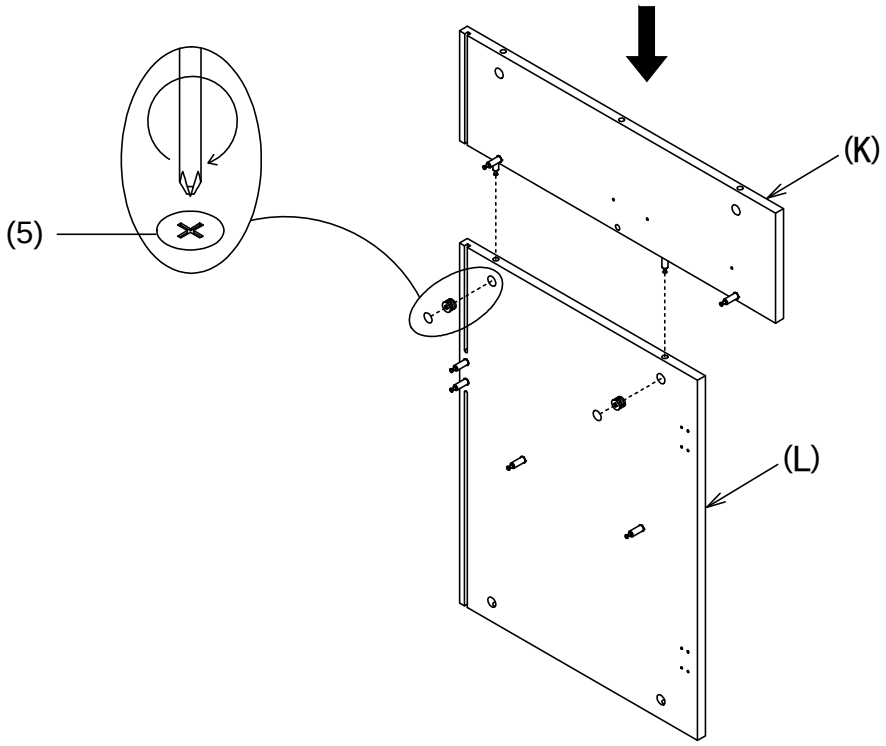


5		Big Cam Lock	2PCS	15		Beauty Paste	2PCS

STEP 14

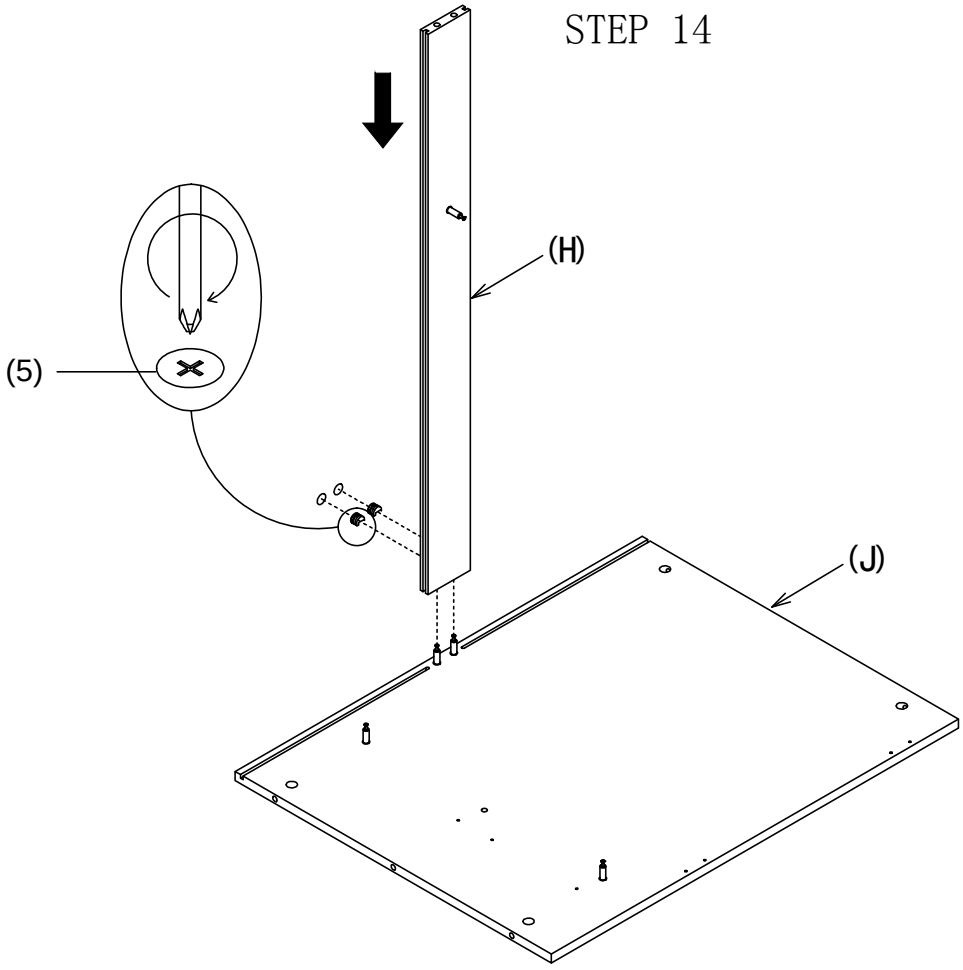

5		Big Cam Lock	2PCS	15		Beauty Paste	2PCS


STEP 15

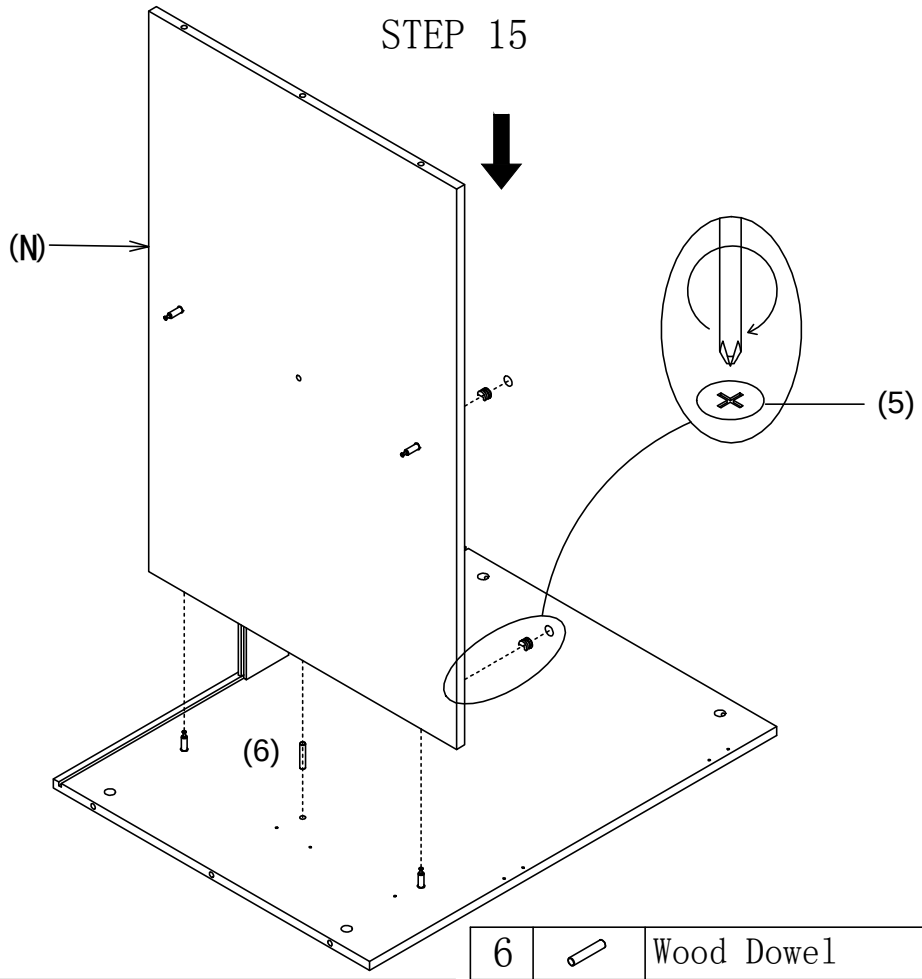

5		Big Cam Lock	2PCS

6		Wood Dowel	1PC
15		Beauty Paste	2PCS


STEP 16

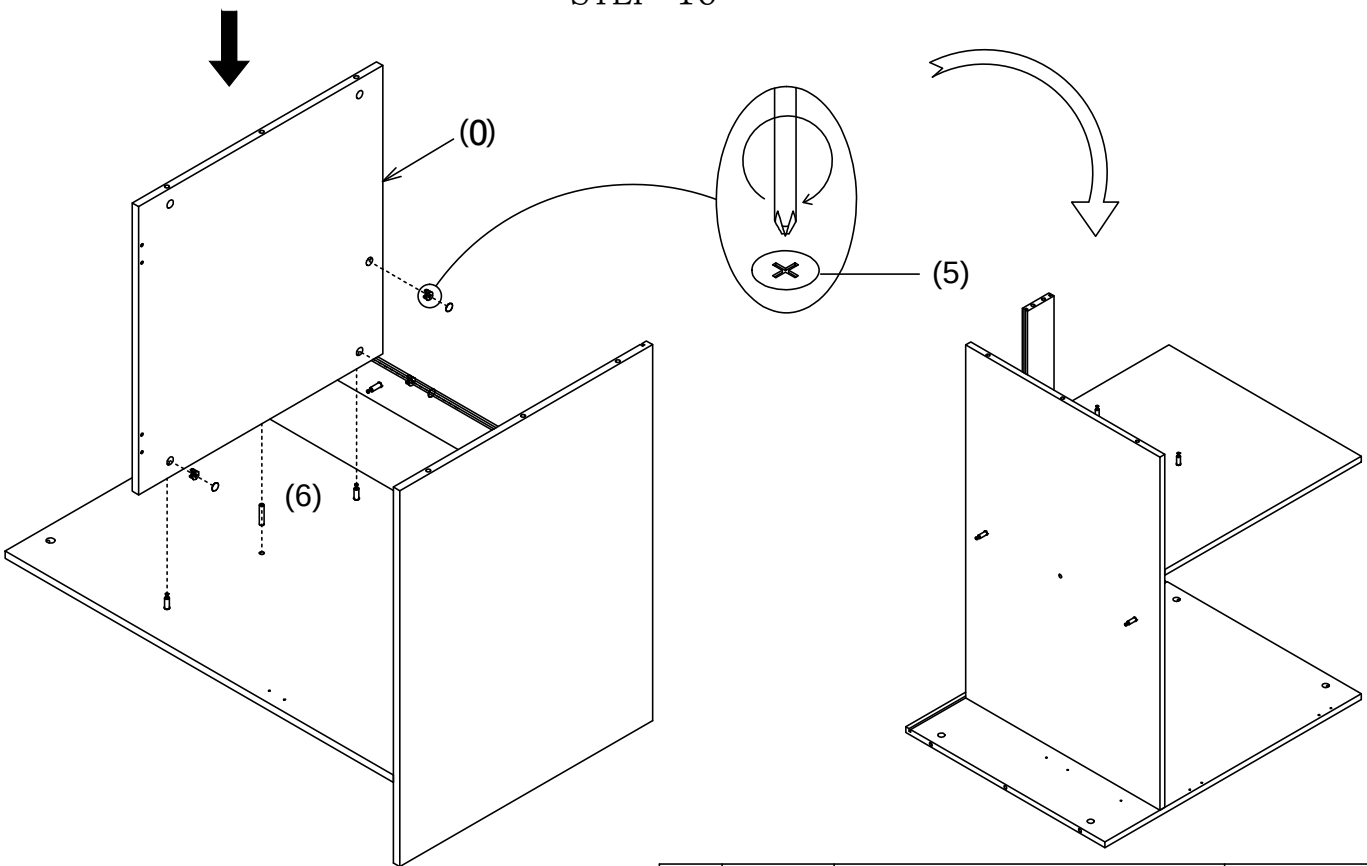

5		Big Cam Lock	3PCS


6		Wood Dowel	1PC
15		Beauty Paste	3PCS

STEP 17

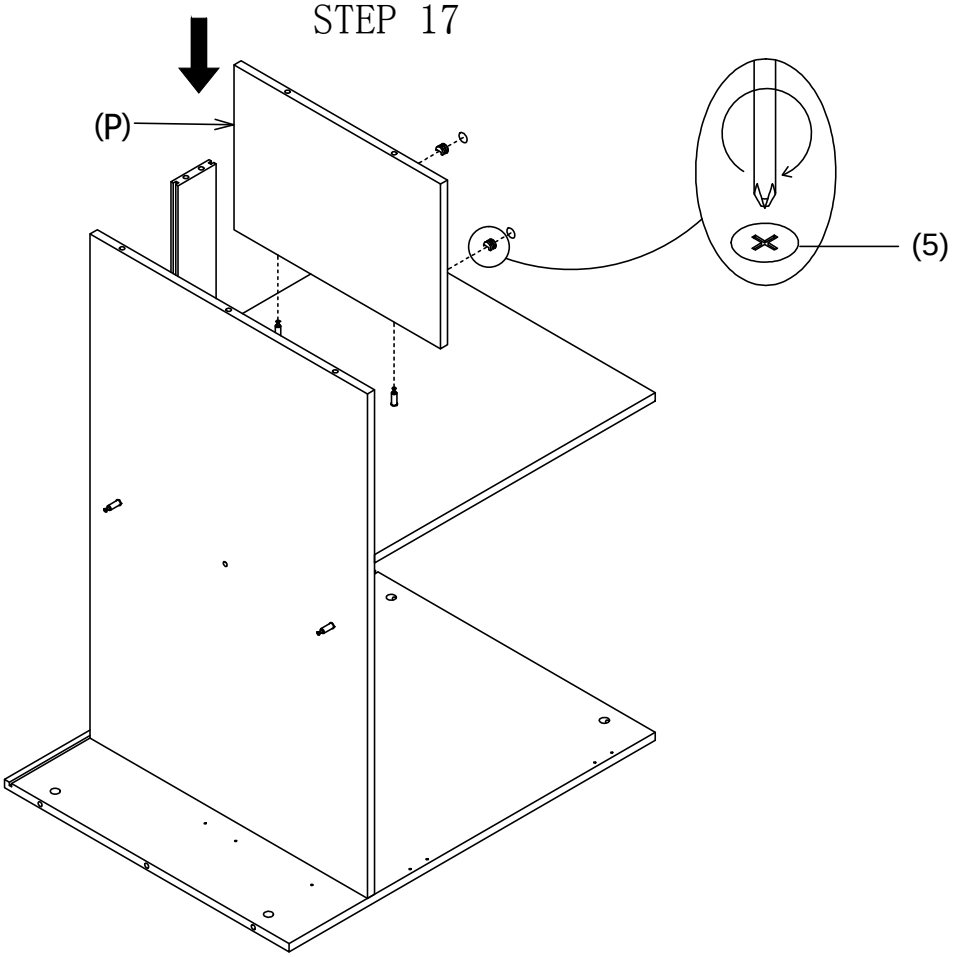


5		Big Cam Lock	2PCS	15		Beauty Paste	2PCS

STEP 18

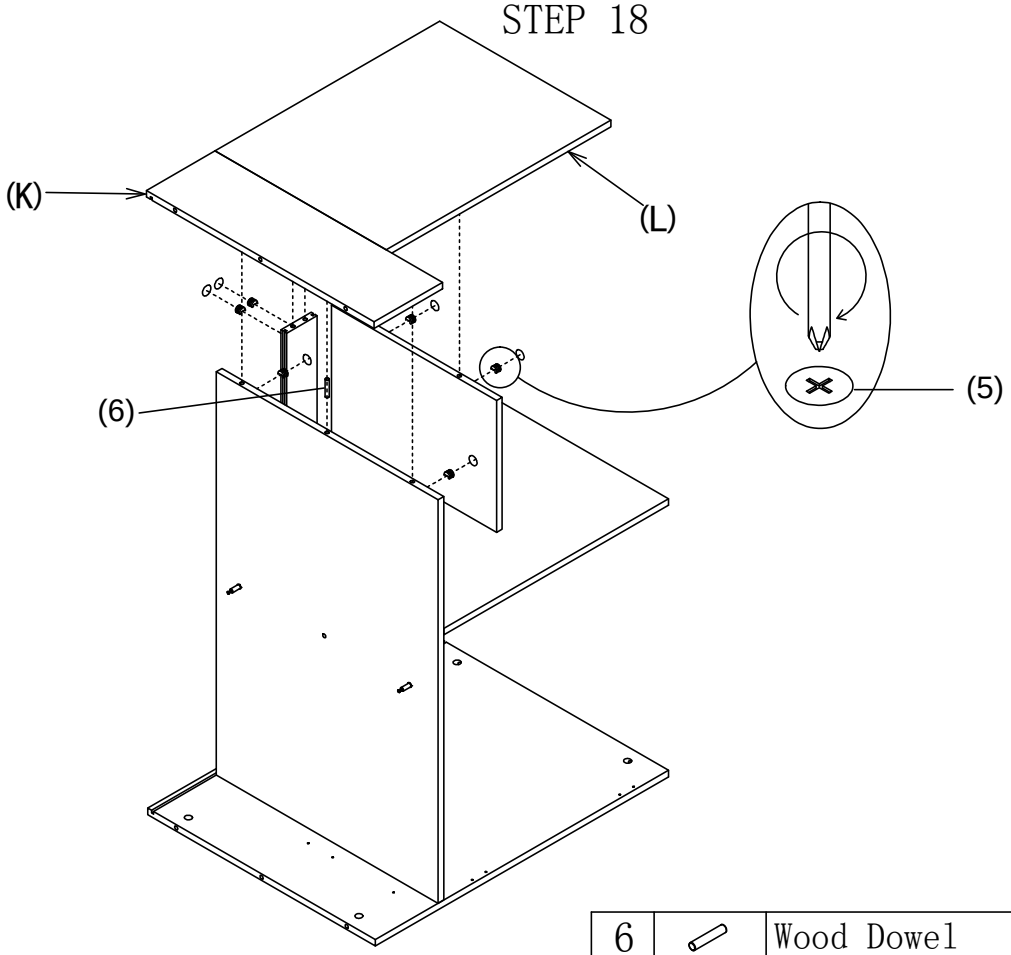


				6		Wood Dowel	1PC
5		Big Cam Lock	6PCS	15		Beauty Paste	6PCS

STEP 19

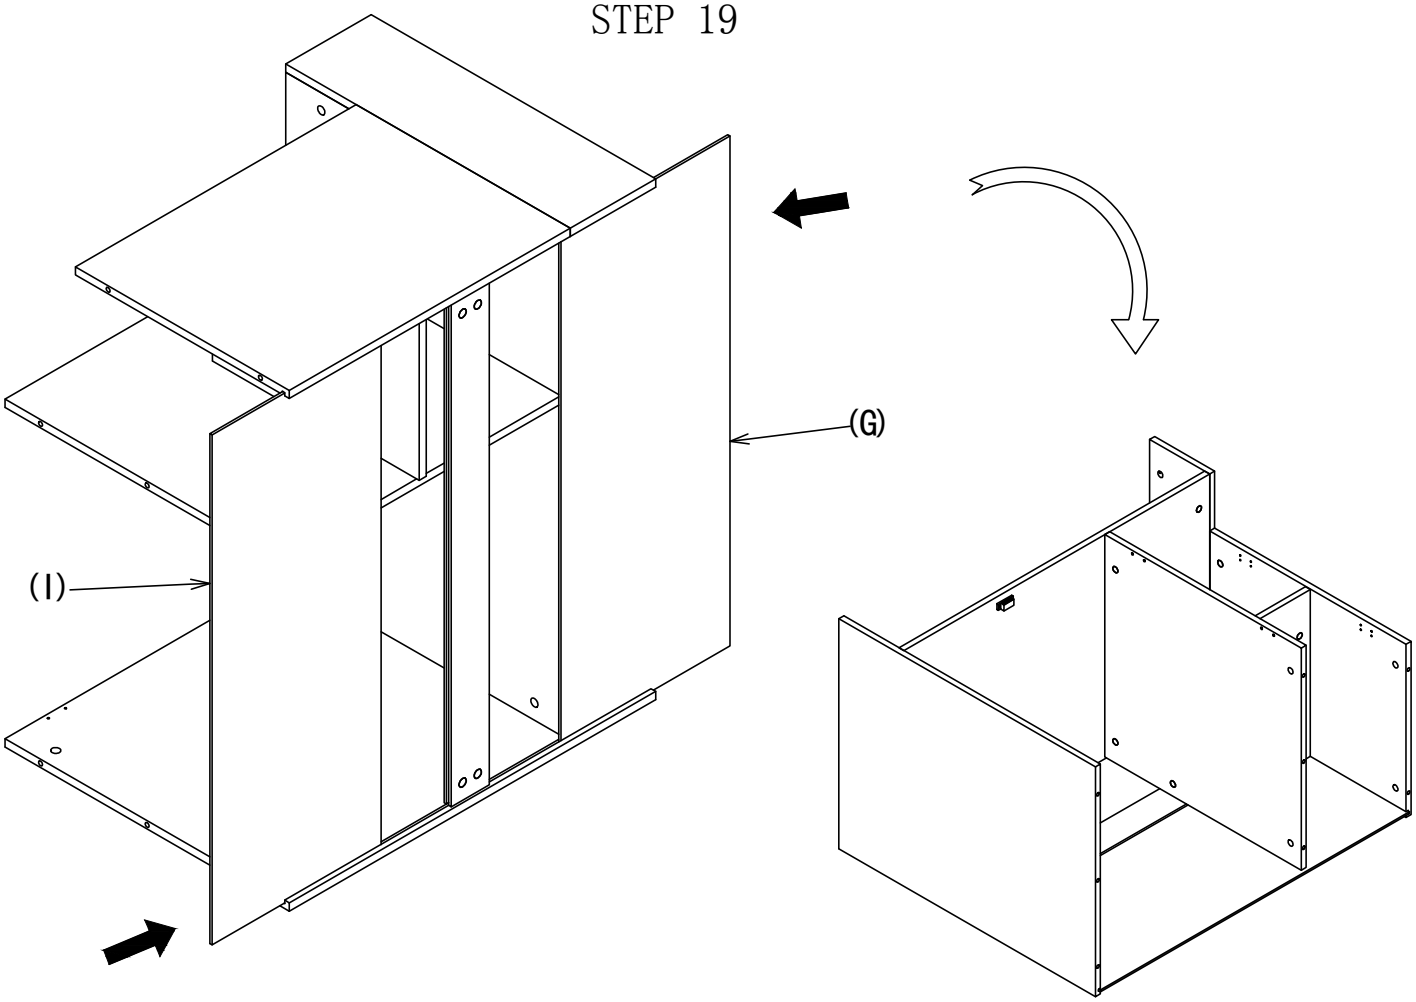


STEP 20

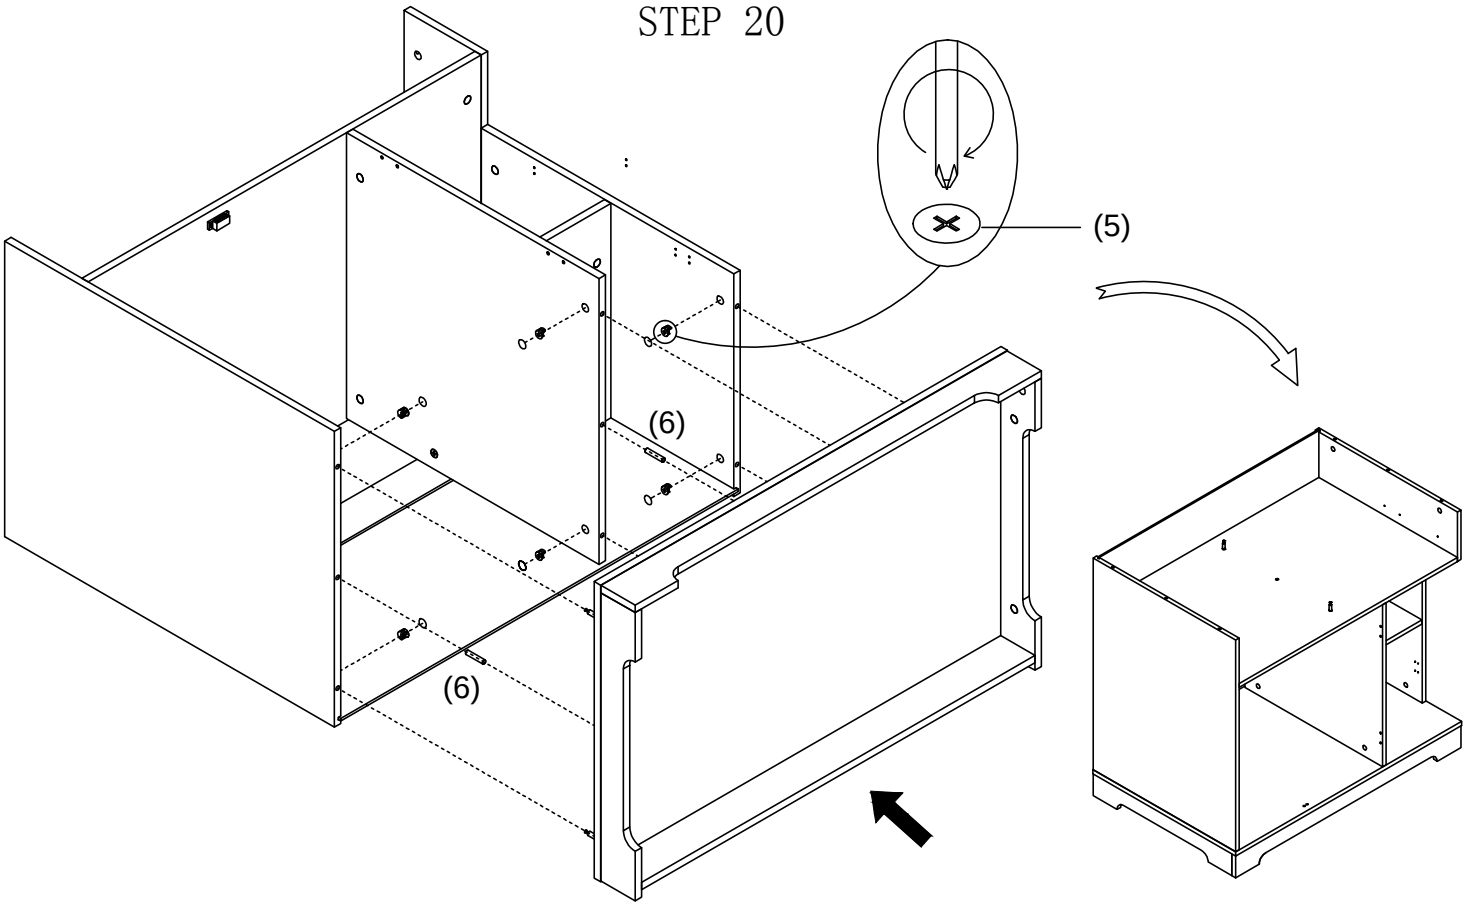

5		Big Cam Lock	6PCS


6		Wood Dowel	2PCS
15		Beauty Paste	6PCS

STEP 21

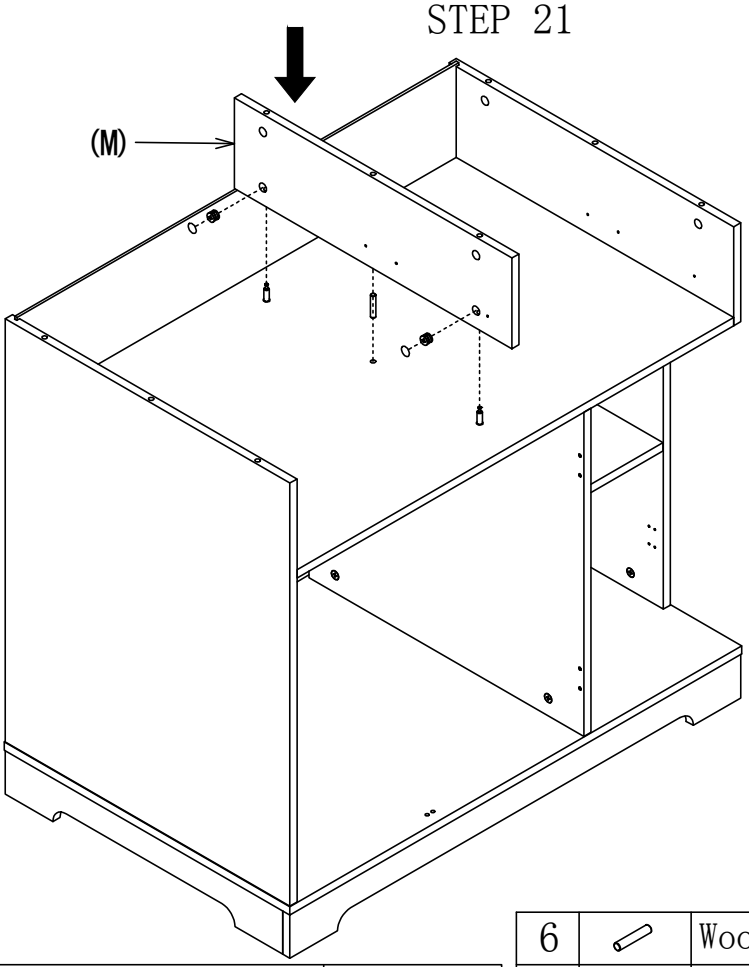


5		Big Cam Lock	2PCS	6		Wood Dowel	1PC
				15		Beauty Paste	2PCS

STEP 22

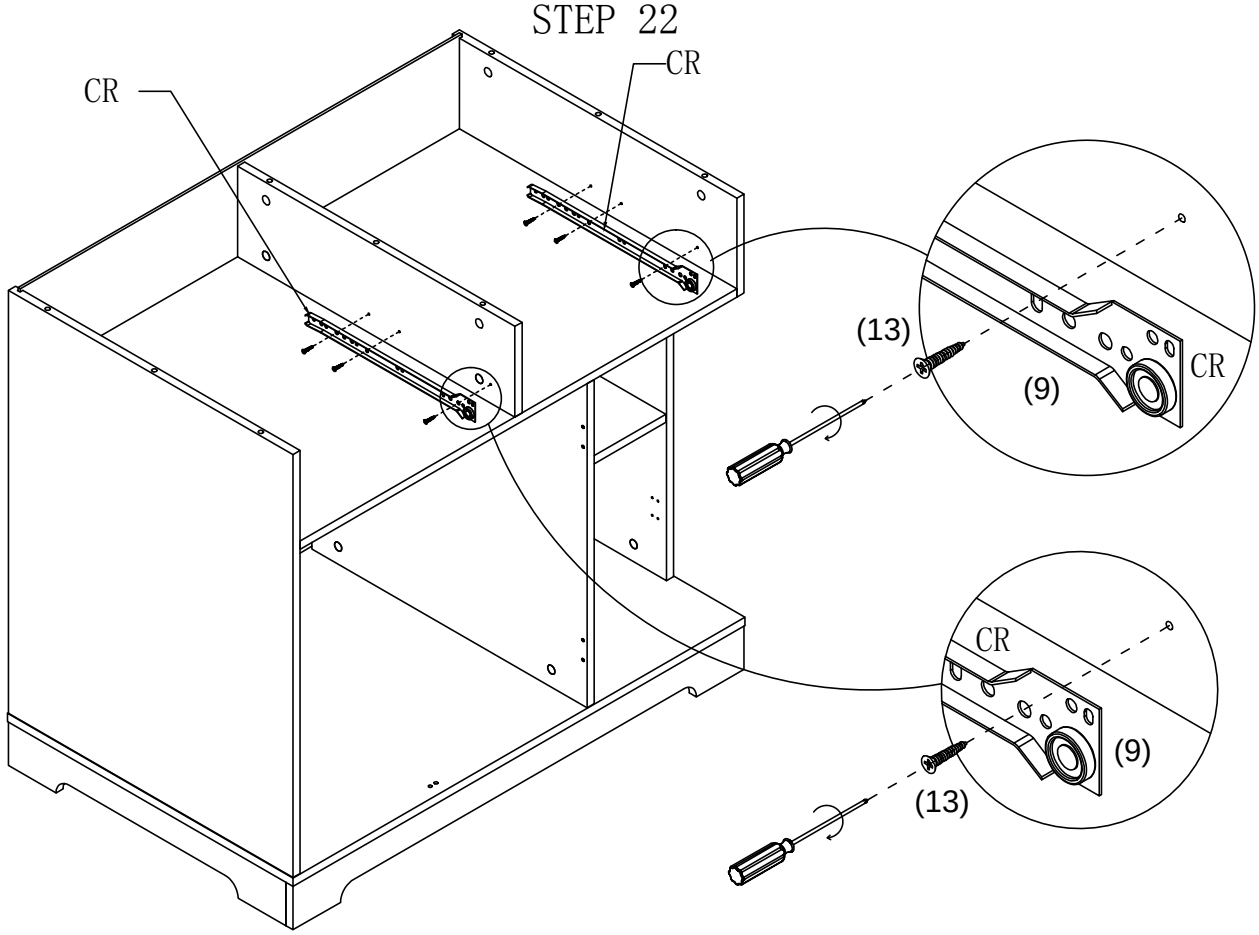


9		Sliding Rail	2PCS	13		Wood Screw	6PCS

STEP 23

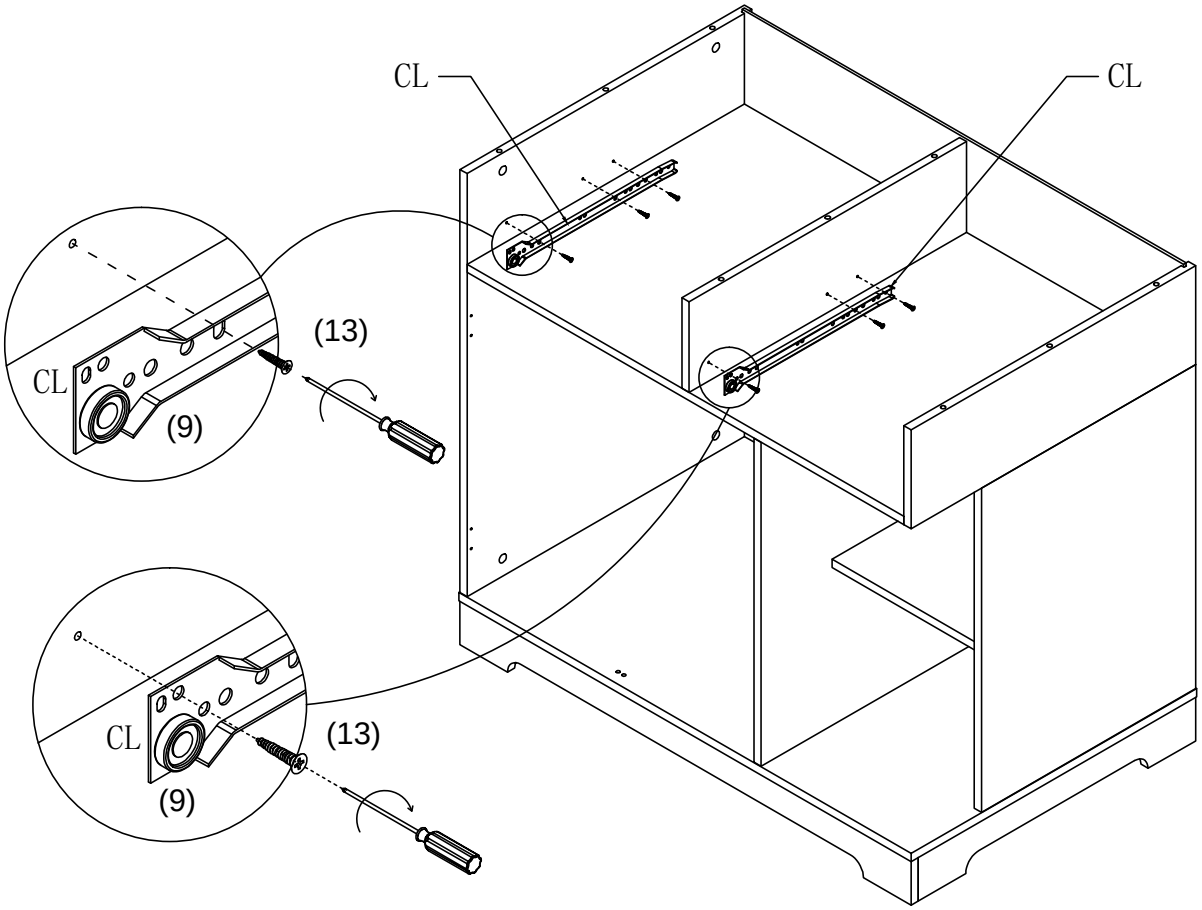


9		Sliding Rail	2PCS	13		Wood Screw	6PCS

STEP 24

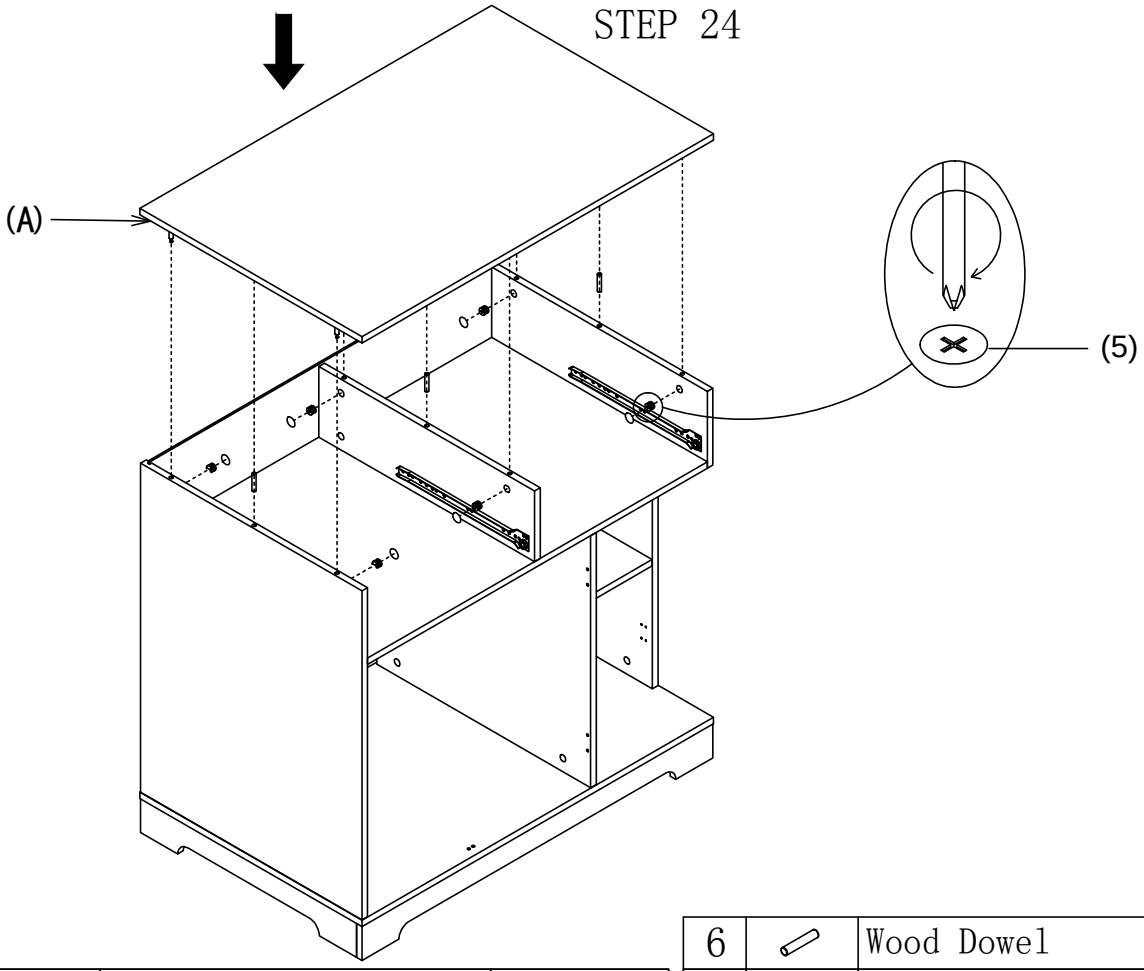


5		Big Cam Lock	6PCS	6		Wood Dowel	3PCS
				15		Beauty Paste	6PCS

STEP 25

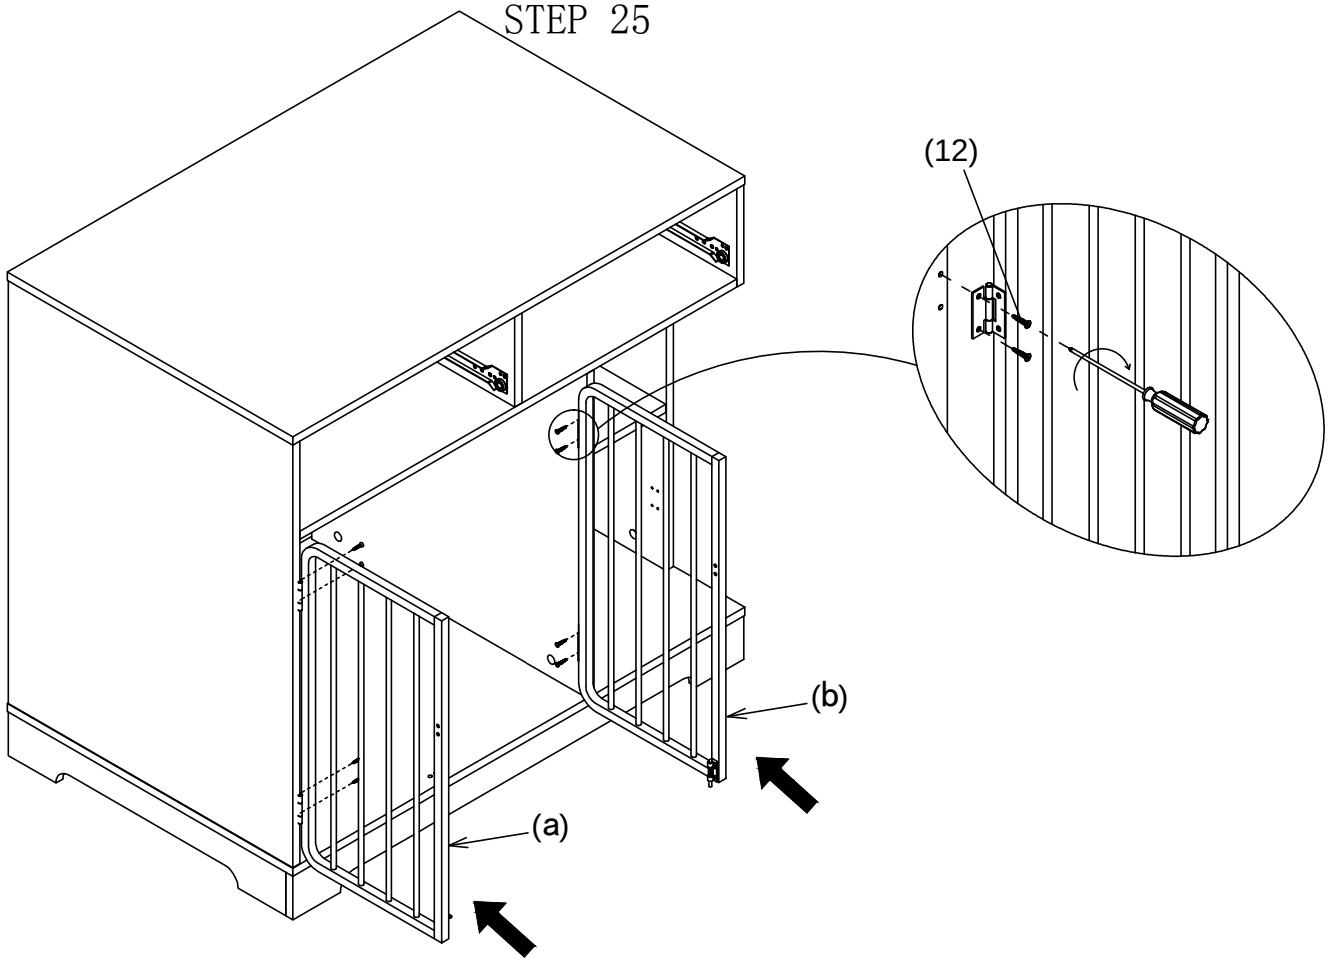

12		Black Wood Screw	8PCS


STEP 26

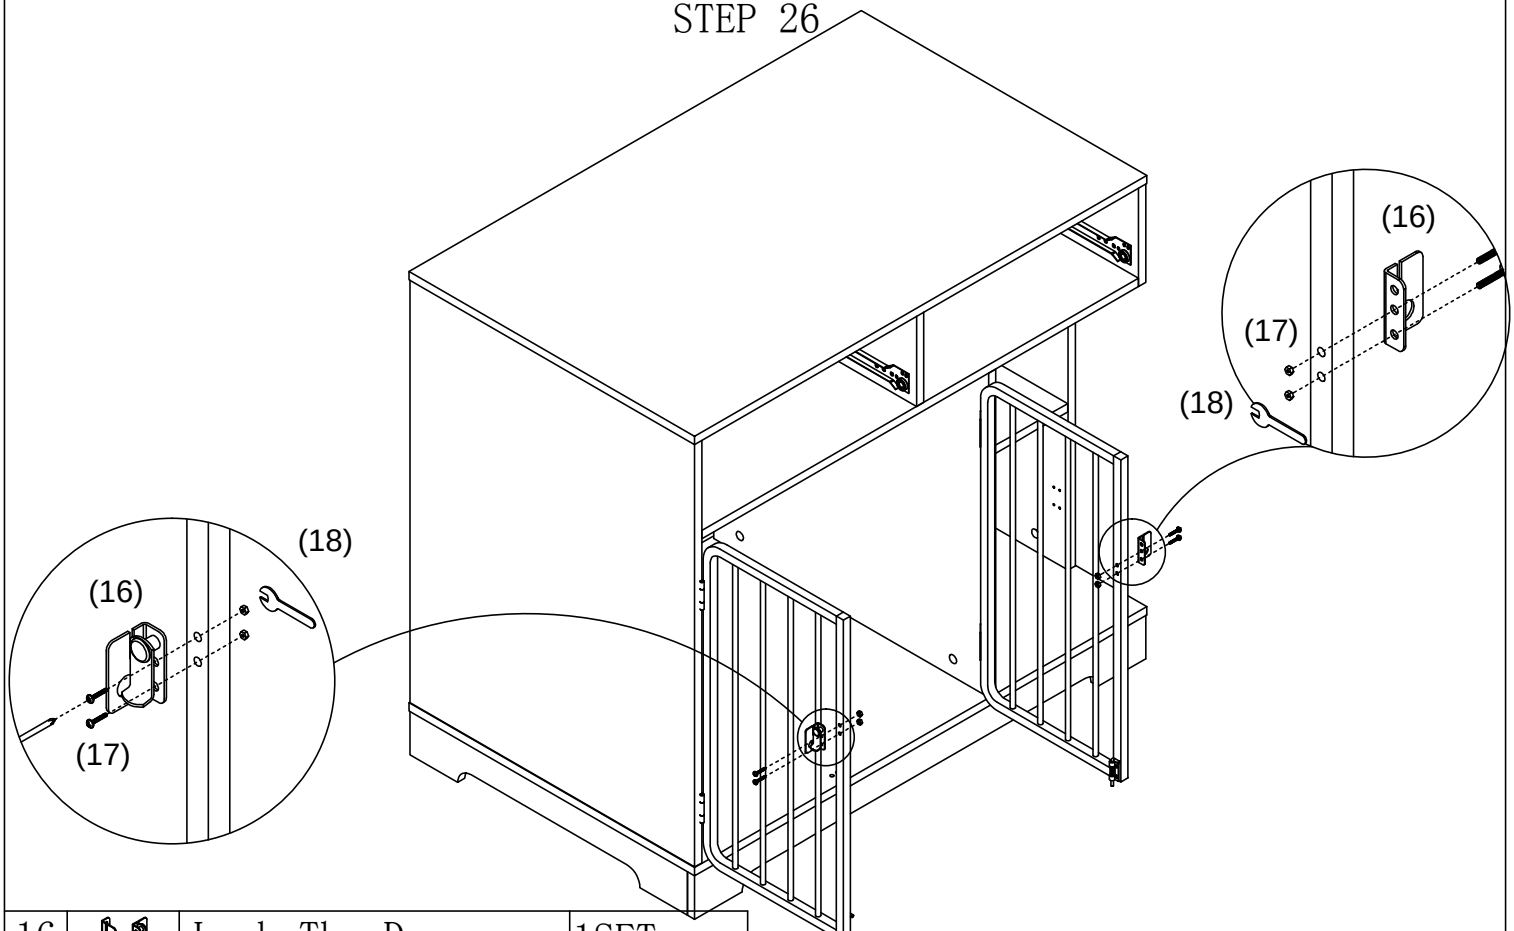

16		Lock The Door	1SET
17		Black Bolt	4SETS


18		Open Spanner	1PC


STEP 27

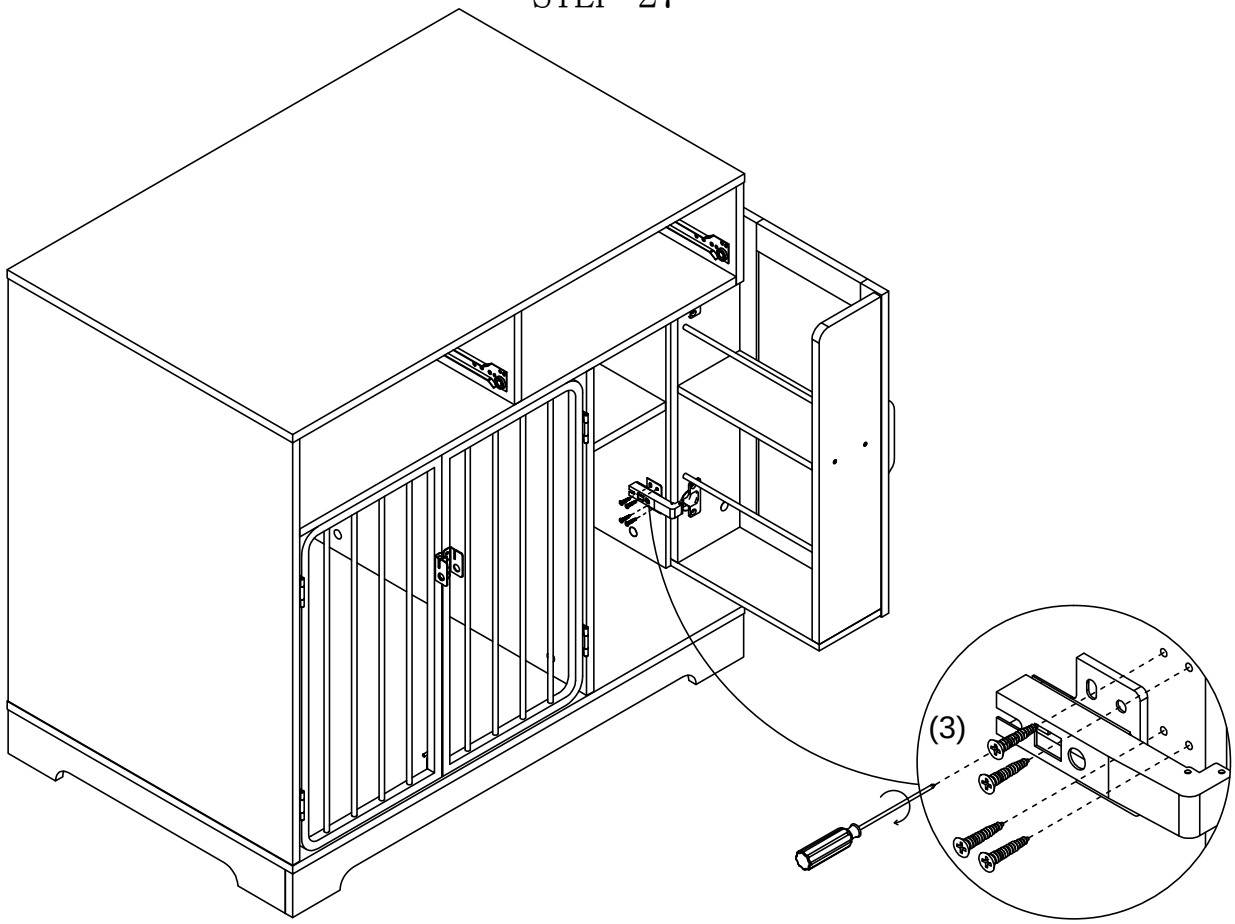


3		Wood Screw	8PCS

STEP 28

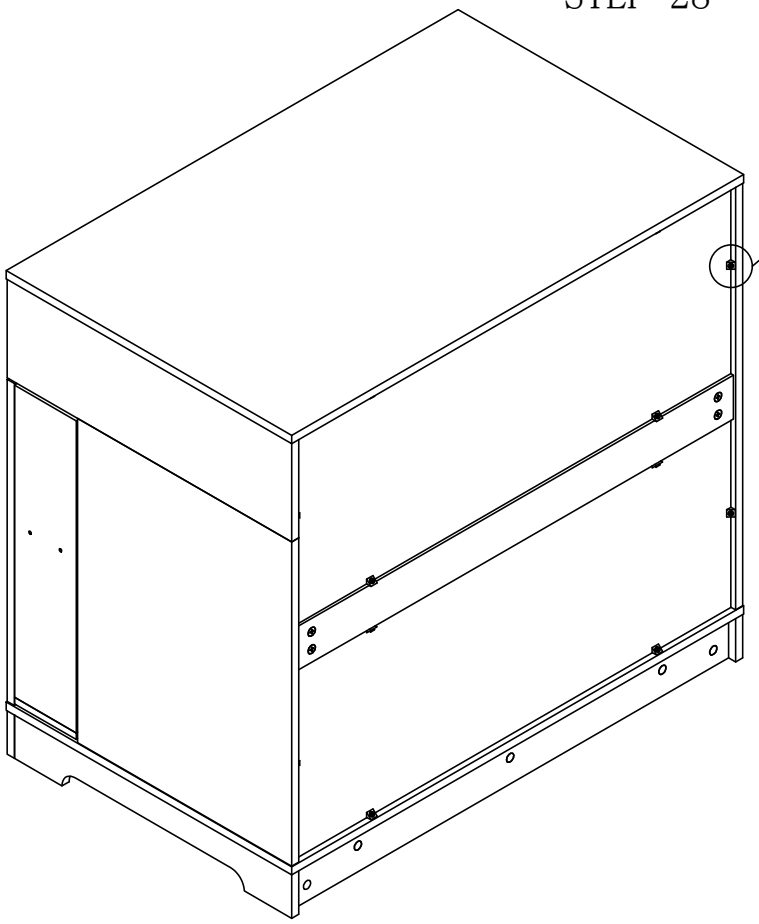

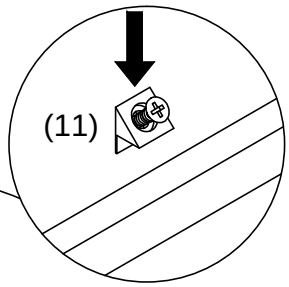


step 1:Insert into backplane slot.

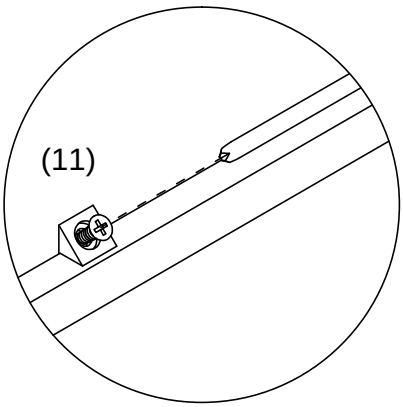

step 2:To tighten with a screwdriver.

11		Backplane Buckle	12PCS

STEP 29

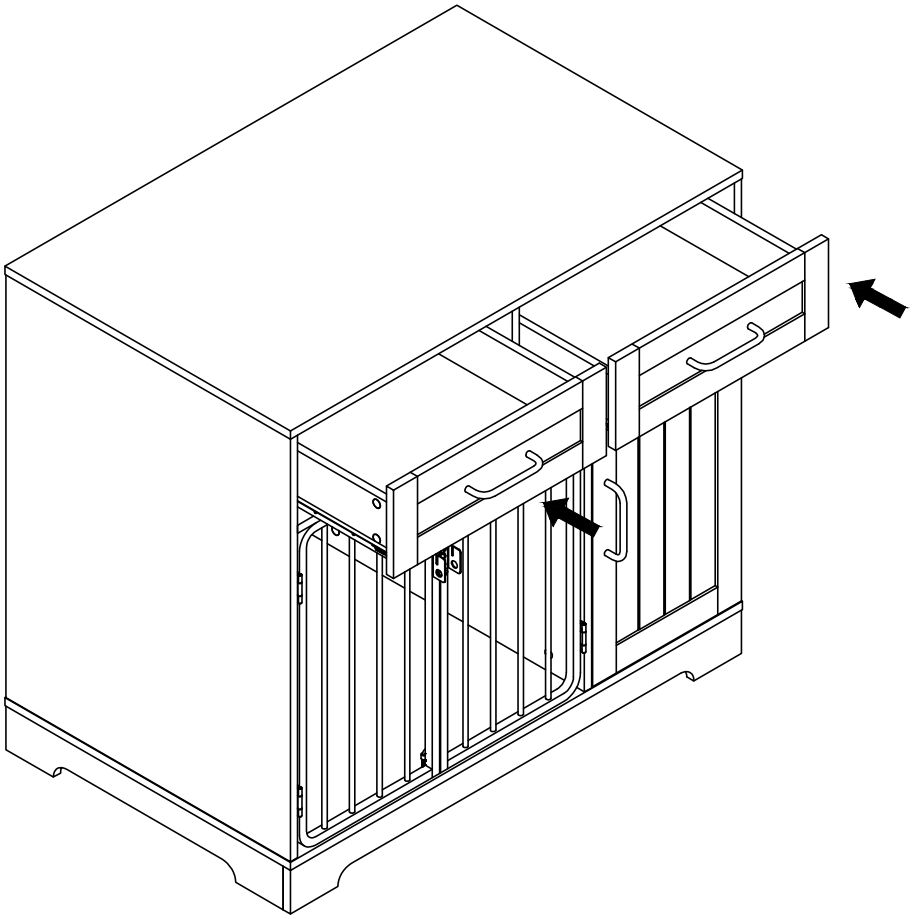

COMPLETE

